


VW Touran; Modell 2010

Side protection bar 42 straight / Flankenschutzrohr 42 gerade



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage
Instrucciones de montaje • Manual

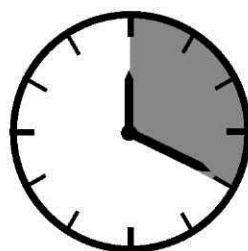

20 Minuten

Artikelnummer:

206815051 Stainless Steel
12E9551 Assembly-kit

Revision 1: 17.10.2011



ULLSTEIN
CONCEPTS
GMBH

VW Touran; Modell 2010

Side protection bar 42 straight / Flankenschutzrohr 42 gerade

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

SW: 13 mm



M8(A2): 21,4 Nm
M8: 25 Nm



Parts list / Teileliste / Lista de accesorios

1 12X4251.1 / 12X5251.1 **2x**



Assembly-kit / Montagesatz 12E 9551

2 12X5034 **4x** **3** M8; 12X5035 **4x**



Standard Parts list / Normteileliste

a		M8 x20; DIN 933 A2	4x
b		M8; DIN 934	4x
c		ø8; DIN 127 A2	4x
d		ø8; DIN 127	4x
e		ø8,4; DIN 9021 A2	4x
f		ø8,4; DIN 9021	4x

Artikelnummer:

206815051 Stainless Steel

12E9551 Assembly-kit

Revision 1: 17.10.2011



ULLSTEIN
CONCEPTS
GMBH

