


# VW T5 Multivan/Transporter/Caravelle

Rear Bumper 60 below/Heckstoßstange 60 unten



## FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage  
Instrucciones de montaje • Manual

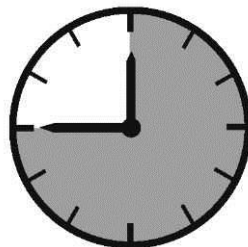

45 Minuten

### Artikelnummer:

206835072 Stainless Steel  
1519138 Mounting Set

Revision 2: 3.11.2009





# VW T5 Multivan/Transporter/Caravelle

## Rear Bumper 60 below/Heckstoßstange 60 unten

### Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

**SW:** 10 mm  
**SW:** 13 mm  
**SW:** 17 mm

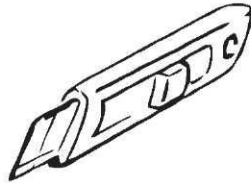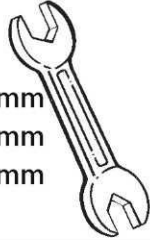


**M6:** 10 Nm  
**M8:** 25 Nm  
**M10:** 50 Nm



### Parts list/Teileliste/Lista de accesorios

**1** 151 4138.1 / 151 5138.1

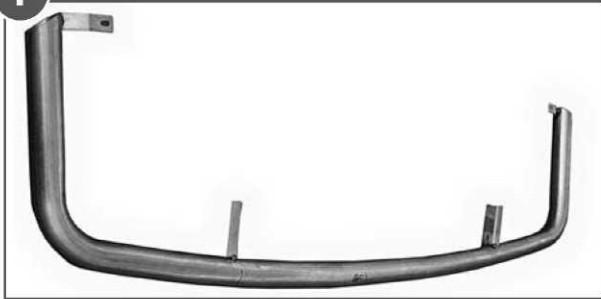

### Mounting set 151 9138/Montagesatz 151 9138

**2** 151 5332 L



**3** 151 5331 R



### Standard Parts list/Normteileliste

<b>a</b>		M6x25; DIN 933	<b>2x</b>
<b>b</b>		M8x30; DIN 933	<b>7x</b>
<b>c</b>		M10x30; DIN 933	<b>1x</b>
<b>d</b>		M8; DIN 934	<b>4x</b>
<b>e</b>		Ø6; DIN 127	<b>2x</b>
<b>f</b>		Ø8; DIN 127	<b>7x</b>
<b>g</b>		Ø10; DIN 127	<b>1x</b>
<b>h</b>		Ø6,4; DIN 9021	<b>2x</b>
<b>i</b>		Ø8,4; DIN 9021	<b>11x</b>
<b>k</b>		Ø10,5; DIN 9021	<b>3x</b>
<b>m</b>		M6; GetoWell	<b>2x</b>

### Artikelnummer:

206835072 Stainless Steel

1519138 Mounting Set

Revision 2: 3.11.2009



