



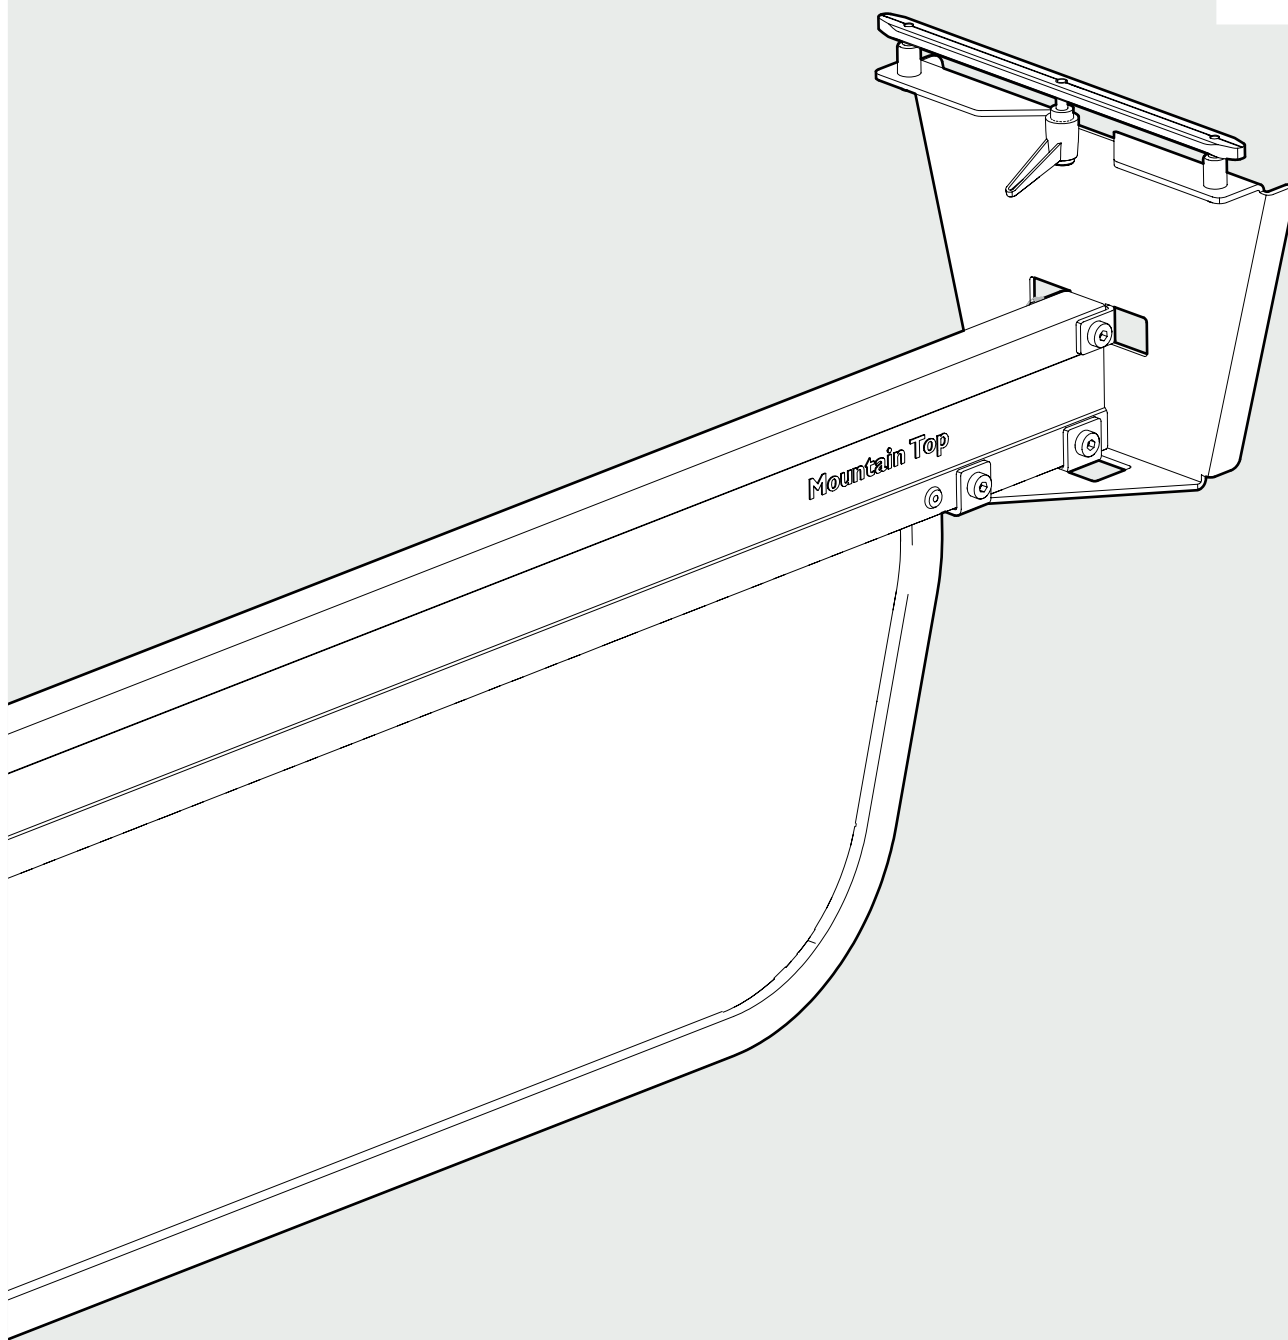




Mountain Top® Bed Divider


Installation manual








DOWNLOAD PDF

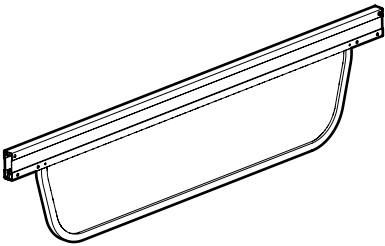
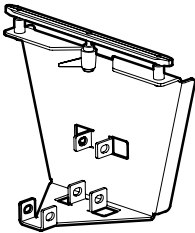
Parts	
A  x 1	B  x 2


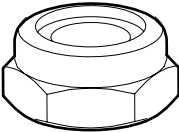
Kit		
C  x 6	D  x 6	E  x 6


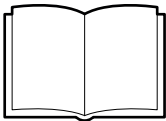
Manual(s)
 Installation manual x 1

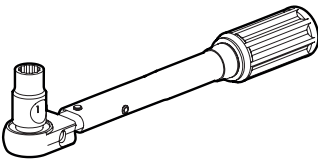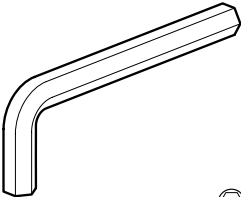
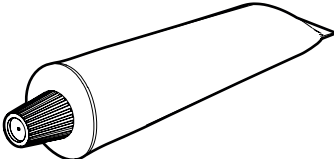
Tools and materials needed		
1 - 25 Nm  13 mm	 5 mm	 Grease

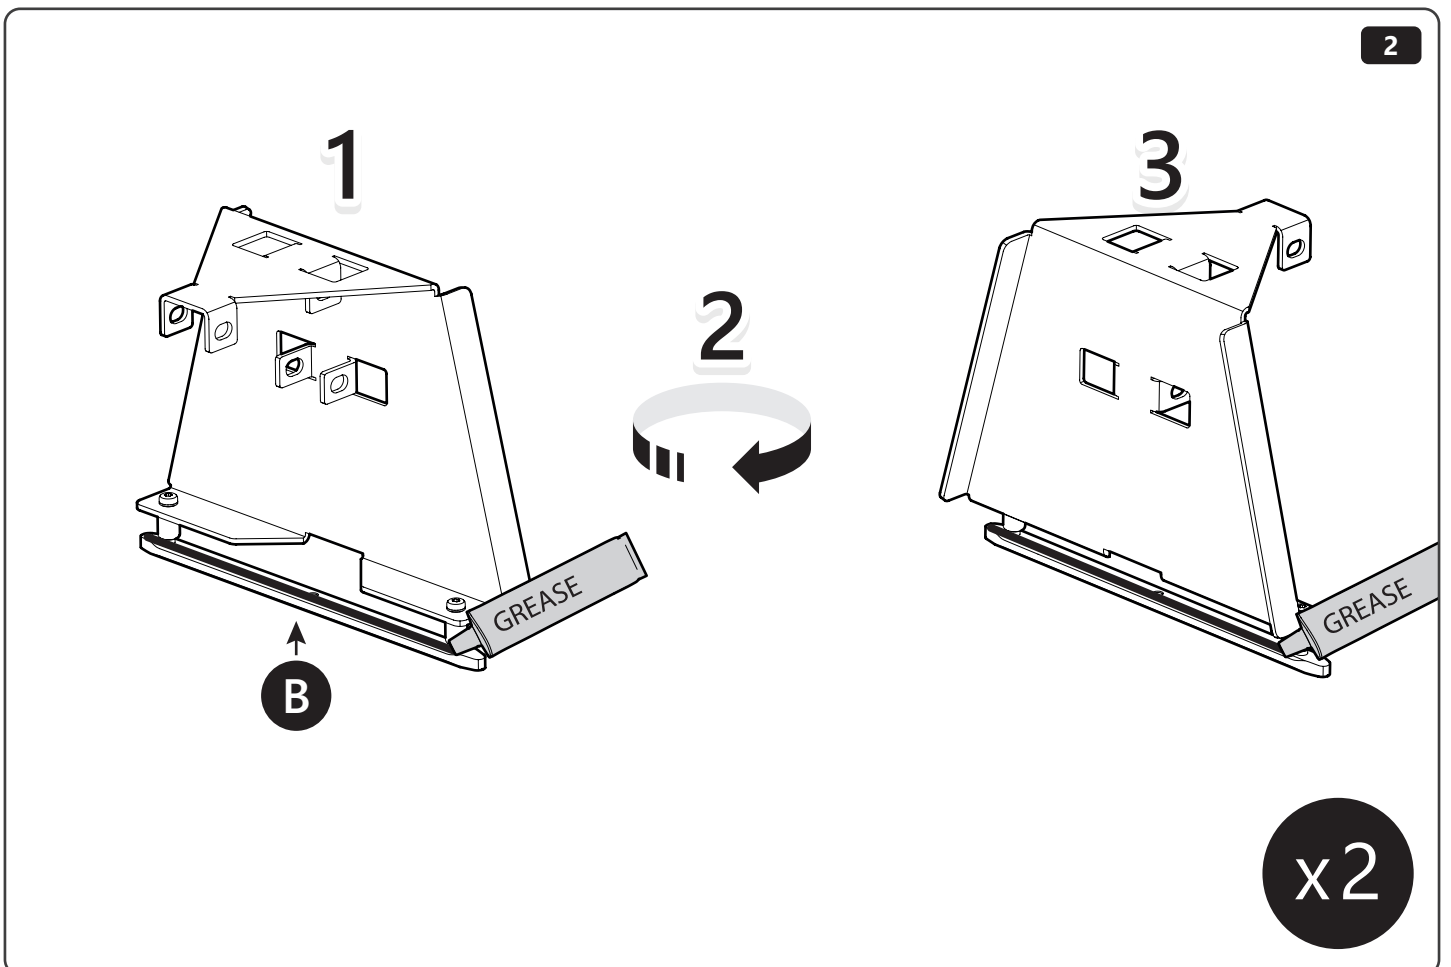
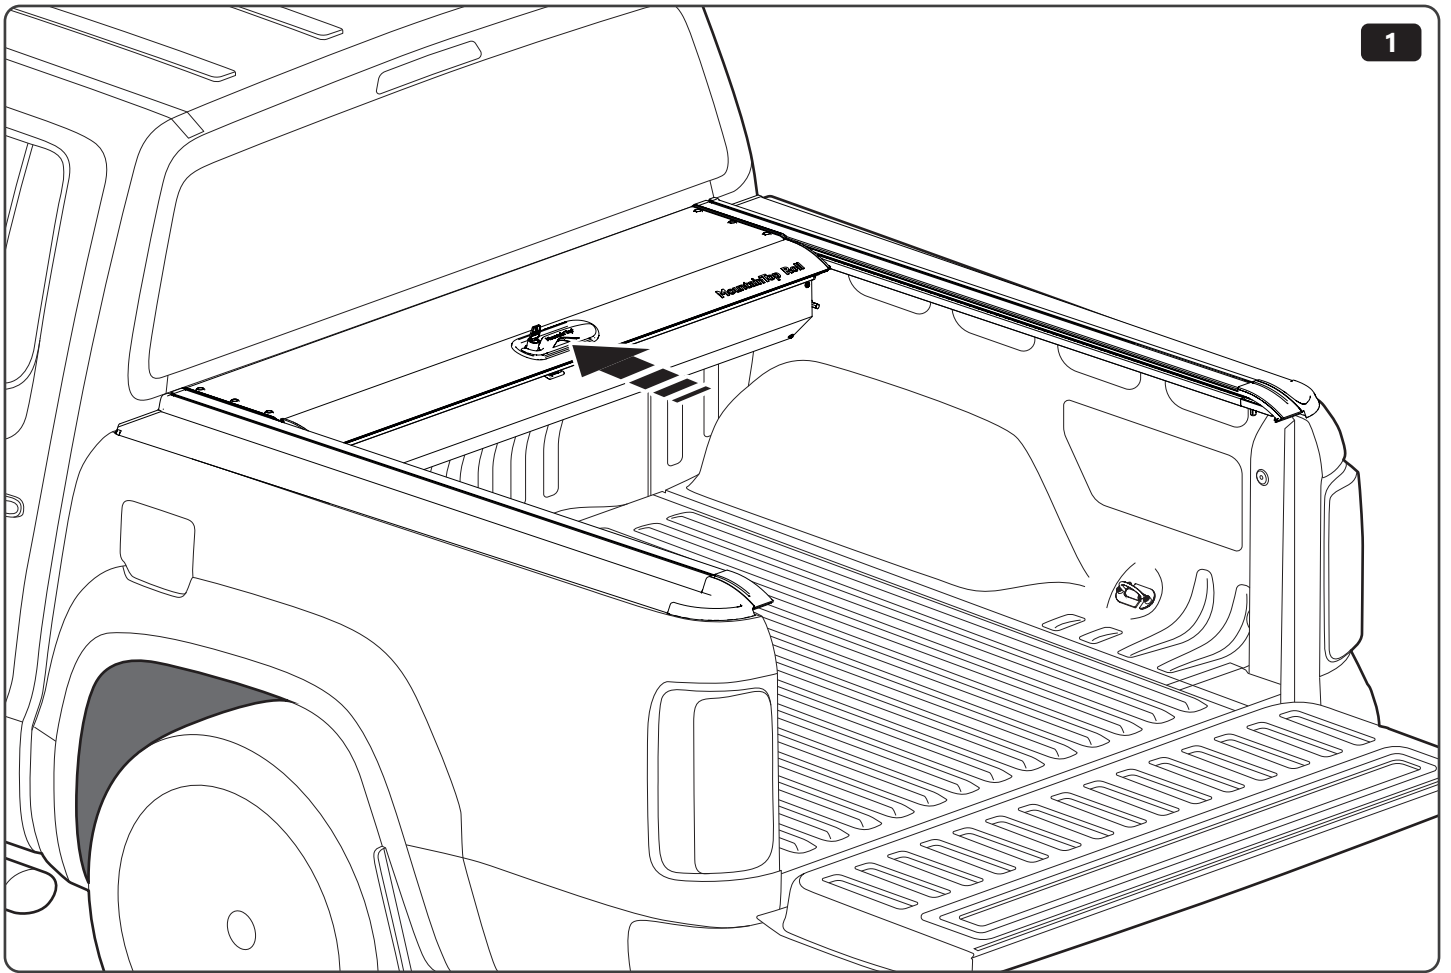


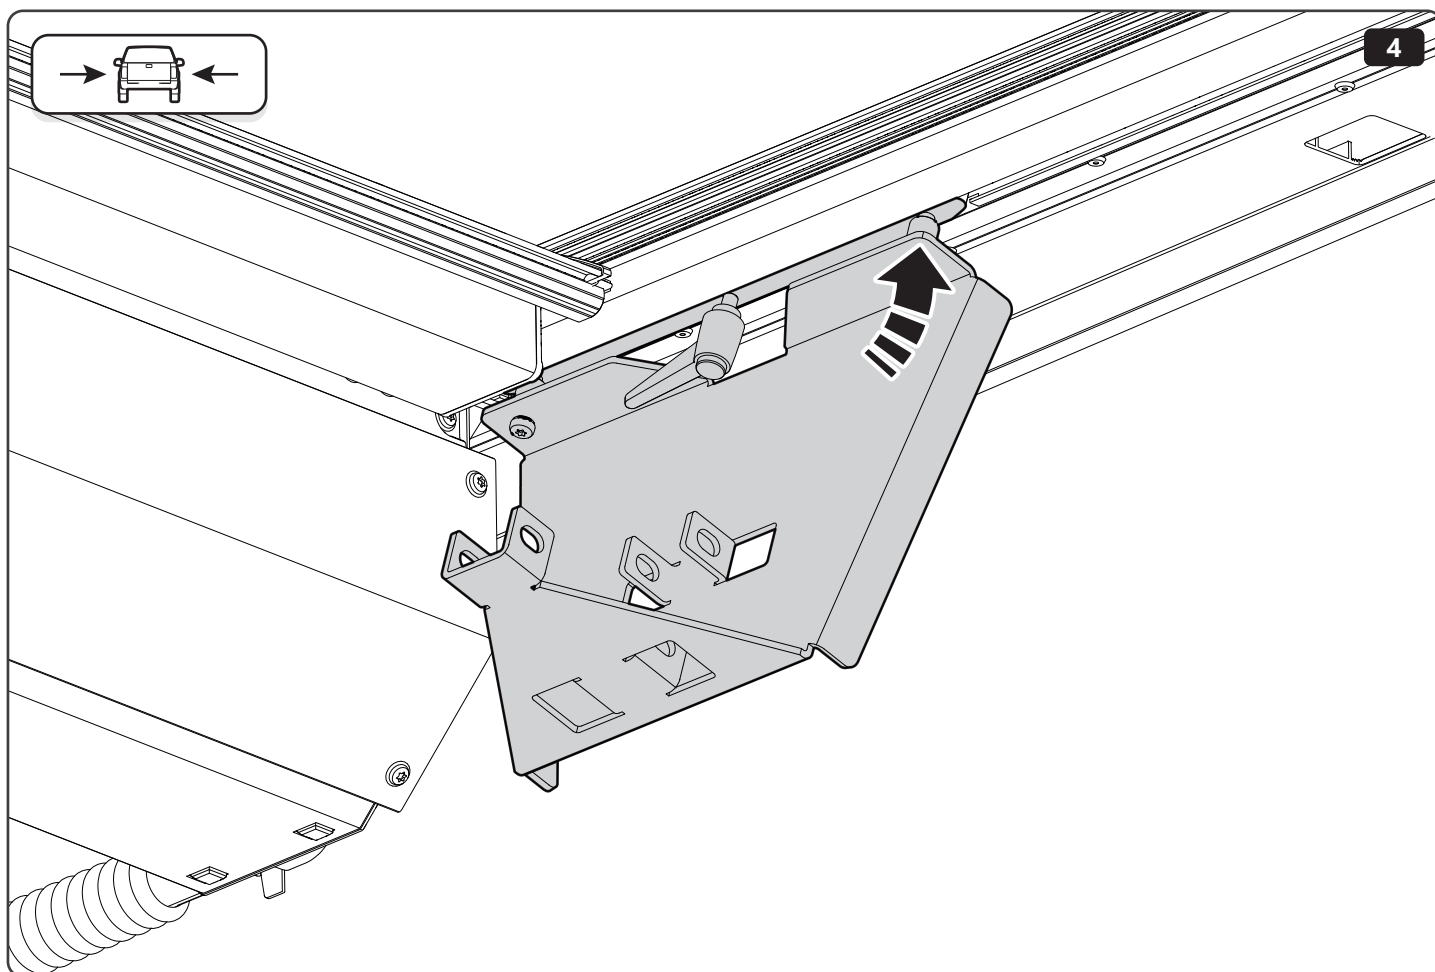
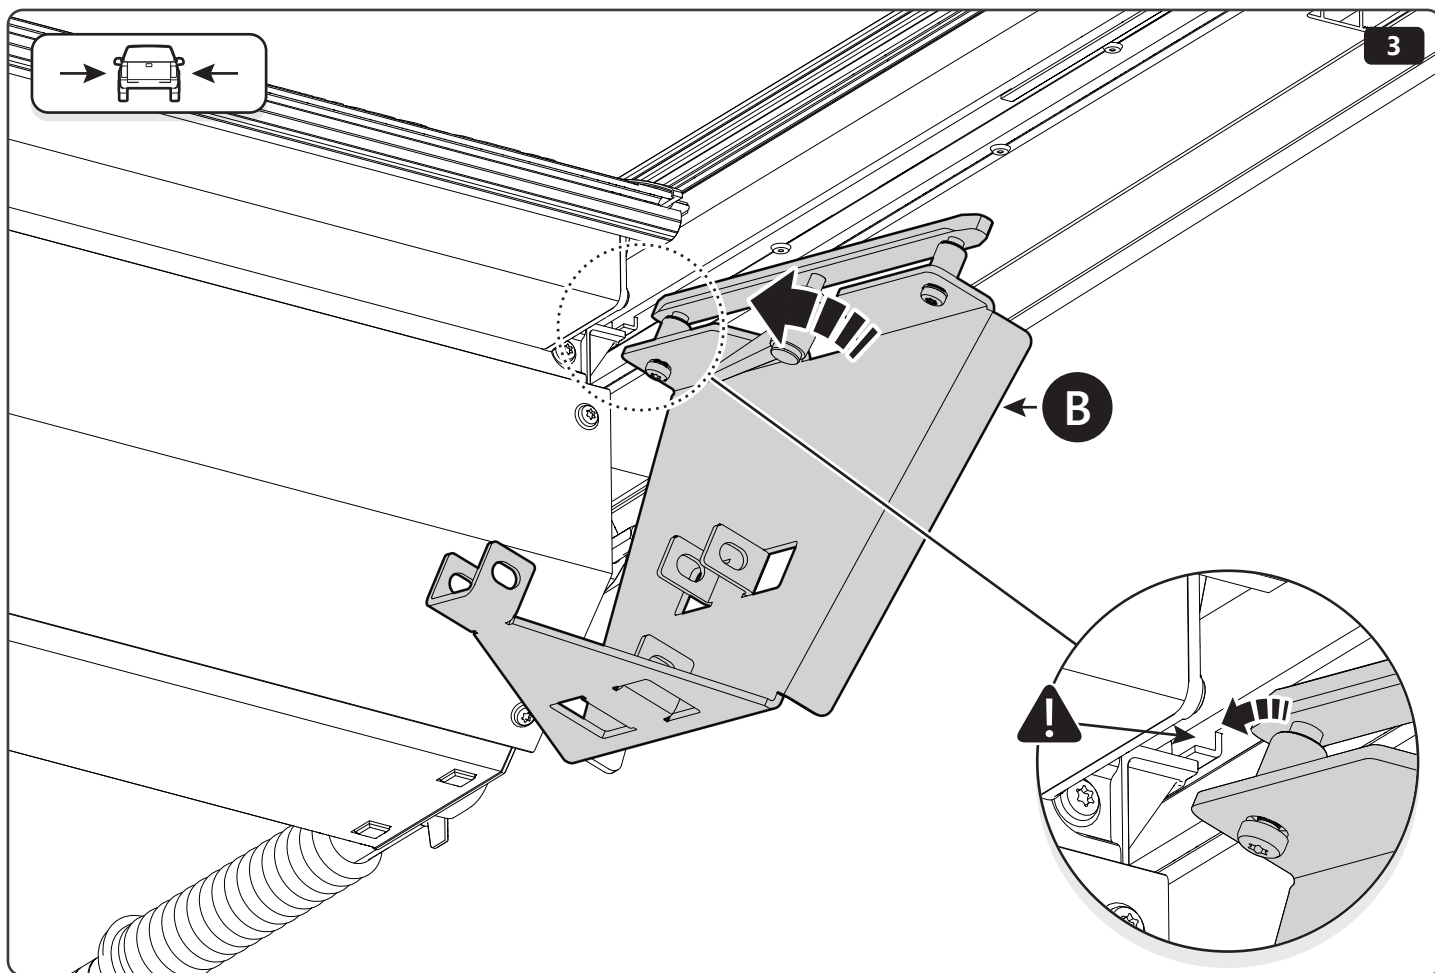


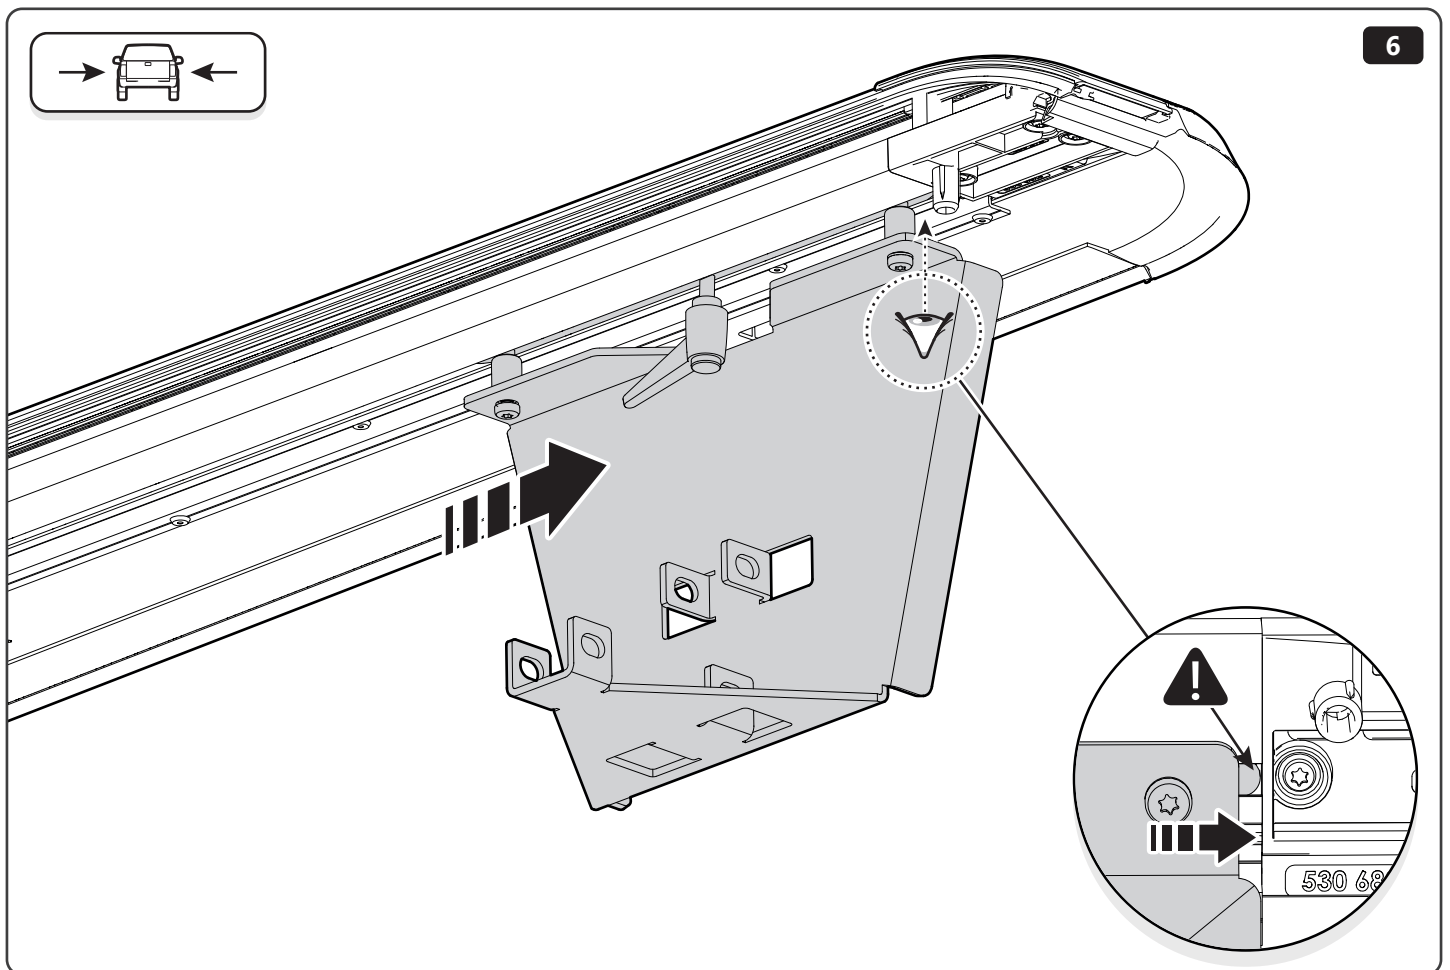
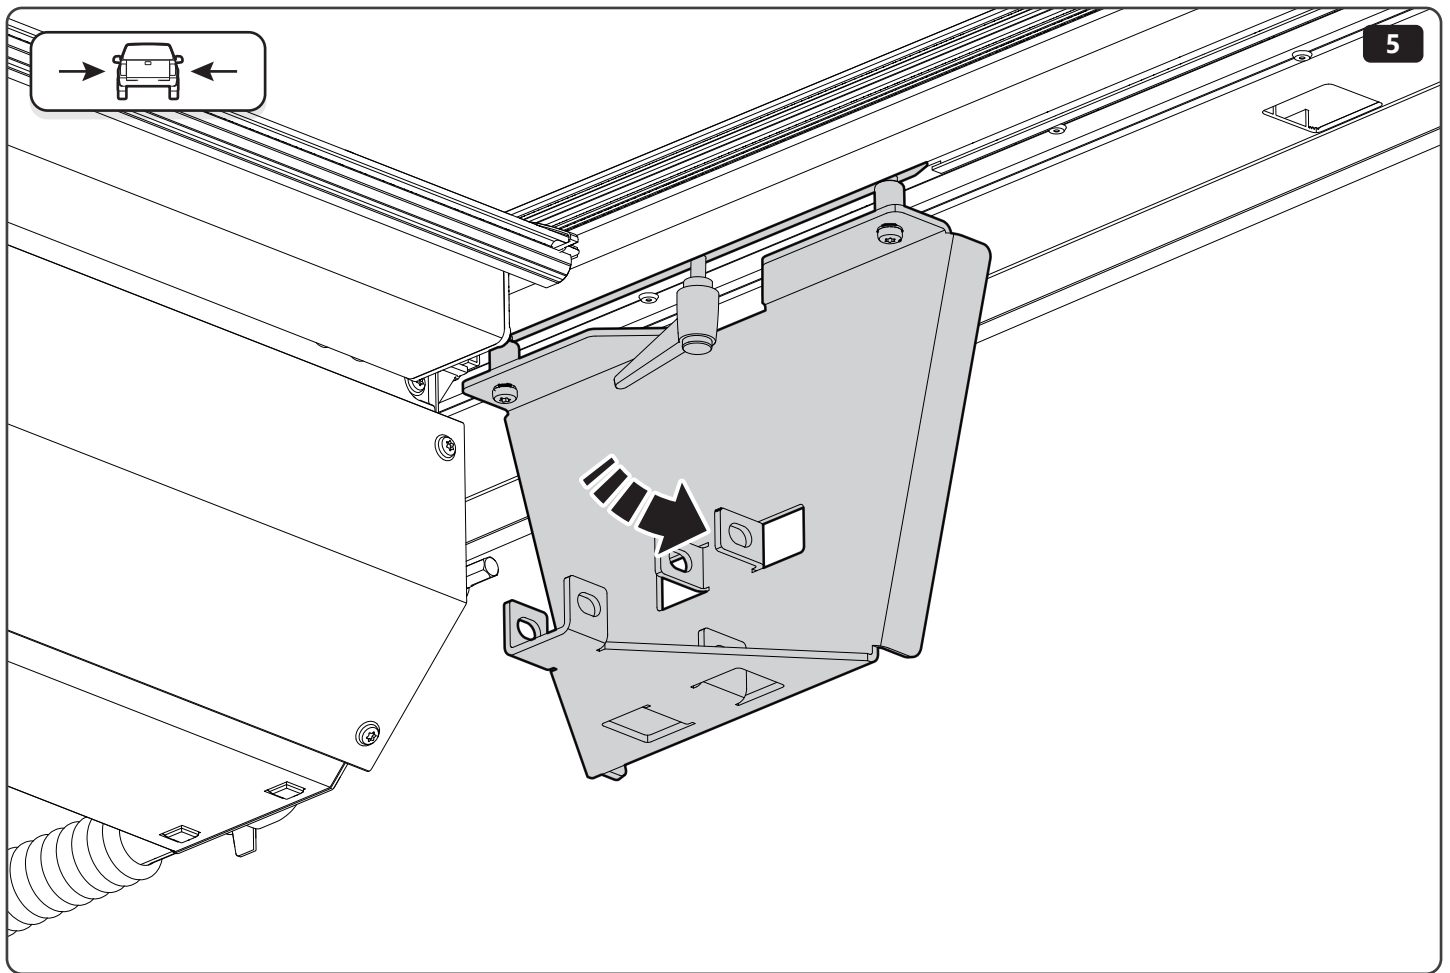


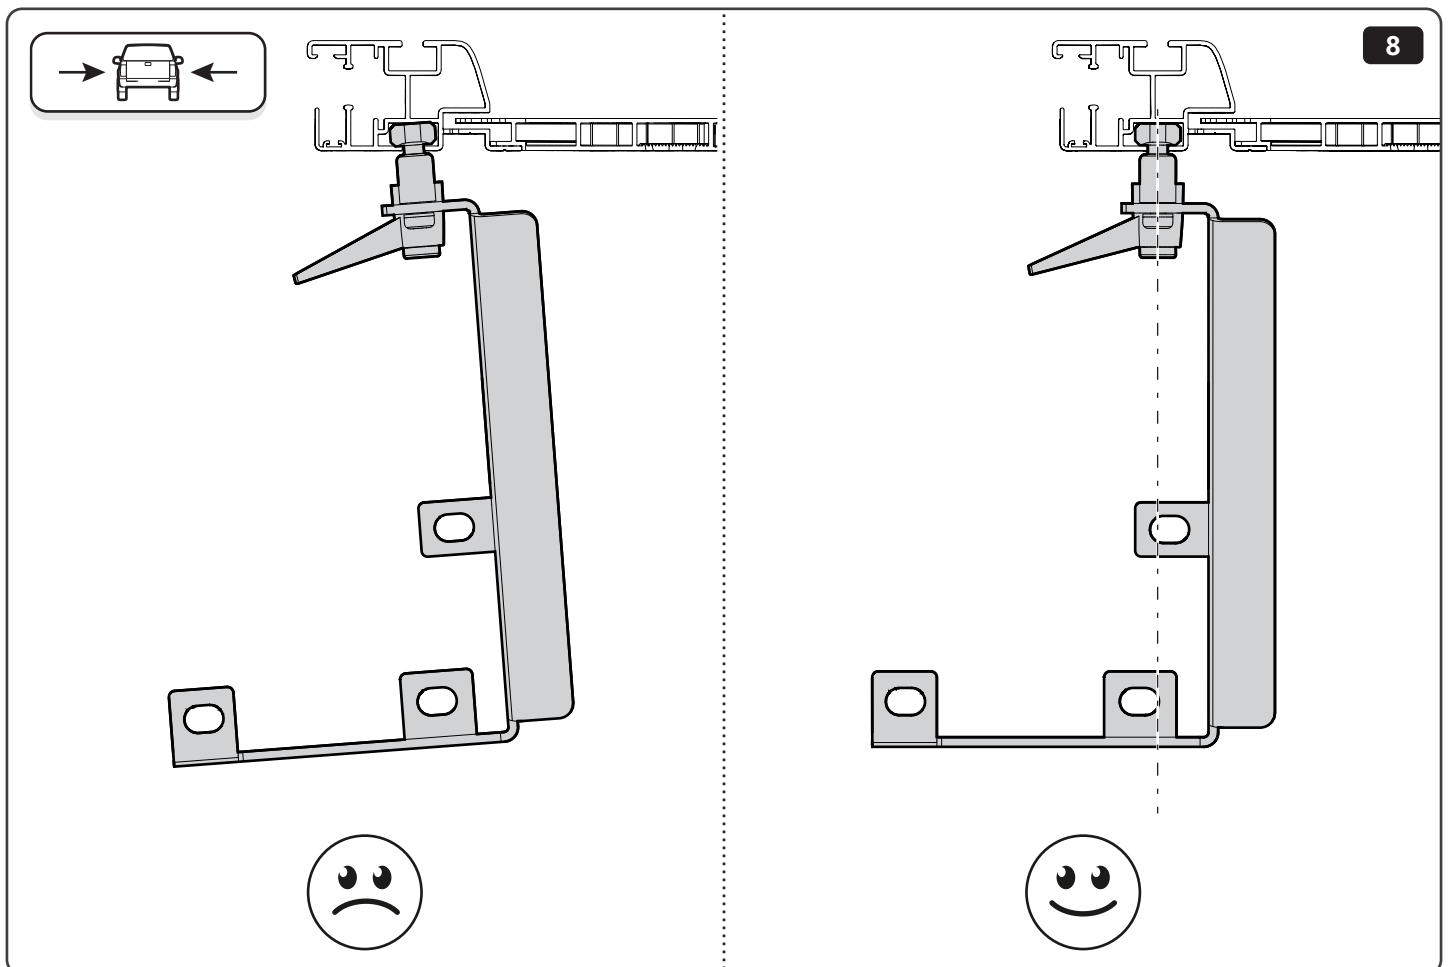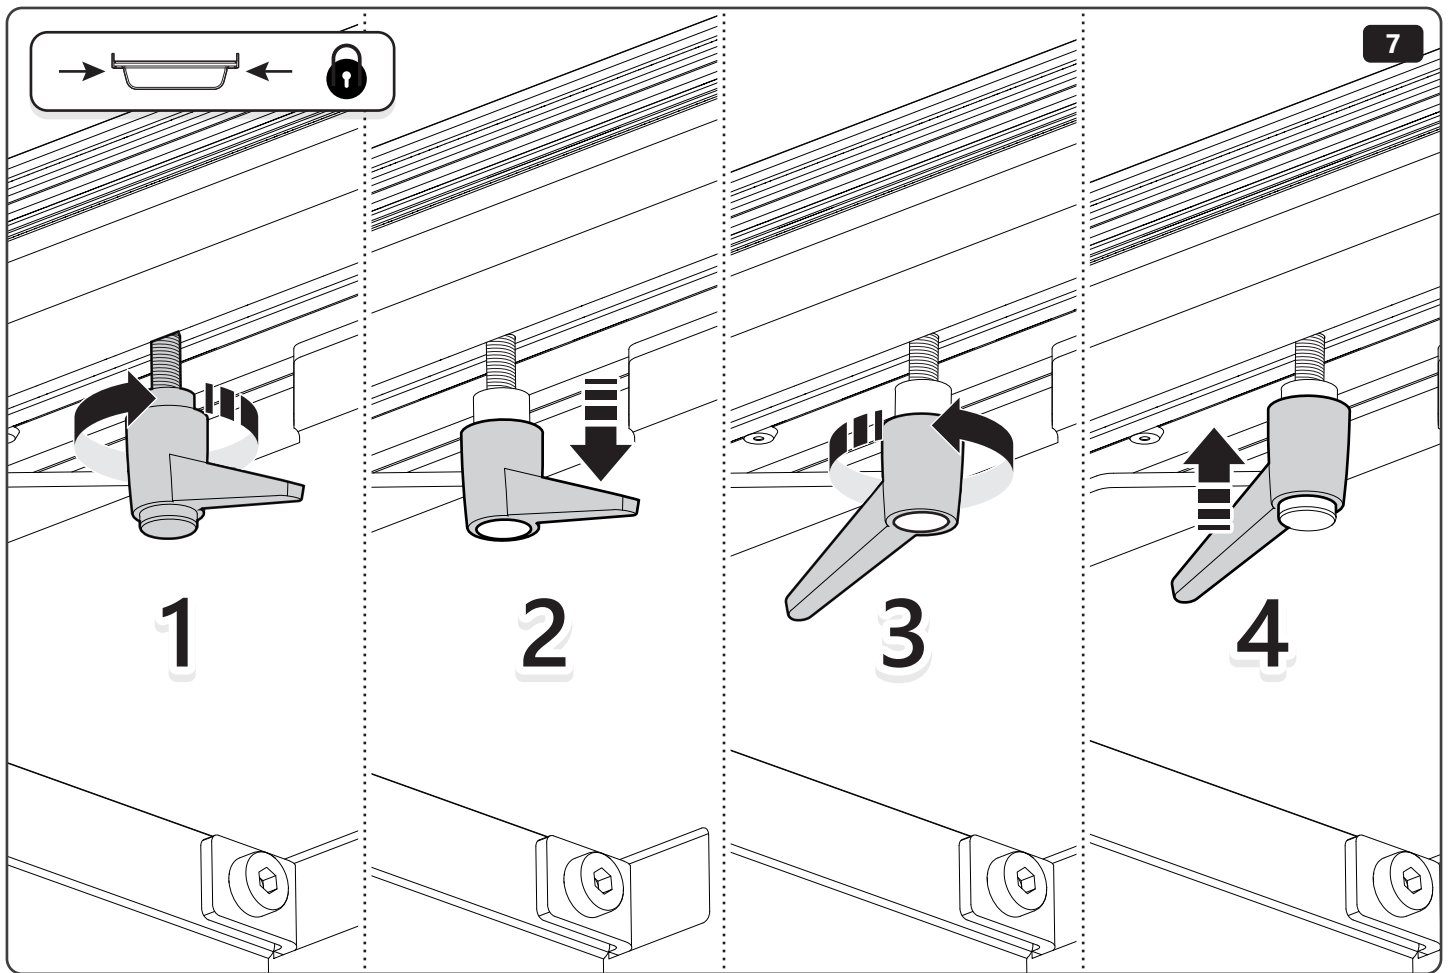

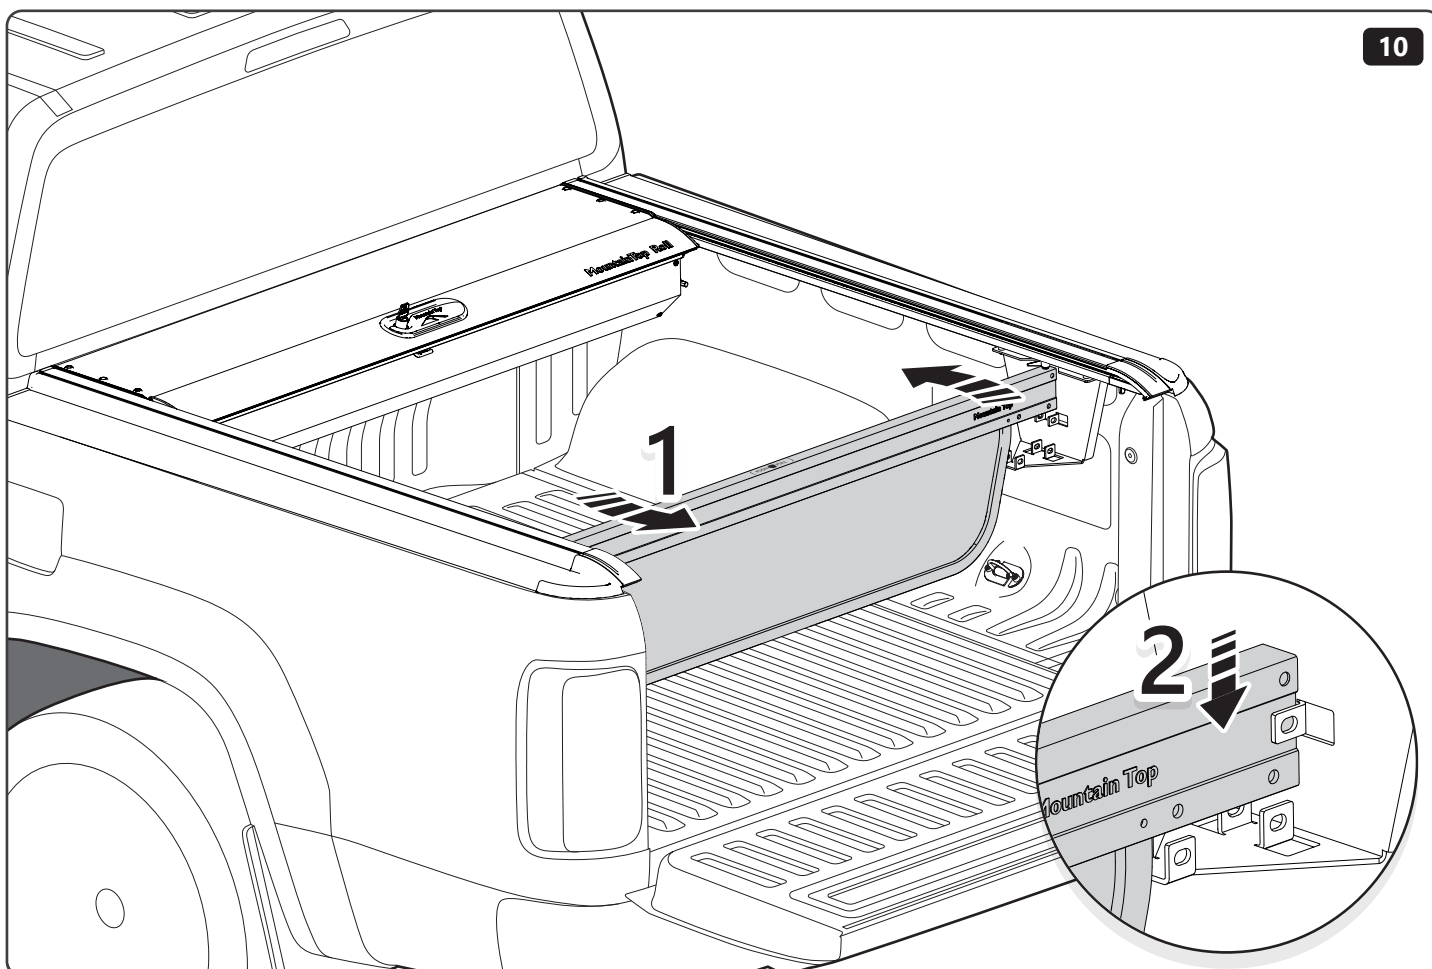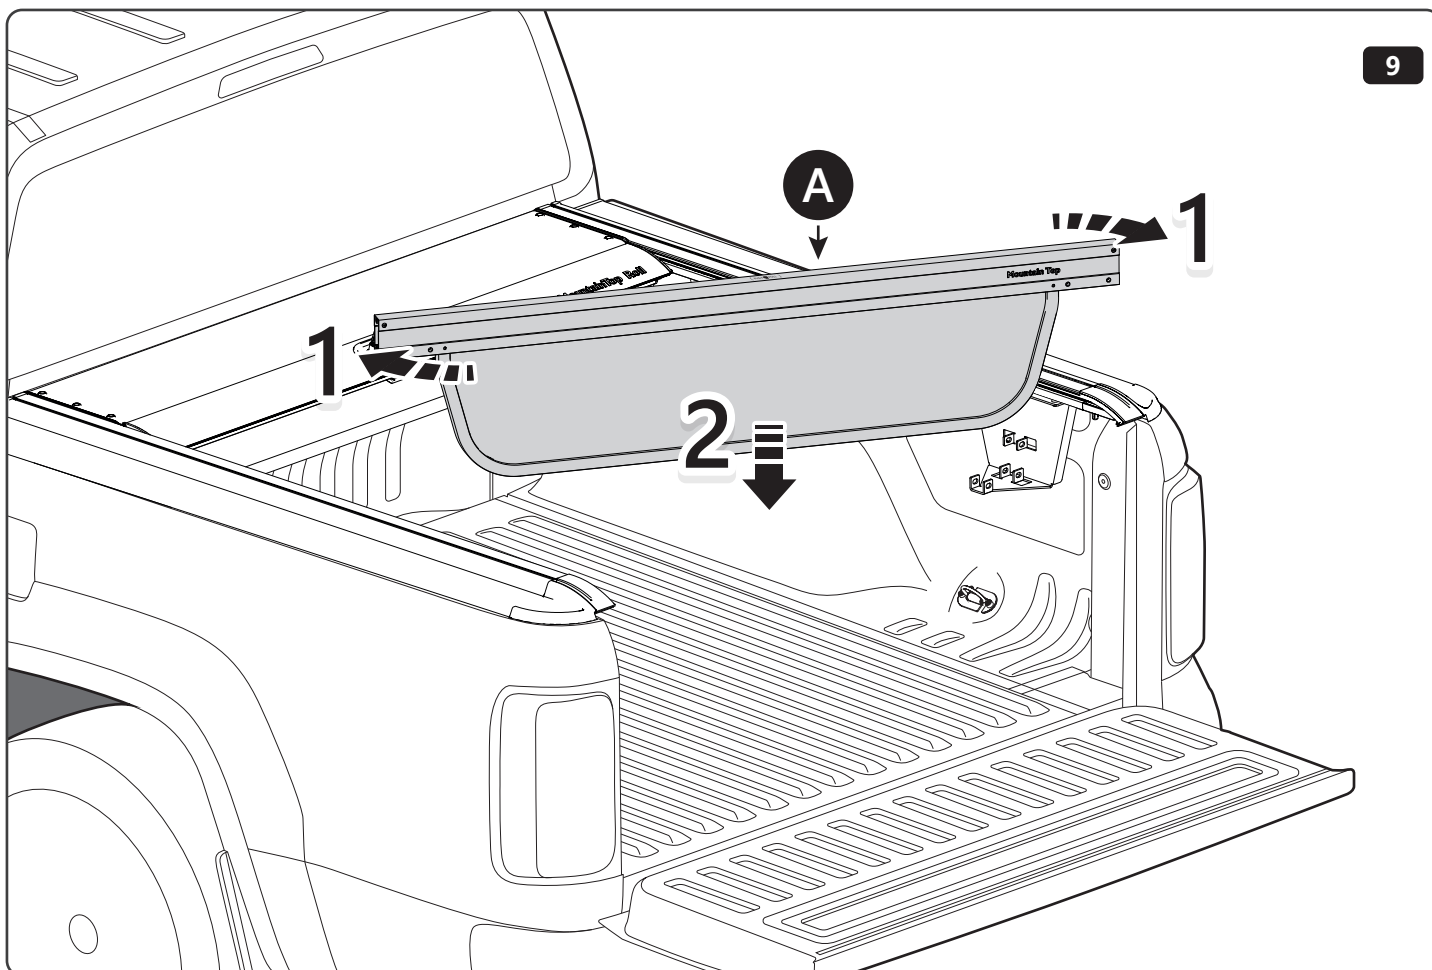


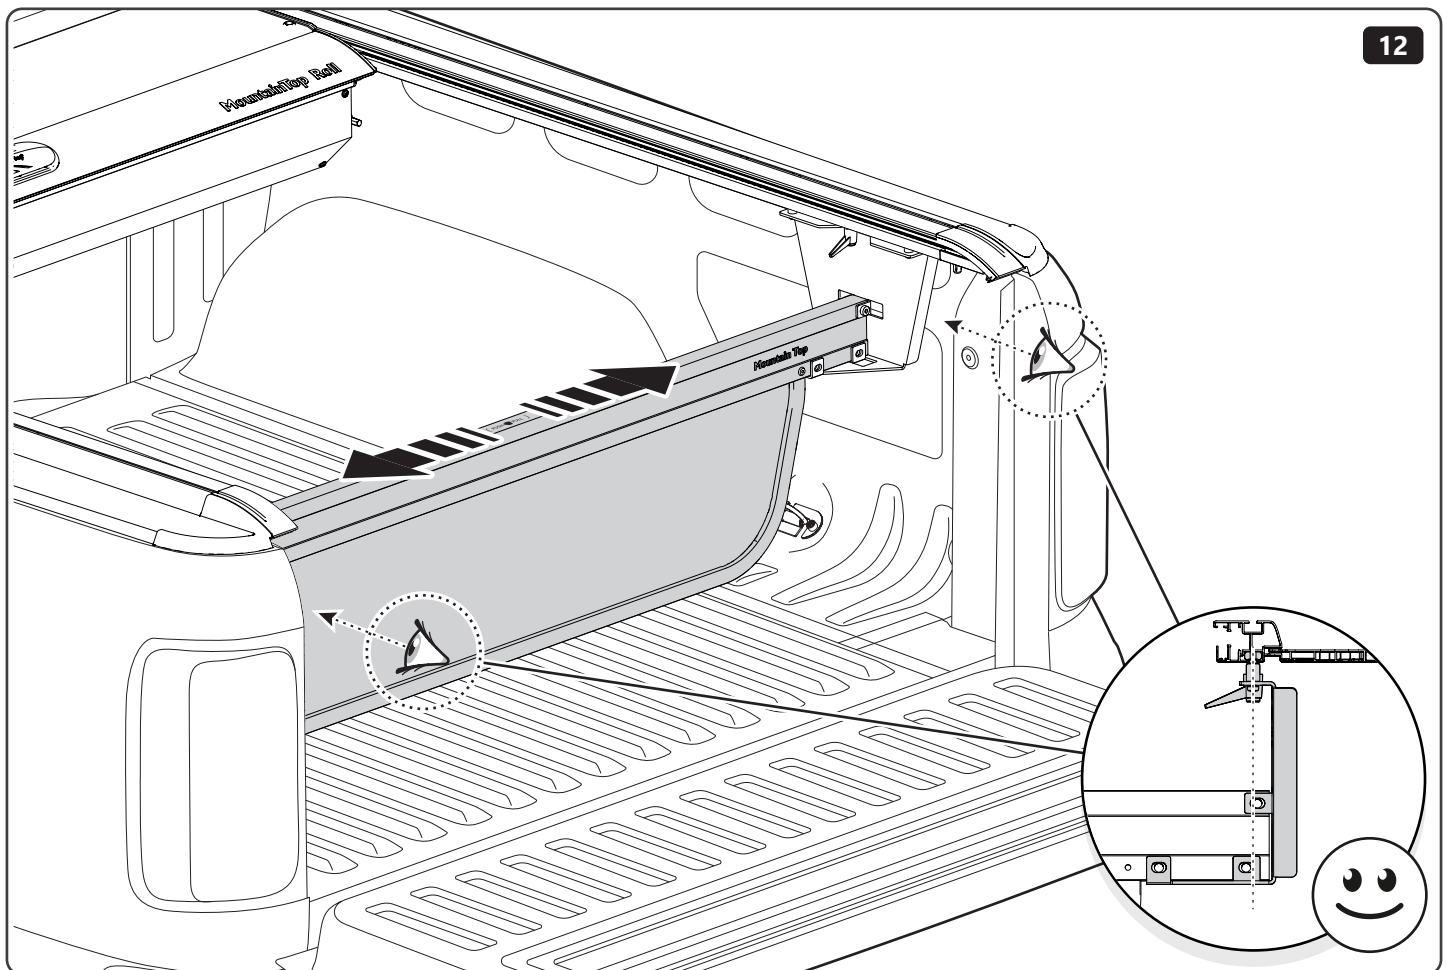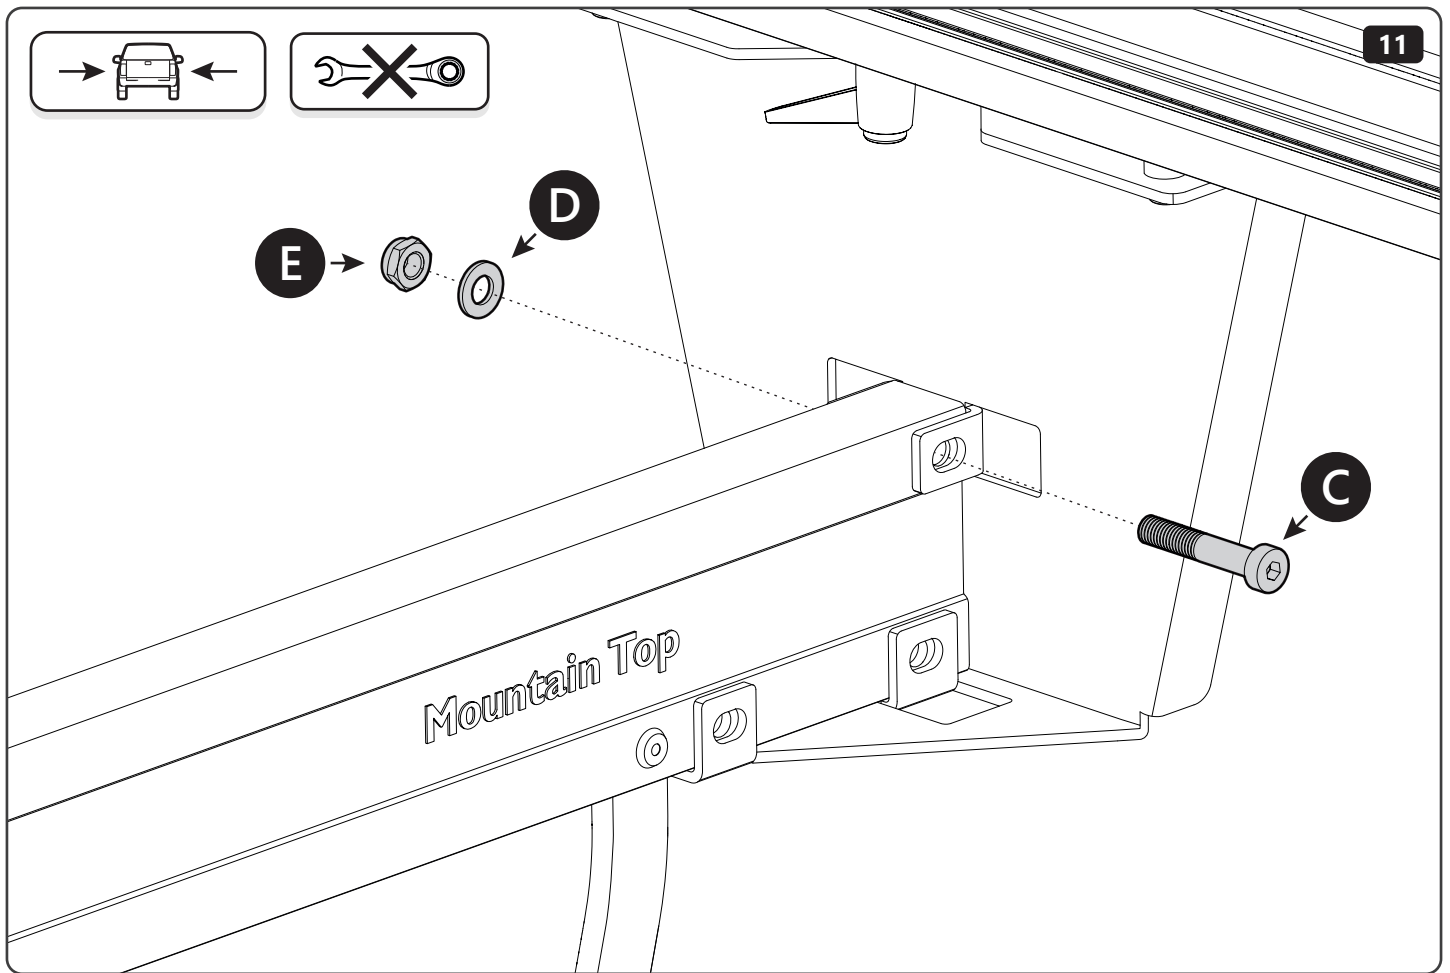

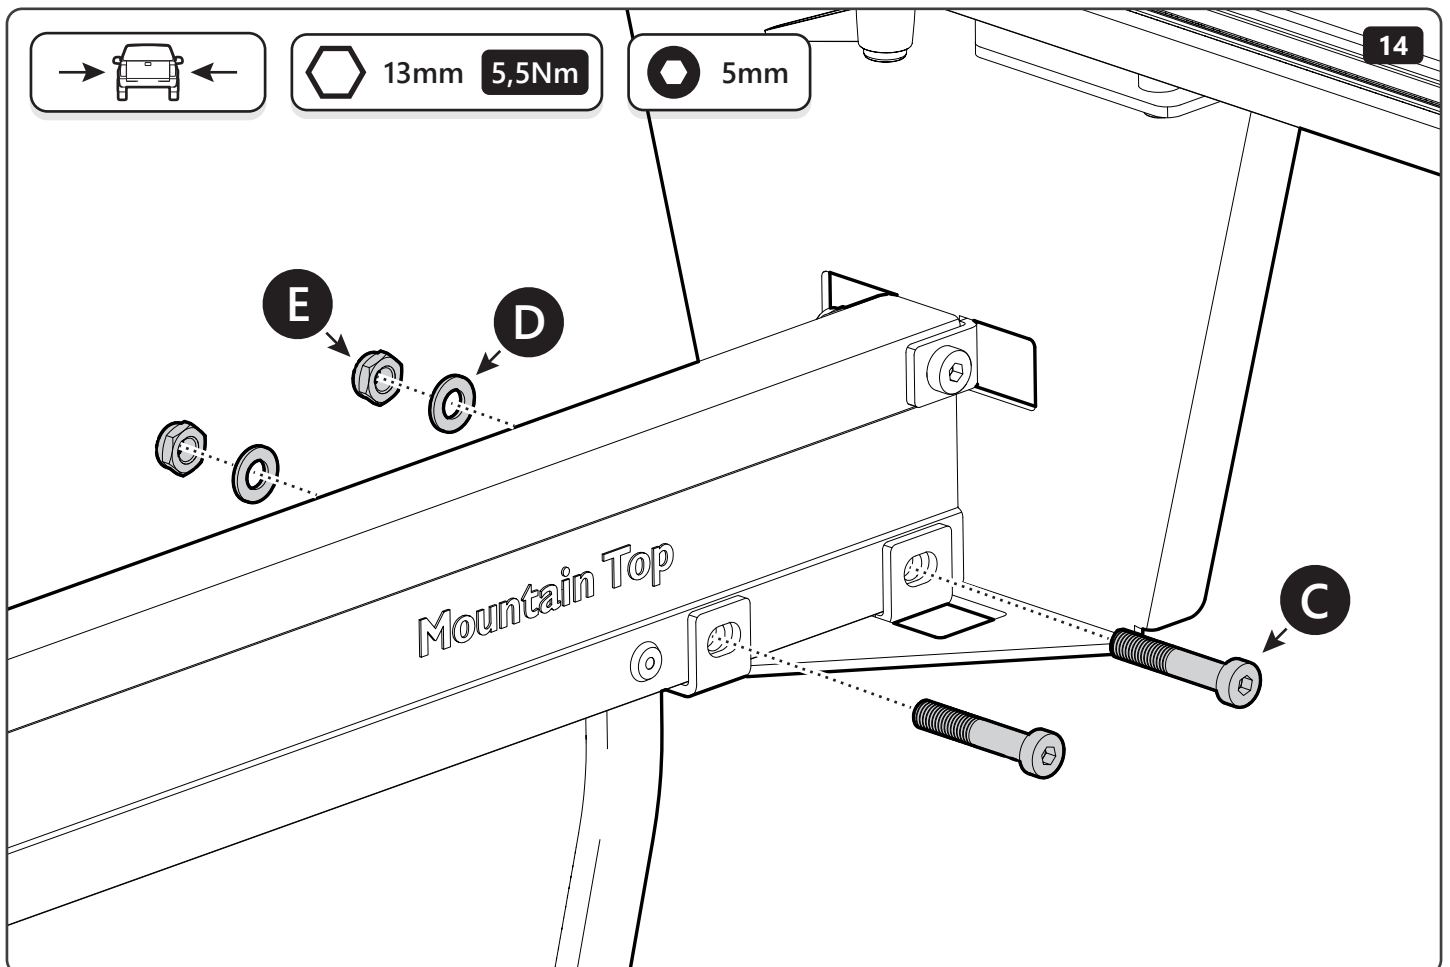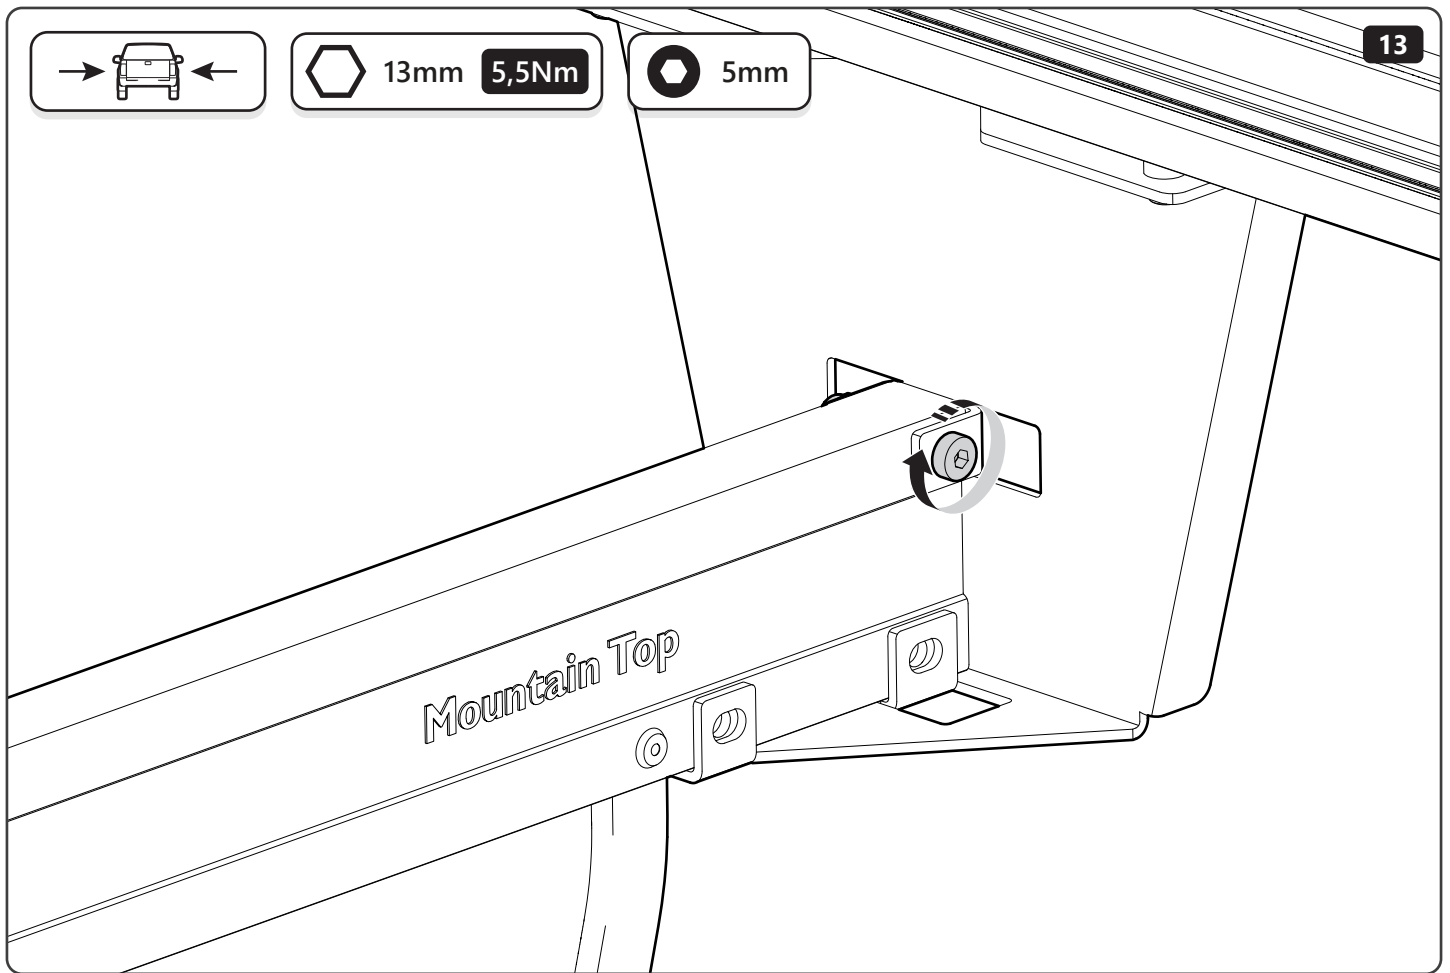


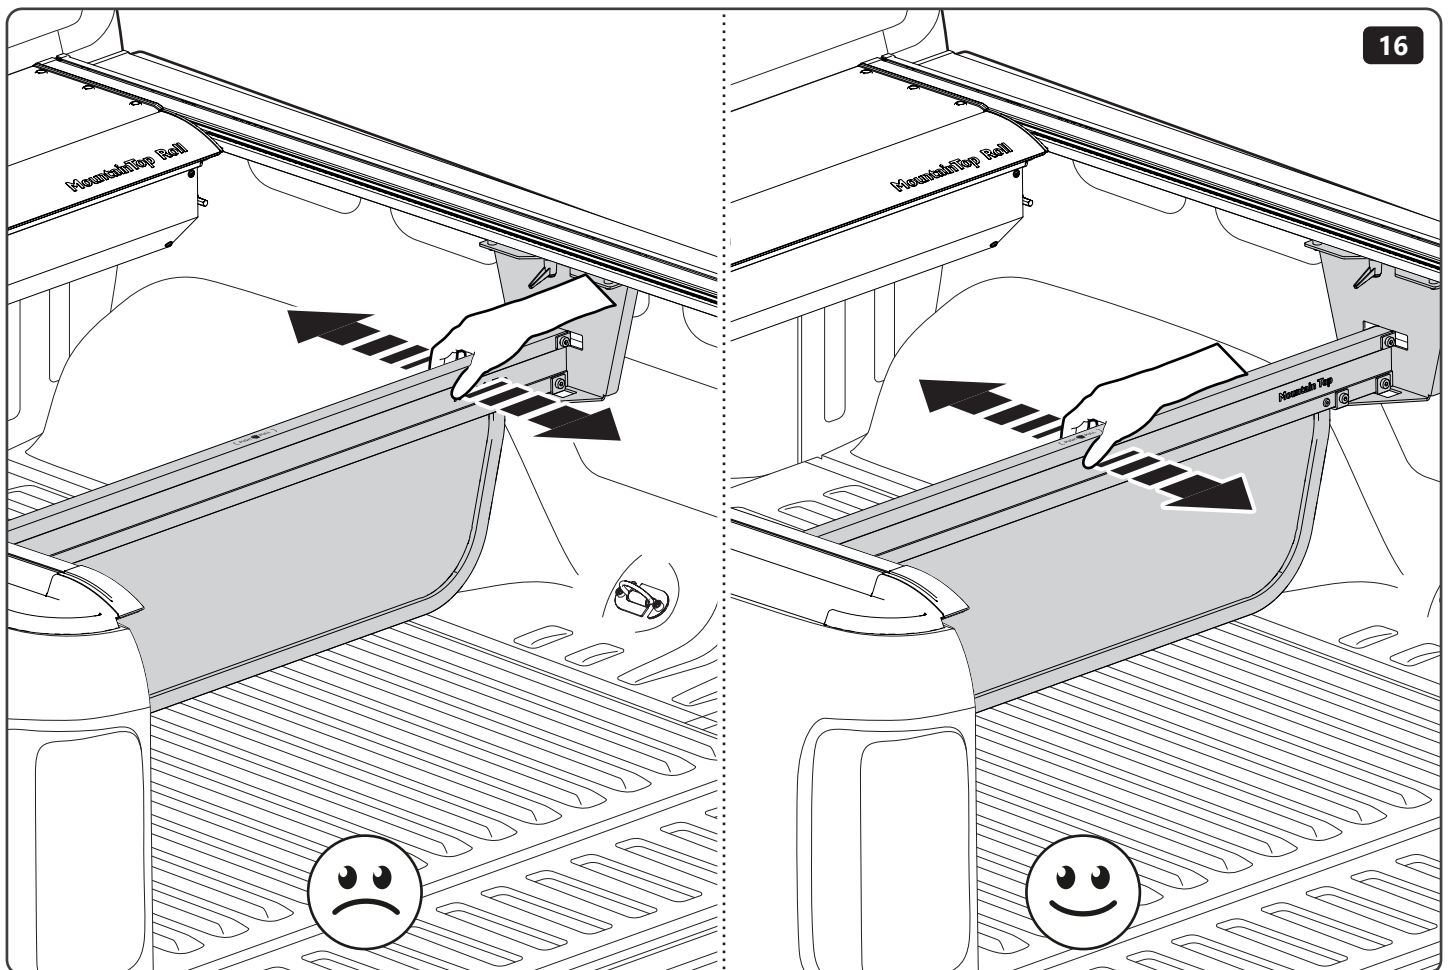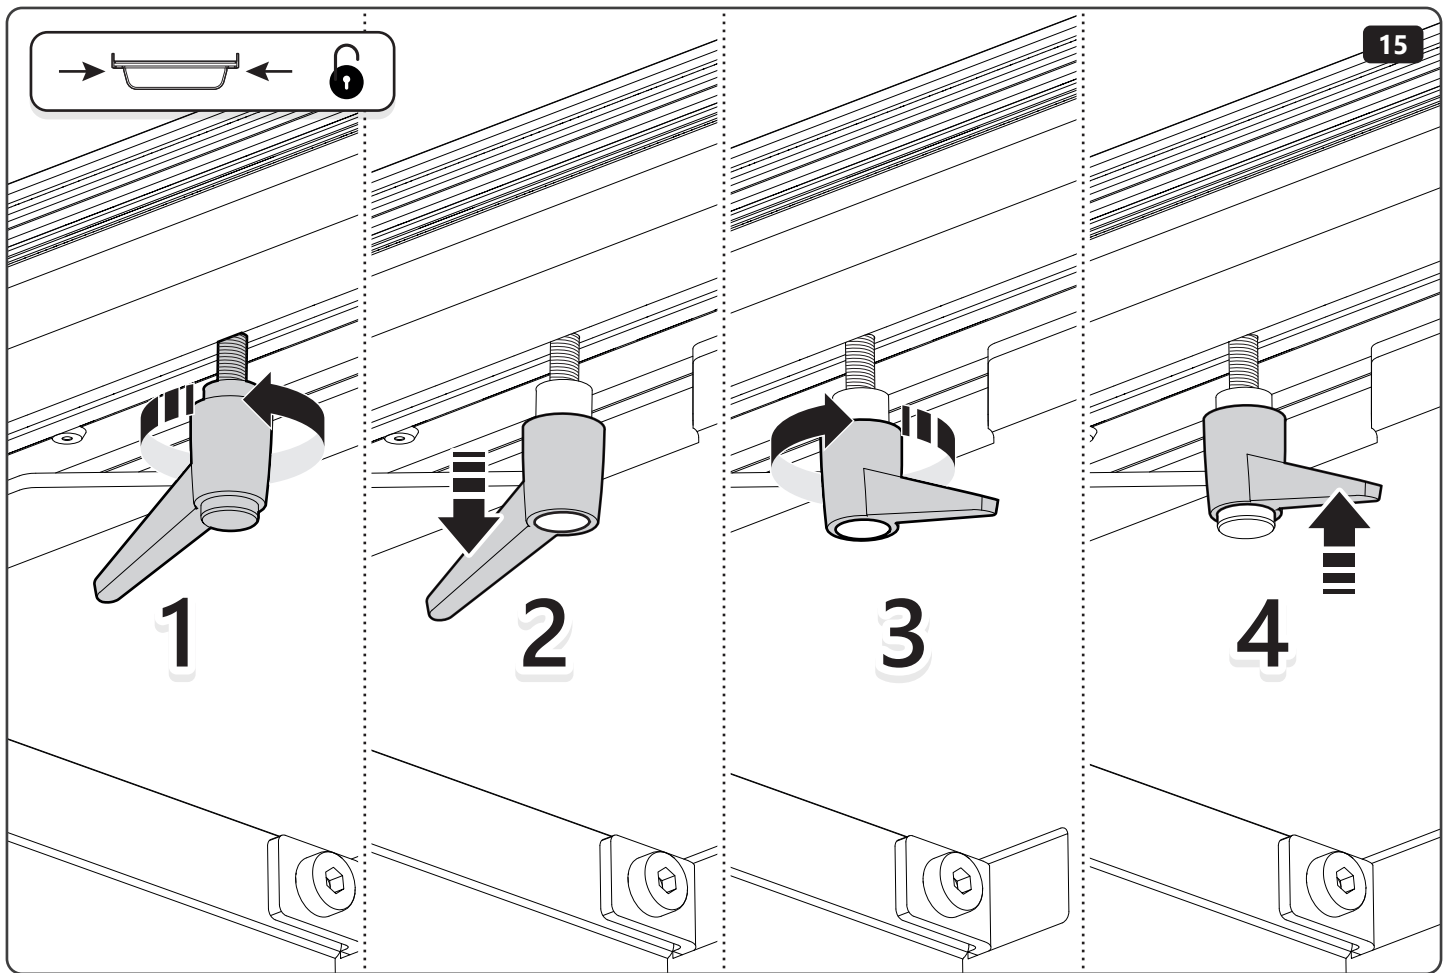

17

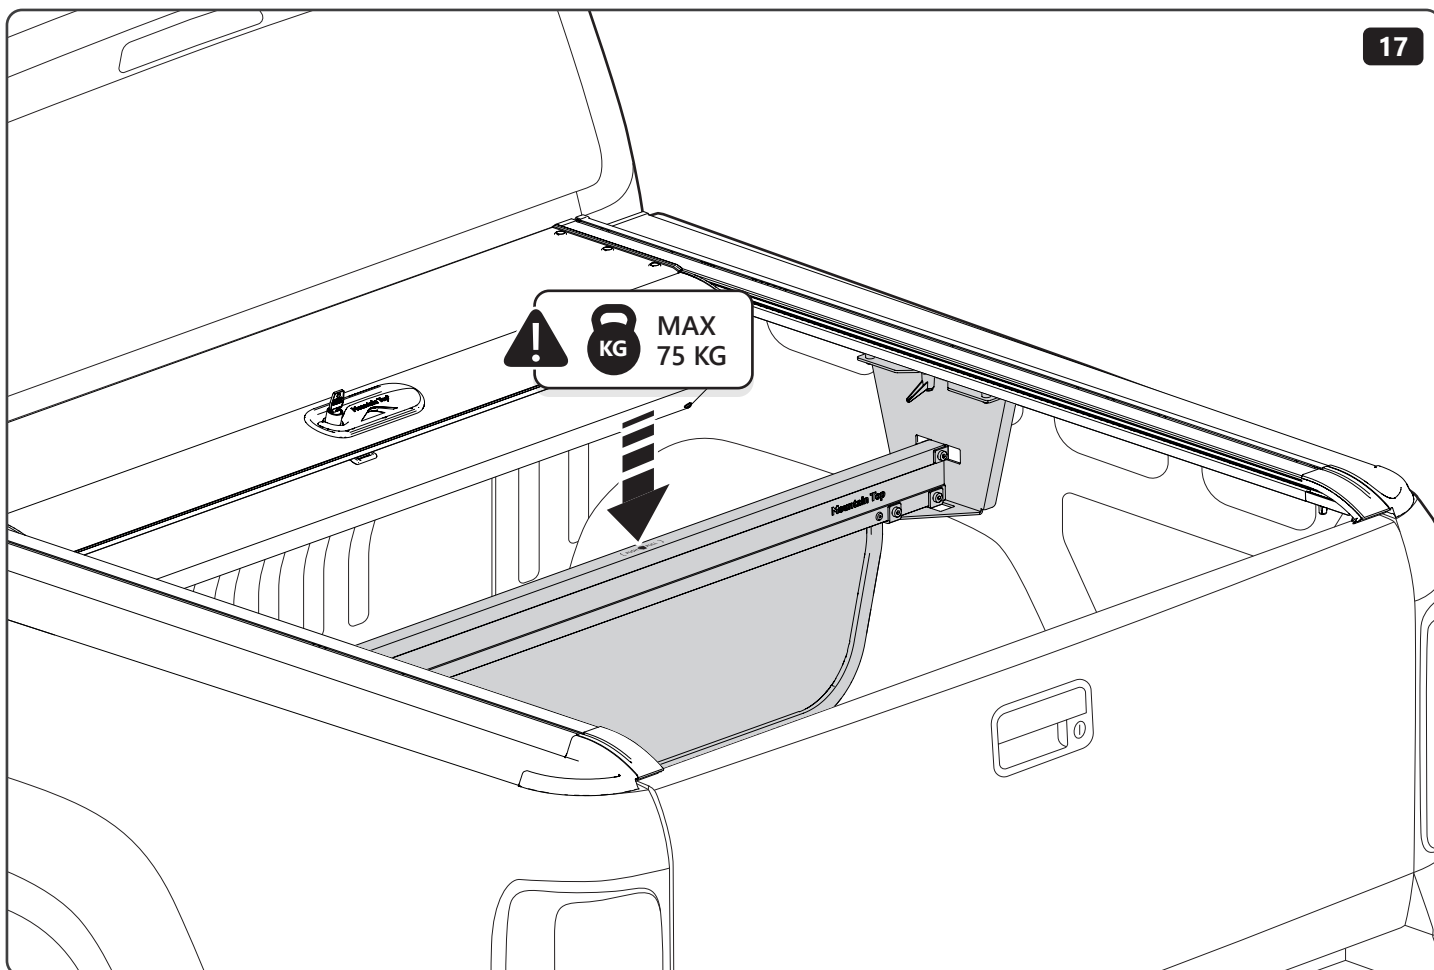

18

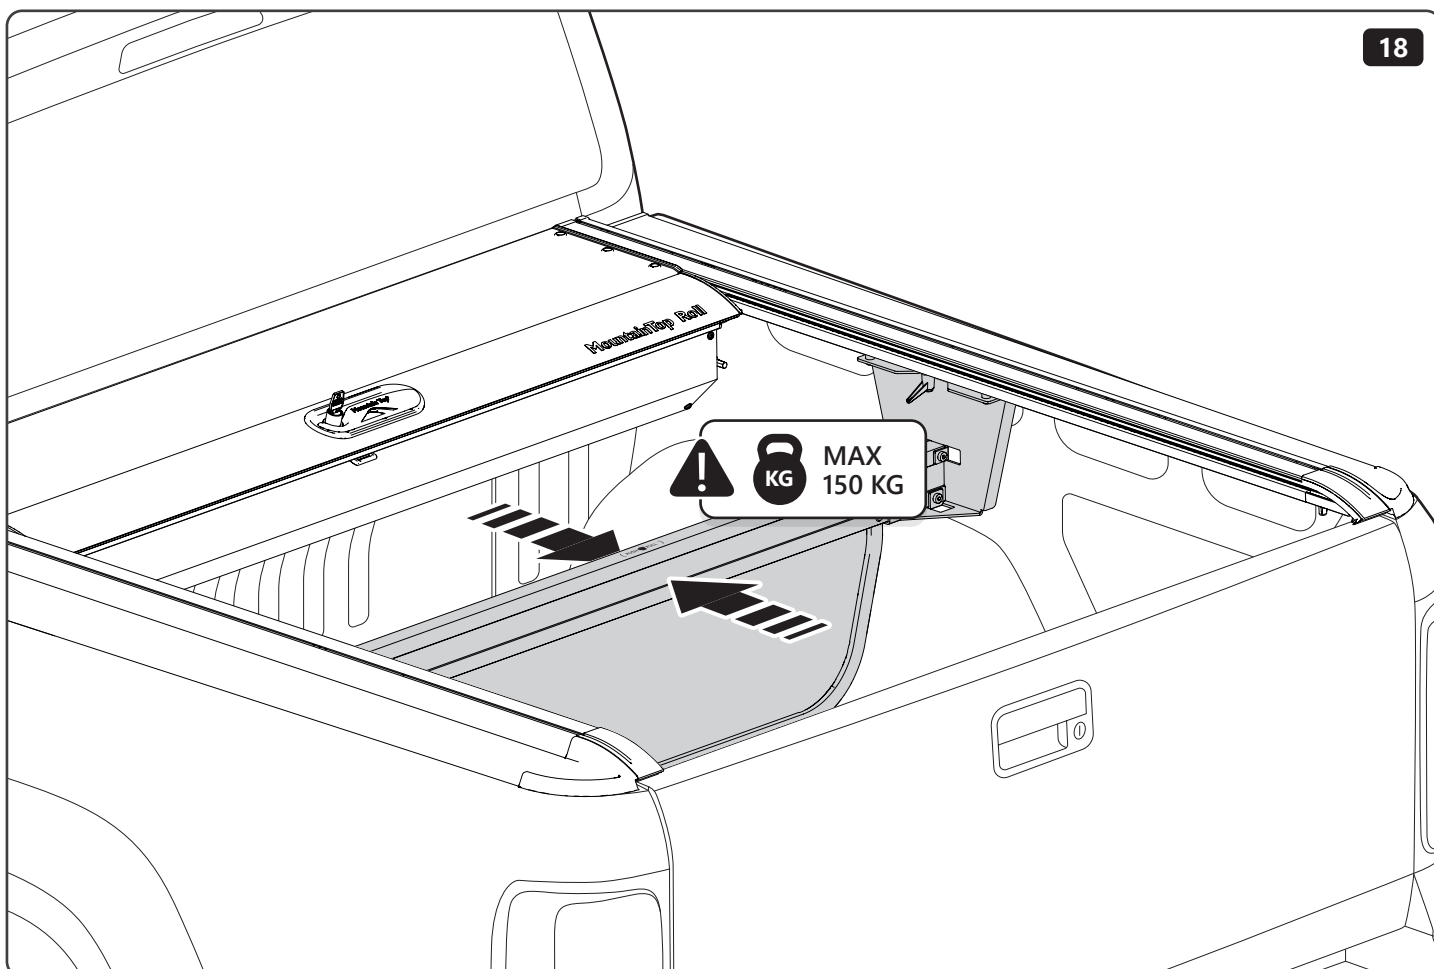



Customer Service	+45 4810 2950 (08:00 - 16:00 CET)
Fax	+45 4810 2960
Support	info@mountaintop.dk
Website	www.mountaintop.dk
Address	Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
BD VW80 P01	Volkswagen Amarok / 2016 →	Double Cab	30 Minutes	5 Kg
BD SS90 P01	Ssangyong Actyon / 2018 →	Double Cab	30 Minutes	5 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare