




MOUNTAIN TOP® EV0m

Installation manual


Parts

A

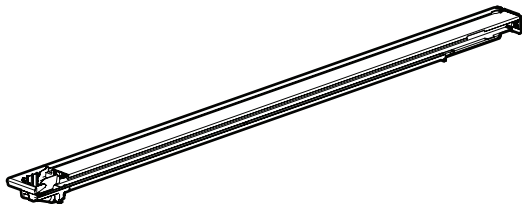


x1

B

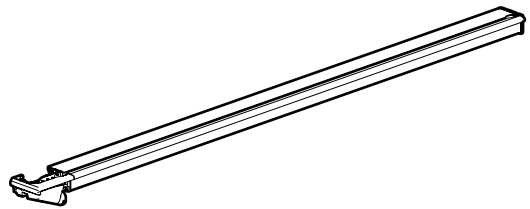


x1

C

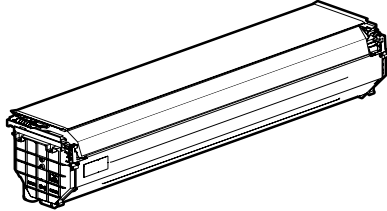

x1

D

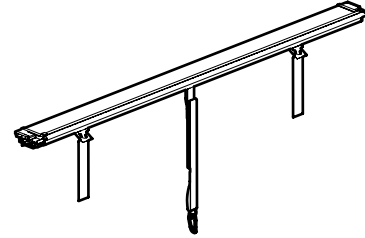

x1


02



x1

Kit


E

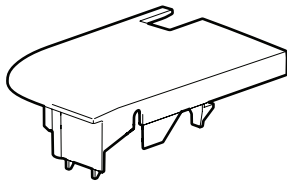

LEFT

x1

F

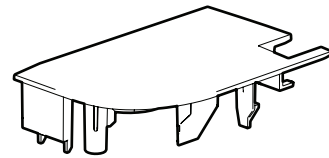


RIGHT

x1

Kit


G

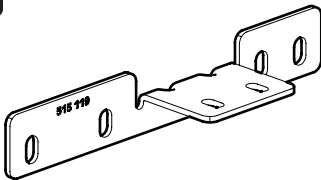

LEFT

x1


H

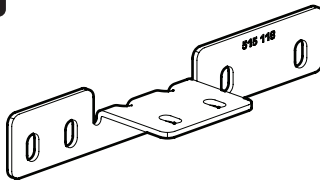

RIGHT


x1

I

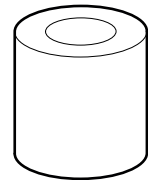

x2


J

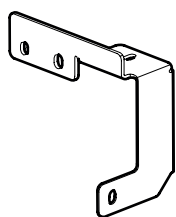

LEFT

x1


K

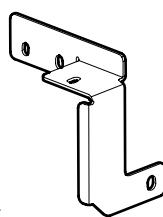

RIGHT

x1


L

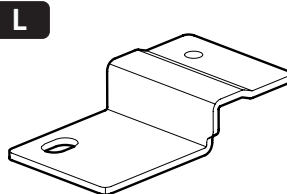

LEFT

x1


M

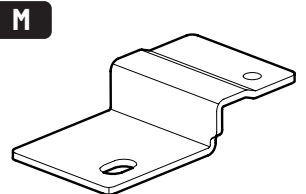

RIGHT

x1


N



M8x30 BLACK

x6

O



M6x12

x6

P



M6x20

x10


Q



M6x12 BLACK




x2




P2















M6x16


x4

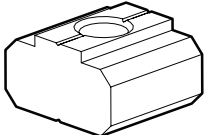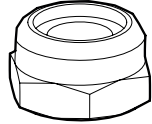
Kit			
R  x 2	S  M6 x 10	T  M8 BLACK x 2	U  M6 x 10







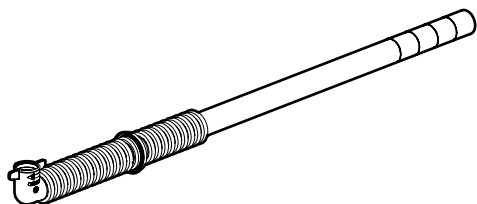
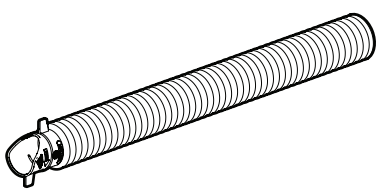
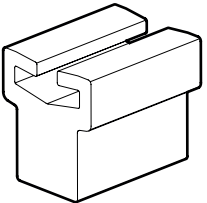
Kit			
V  x 2	W  x 2	X  x 2	Y  x 2
		Z  x 4	

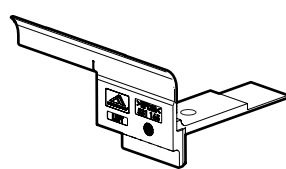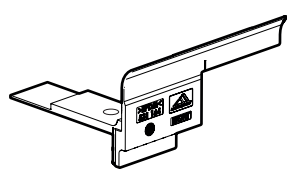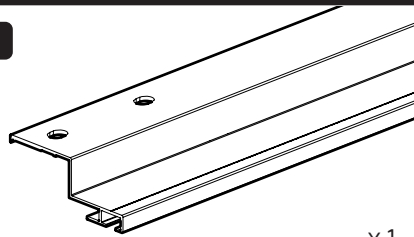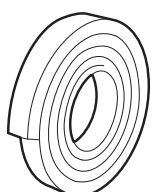Kit			
A2  x 1	B2  x 1	C2  x 1	
F2  6x25mm x 1	G2  6x10mm x 1	H2  M5x14 x 2	

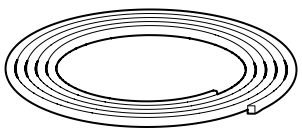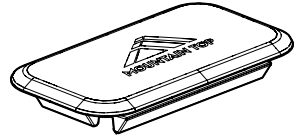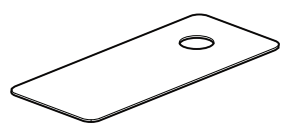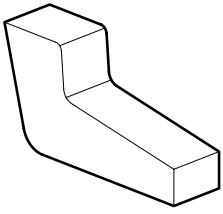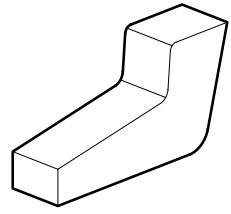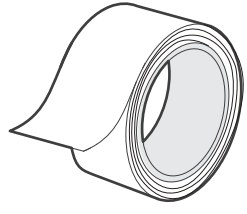Kit		
I2  14X14MM x 2	J2  x 6	K2  x 2
L2  x 1	M2  x 1	N2  x 2

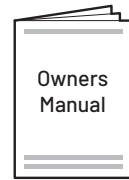Manuals		
 x 1	 x 1	 x 1

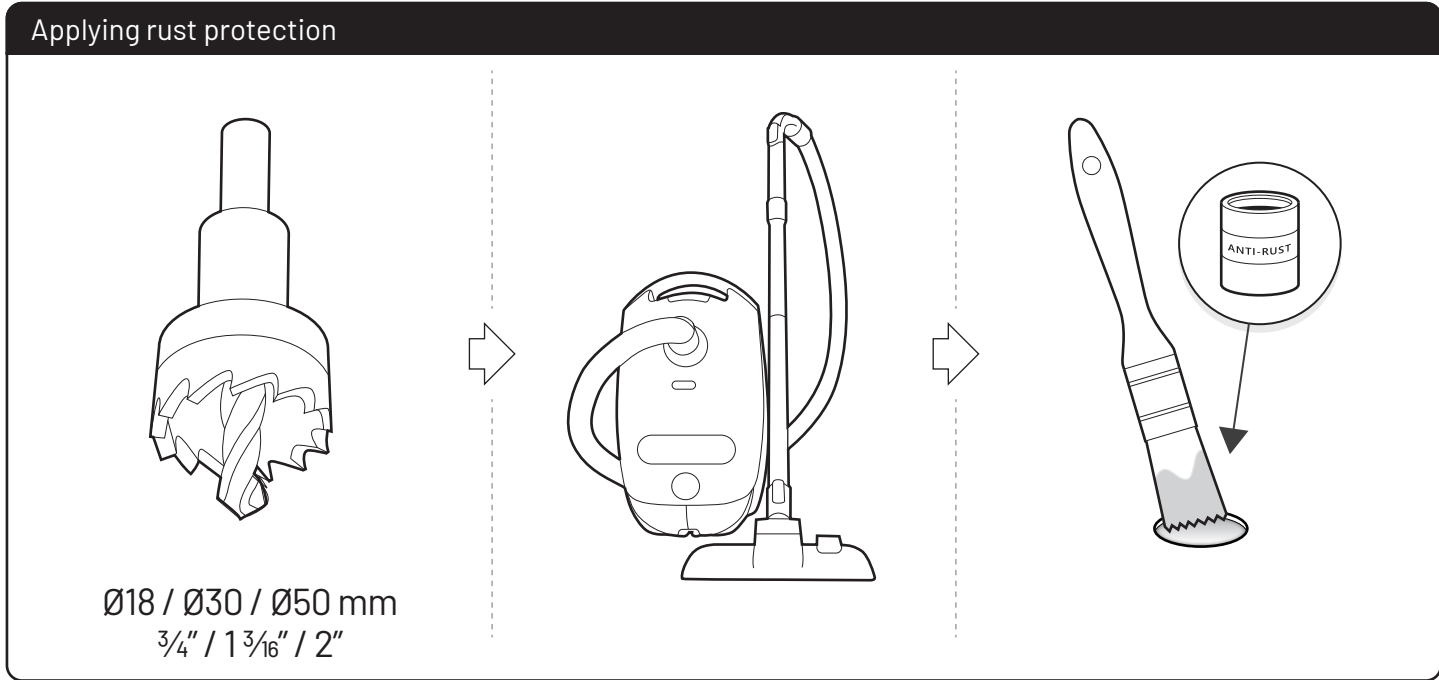

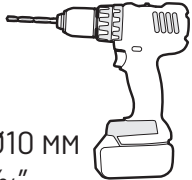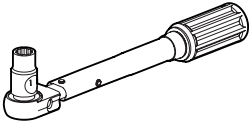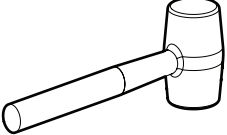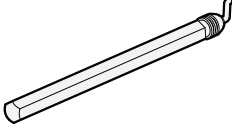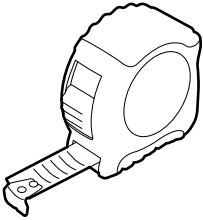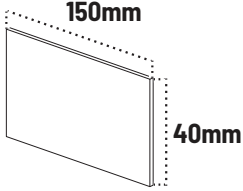
Tools needed			
 Ø3.5 + Ø10 MM 9/64" + 25/64"	2 - 15 Nm  T20, T30, T45	 Rust protection Rostschutzmittel Anti-rouille Anti roest	
		 Silicone (RTV)	
			
 SUPER GLUE (CA)	 LOCTITE 243	 CLEANER	 150mm 40mm WOOD / PLASTIC BOARD




**If sheet metal is scratched during installation,
apply rust protection to damaged areas**











**Remove mass damper on tub
headboard prior to installing
Rollershutter (only applicable to
RAP CAB Variants)**

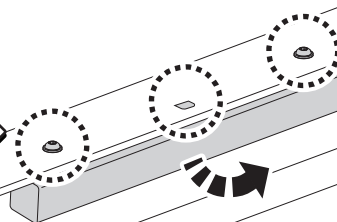

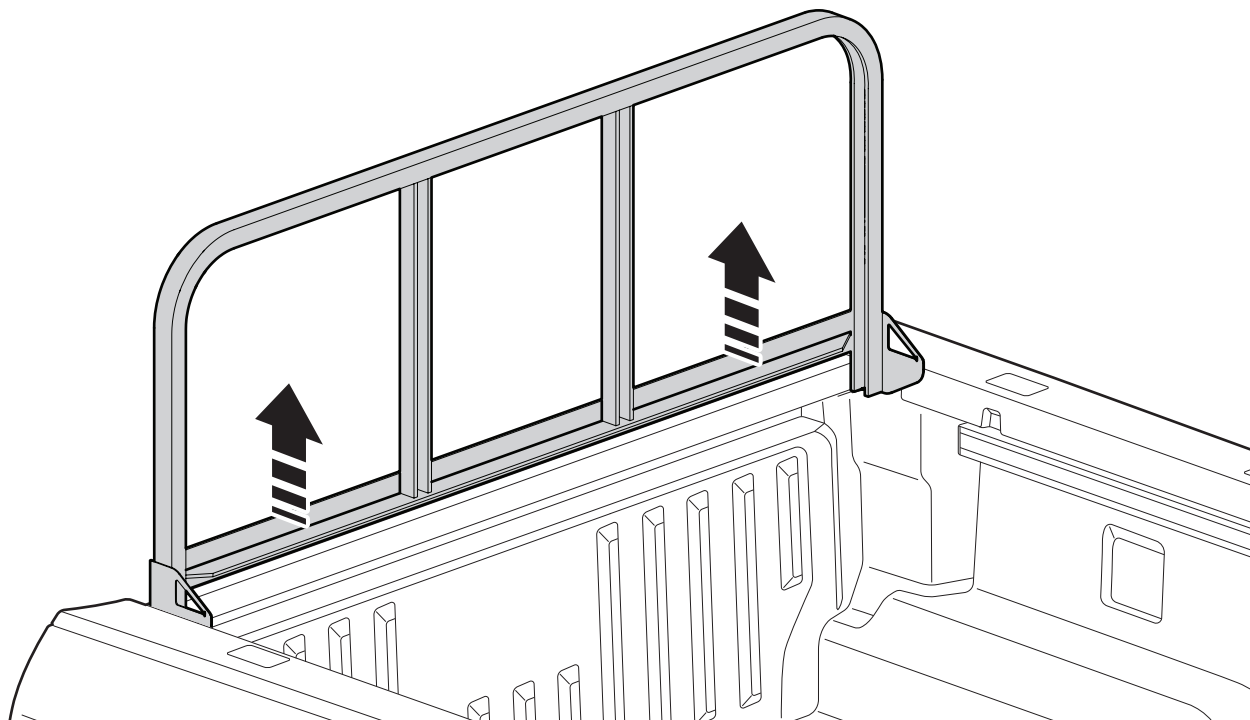


Rollershutter not compatible with load rest bar - part cannot be re-installed once Rollershutter have been installed (store parts)

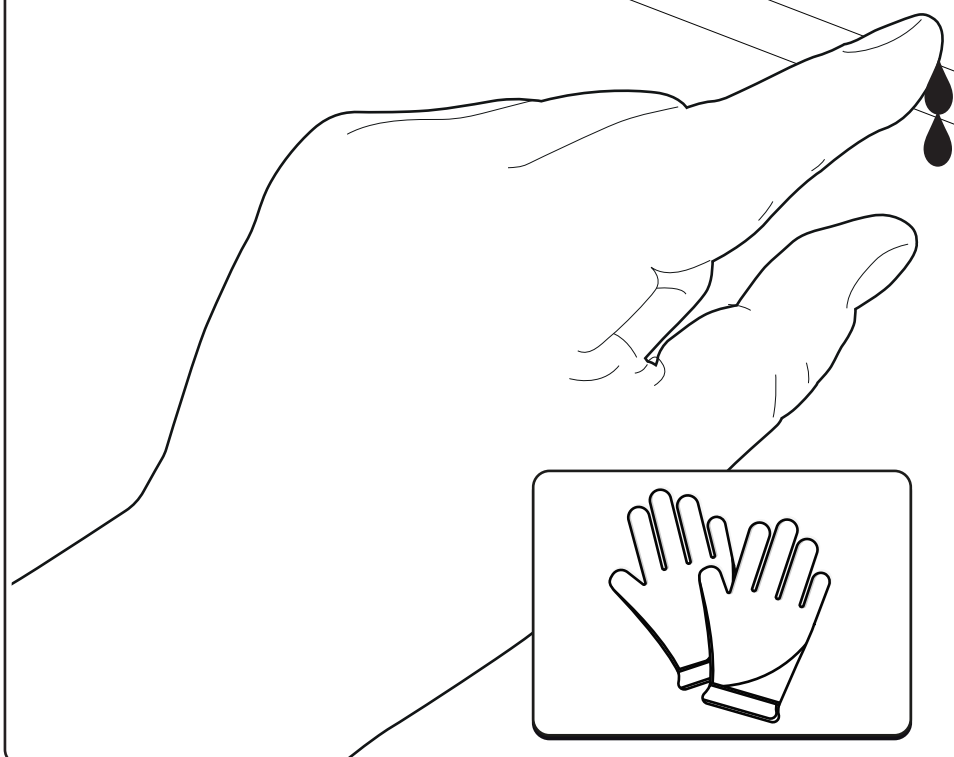

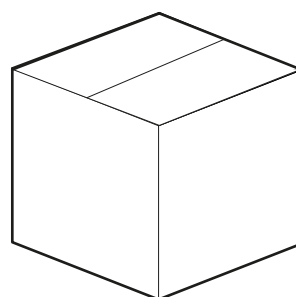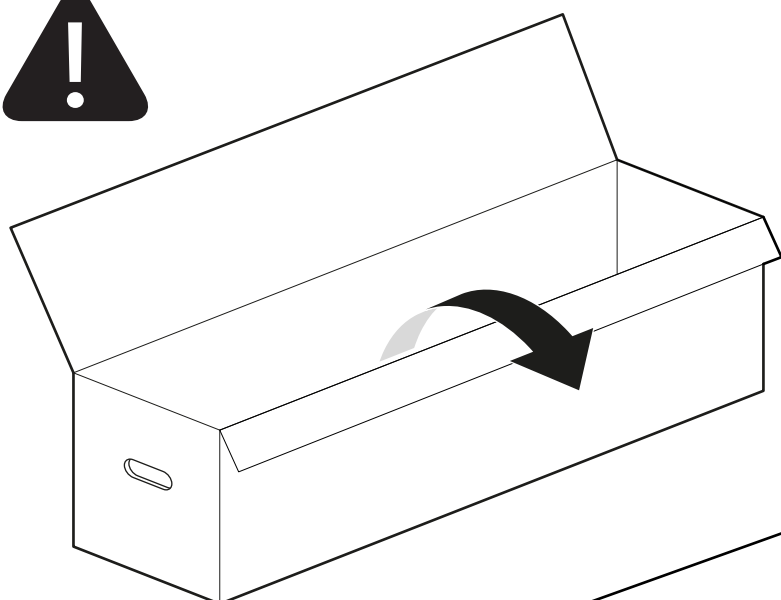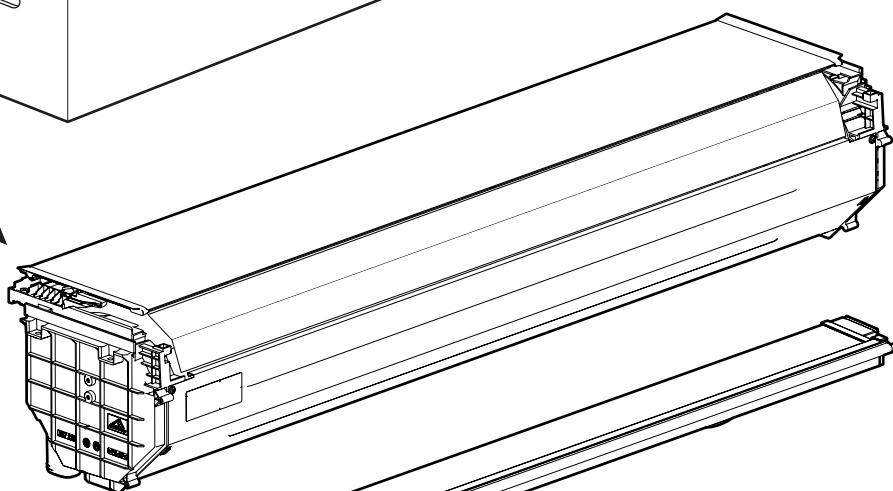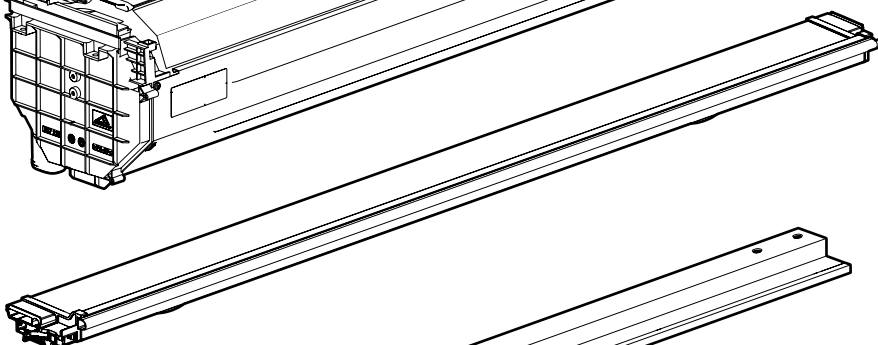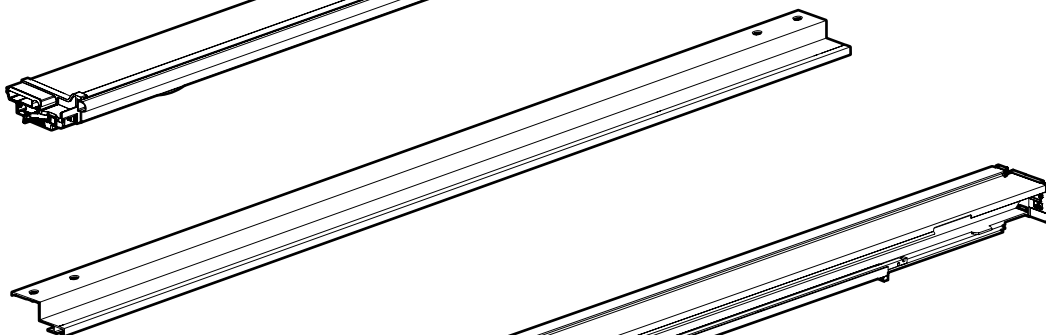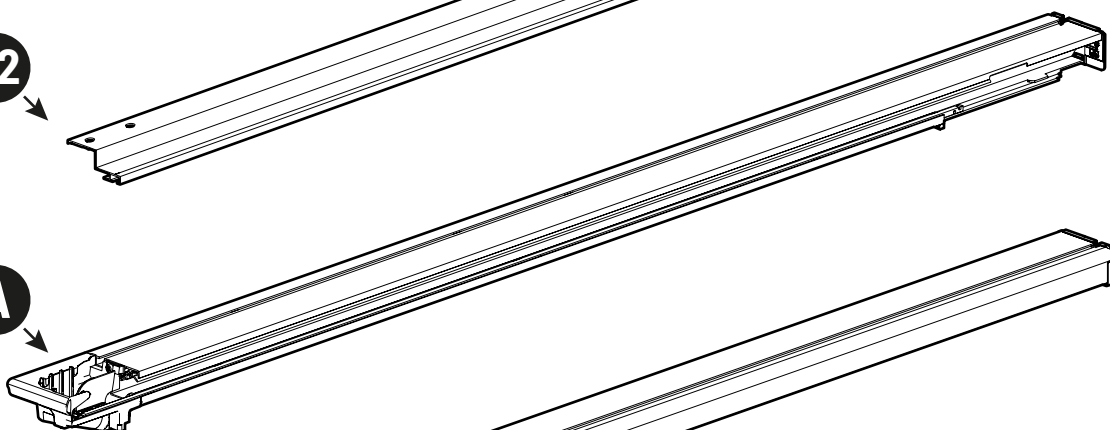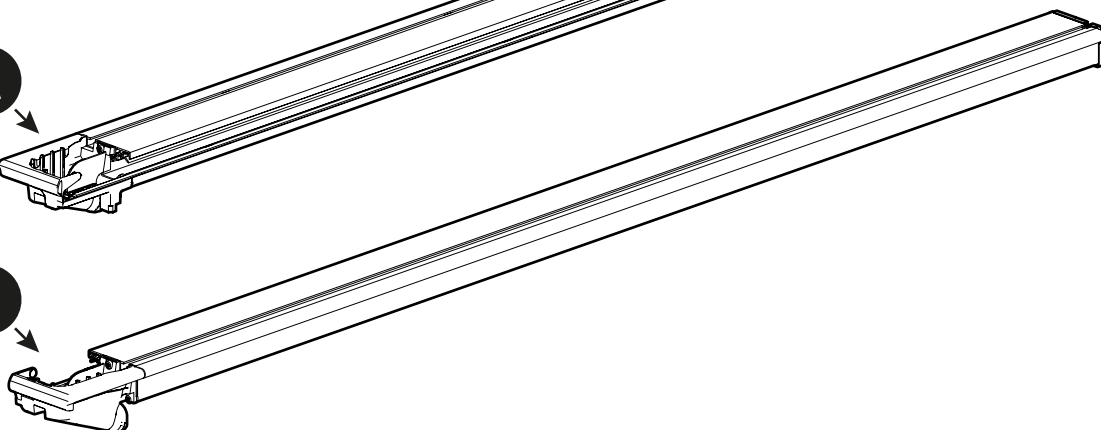
**C****D****C2****A****B**




Water & sponge





2

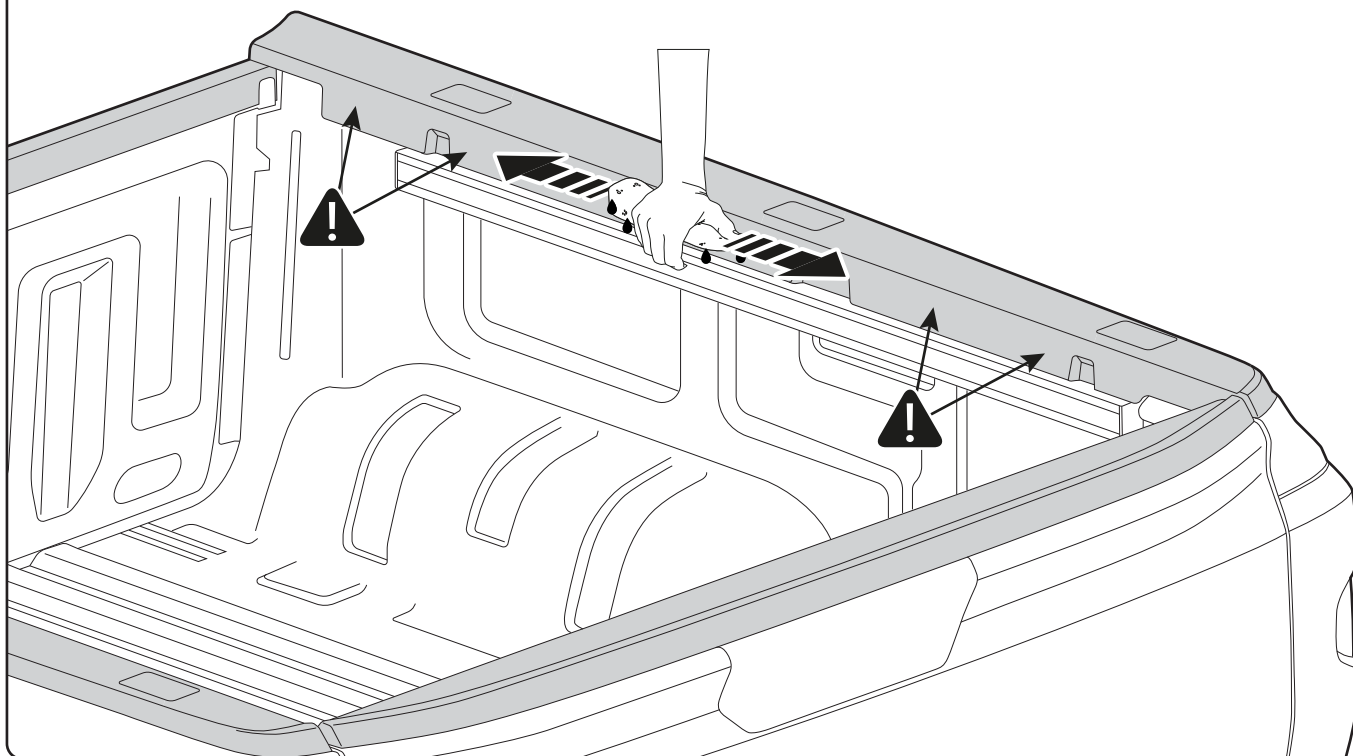

3

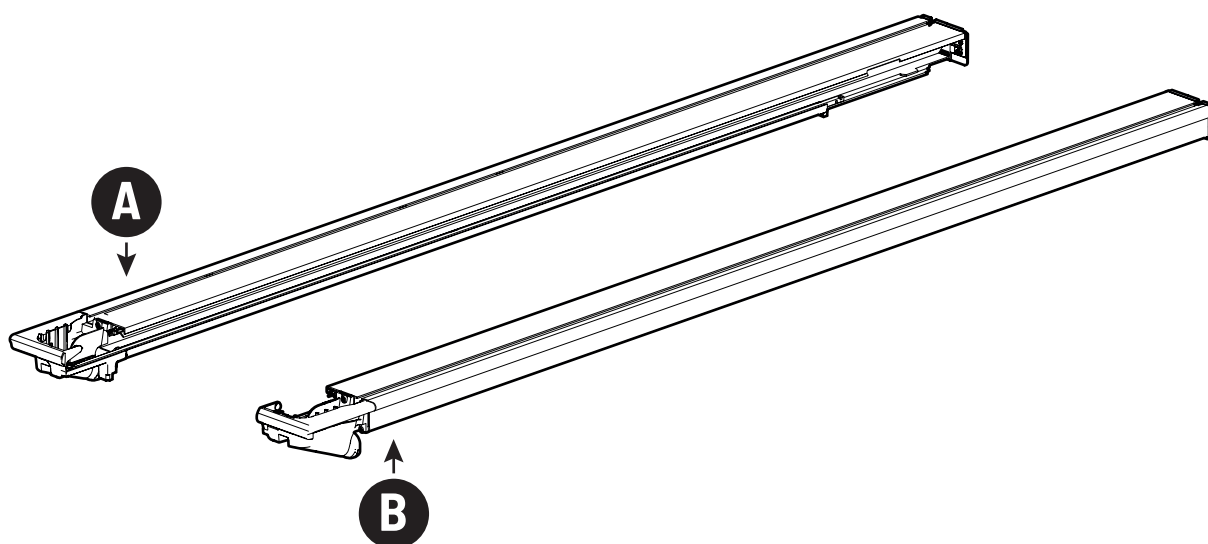


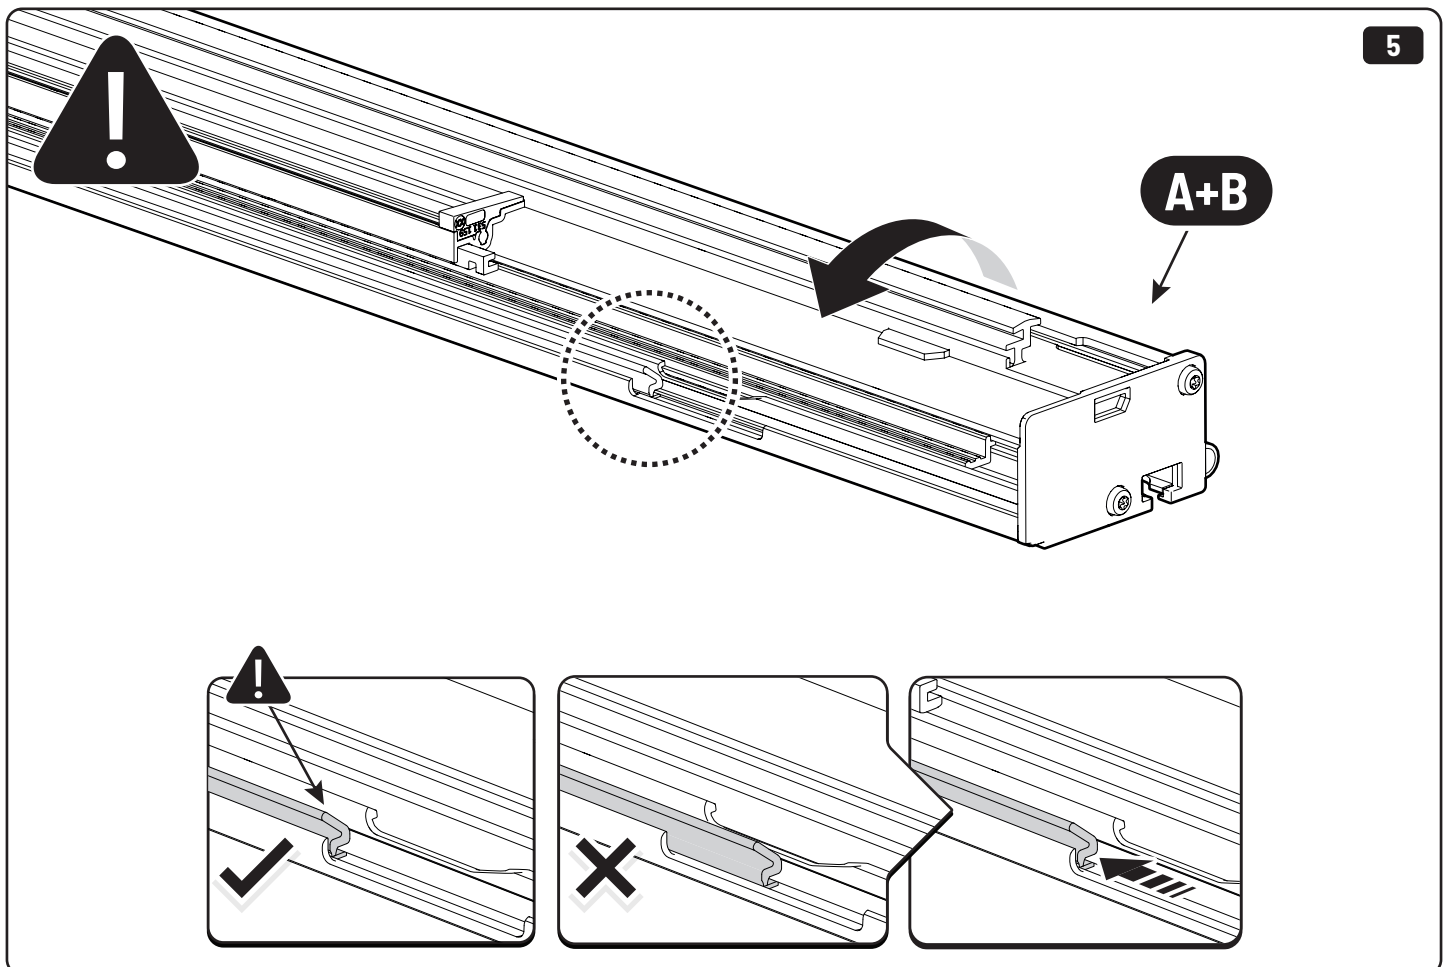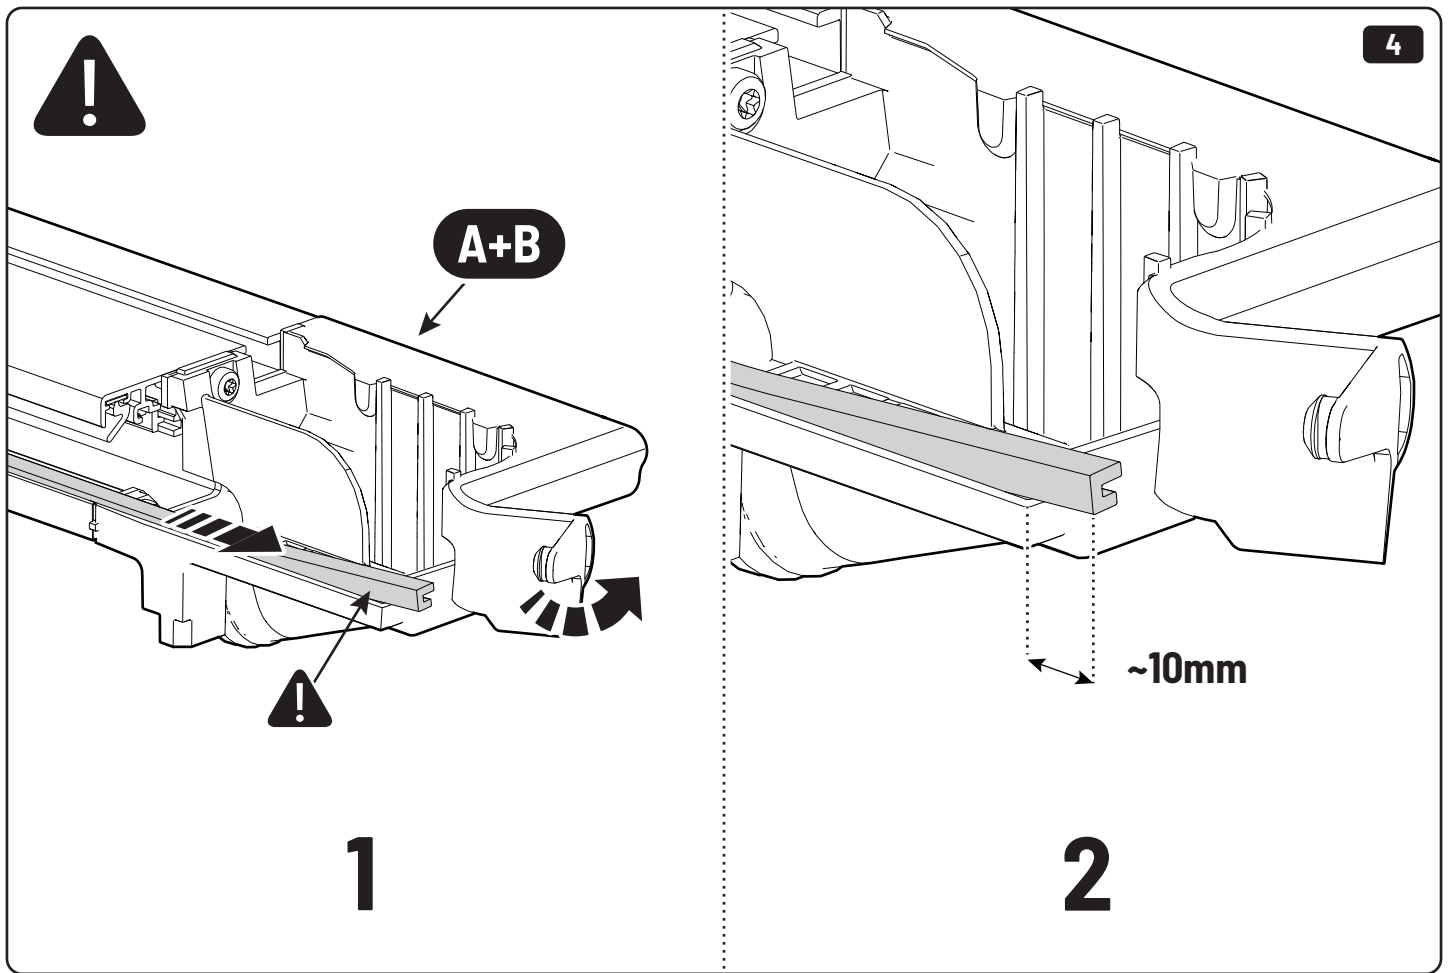







ONLY FOR DOUBLE CAB



6


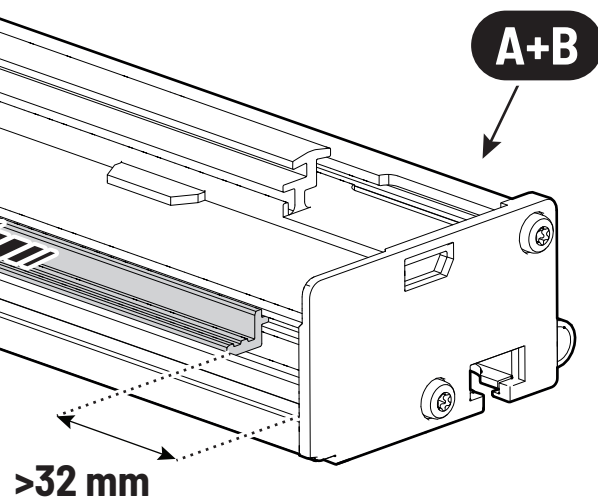




7


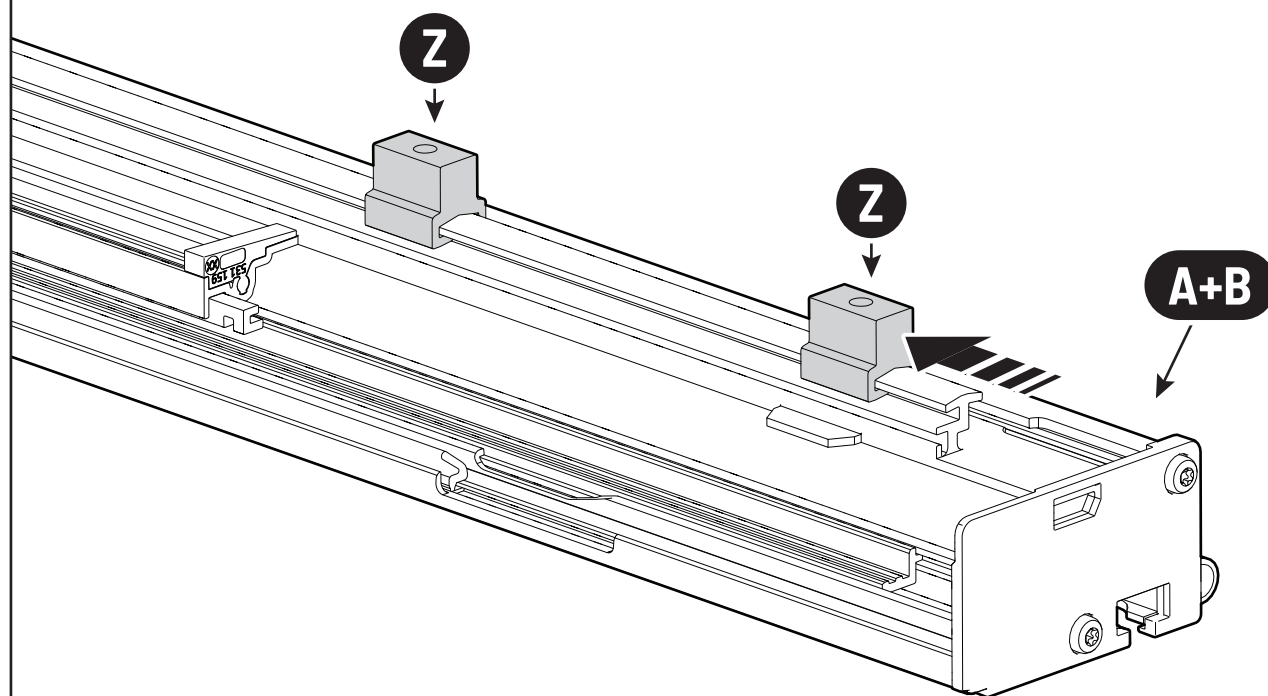


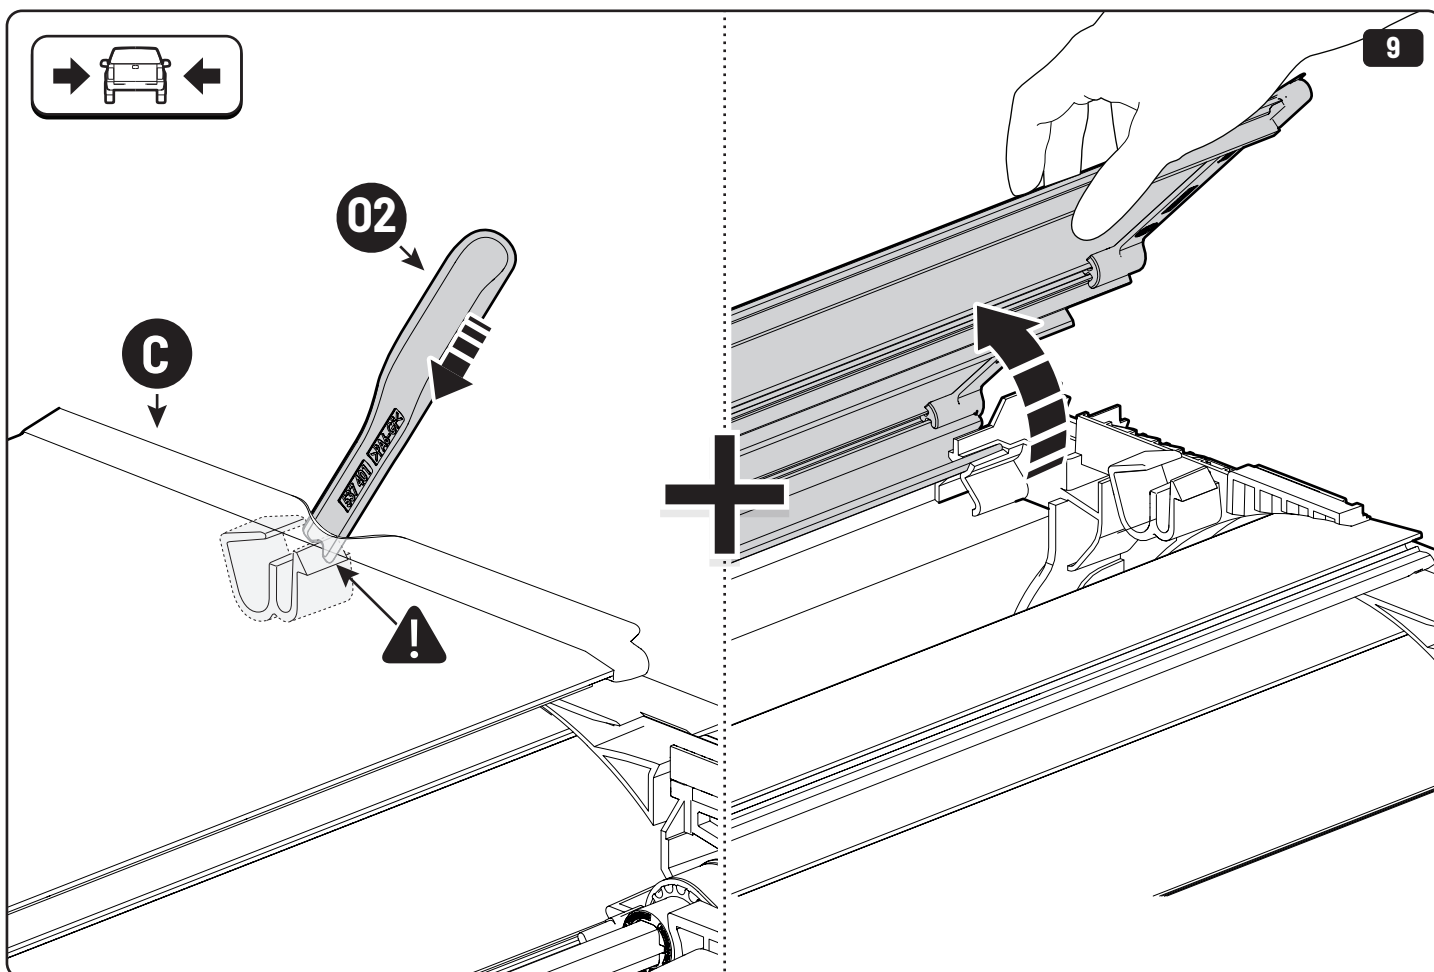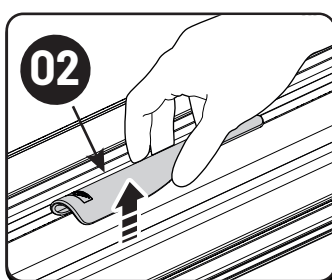
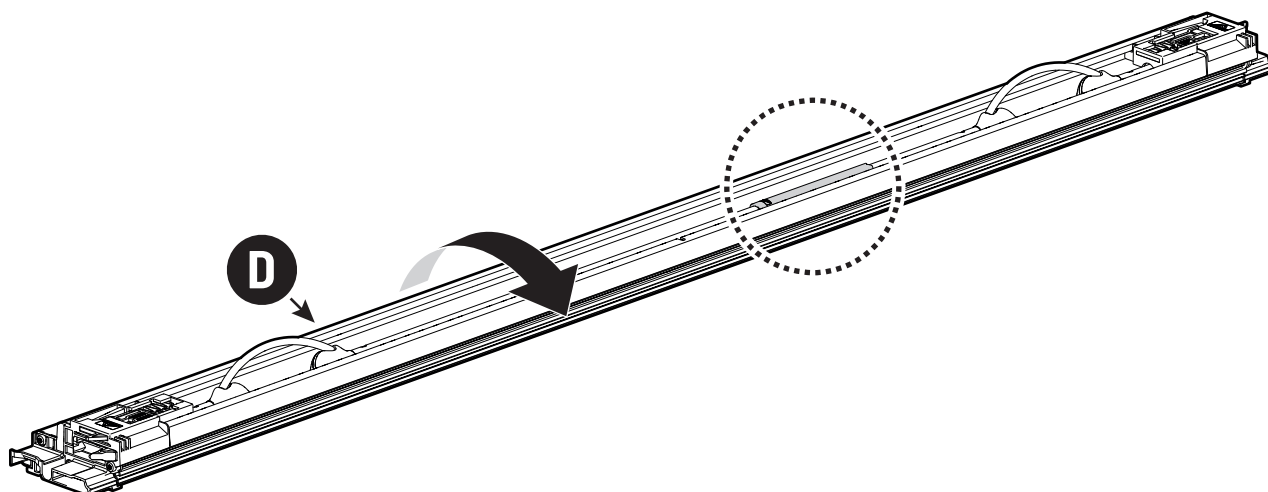


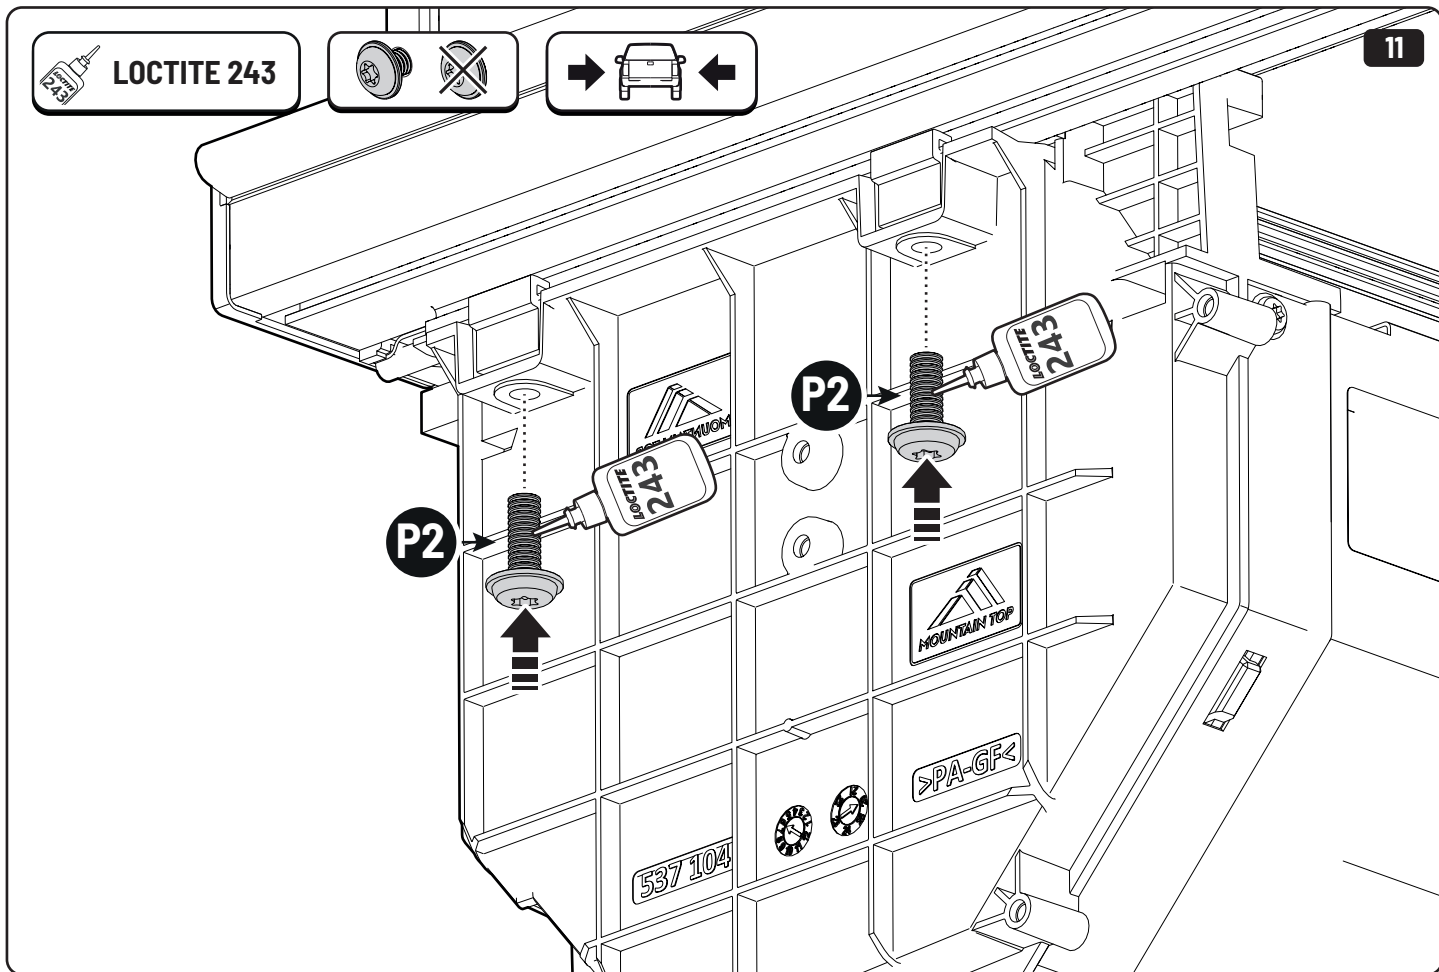
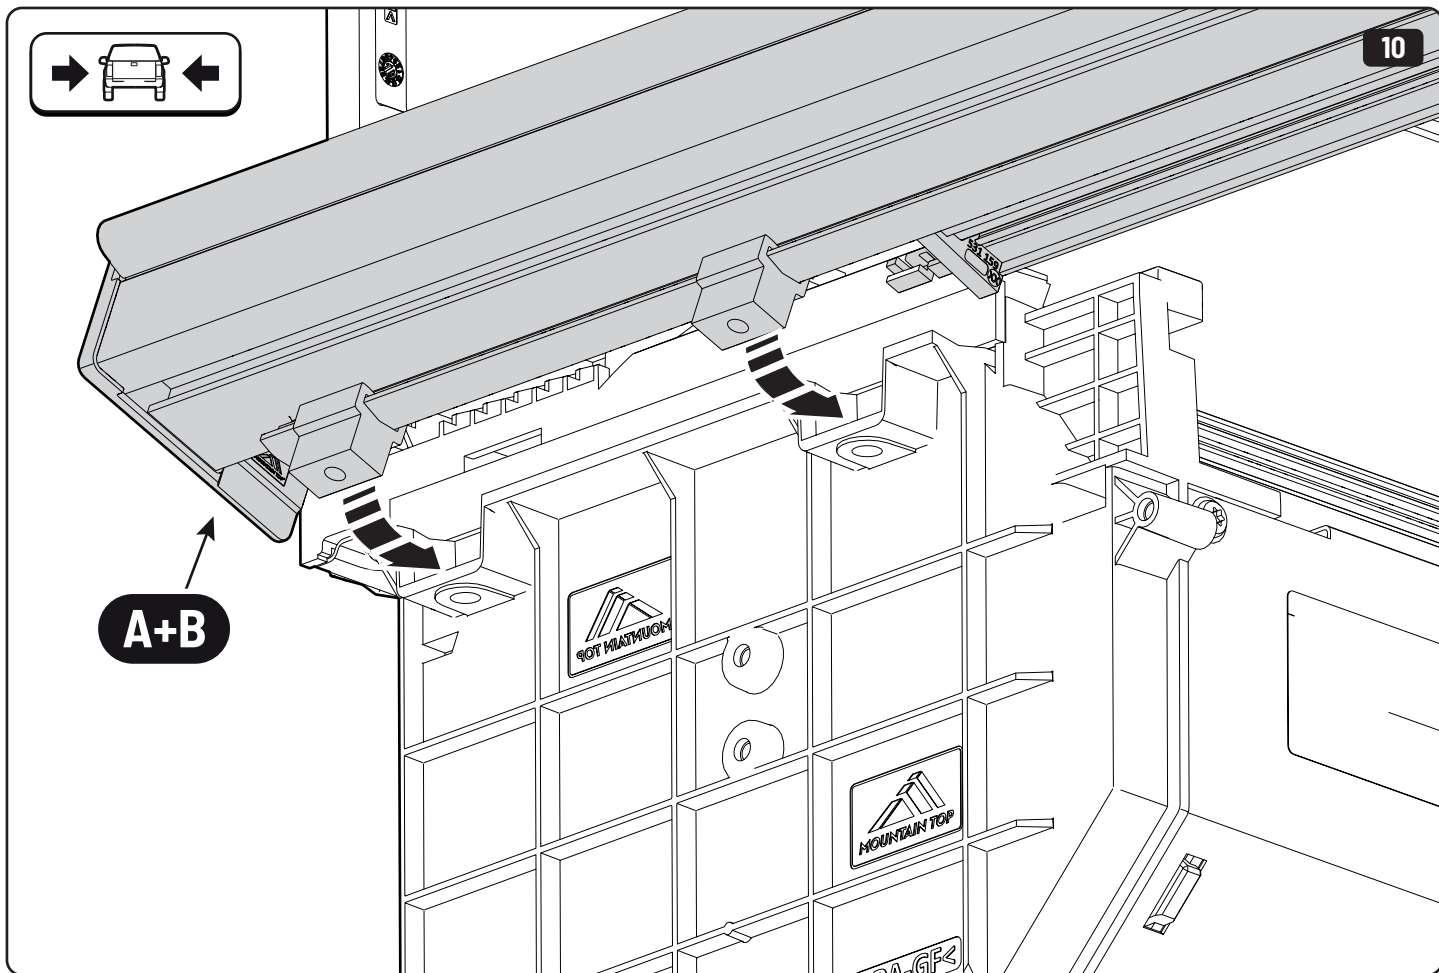


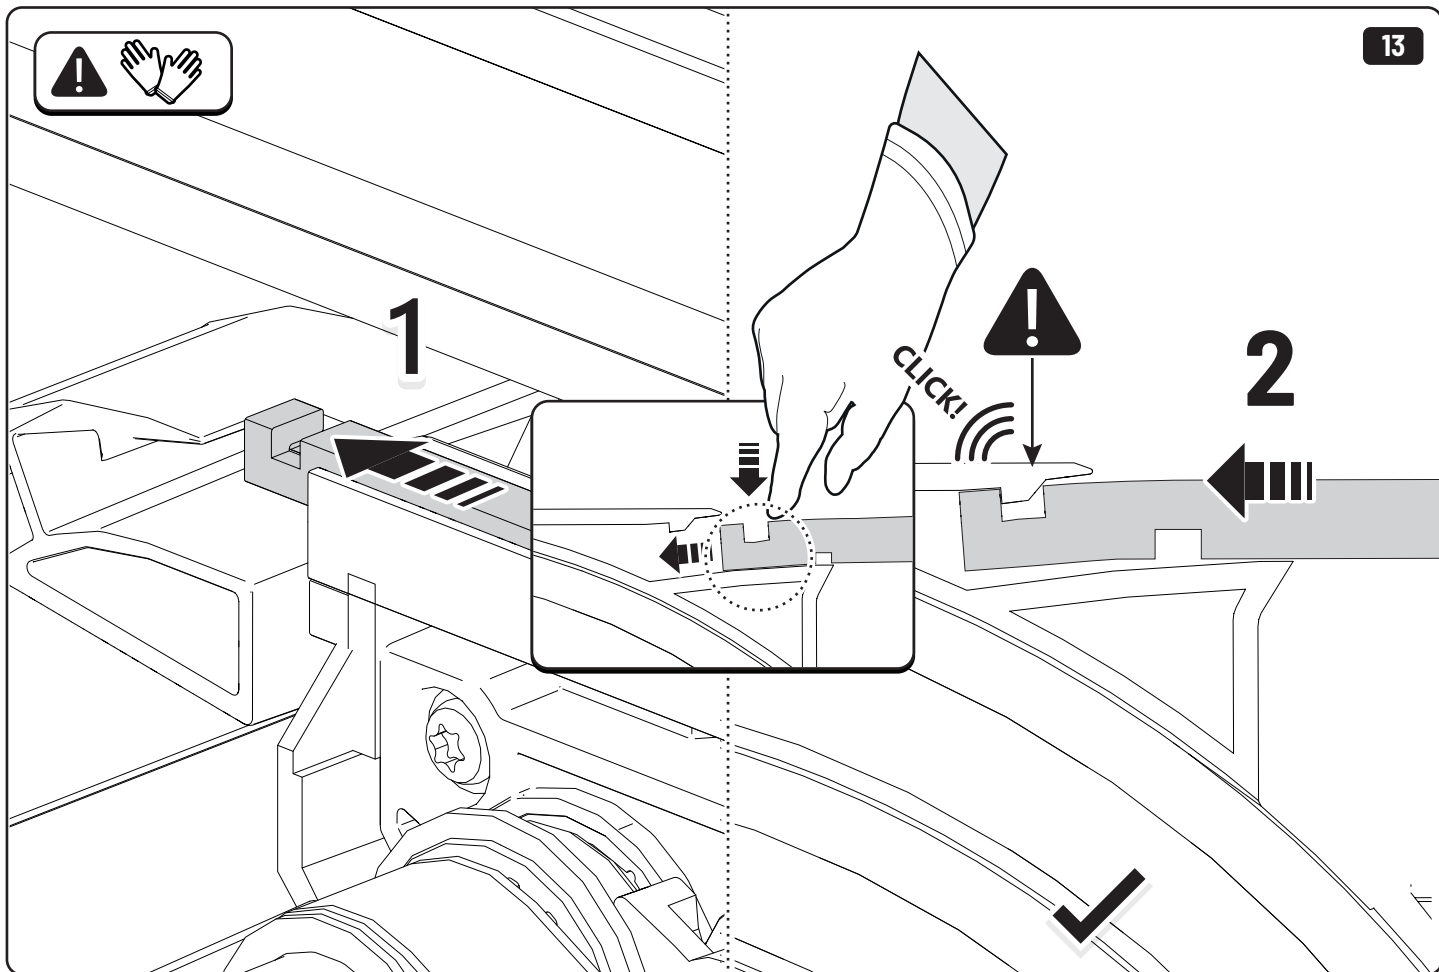
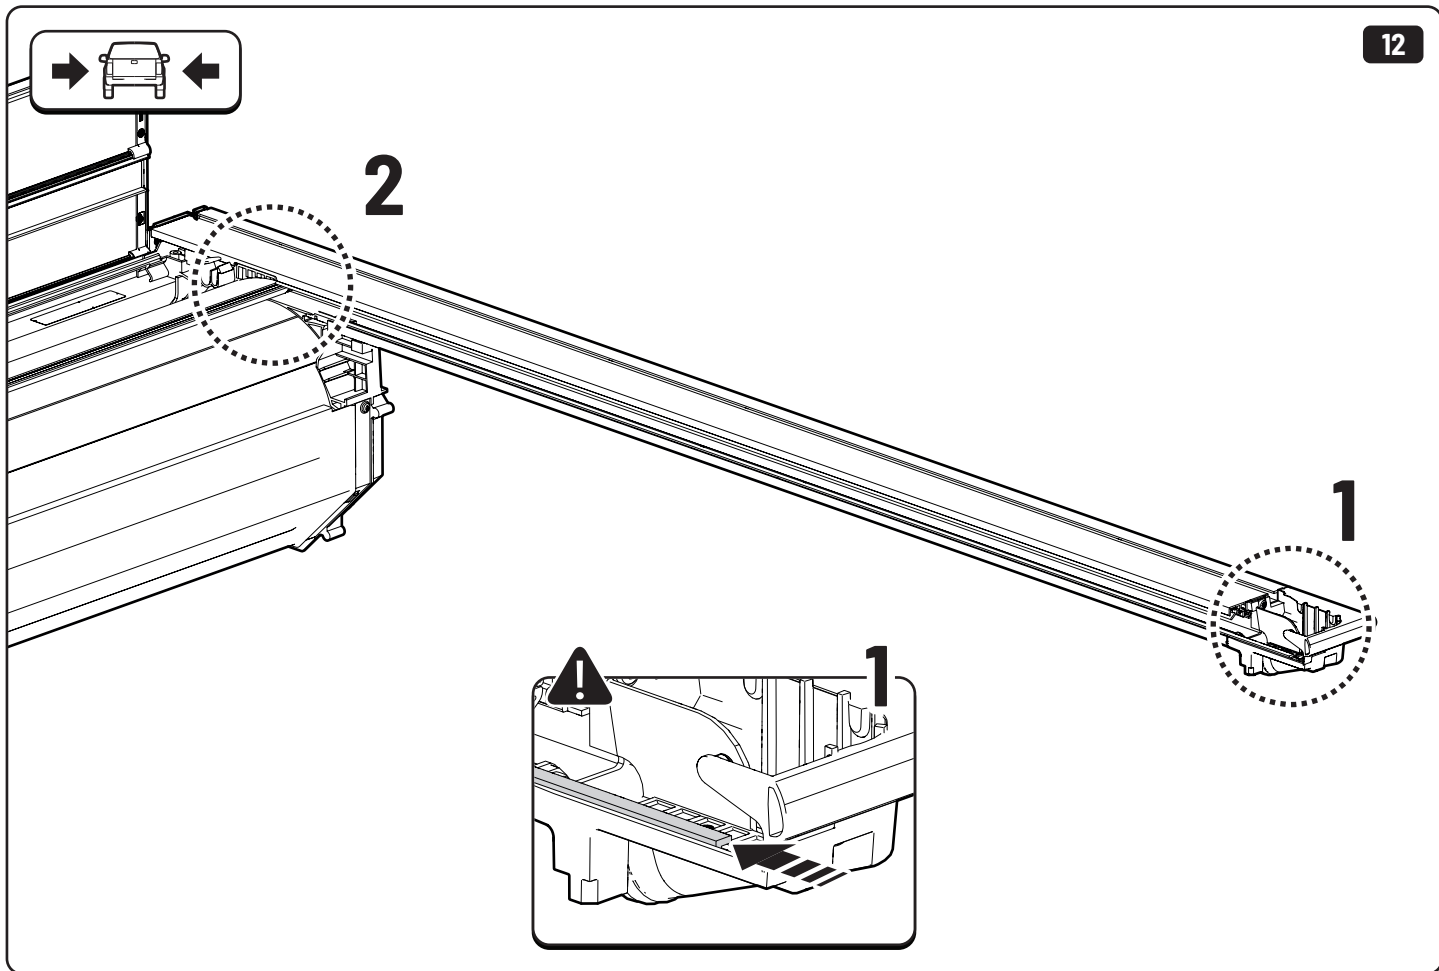


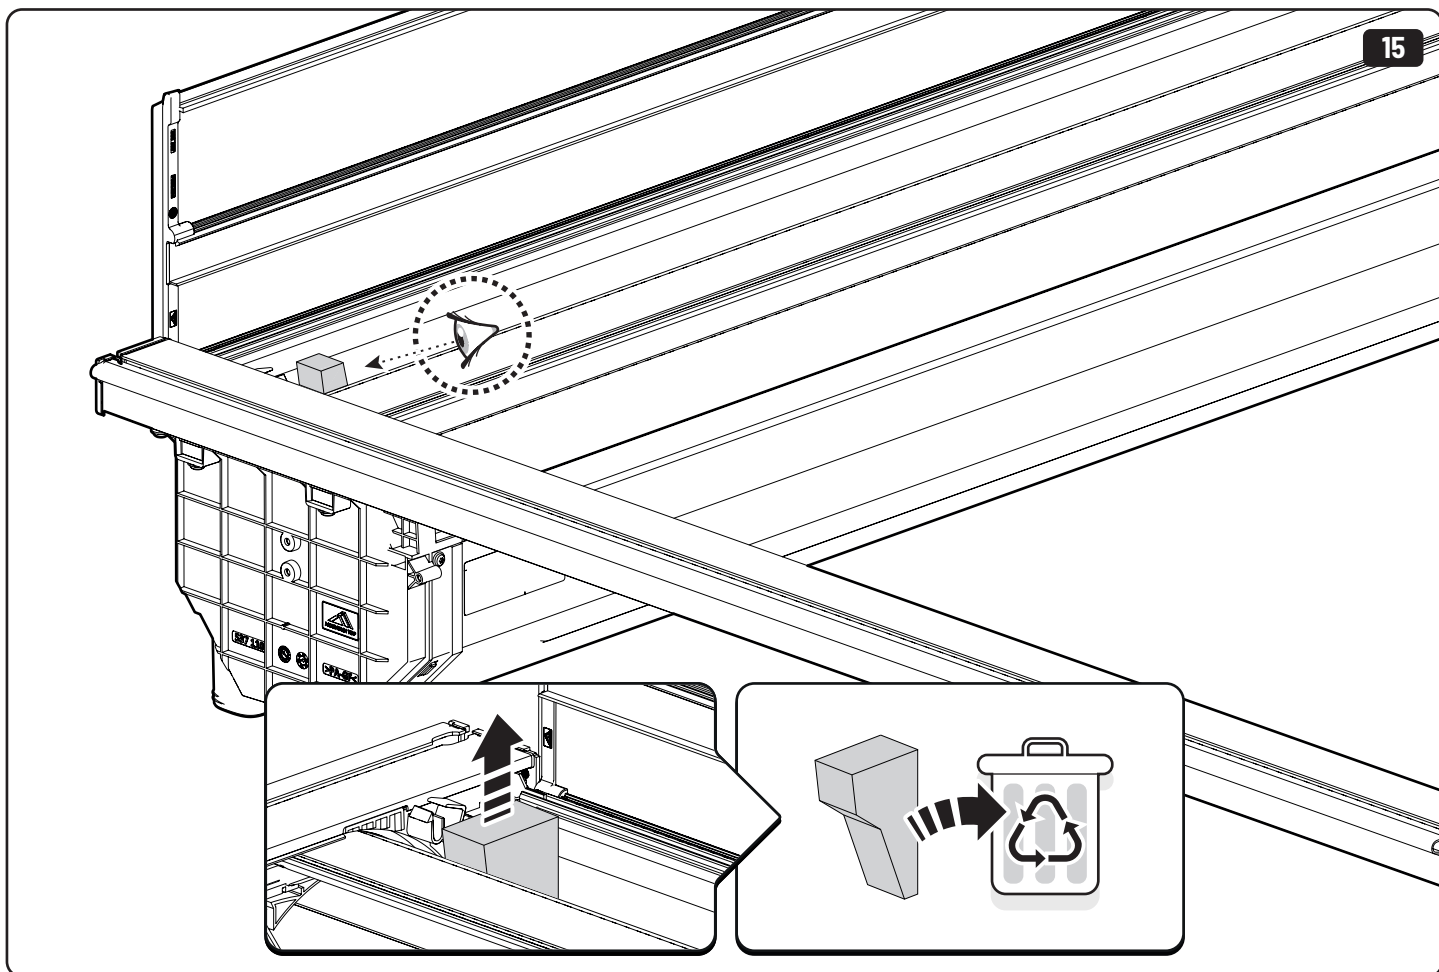
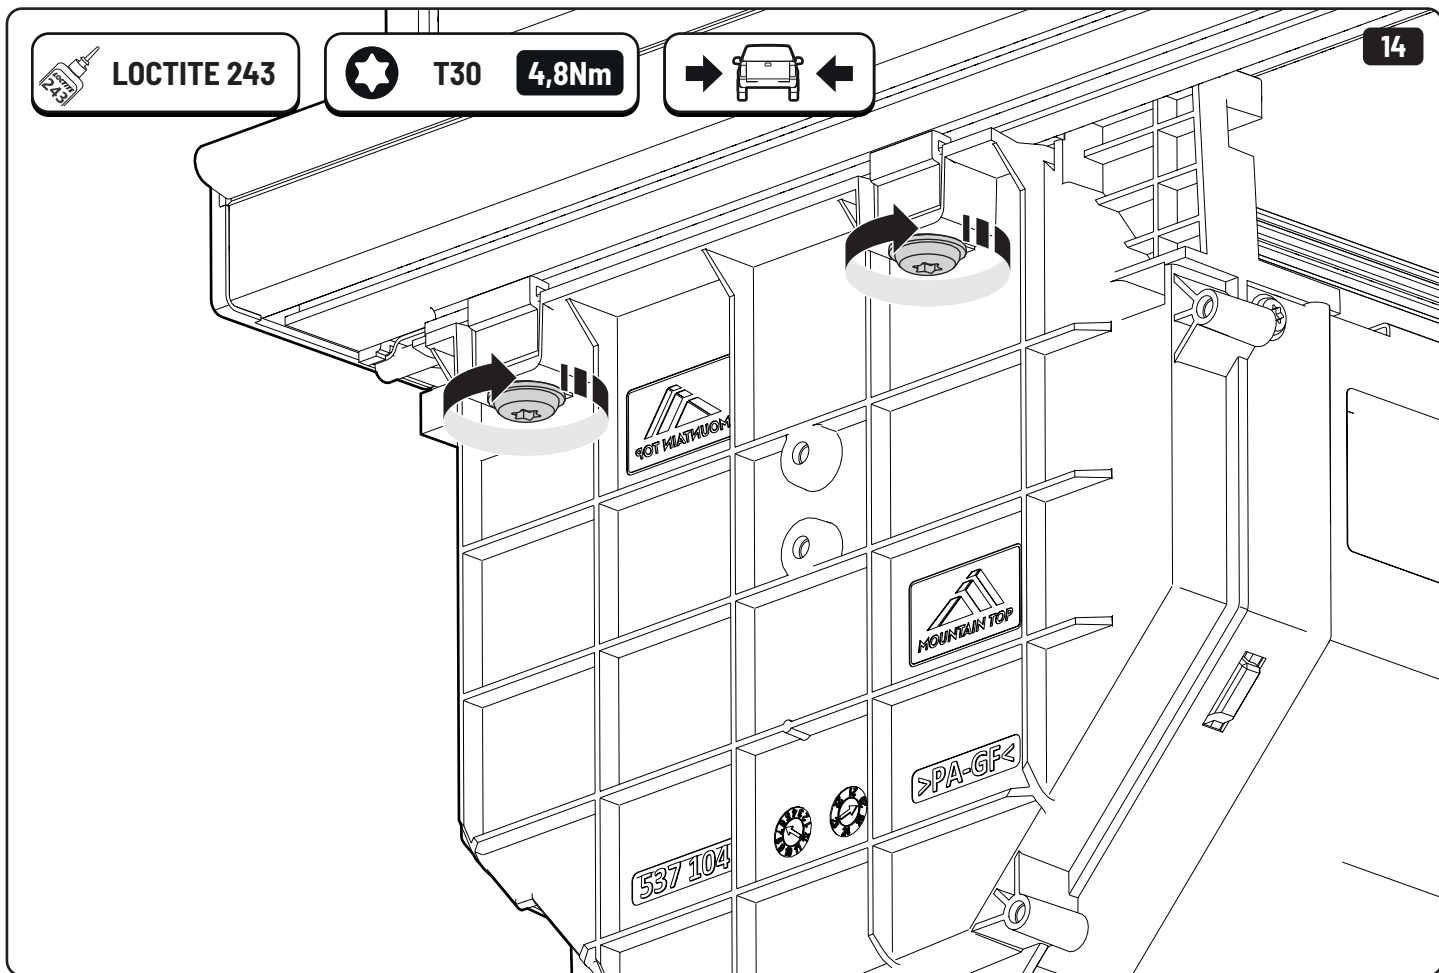


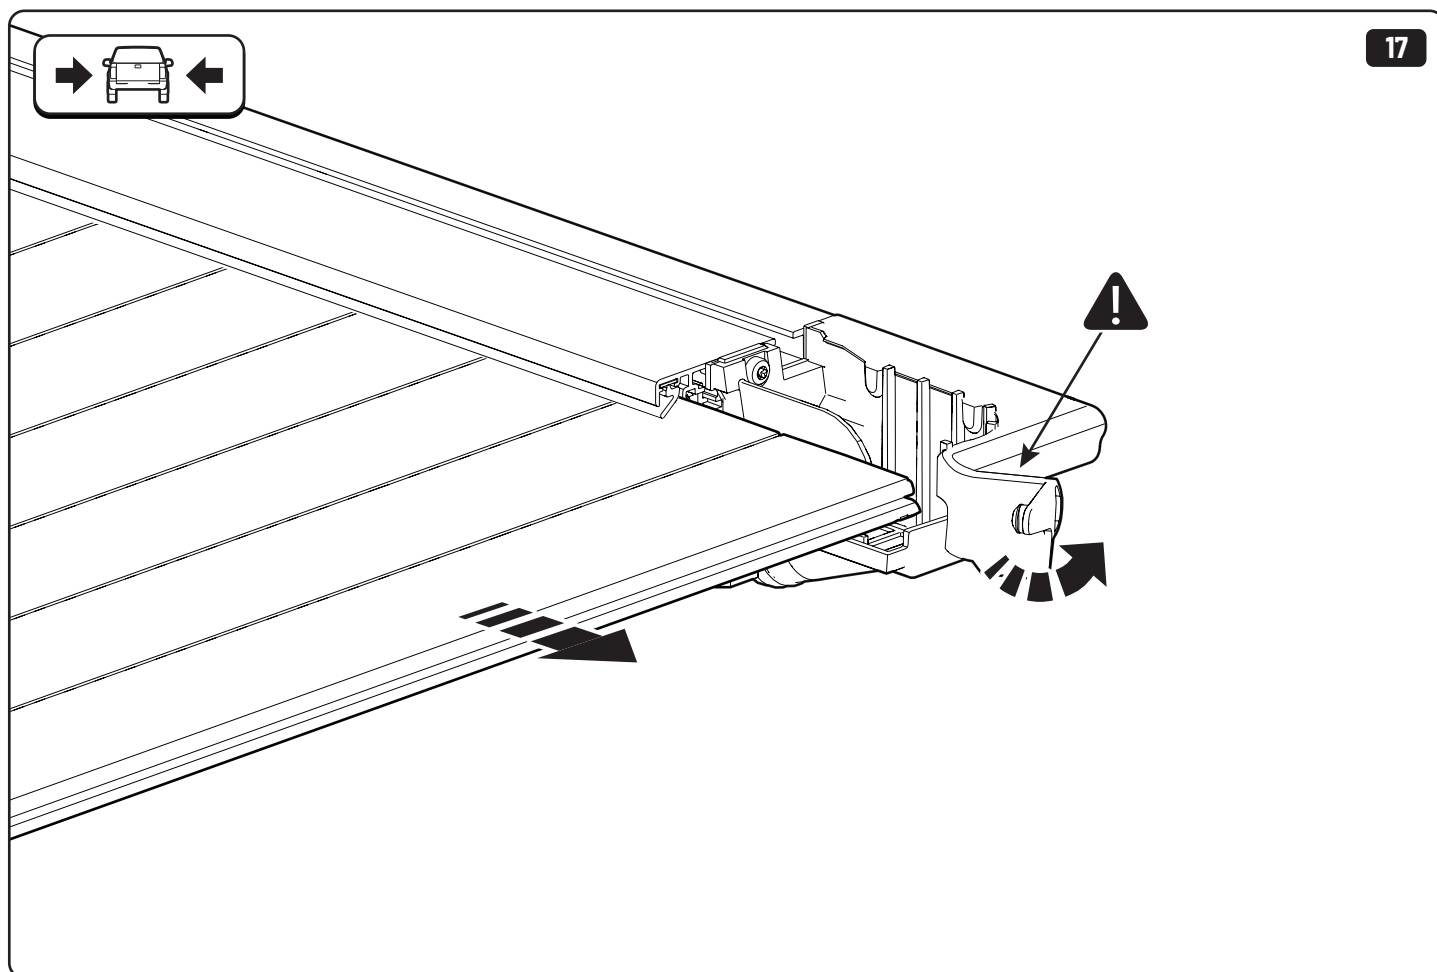
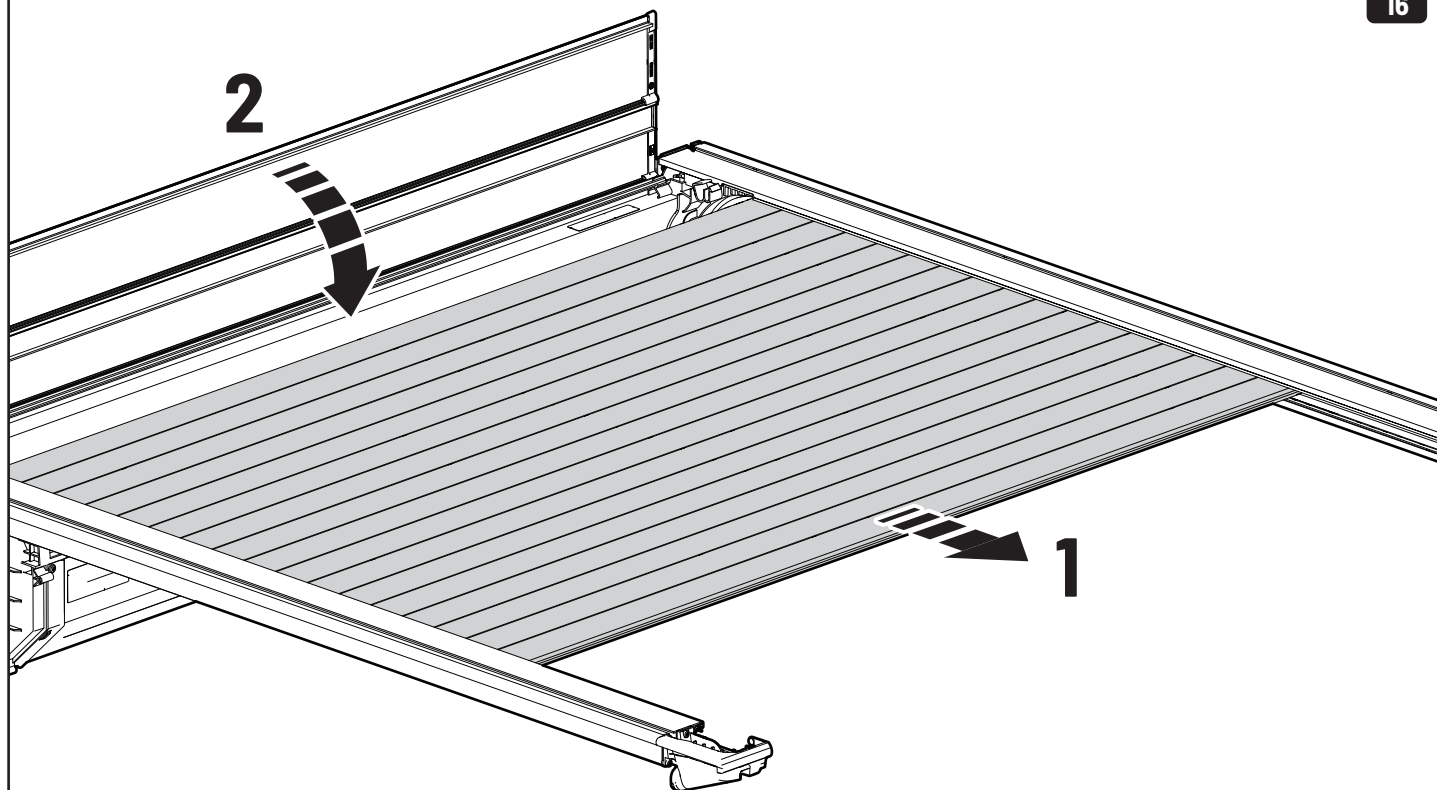


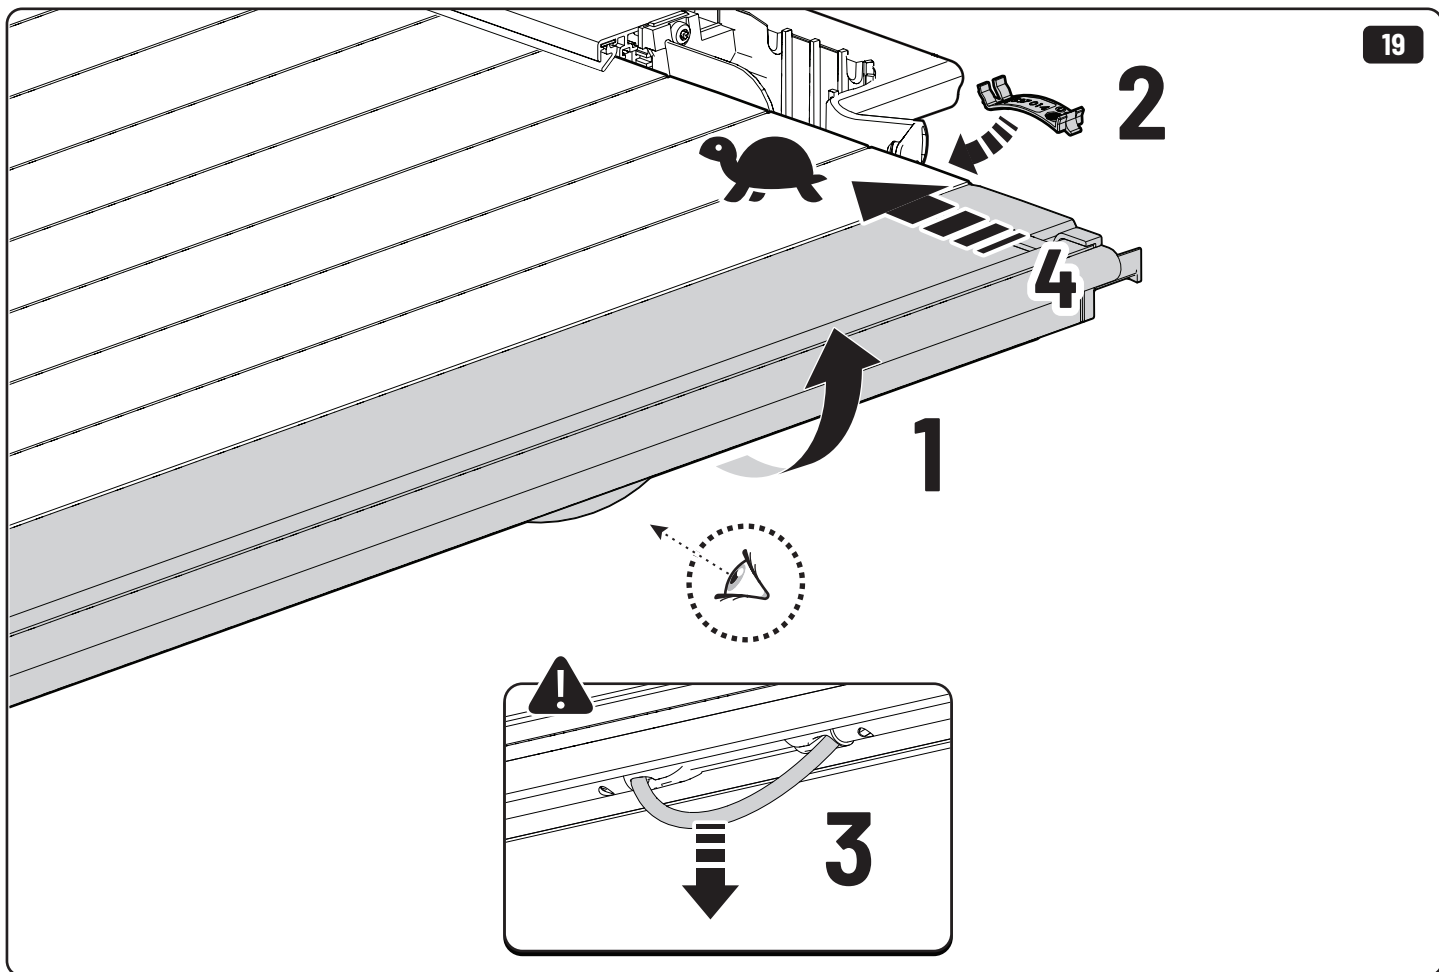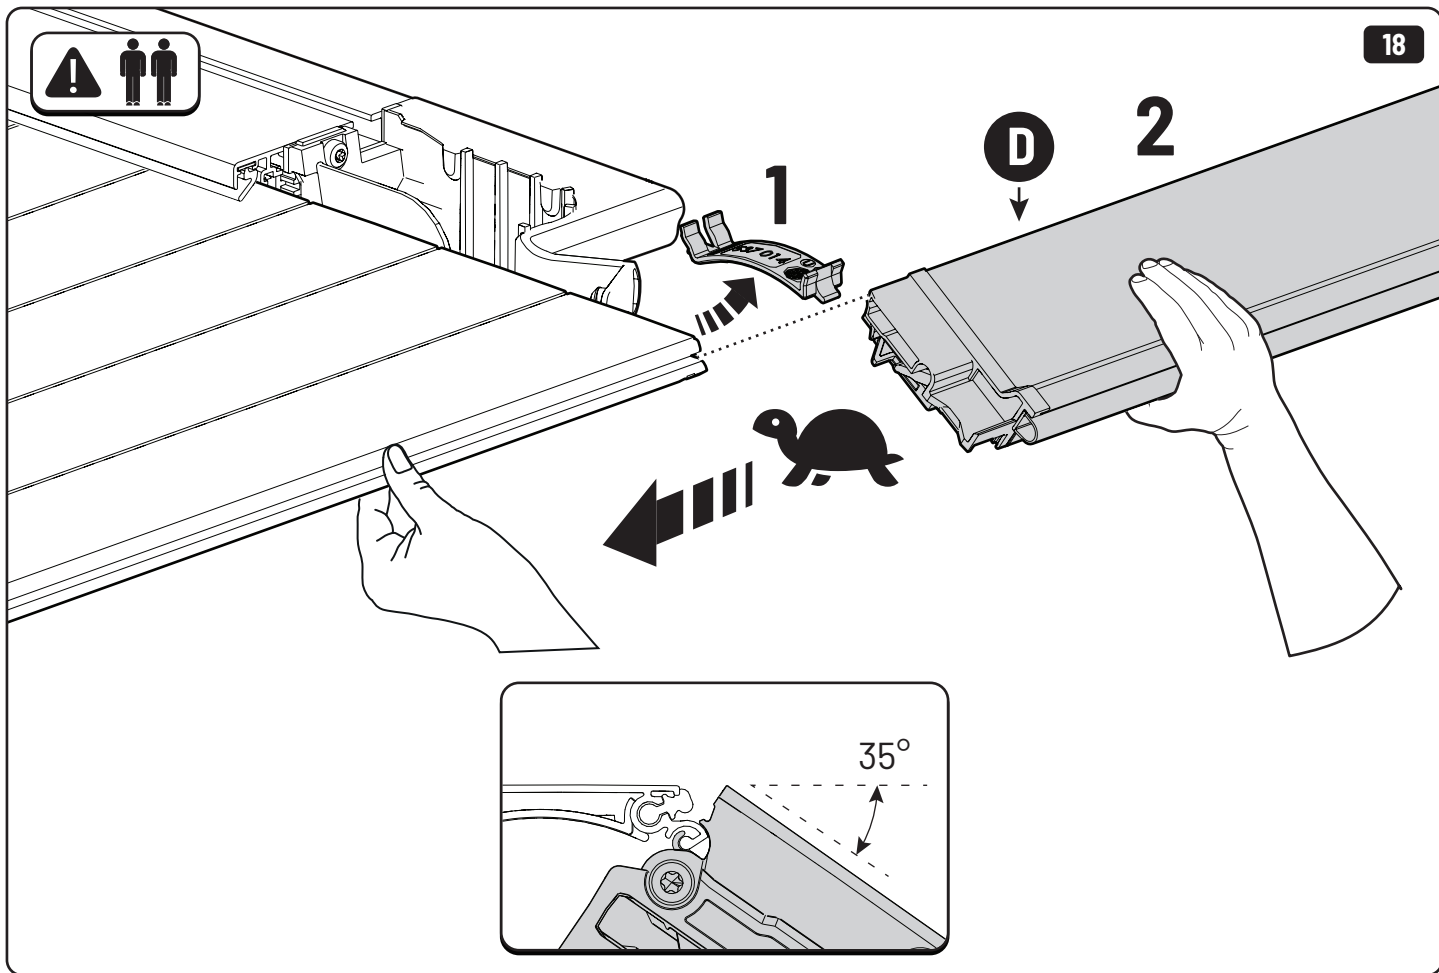

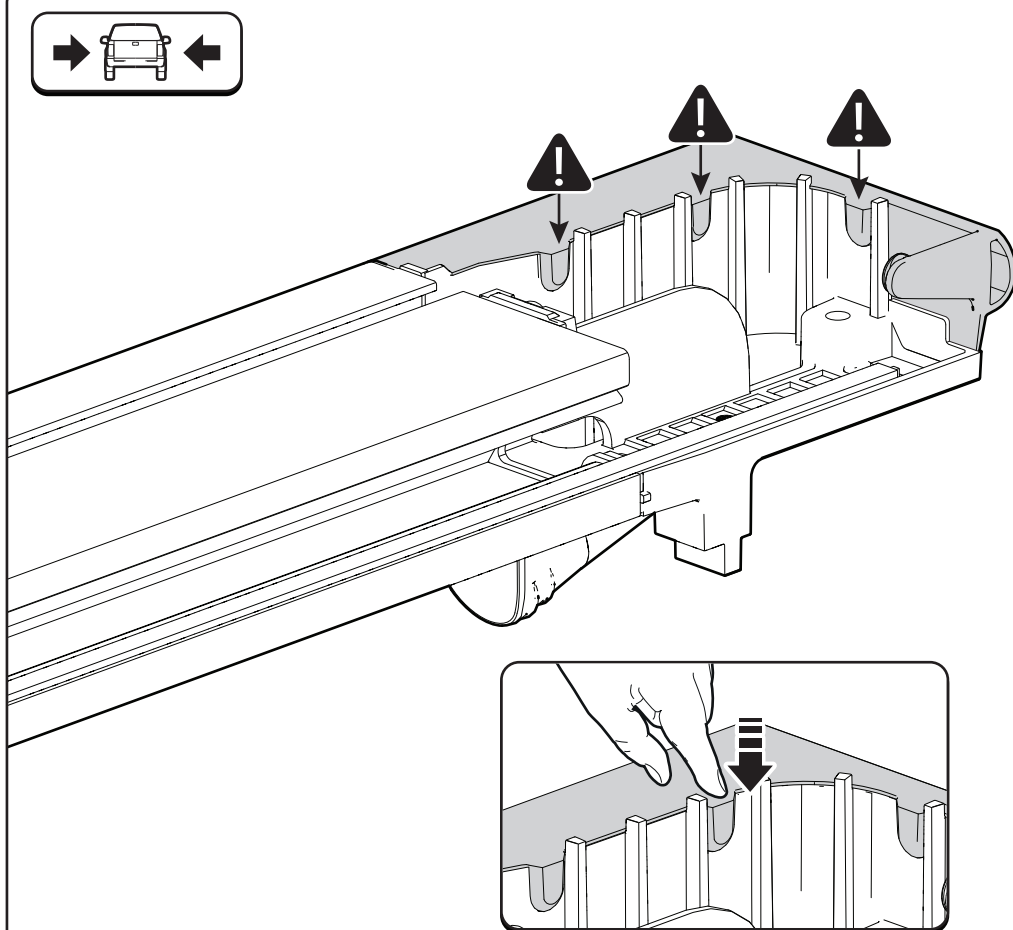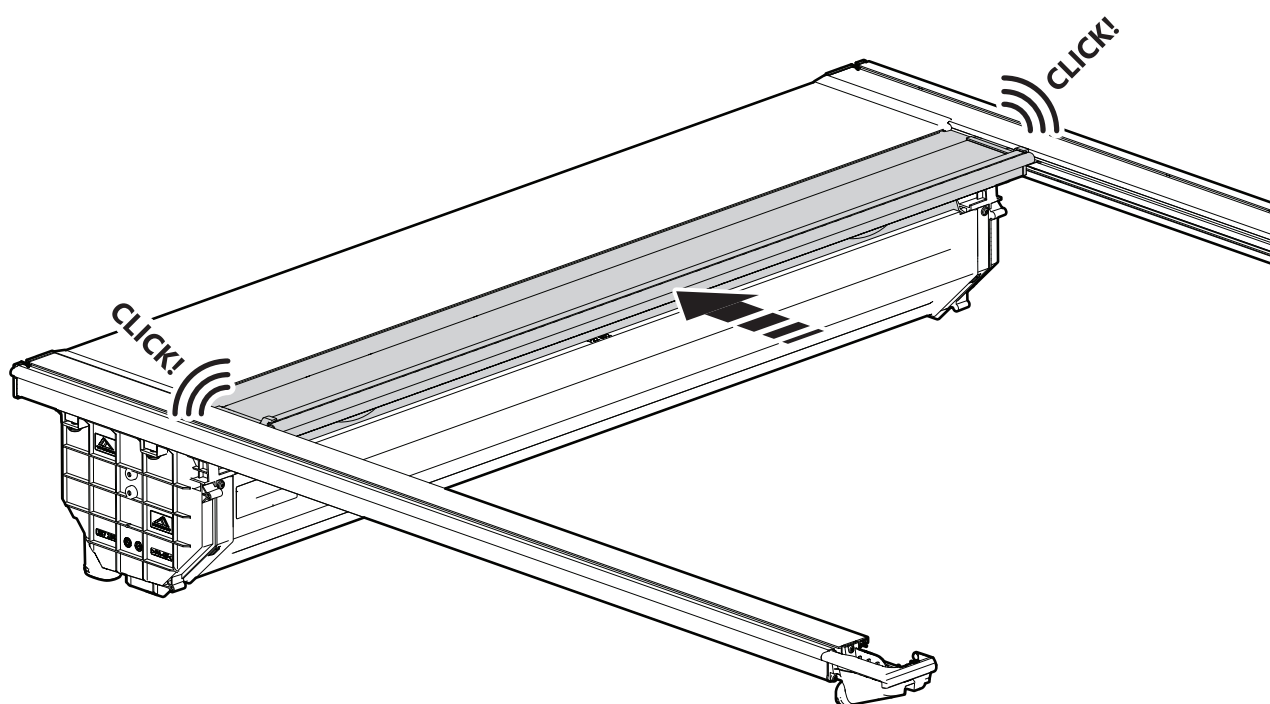

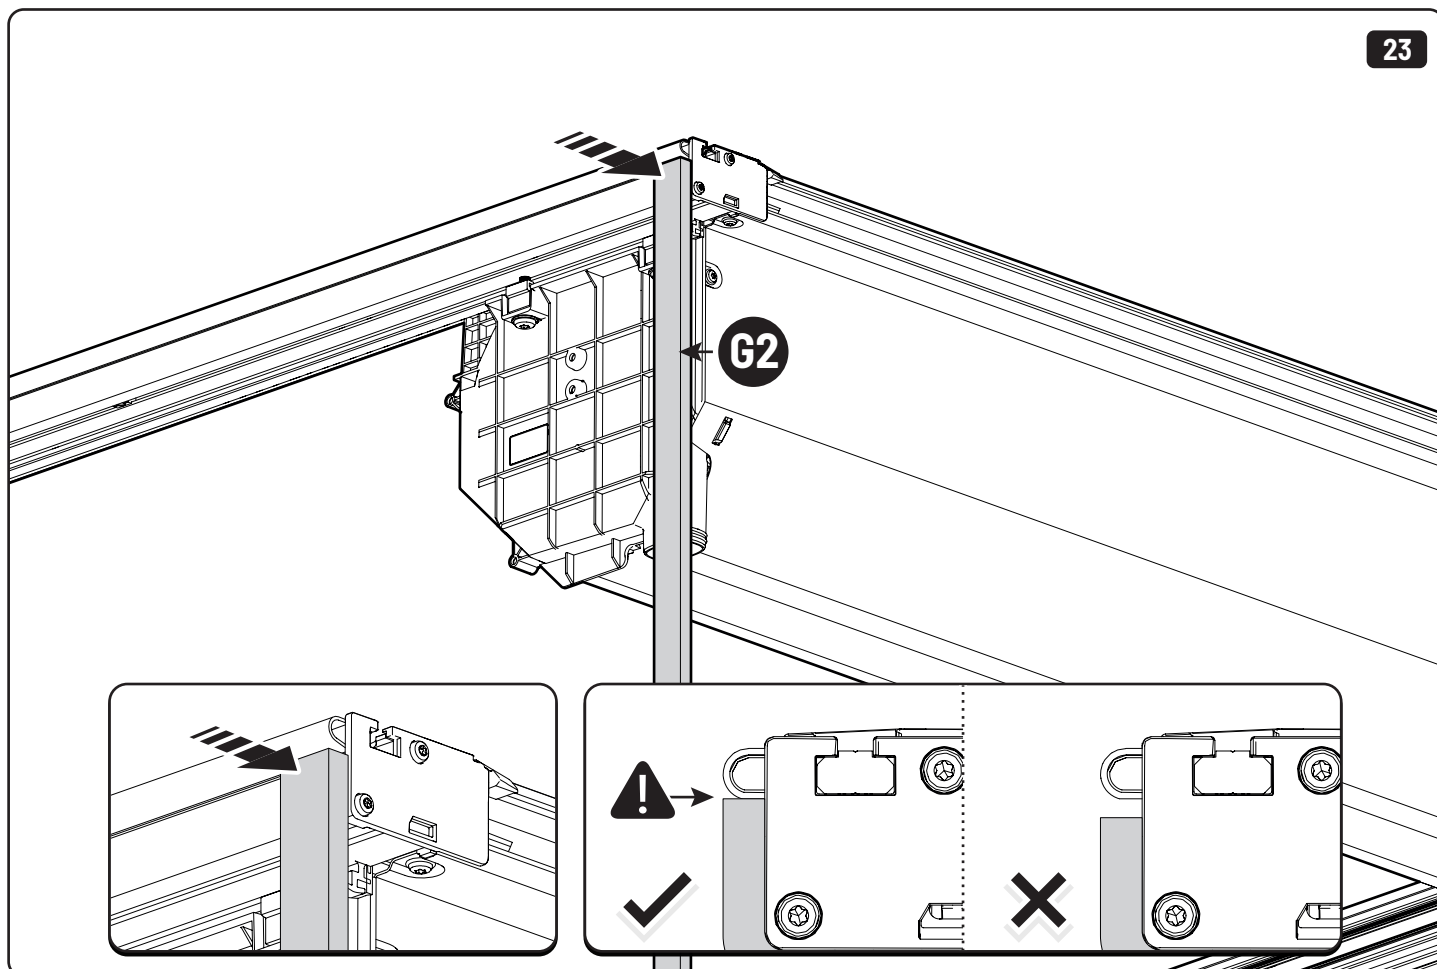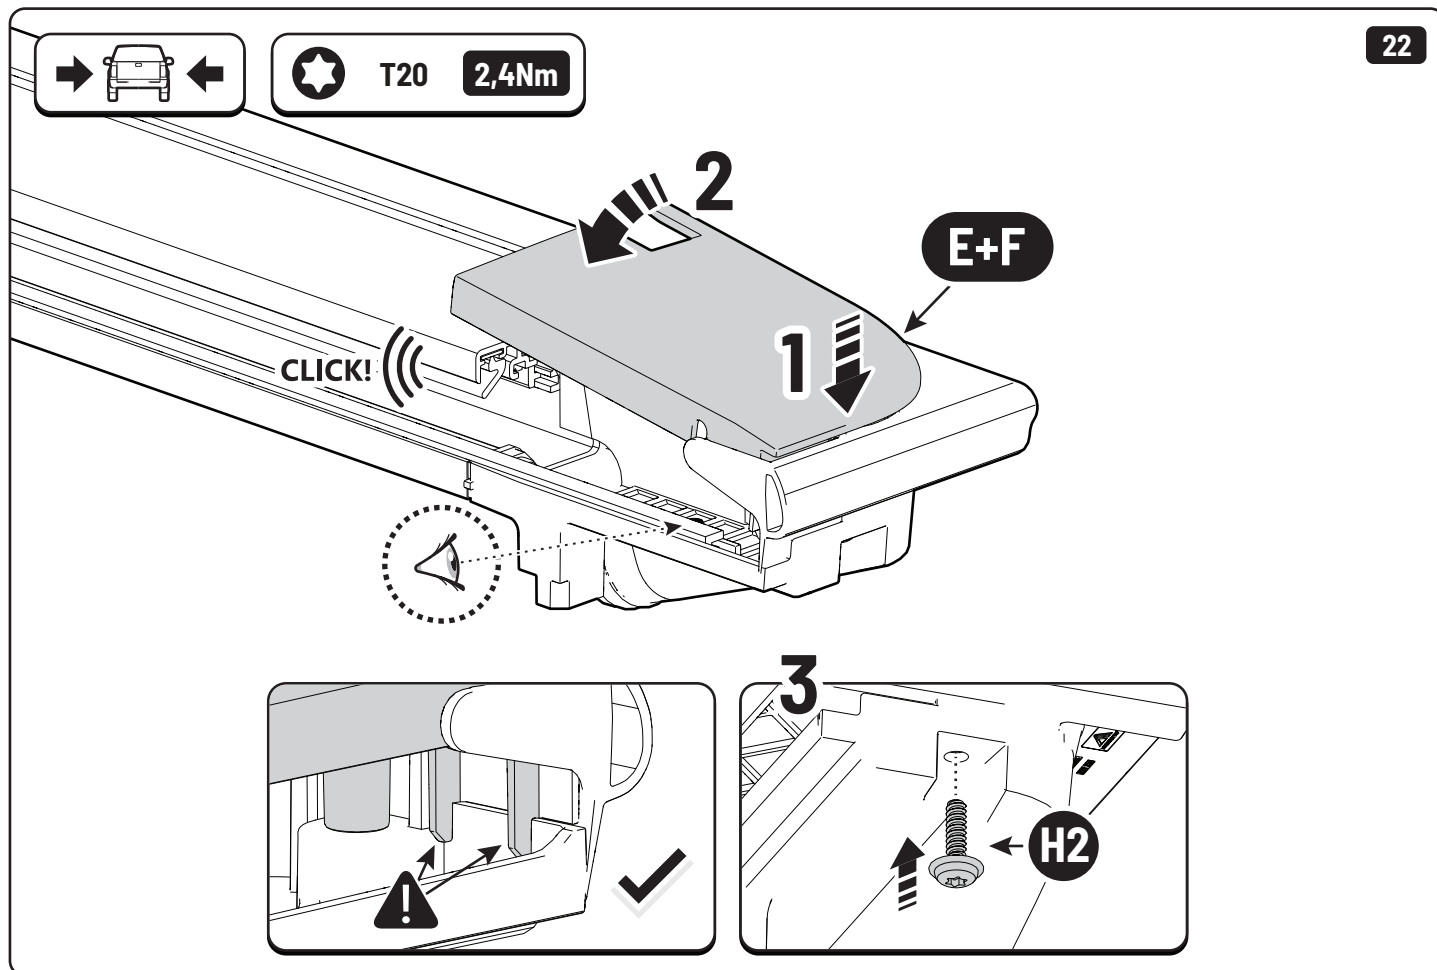

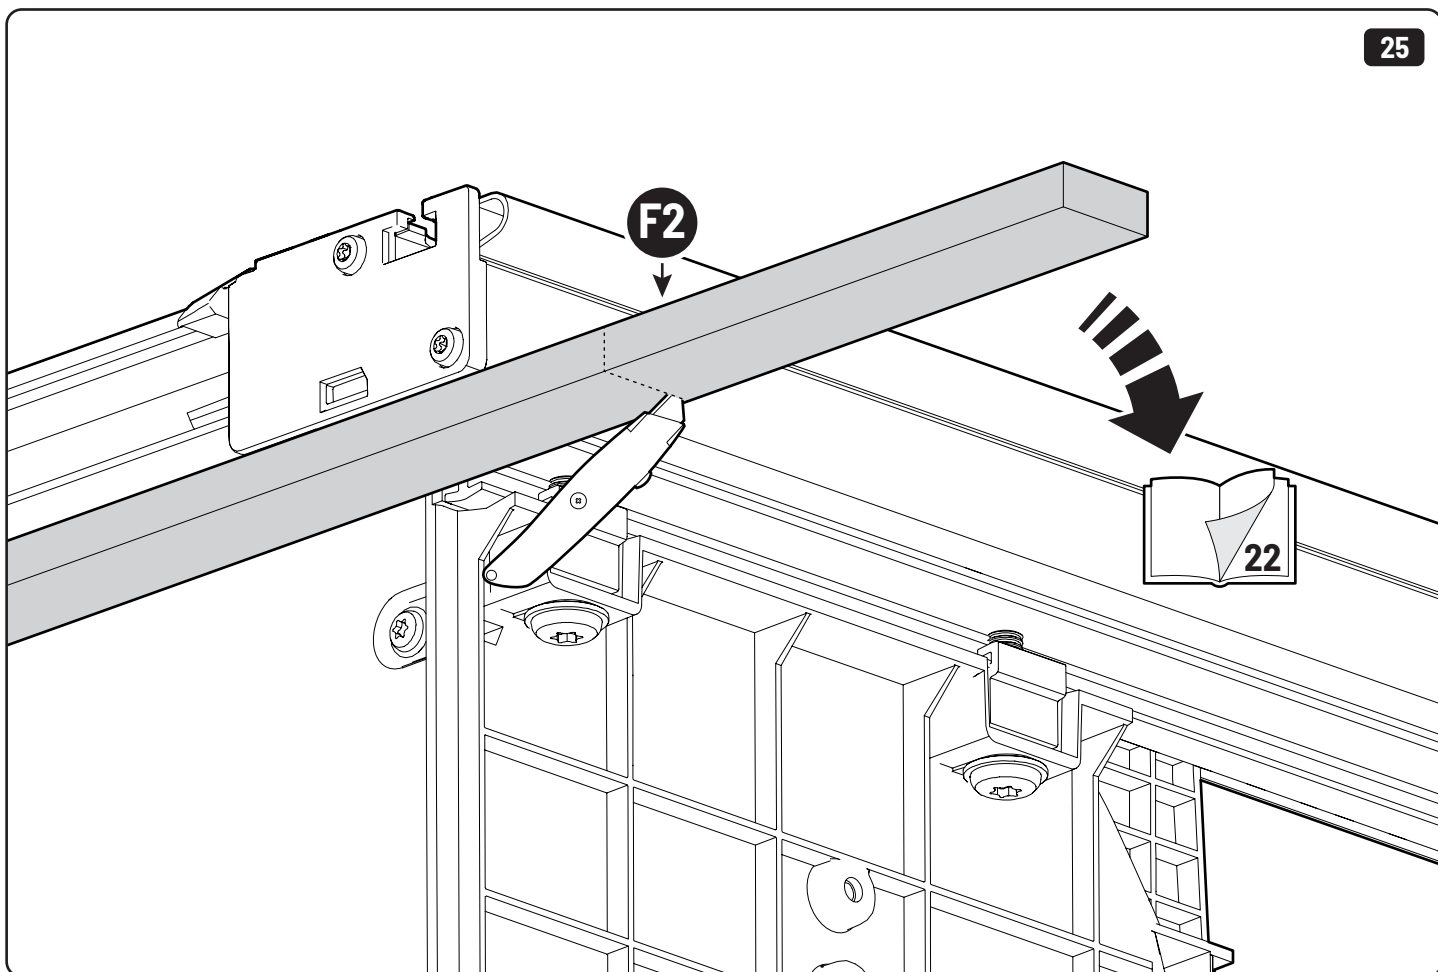
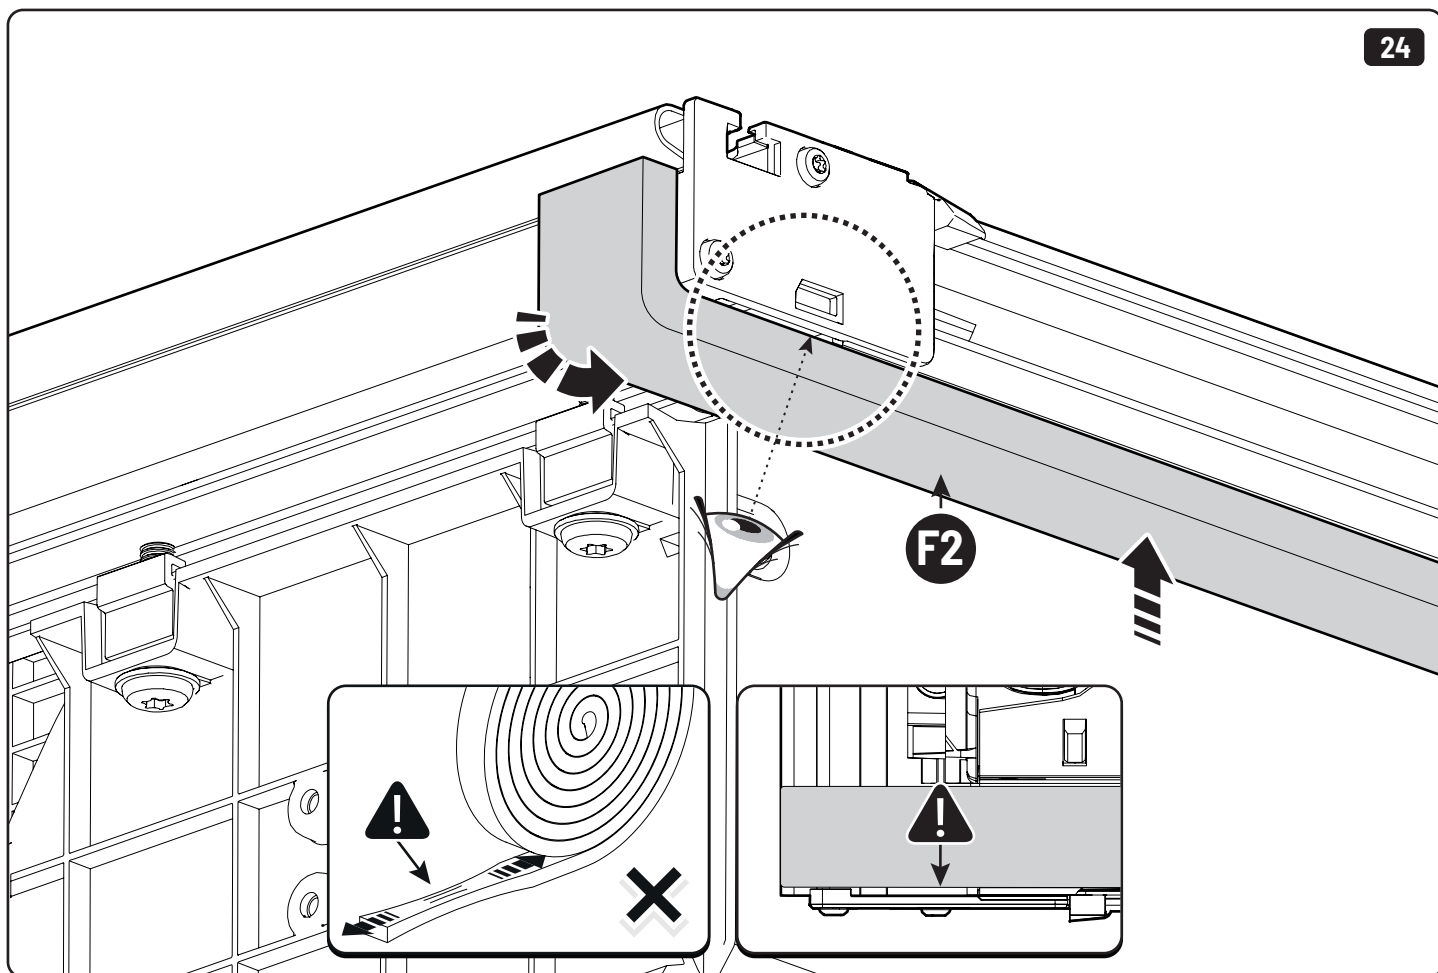


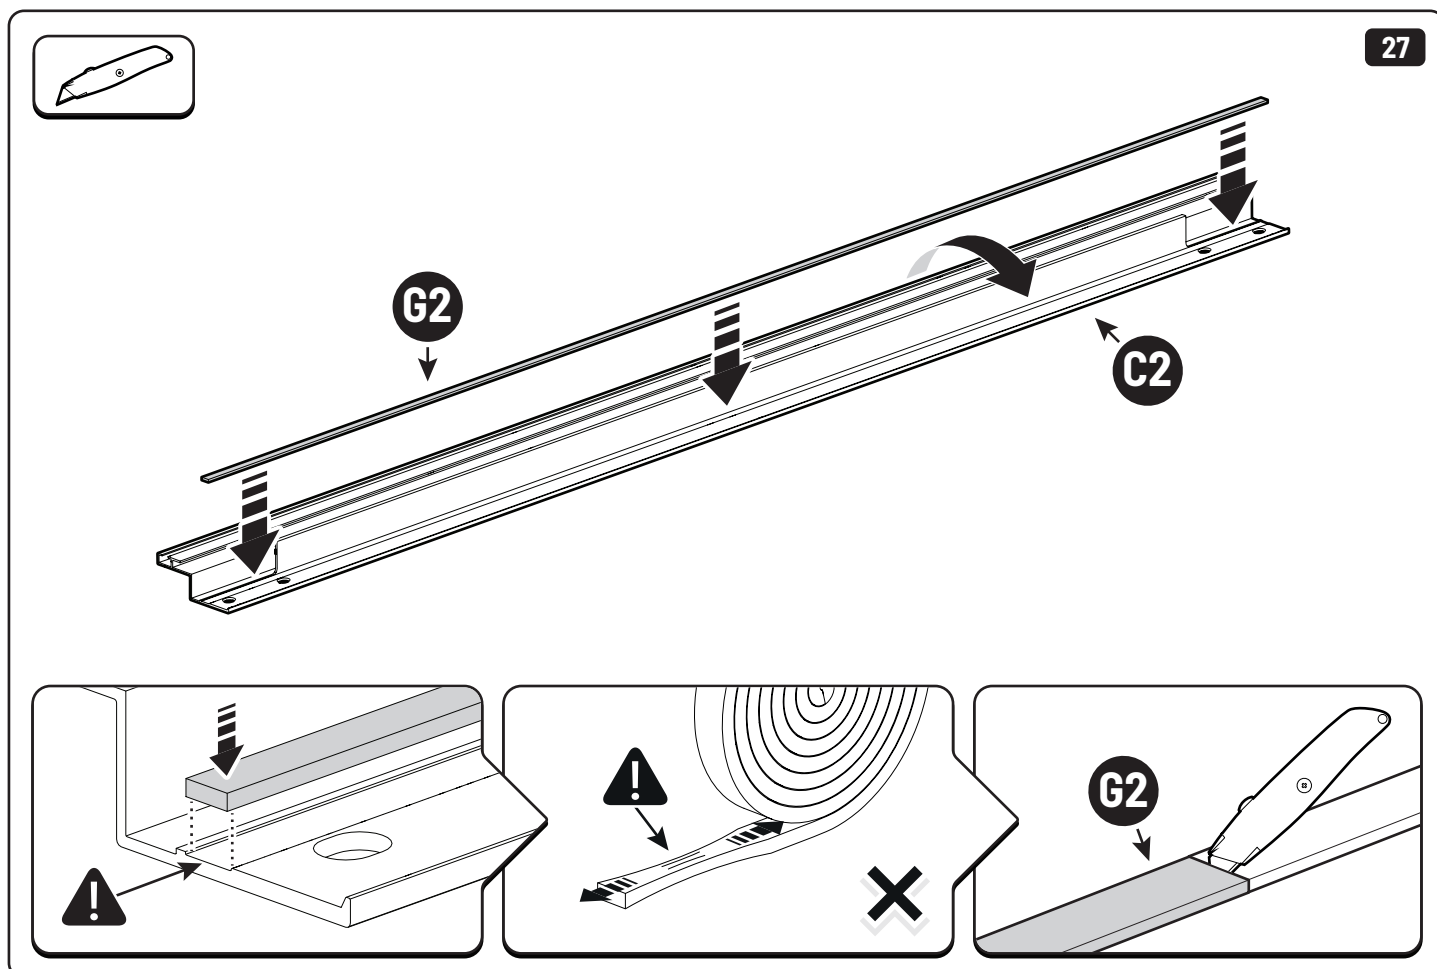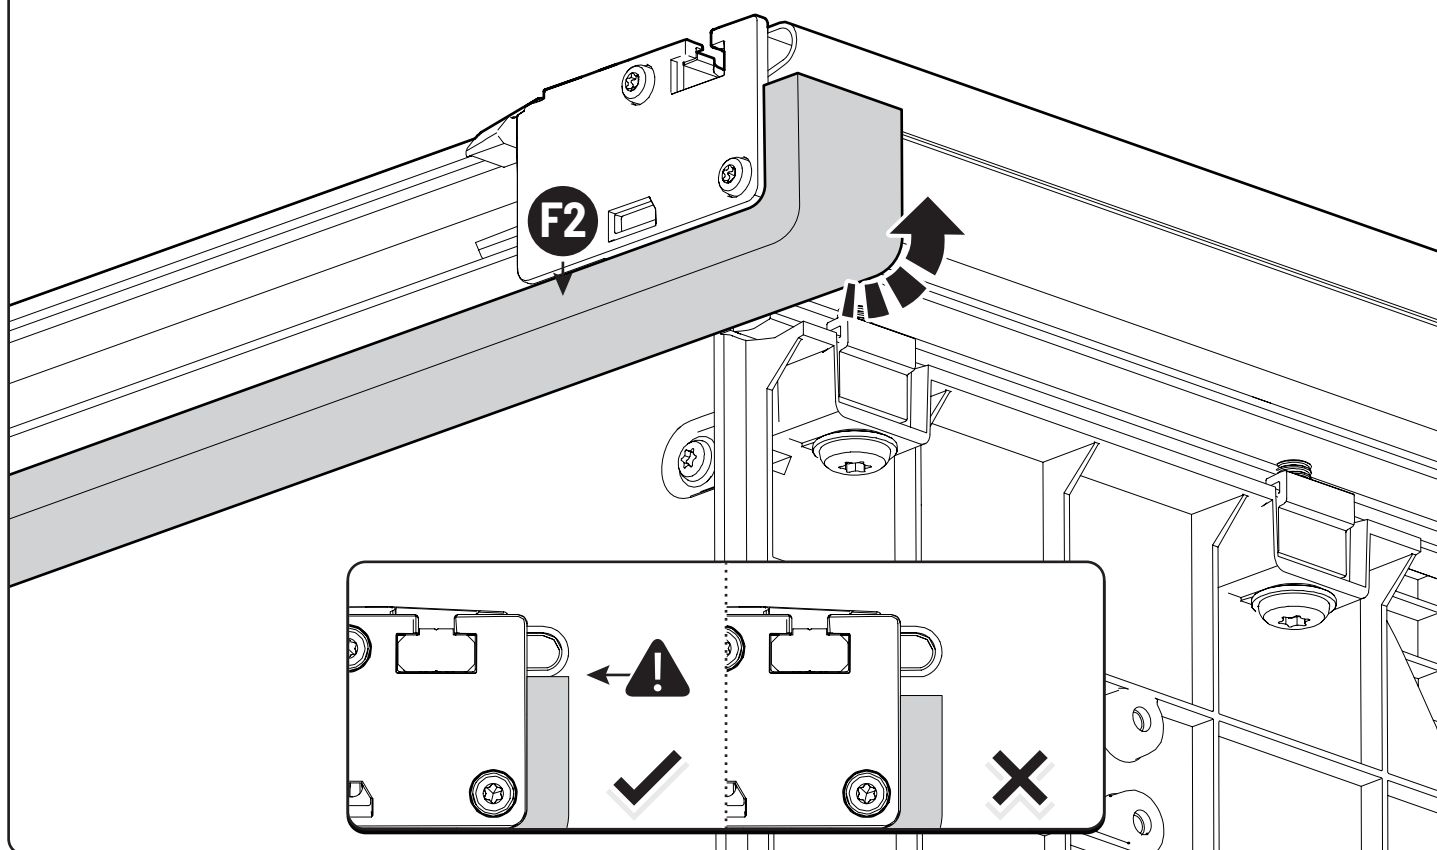






Super Glue (CA)



28

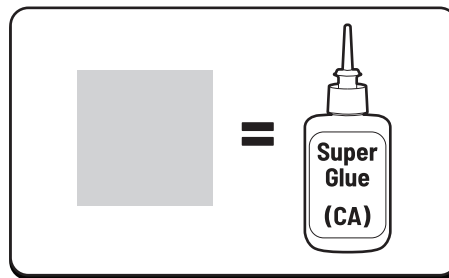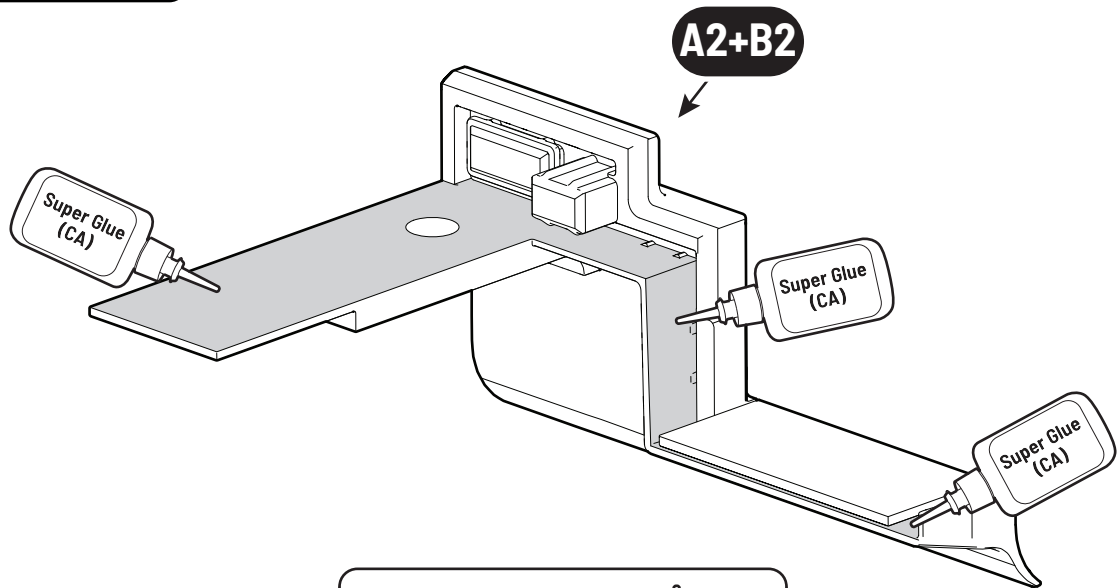



Super Glue (CA)

29

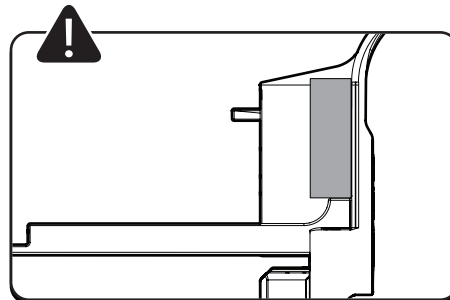
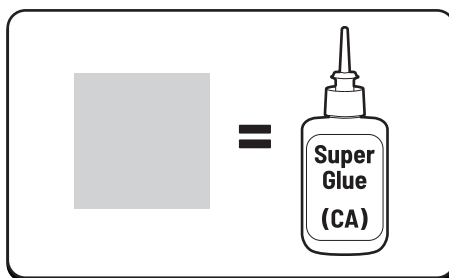
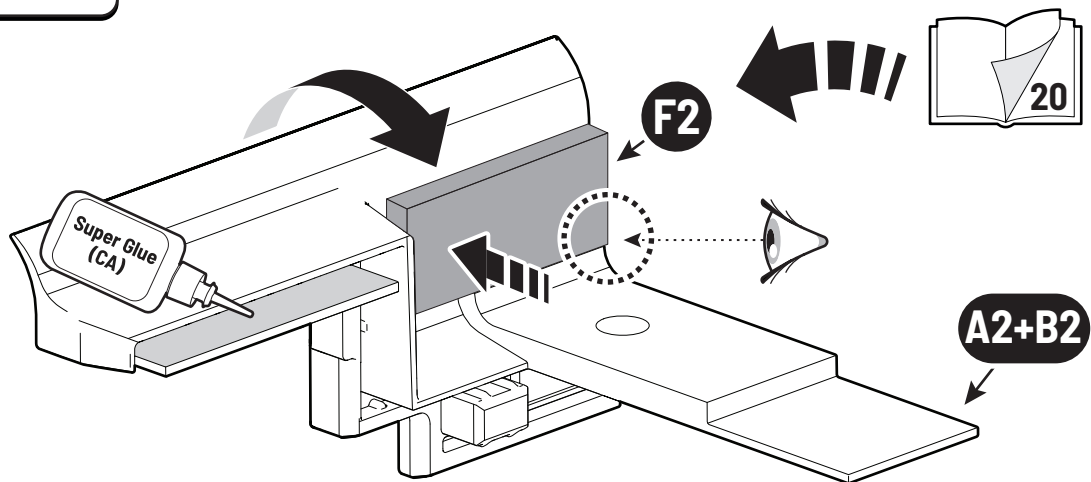


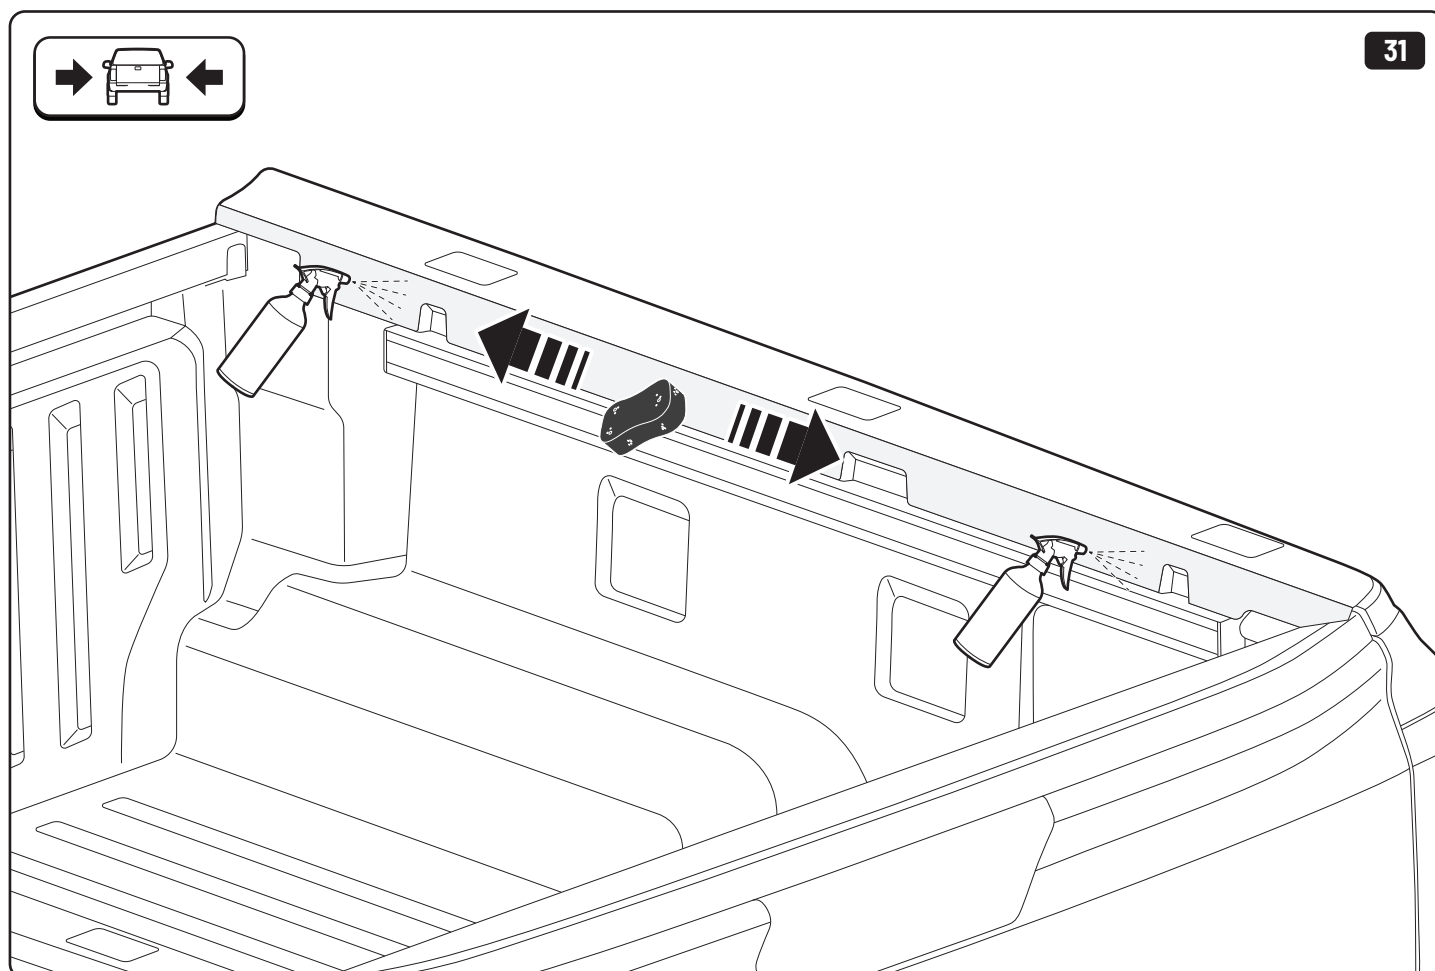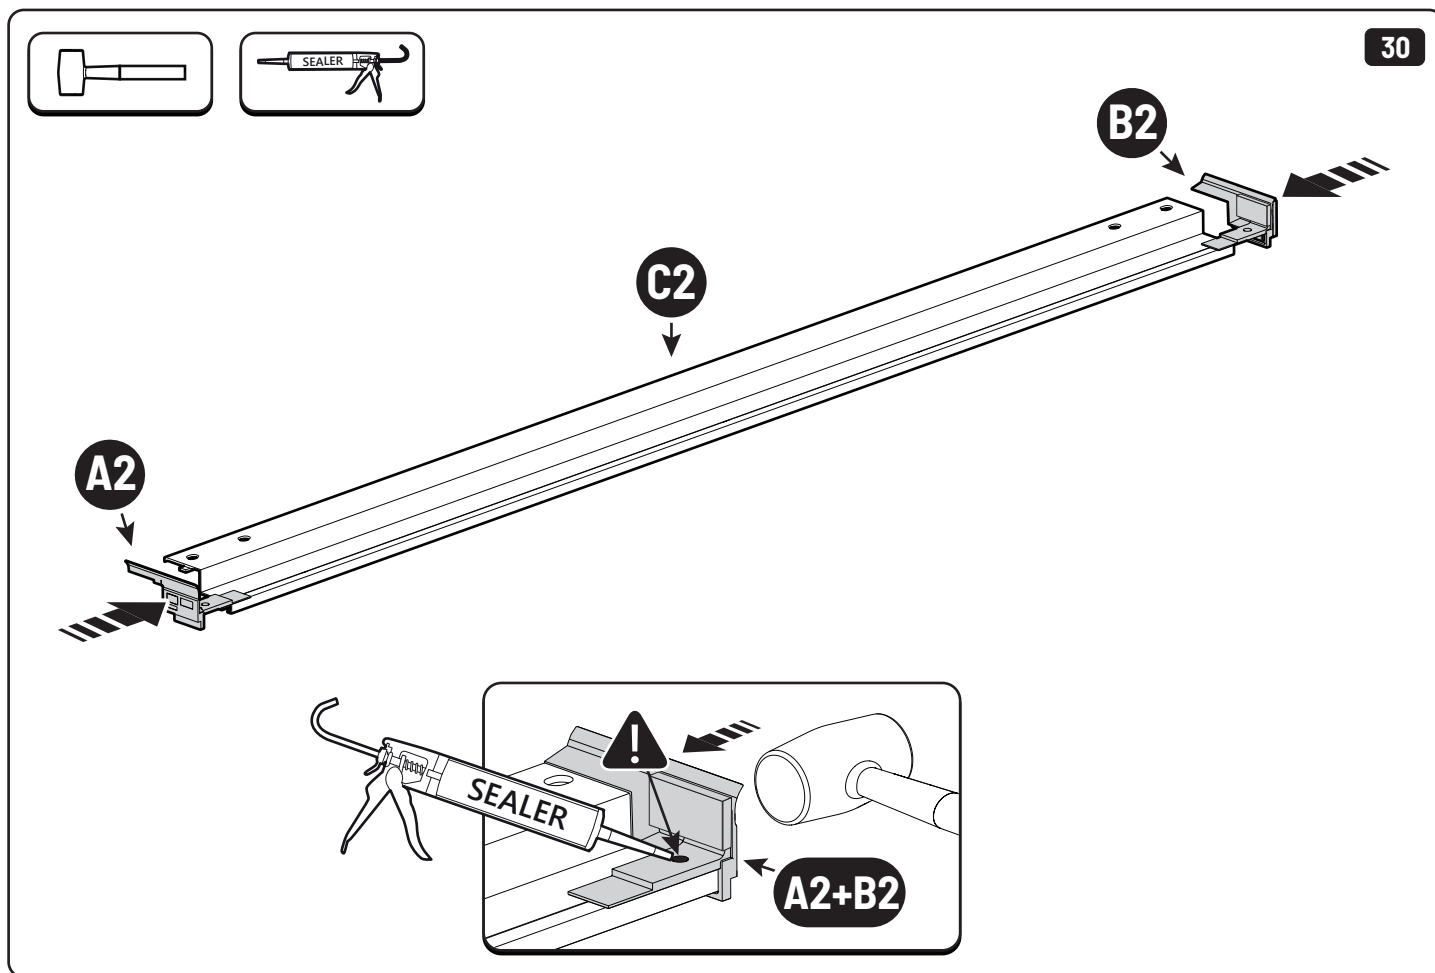

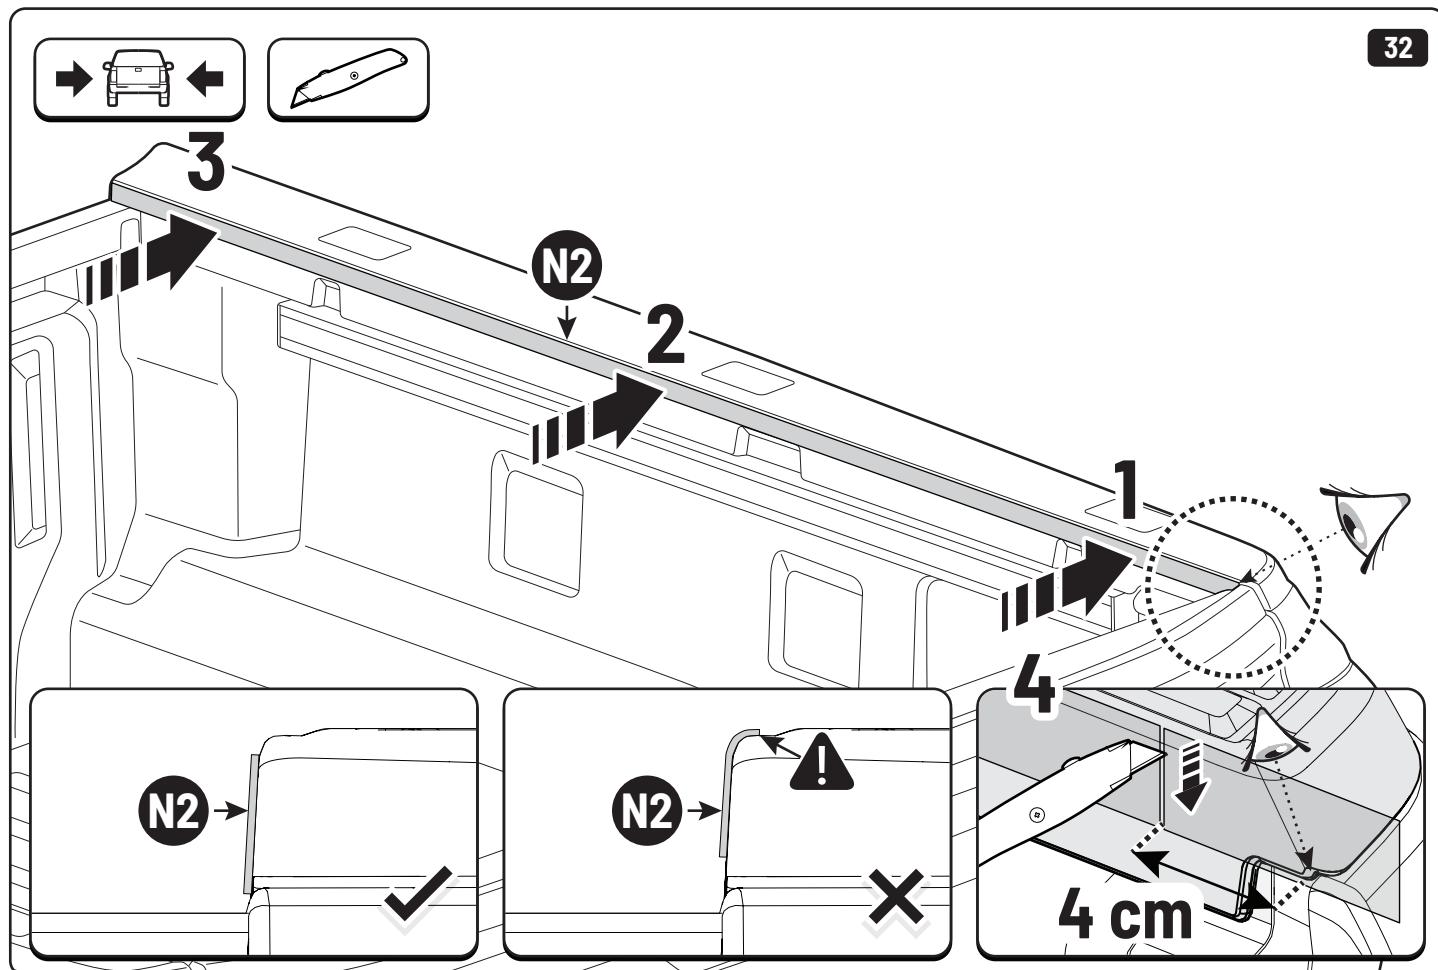



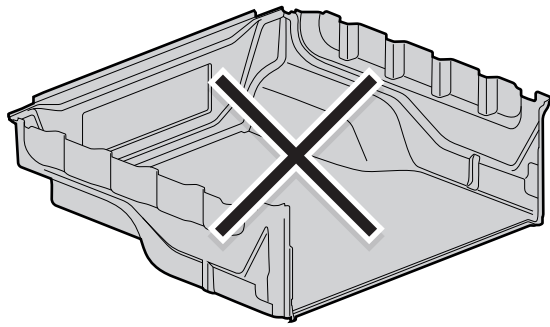


+ **SPRAY-IN
BEDLINER**

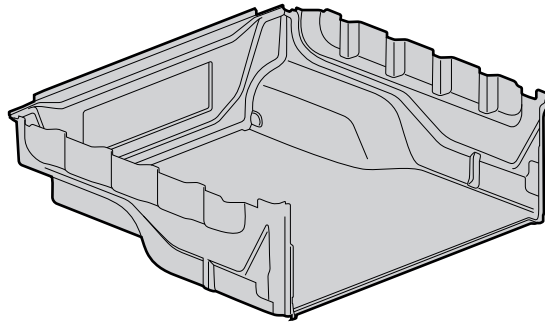
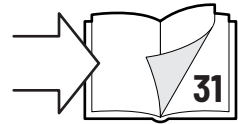


ONLY WITH LINER




33

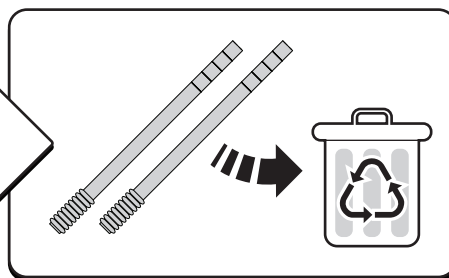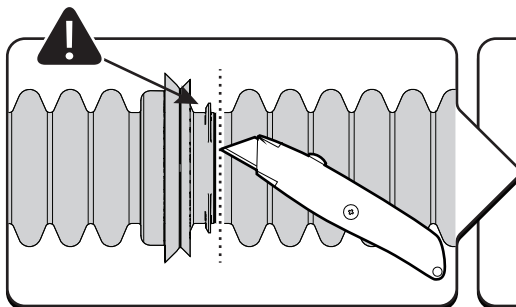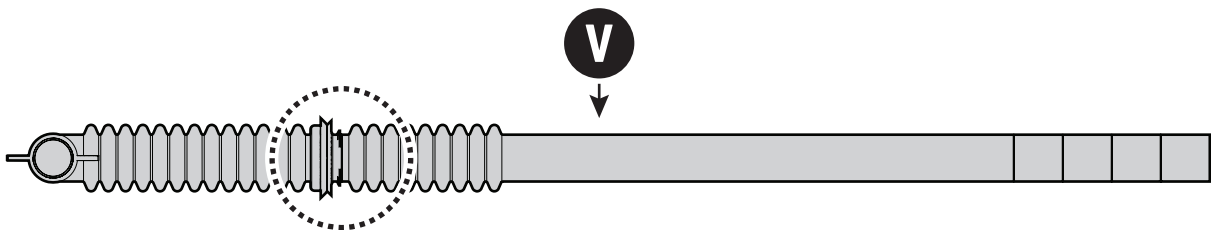




! ONLY WITH LINER

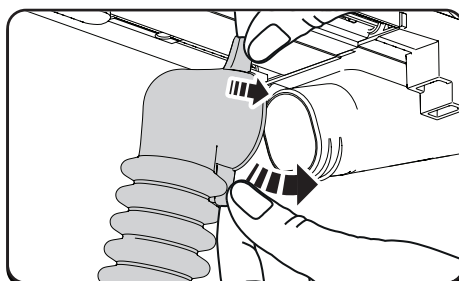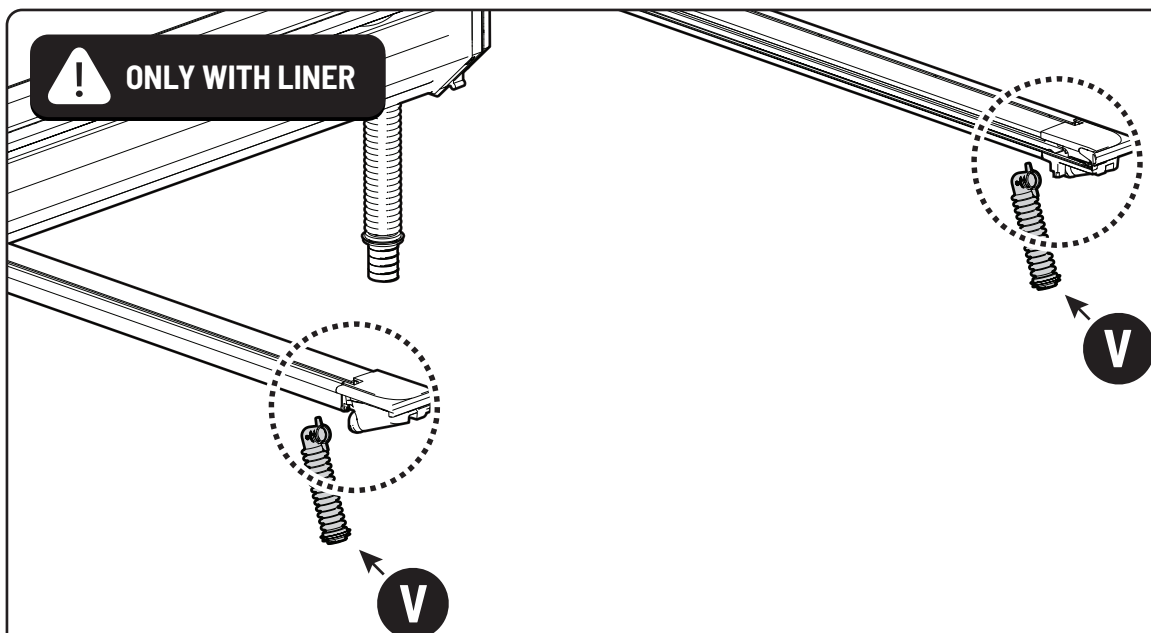



! ONLY WITH LINER

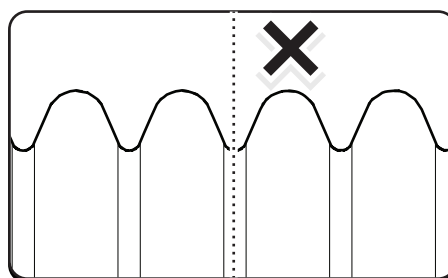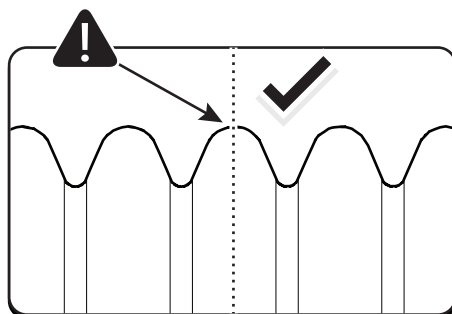
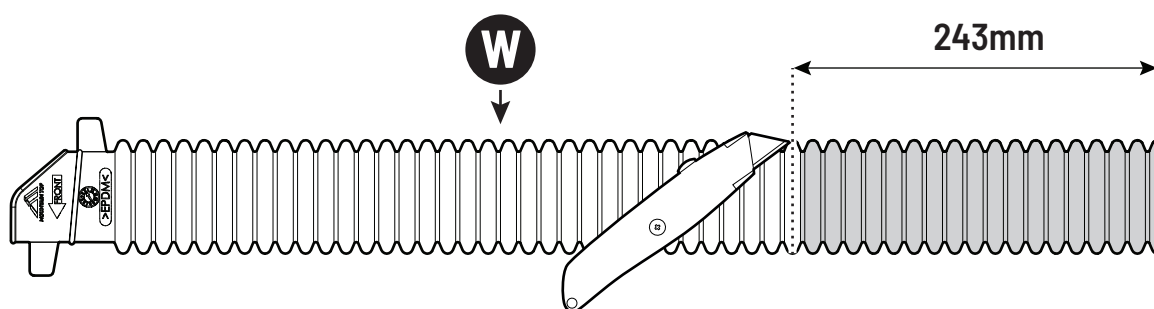




! ONLY WITH LINER

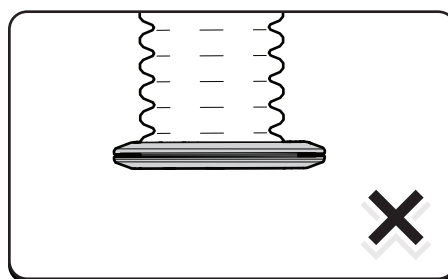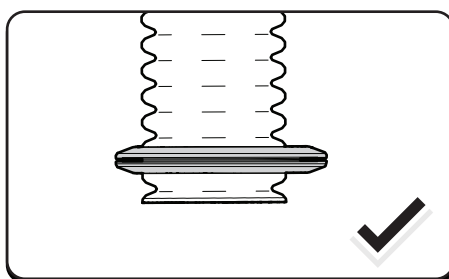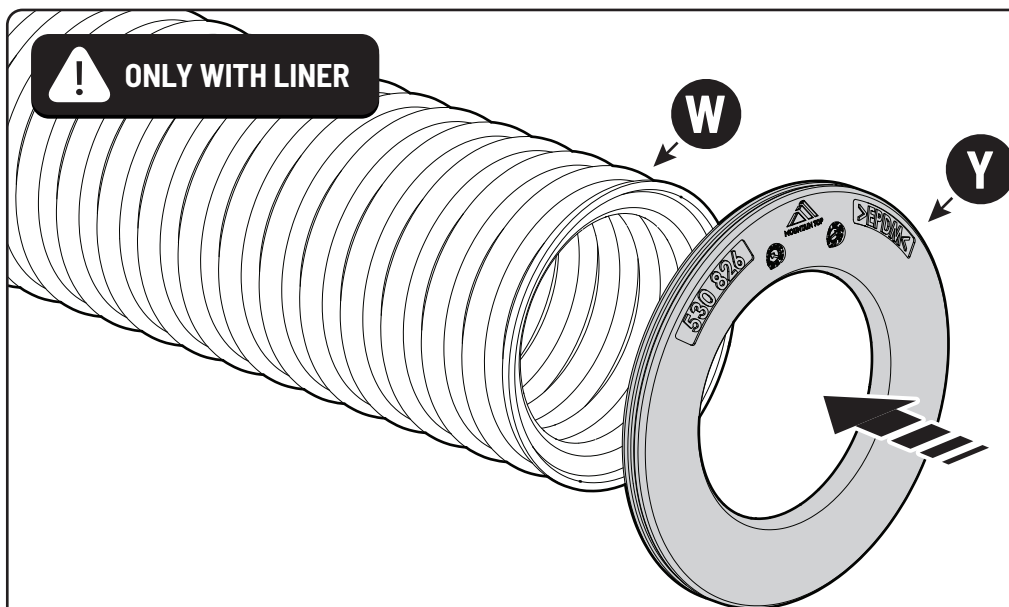

! ONLY WITH LINER

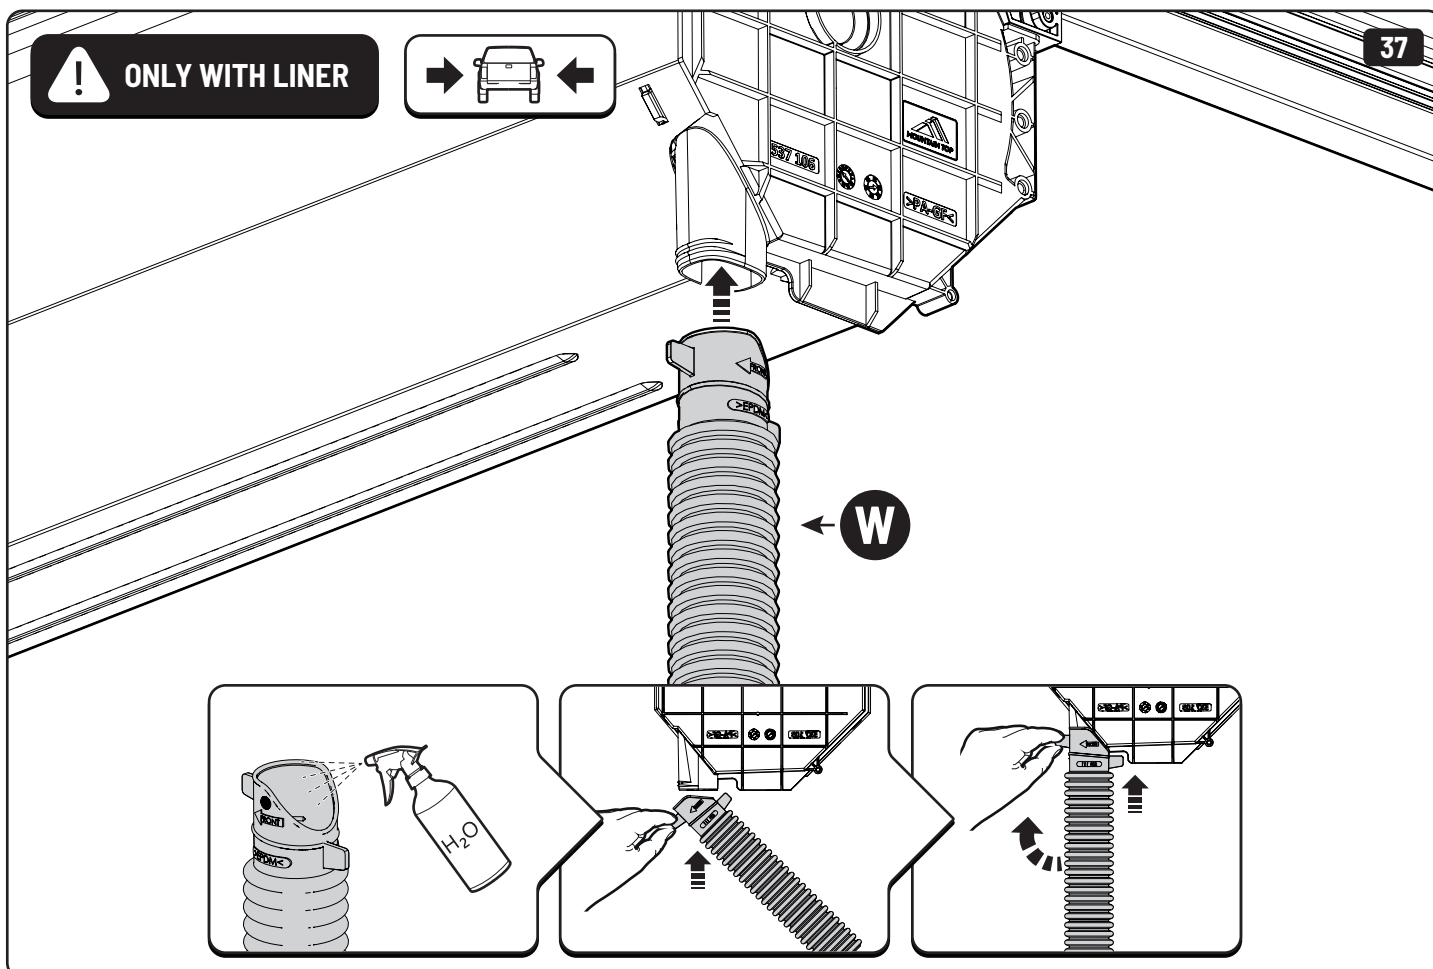

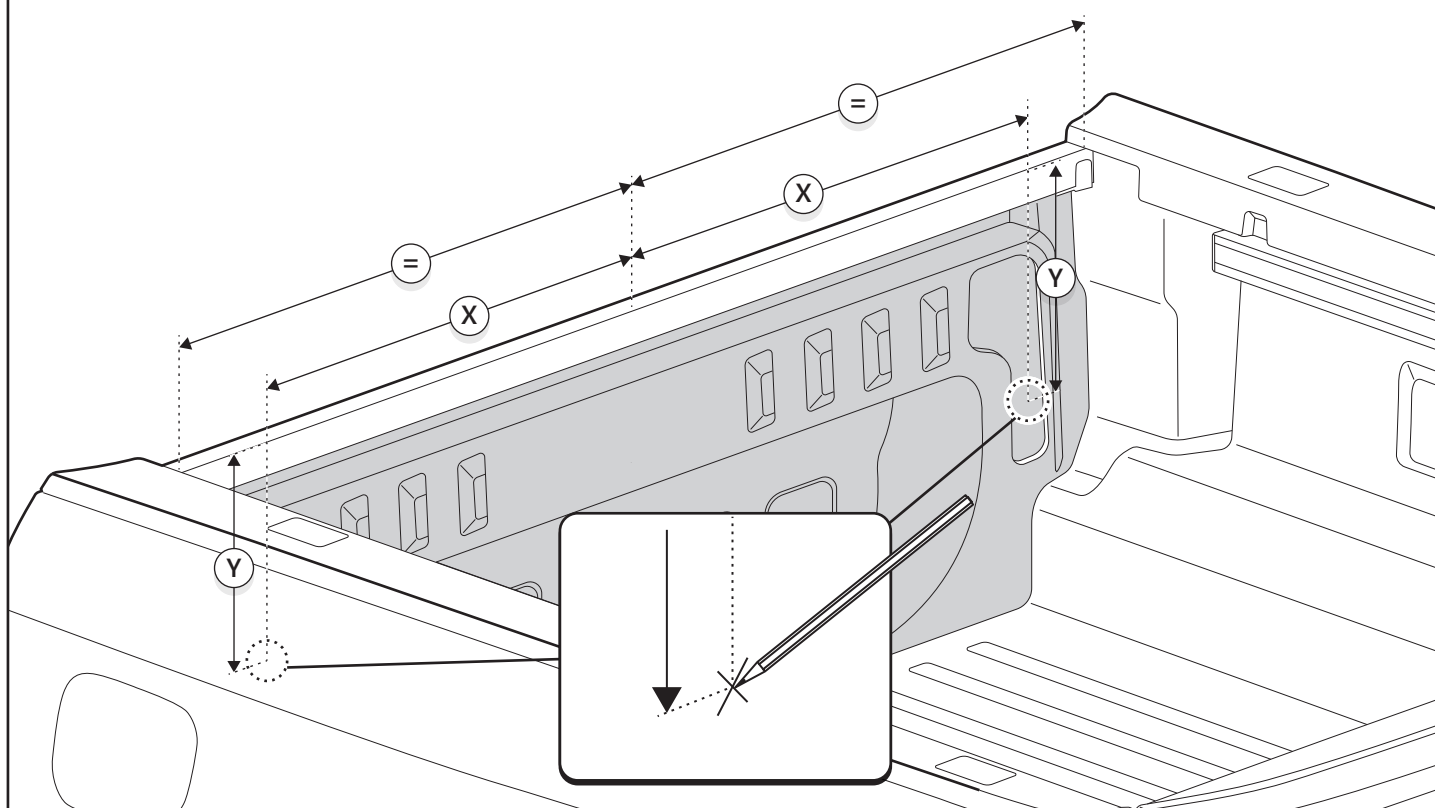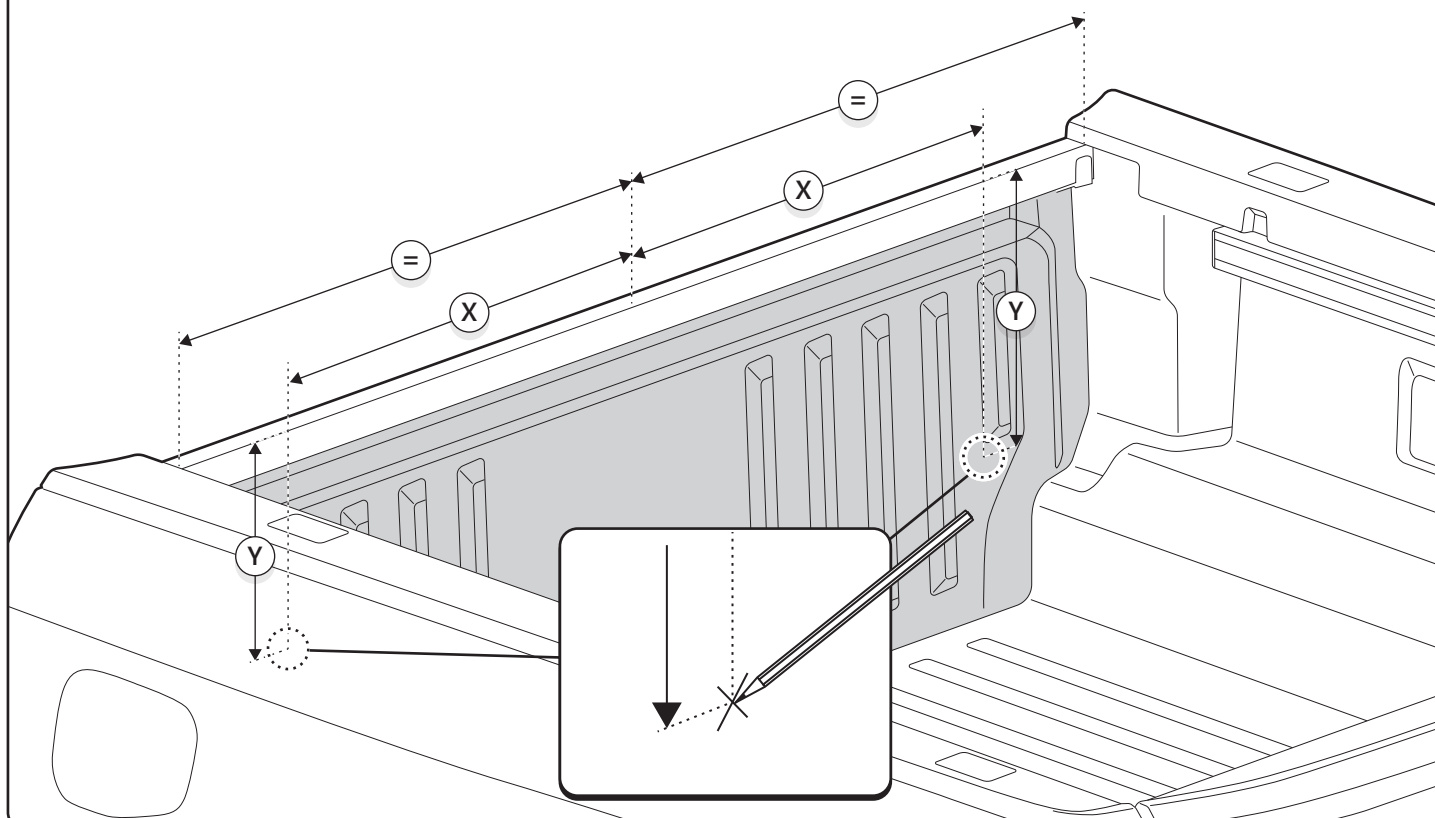**ONLY WITH LINER****EUROPEAN MODEL****X: 650 mm Y: 290 mm****ONLY WITH LINER****OTHER MODELS****X: 540 mm Y: 330 mm**

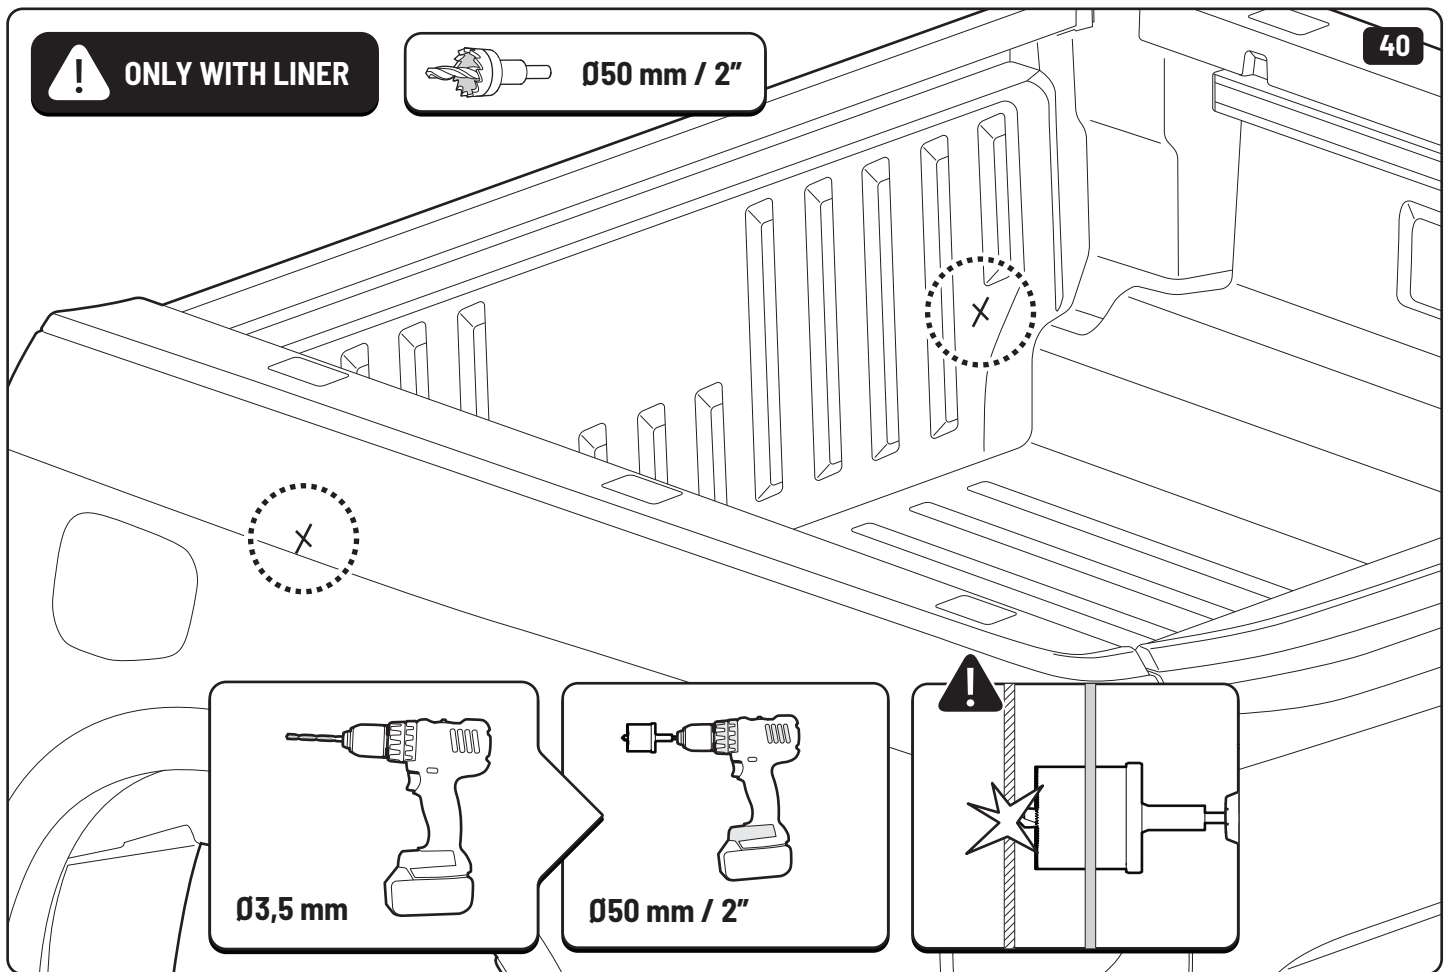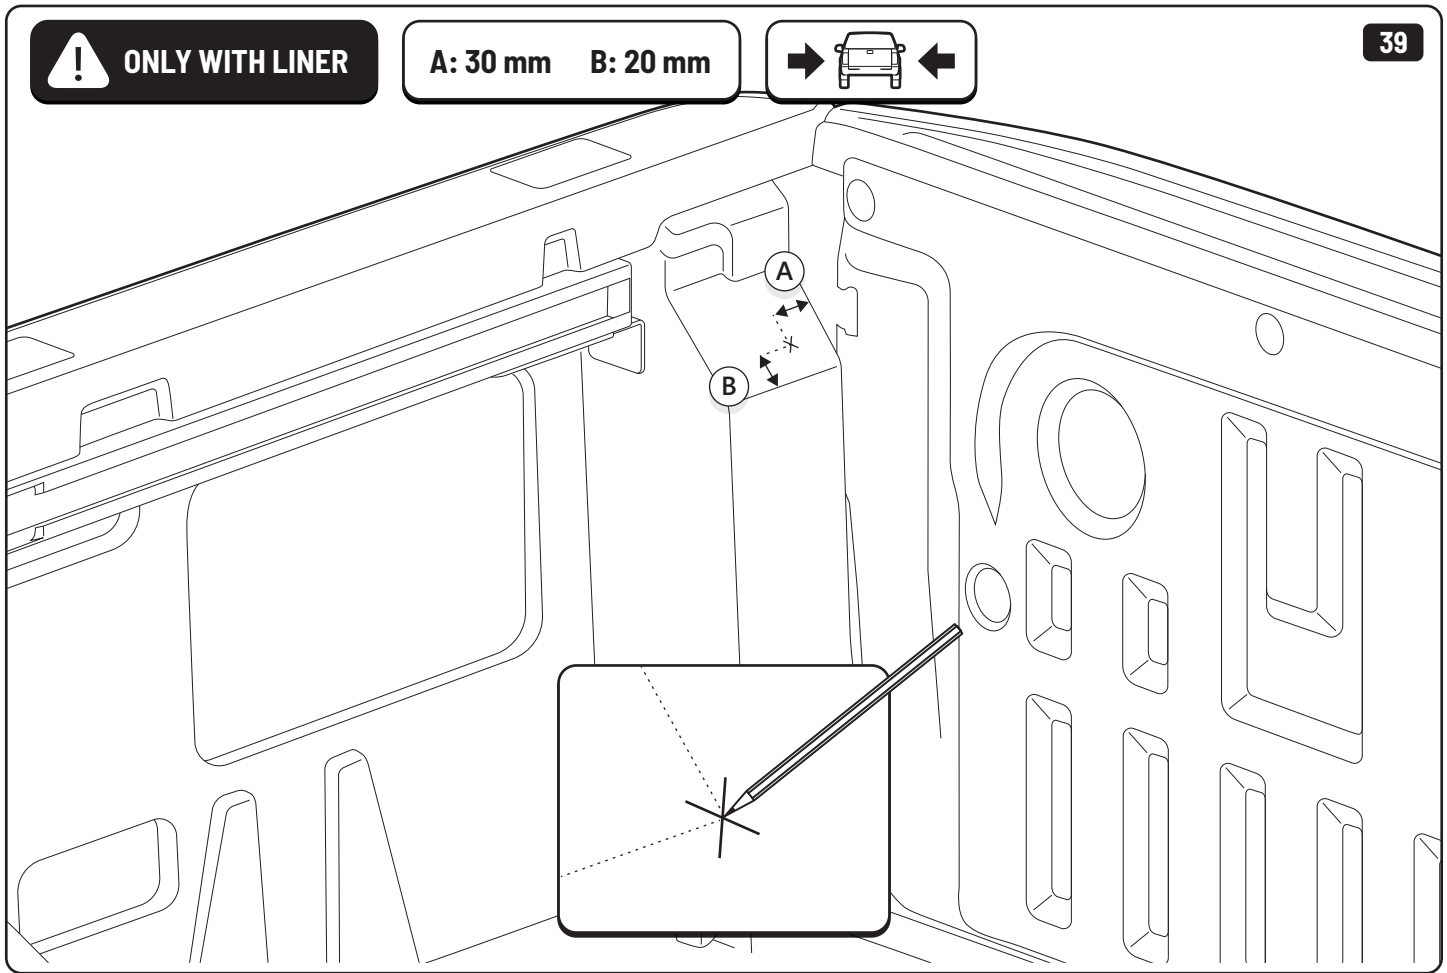



ONLY WITH LINER





Ø 3,5mm




Ø30 mm / 1.2"





41

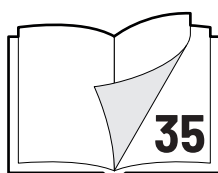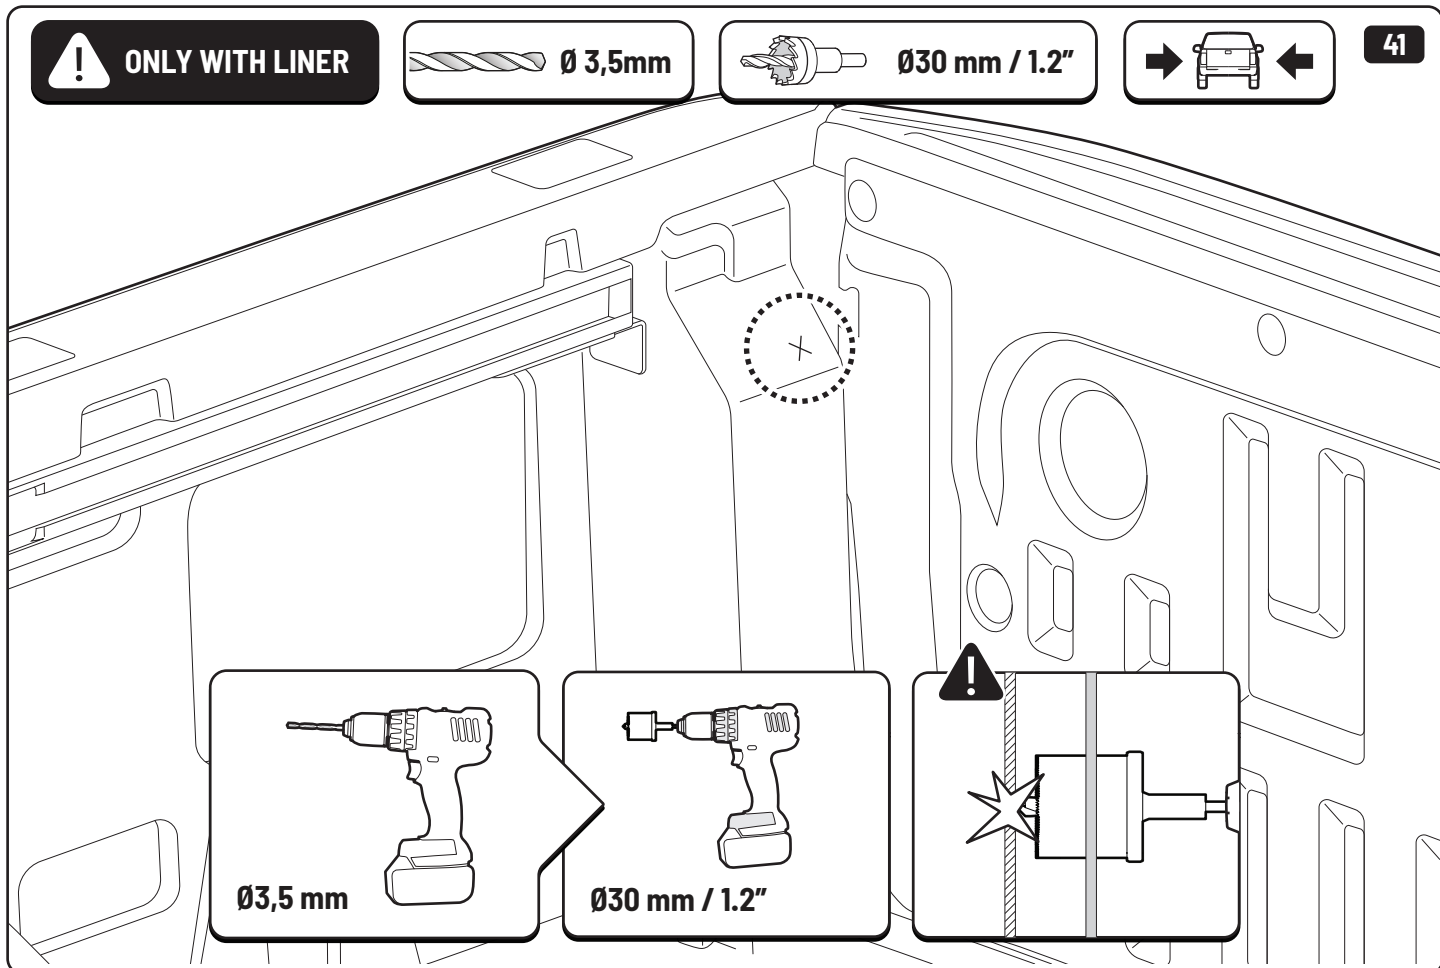



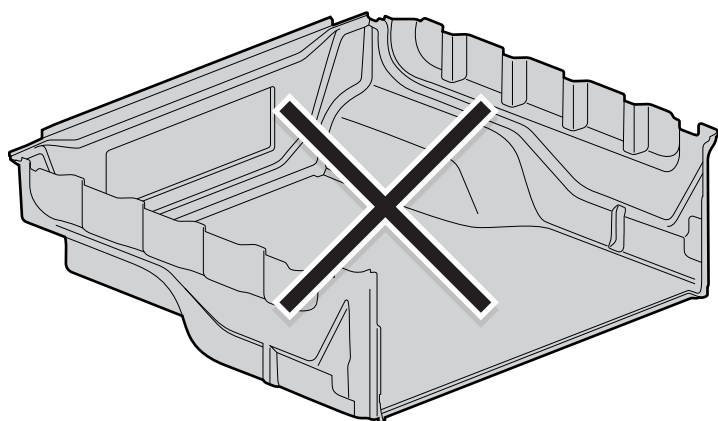


+ **SPRAY-IN
BEDLINER**


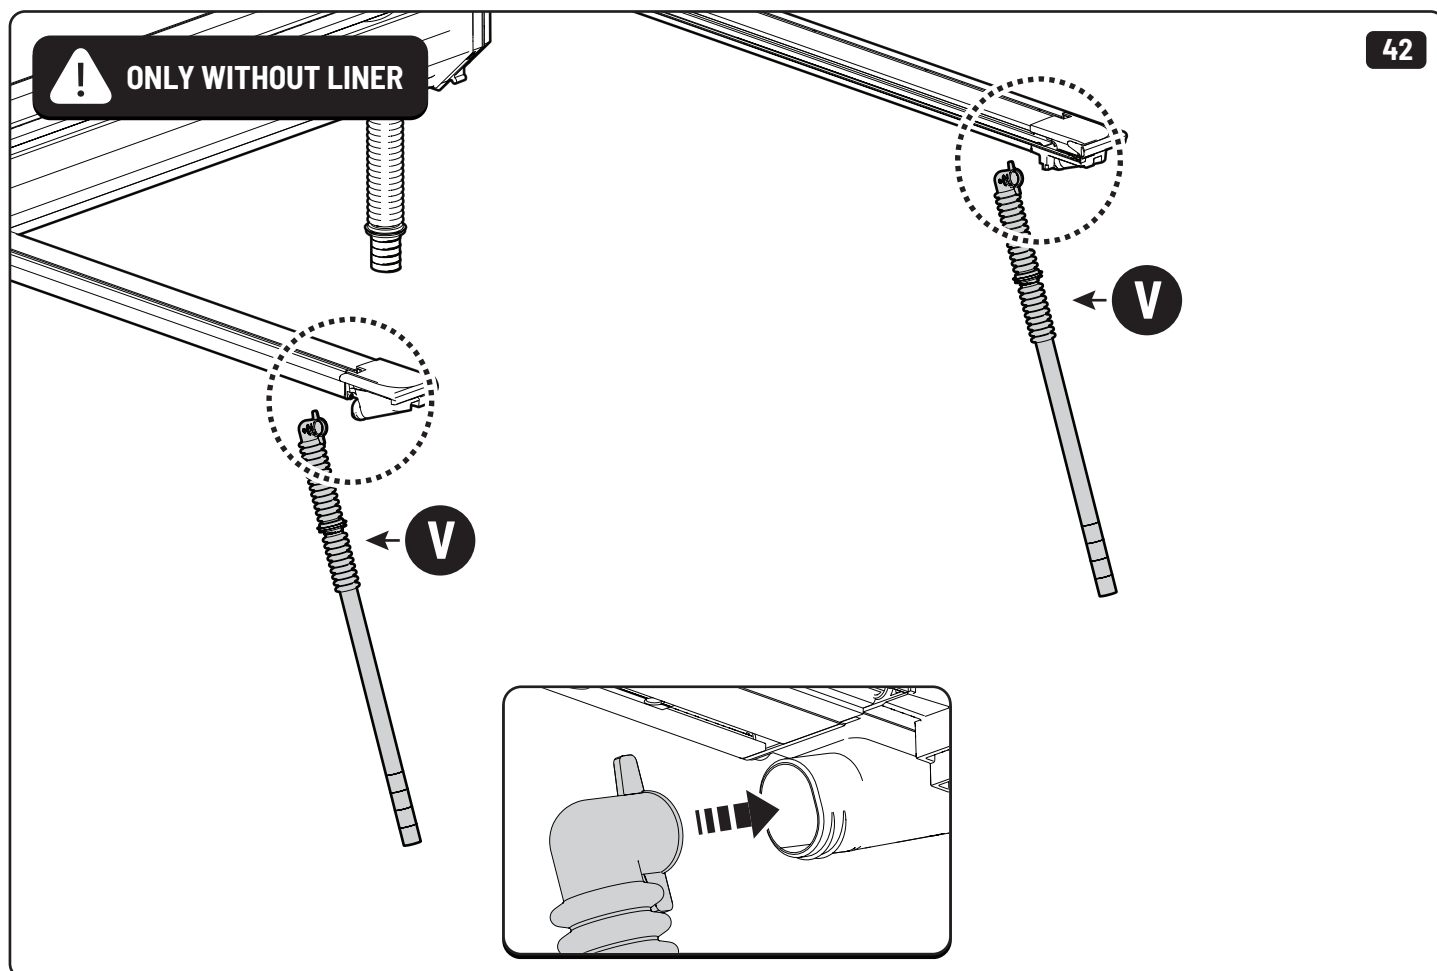








ONLY WITHOUT LINER

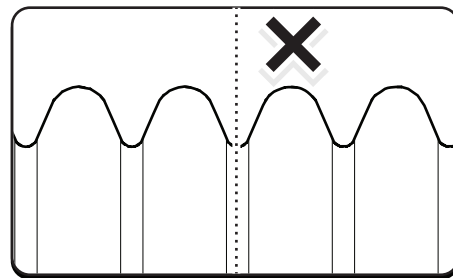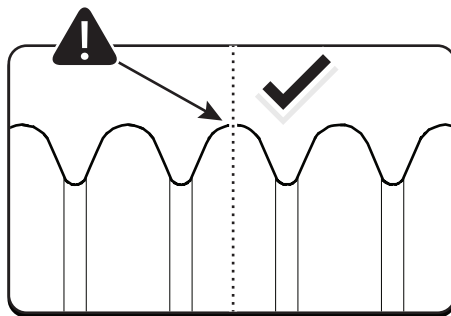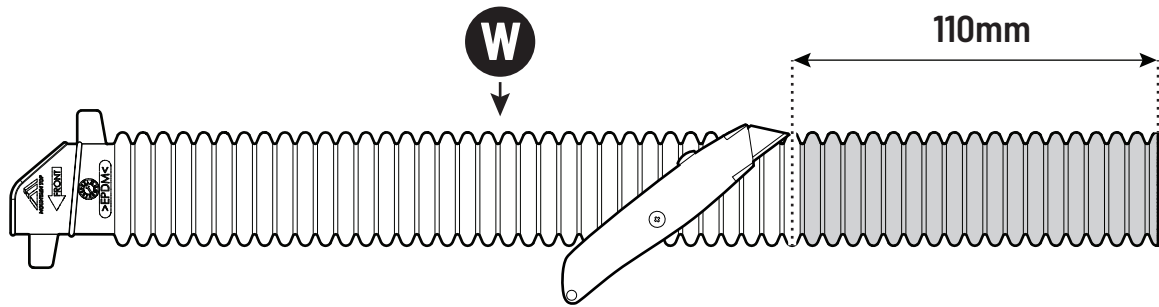

ONLY WITHOUT LINER

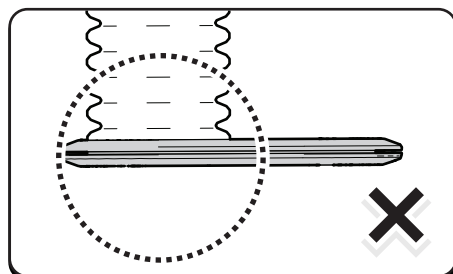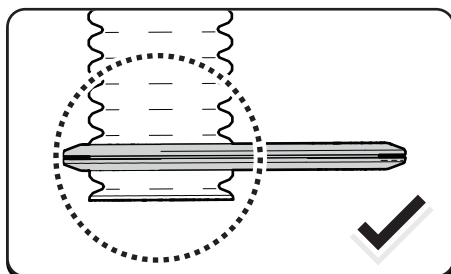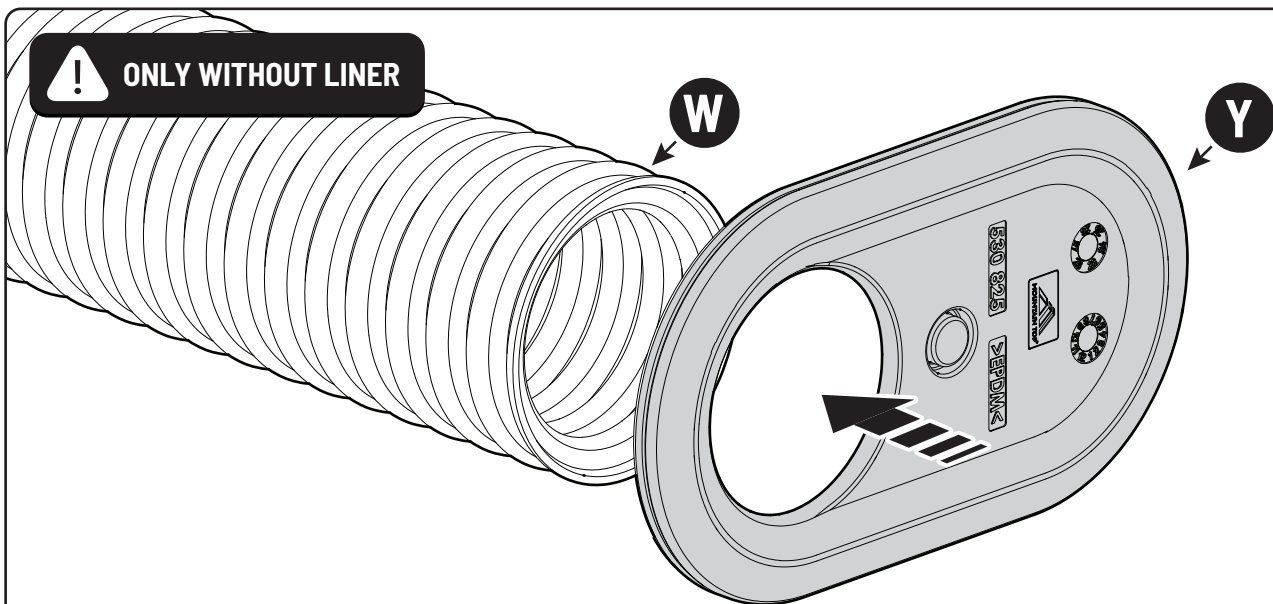

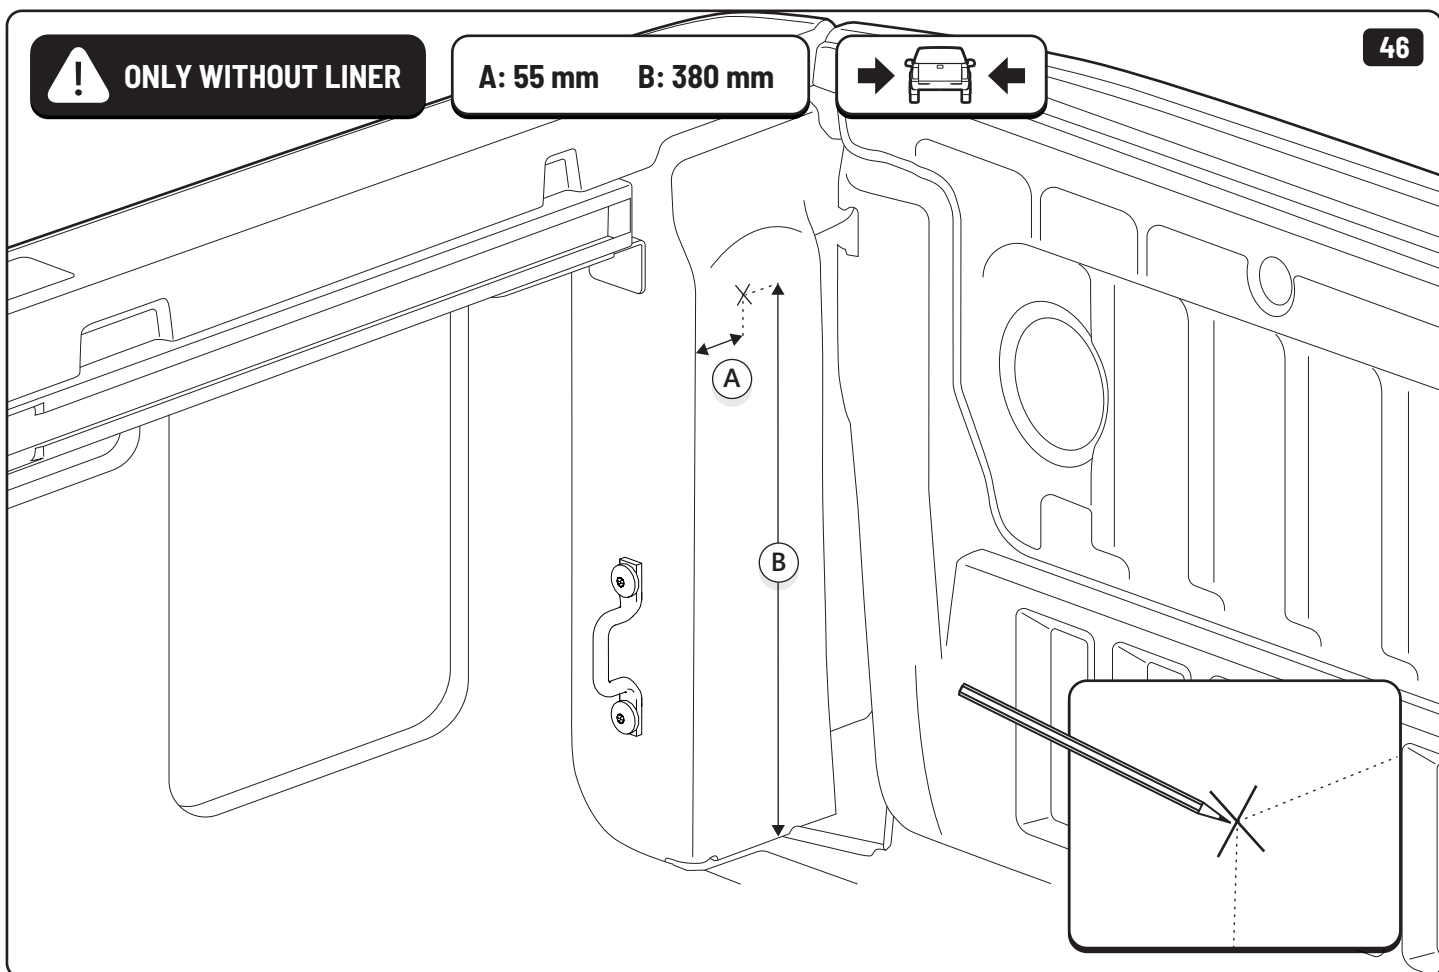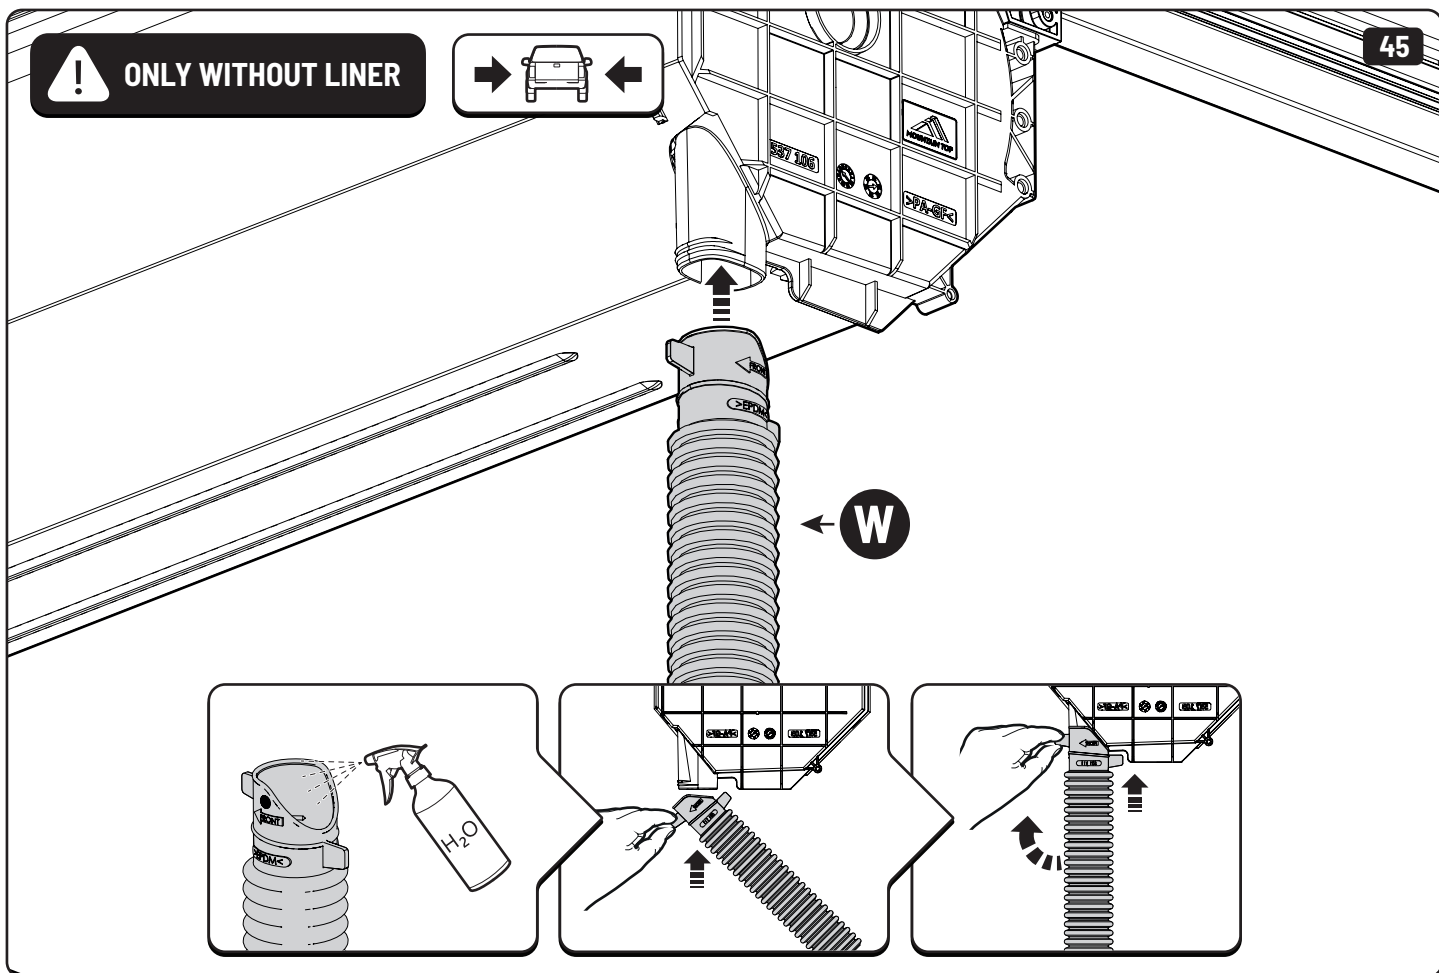




Ø30 mm / 1.2"




Rust Protection





ONLY WITHOUT LINER



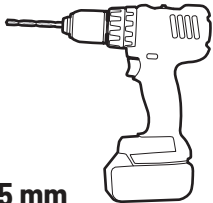


Ø3,5 mm




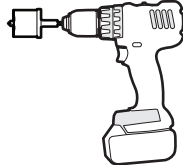


Ø30 mm / 1.2"

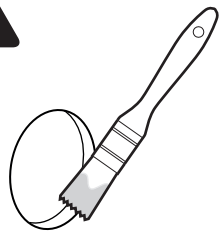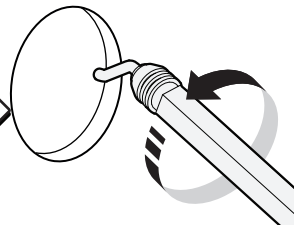

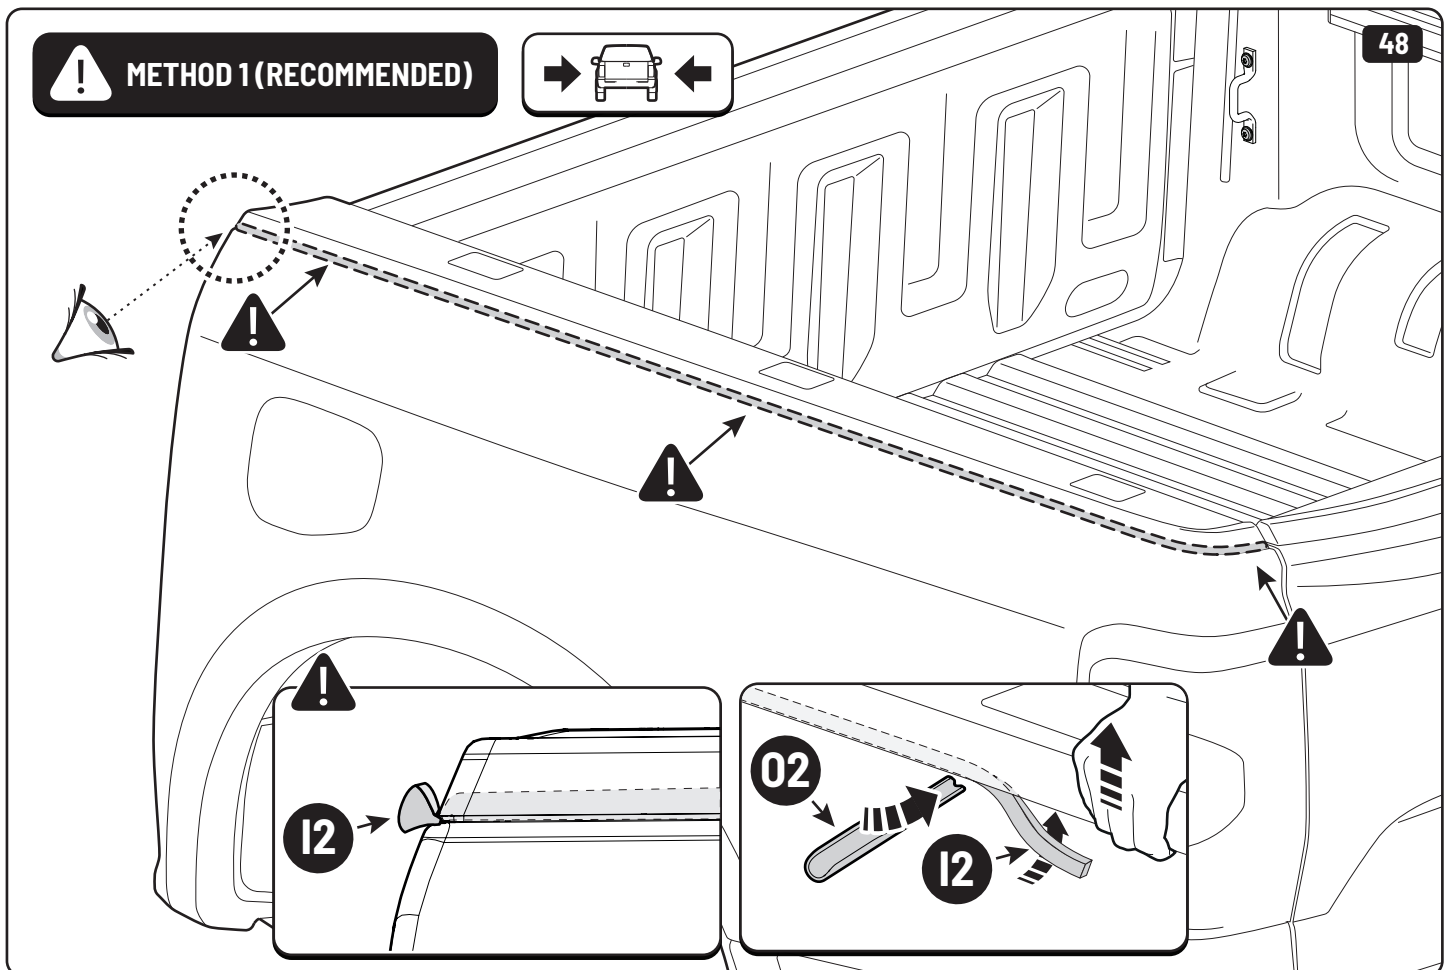
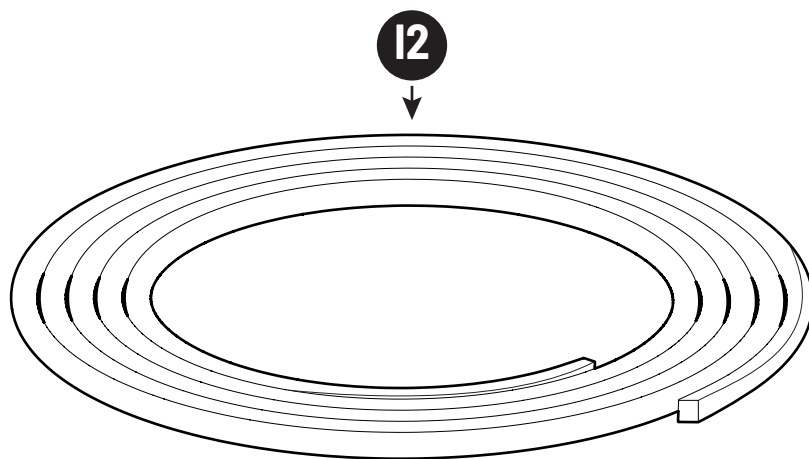




! METHOD 2

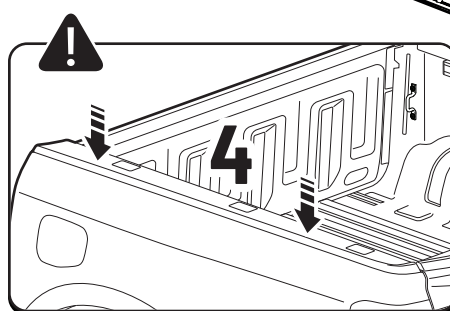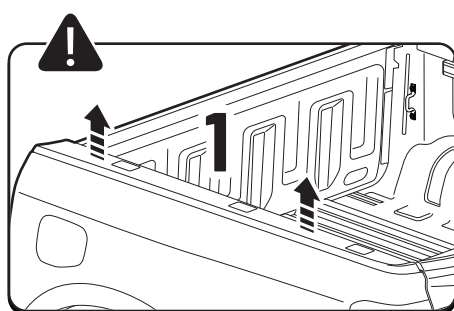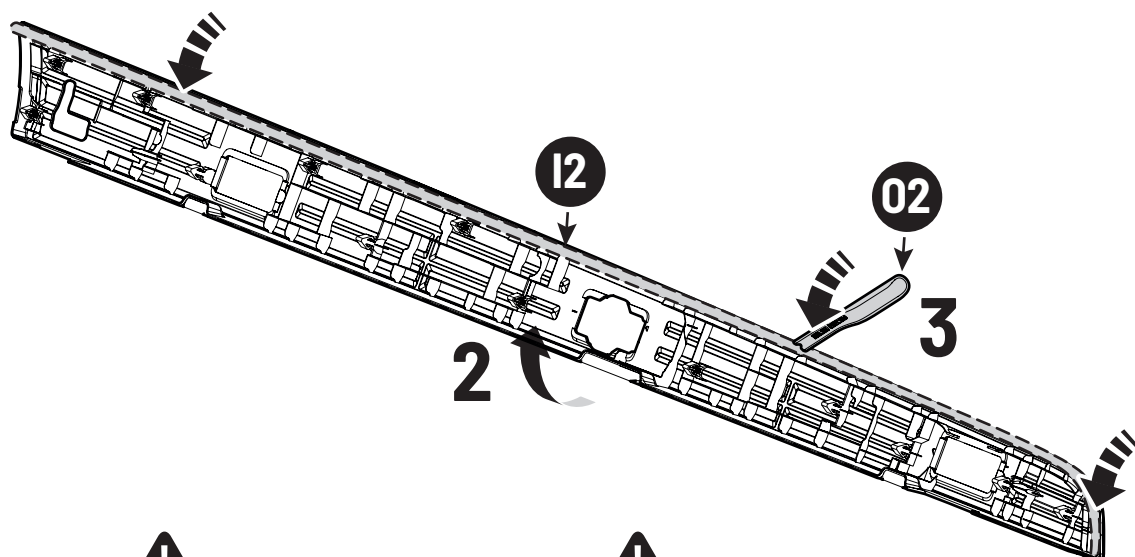



LOCTITE 243

T45

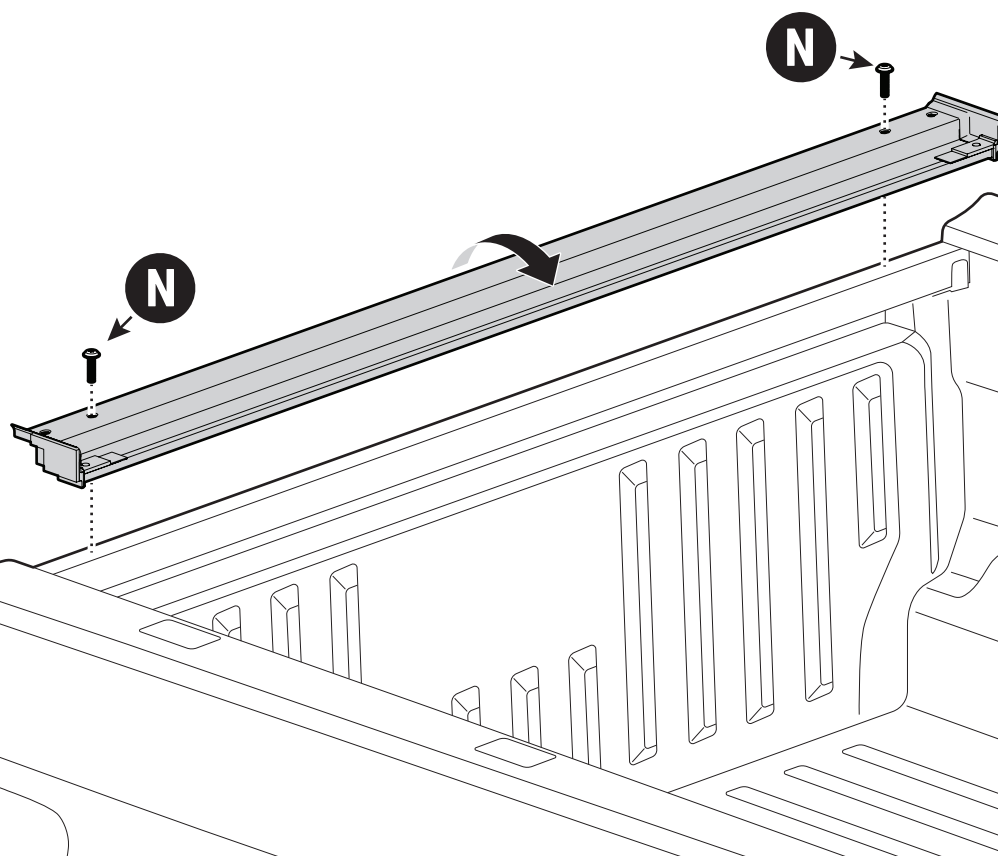



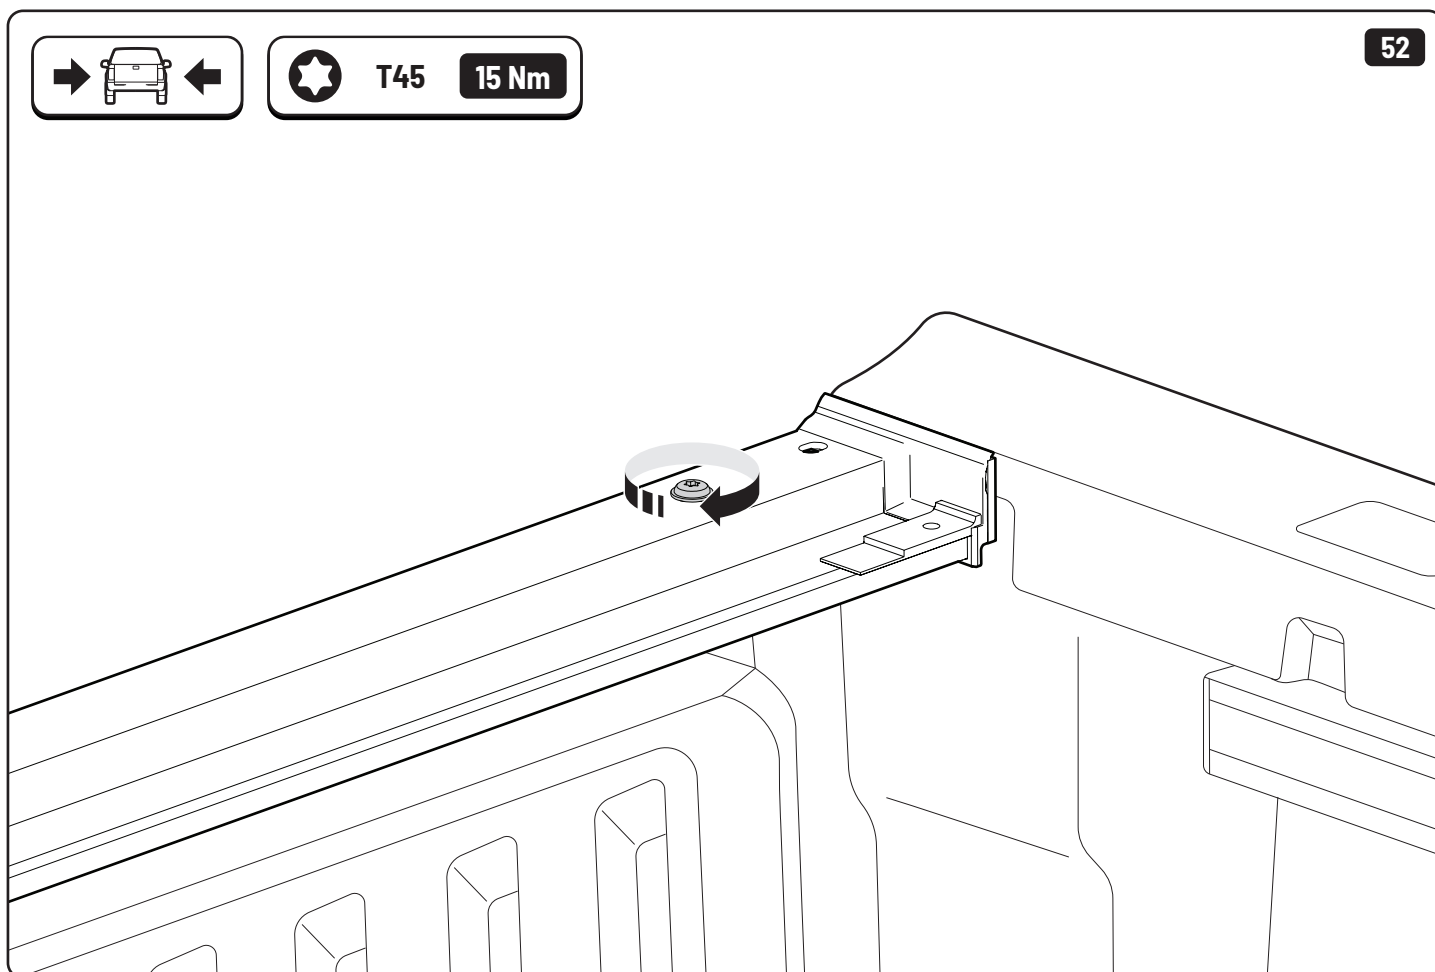
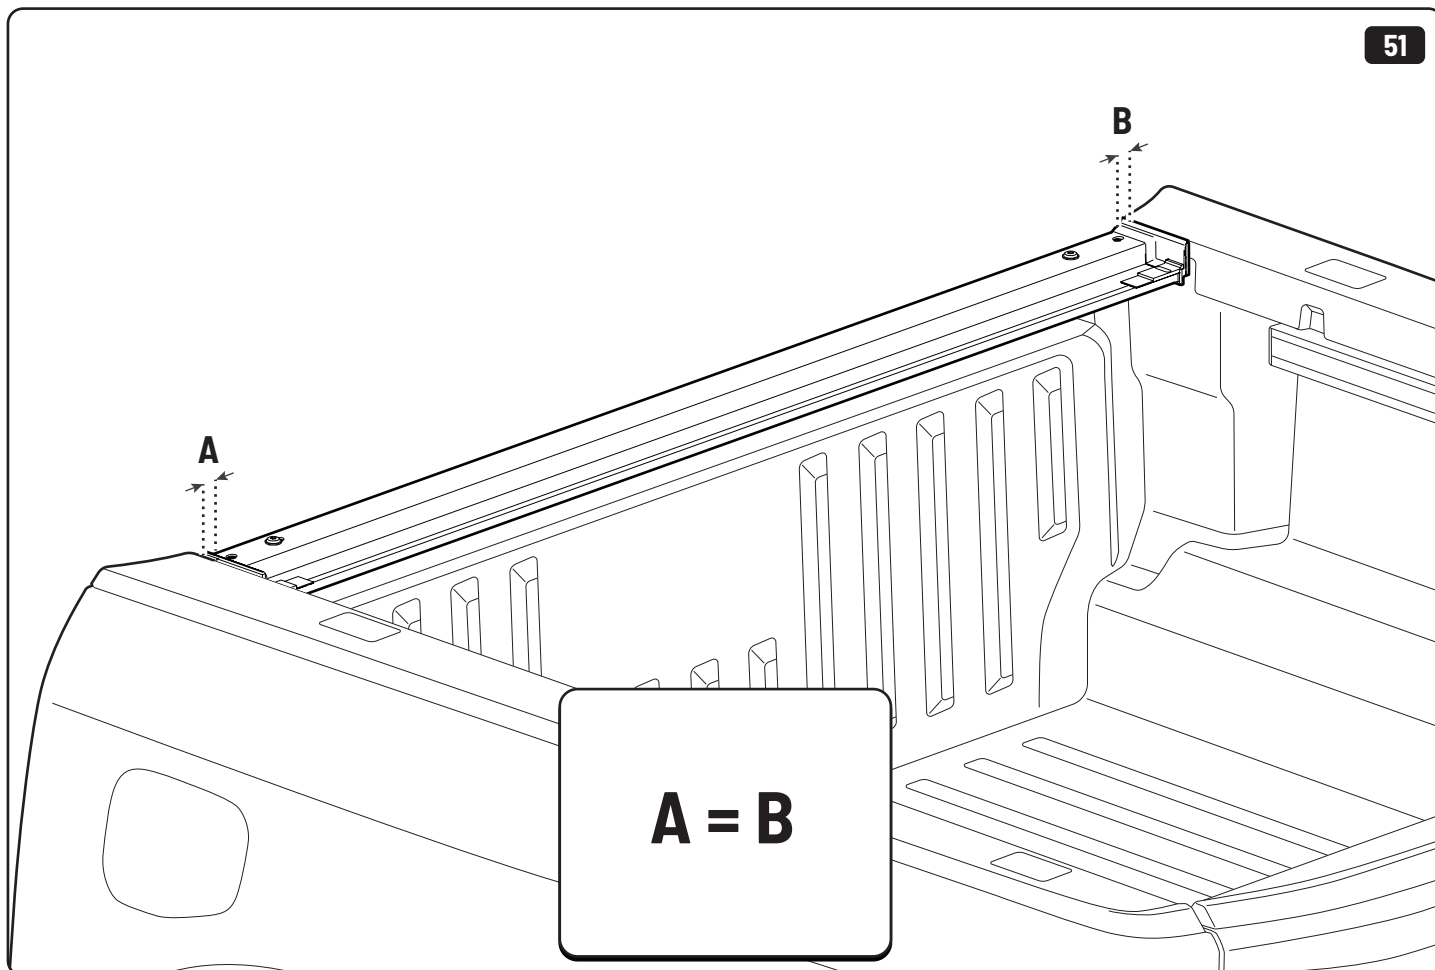


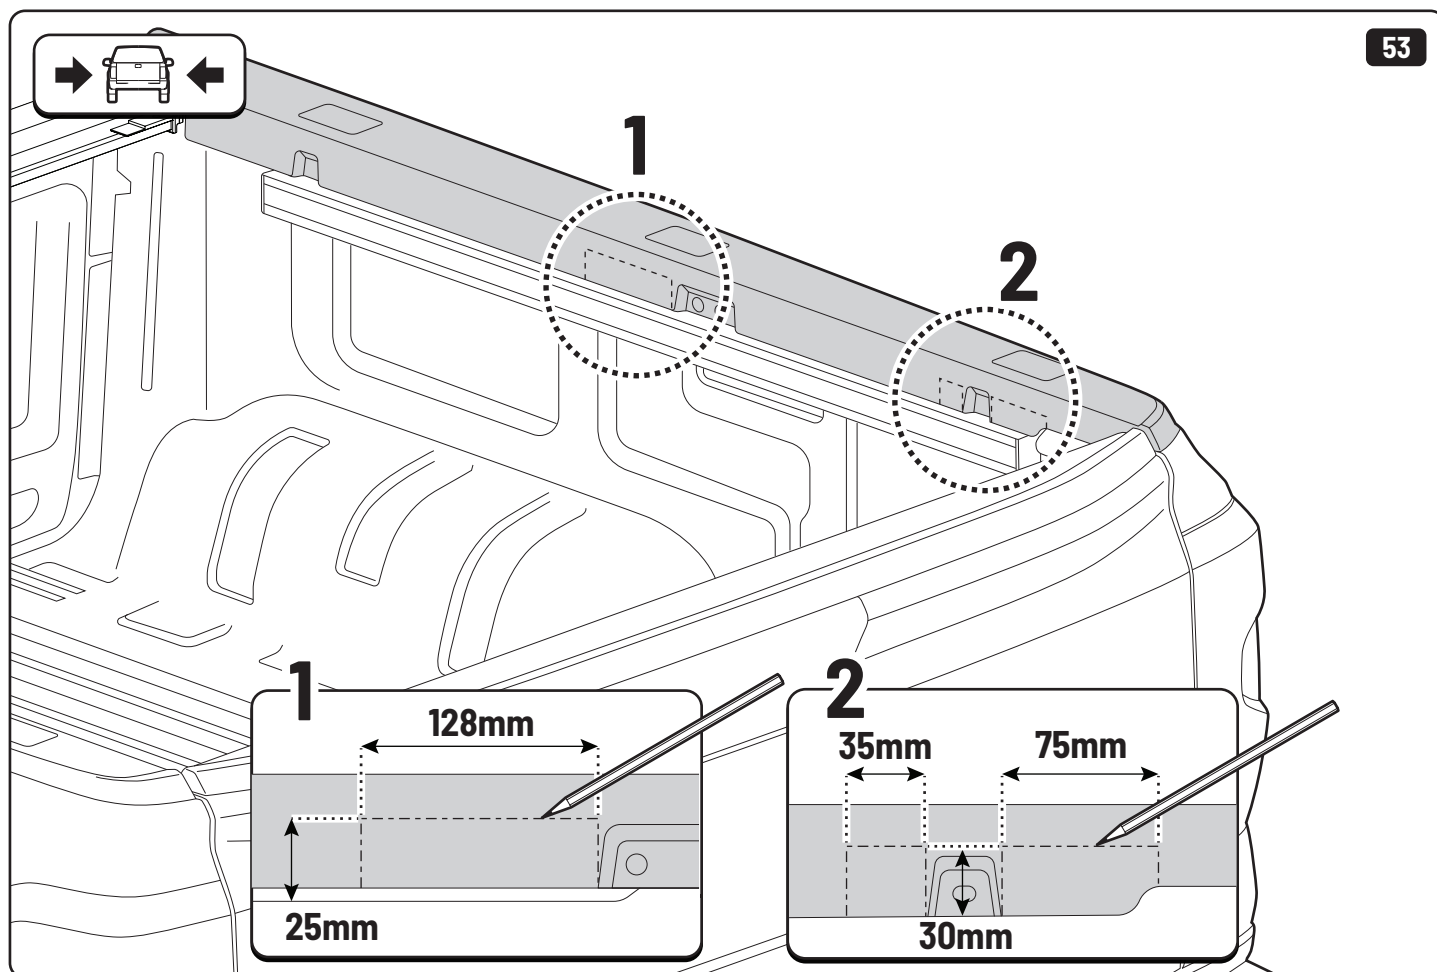
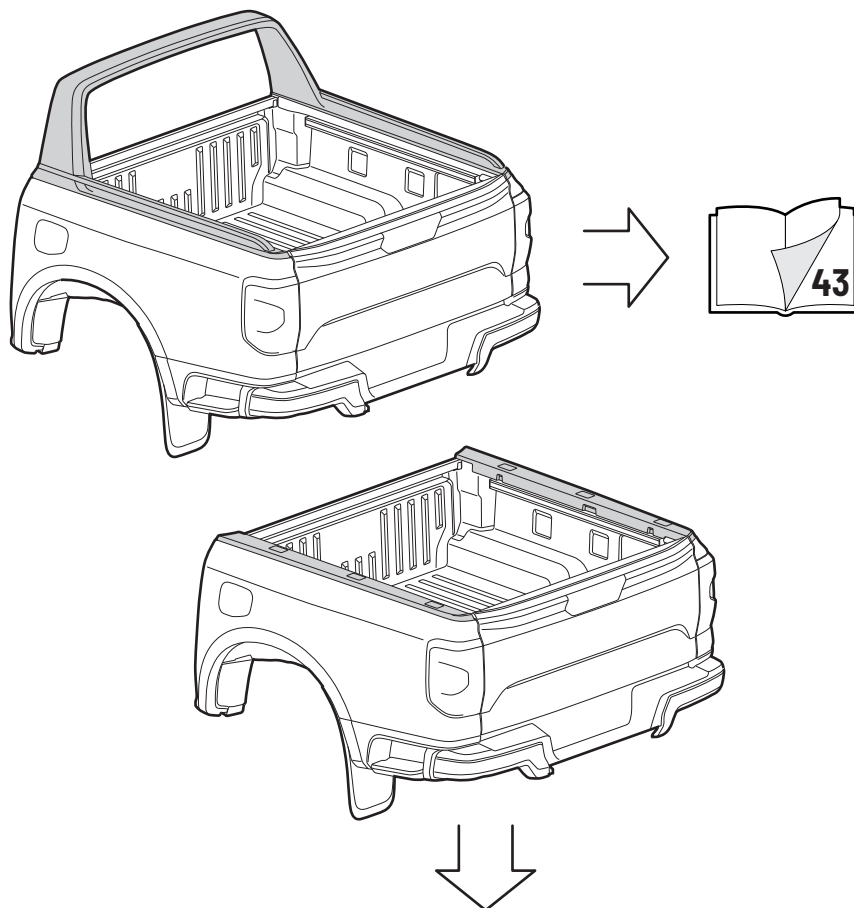









USE PROTECTIVE WOOD / PLASTIC BOARD

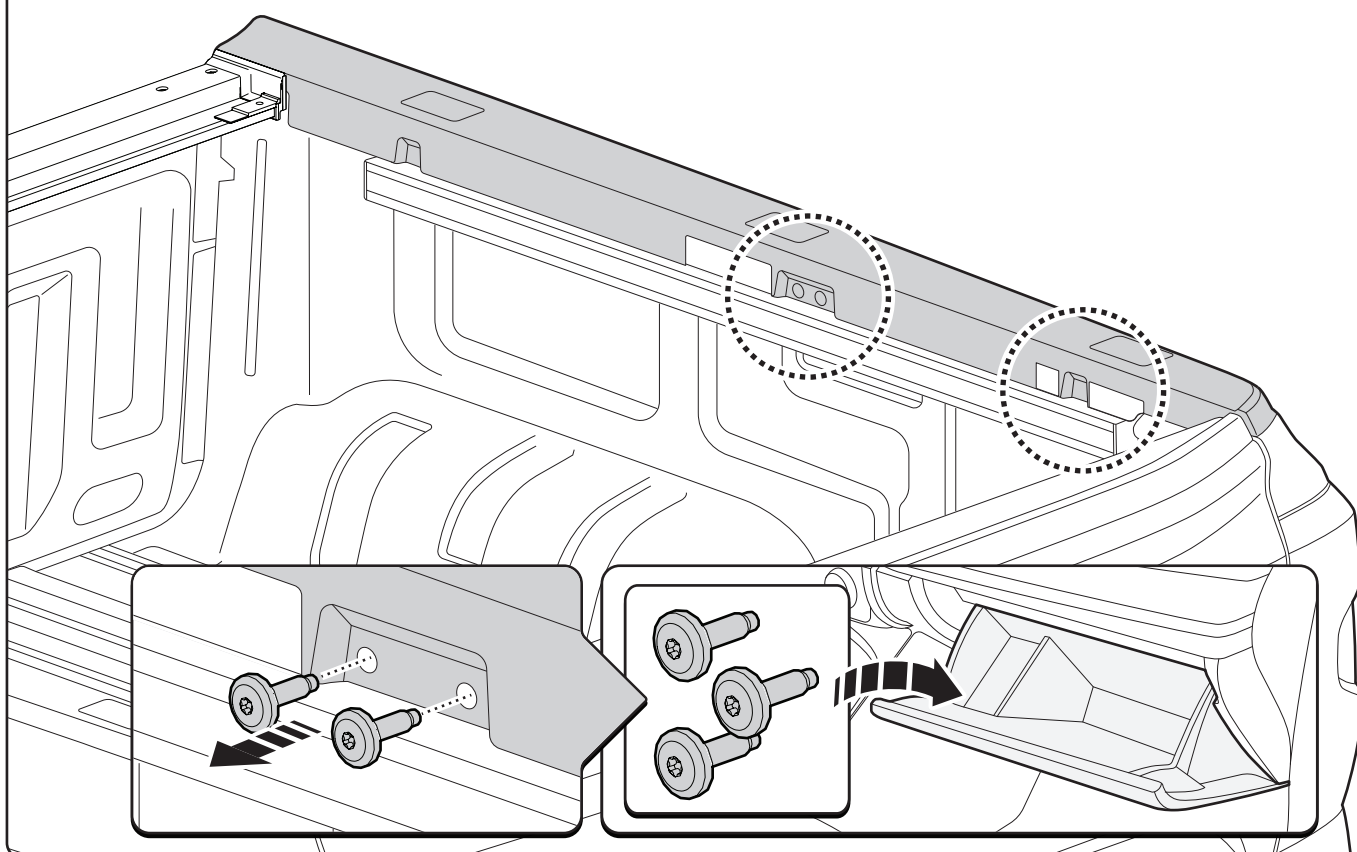
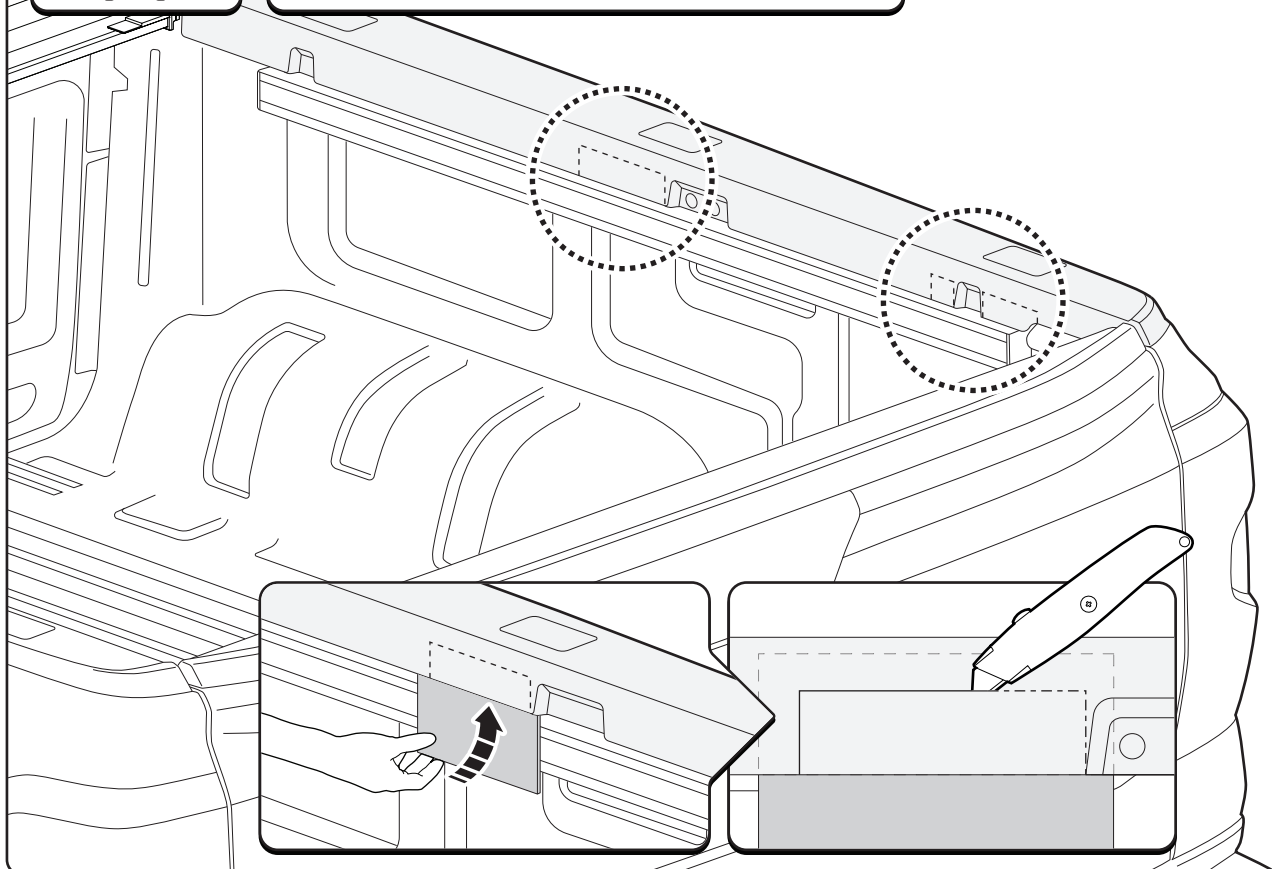


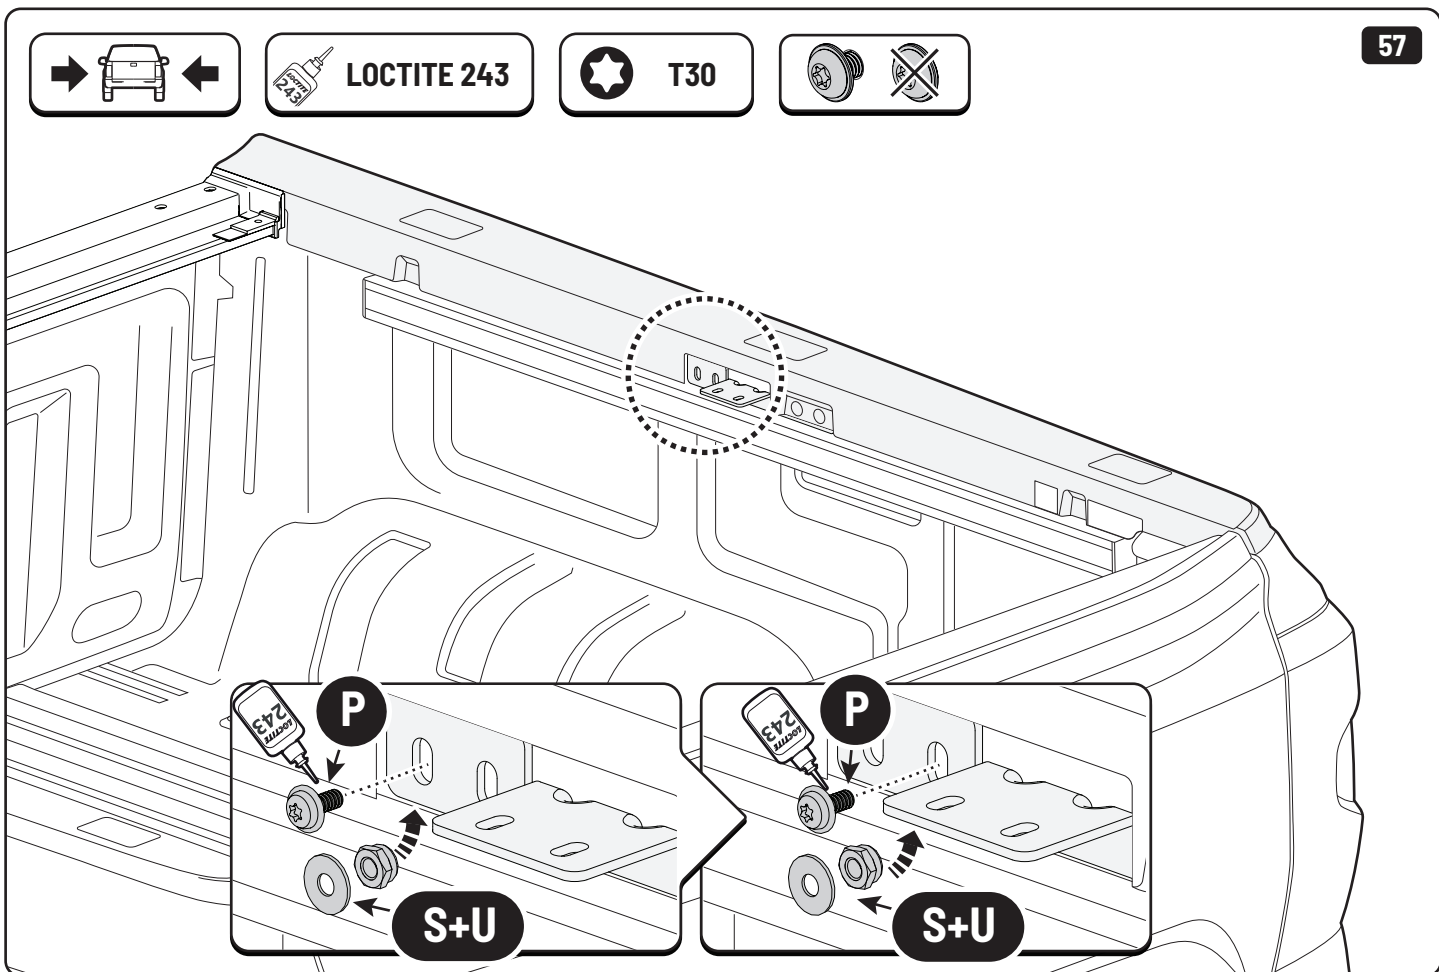
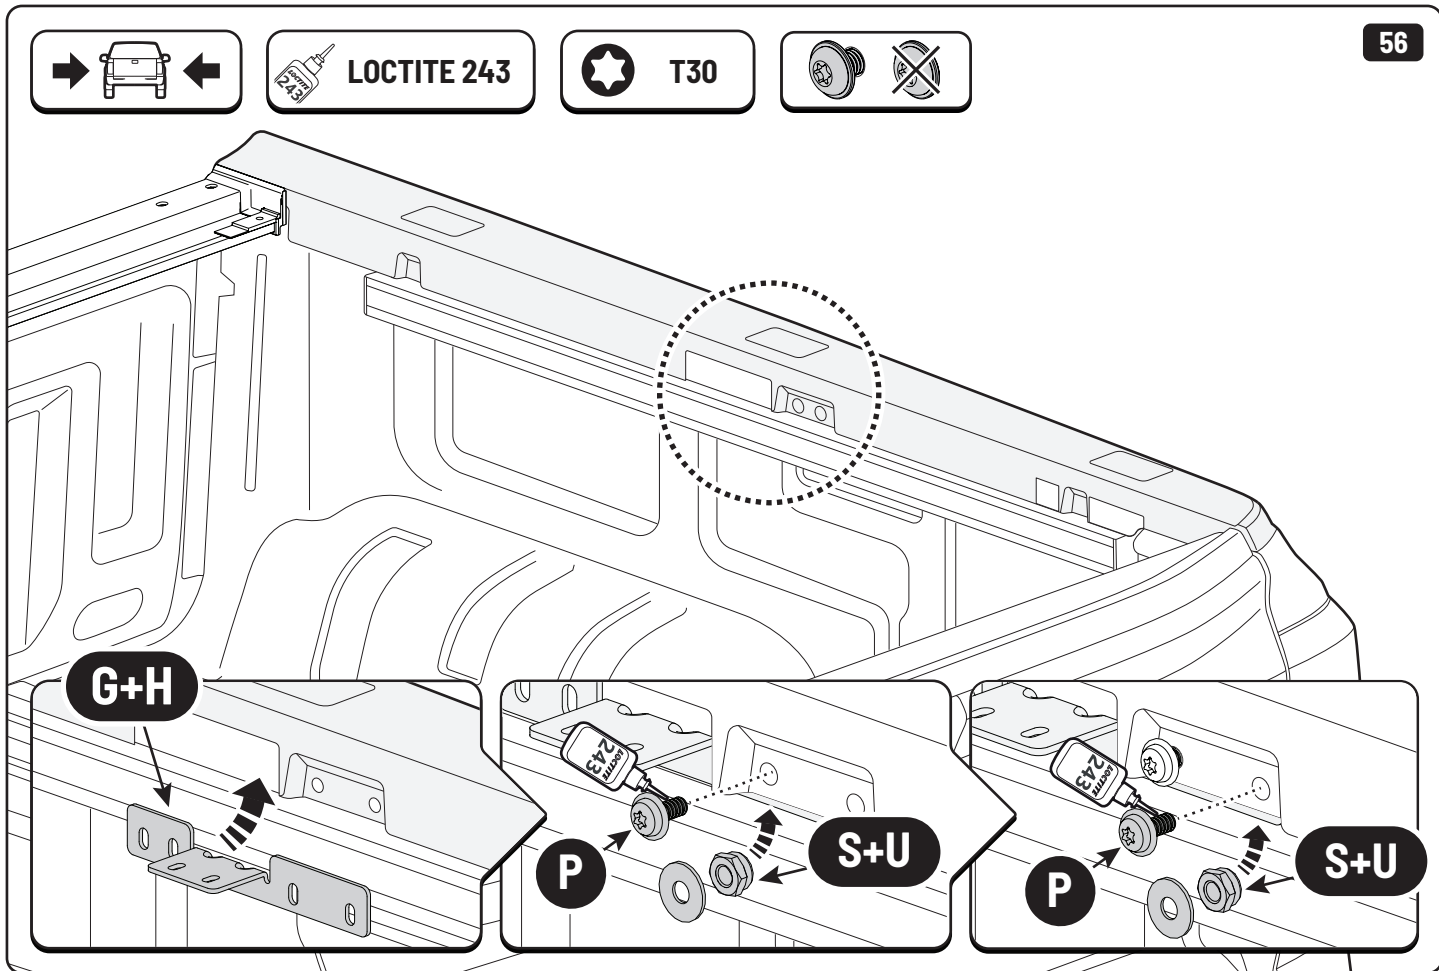


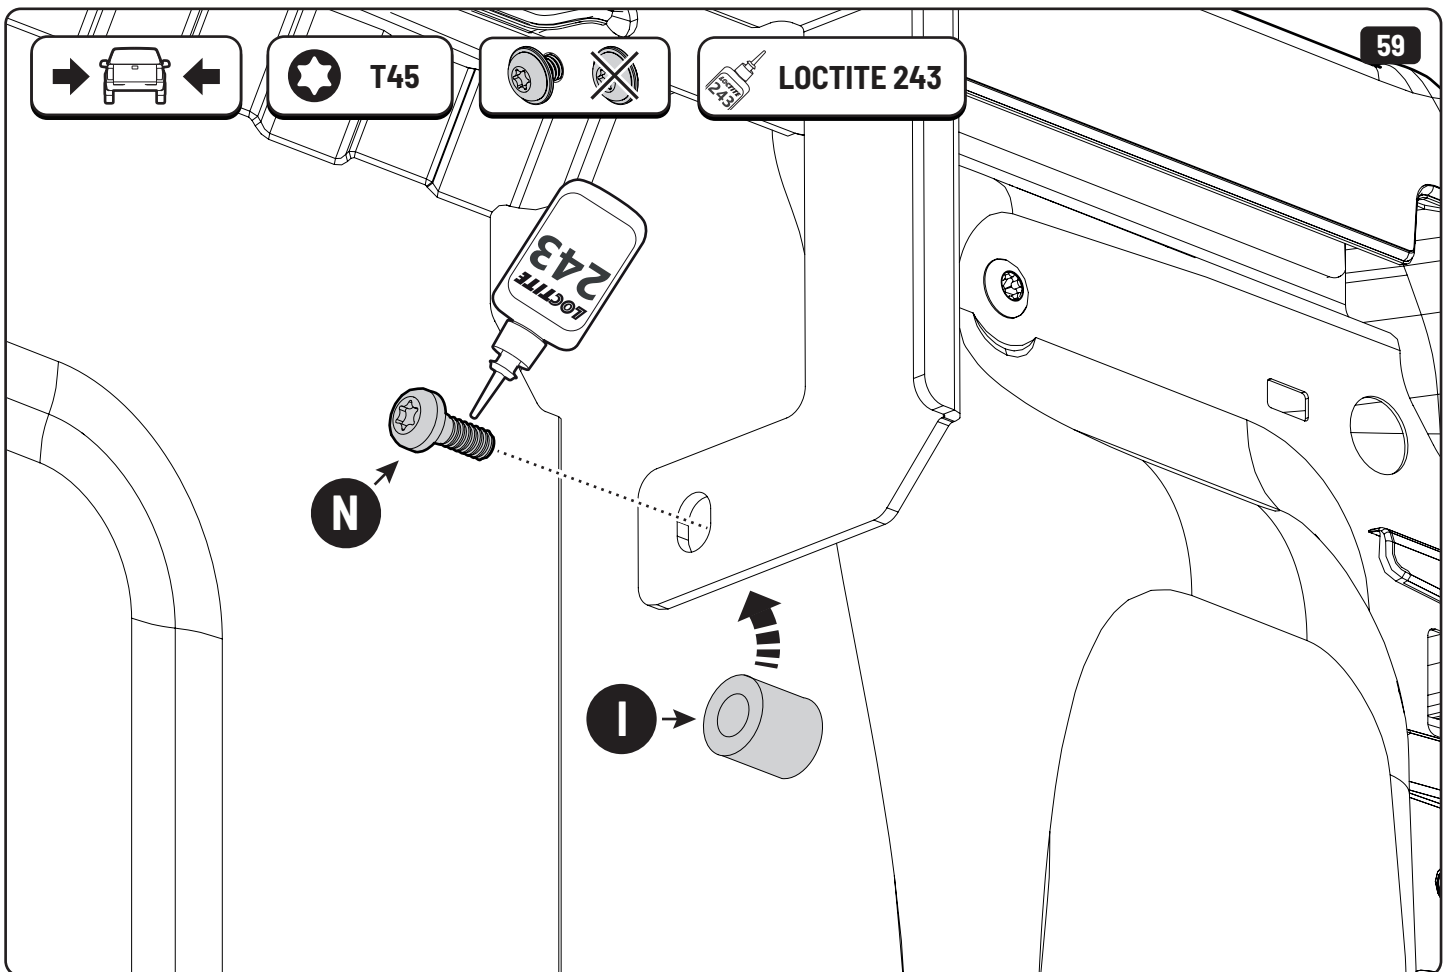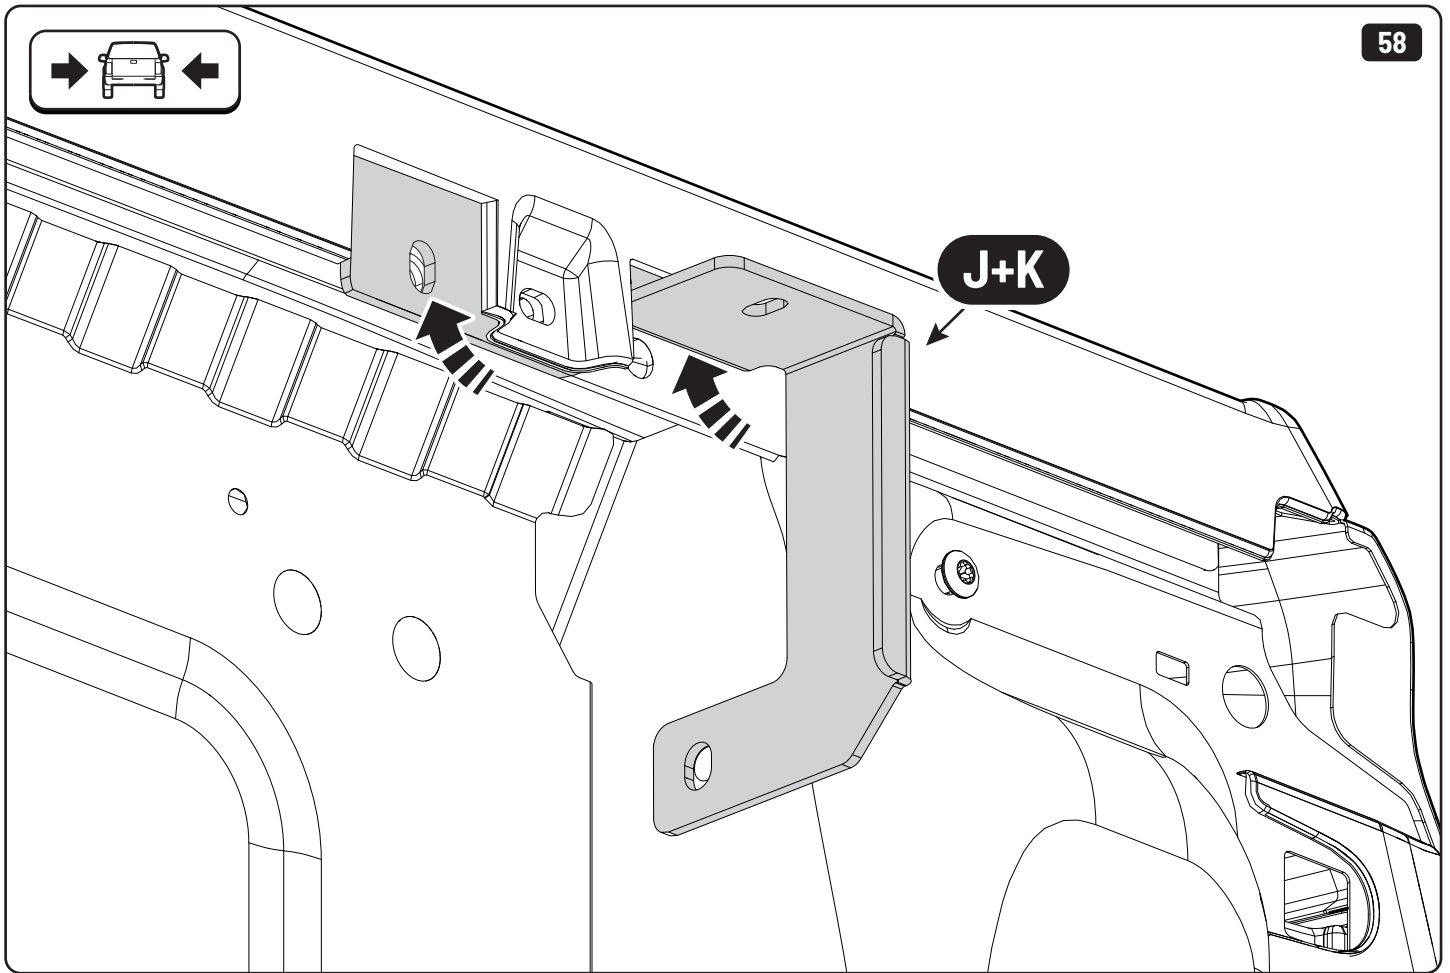

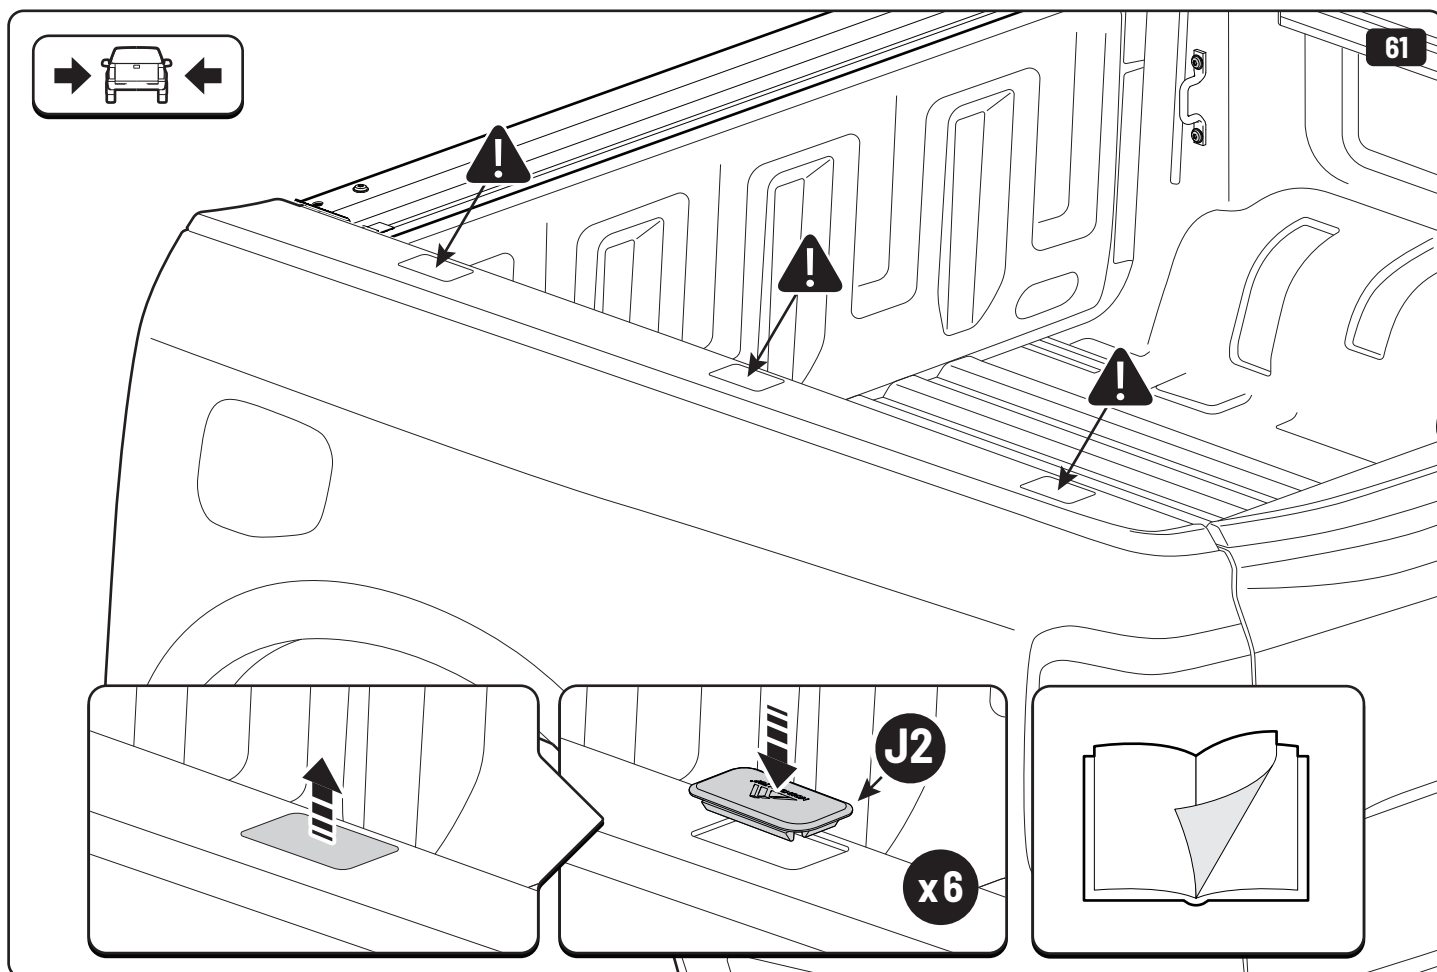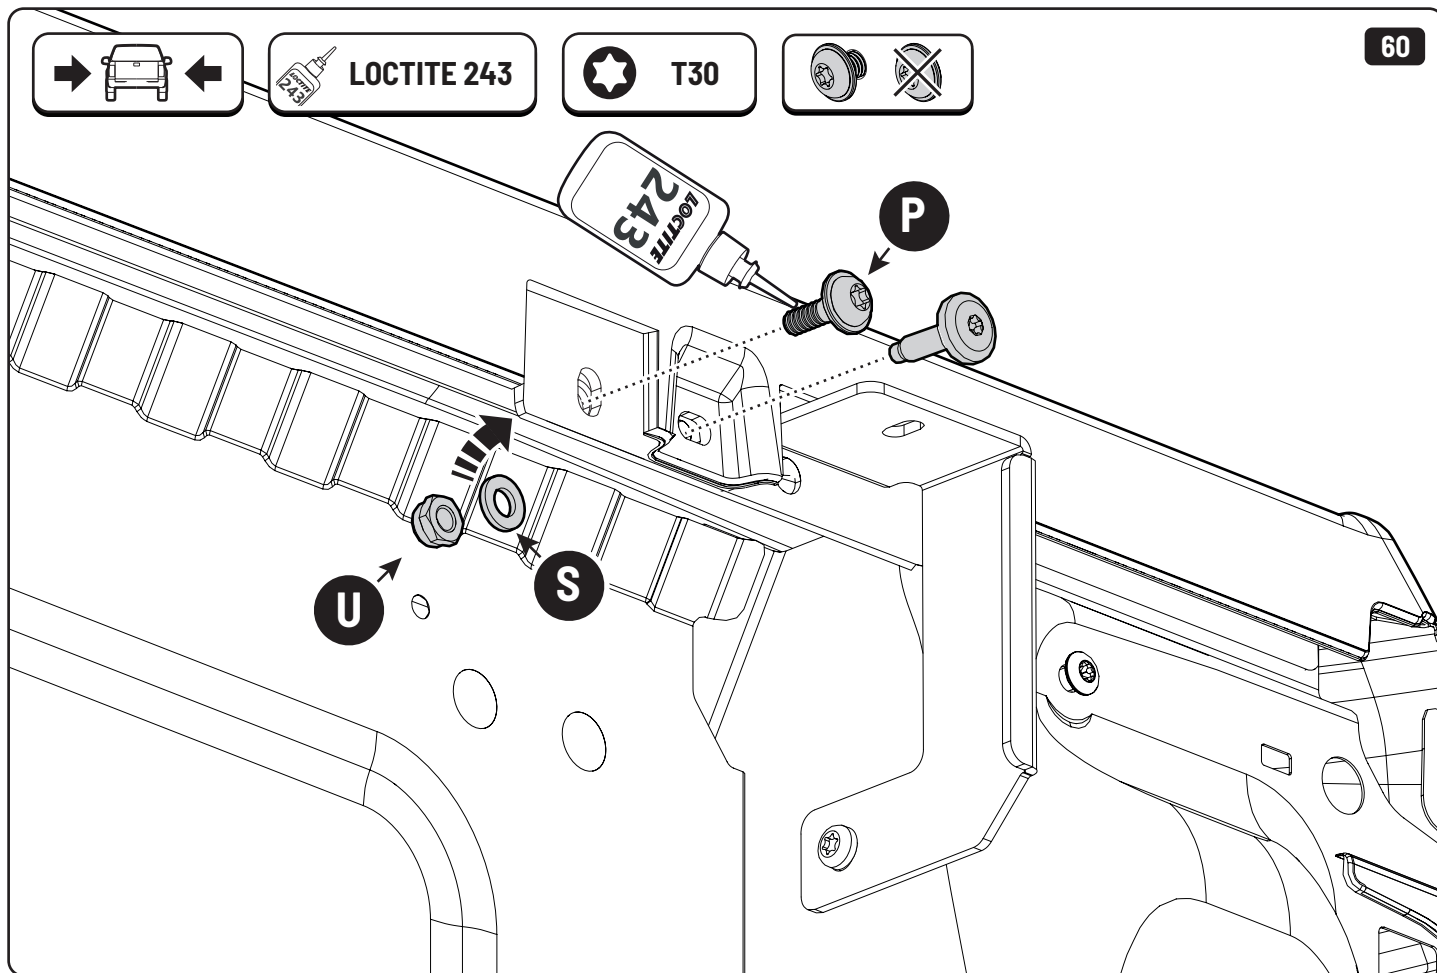

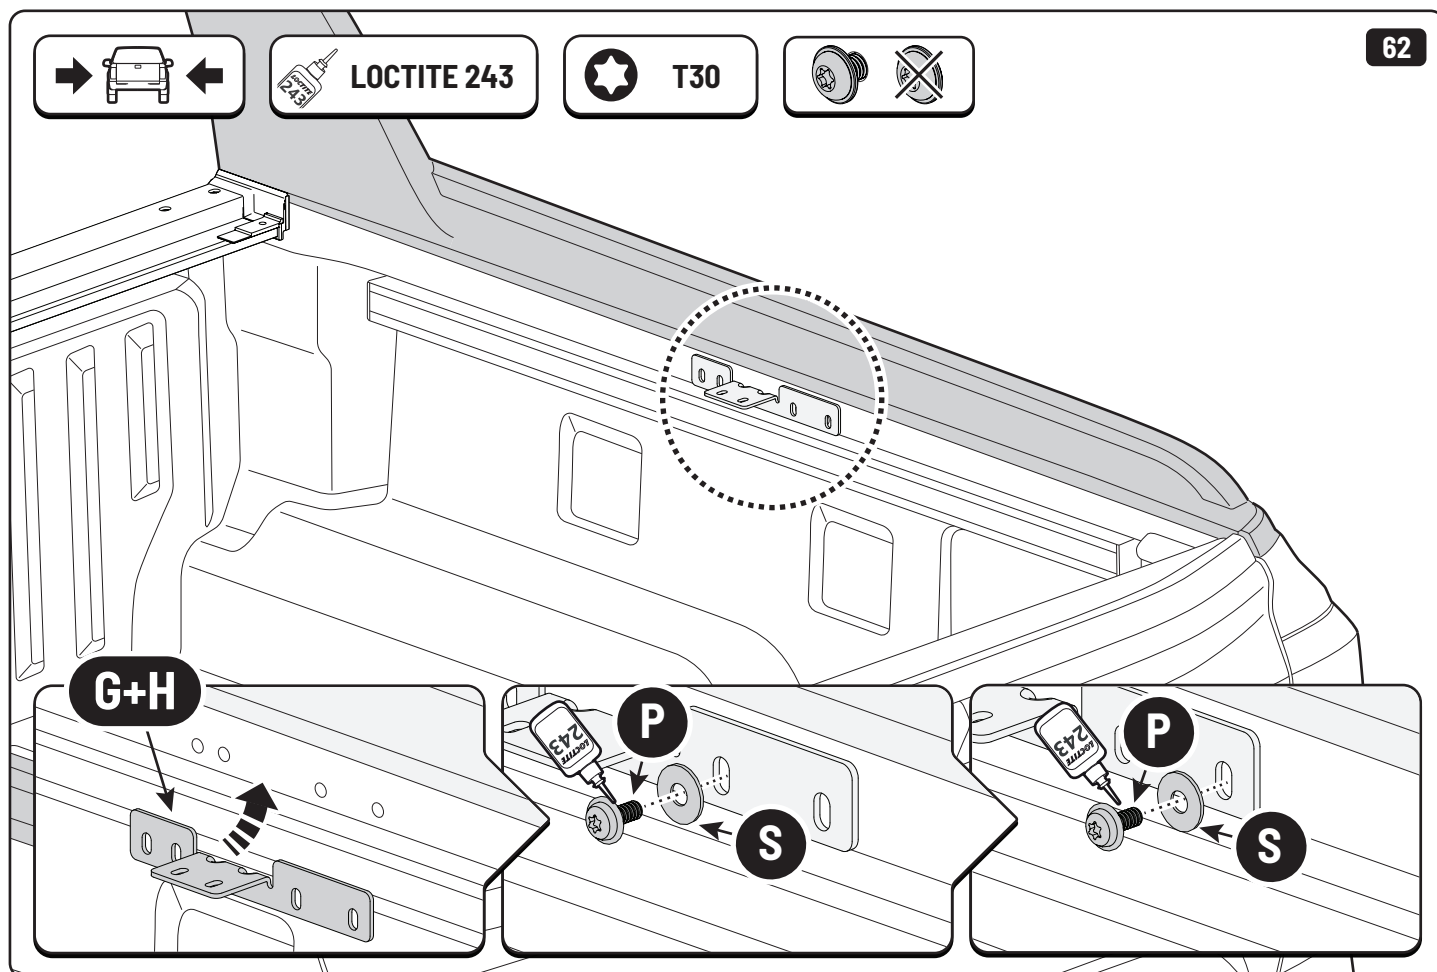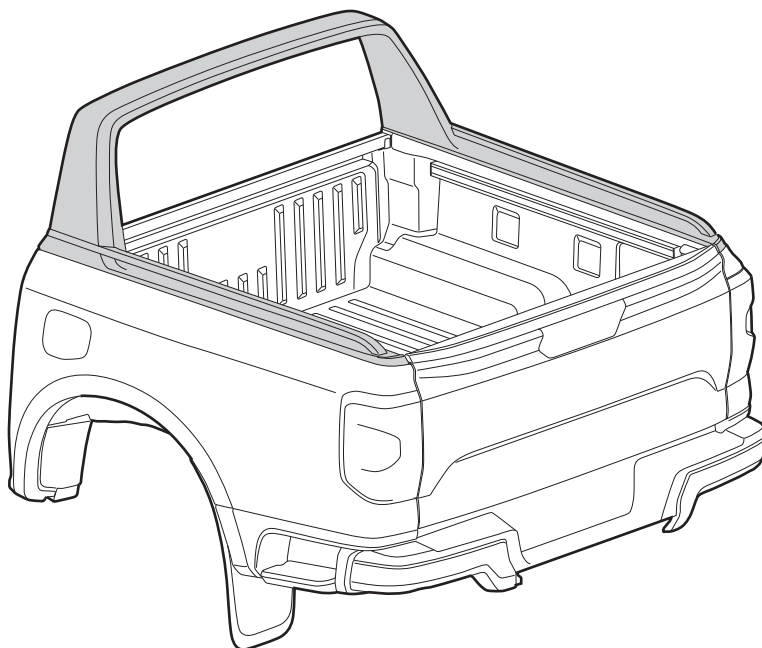


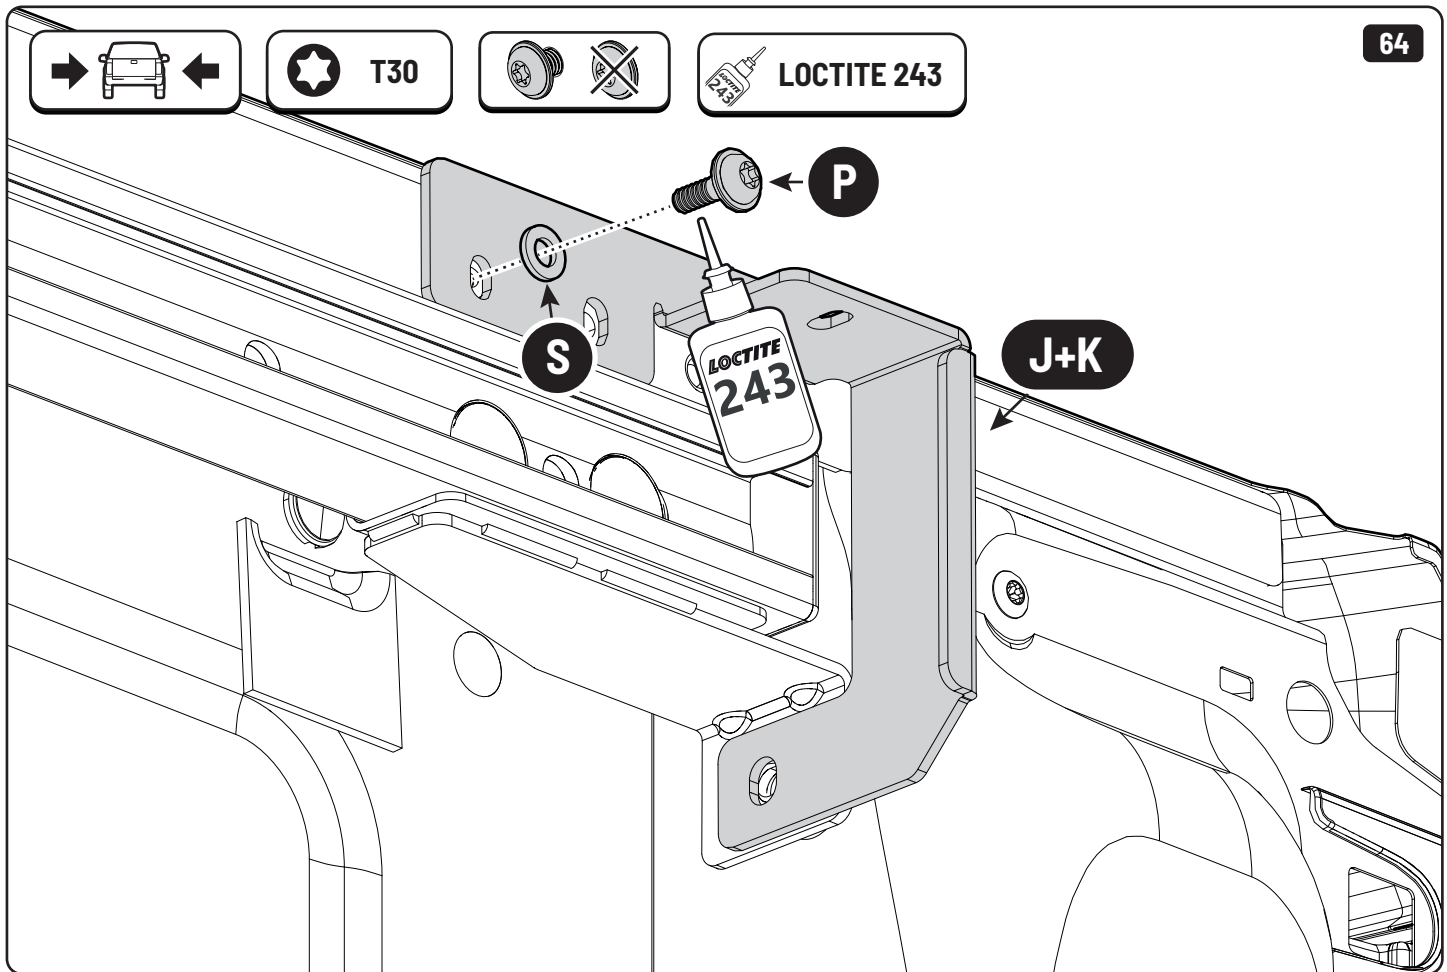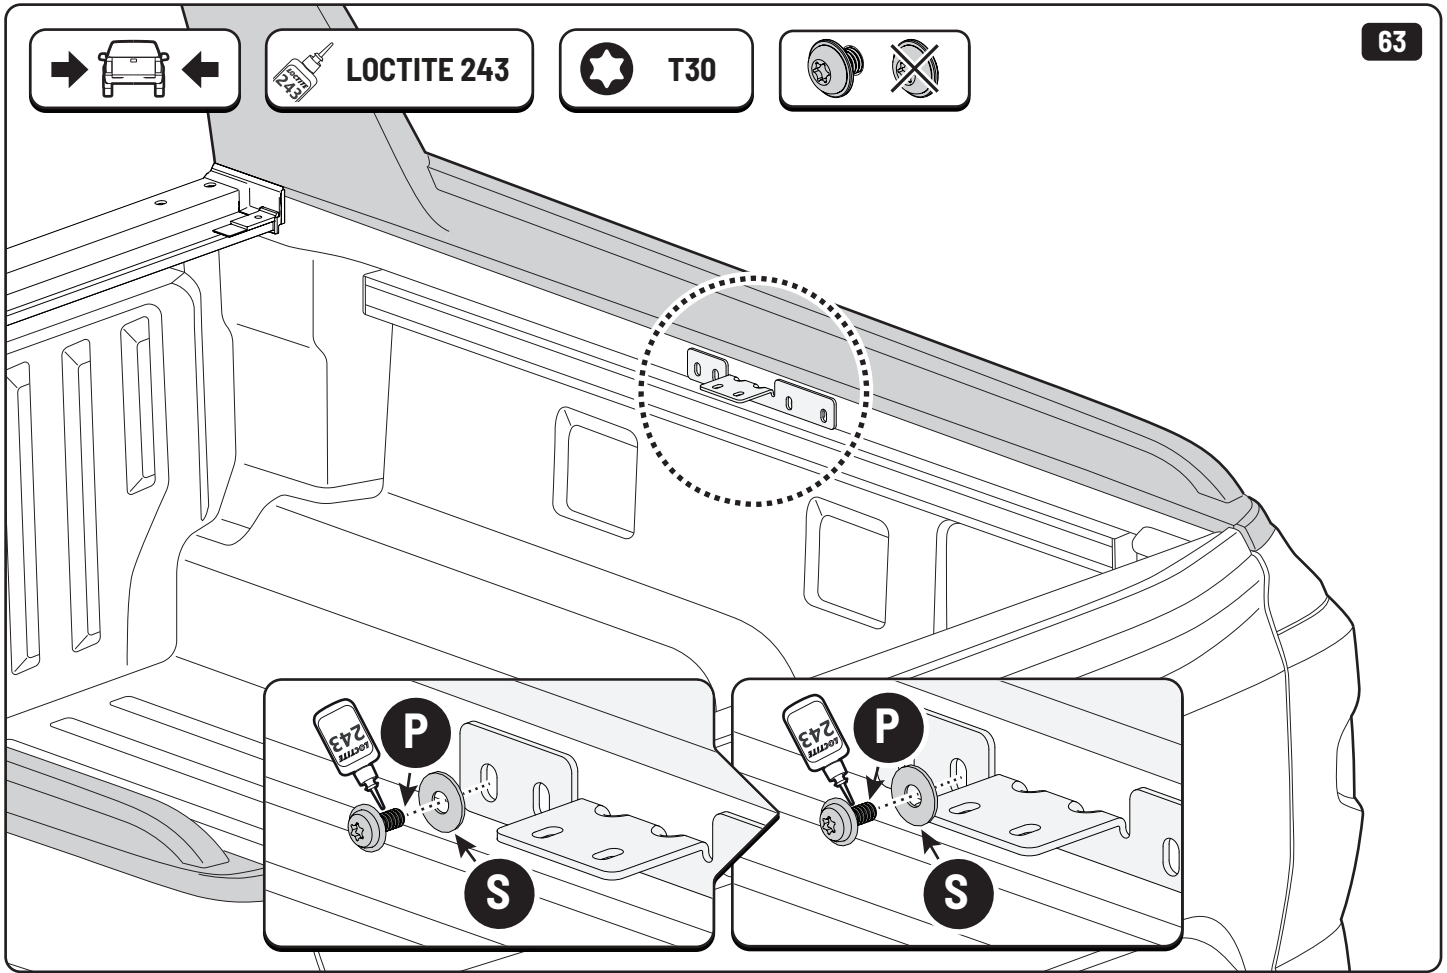

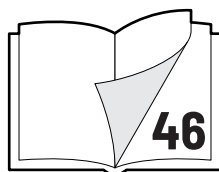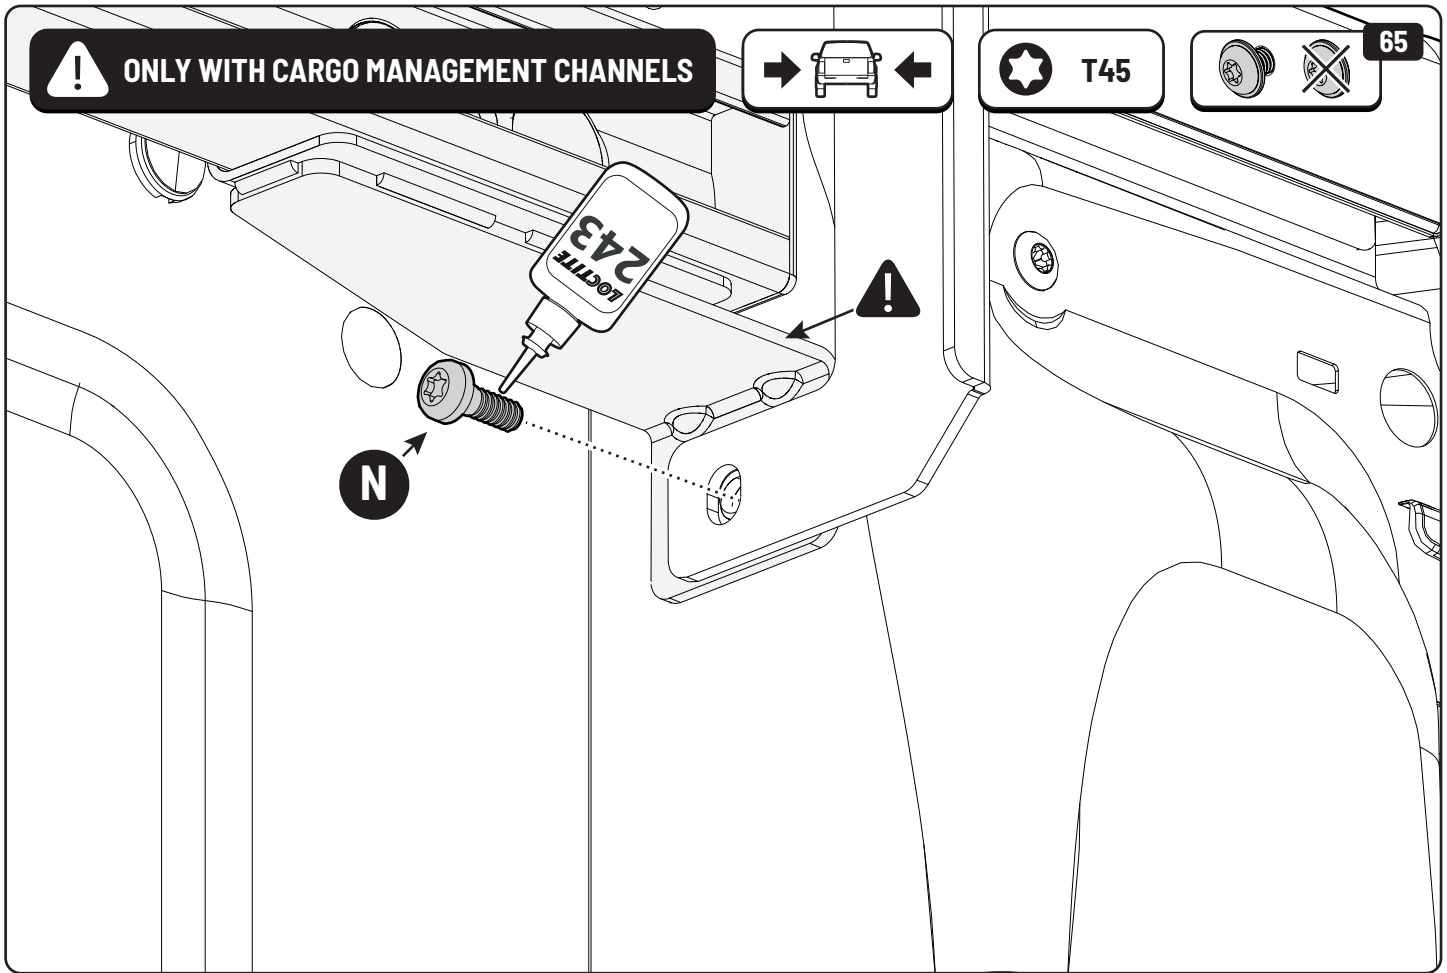








66


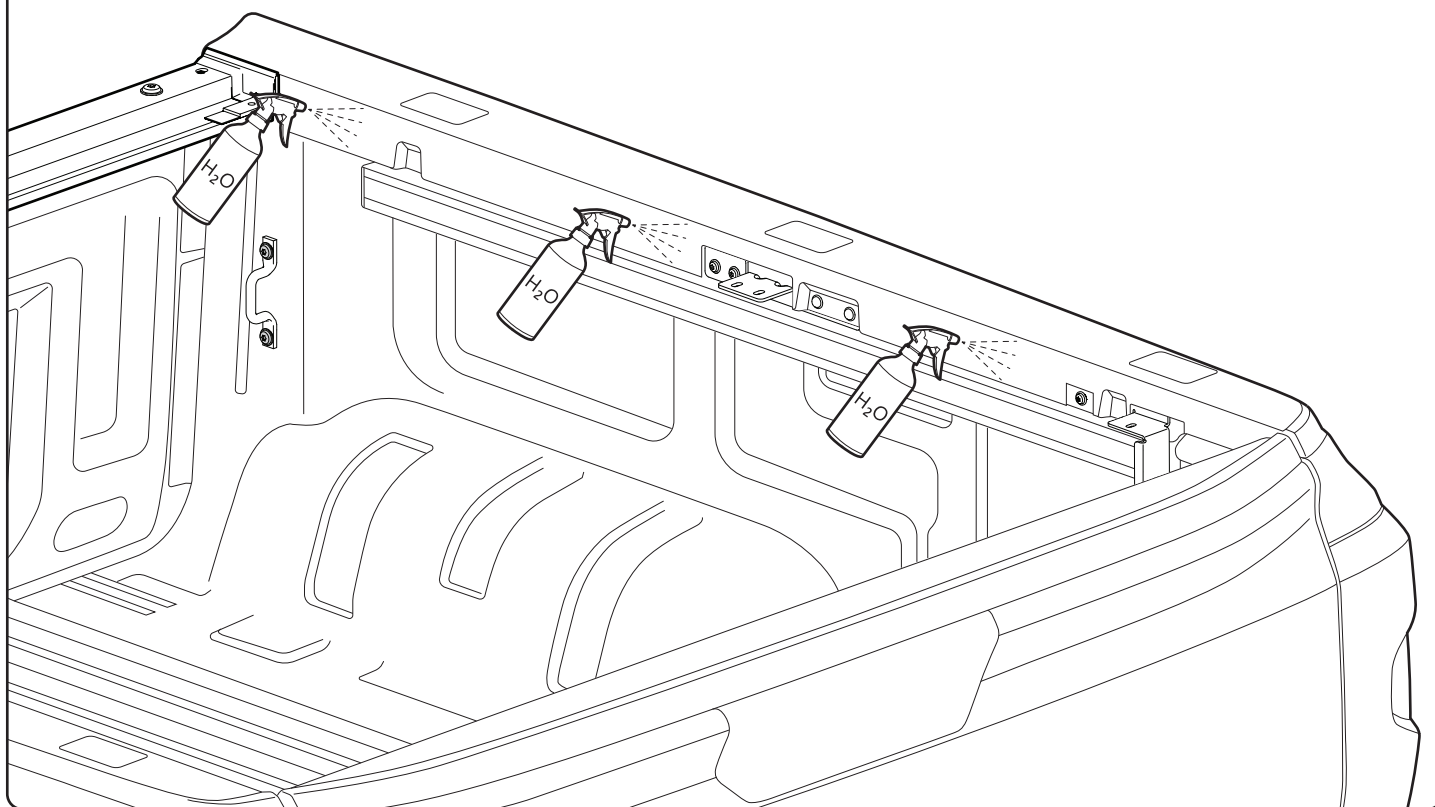


67

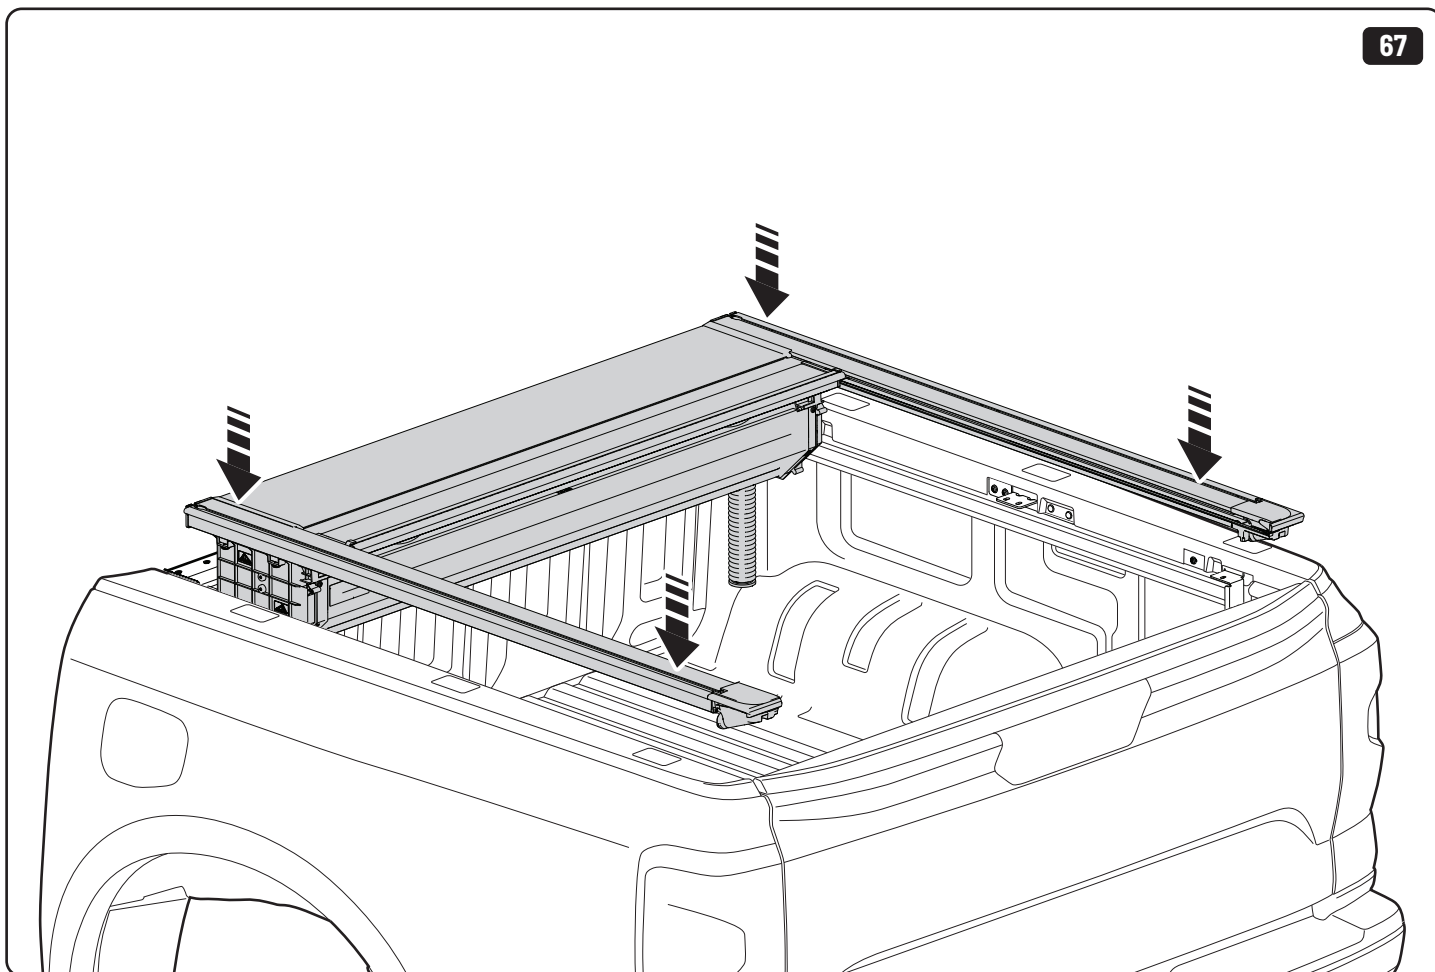

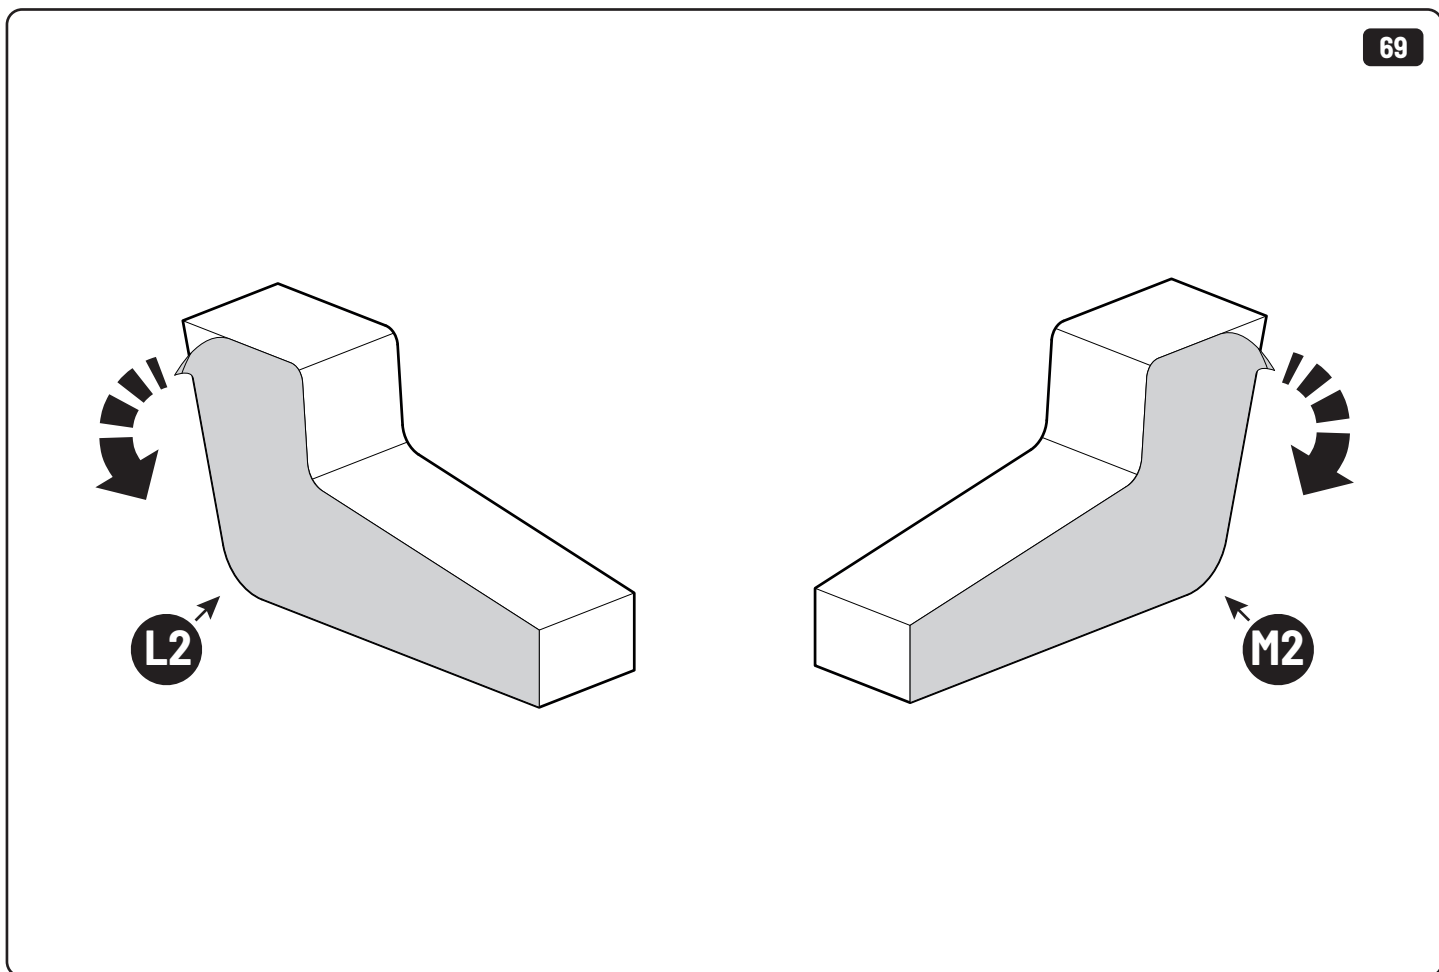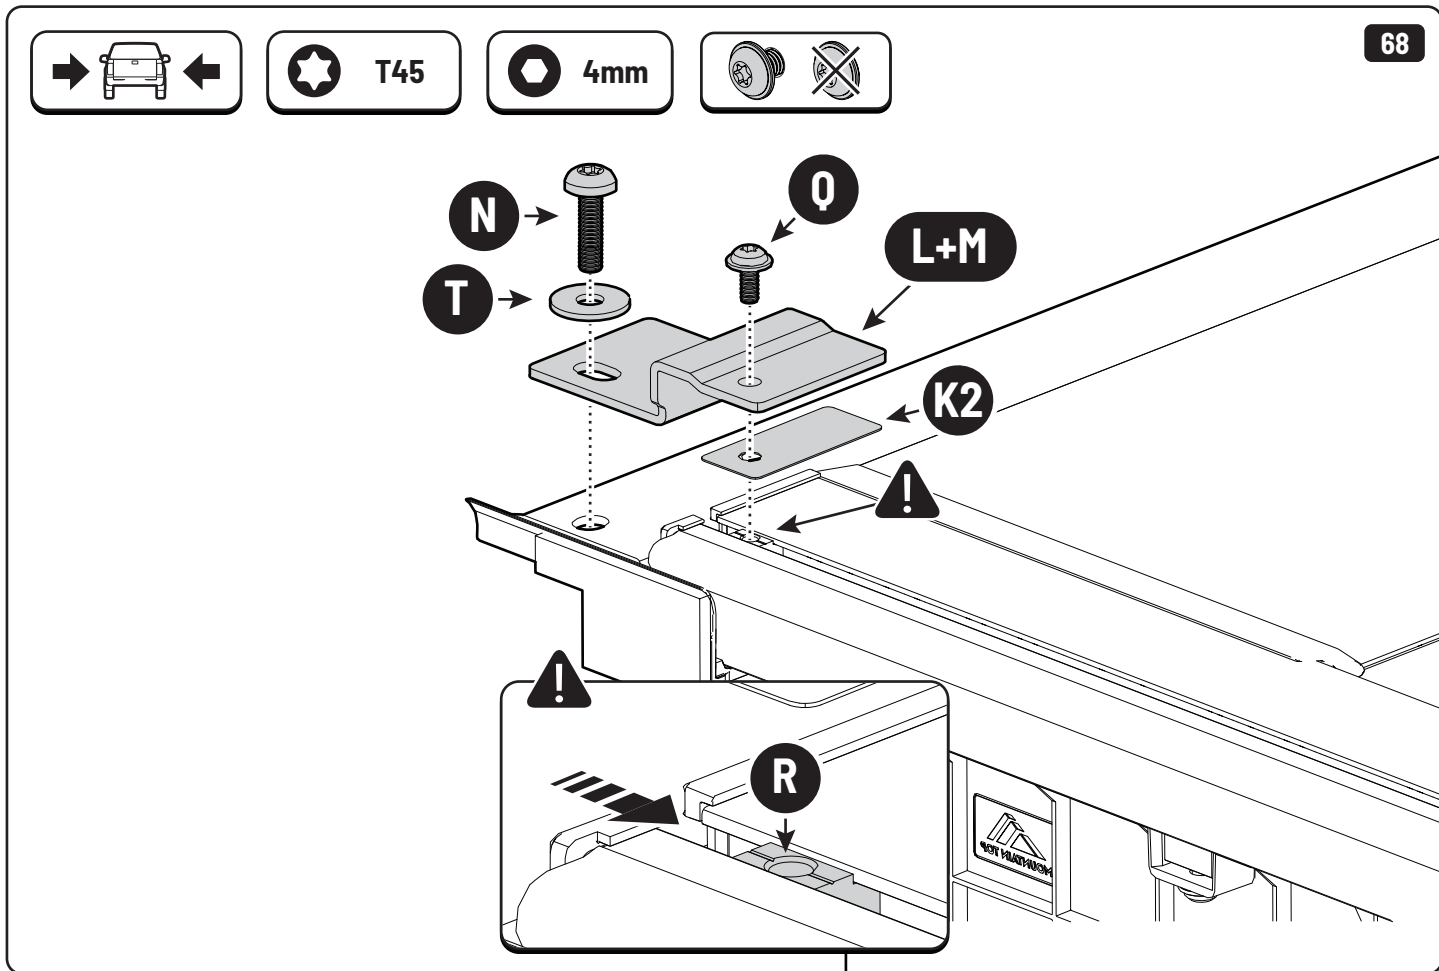

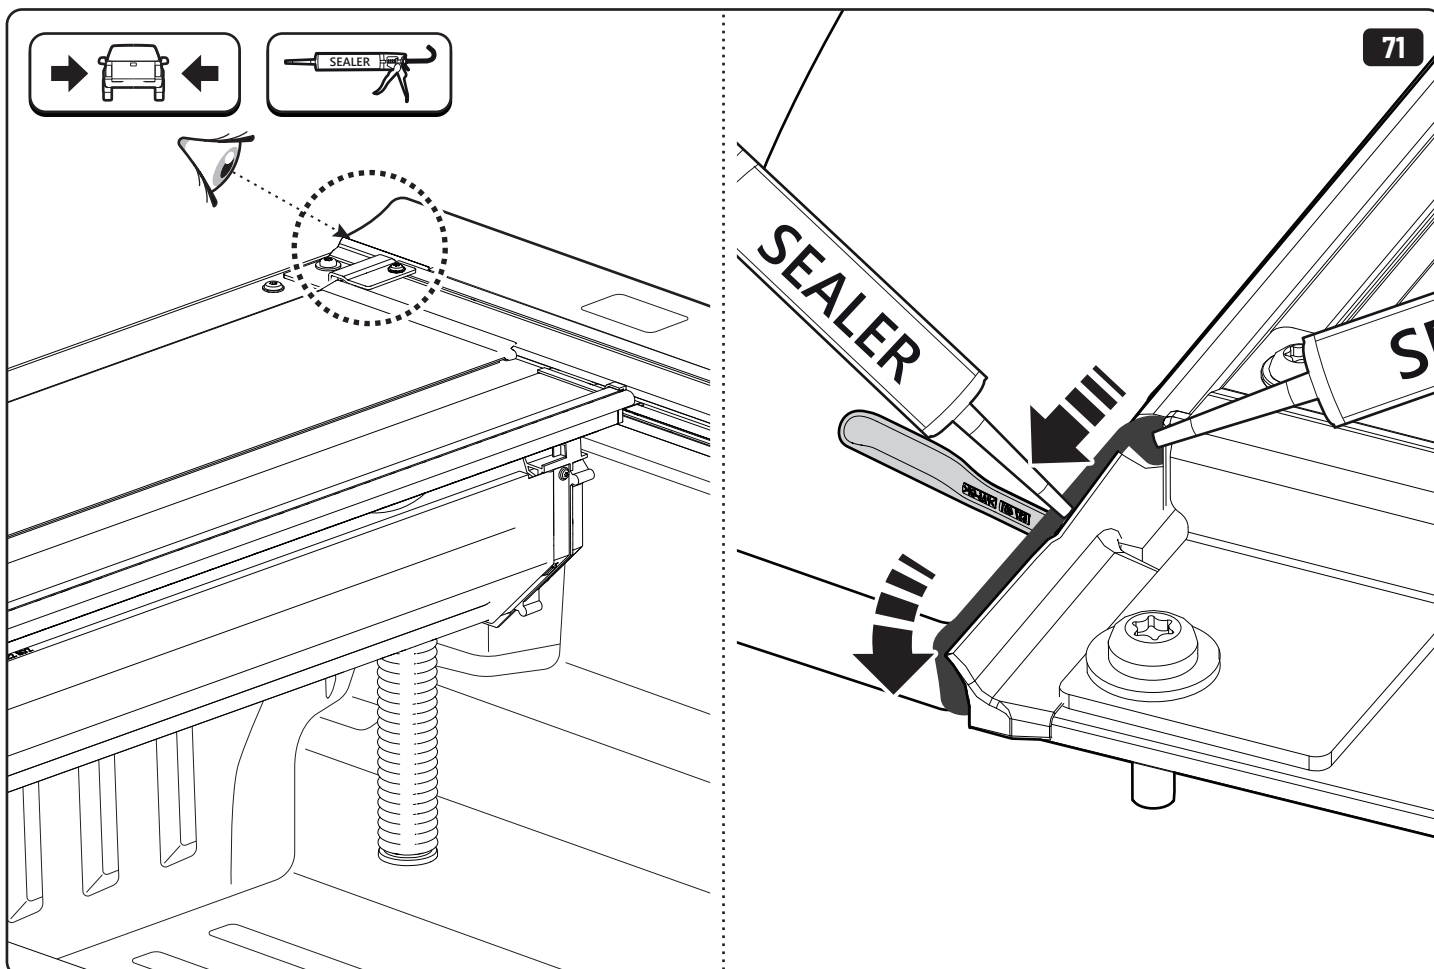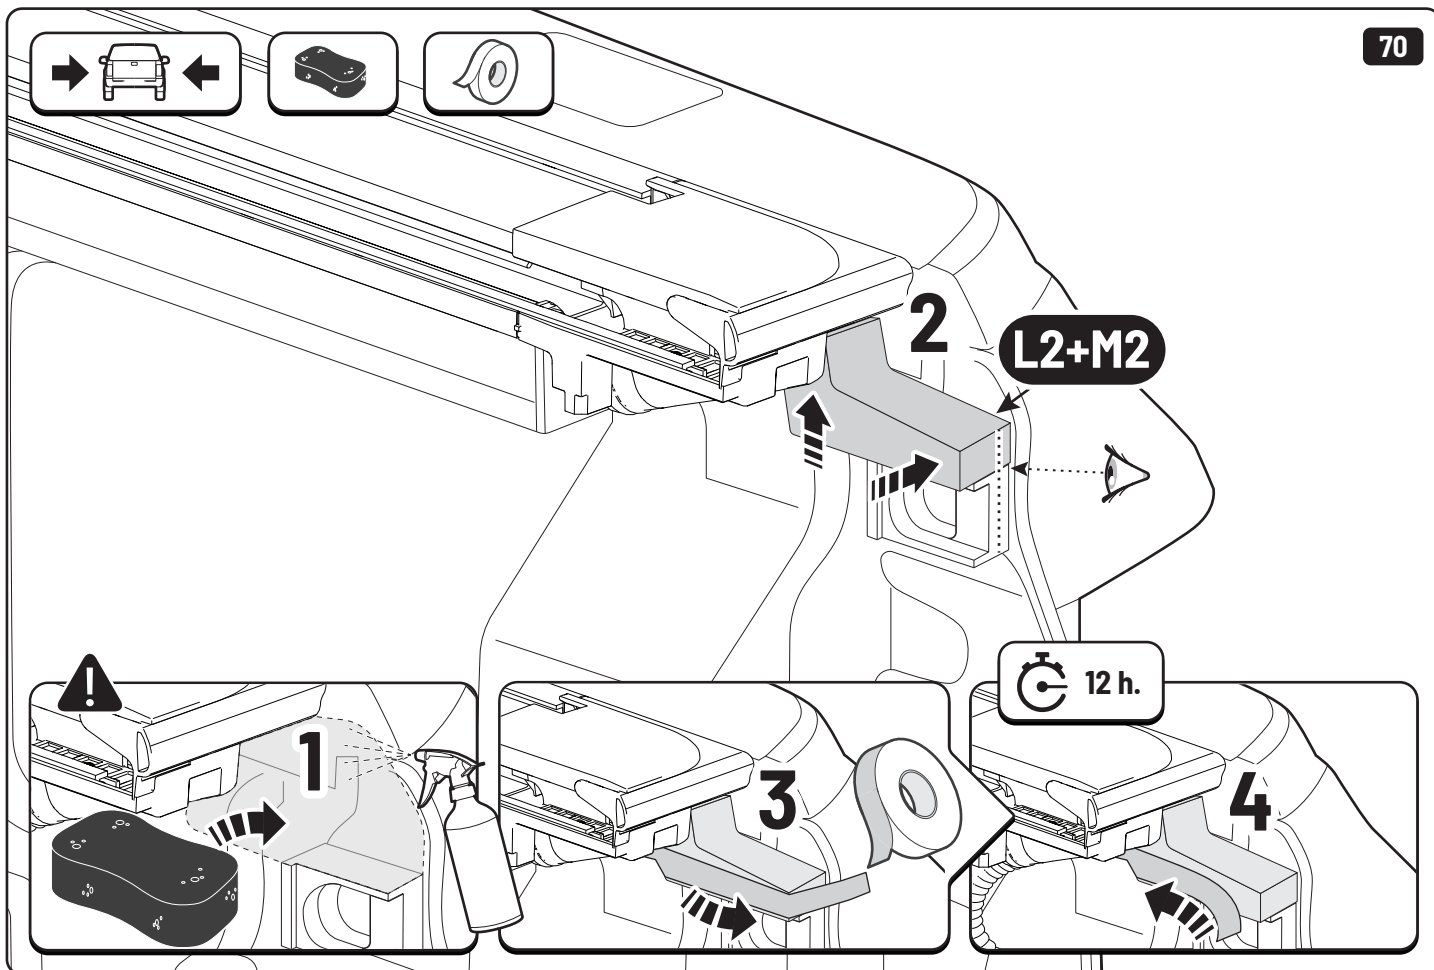

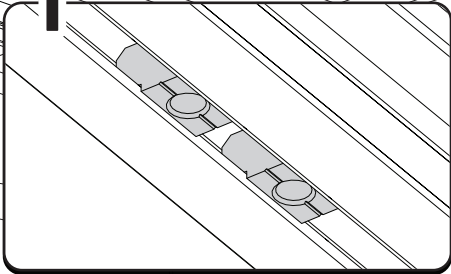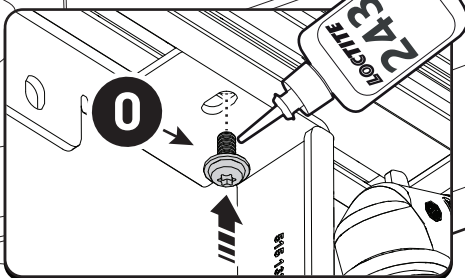
LOCTITE 243



D

F




C = D = E



T30

10 Nm

76

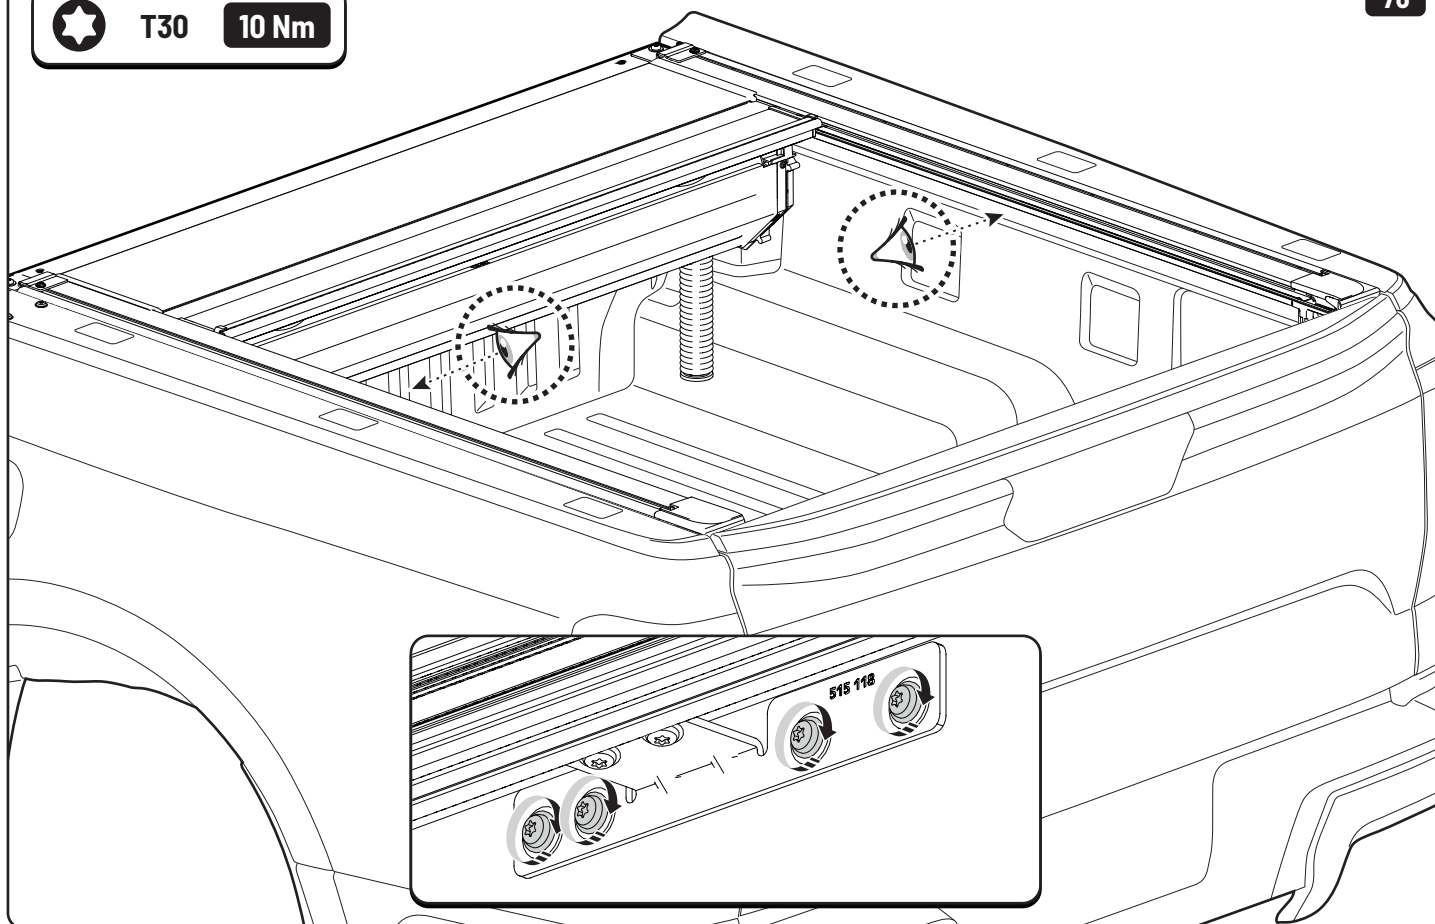

T30


10 Nm







T45



15 Nm





77


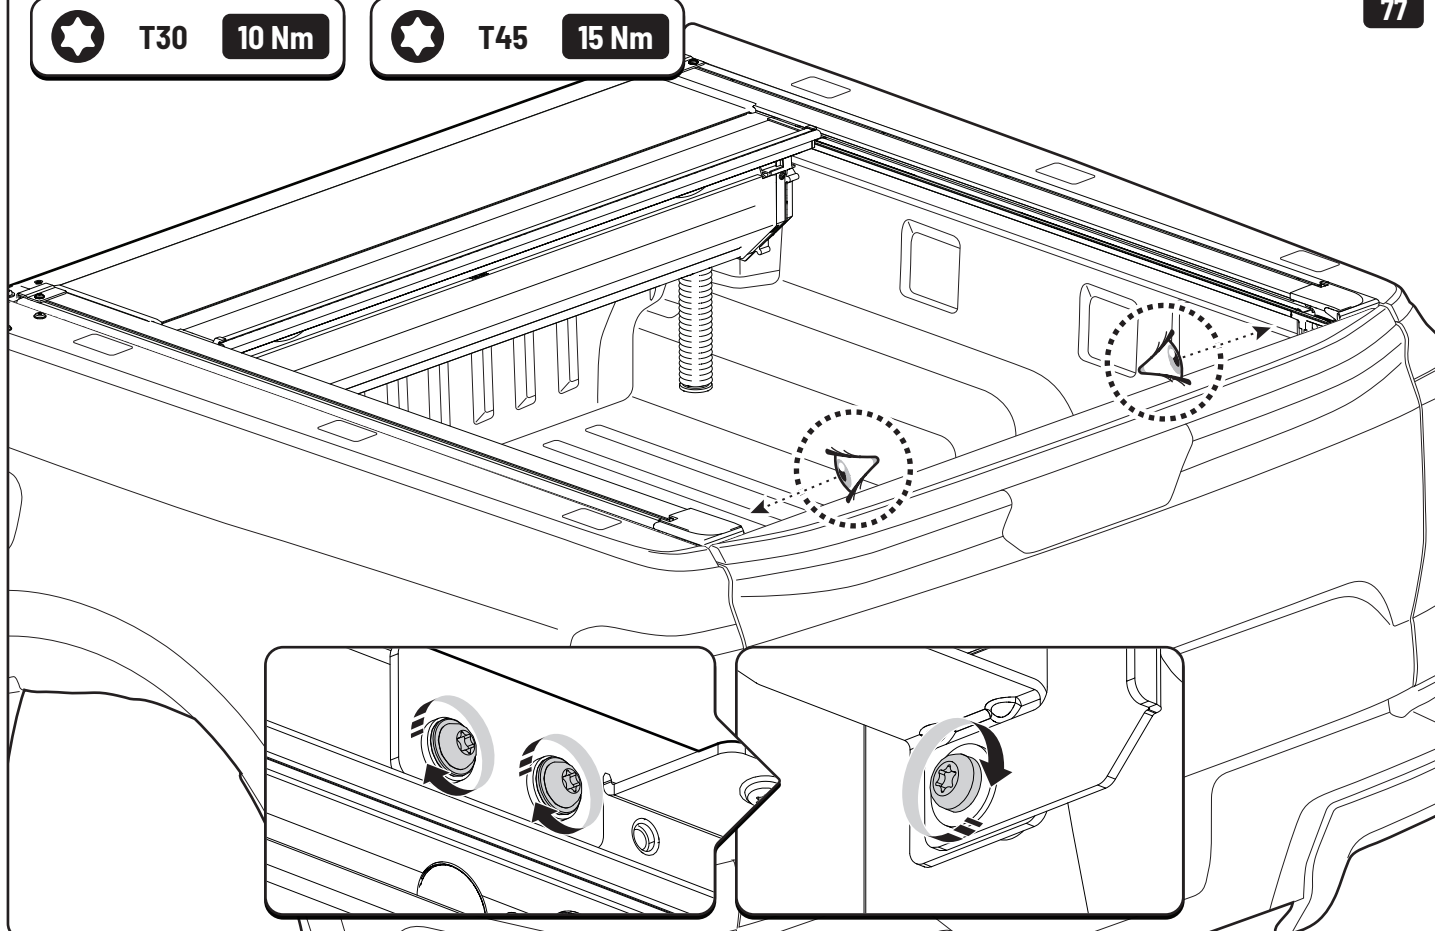


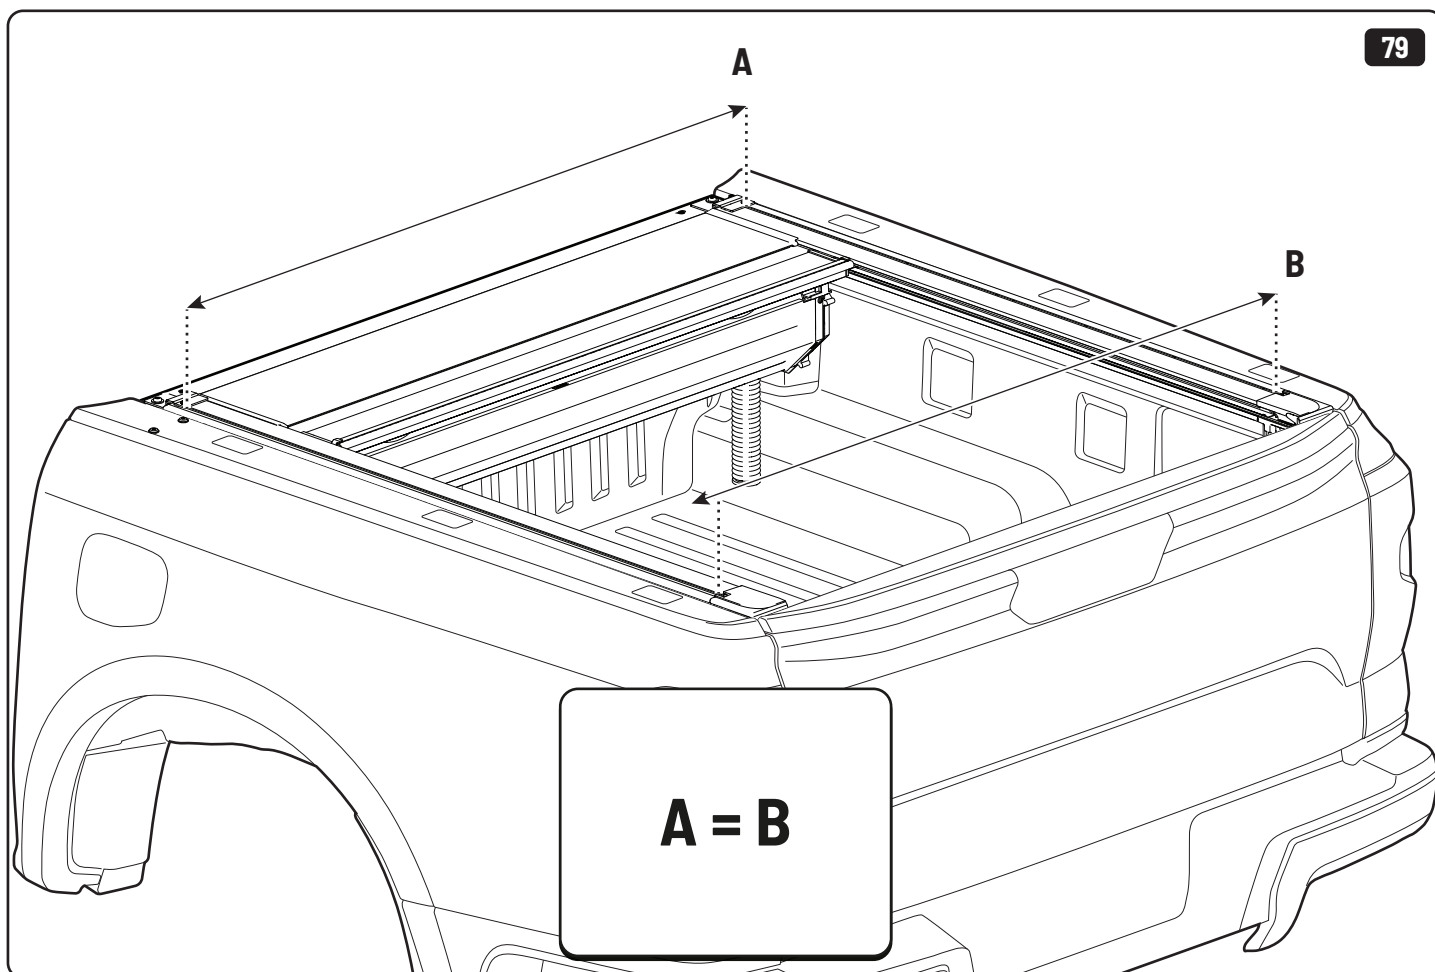
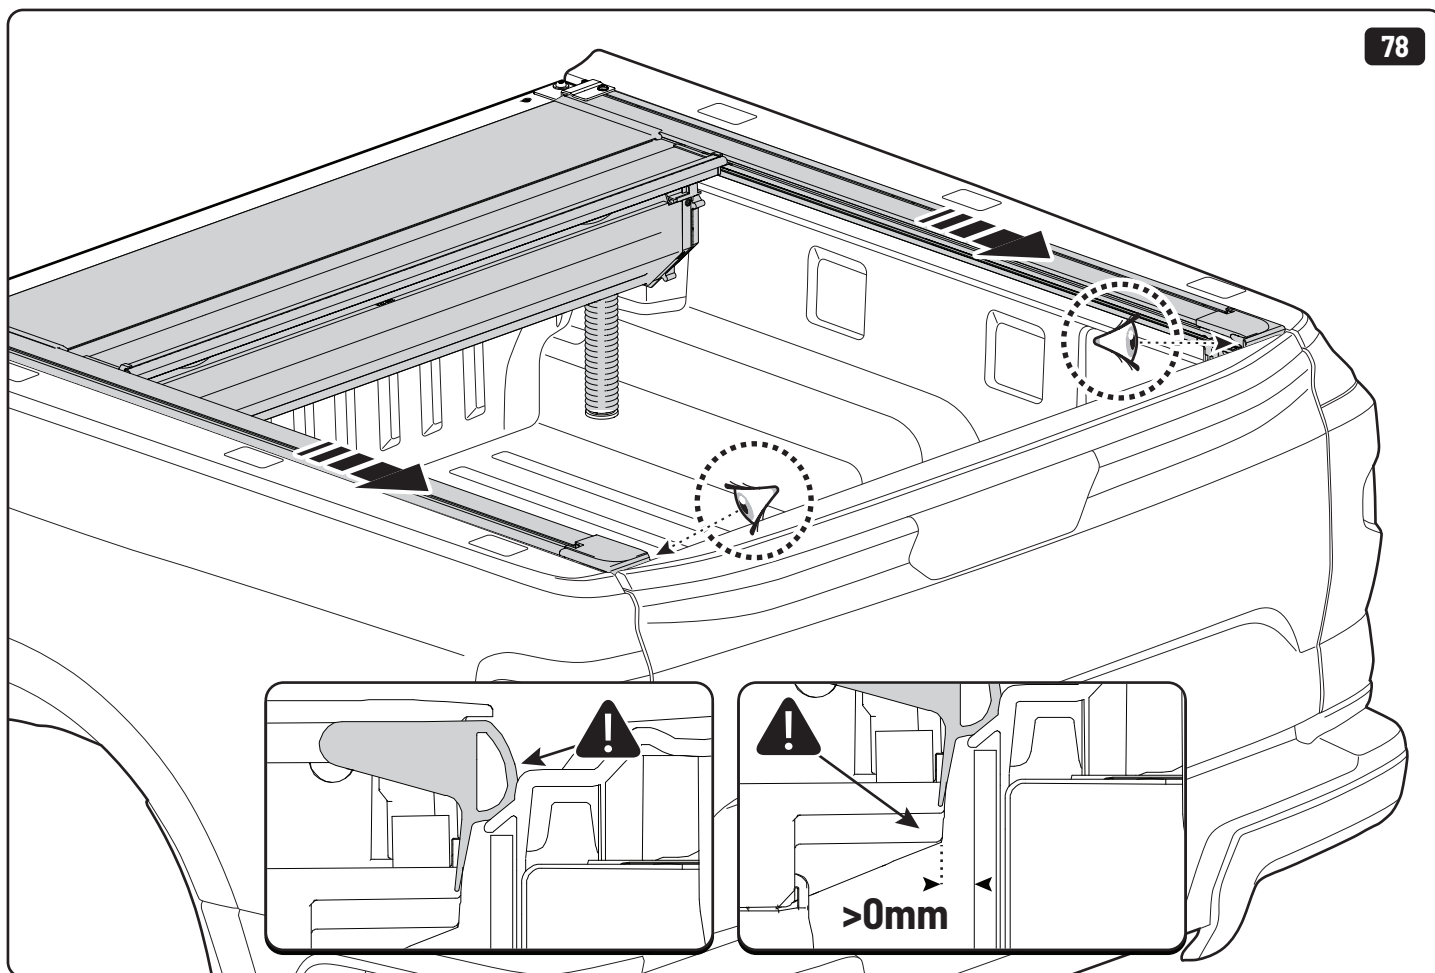



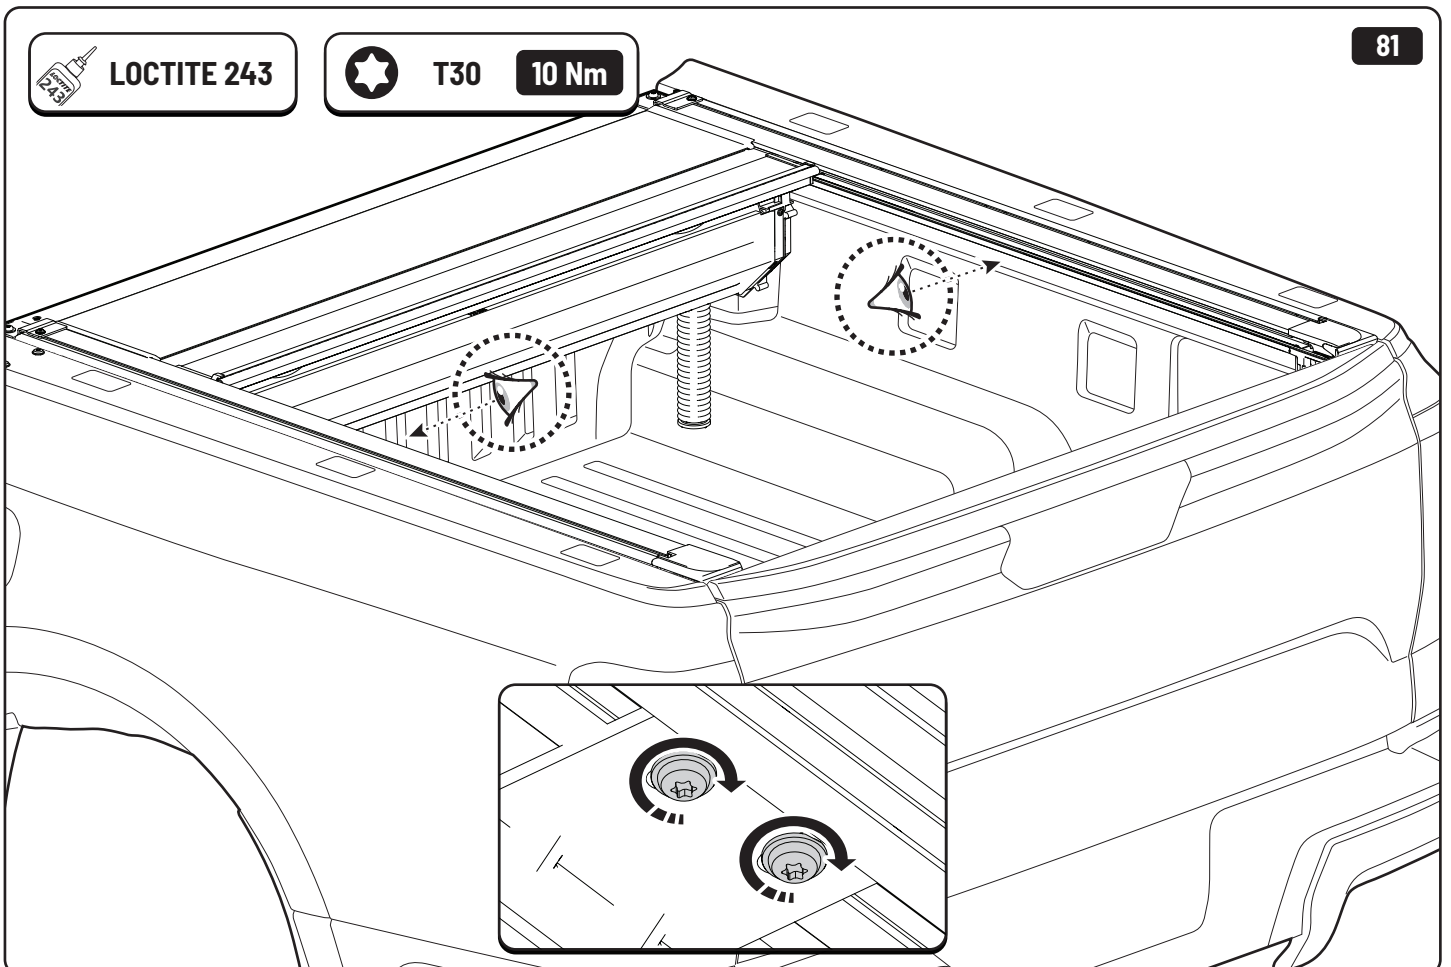
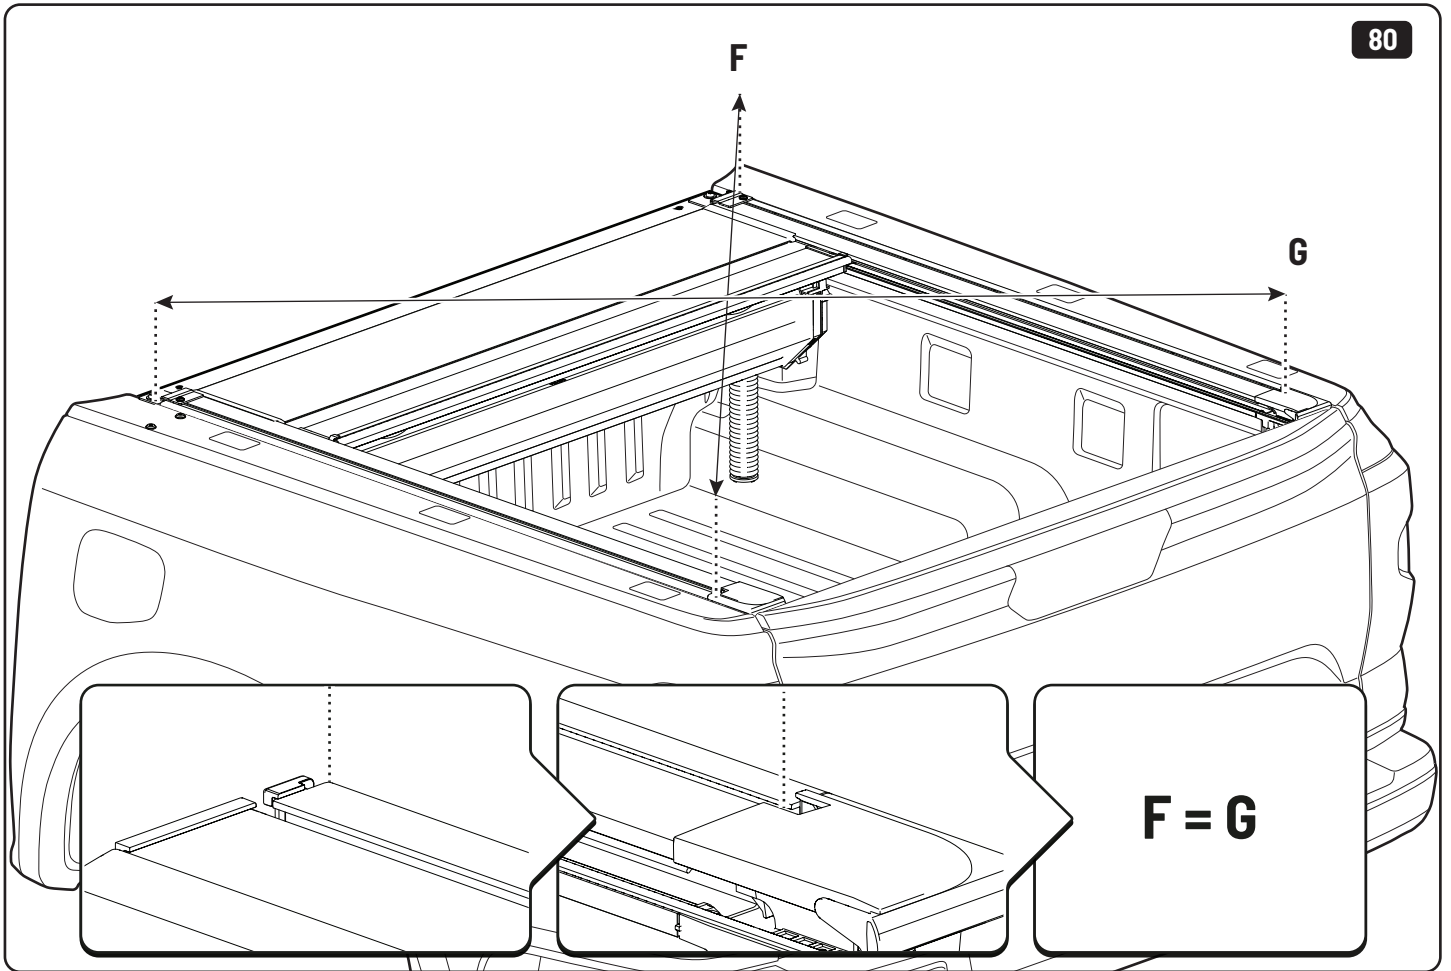


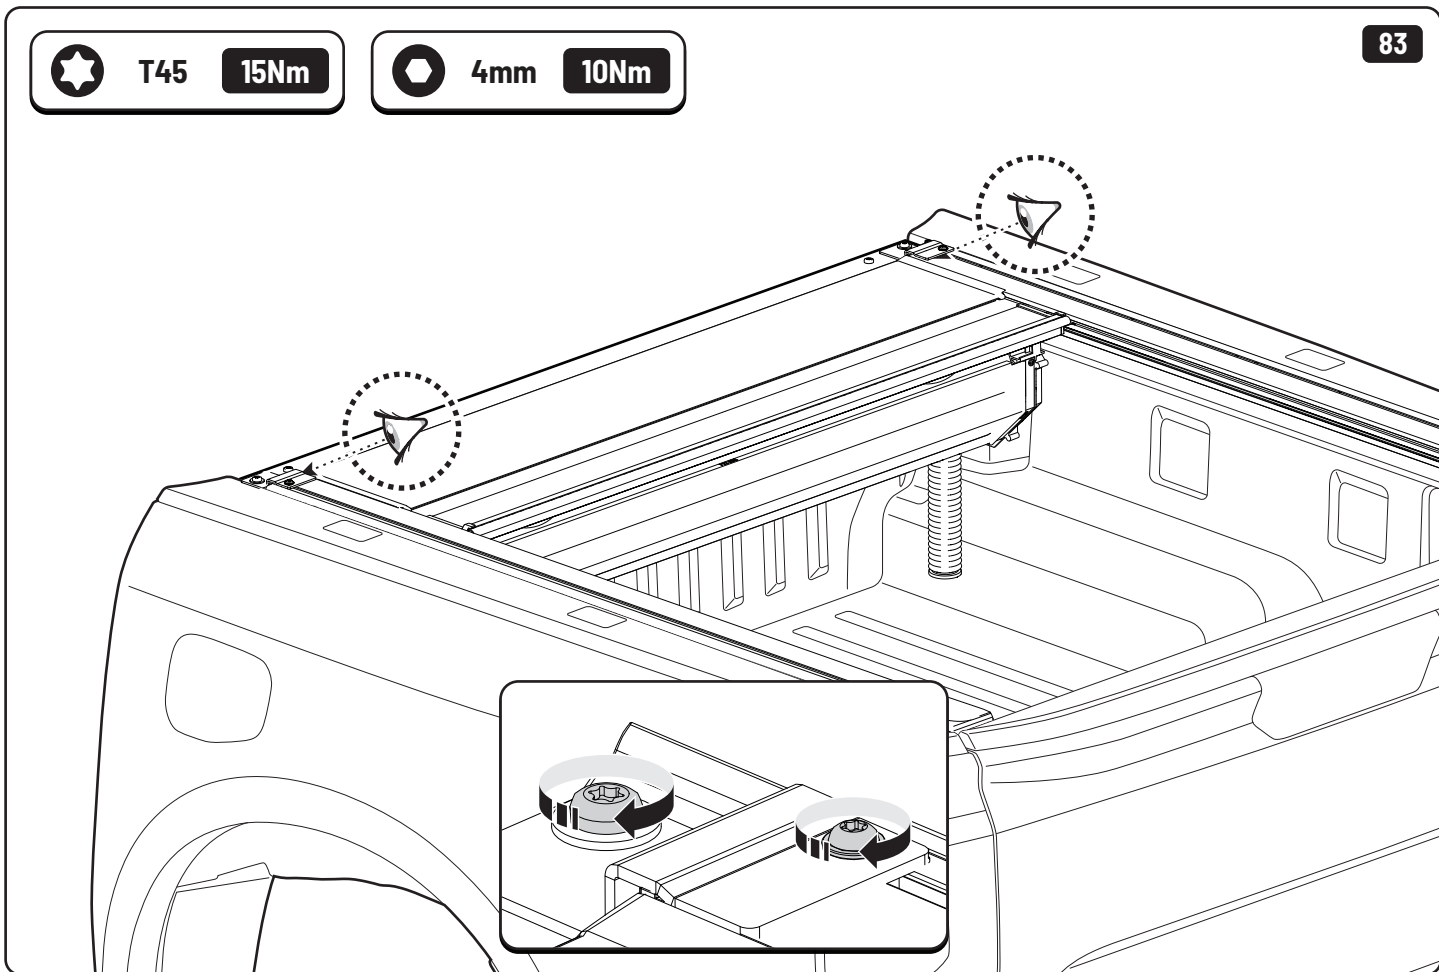
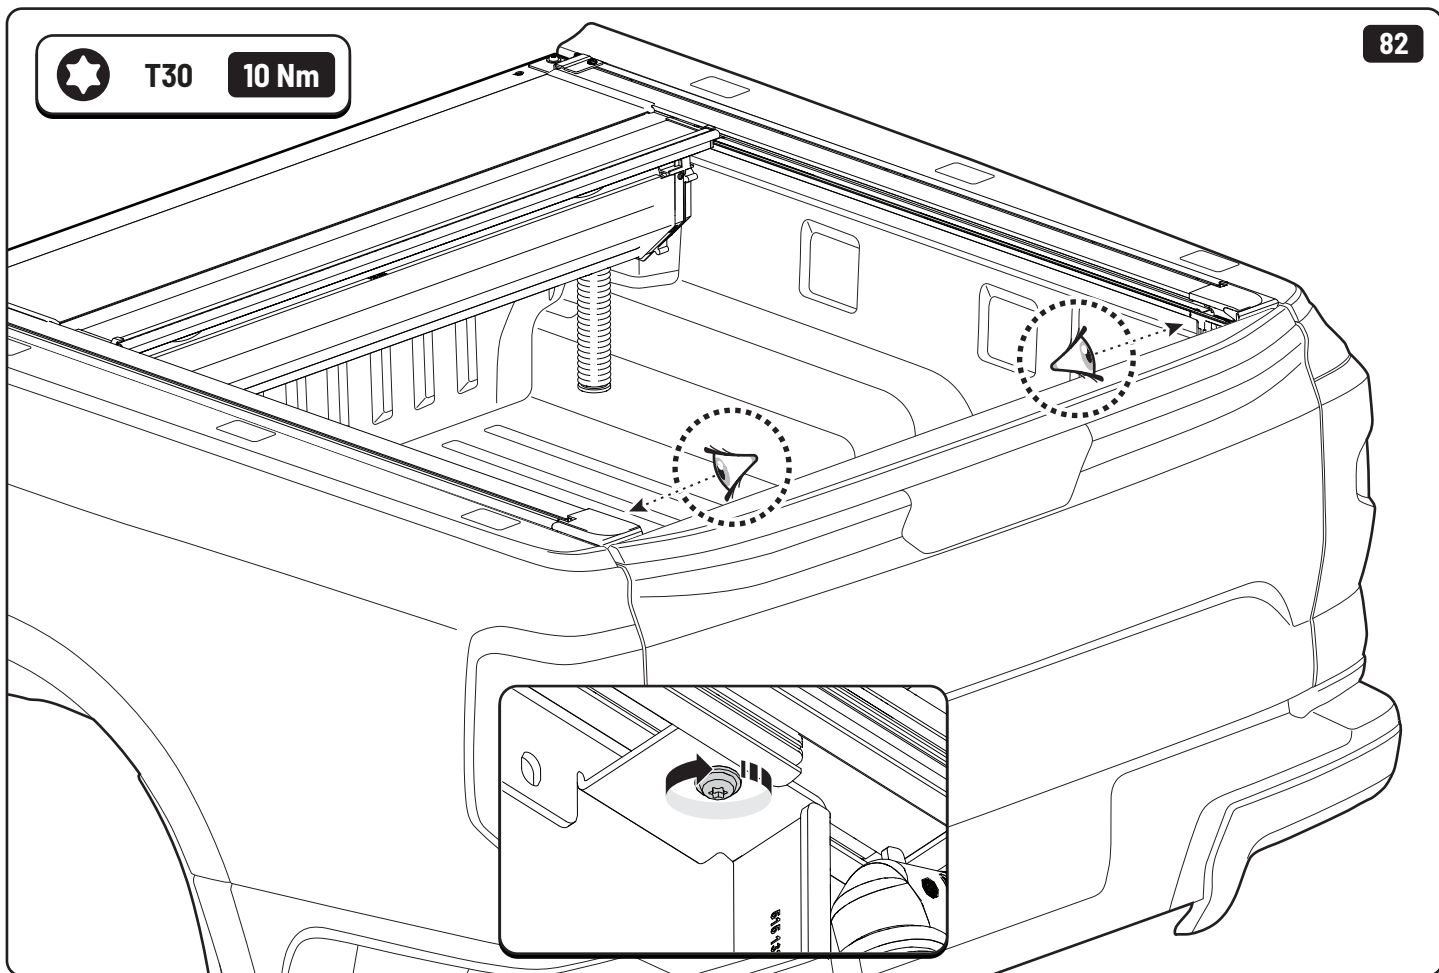


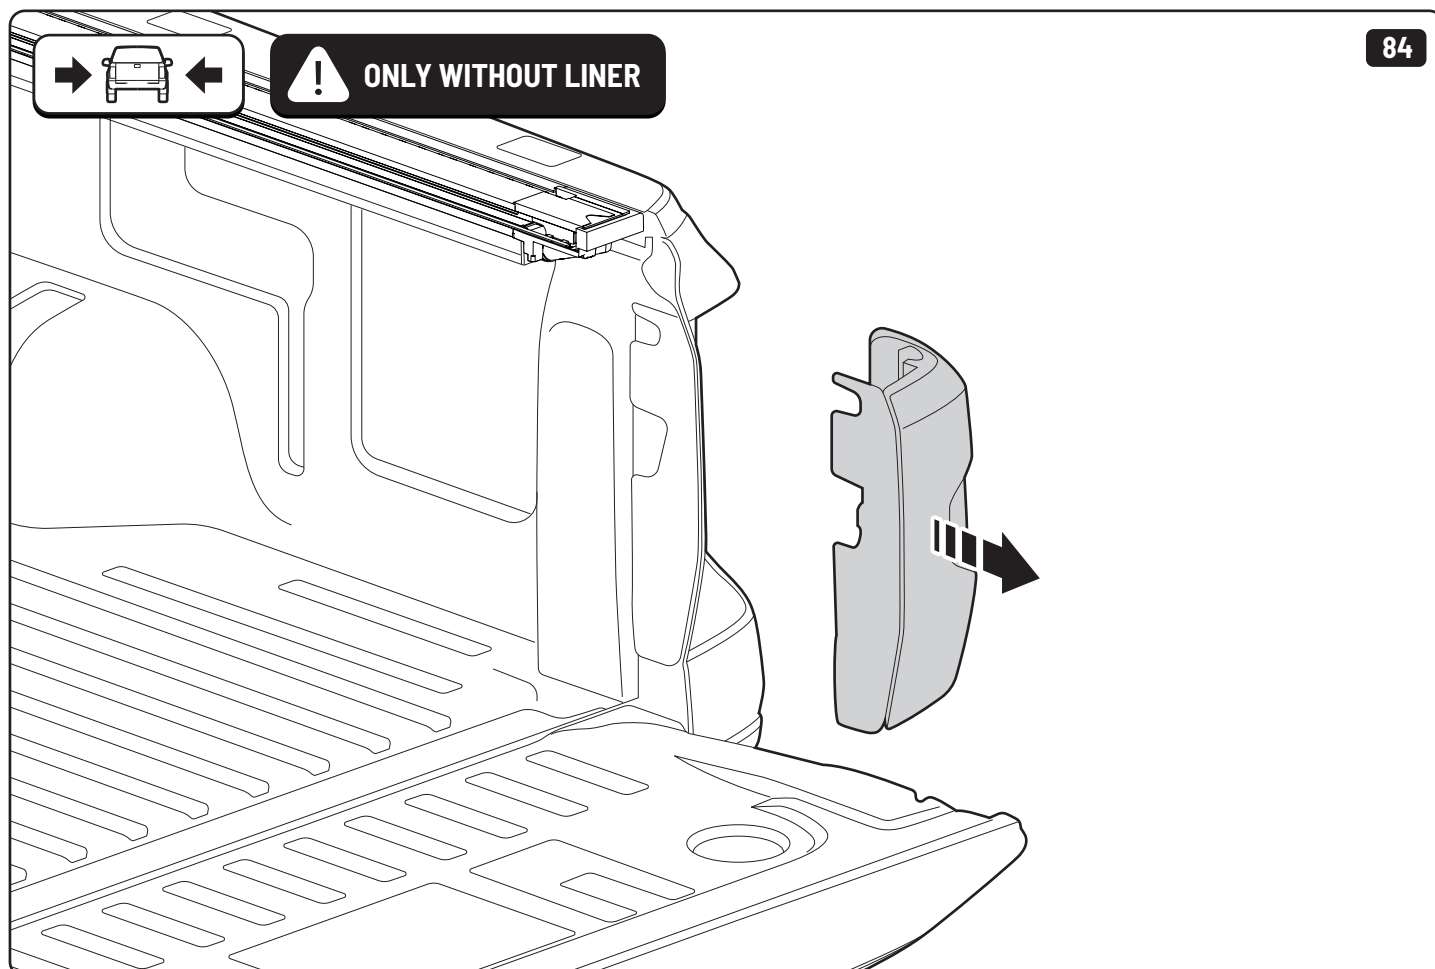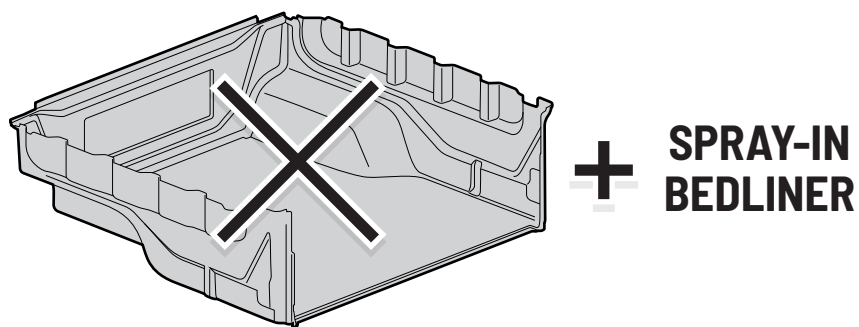
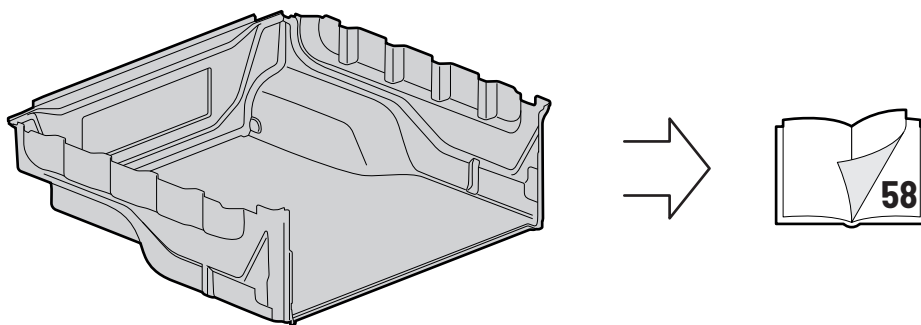


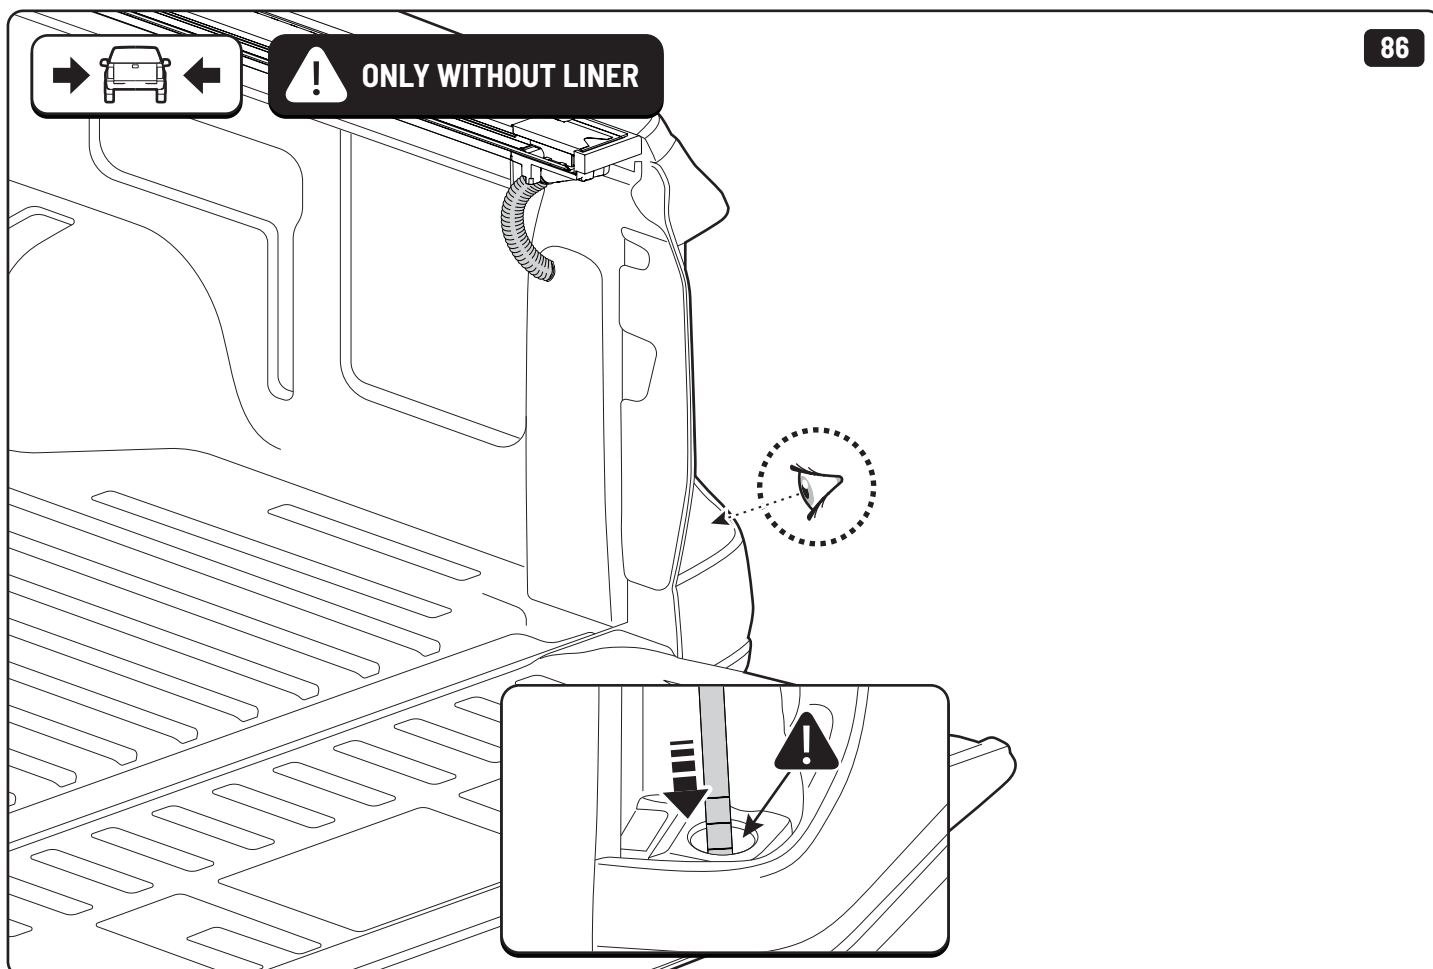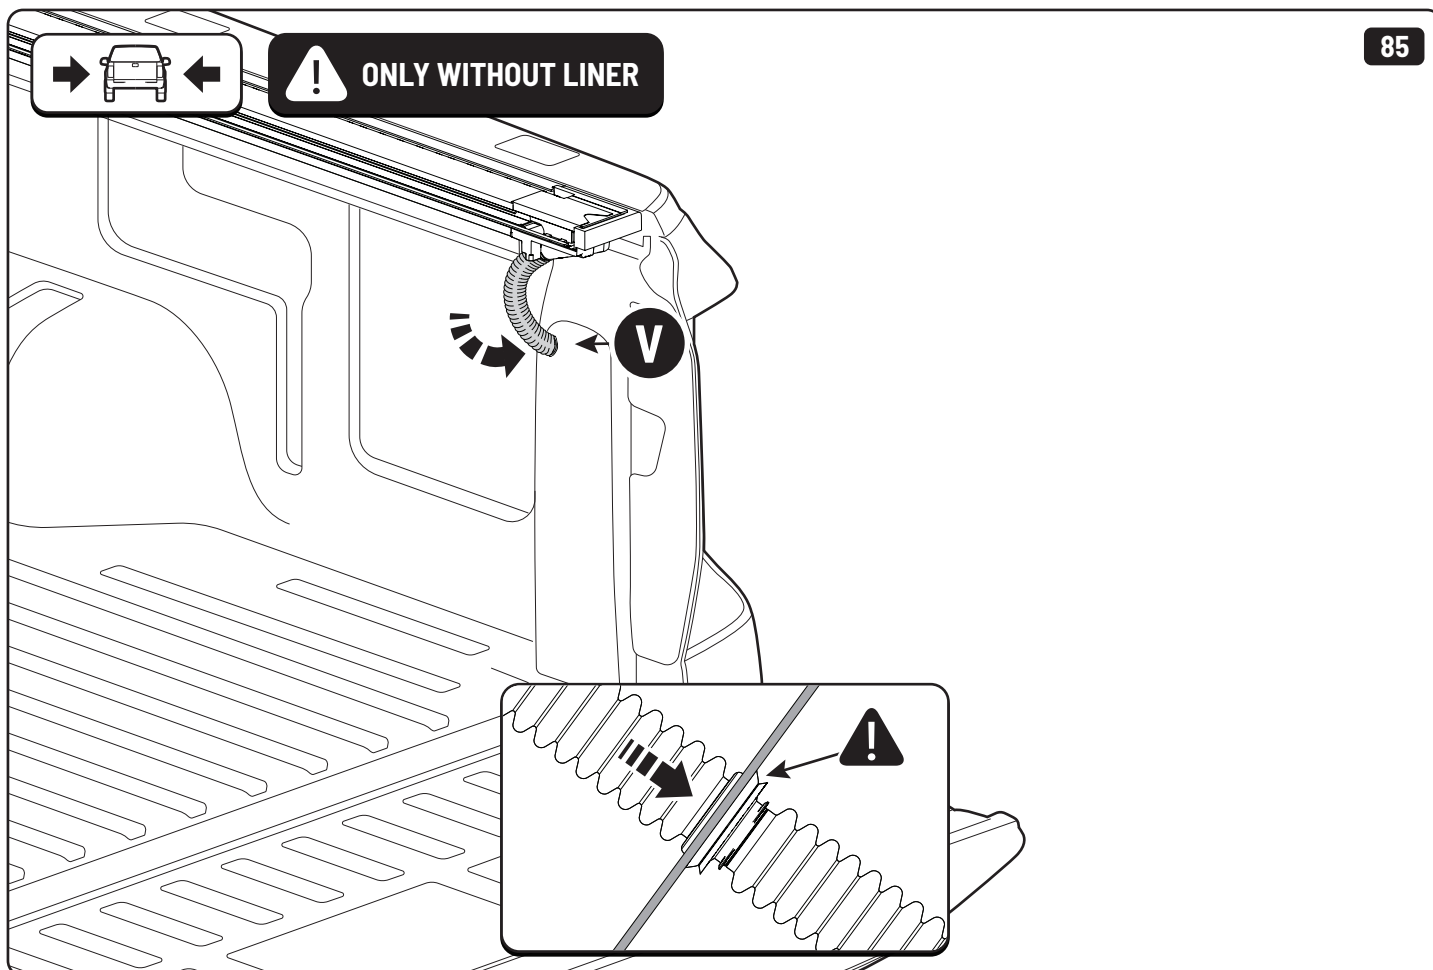

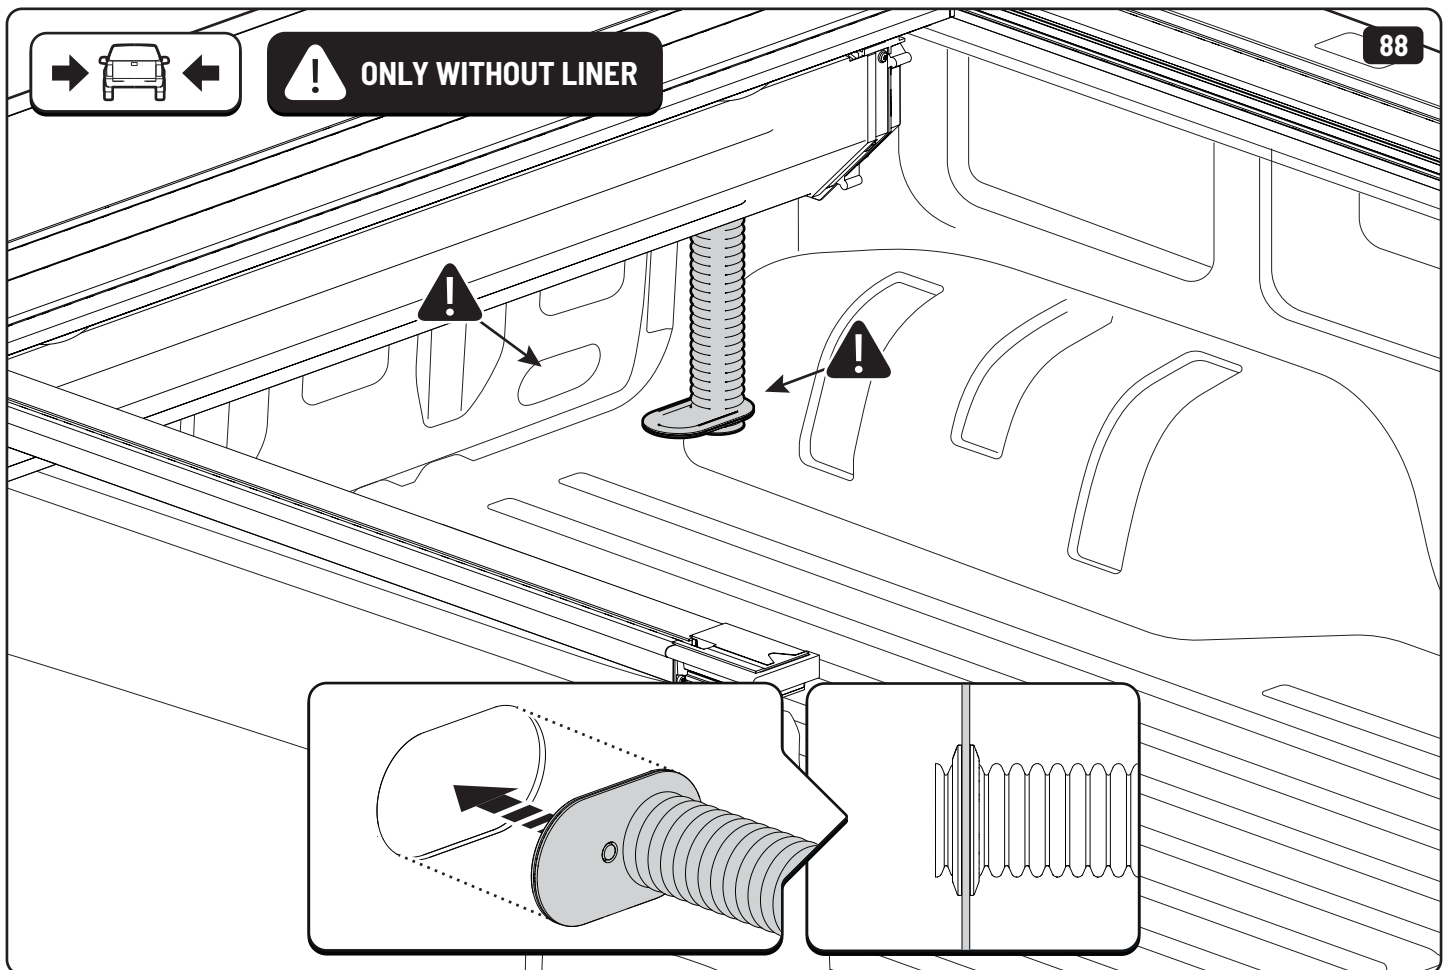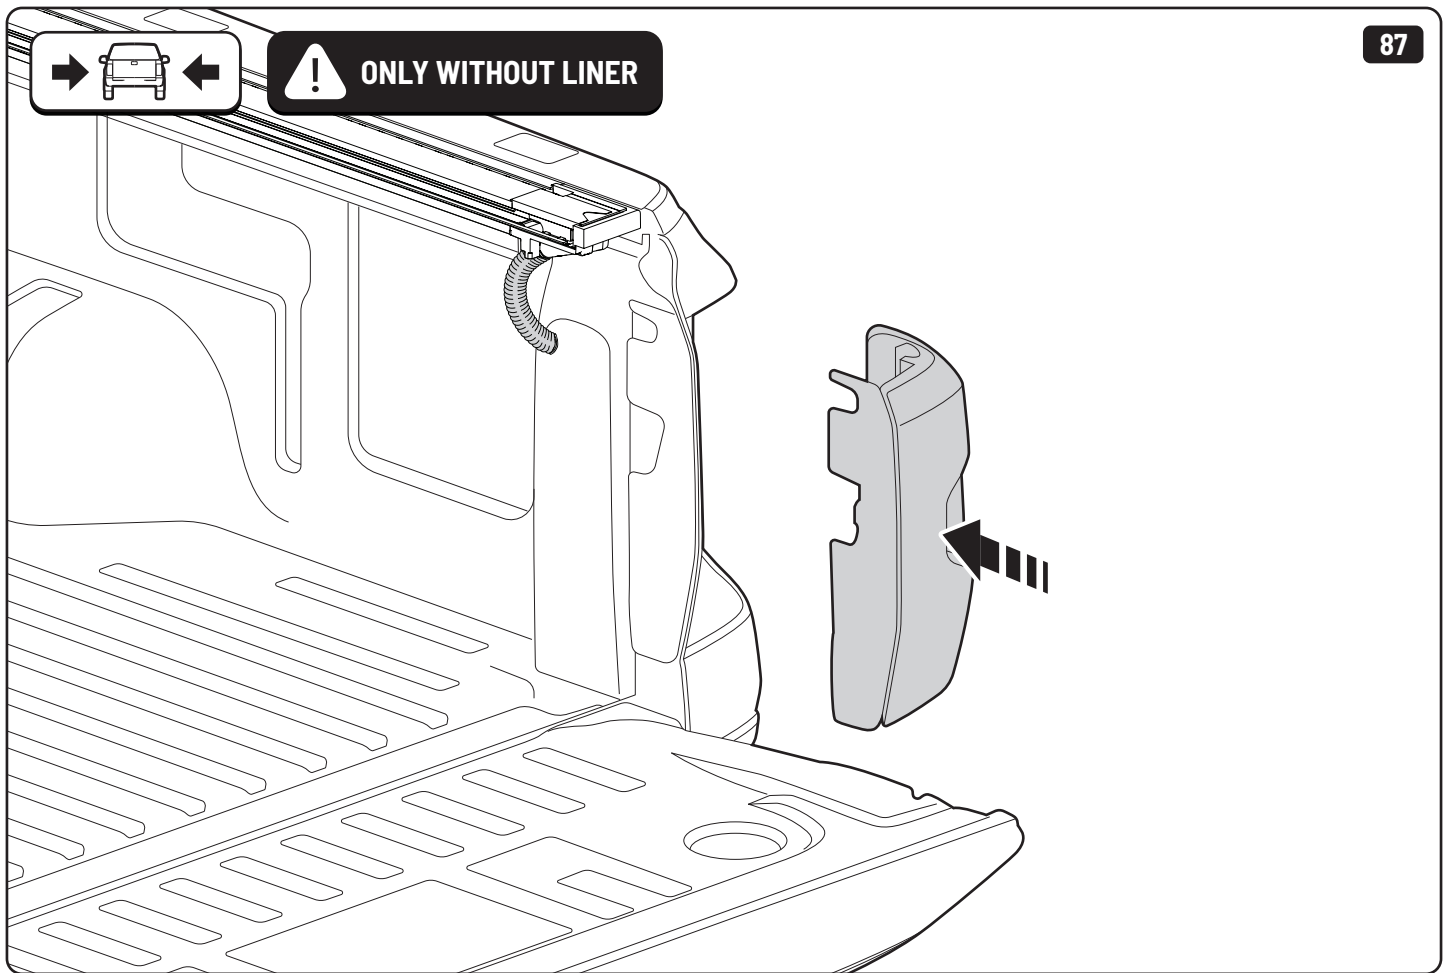

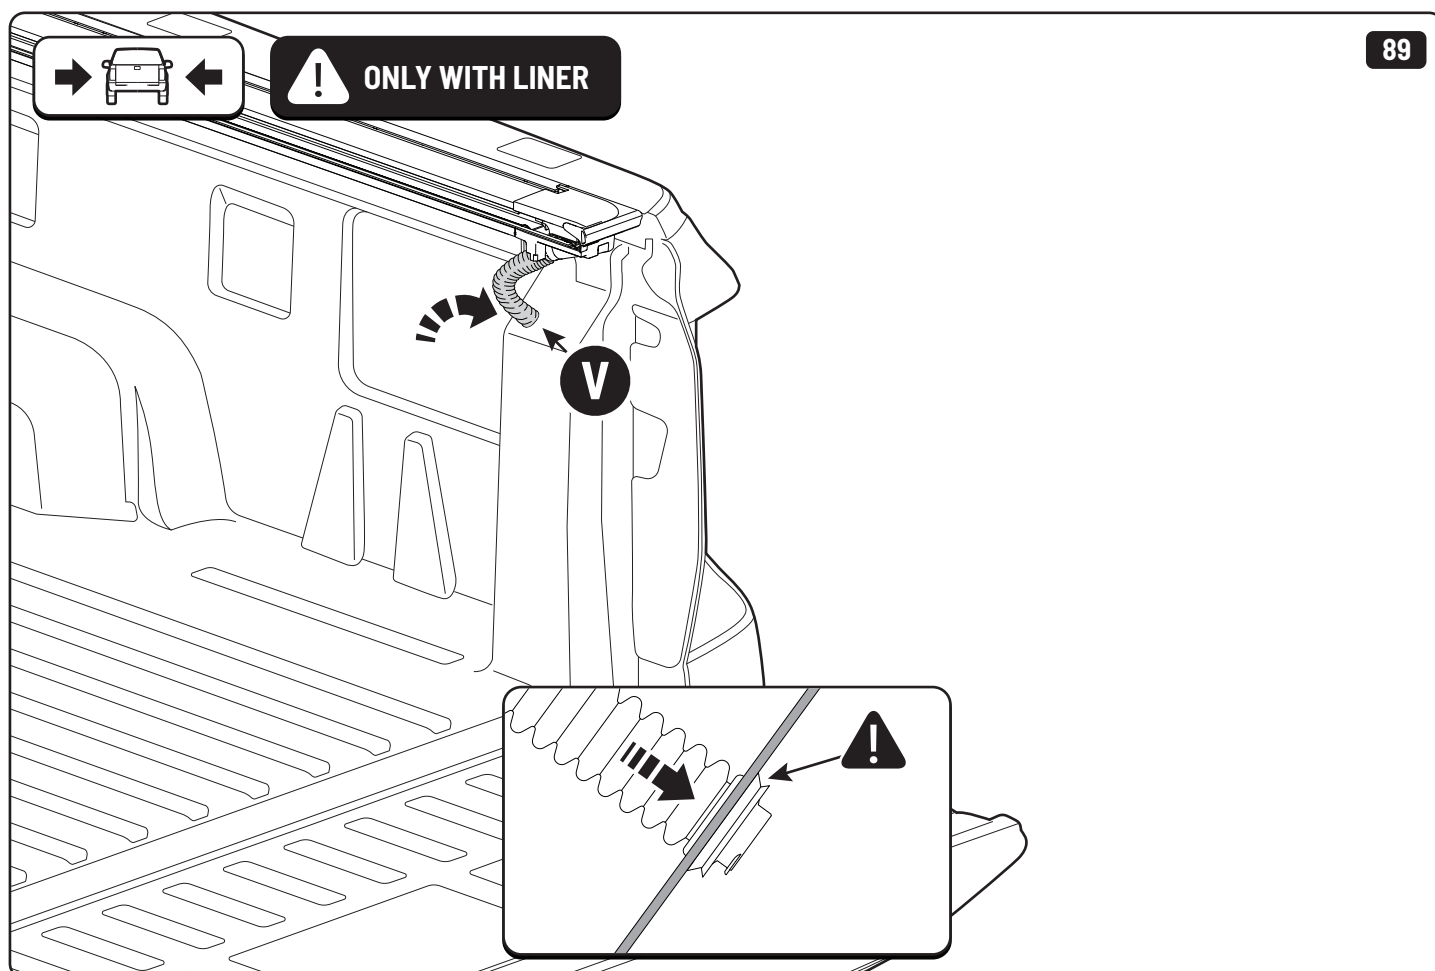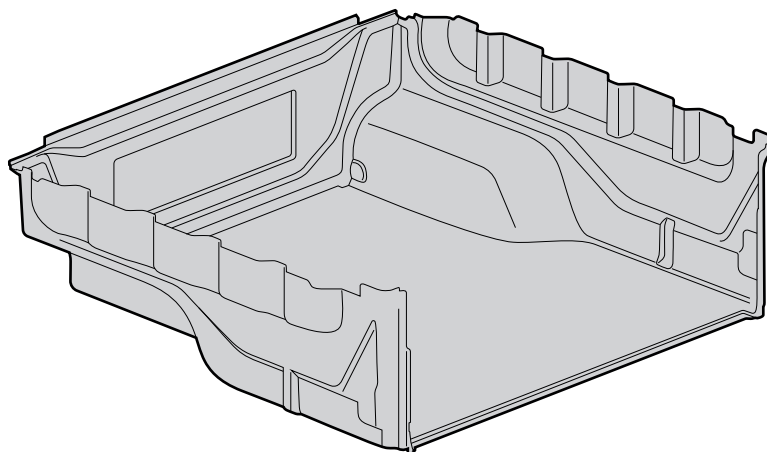

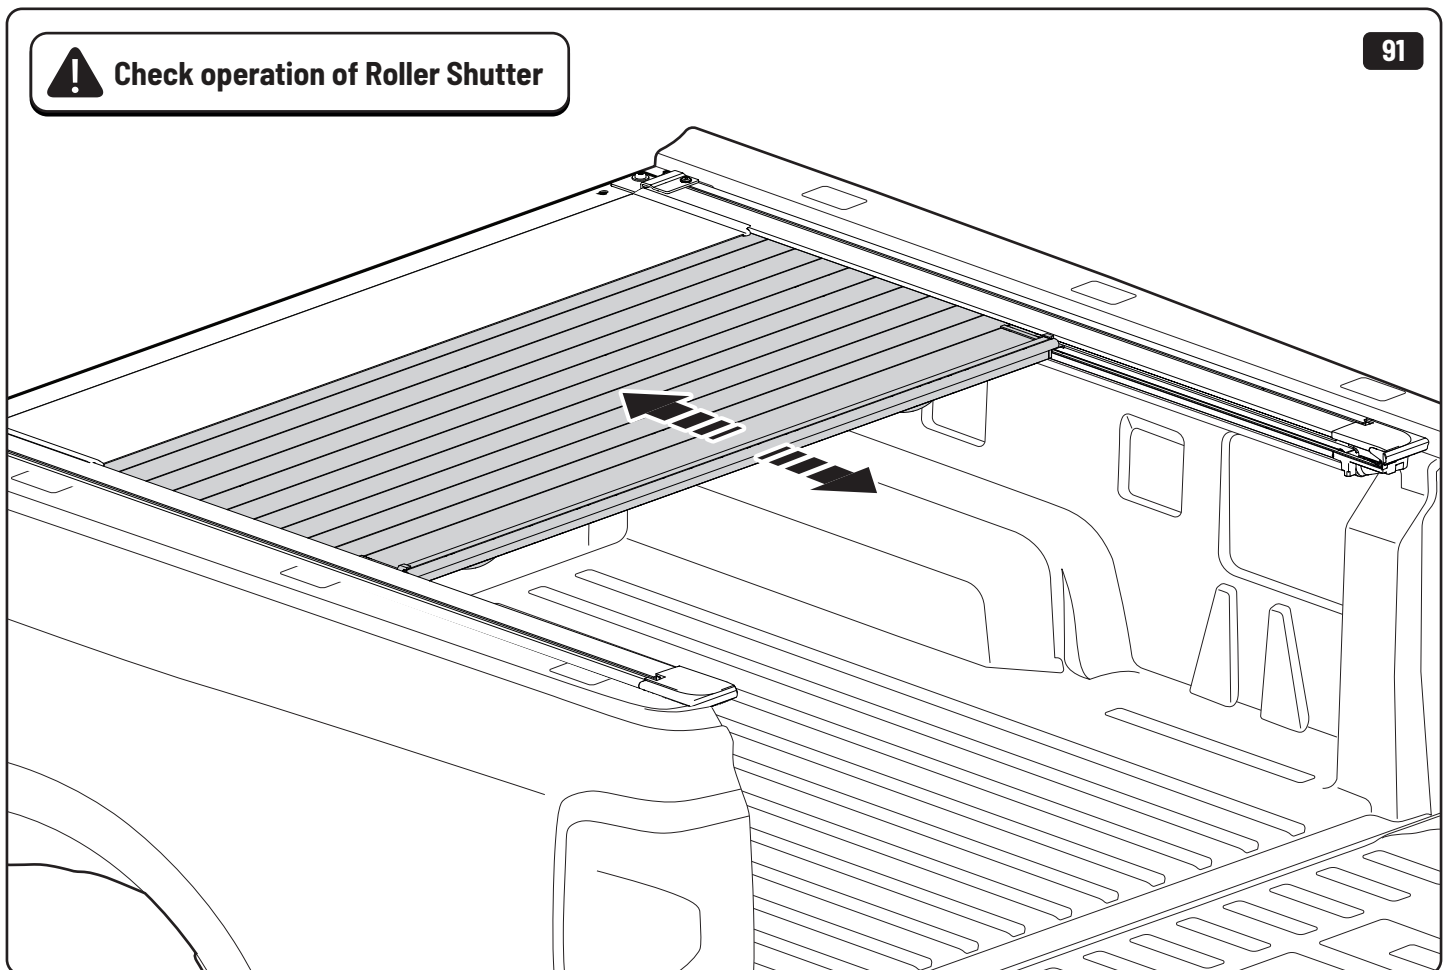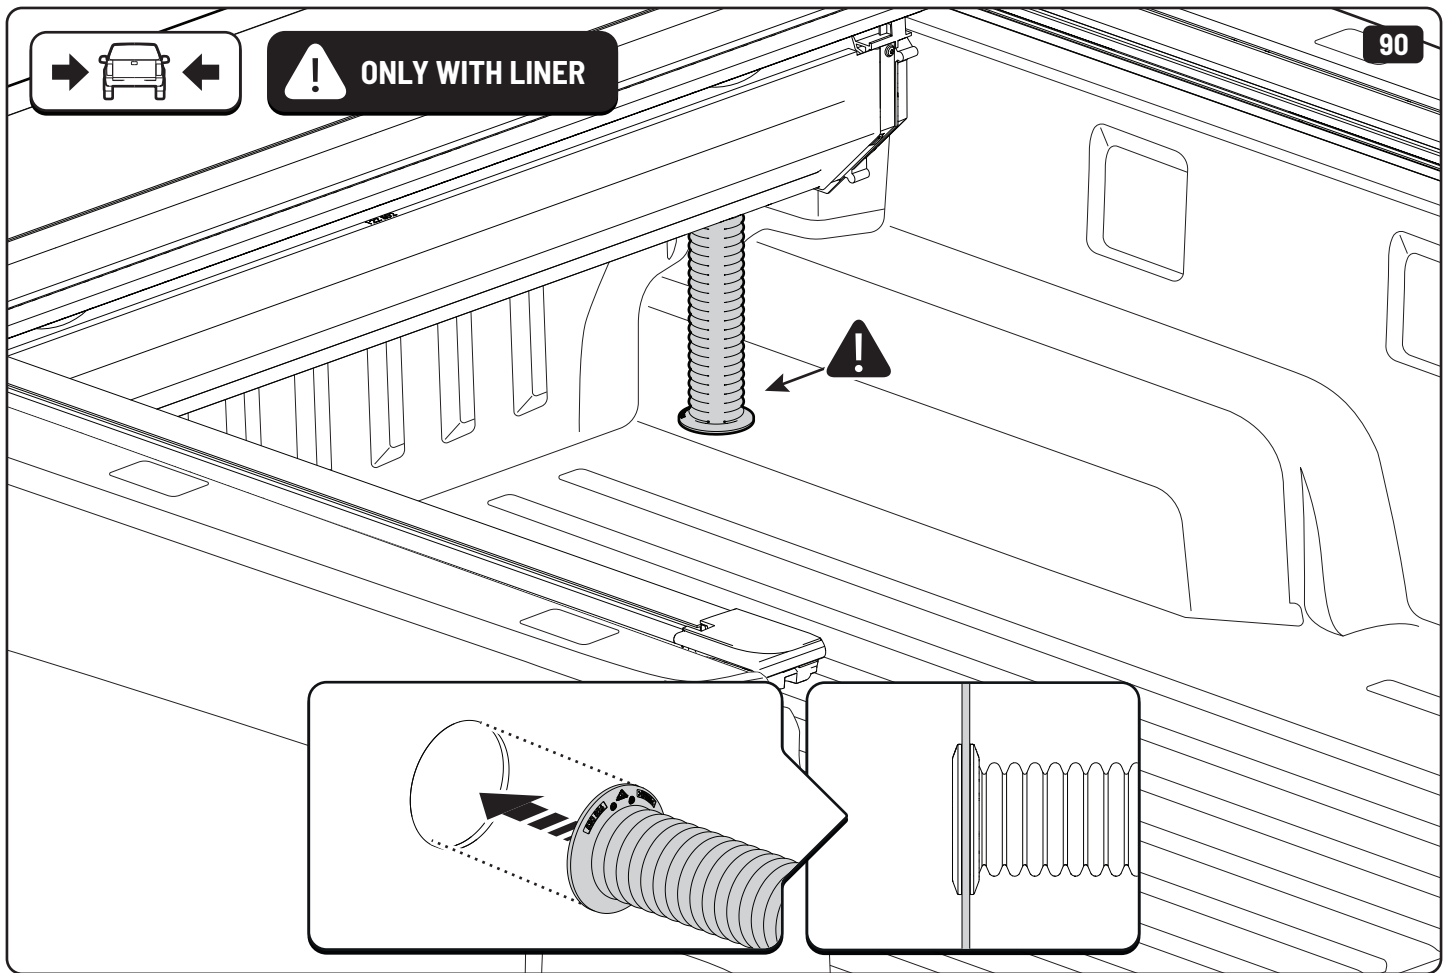

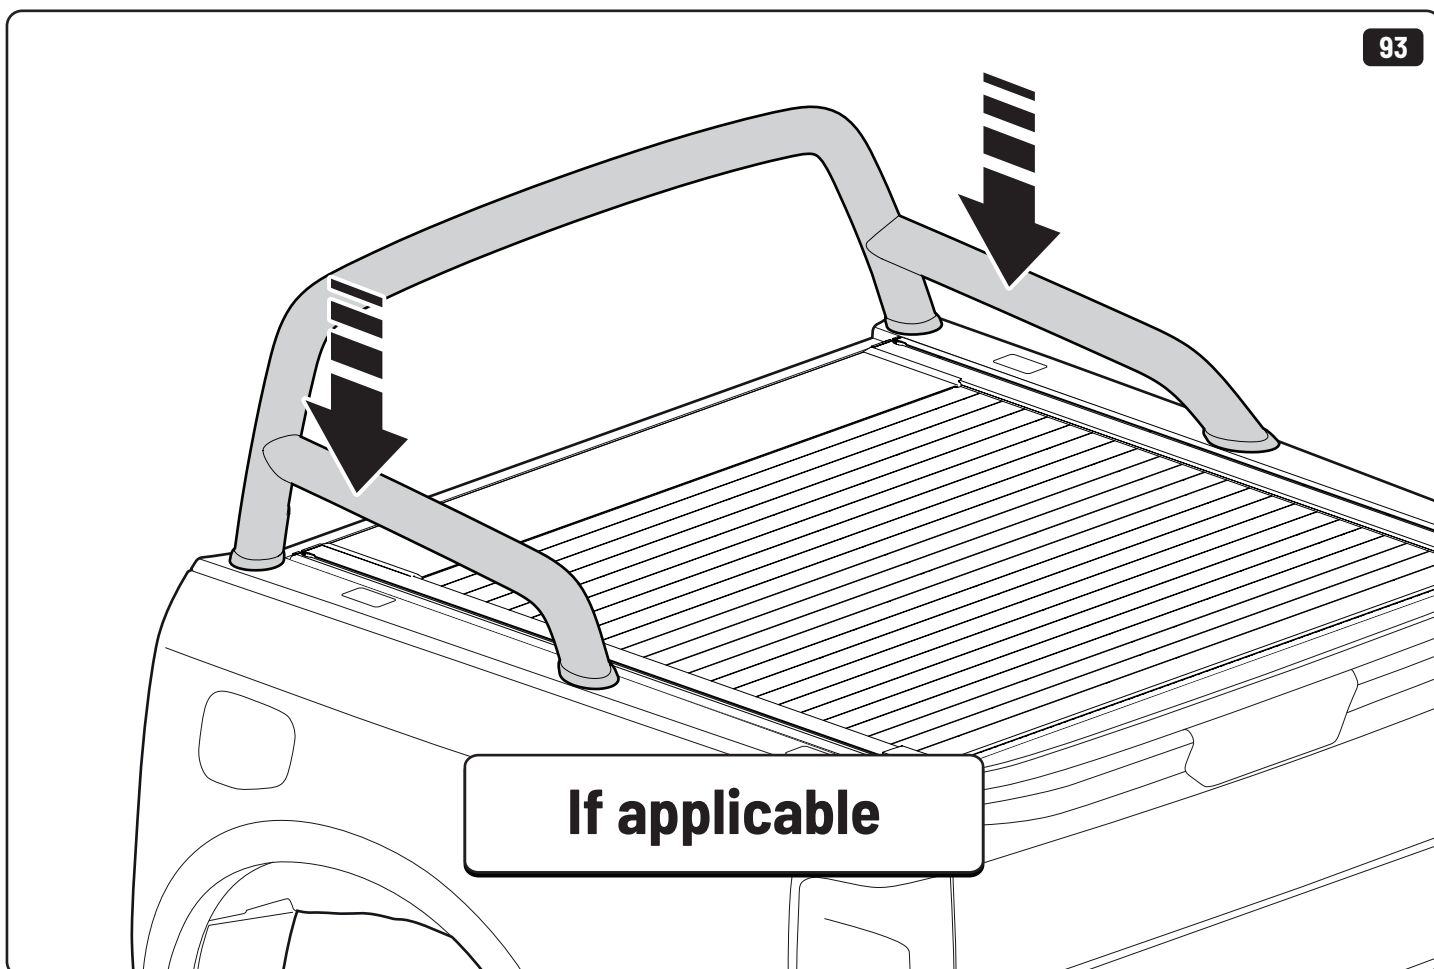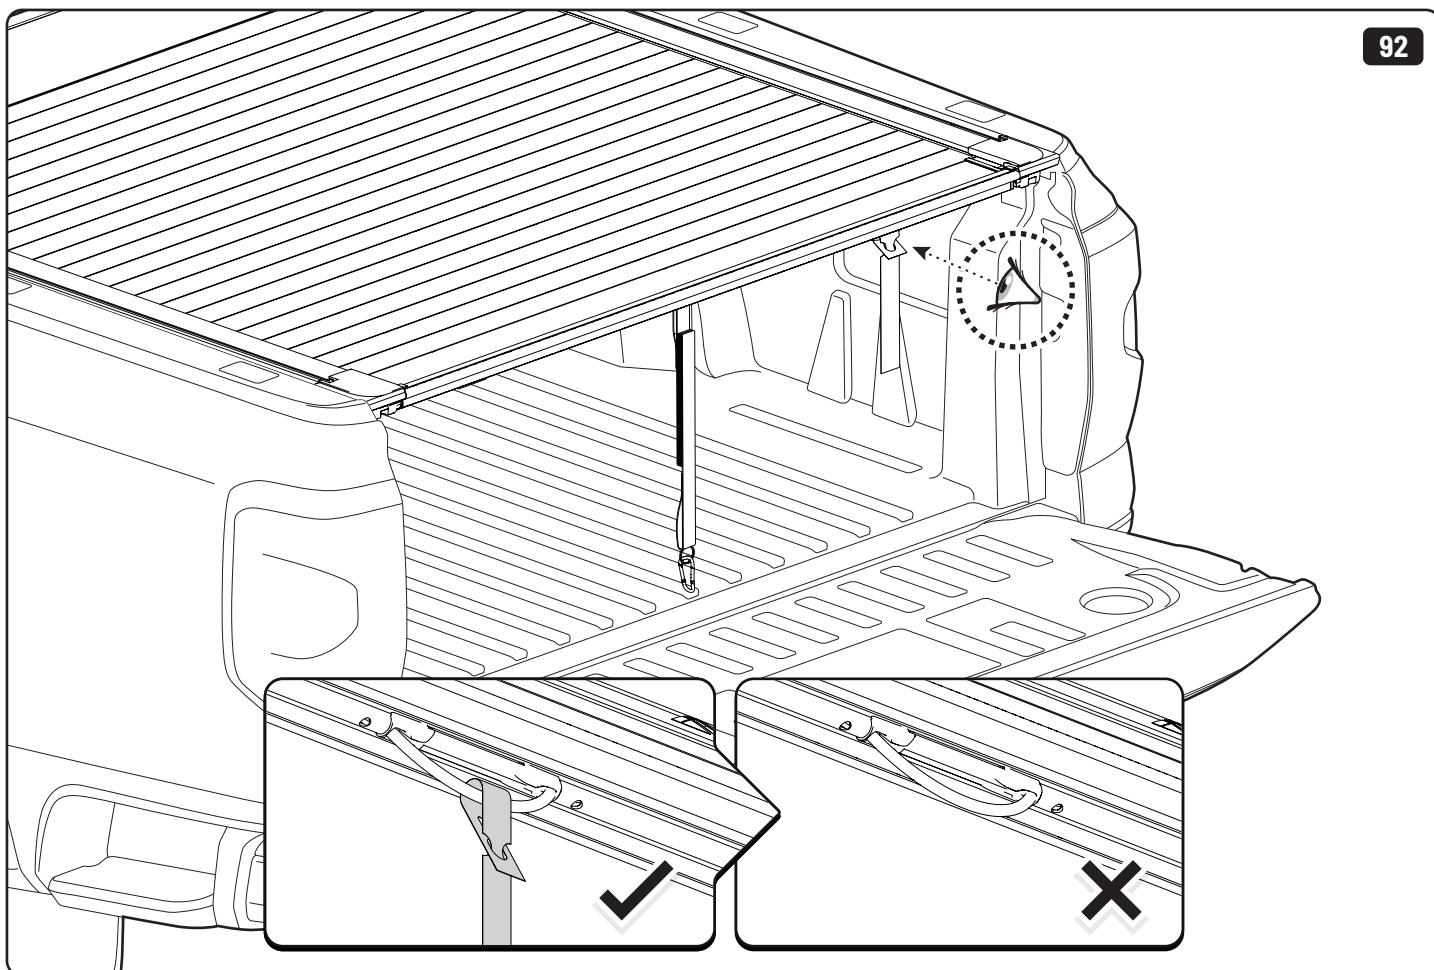



Steps	Page	Done by
Mounting gliding rail in canister	14	
Holes for drain	28-30 + 33-34	
Width + Cross measurement	52-53	
Tightening bracket screws	51-54	
Mounting drain	56-58	
Check operation of Roller Shutter	59	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number(s)	Model / Year	Cab type(s)	Installation time	Weight
EV0m F010 HB01	Ford Ranger/ 2022 ->	Double Cab	1 hour (s)	30 kg
EV0m F011 HB01	Ford Ranger/ 2022 ->	Rap Cab	1 hour (s)	34 kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni di montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare