

# Mountain Top® Roll

Installation manual




DOWNLOAD PDF




Parts

**A**

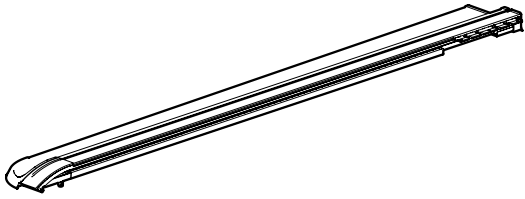


x 1

**B**

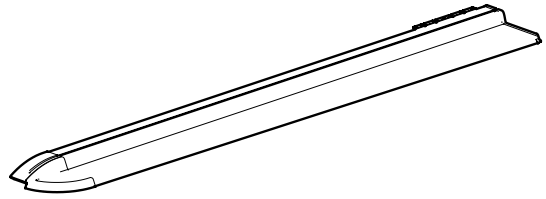


x 1

**C**

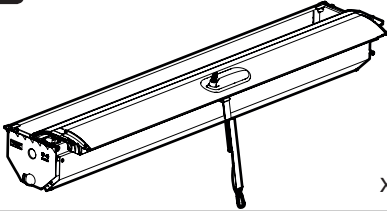


x 1

**D**

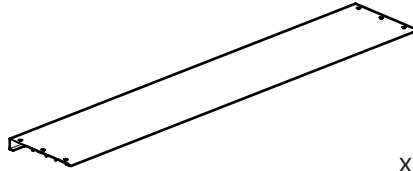

x 1

**E**

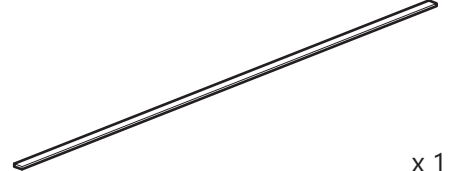


x 1

**F**




x 6

**G**

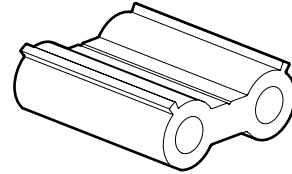


x 6

**H**

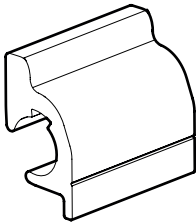


x 6

**I**




x 6

**J**

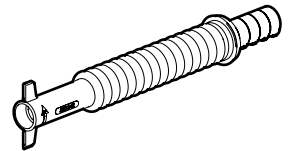

x 2

**K**



x 12

**L**




x 6

**M**




x 6

**N**

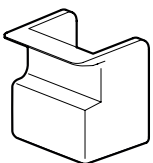


x 2

**O**




x 1

**P**

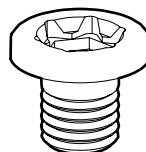

x 6

**Q**

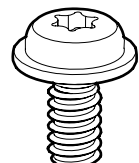


x 4



Kit

**K**



x 12

**L**




x 6

**M**




x 6

**N**

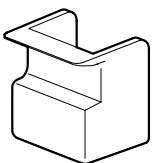


x 2

**O**




x 1

**P**


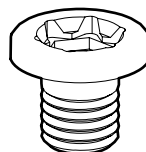




x 6



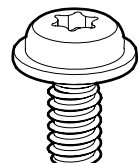

**Q**

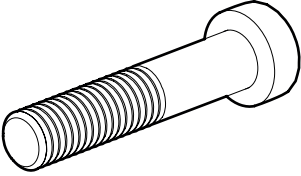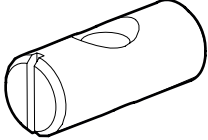

x 4

Kit		
<b>R</b>		<b>S</b>
		<b>T</b>
	x 6	x 6
		x 6

Kit	
<b>U</b>	<b>V</b>
	
x 2	x 2


Manual(s)	
	
	
x 1	x 1




## Tools and materials needed



24 mm

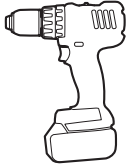





1 - 25 Nm

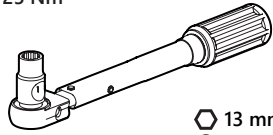

- 13 mm
- 5 mm
- T15, T30







Rust protection  
Rostschutzmittel  
Anti-rouille  
Anti roest

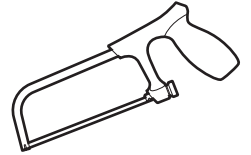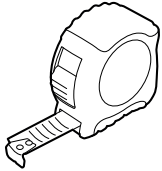



1



## Applying rust protection

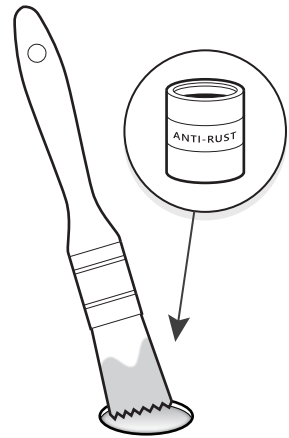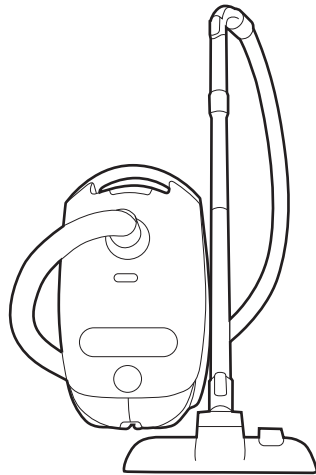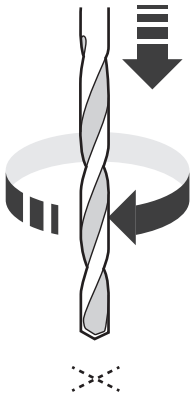


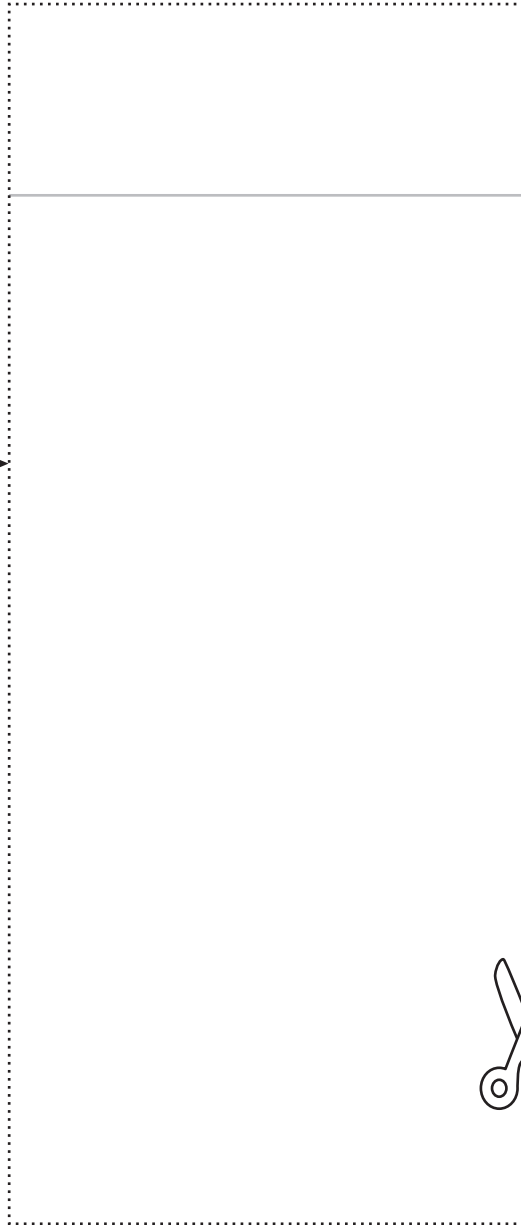






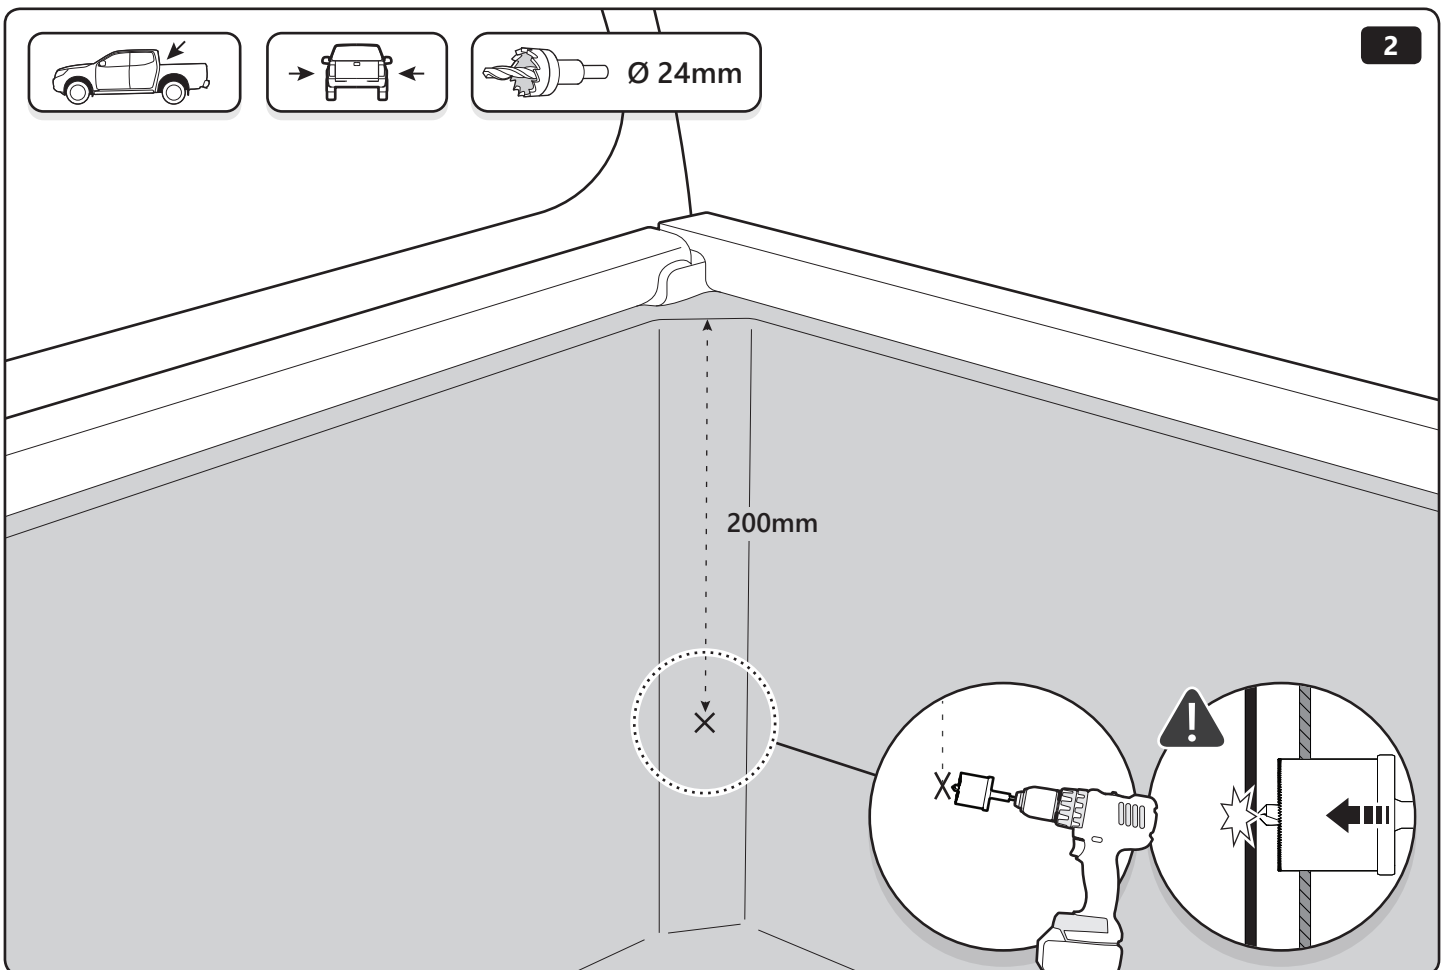
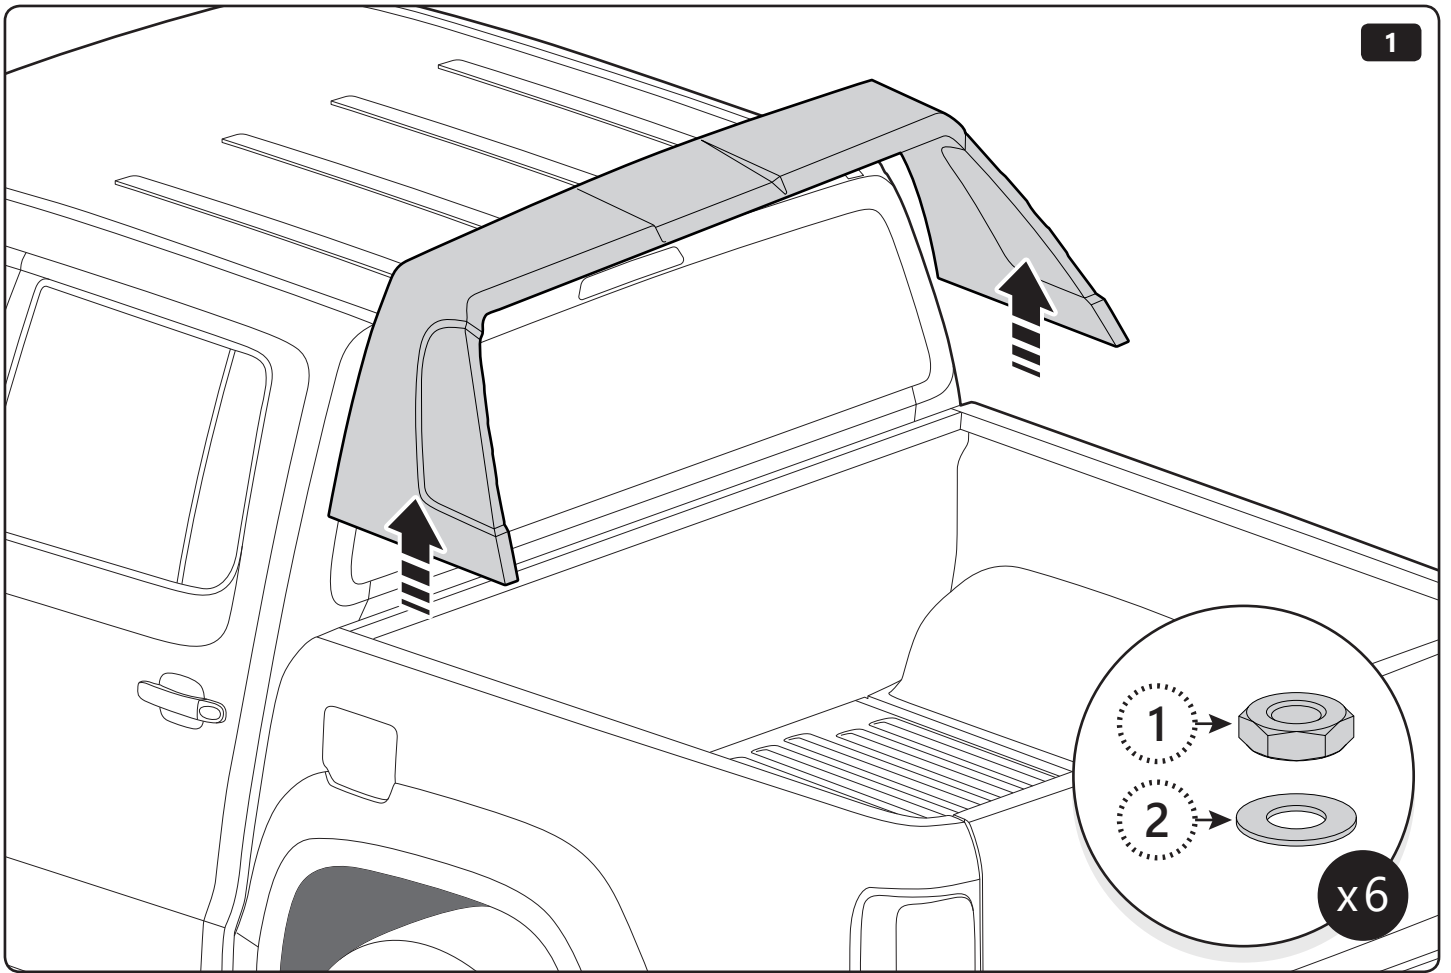


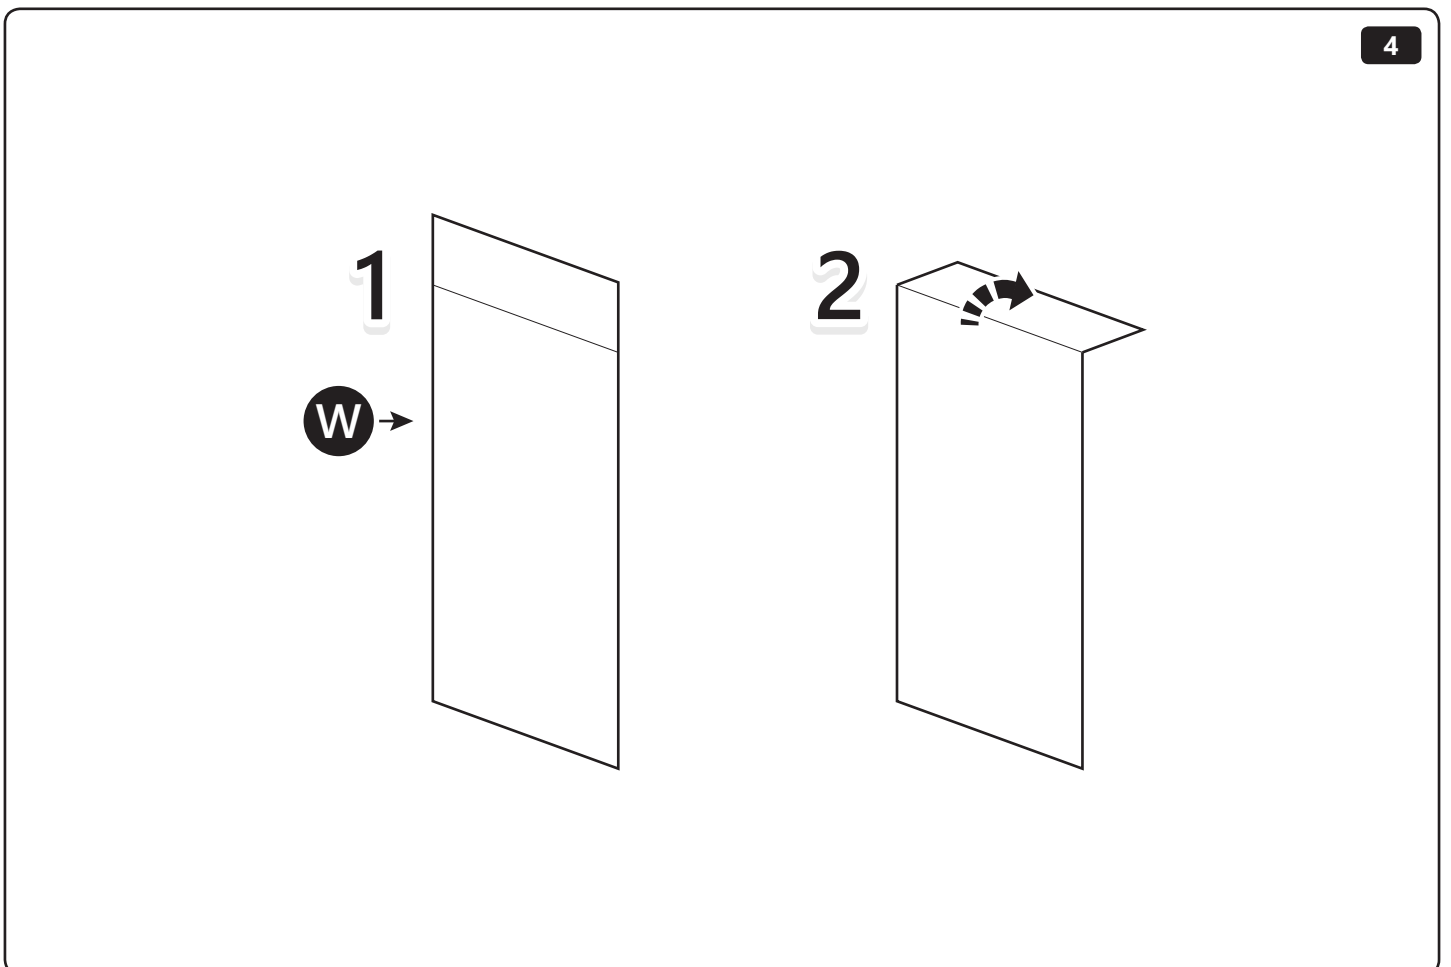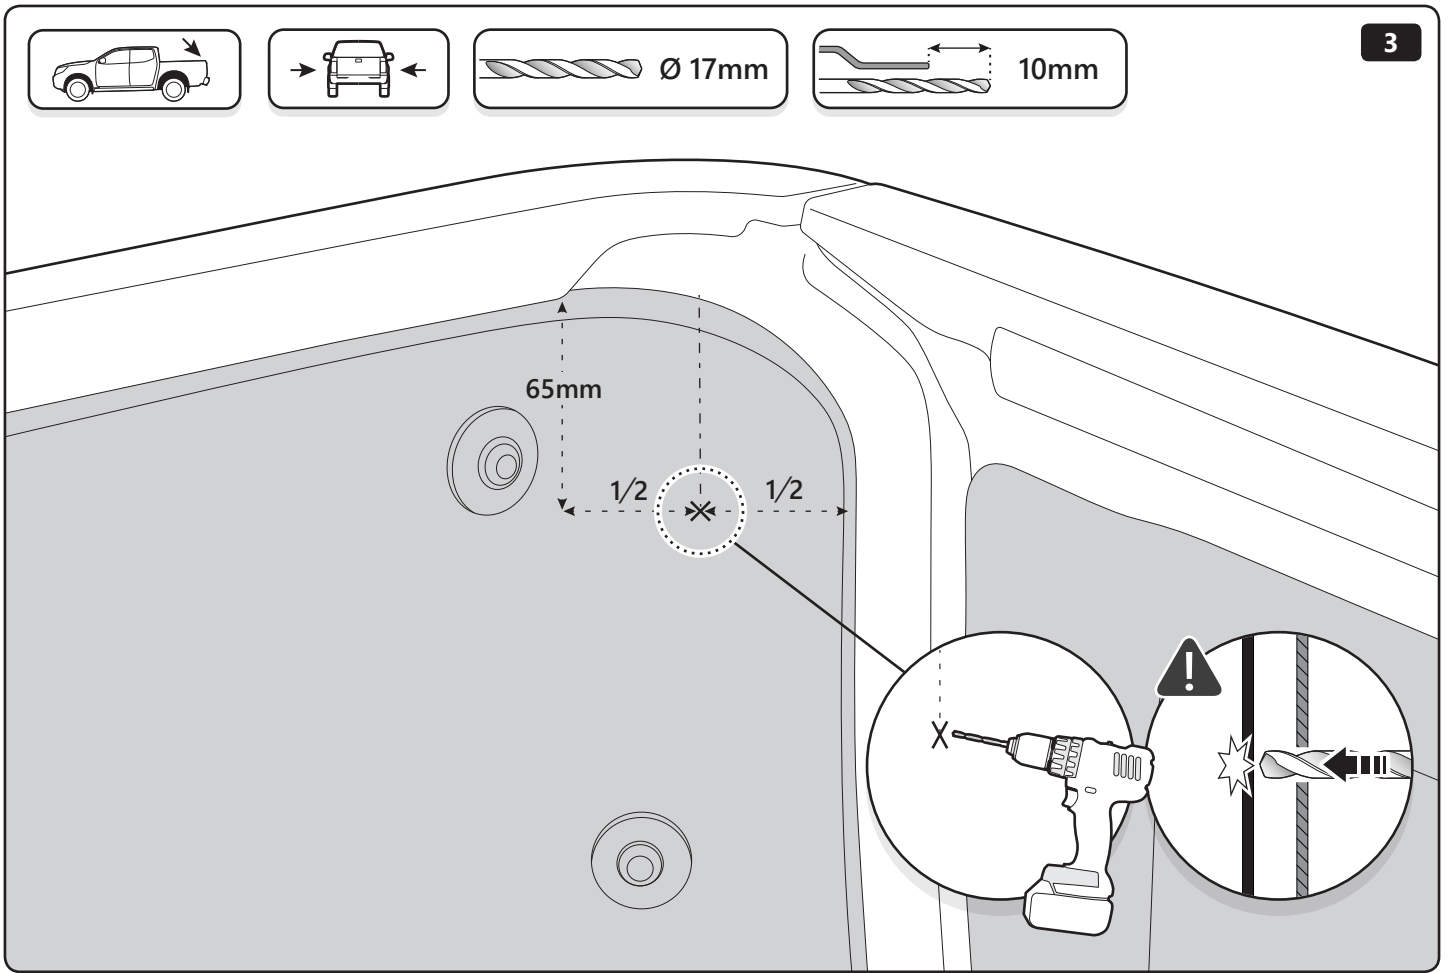



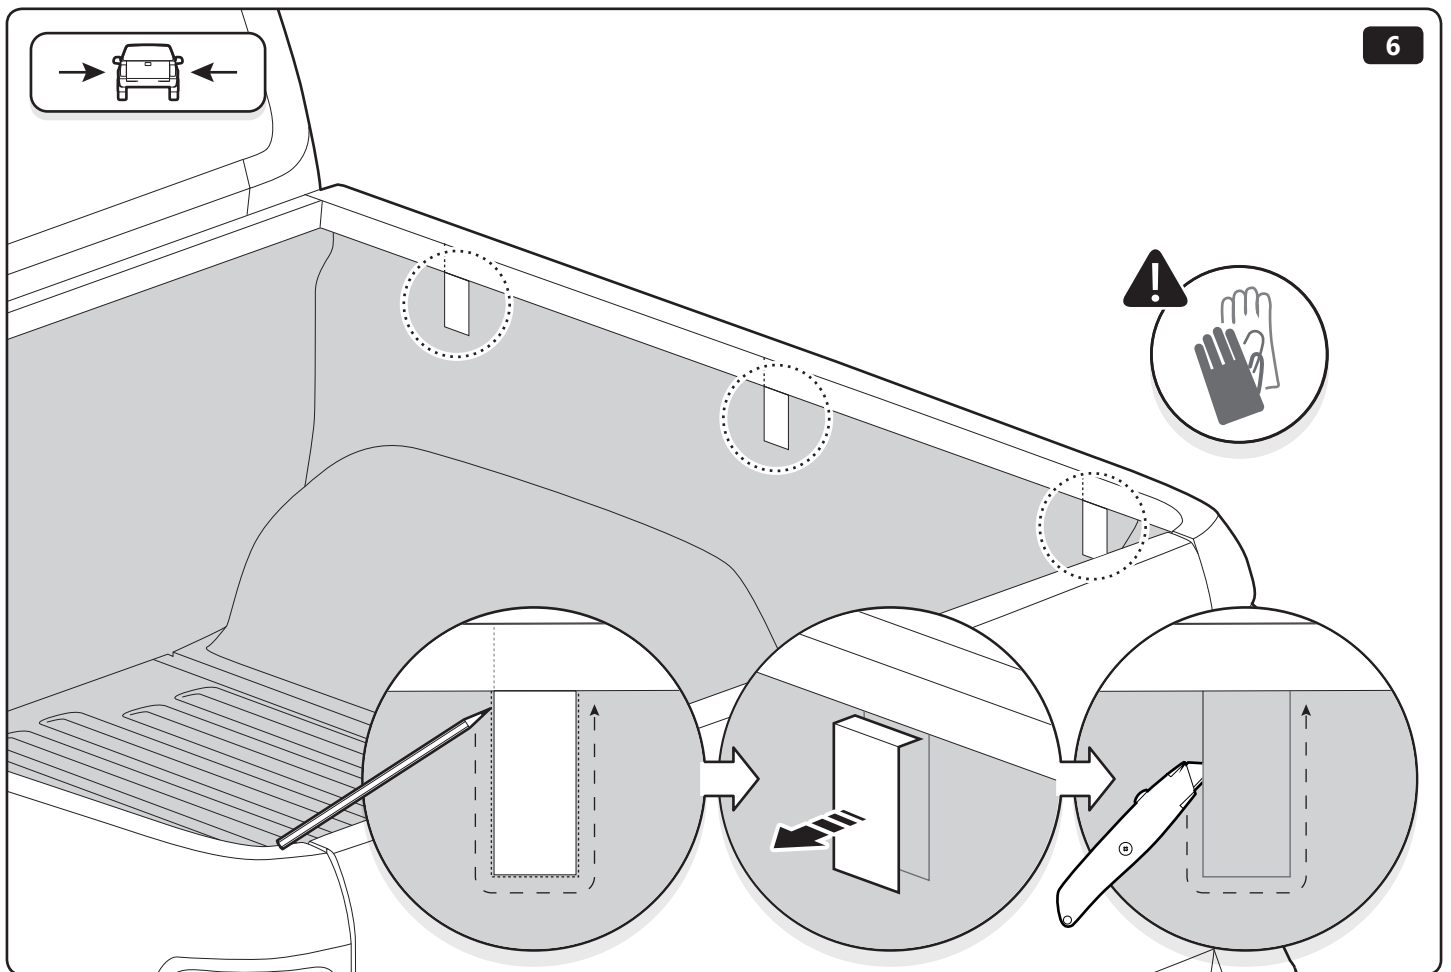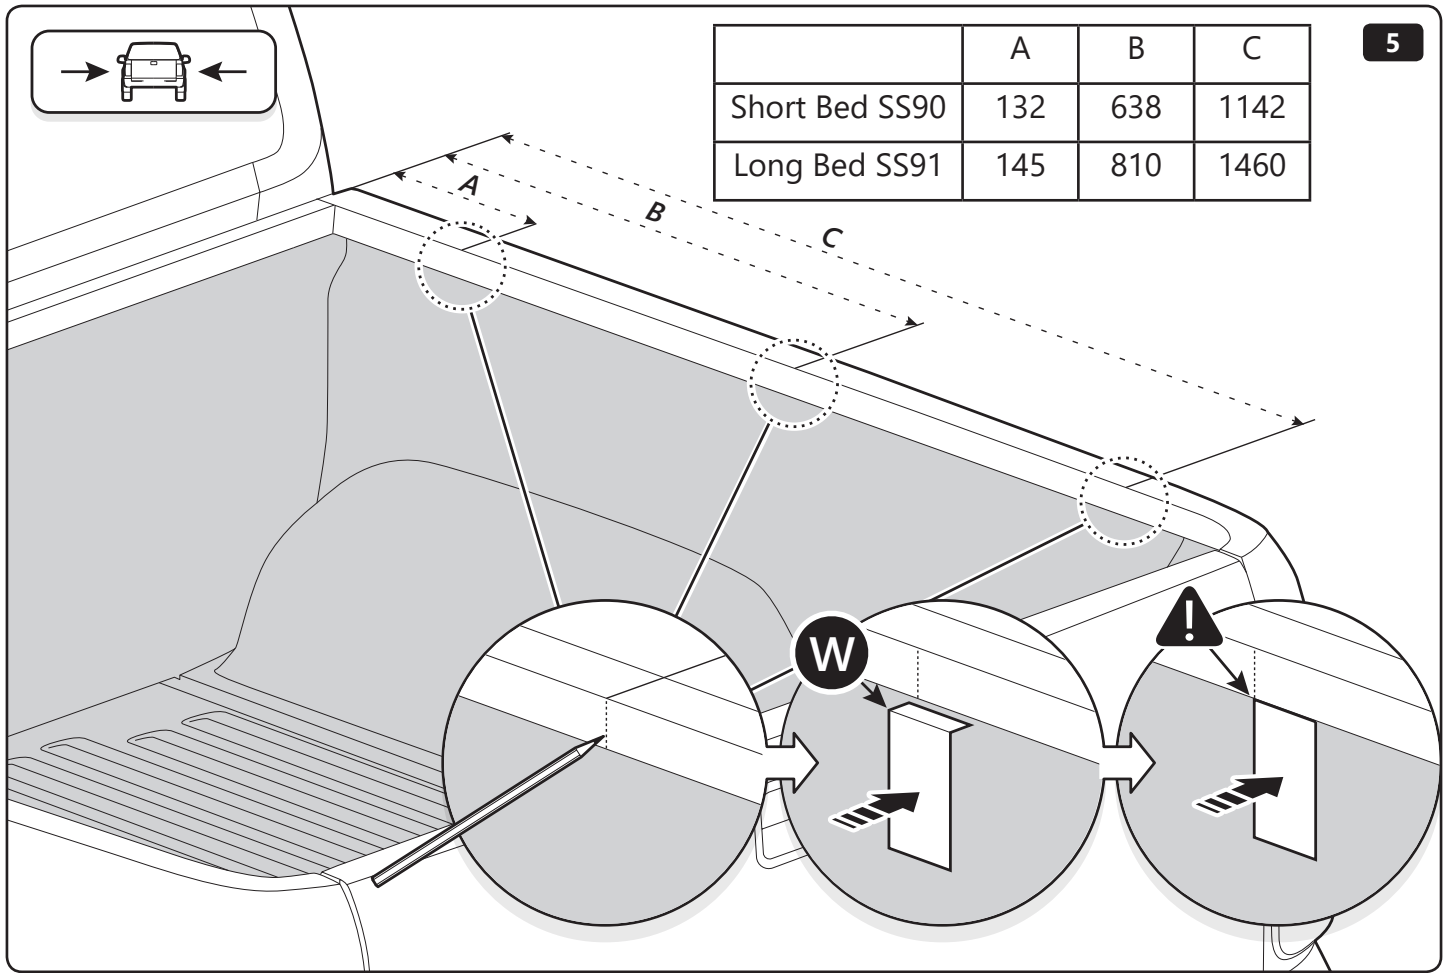


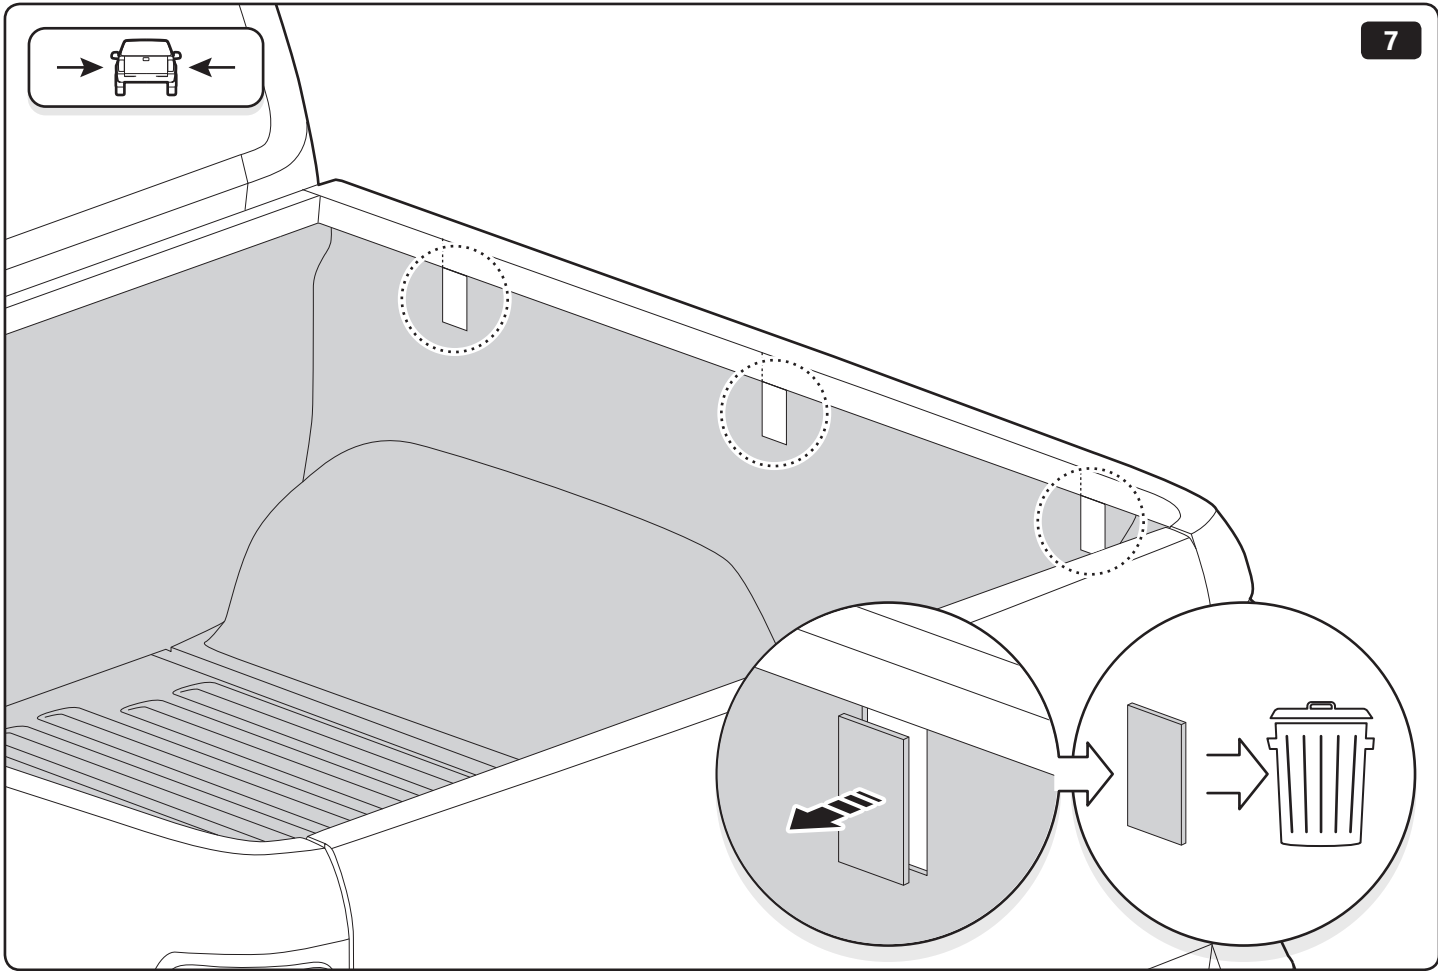

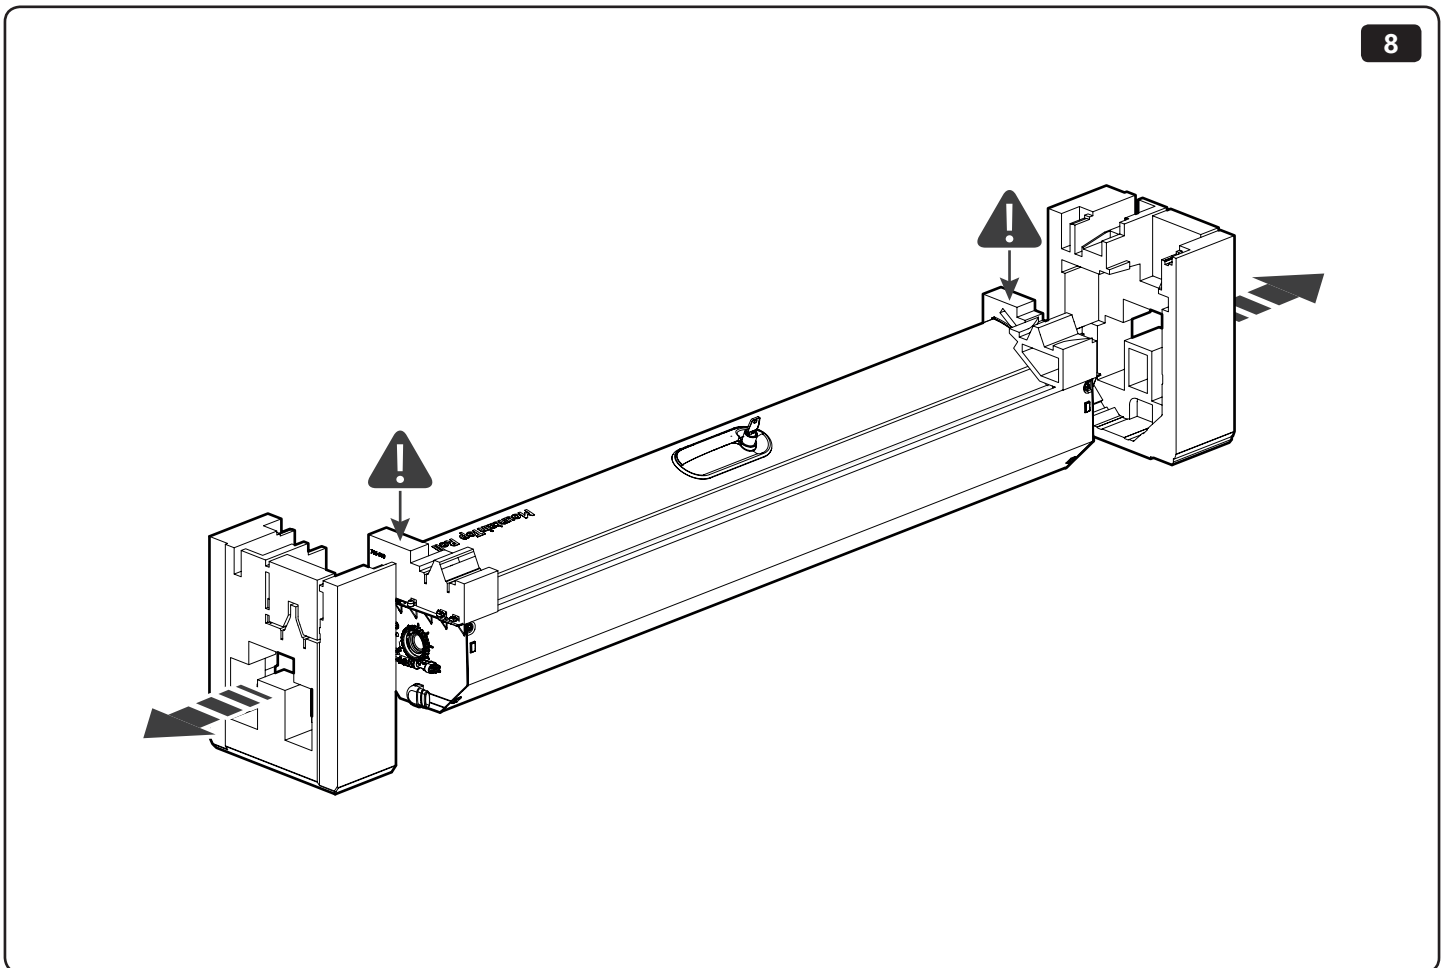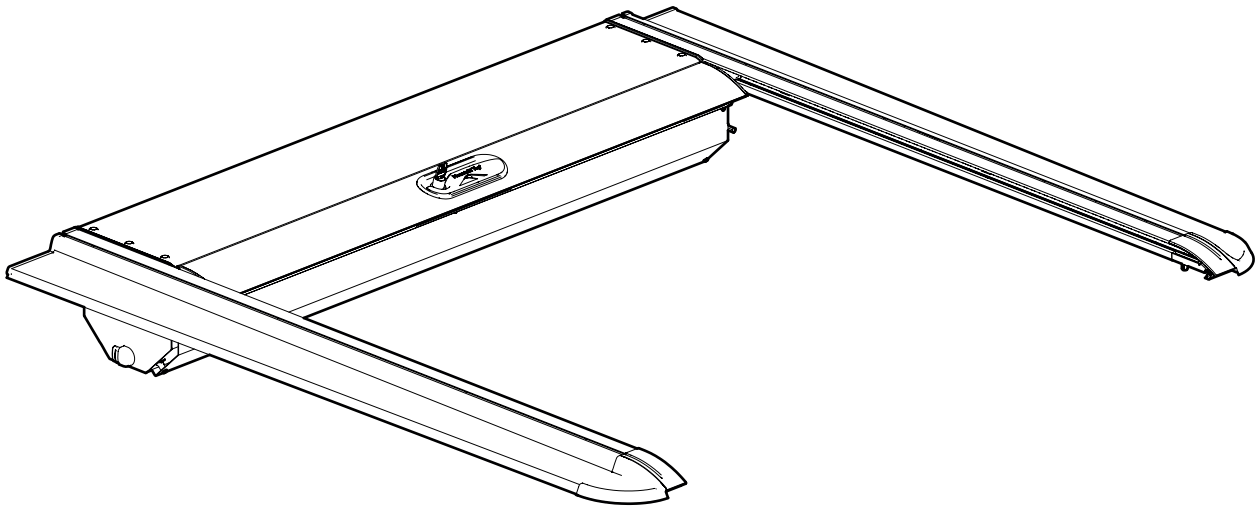



8



9


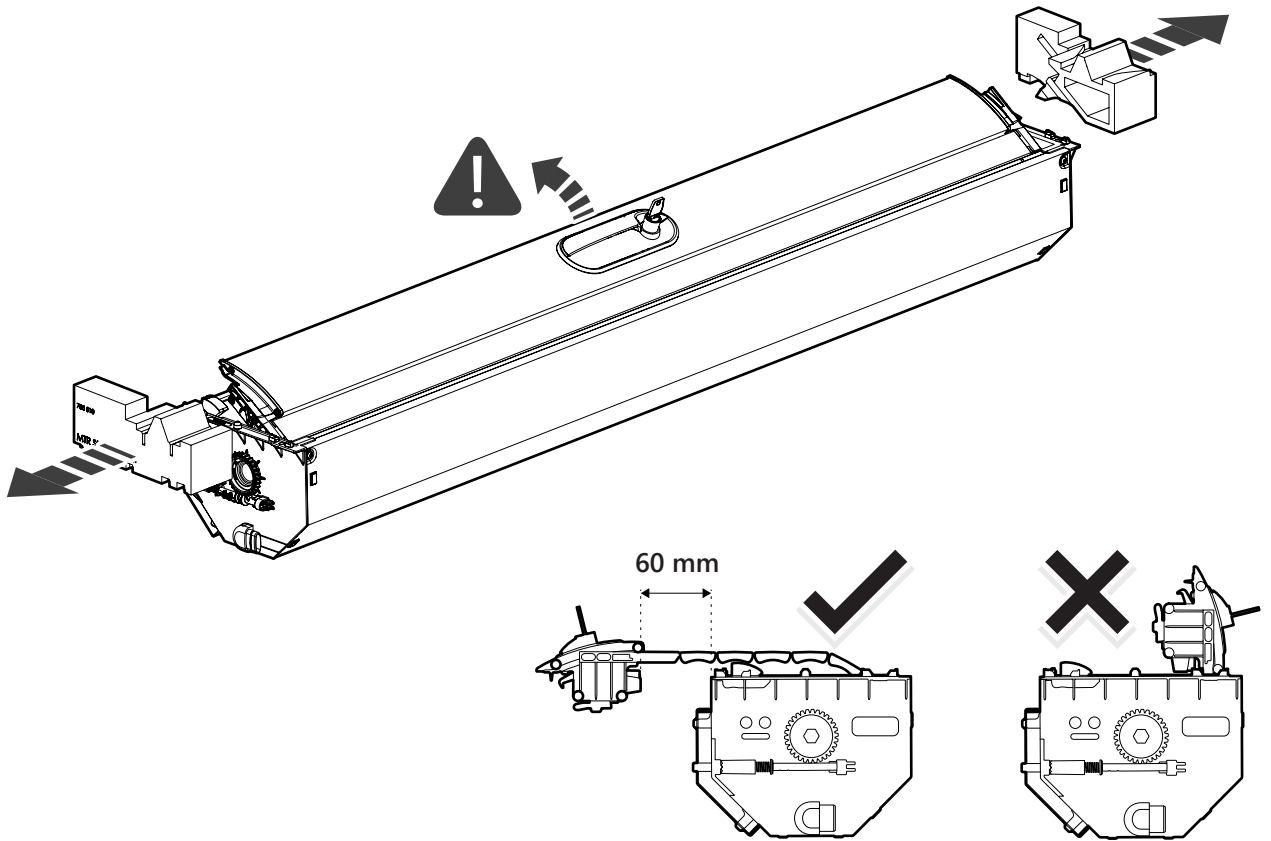






10

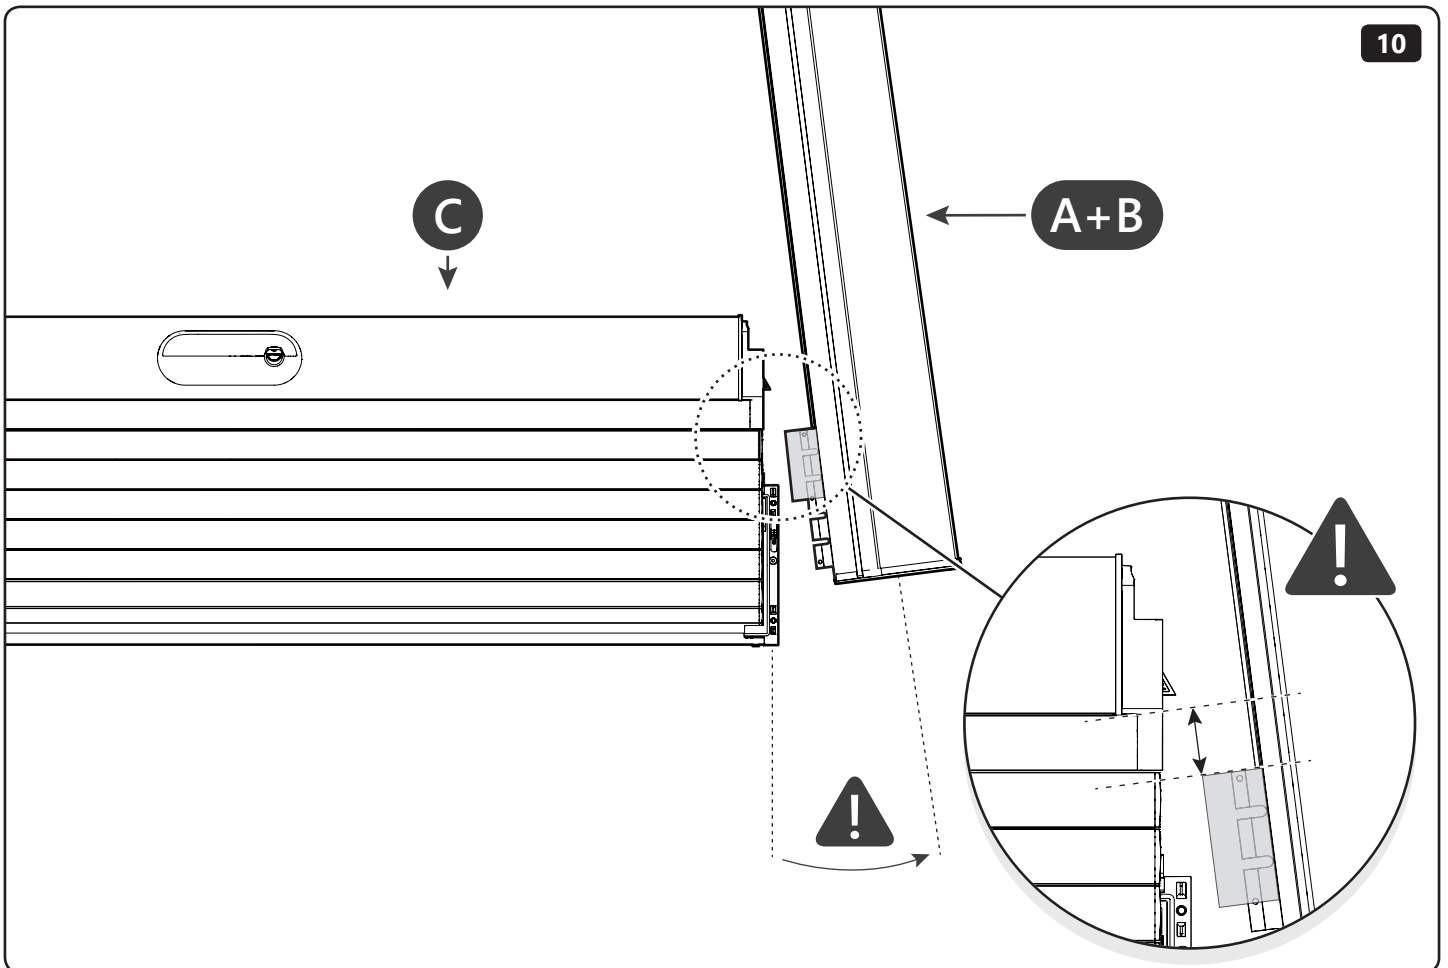



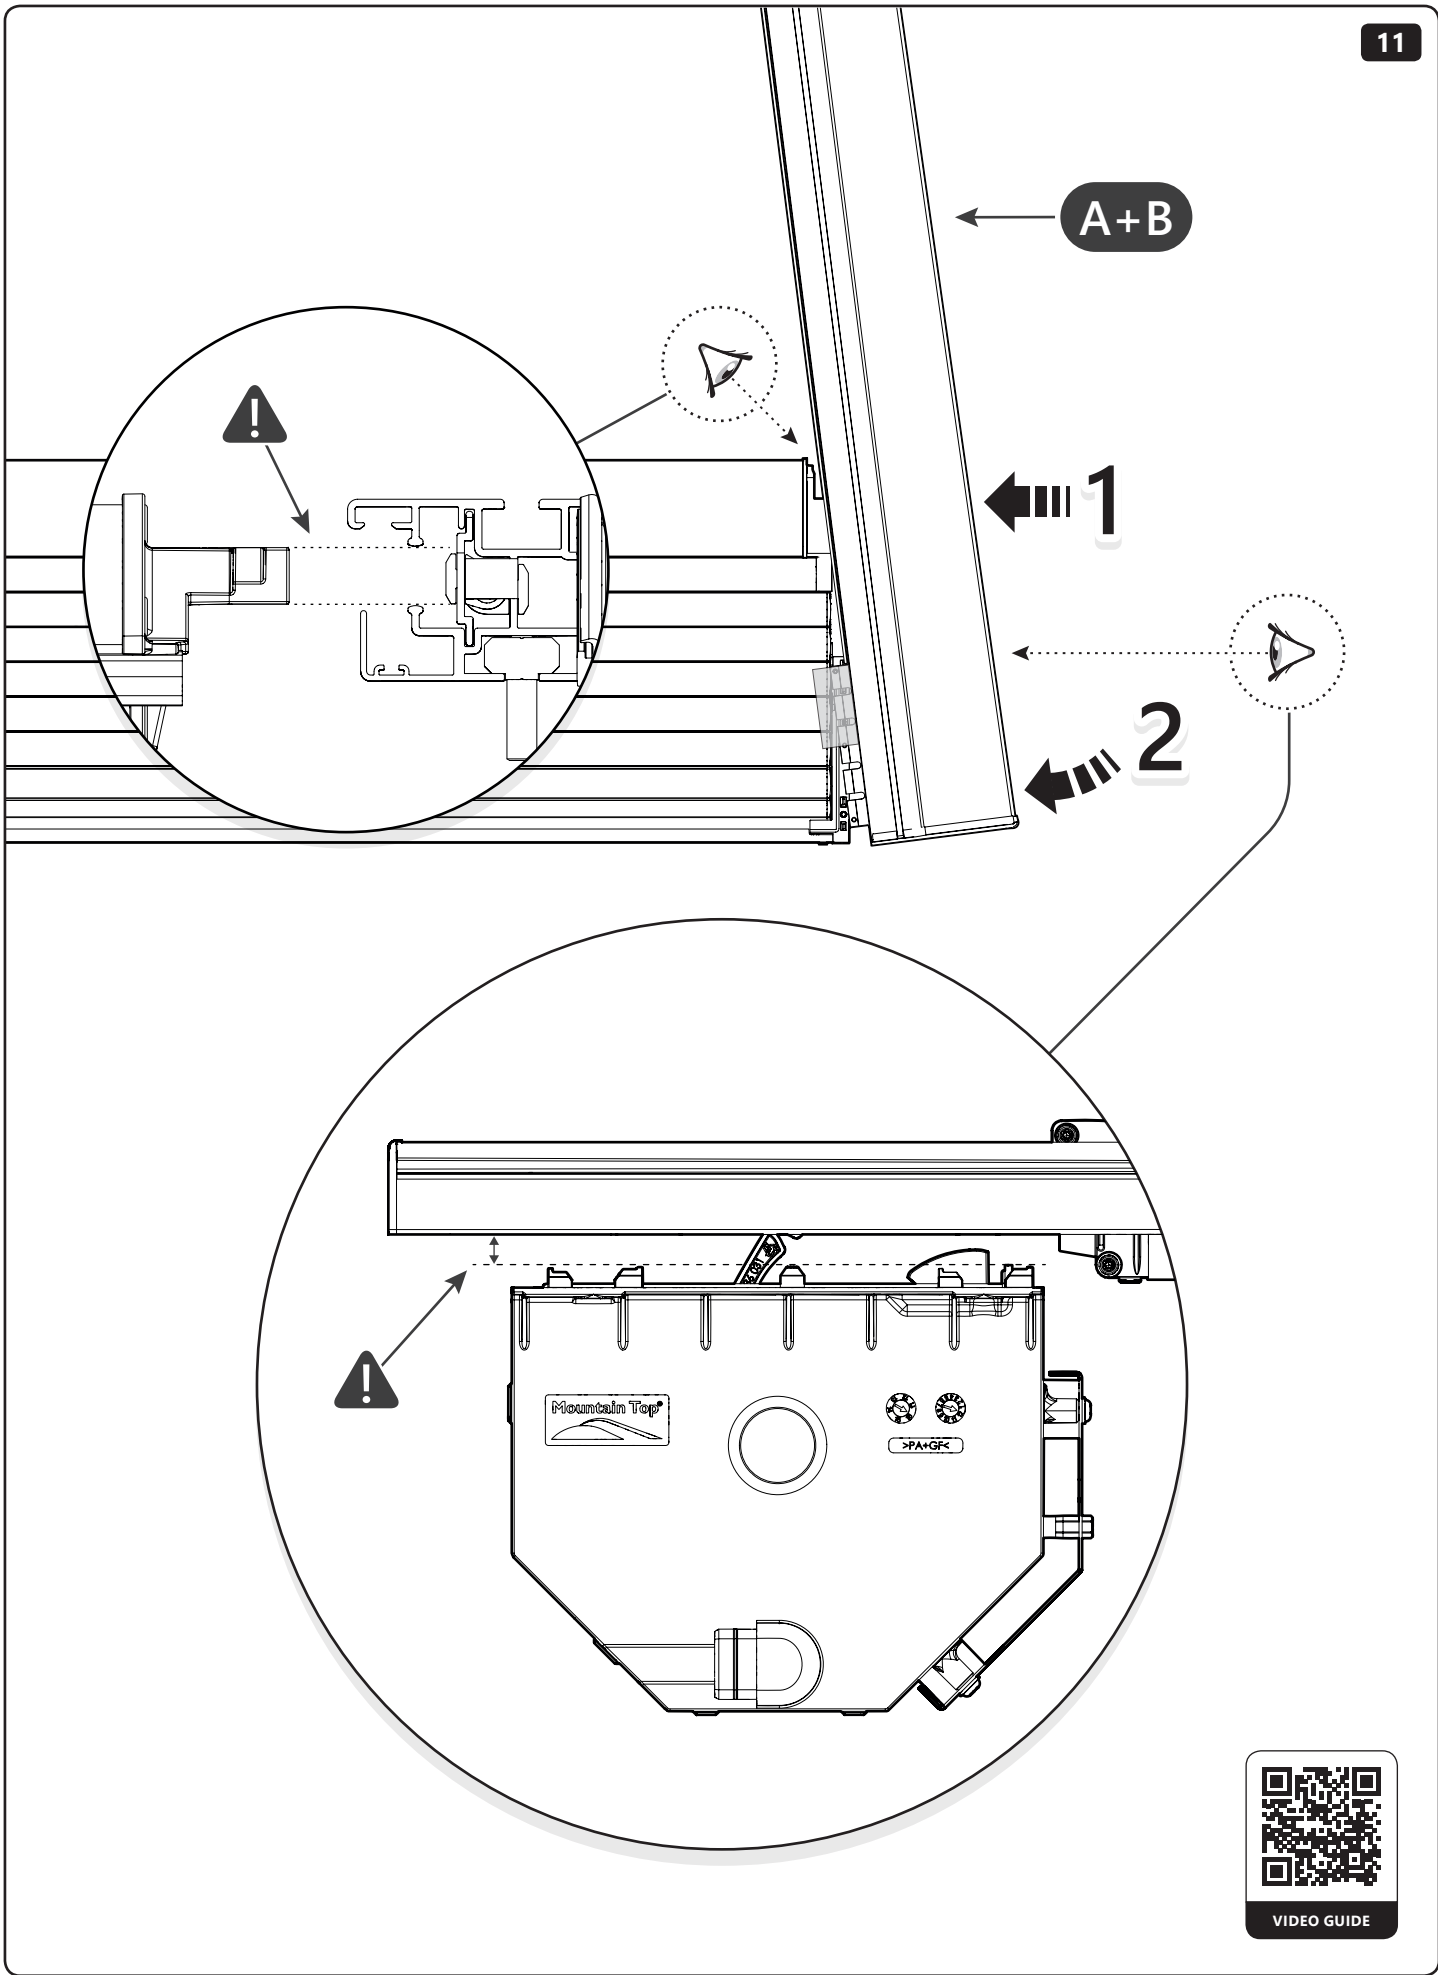


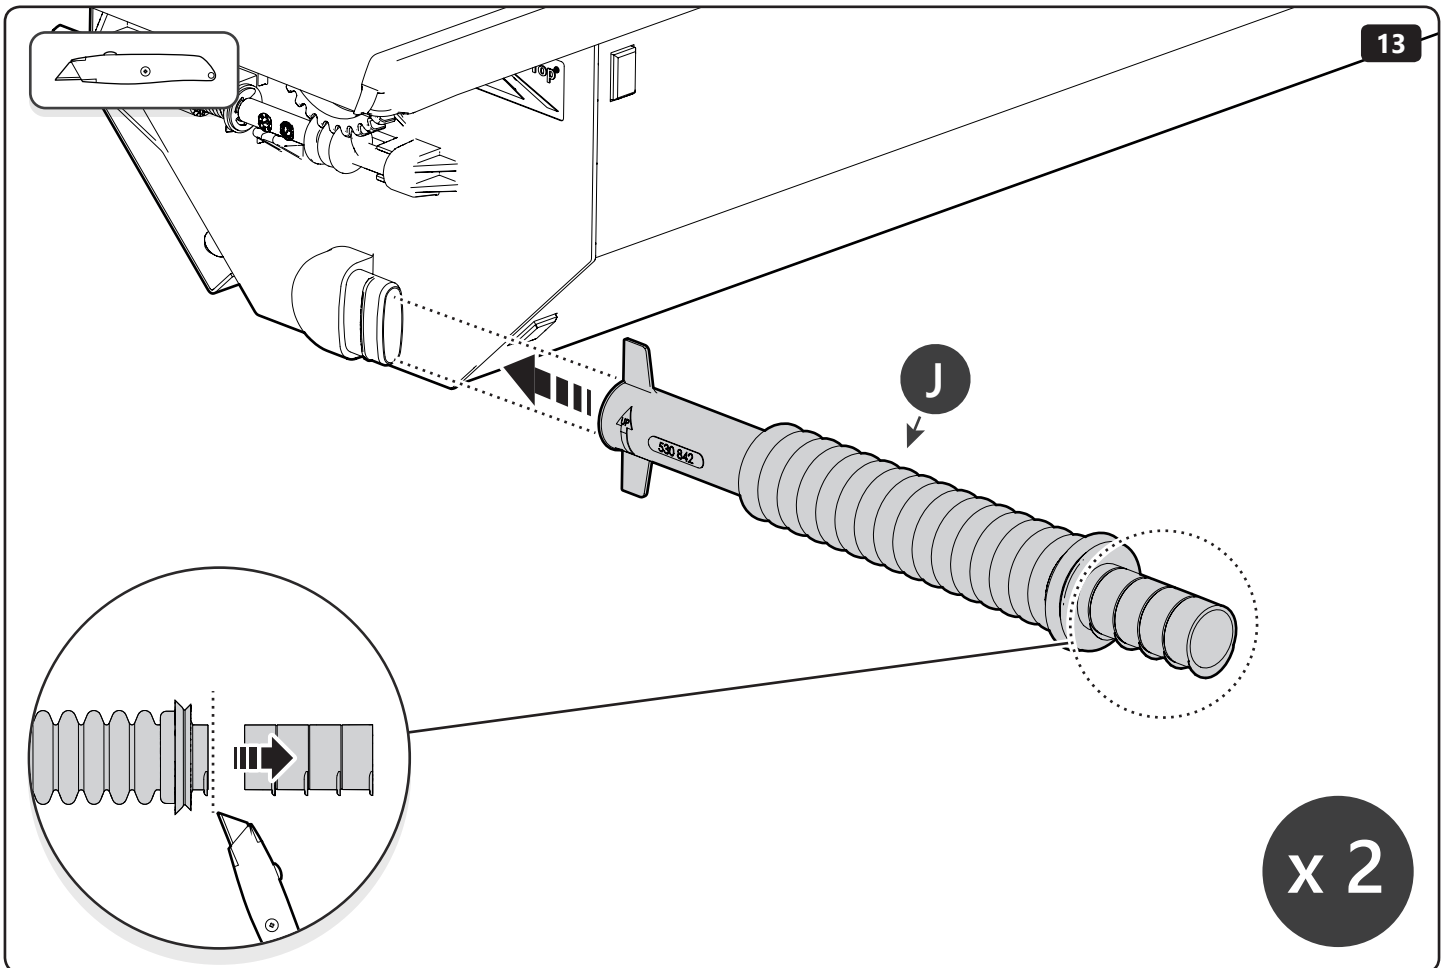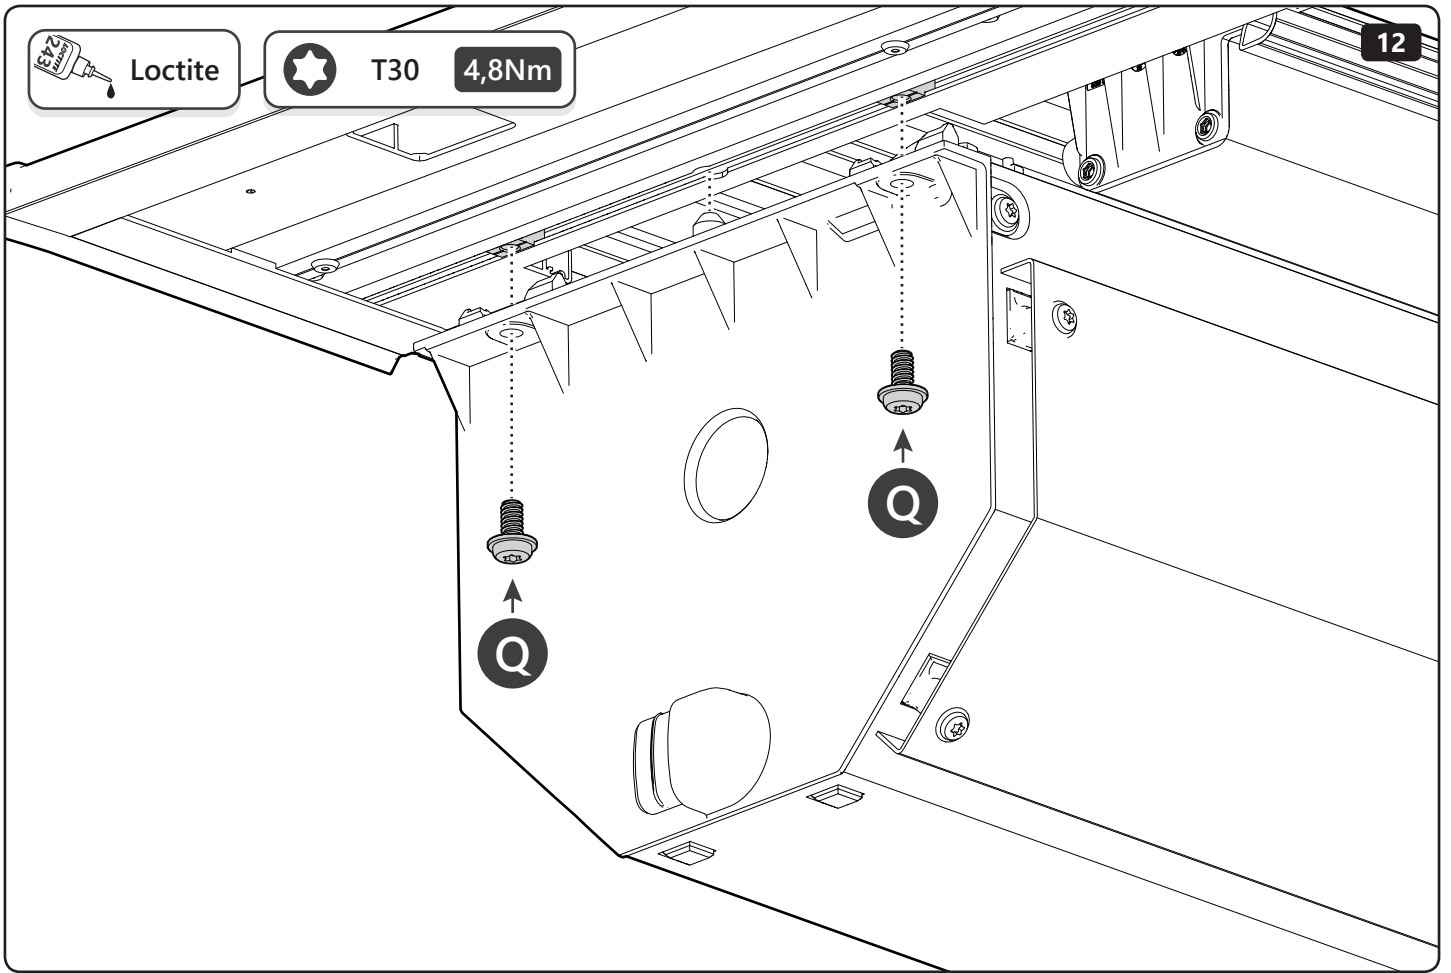


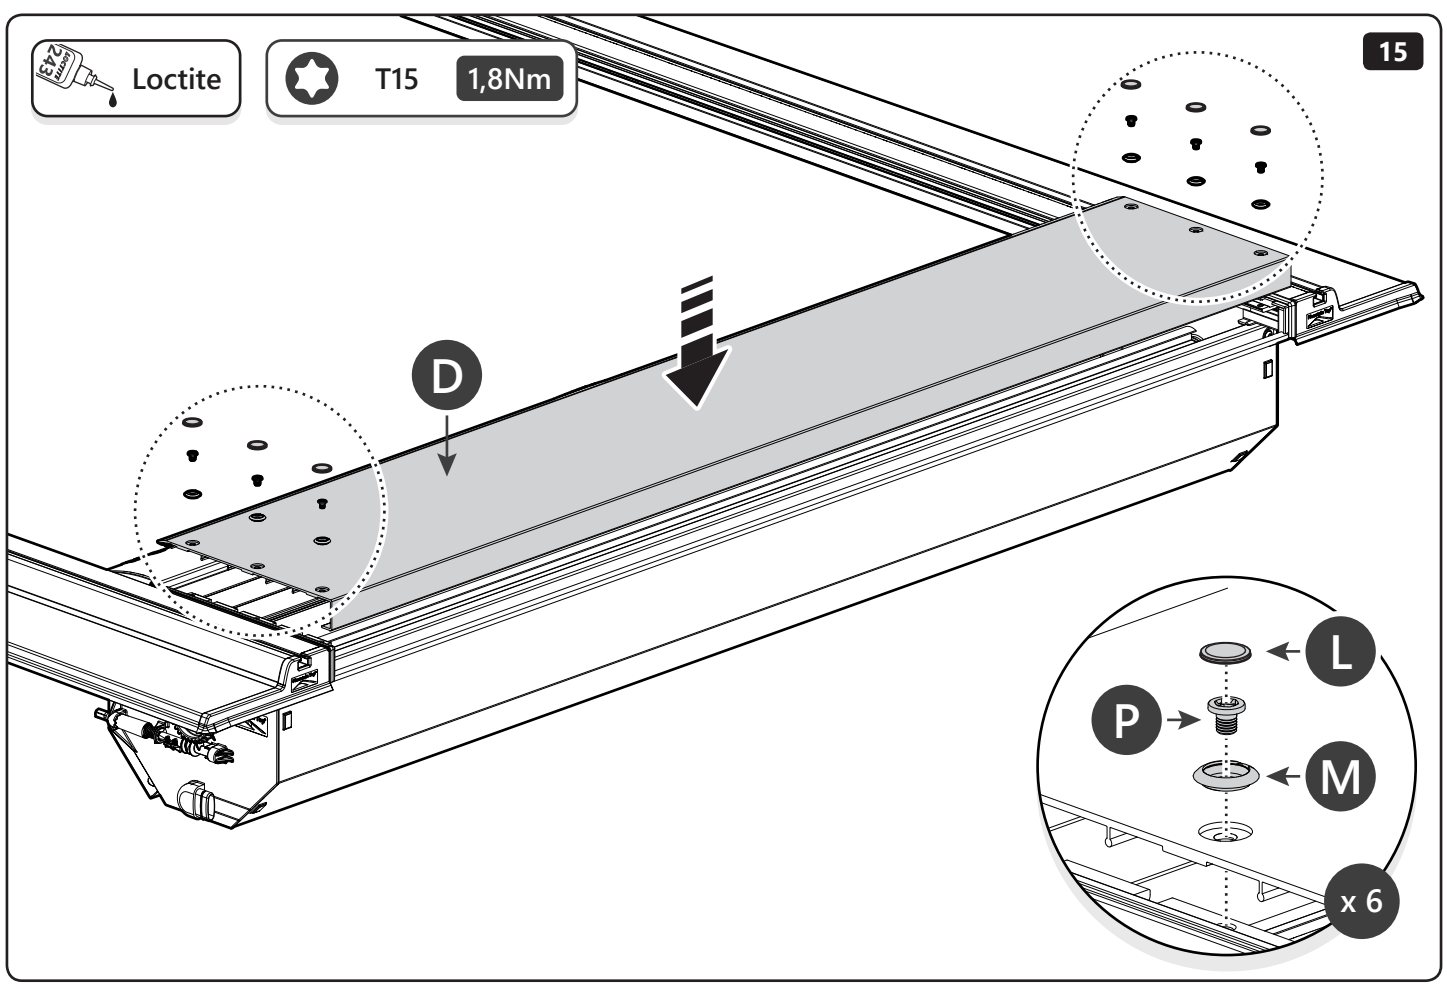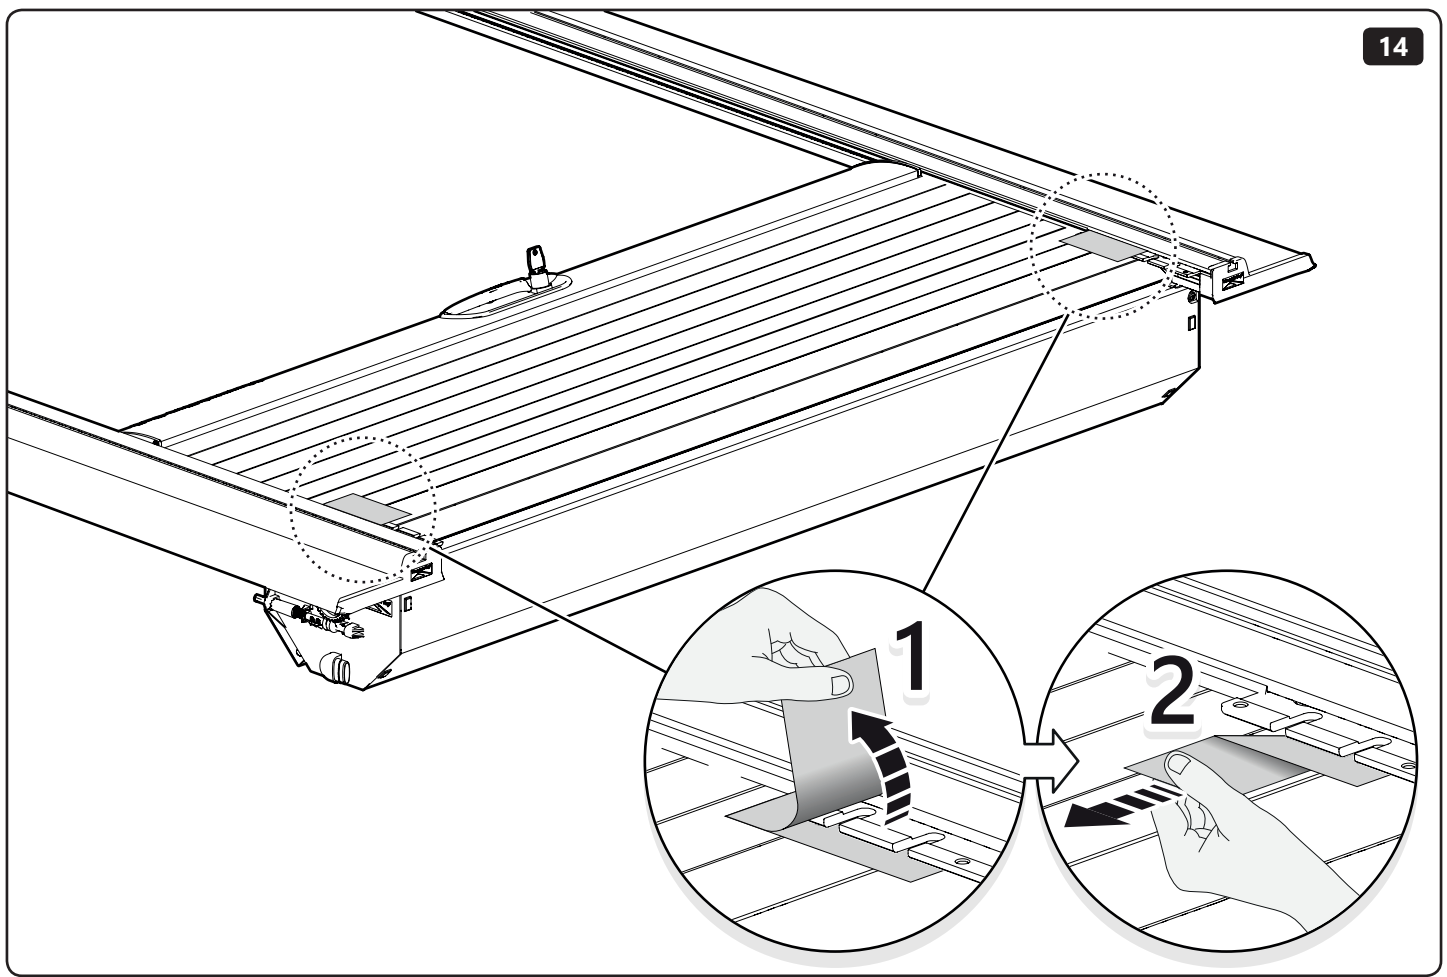

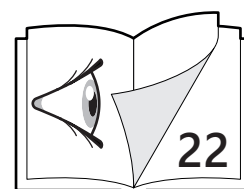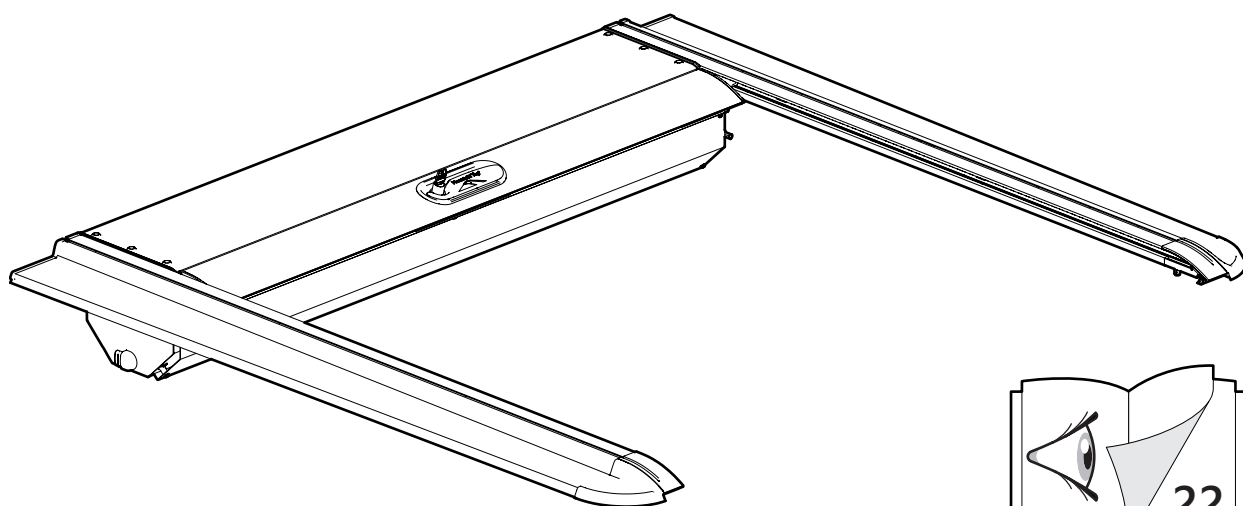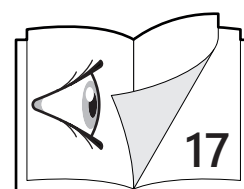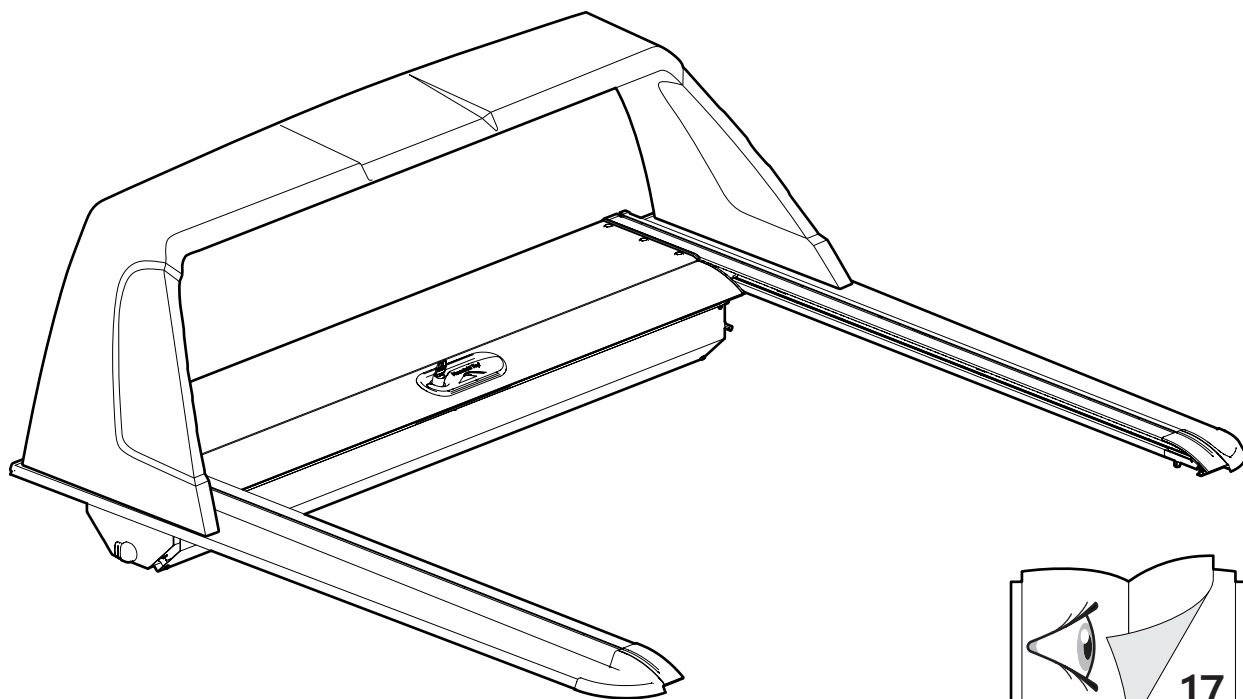
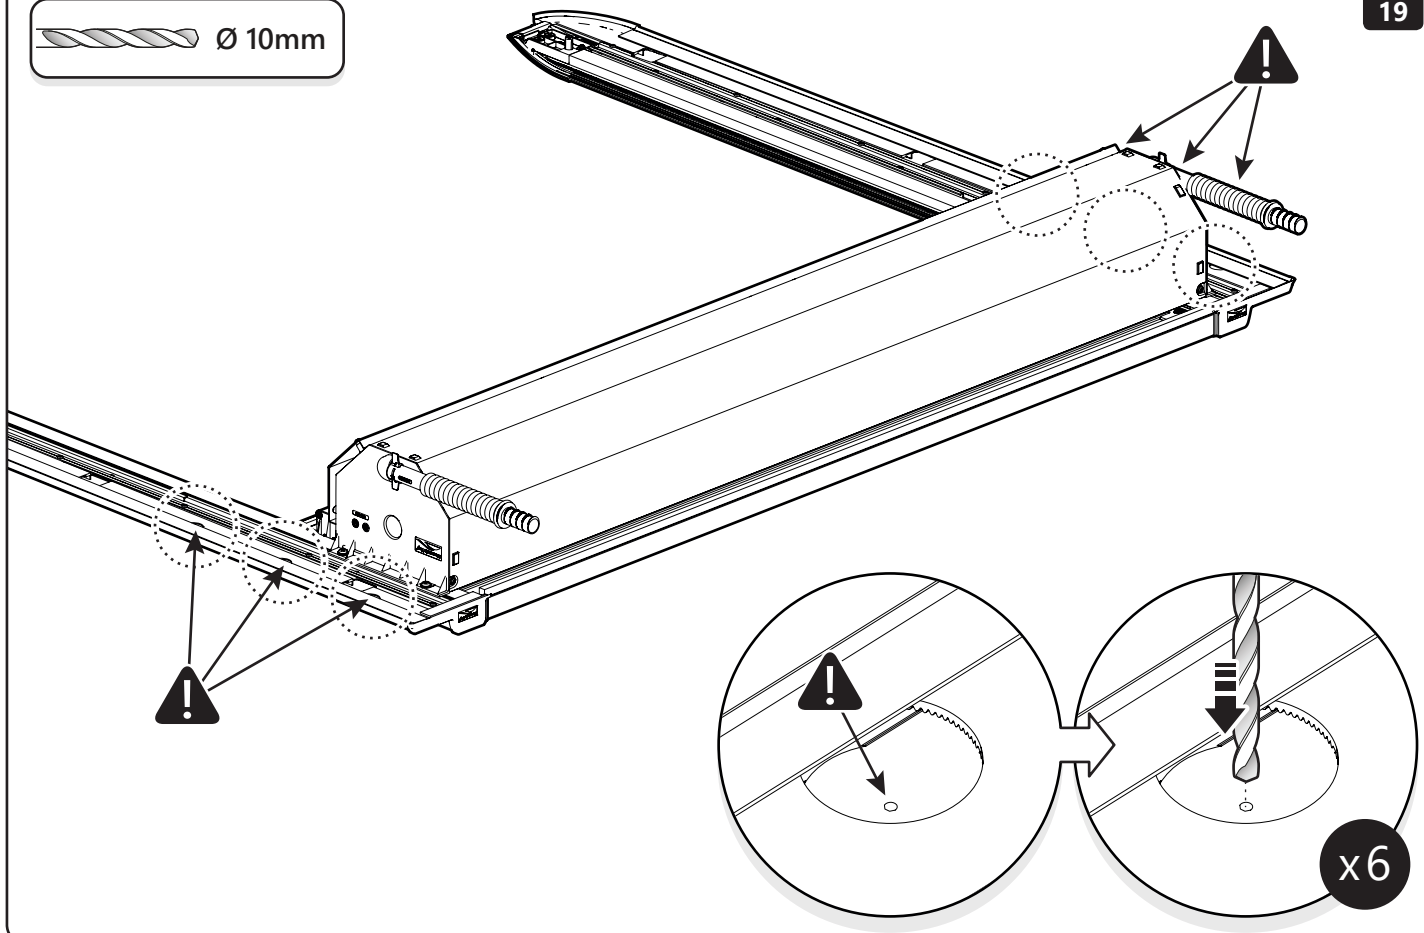




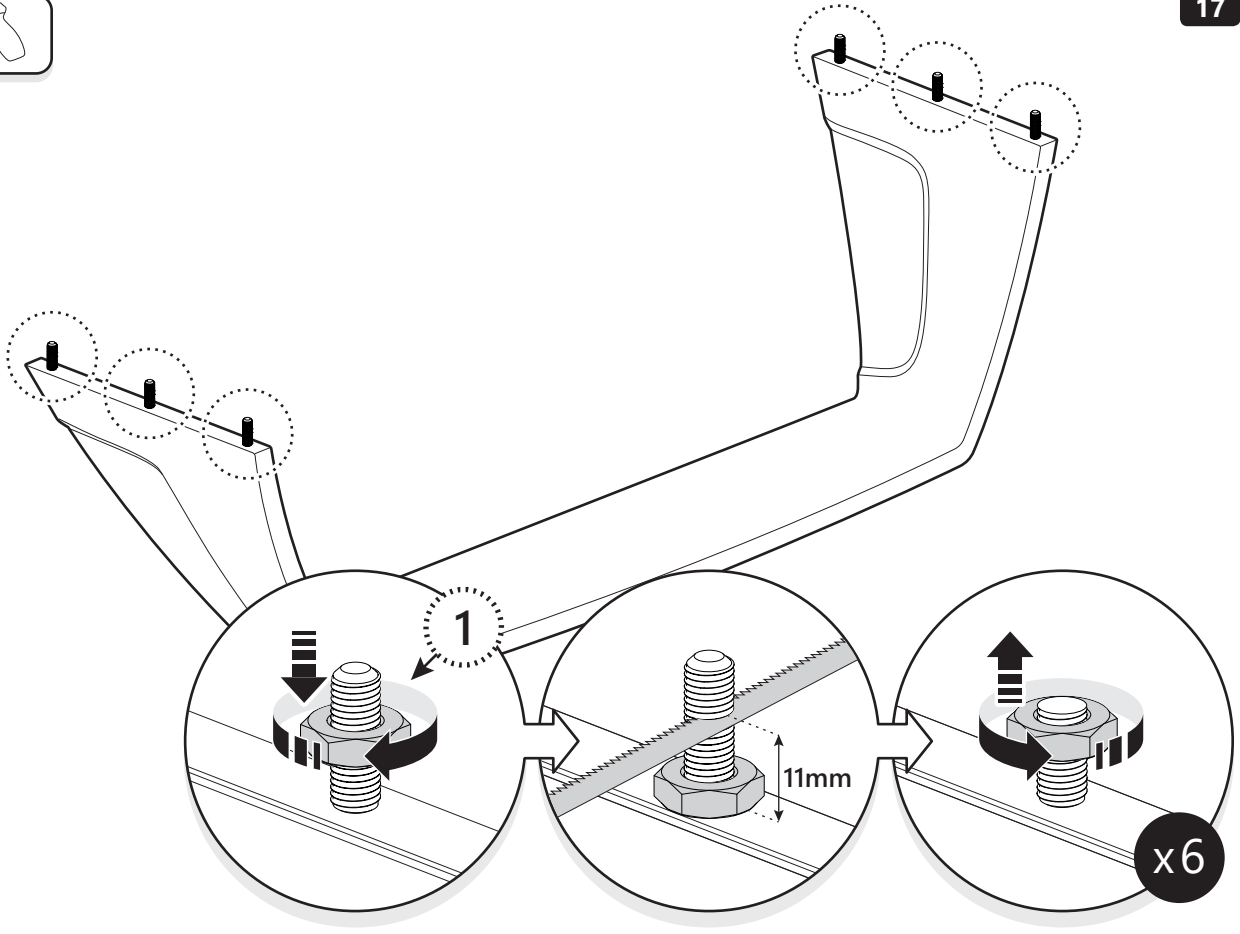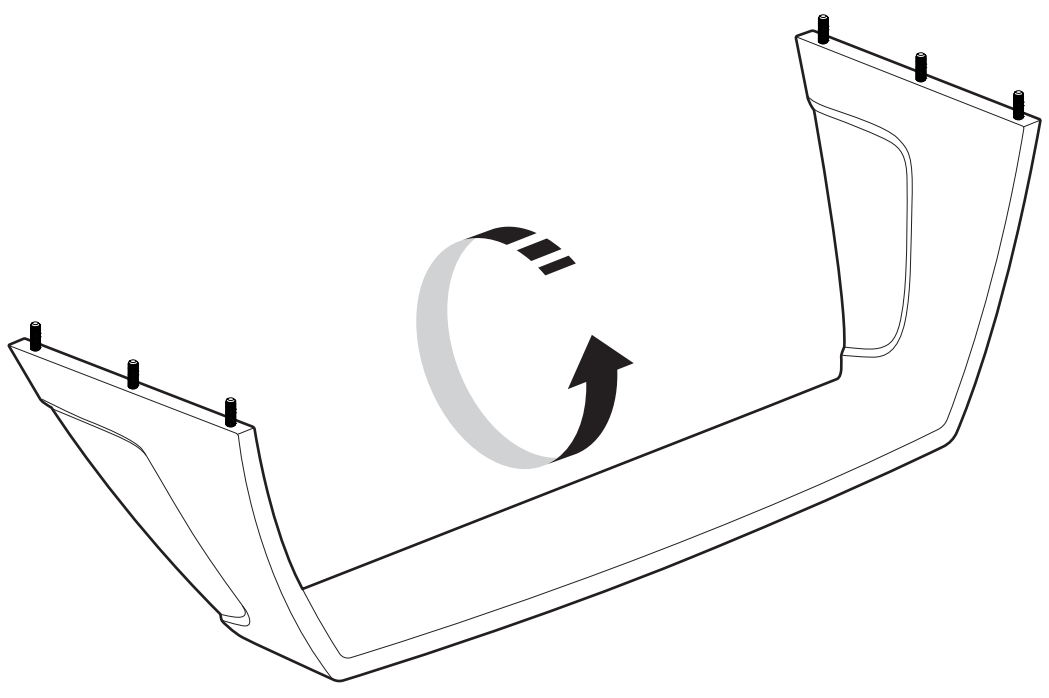


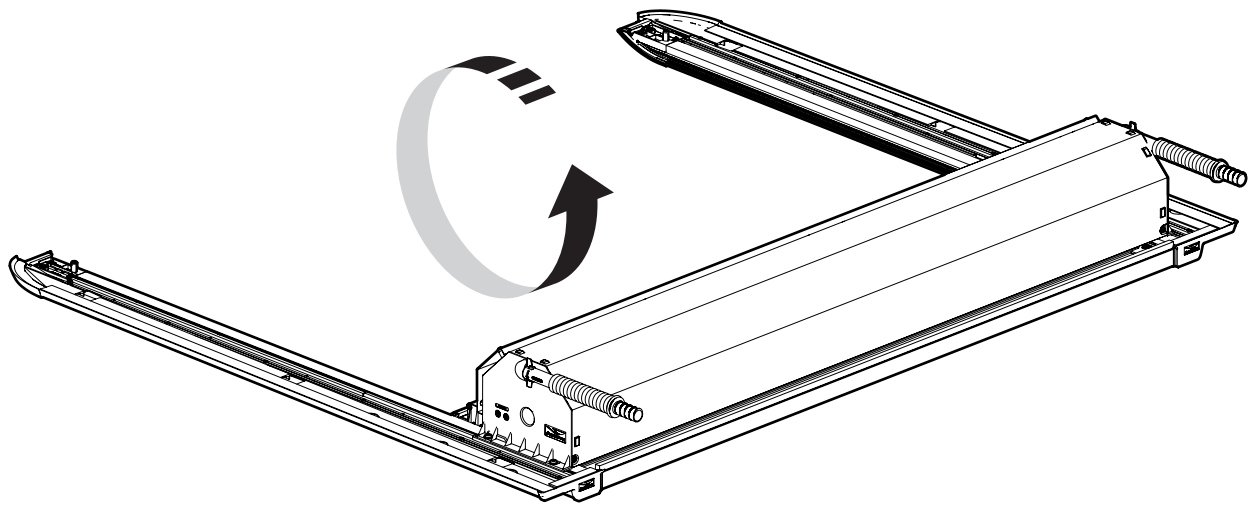


 Ø 10mm




20

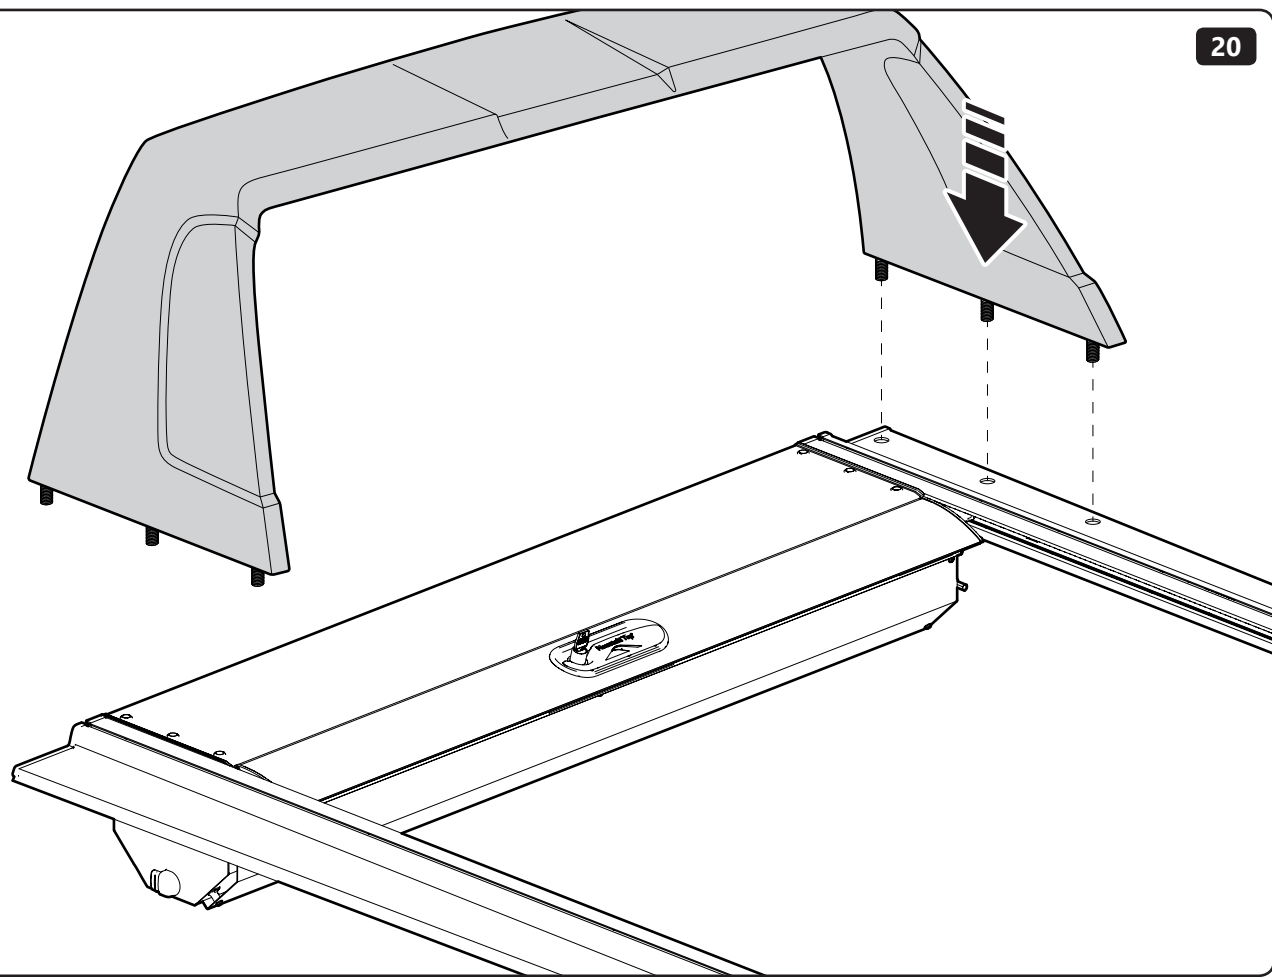


21

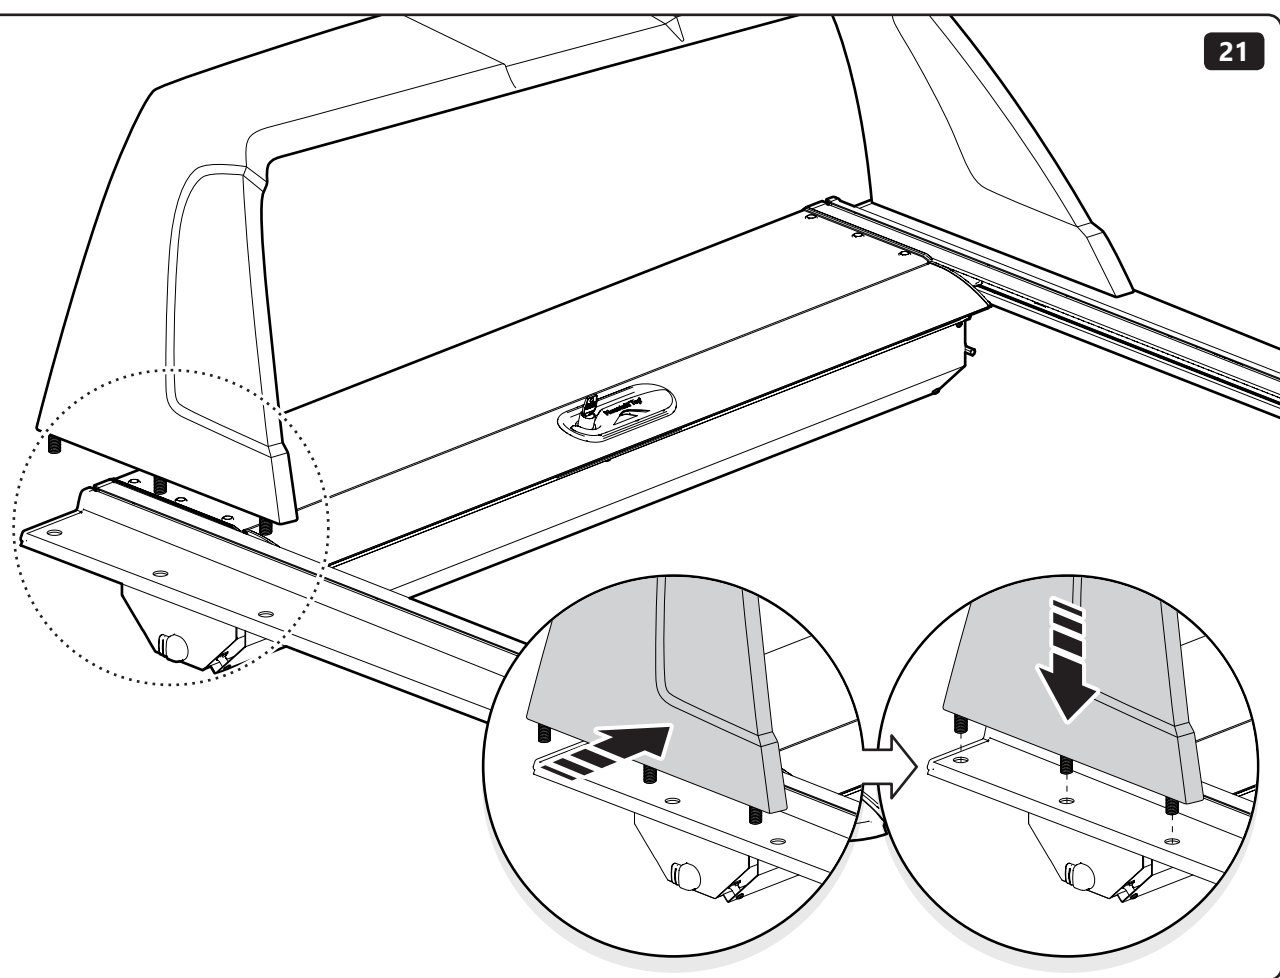




 LOCTITE 243



 13mm **10Nm**

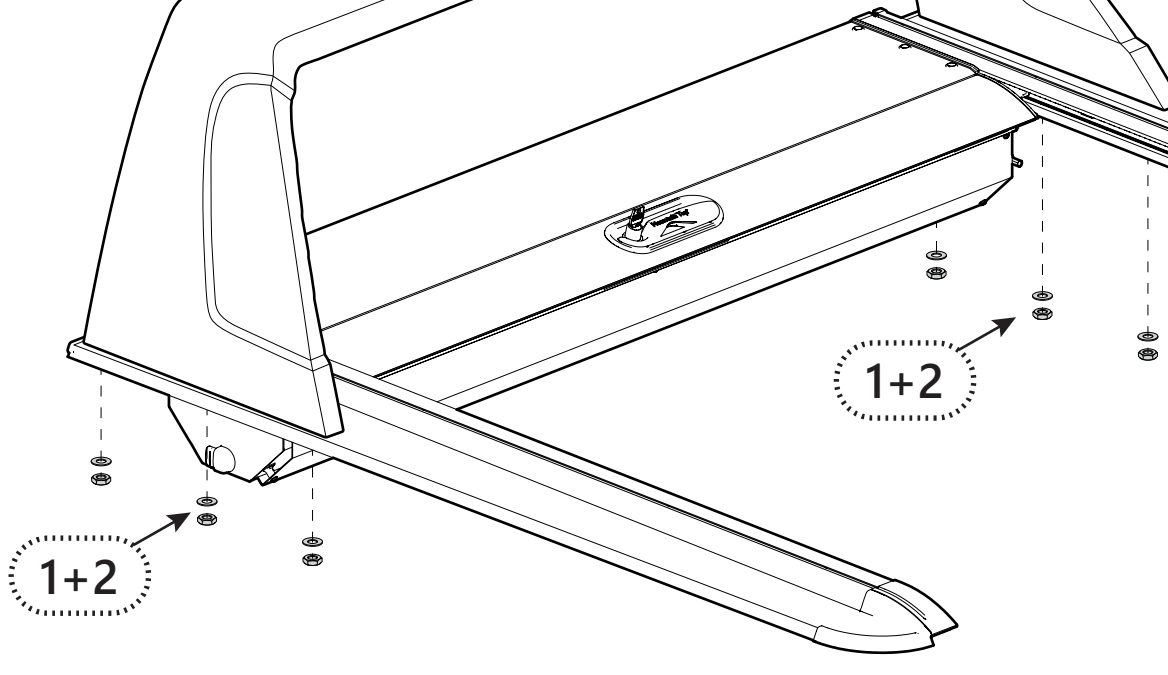






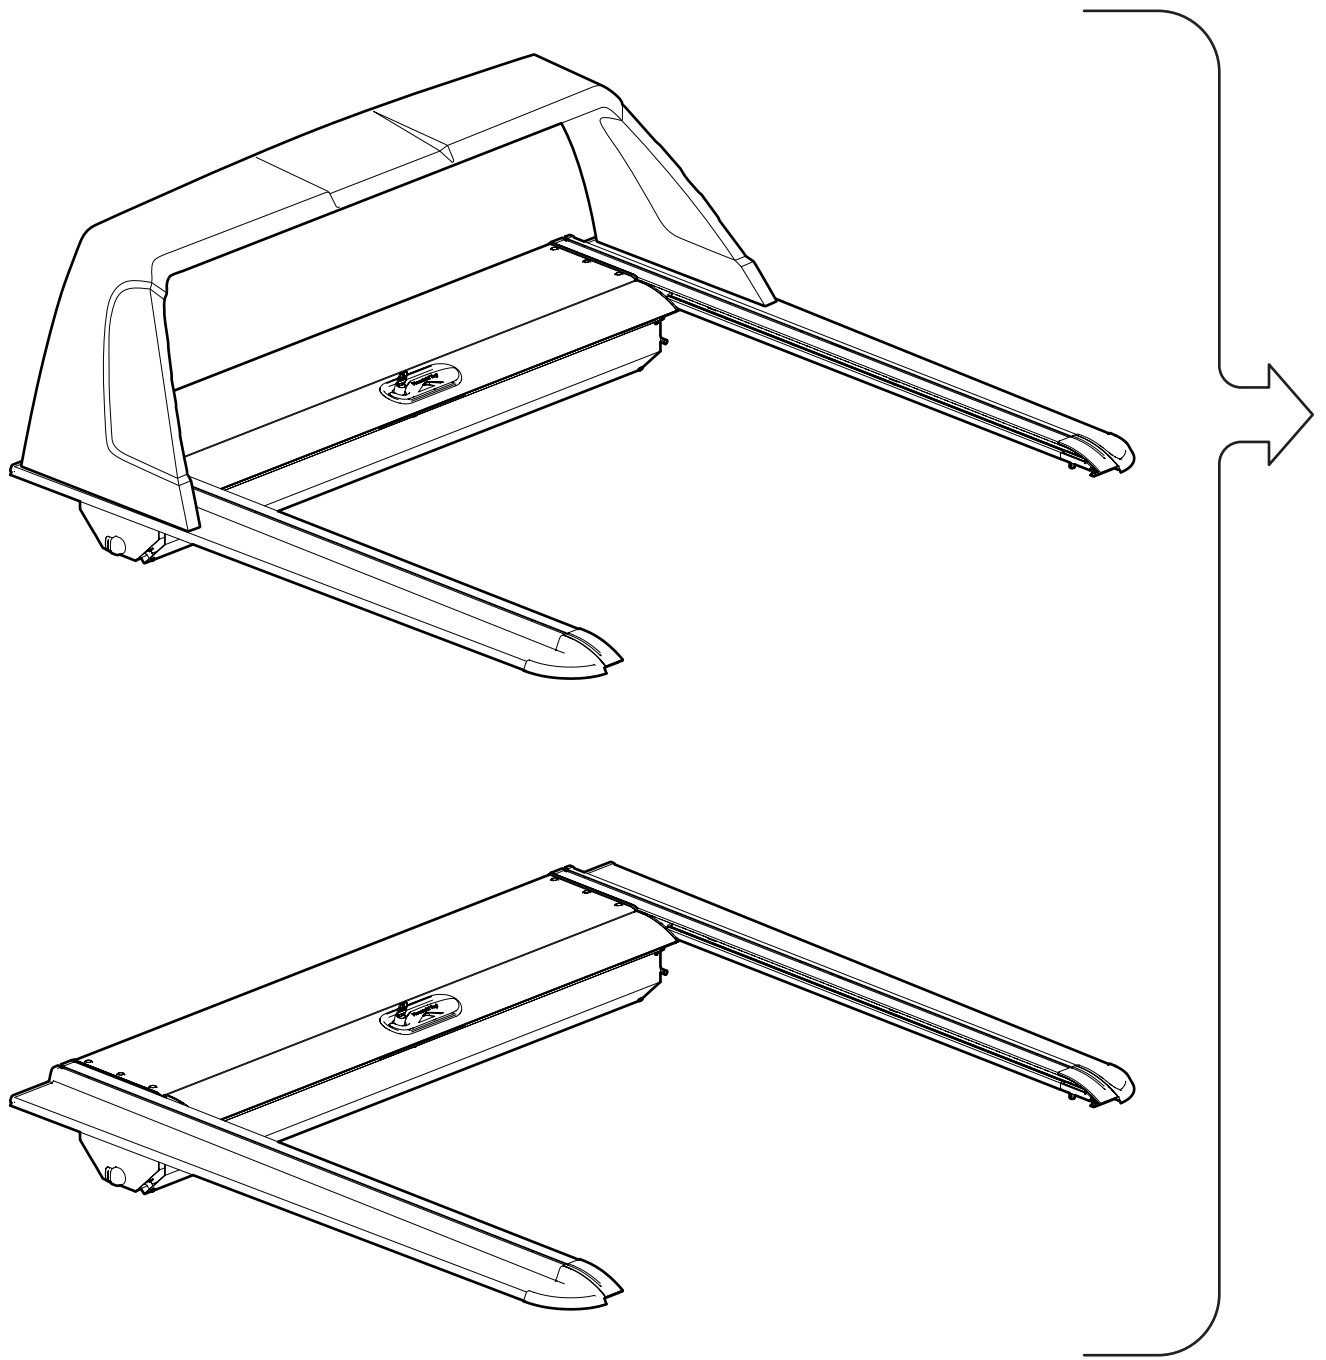


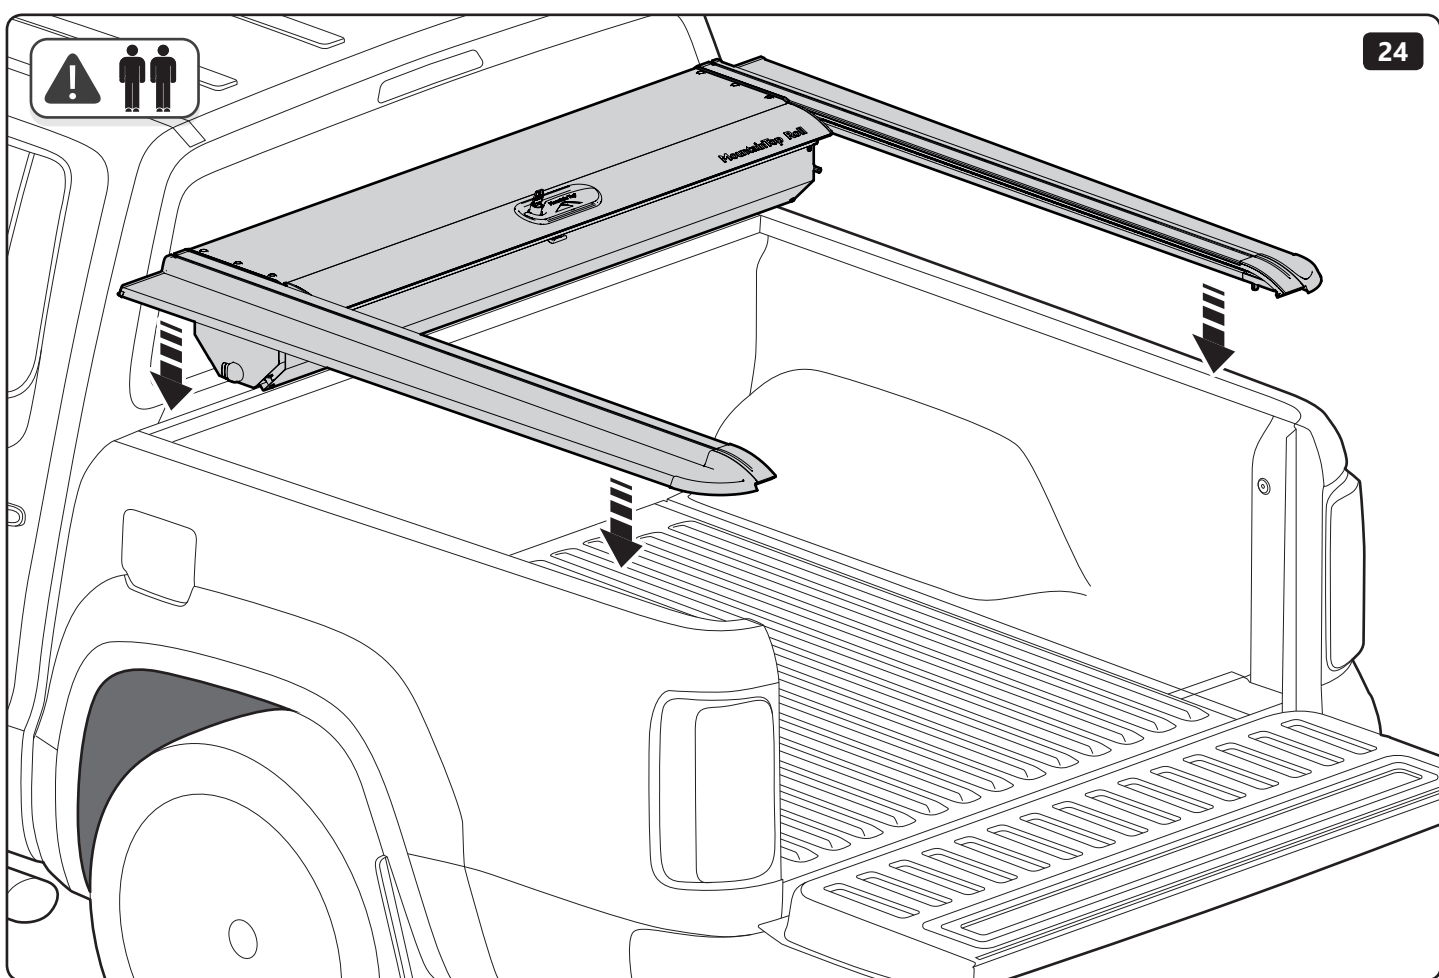
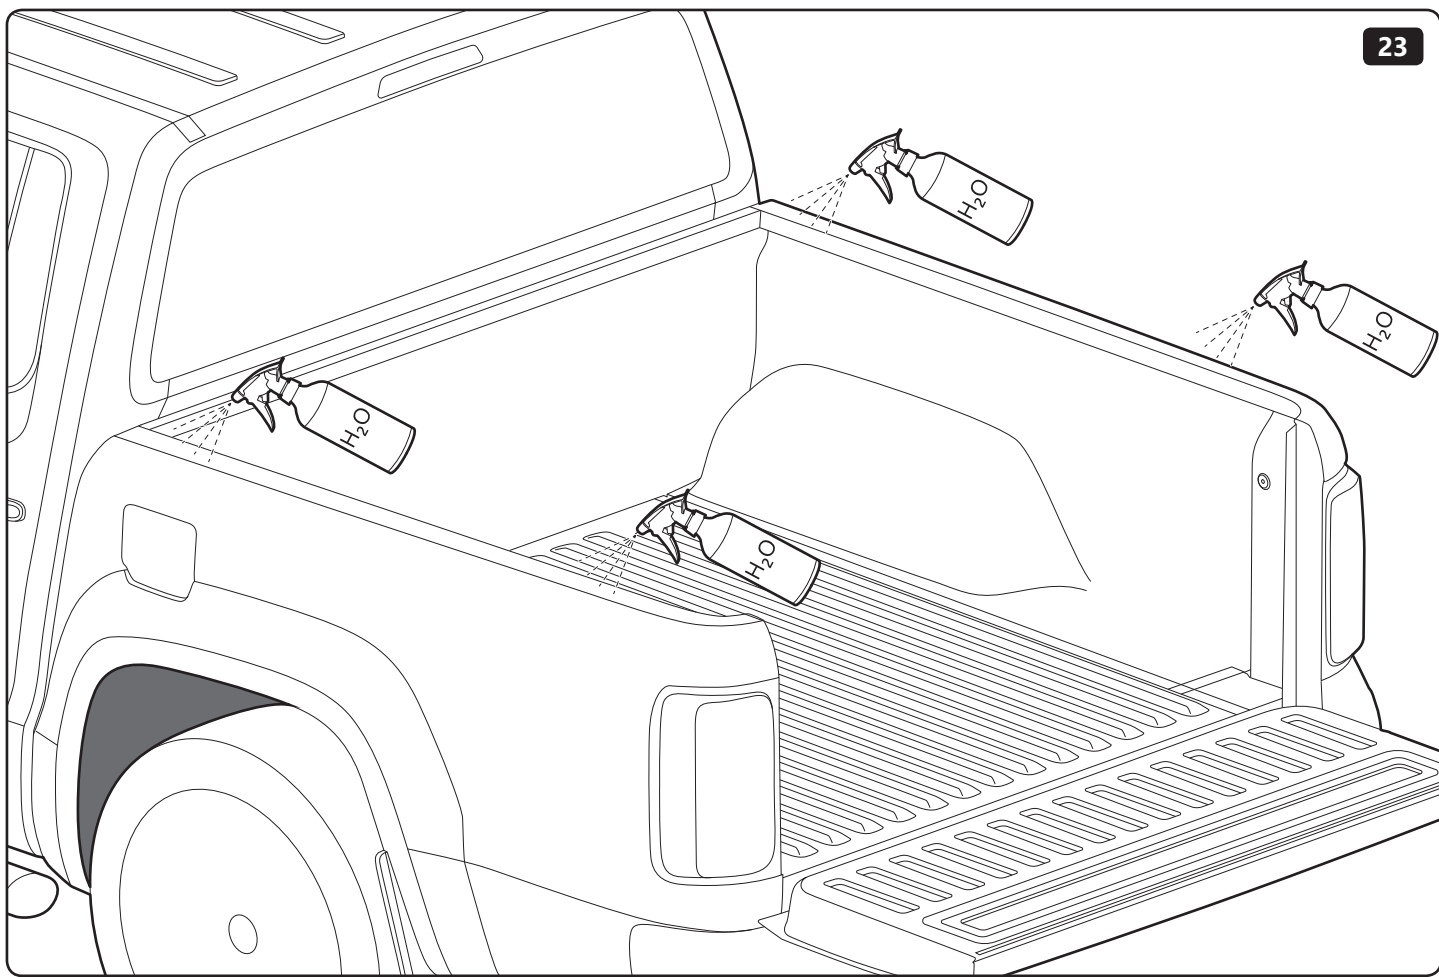


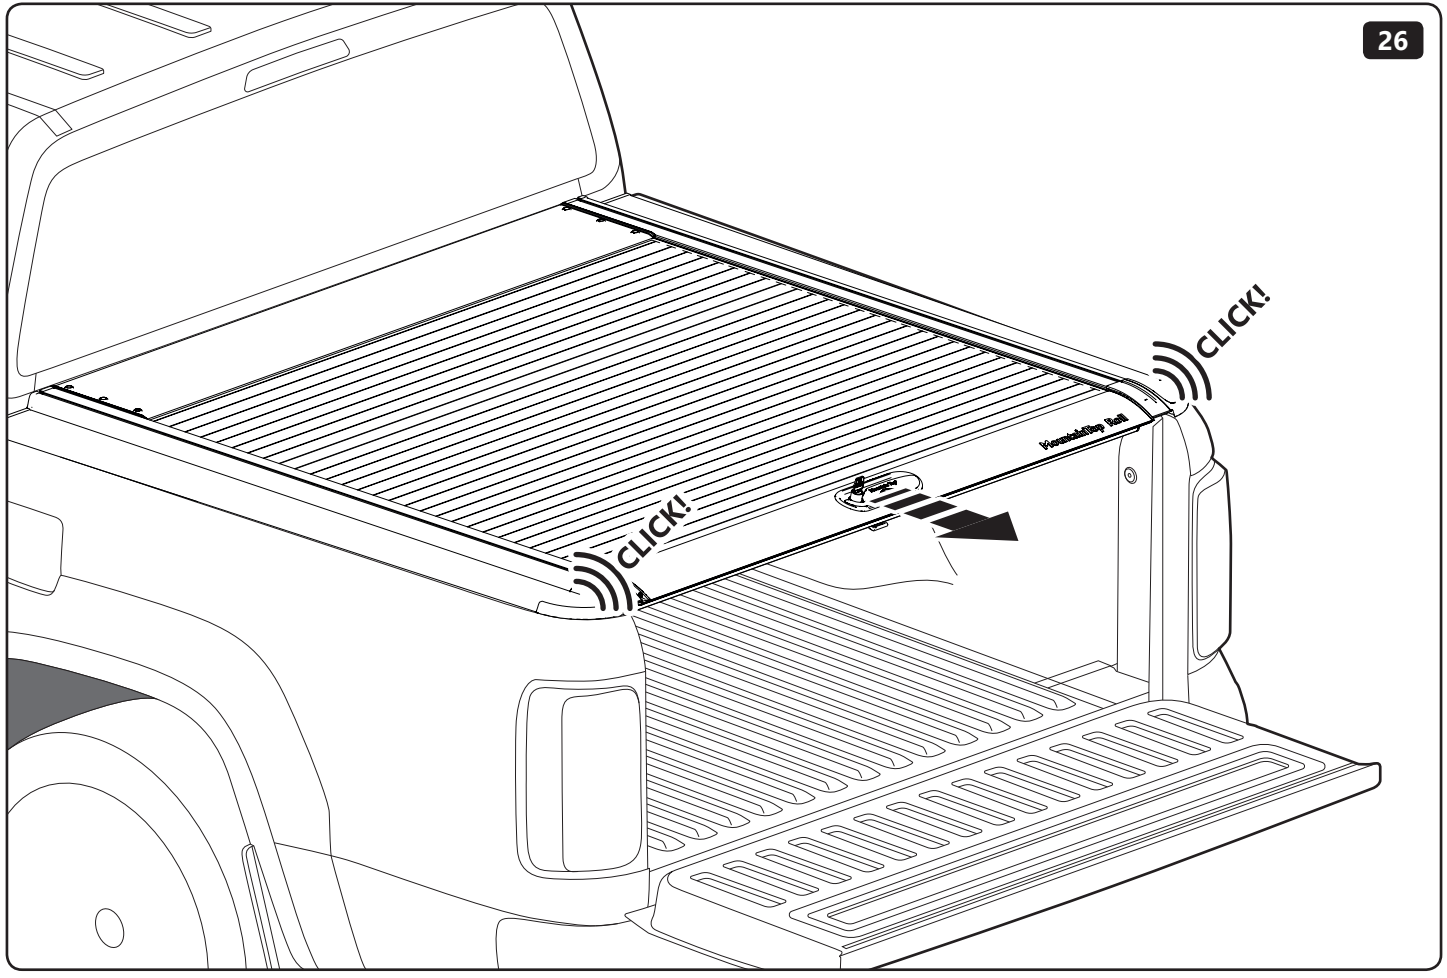
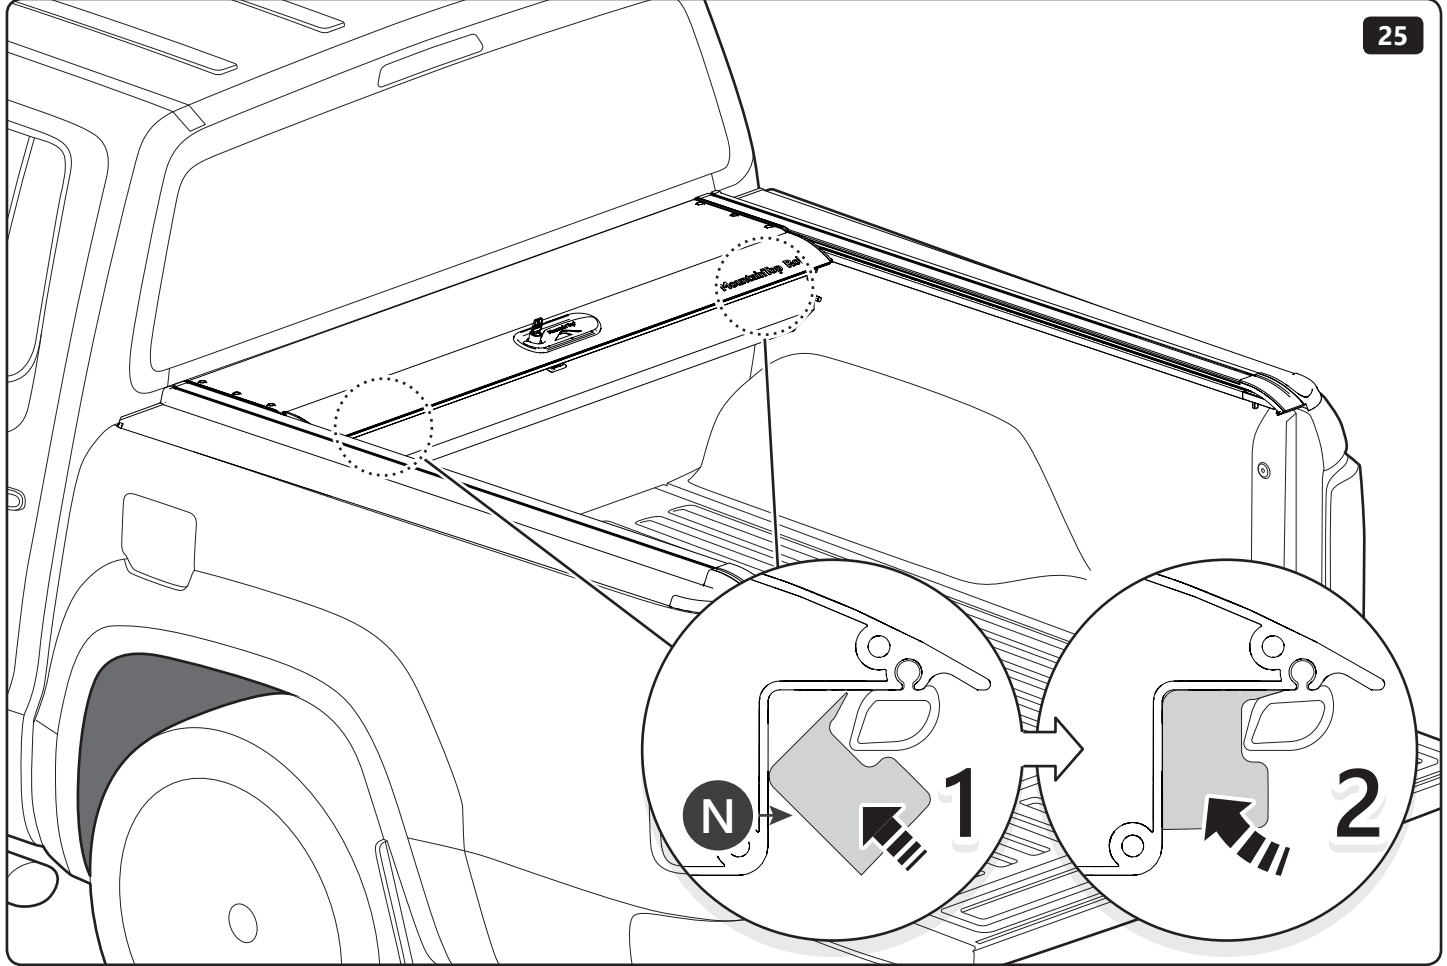




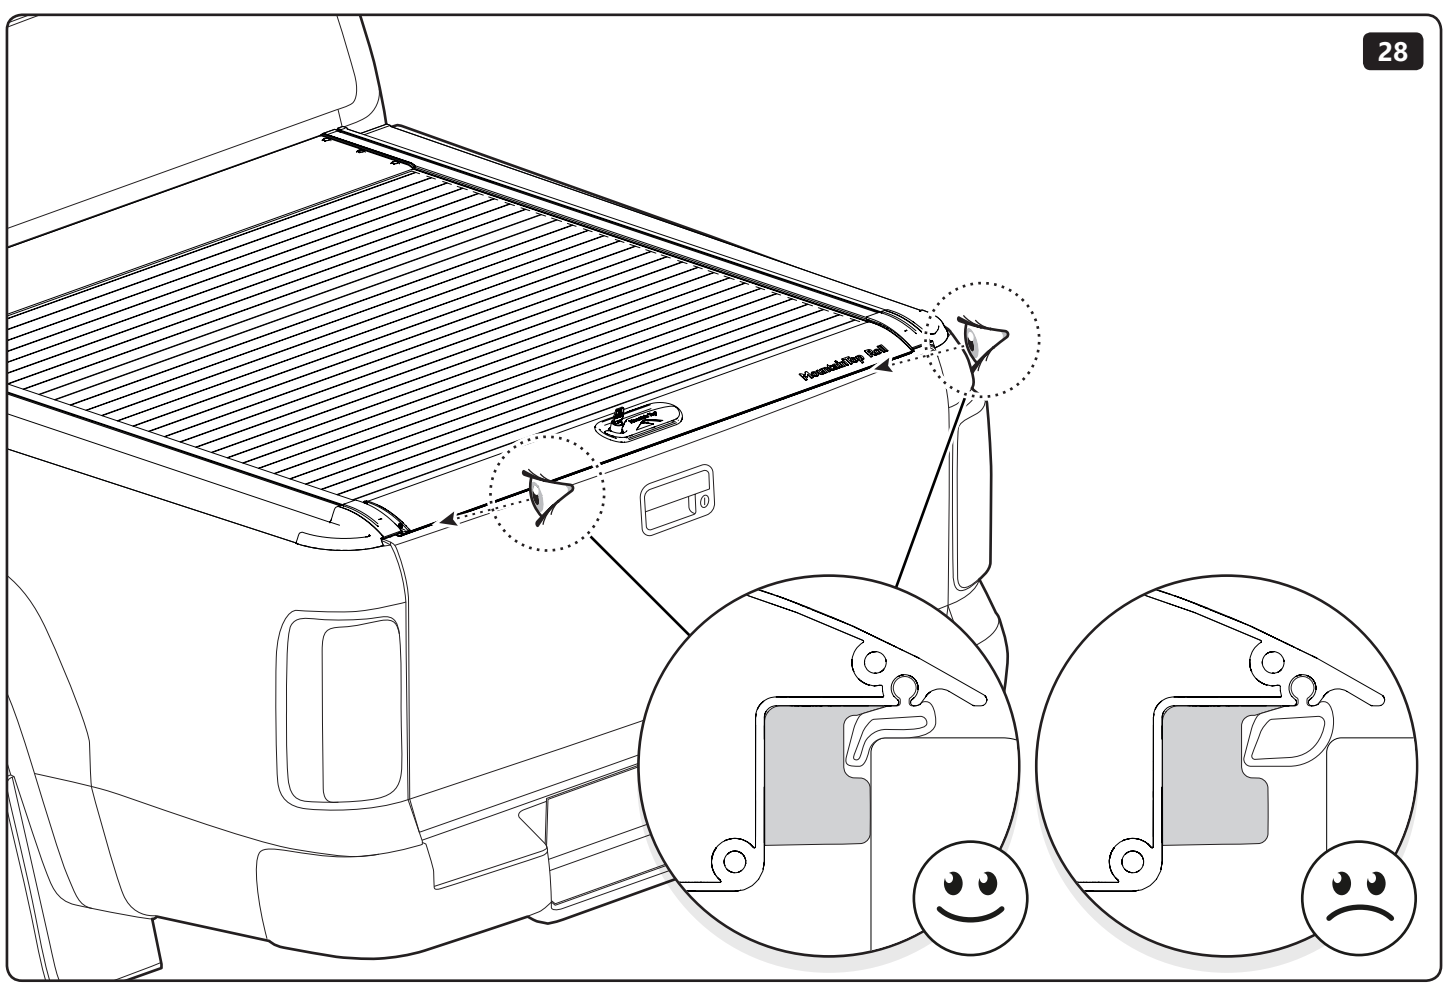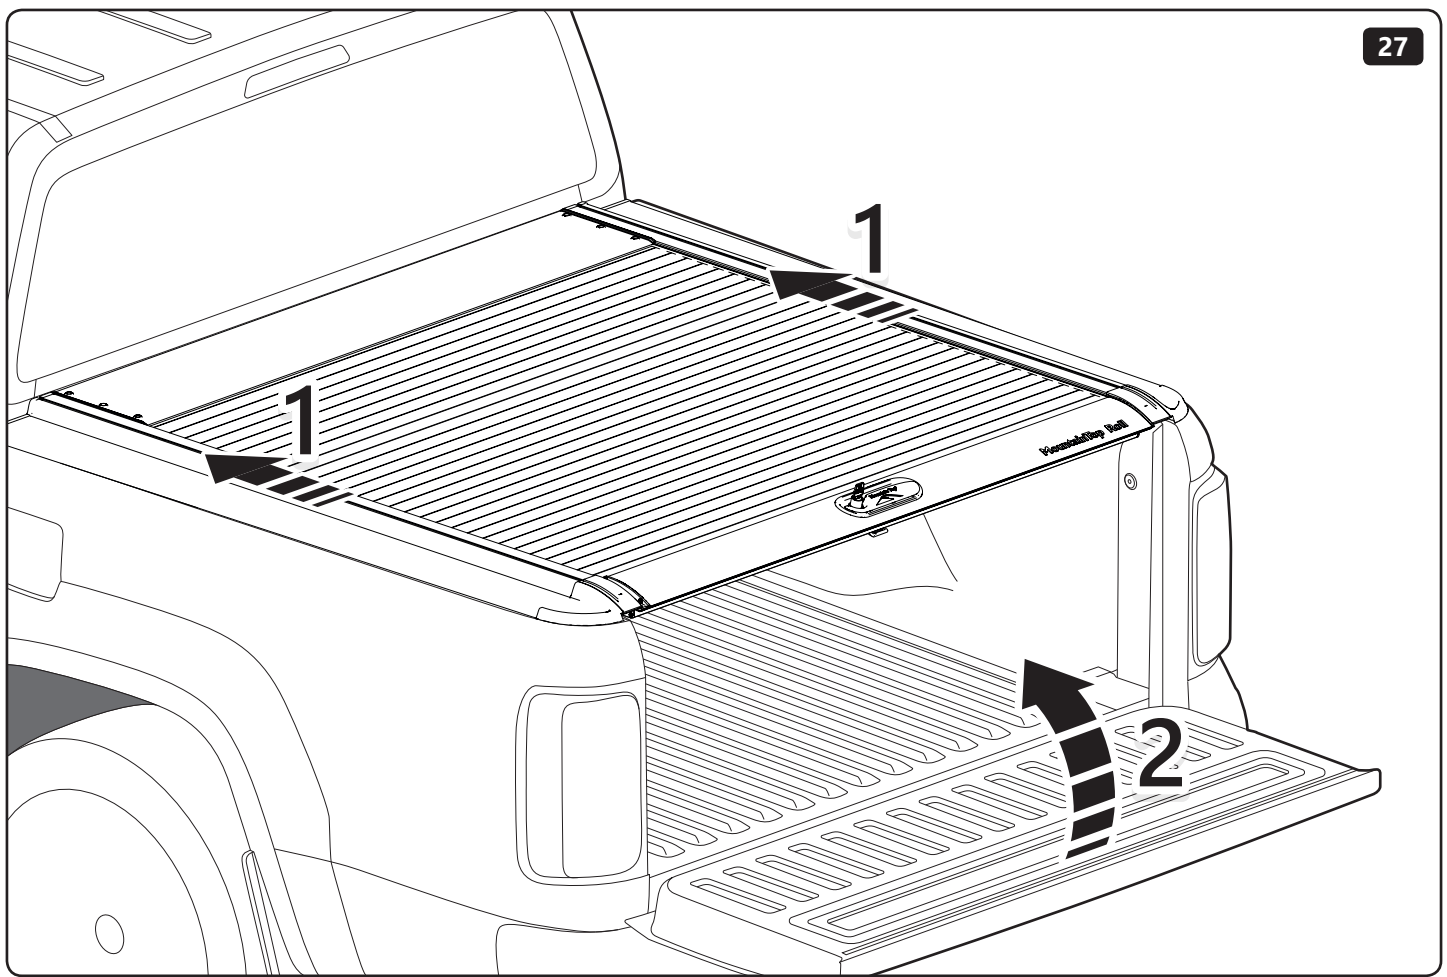


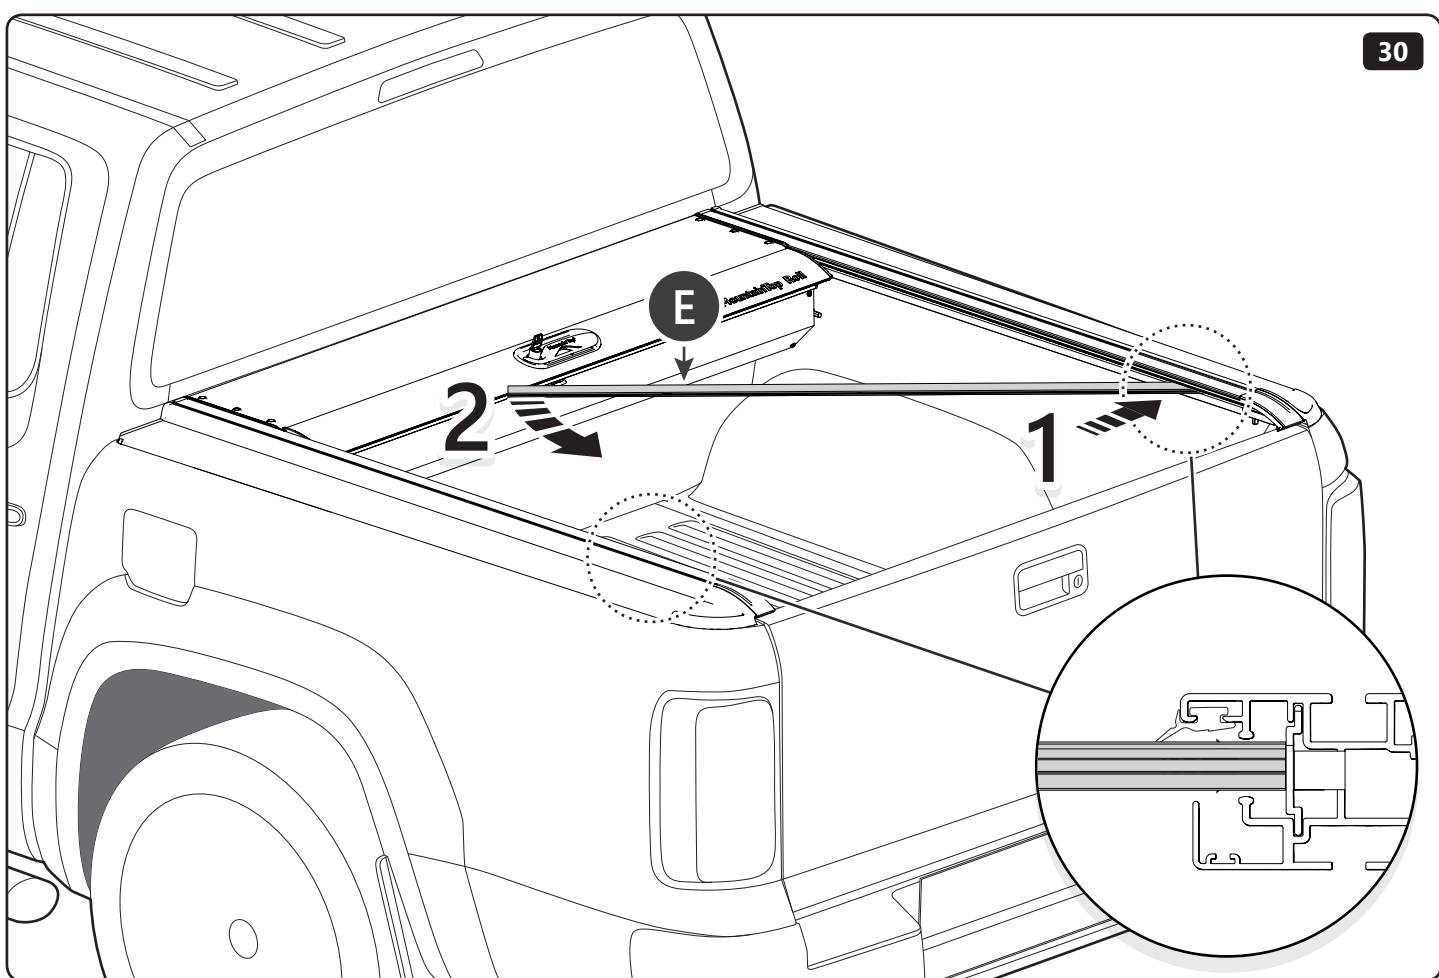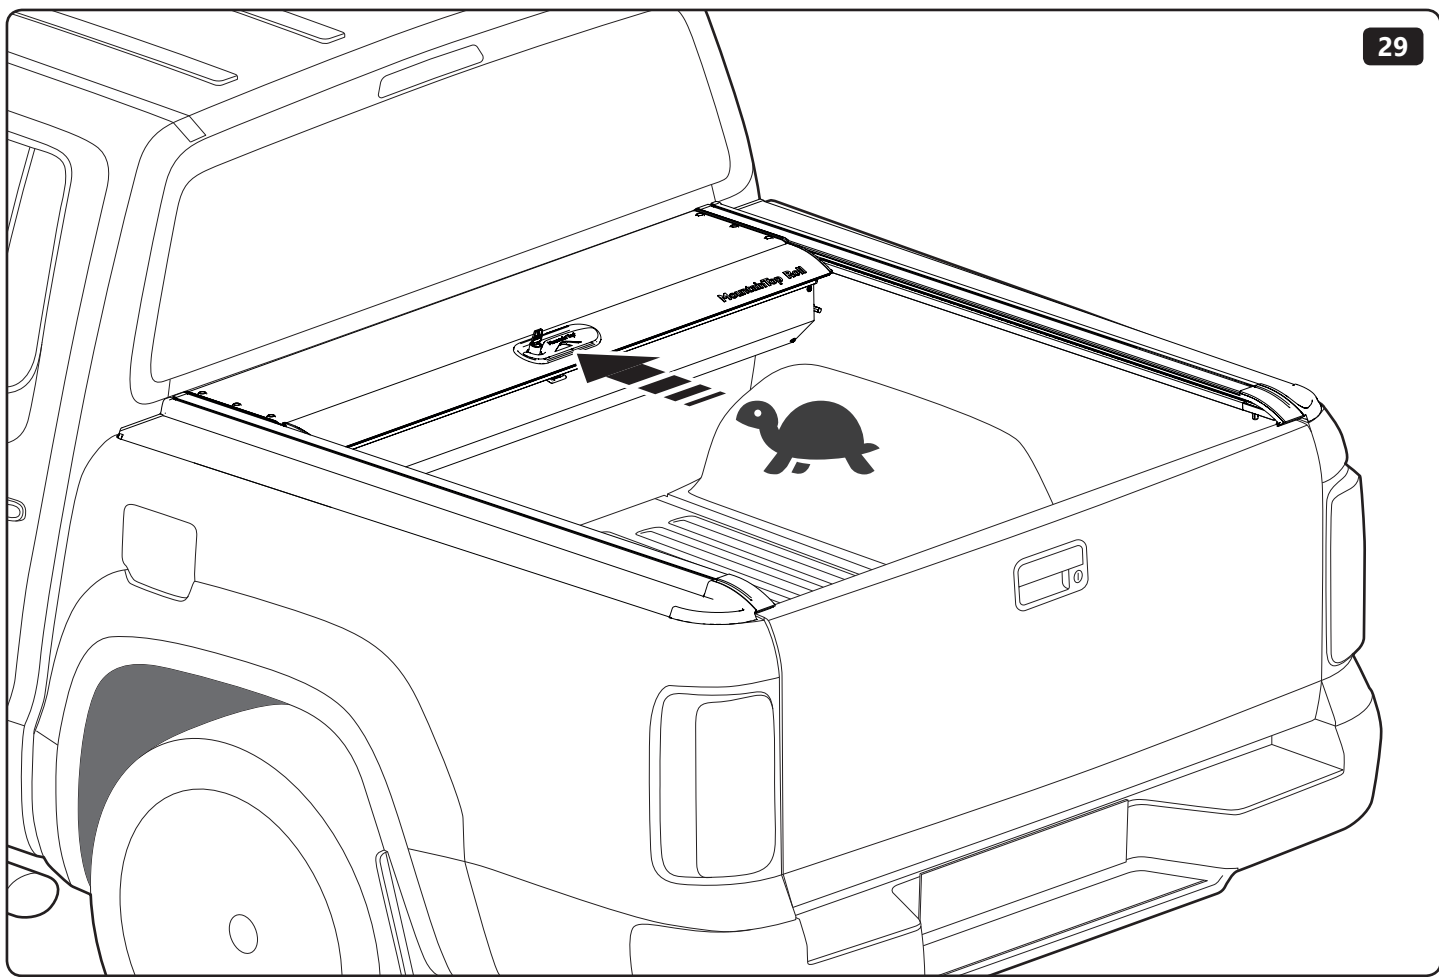

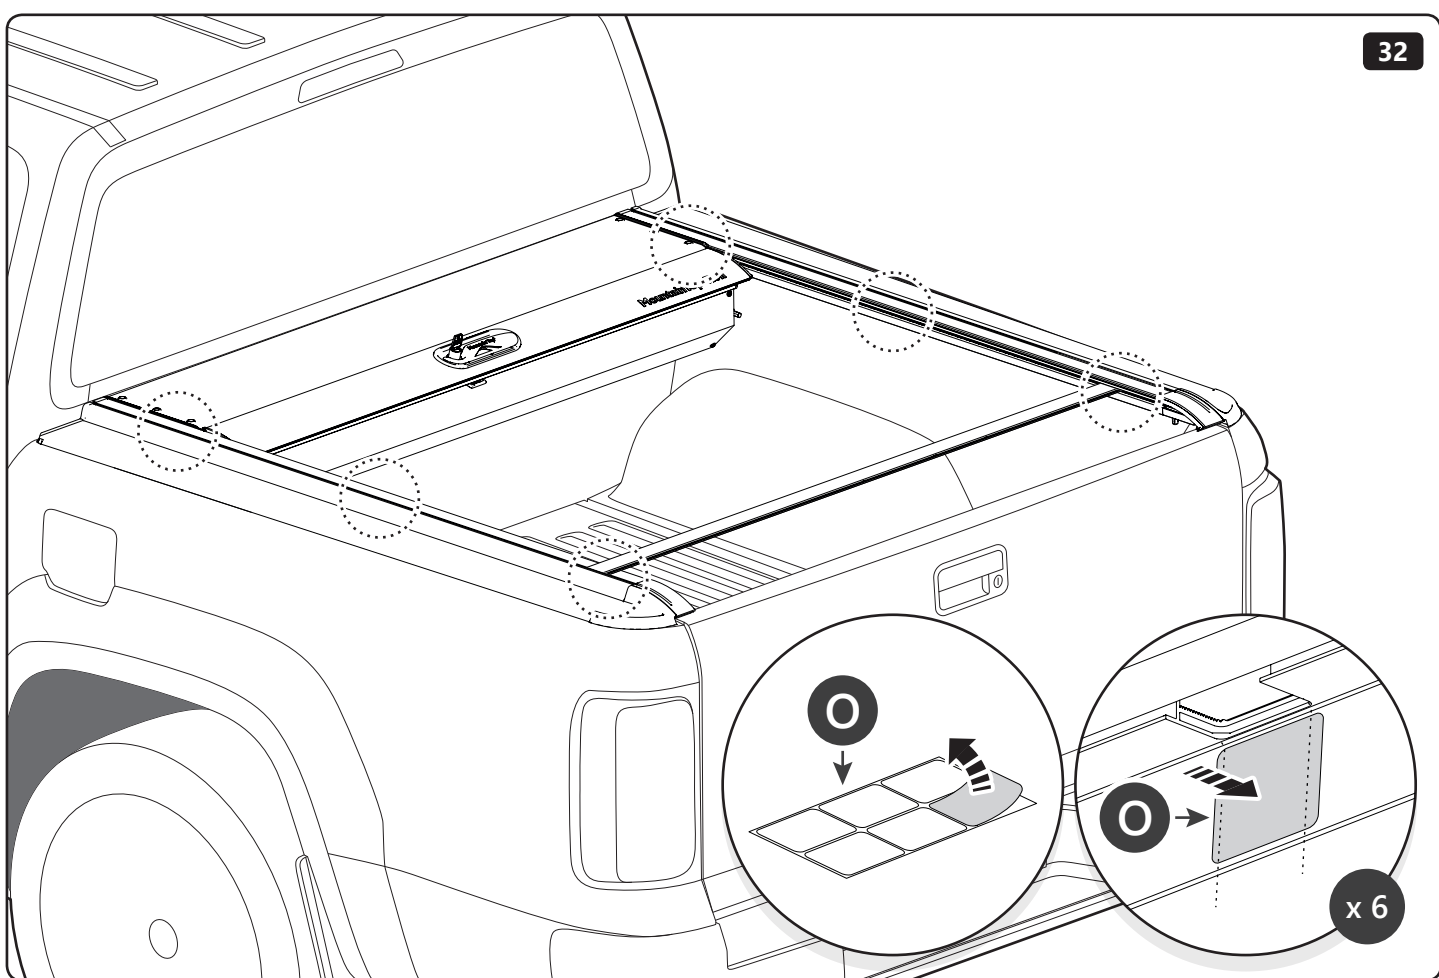
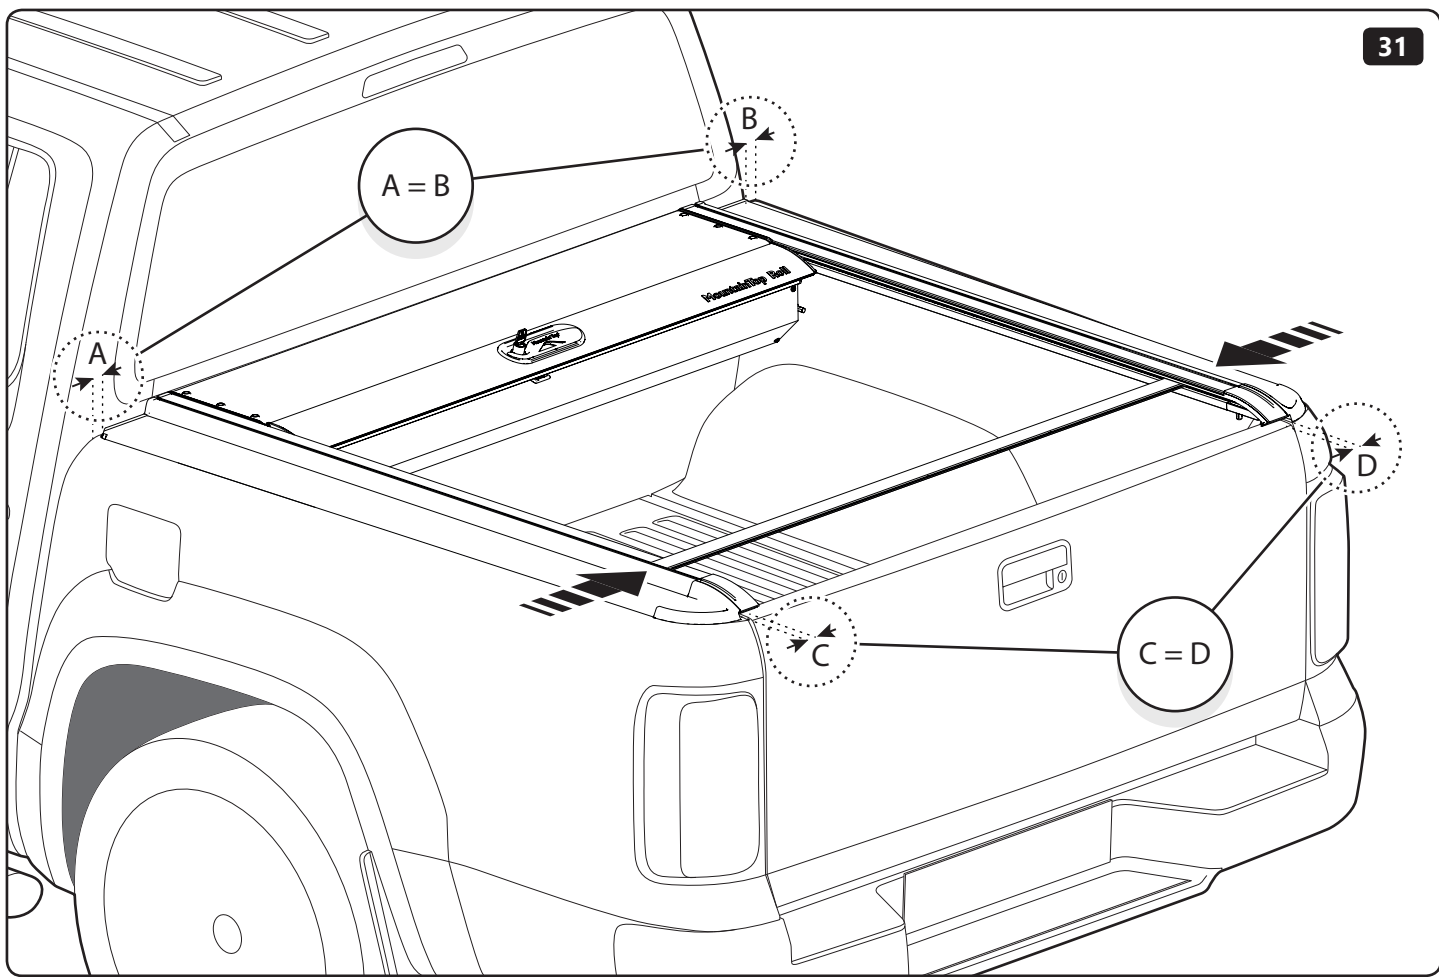


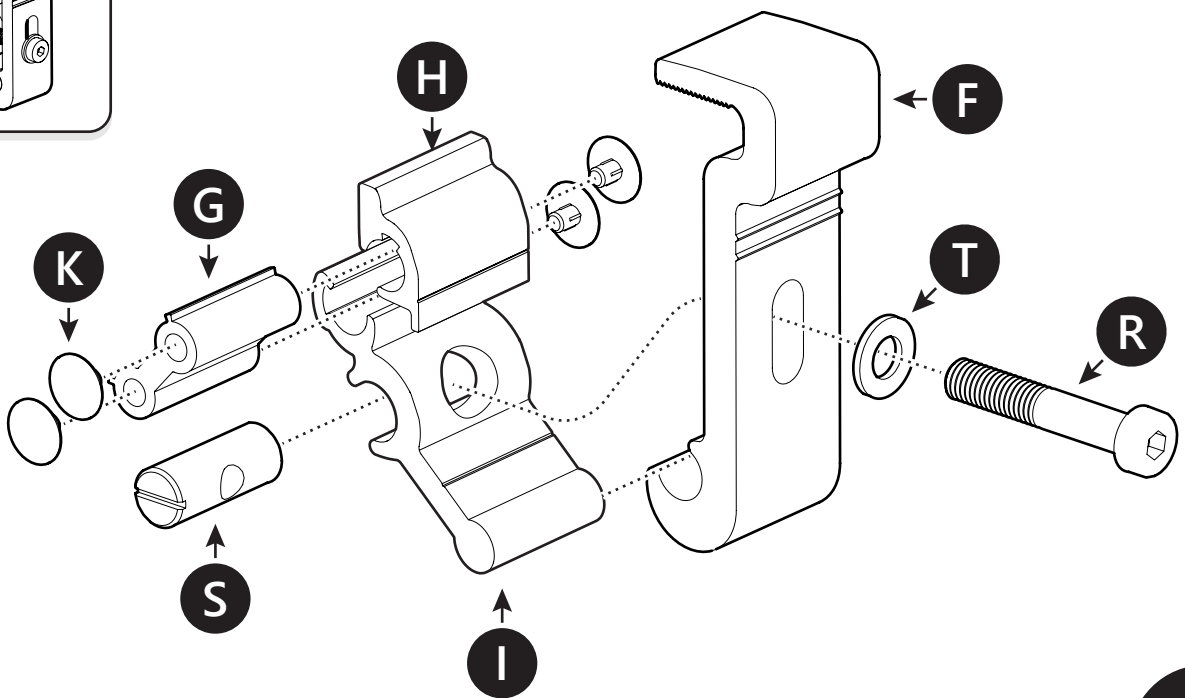
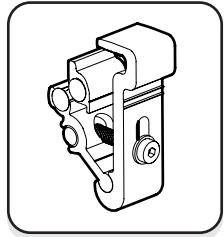




x 6


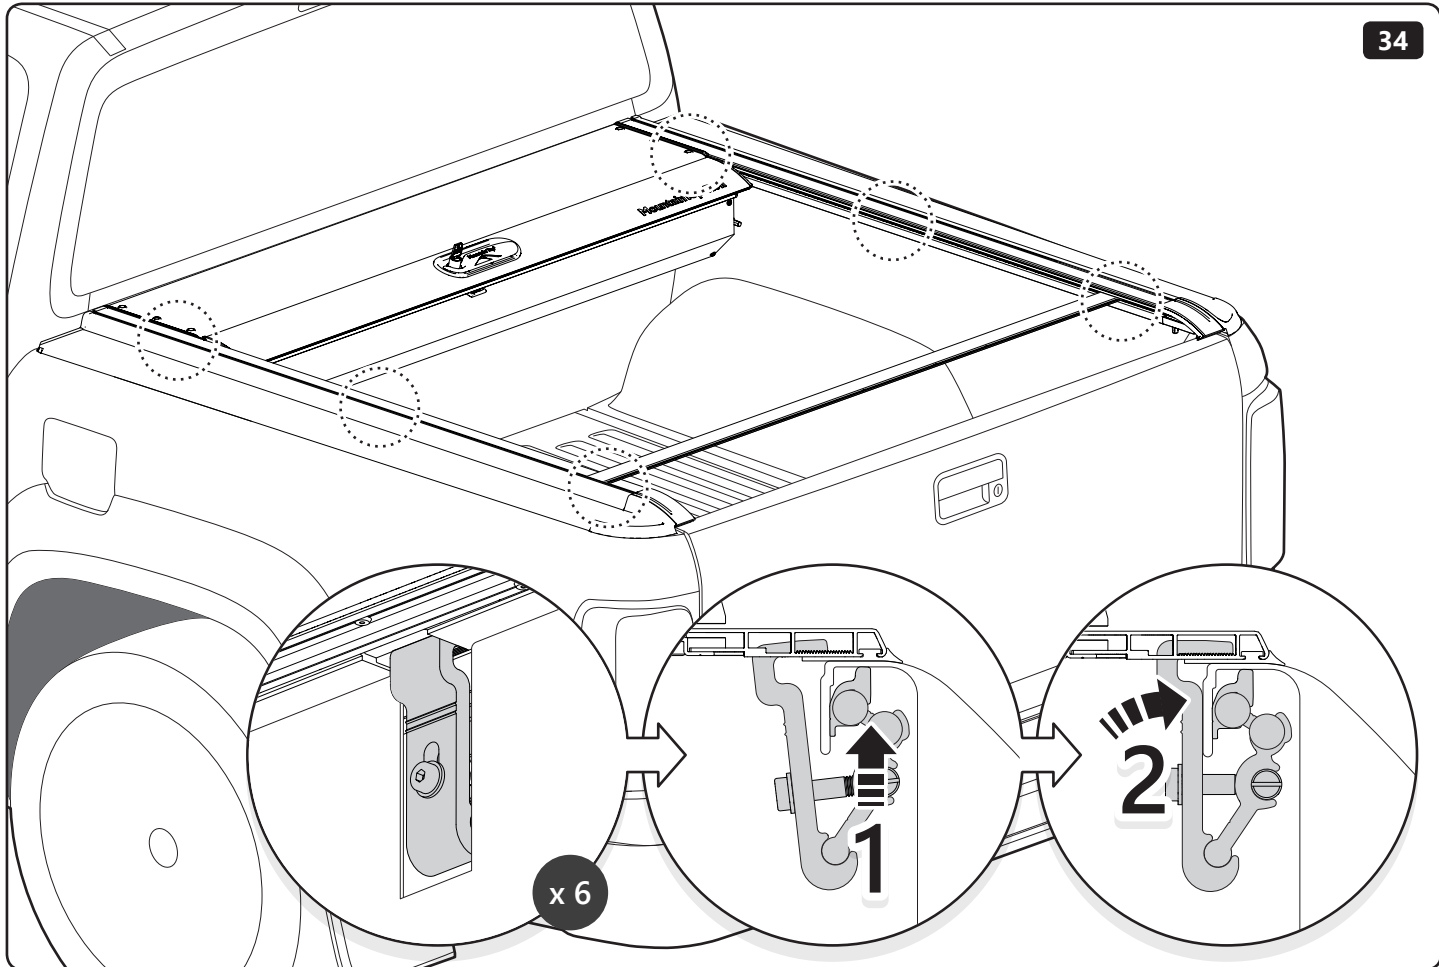


x 6

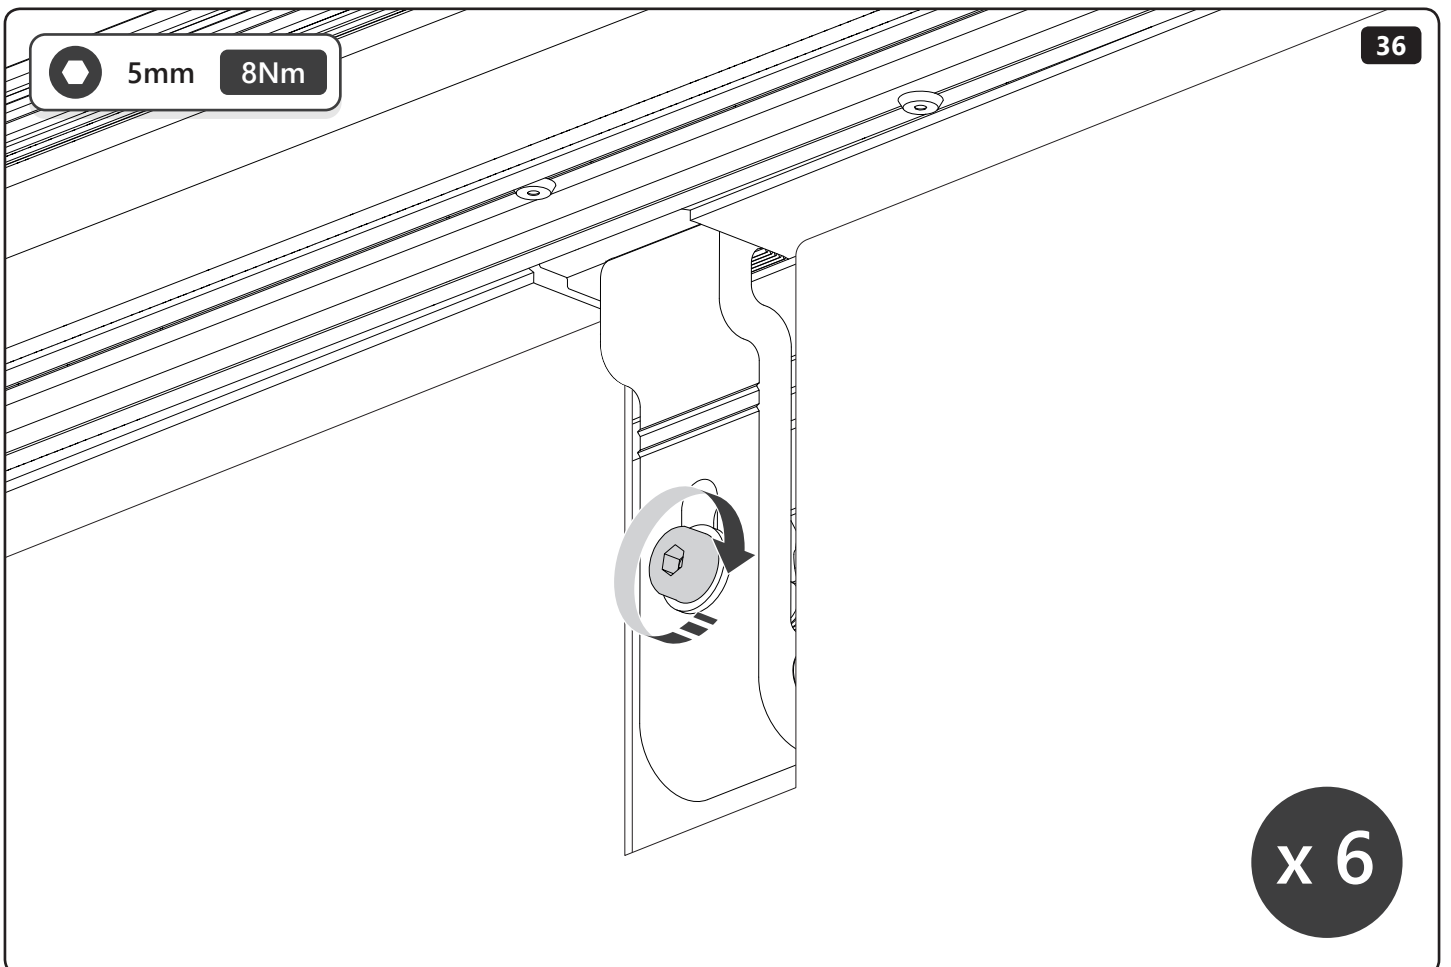
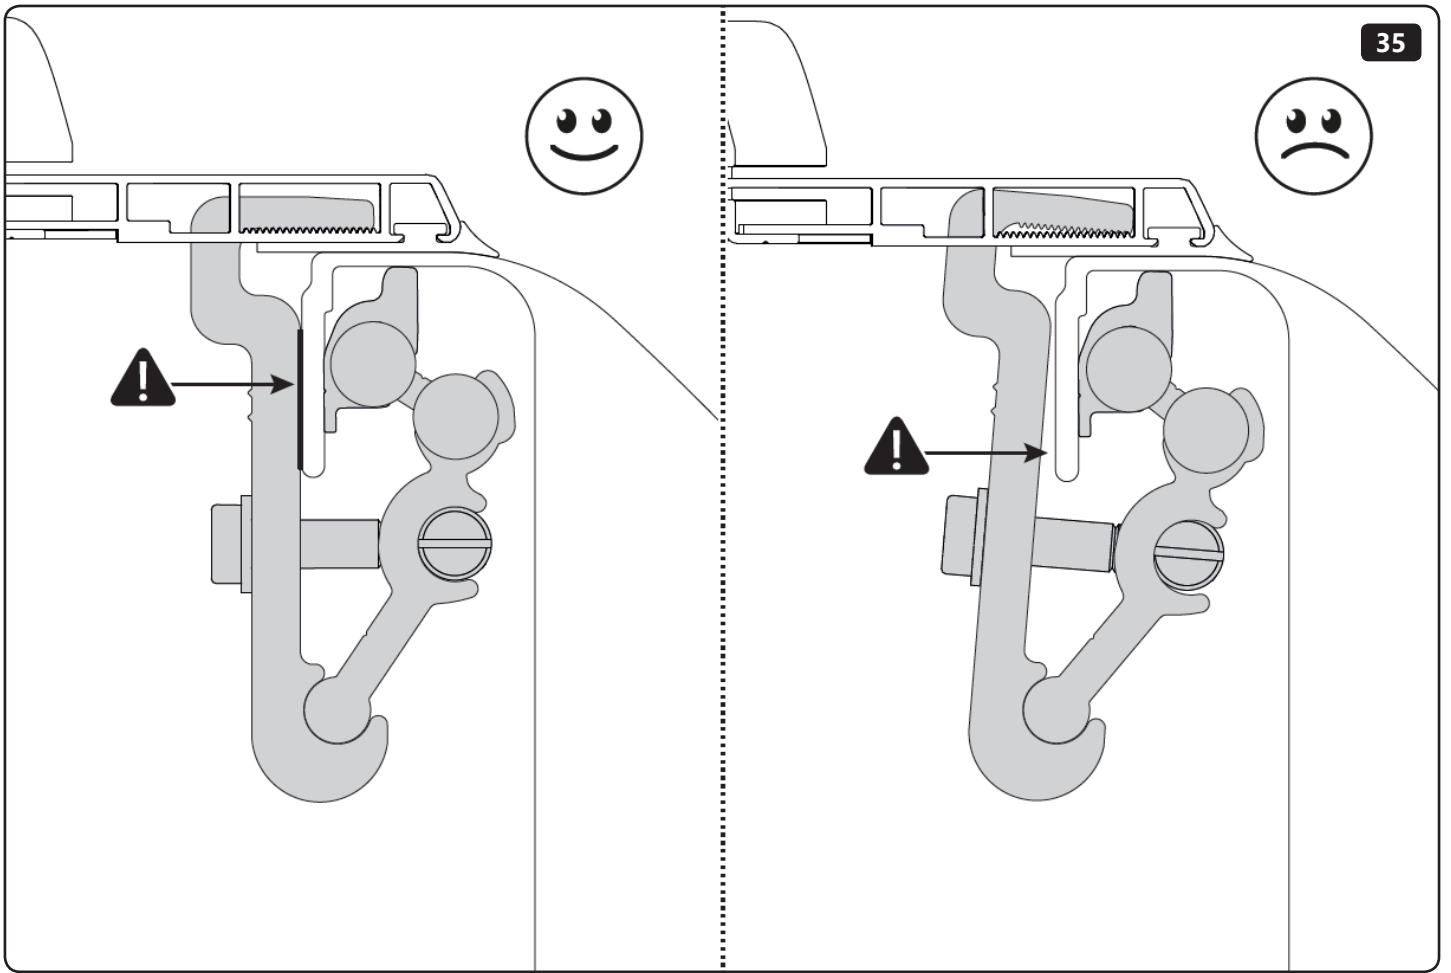


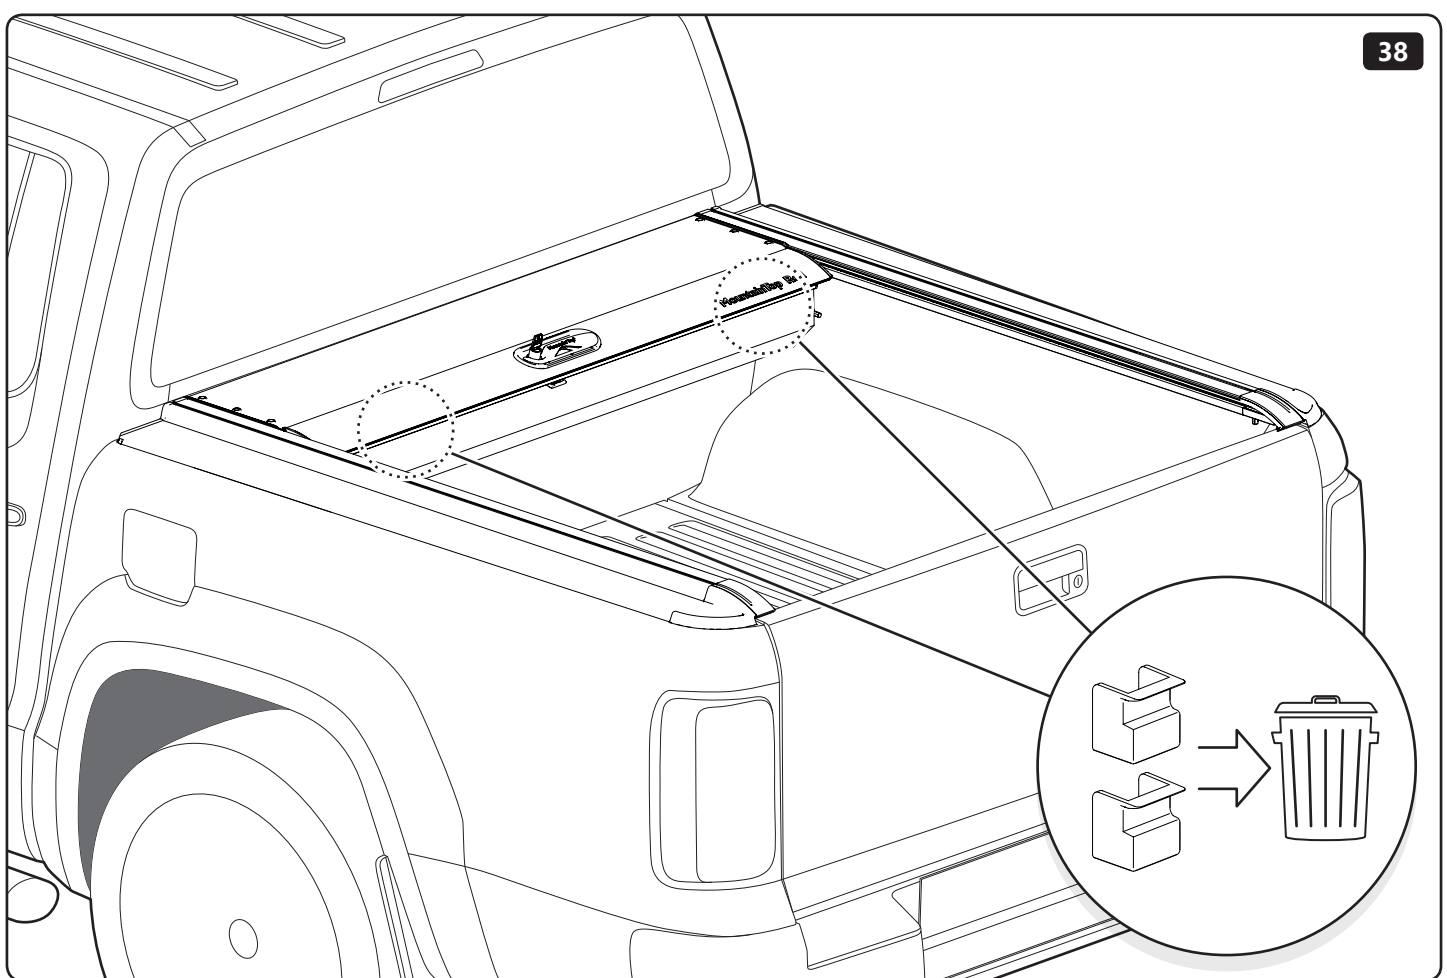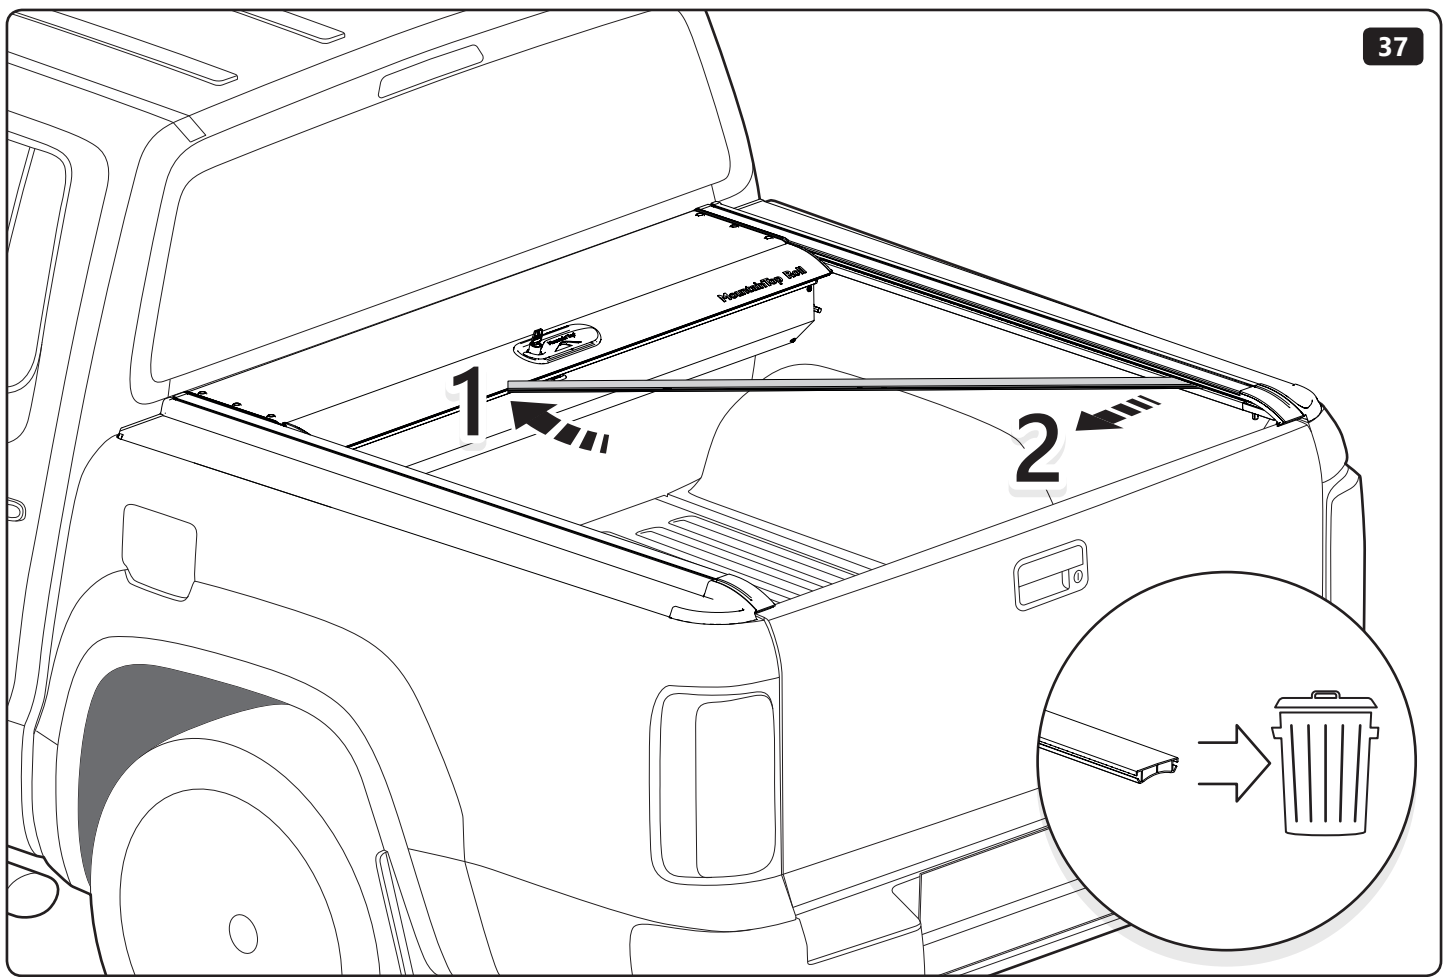

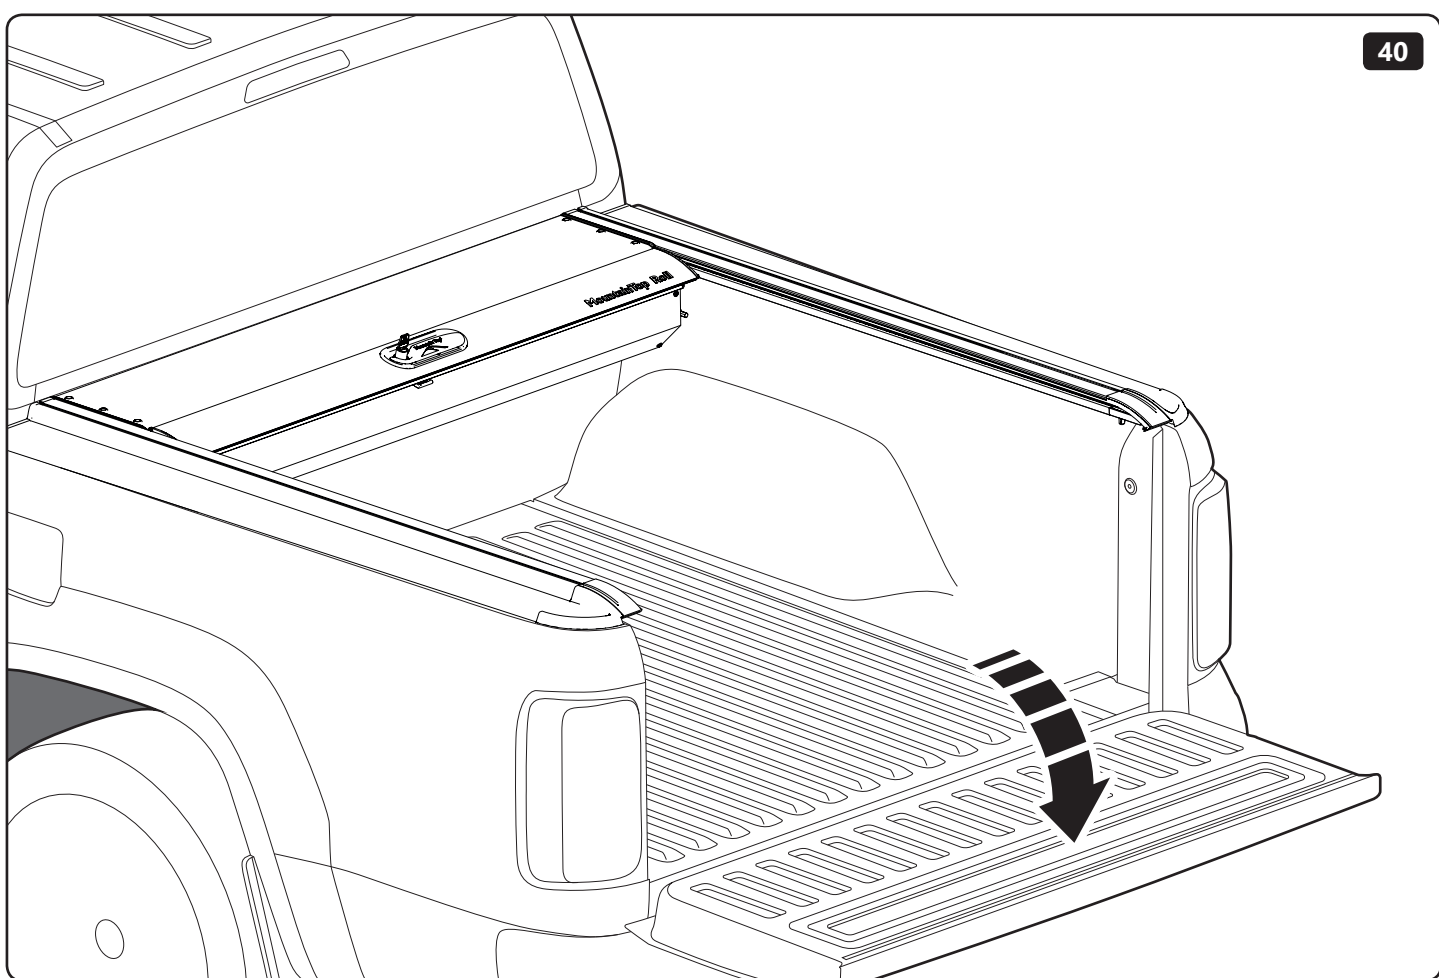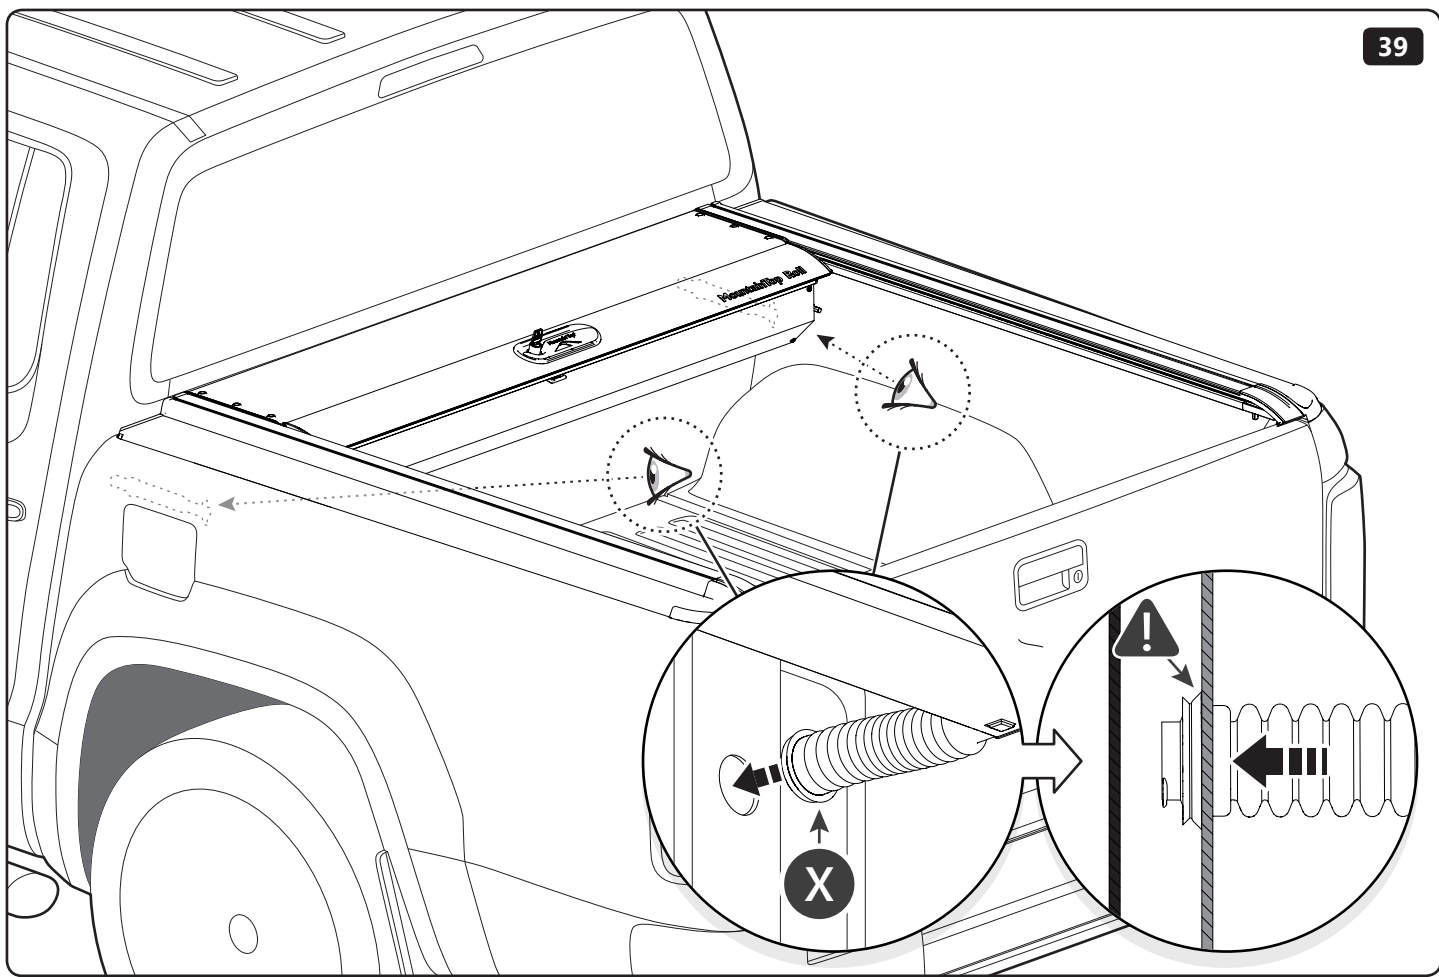

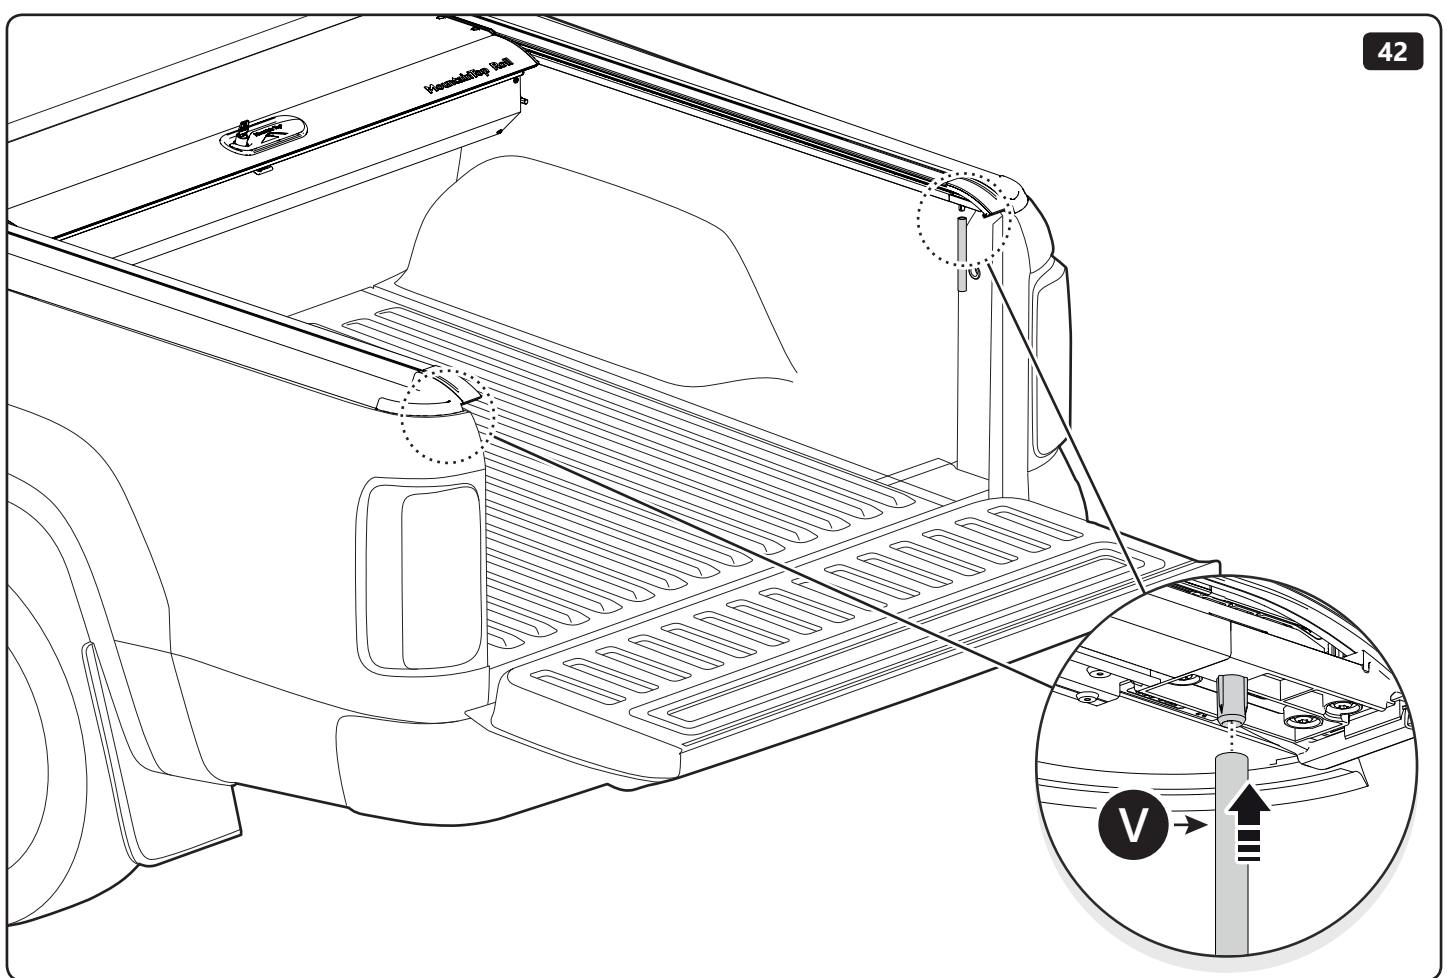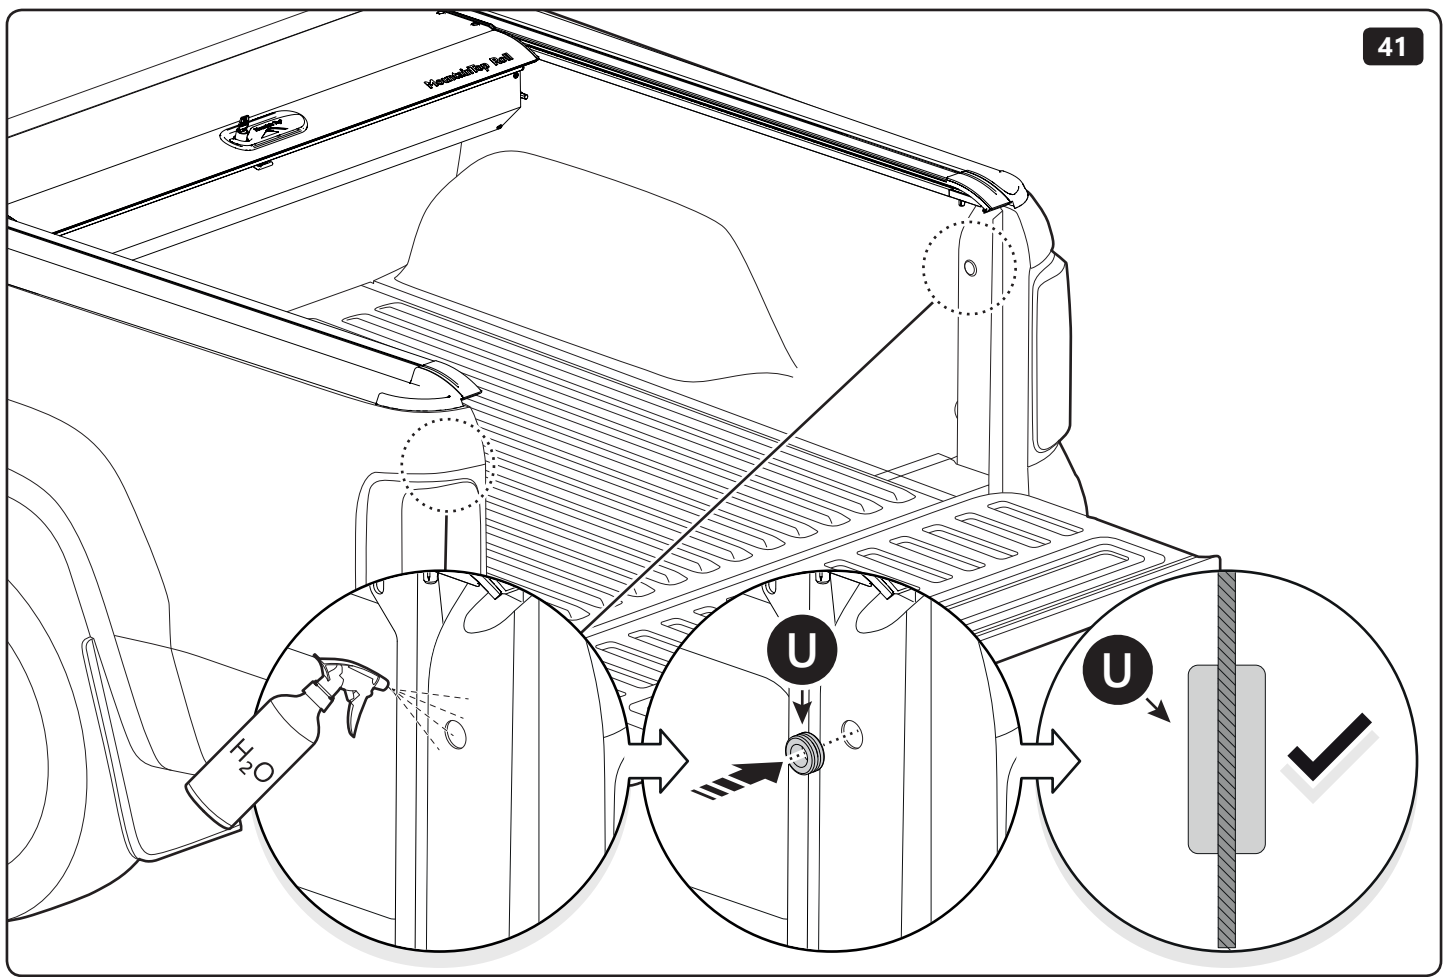




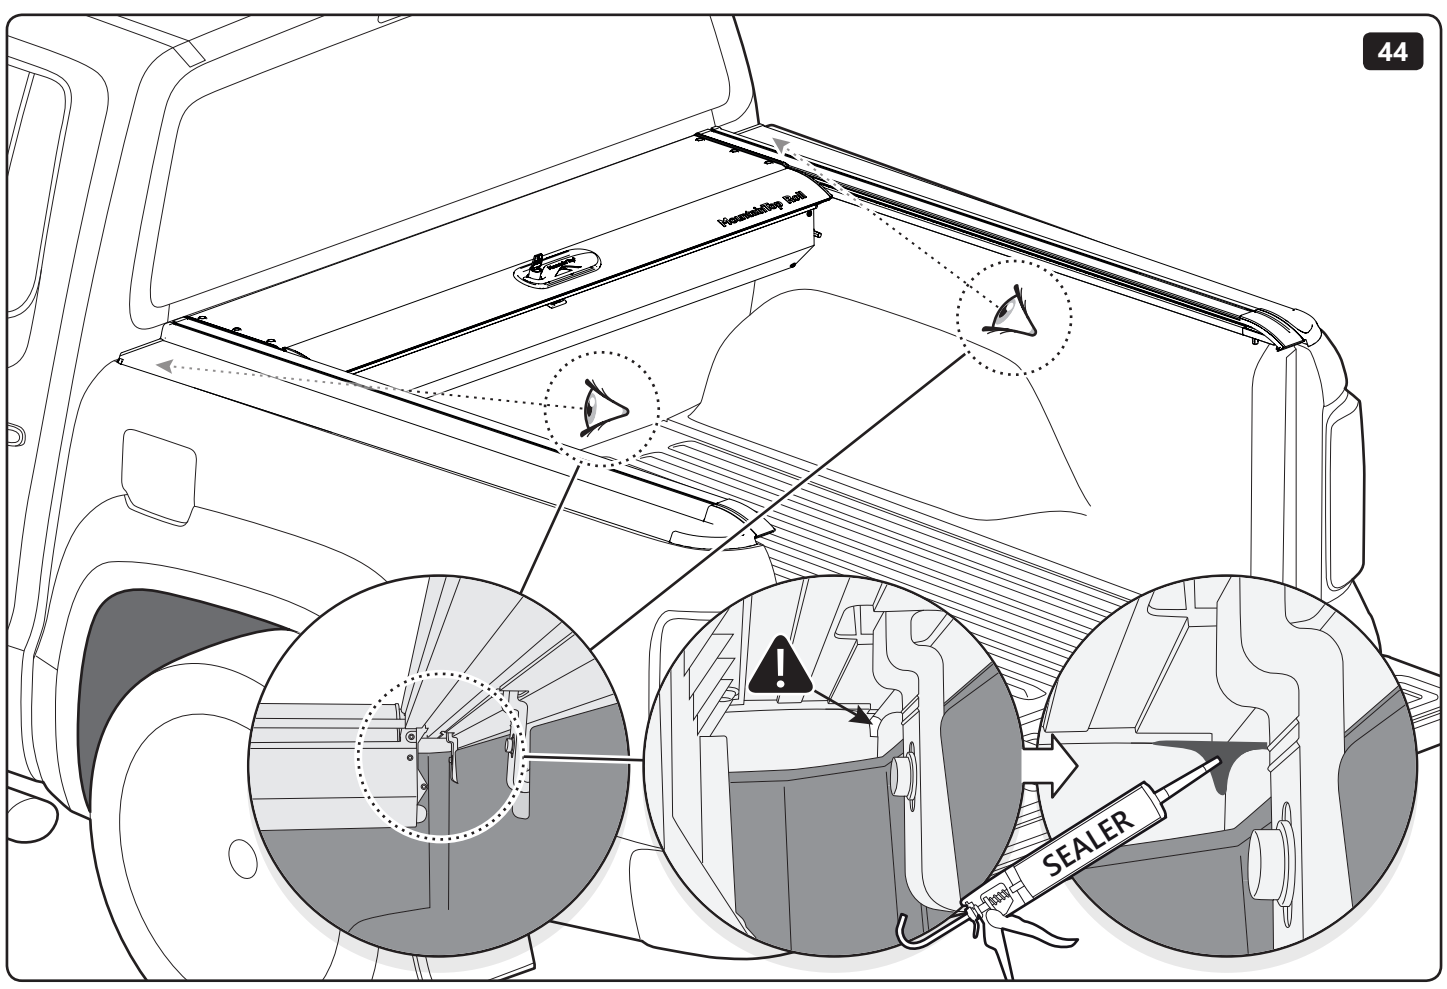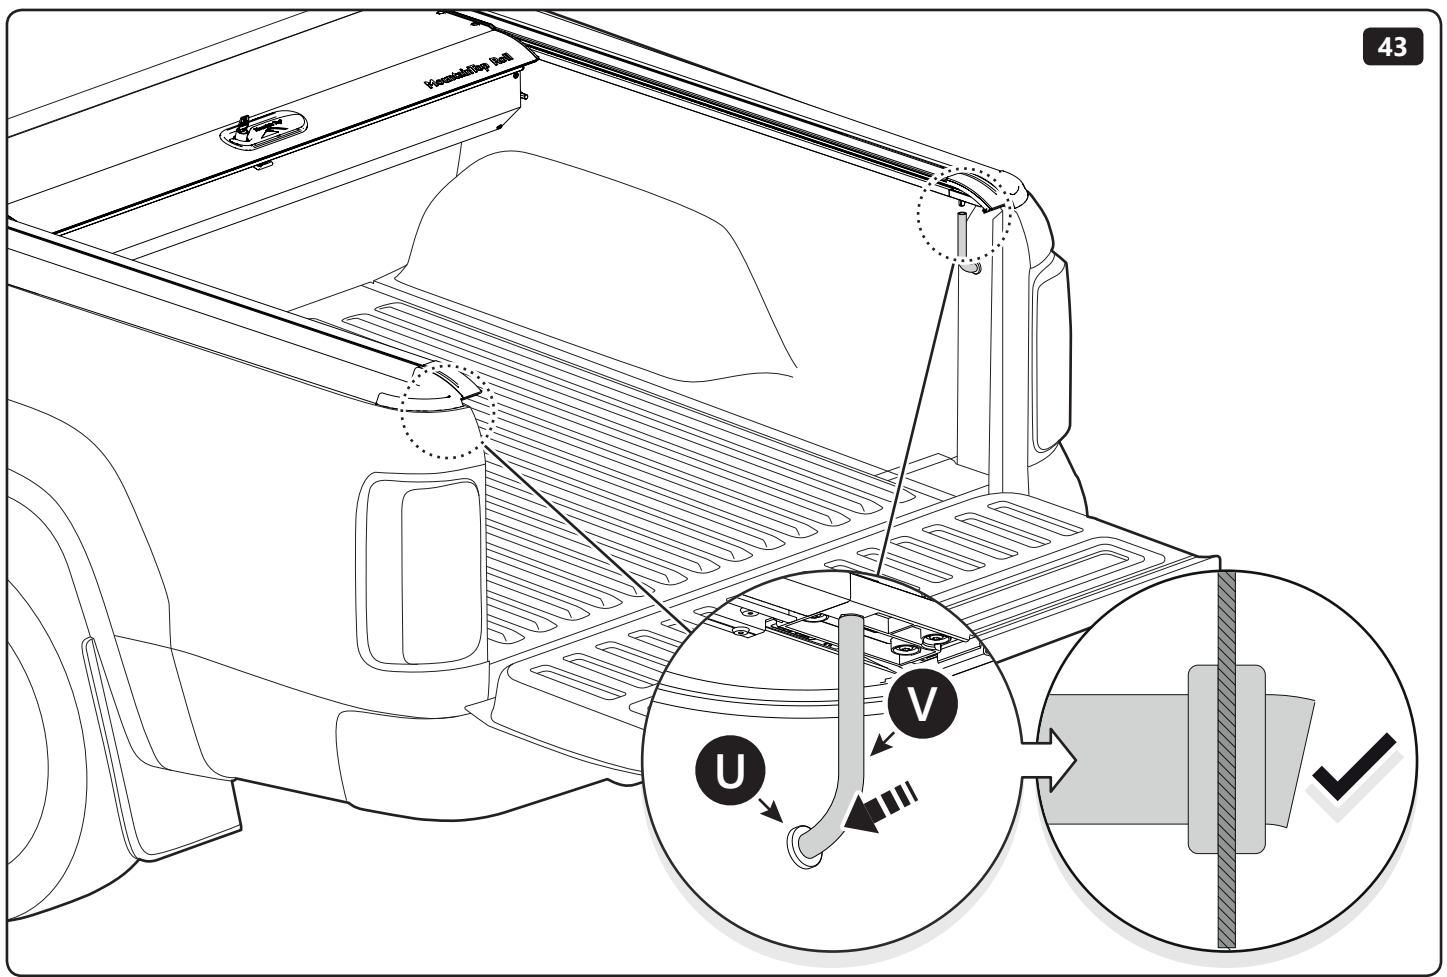


 Silicone oil


45

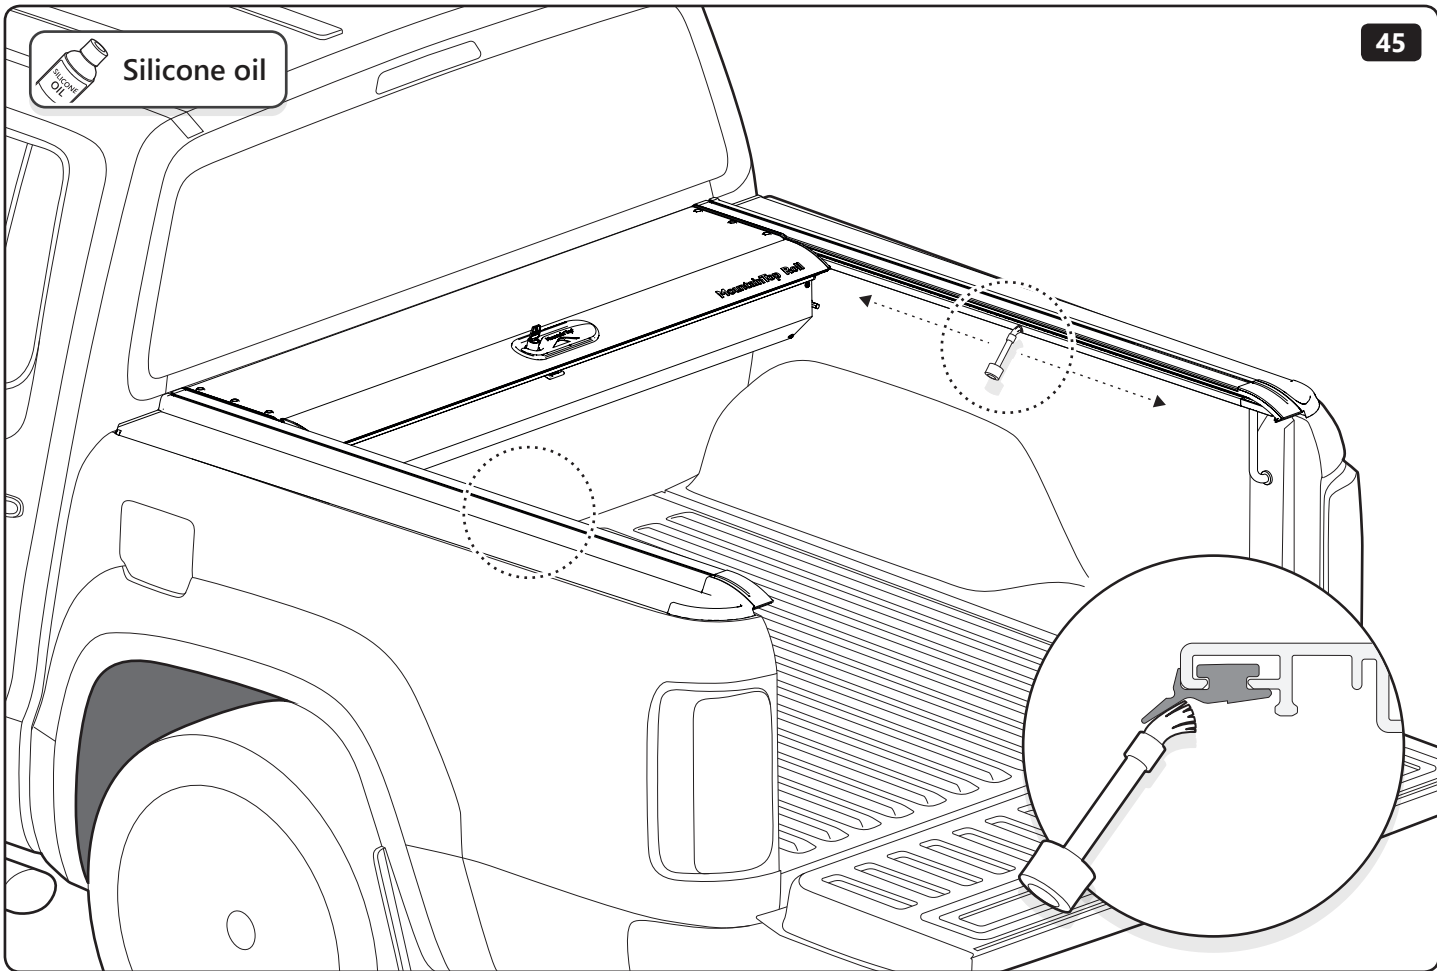


46

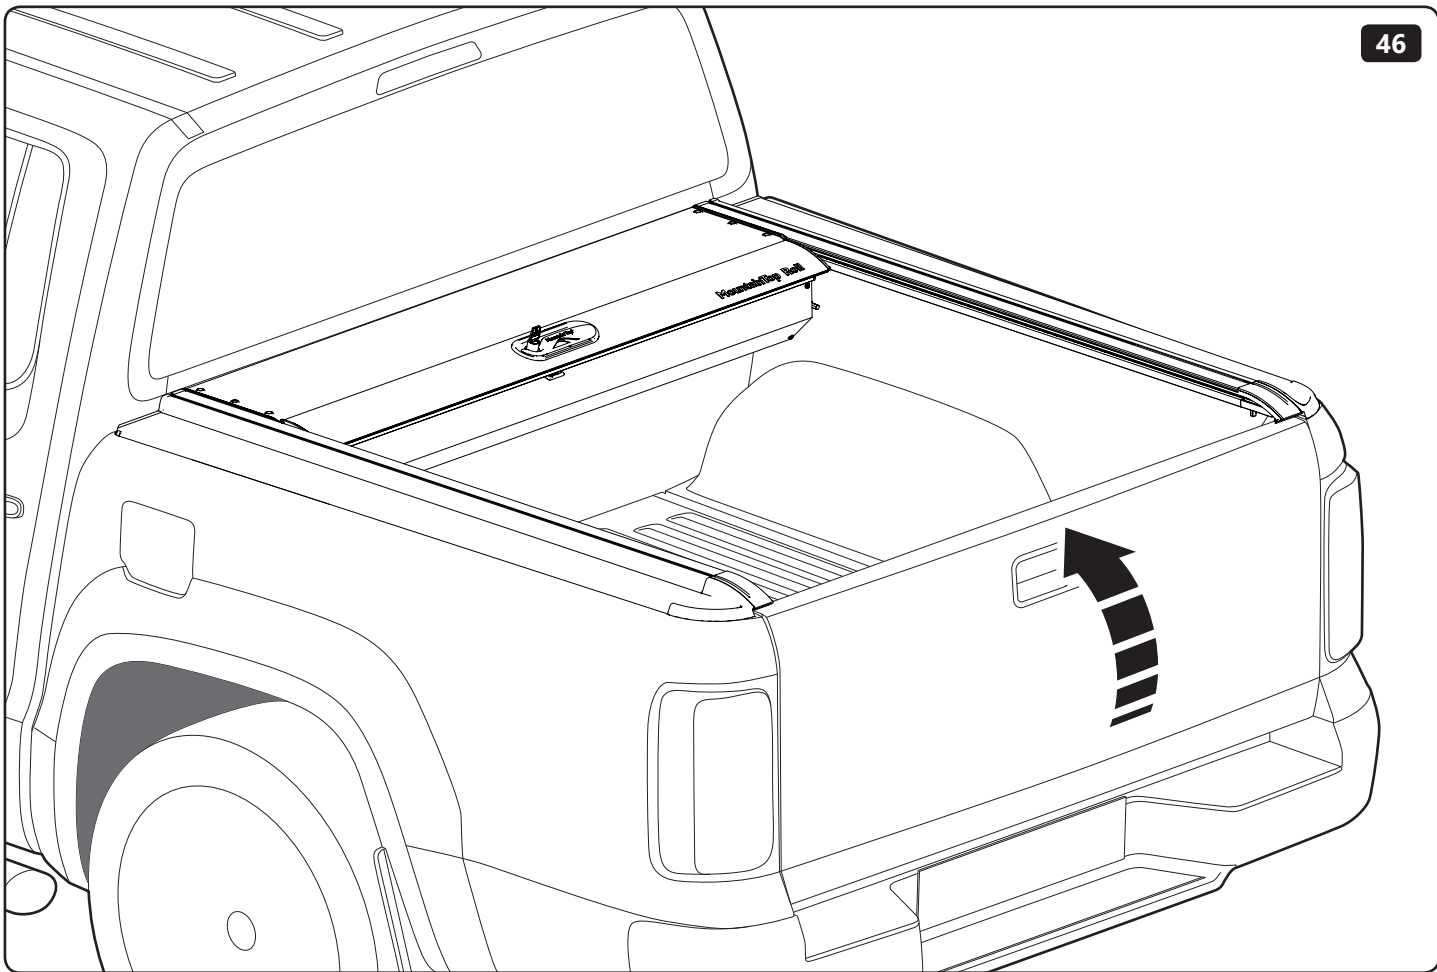


☰ ✓ Check function

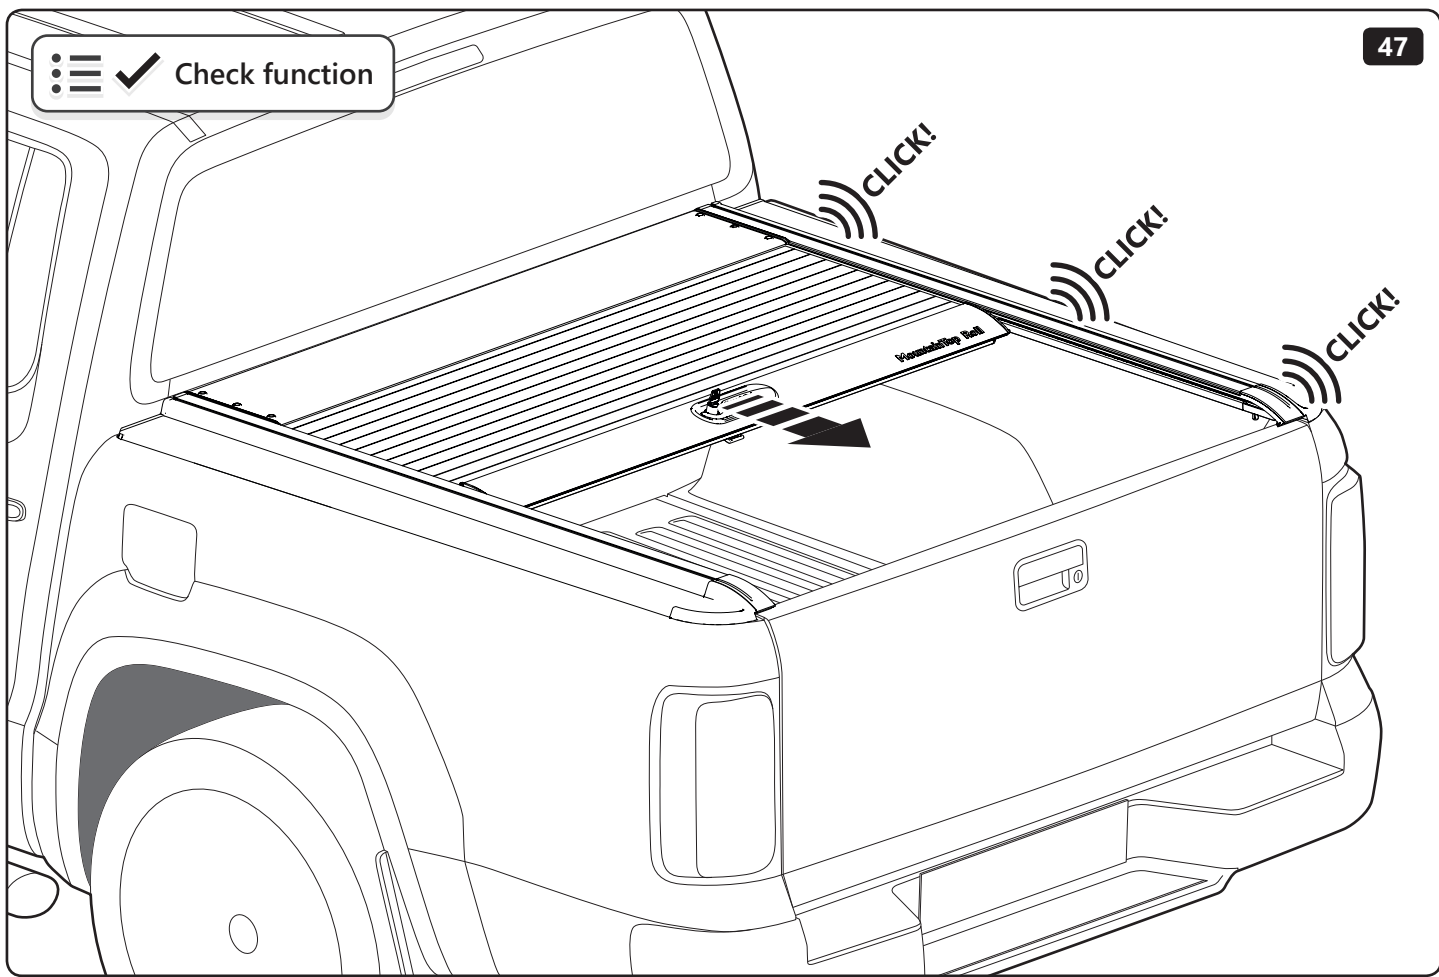


☰ ✓ Check function

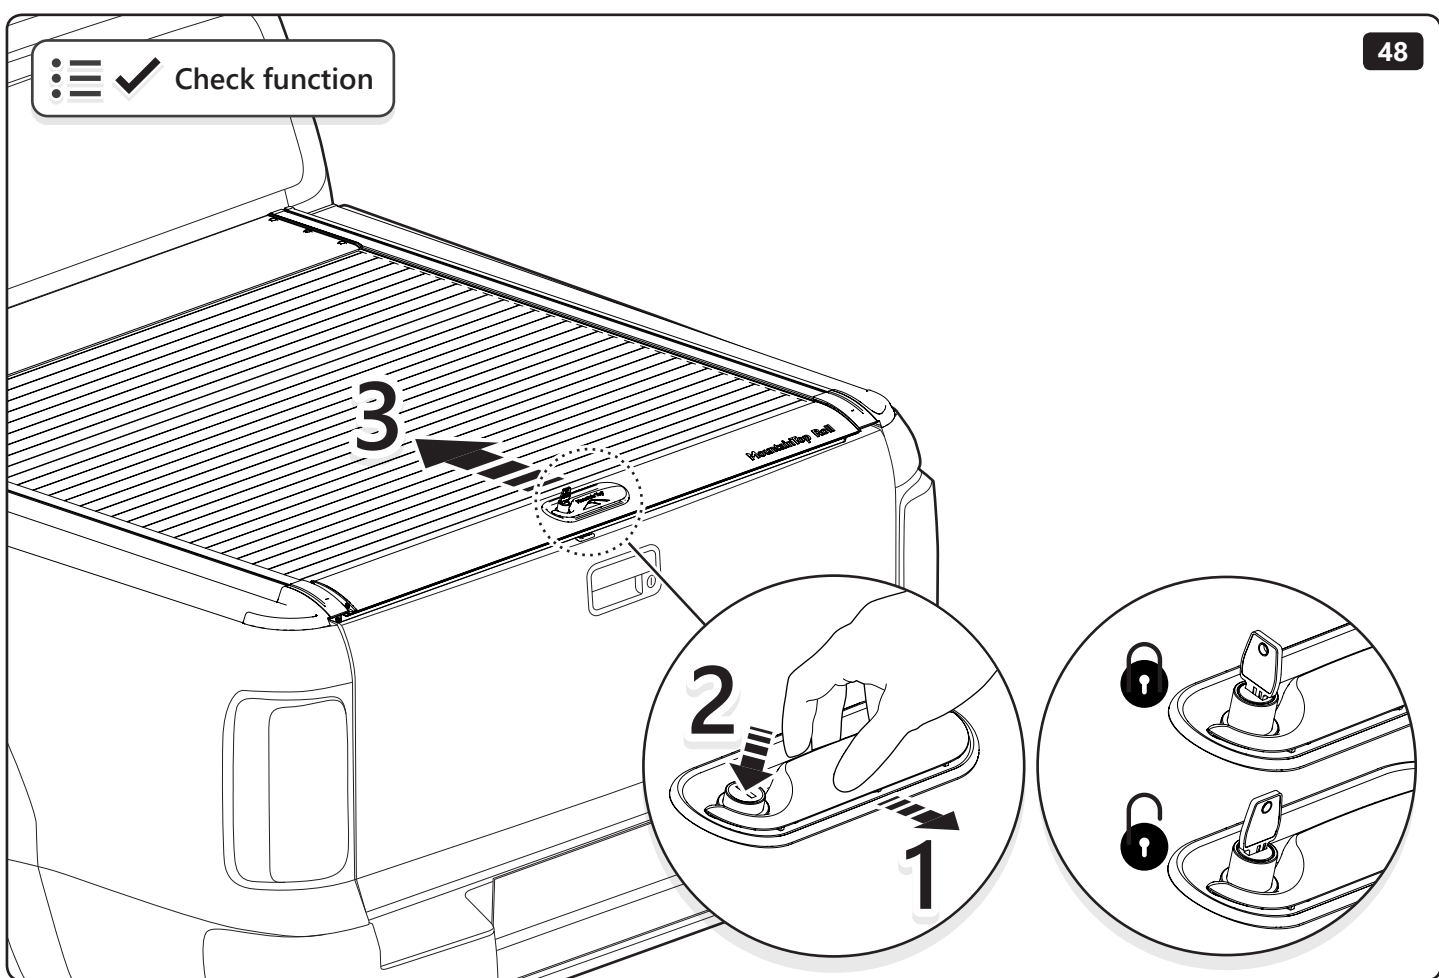

☰ ✓ Check function

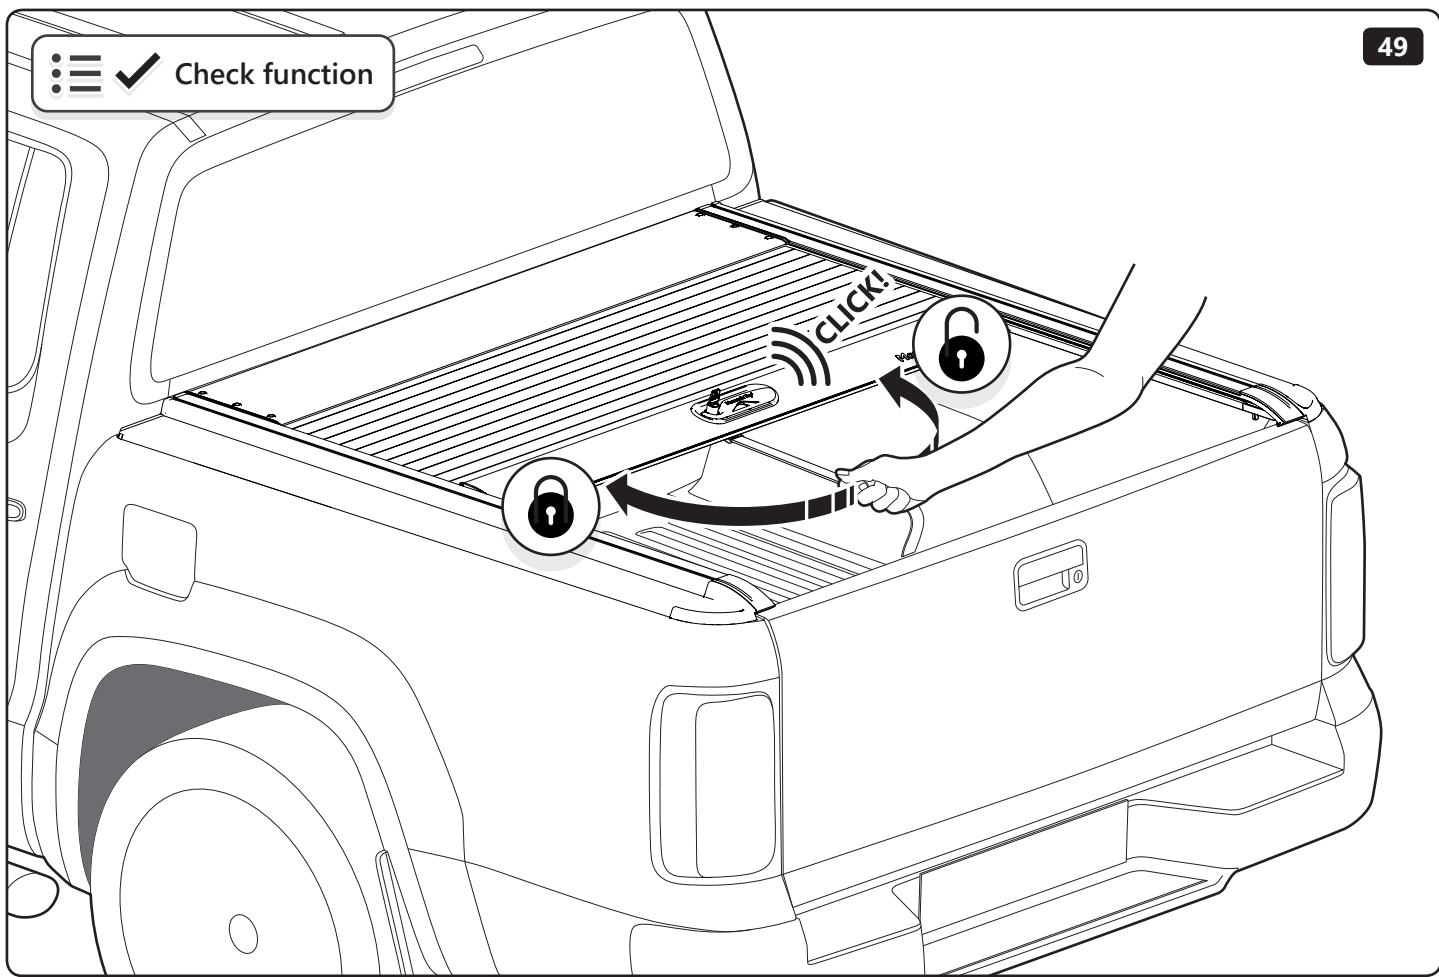

☰ ✓ Check function

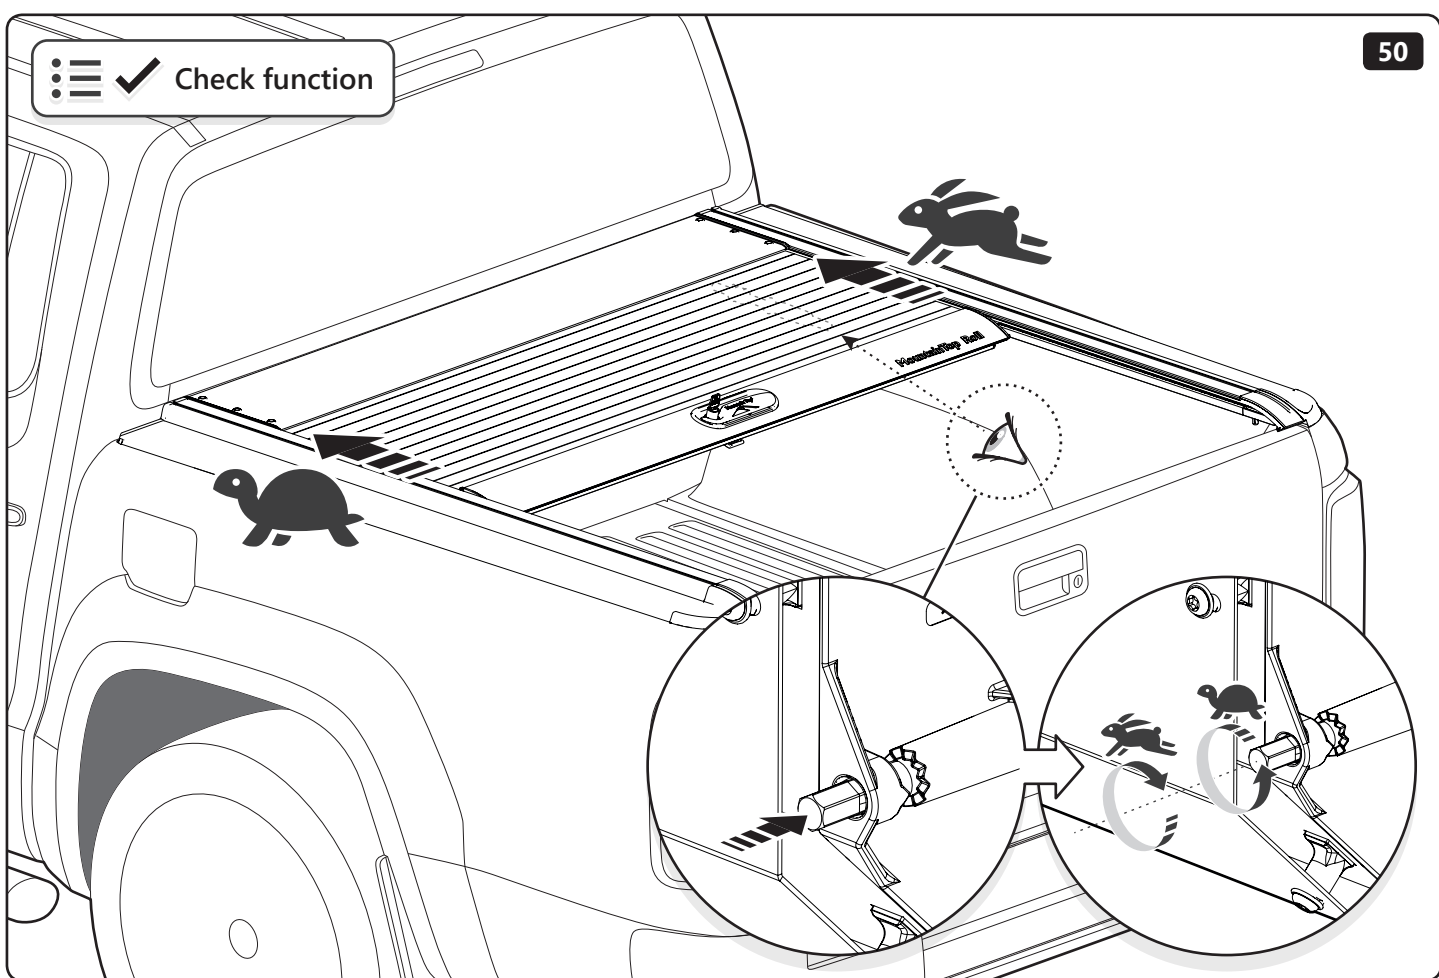









Customer Service +45 4810 2950 (08:00 - 16:00 CET)  
Fax +45 4810 2960  
Support info@mountaintop.dk  
Website www.mountaintop.dk  
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTR SS90	Ssangyong / 2018 →	Short Bed	2 hour(s)	31-37 Kg
MTRA SS91	Ssangyong / 2018 →	Long Bed	2 hour(s)	31-37 Kg

<b>GB</b> Installation manual	<b>S</b> Monteringsanvisning	<b>D</b> Einbauanleitung
<b>SF</b> Asennusohje	<b>E</b> Instrucciones de montaje	<b>CZ</b> Návod k instalaci
<b>F</b> Notice de montage	<b>H</b> Szerelési utasítás	<b>I</b> Istruzioni de montaggio
<b>PL</b> Instrukcja montażu	<b>P</b> Instruções de instalação	<b>GR</b> Οδηγίες Εγκατάστασης
<b>NL</b> Installatie-instructies	<b>RUS</b> Инструкция по установке	<b>DK</b> Monteringsvejledning
<b>TR</b> Montaj Talimatı	<b>N</b> Monteringsveiledning	<b>RO</b> Instructiuni de instalare