

REALTRUCK[®] MOUNTAIN TOP ROLL COVER


Installation manual






Parts

A

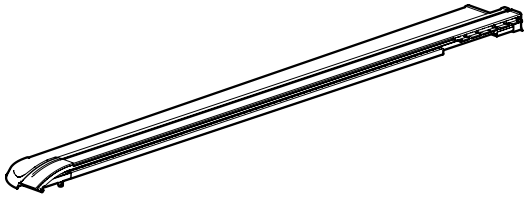


x 1

B

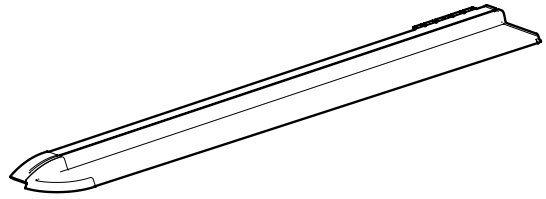


x 1

C

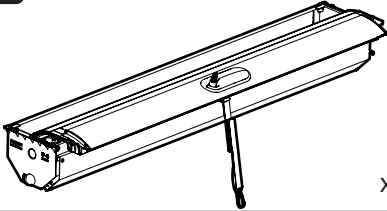


x 1

D

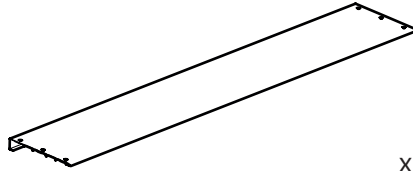

x 1

E

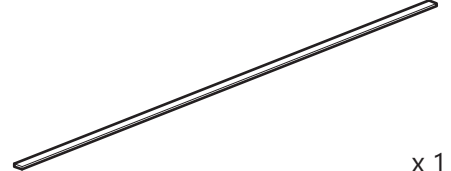


x 1

F




x 6

G

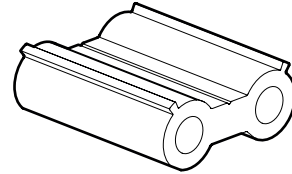


x 6

H

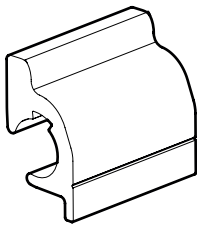


x 6

I

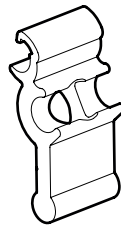


x 6

J

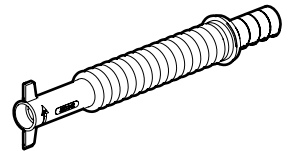

x 2

K



x 12

L




x 6

M




x 6

N

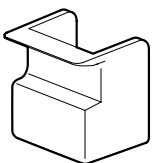


x 2

O




x 1

P

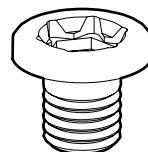

x 6

Q

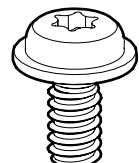


x 4



Kit

K



x 12

L




x 6

M




x 6

N

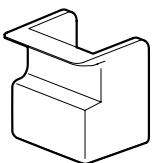


x 2

O




x 1

P


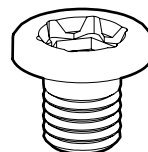





x 6



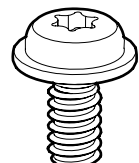

Q

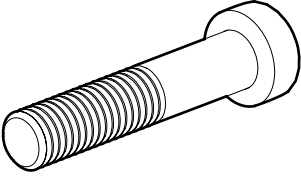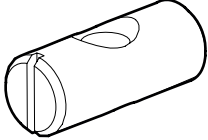

x 4

| Kit | | |
|----------|---|---|
| R |  | S |
| |  | T |
| | x 6 | x 6 |
| | |  |
| | | x 6 |

| Kit | |
|---|---|
| U | V |
|  |  |
| x 2 | x 2 |


| Manual(s) | |
|--|---|
|  |  |
|  |  |
| x 1 | x 1 |




Tools and materials needed



24 mm

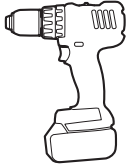





1 - 25 Nm

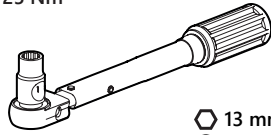

- ⬡ 13 mm
- 5 mm
- ⚙ T15, T30







Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

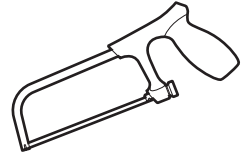
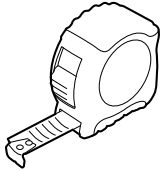




1



Applying rust protection

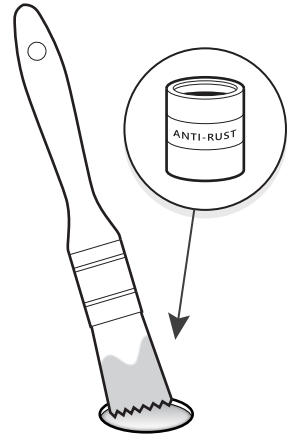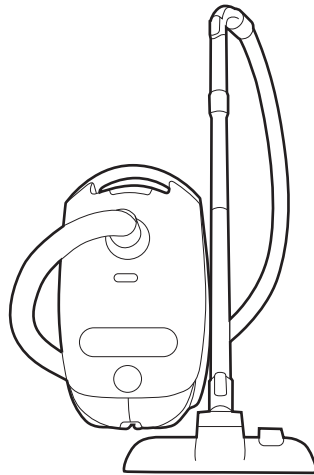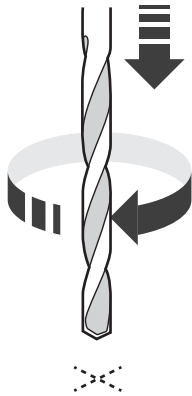




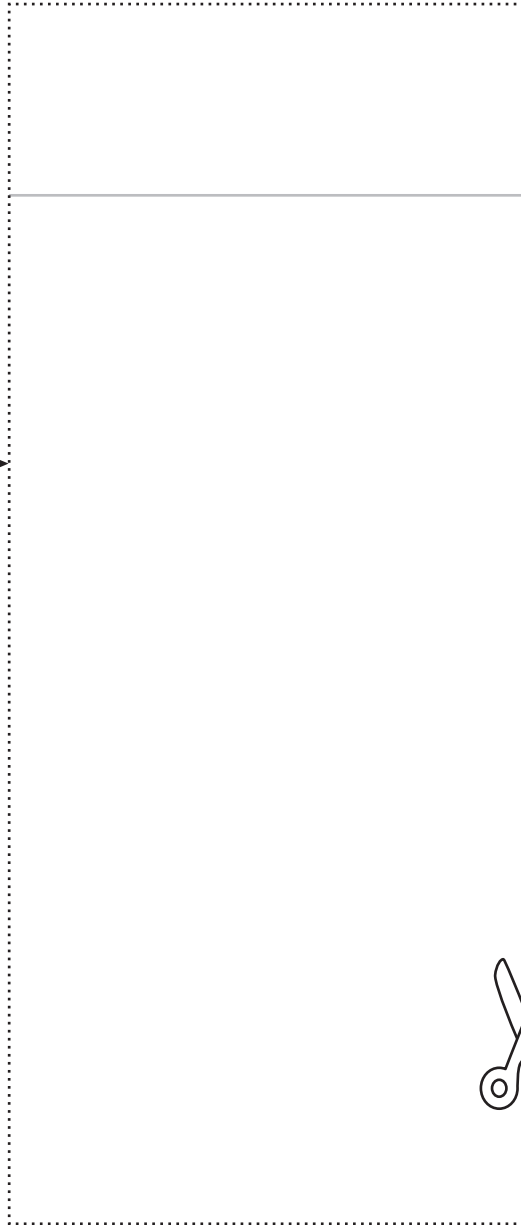


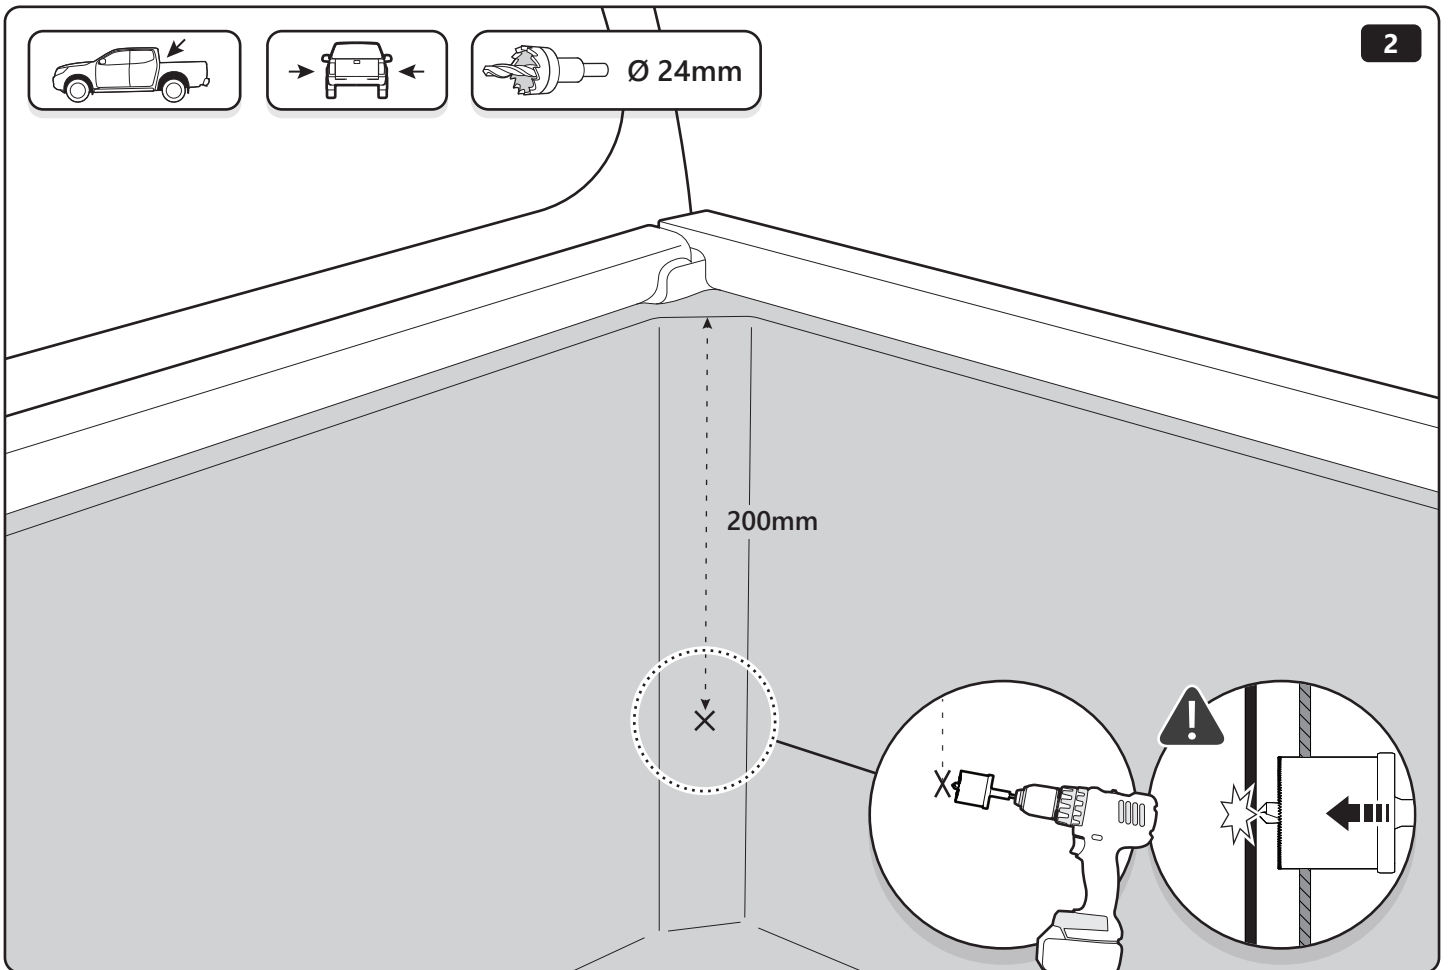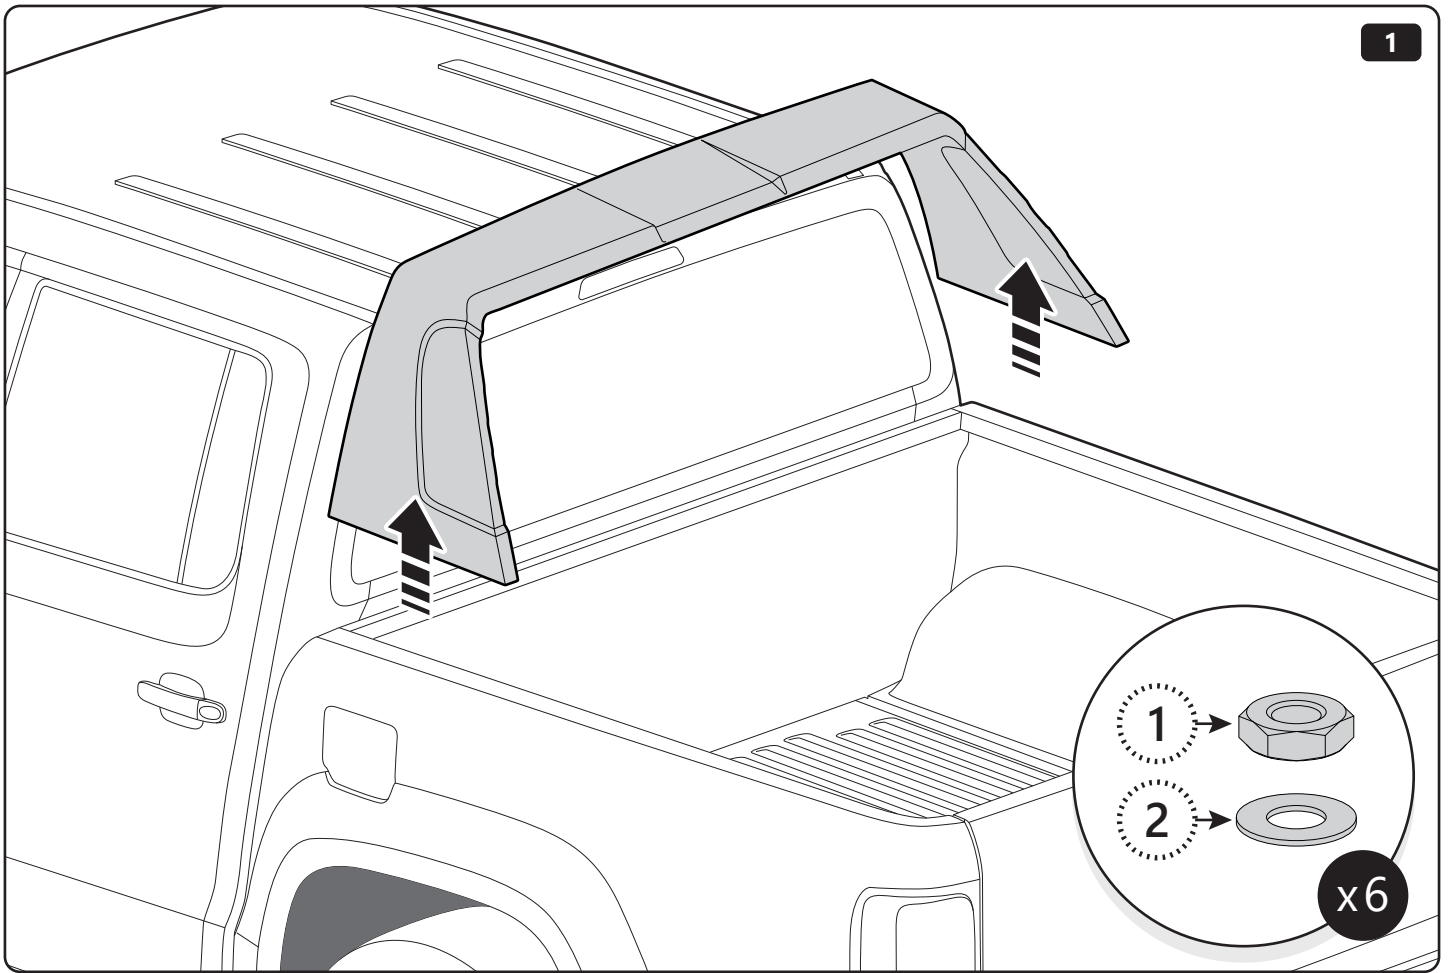

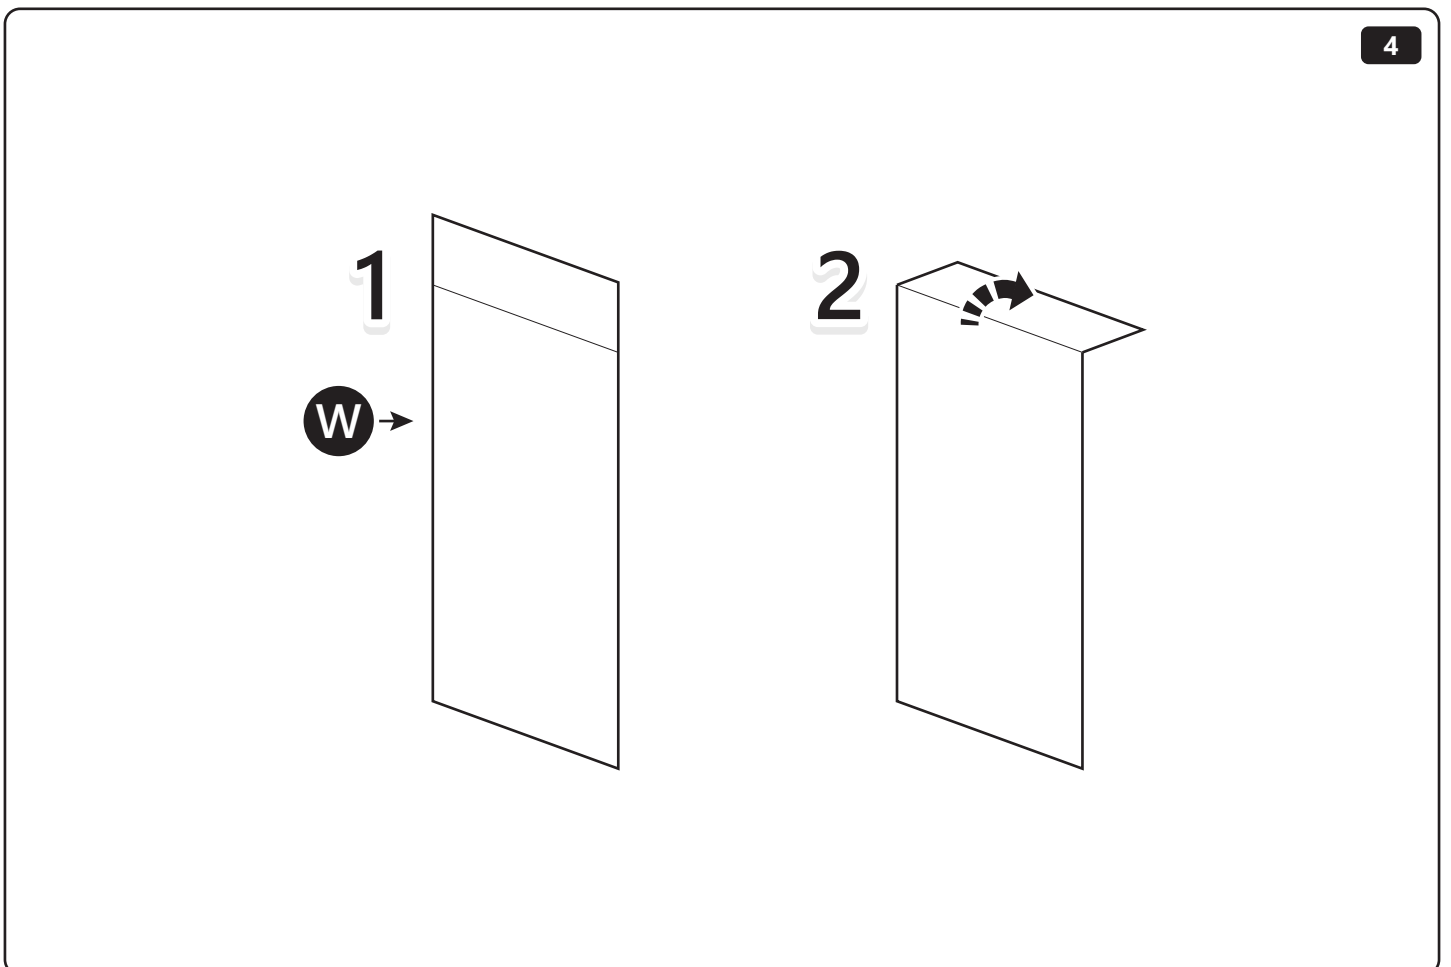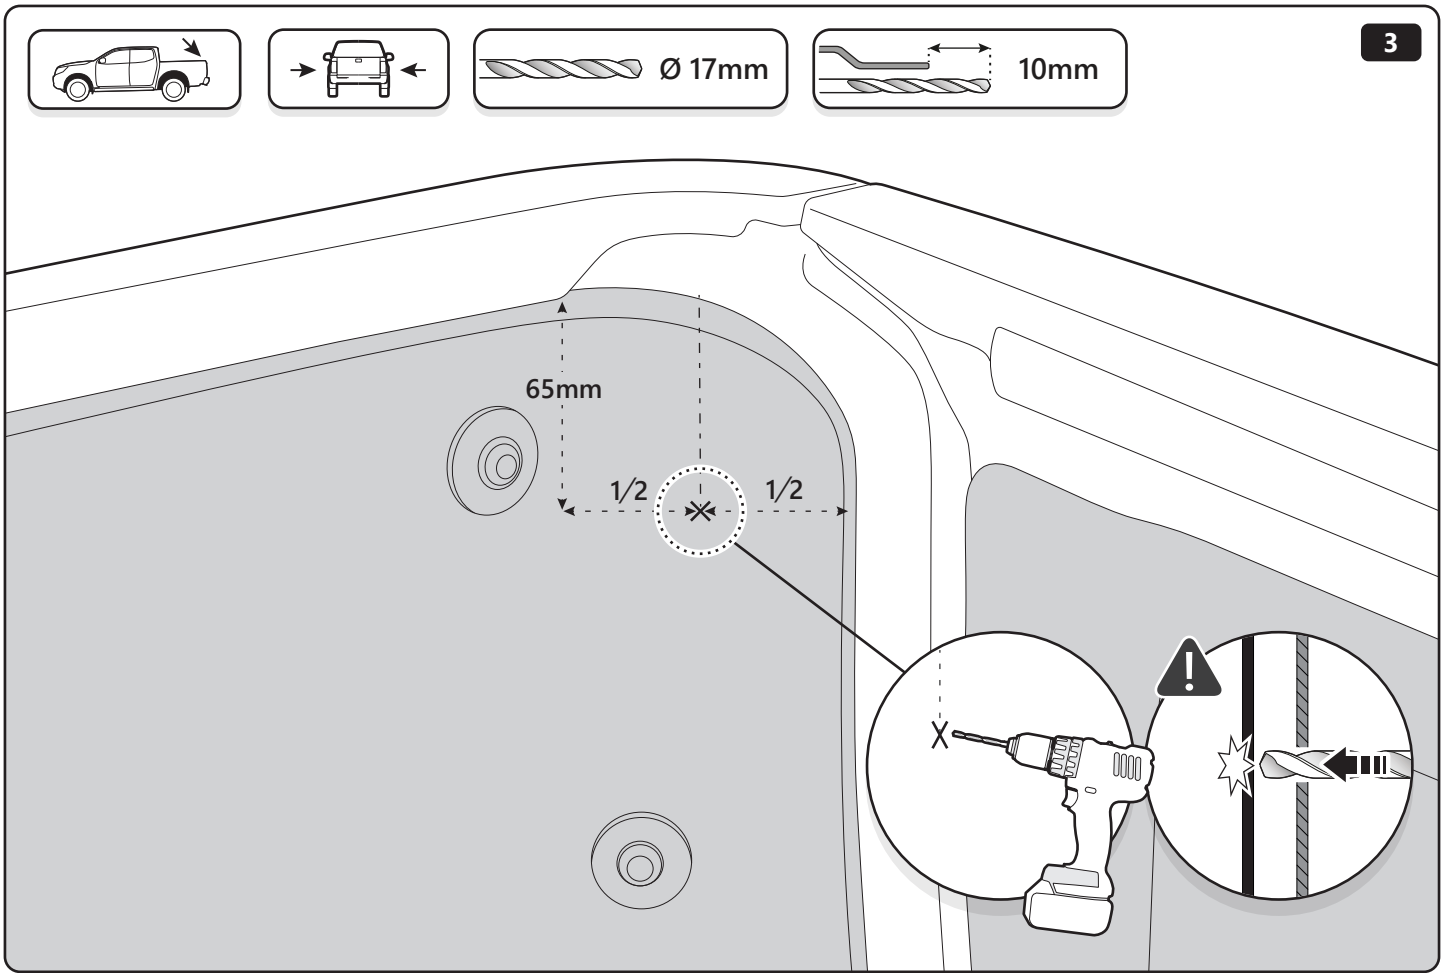


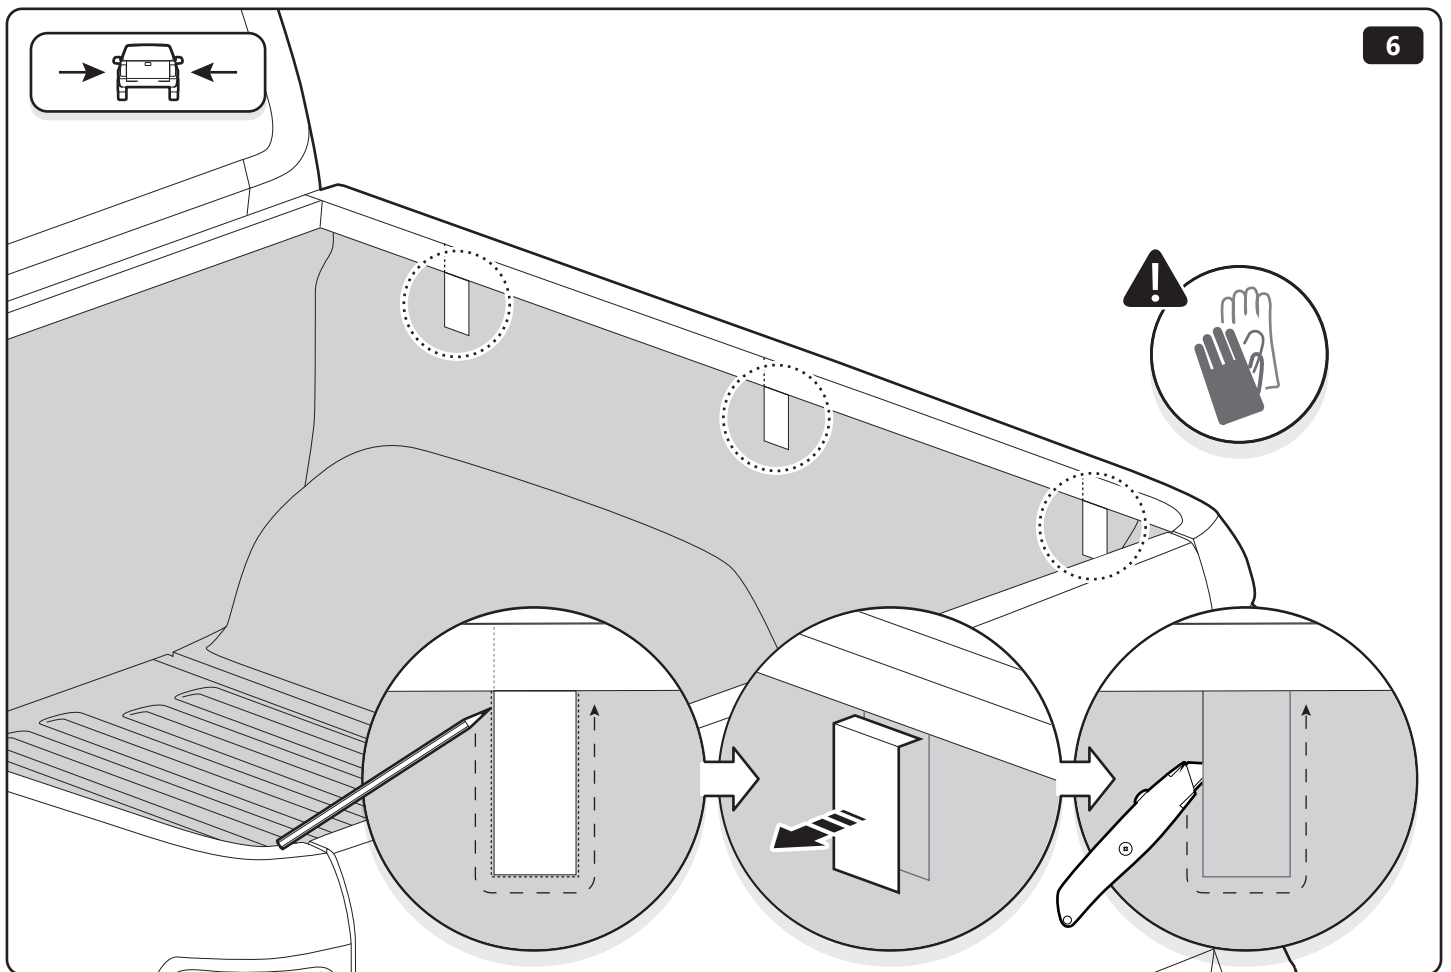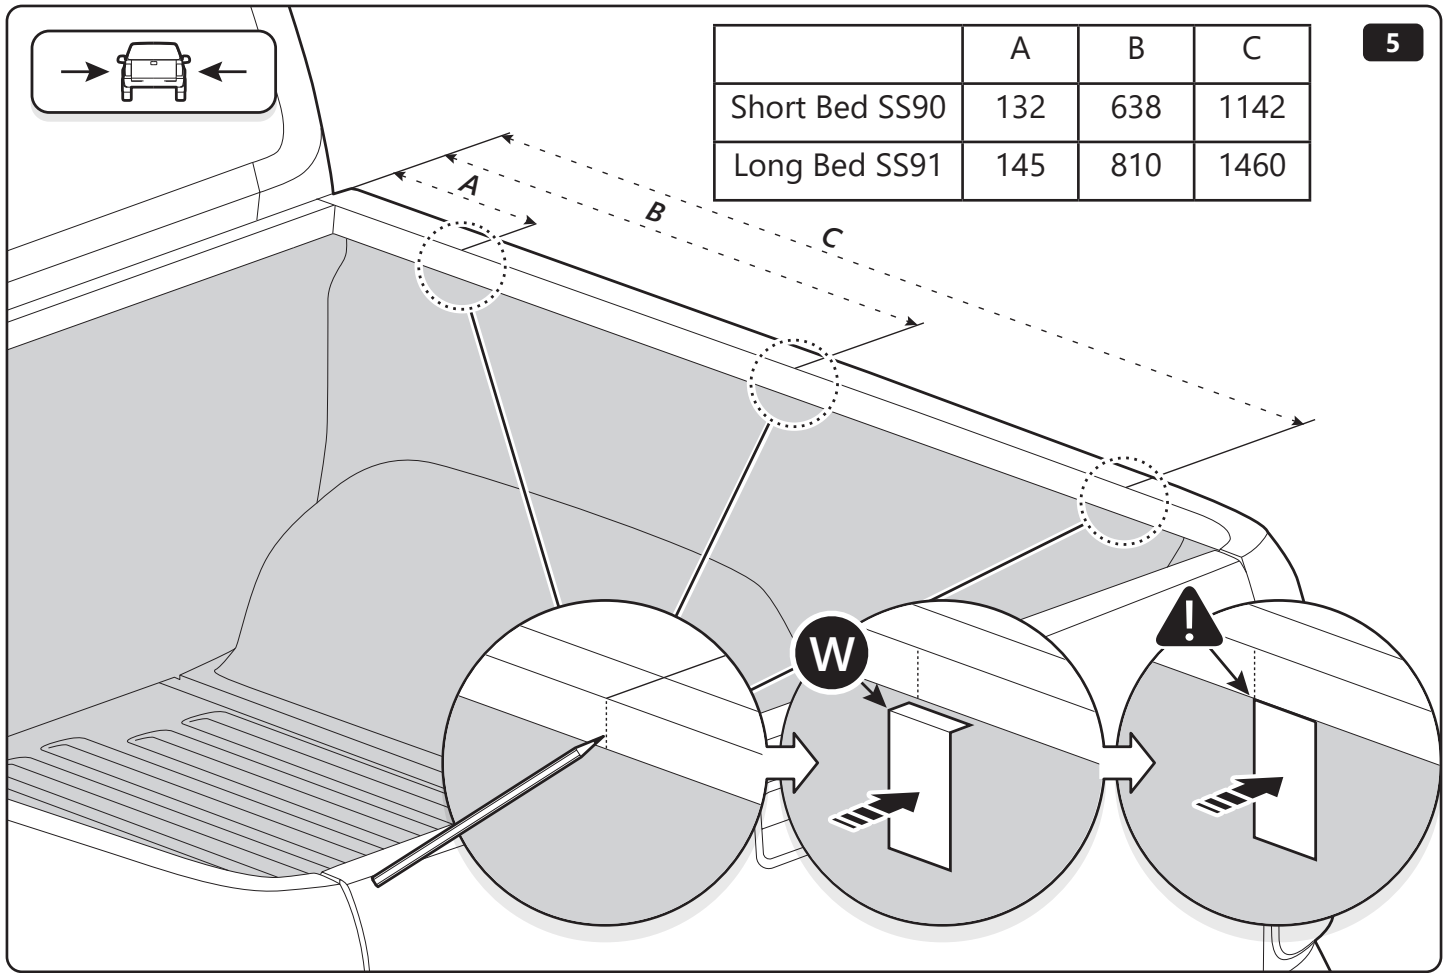

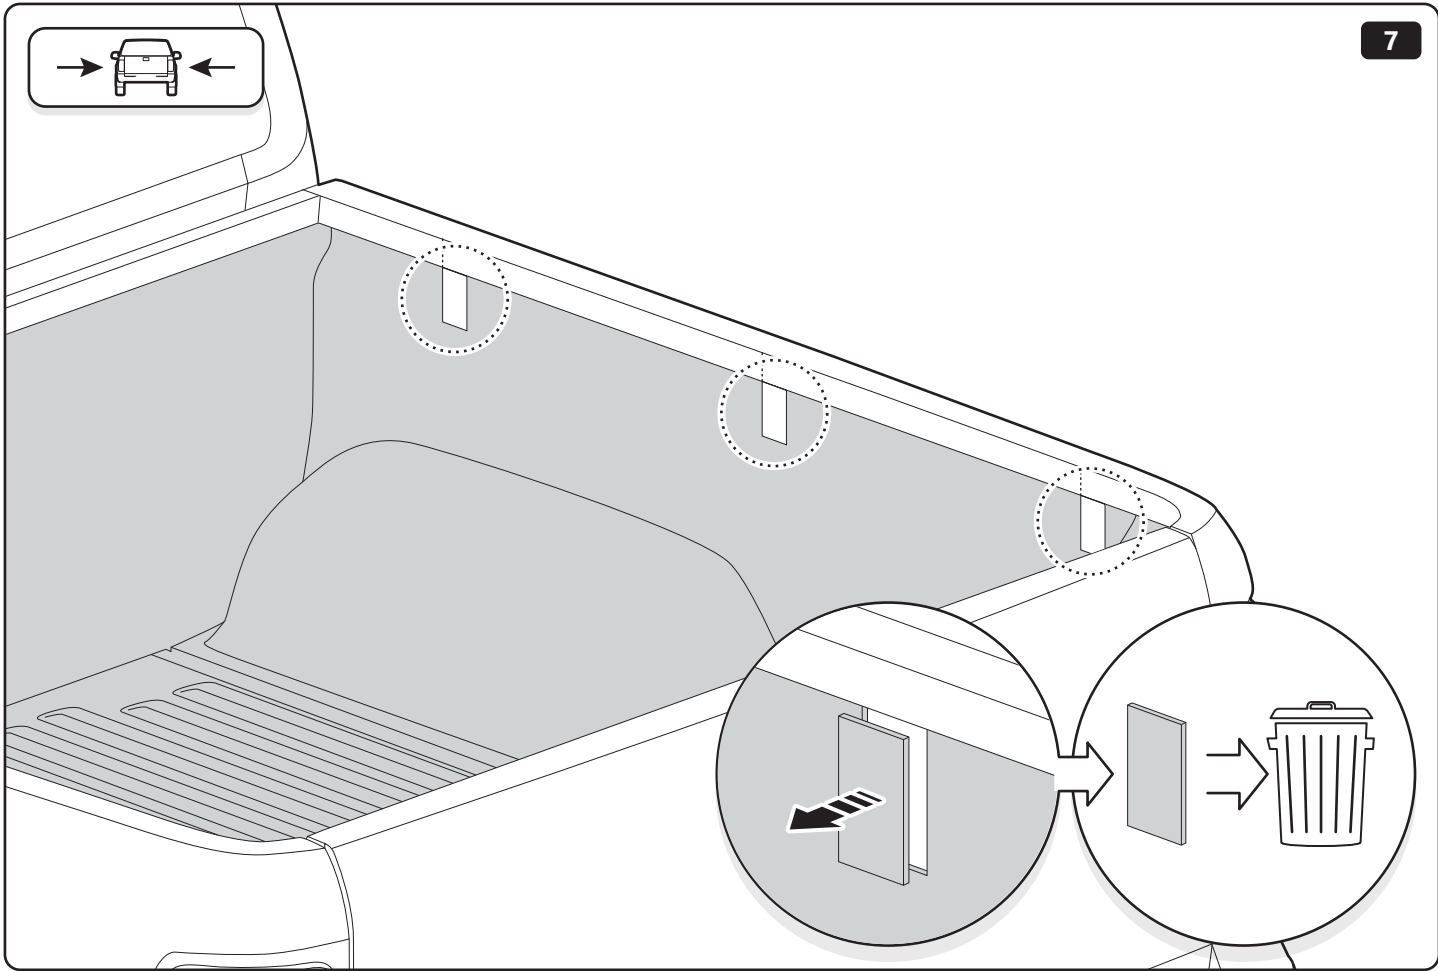


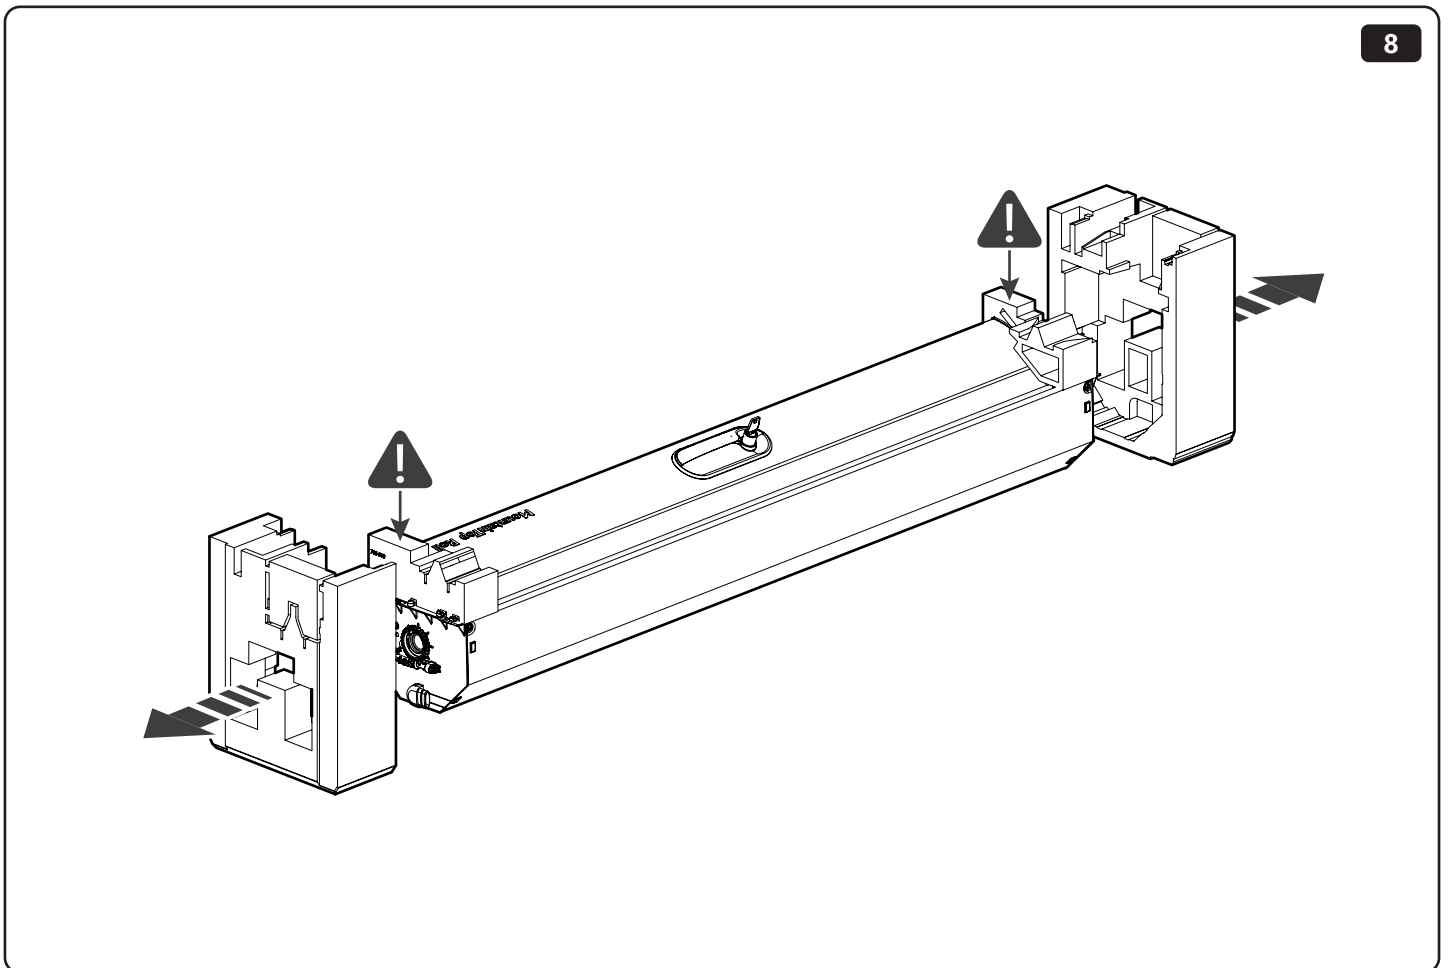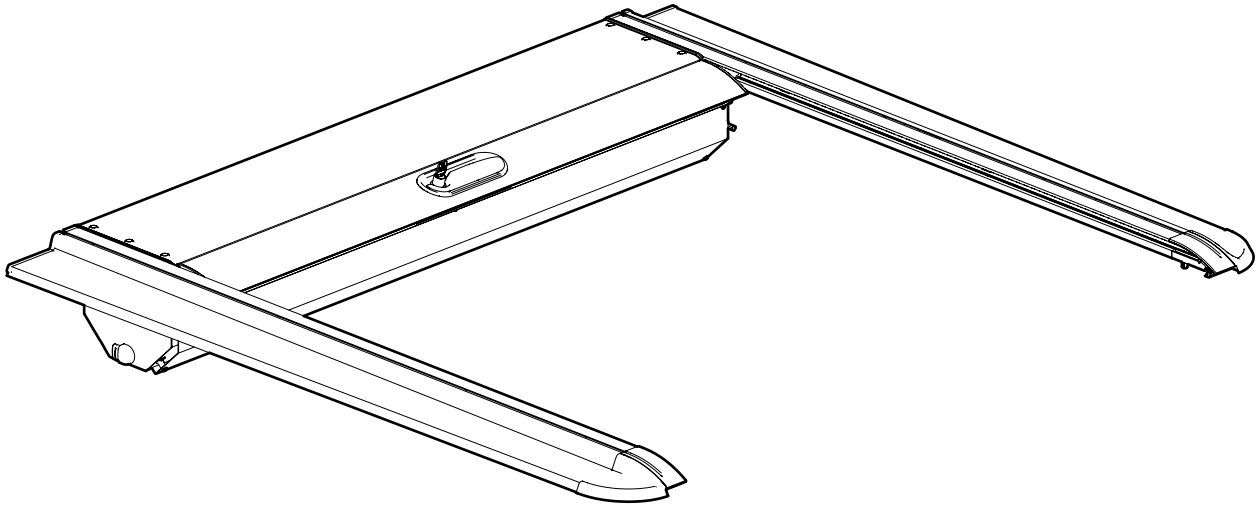




9


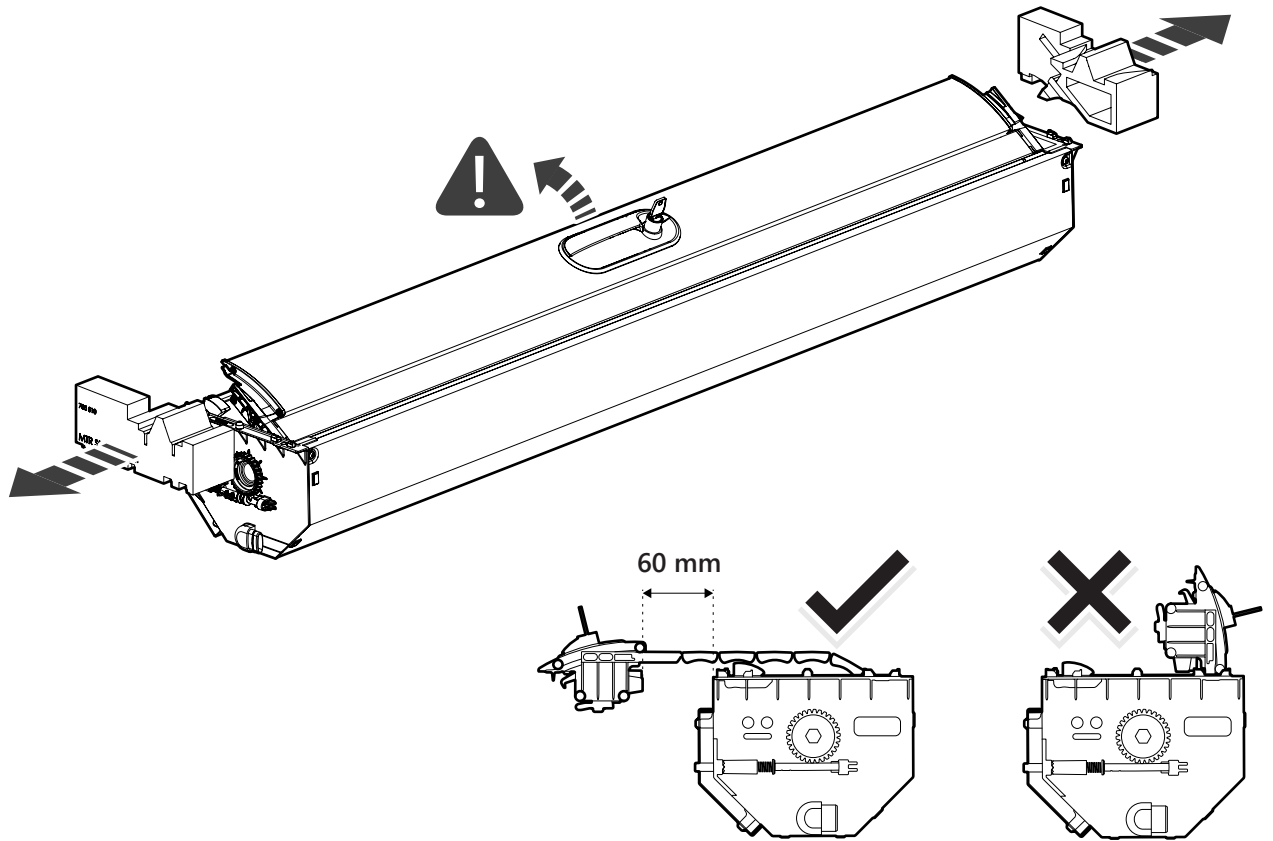






10



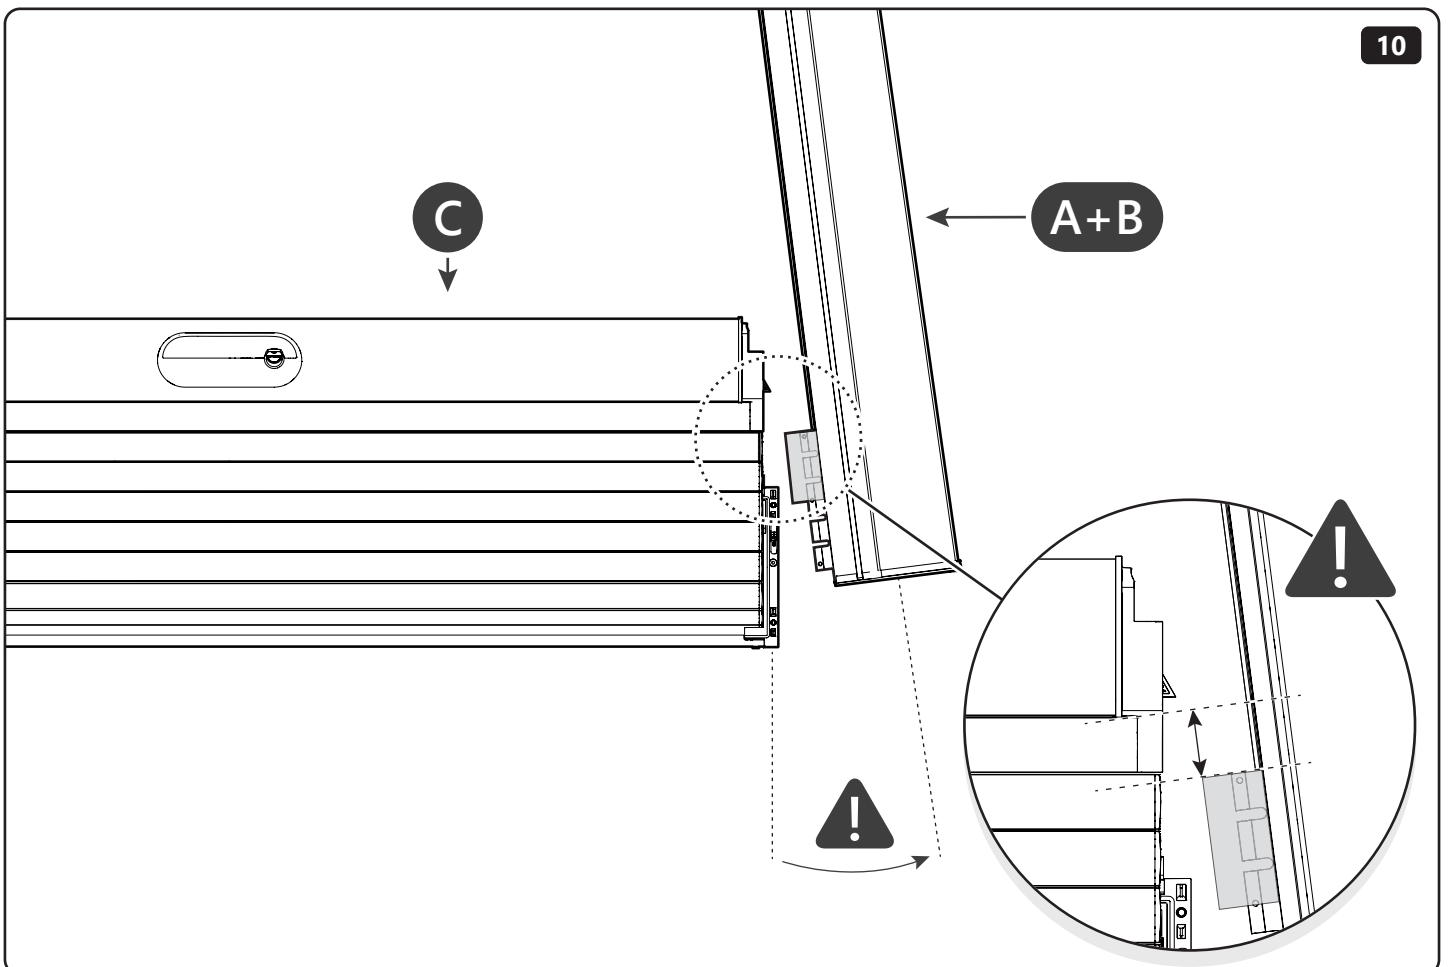


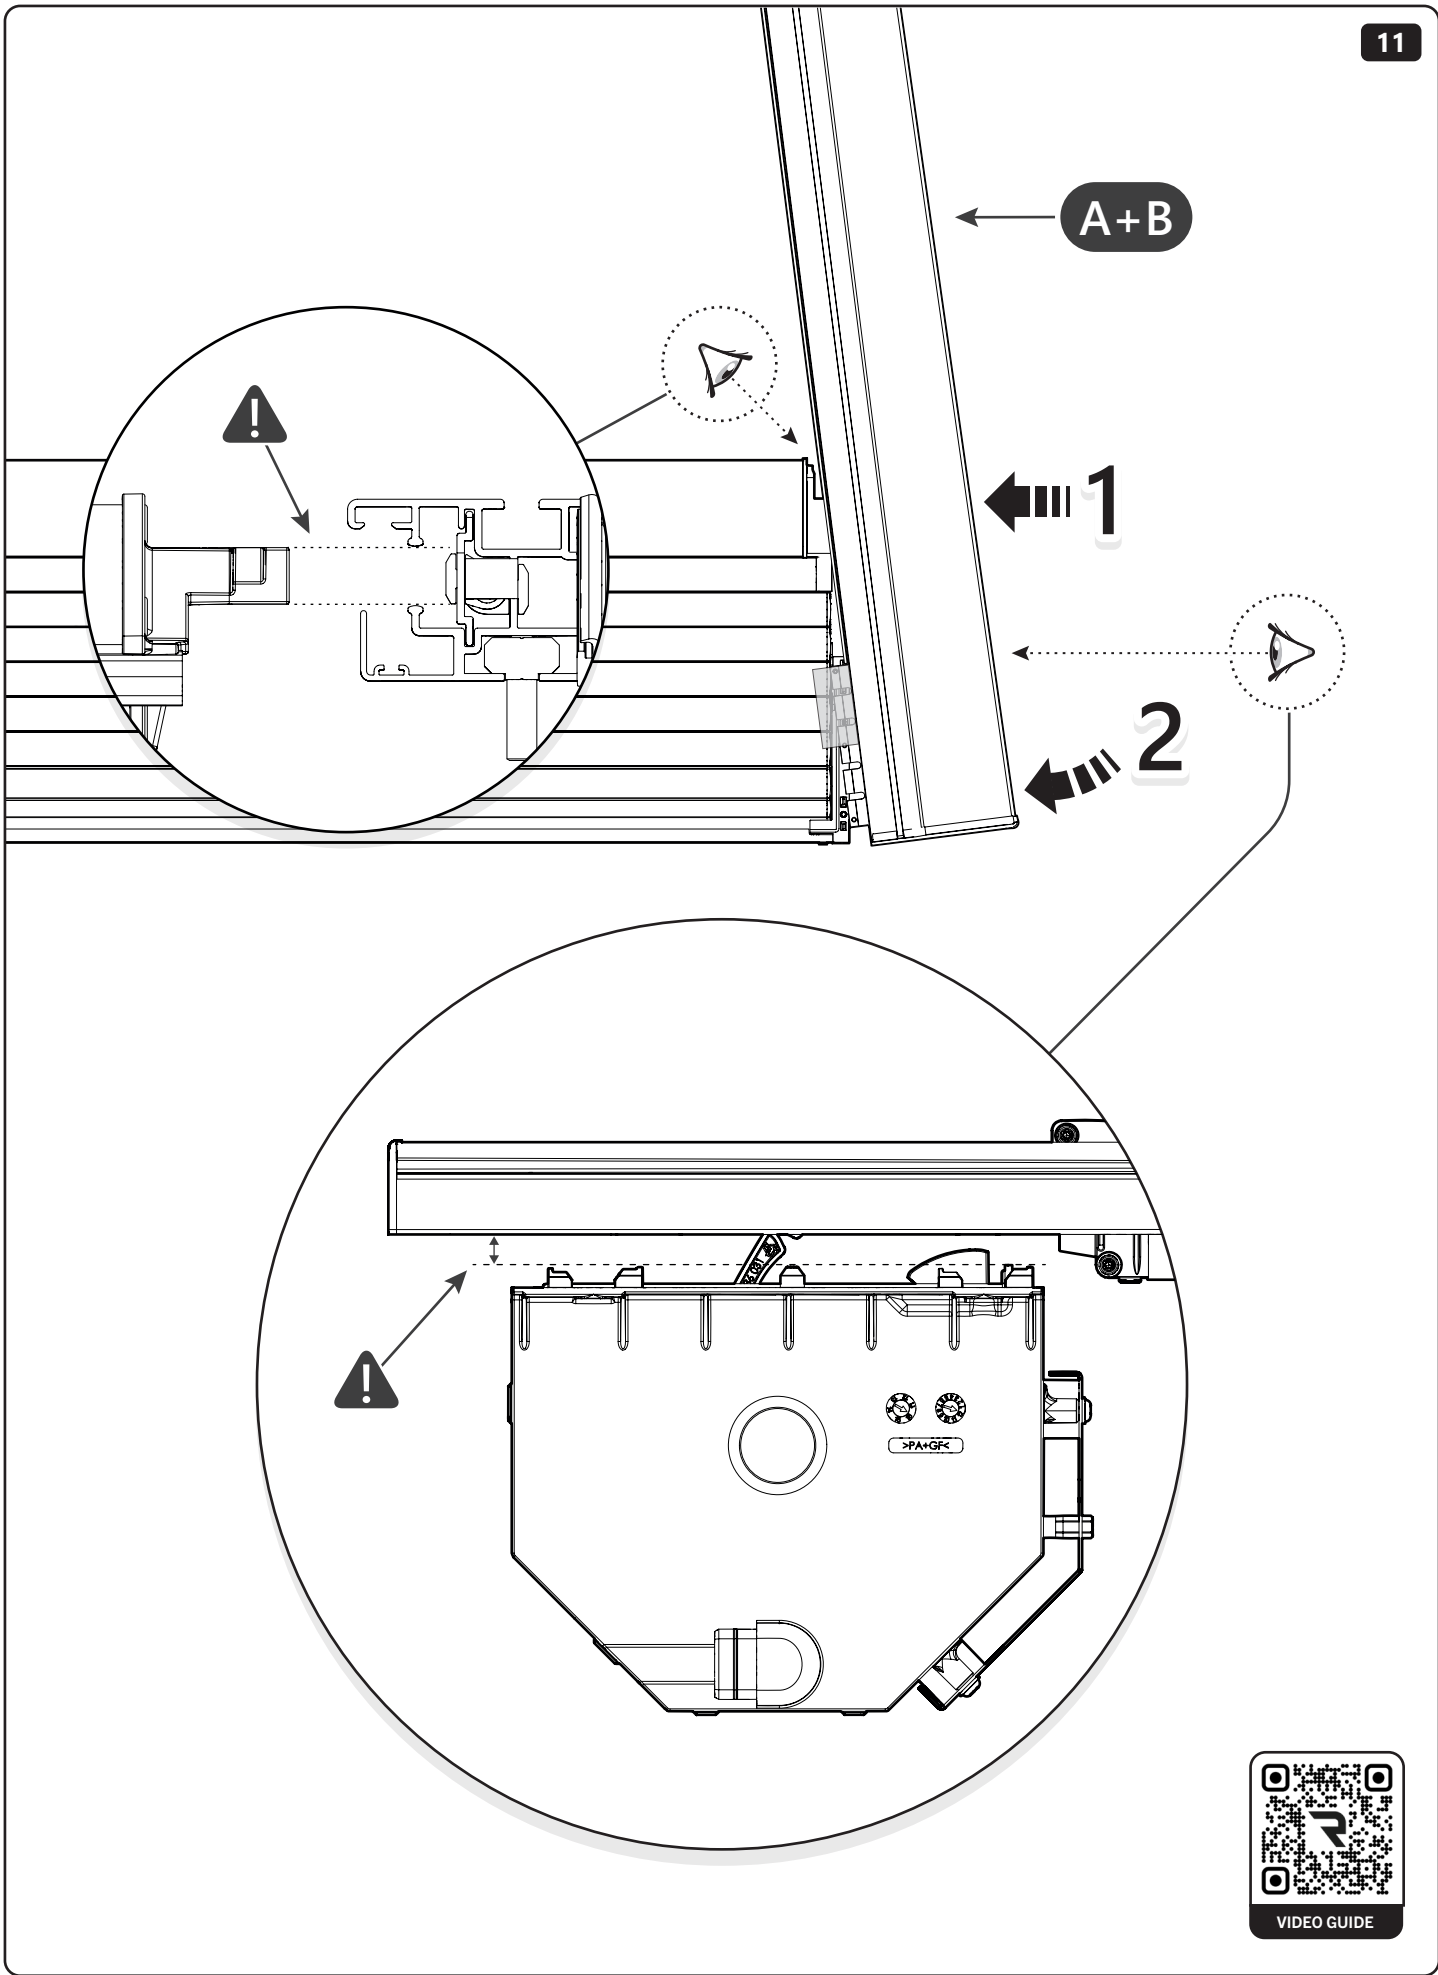


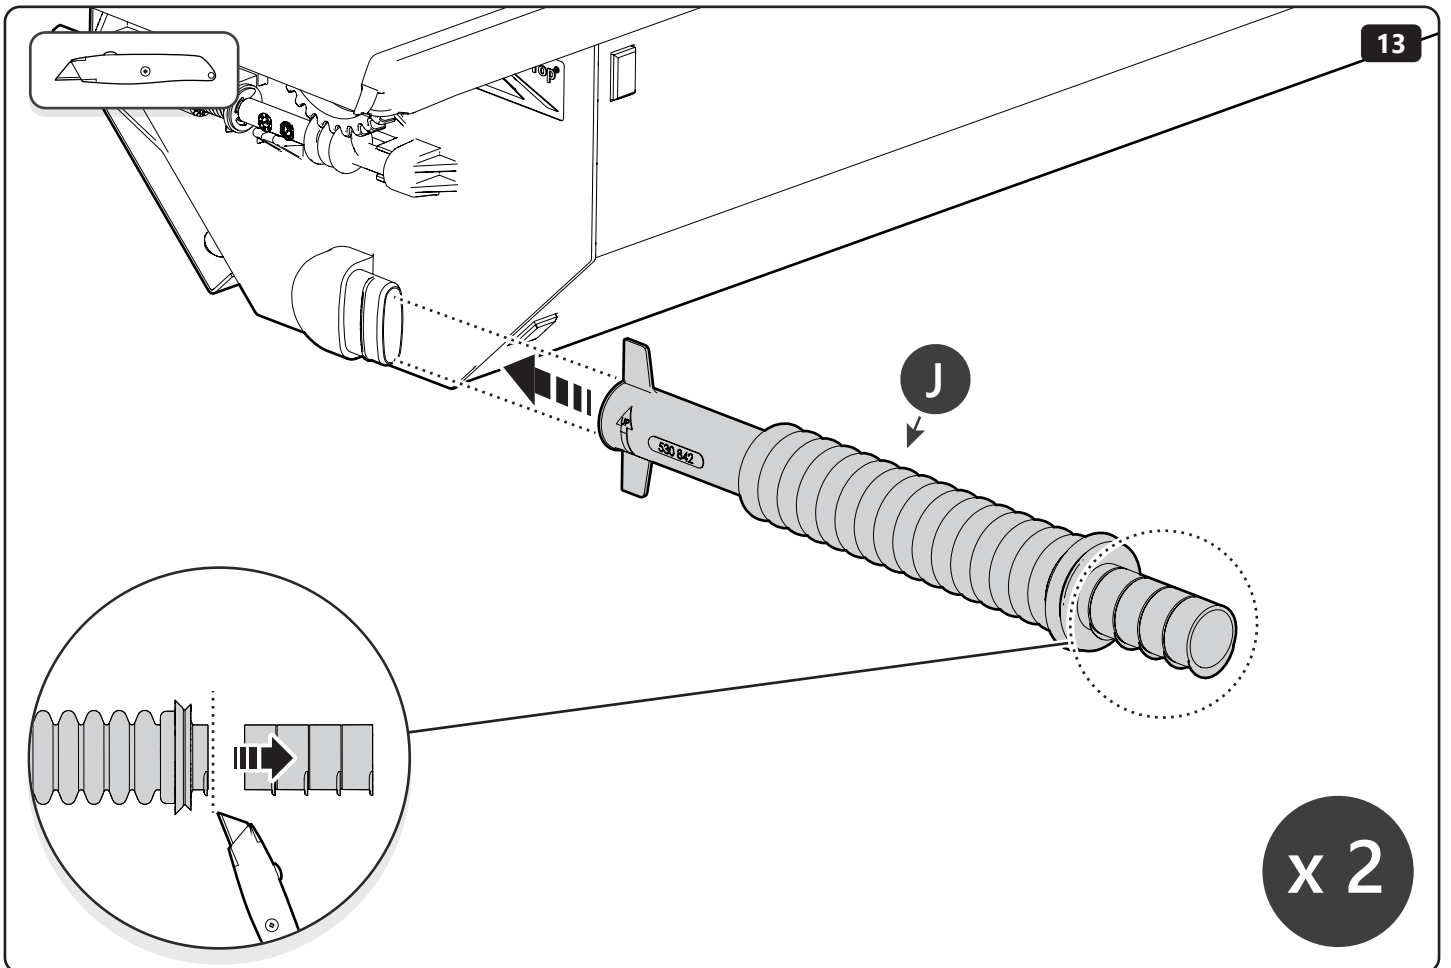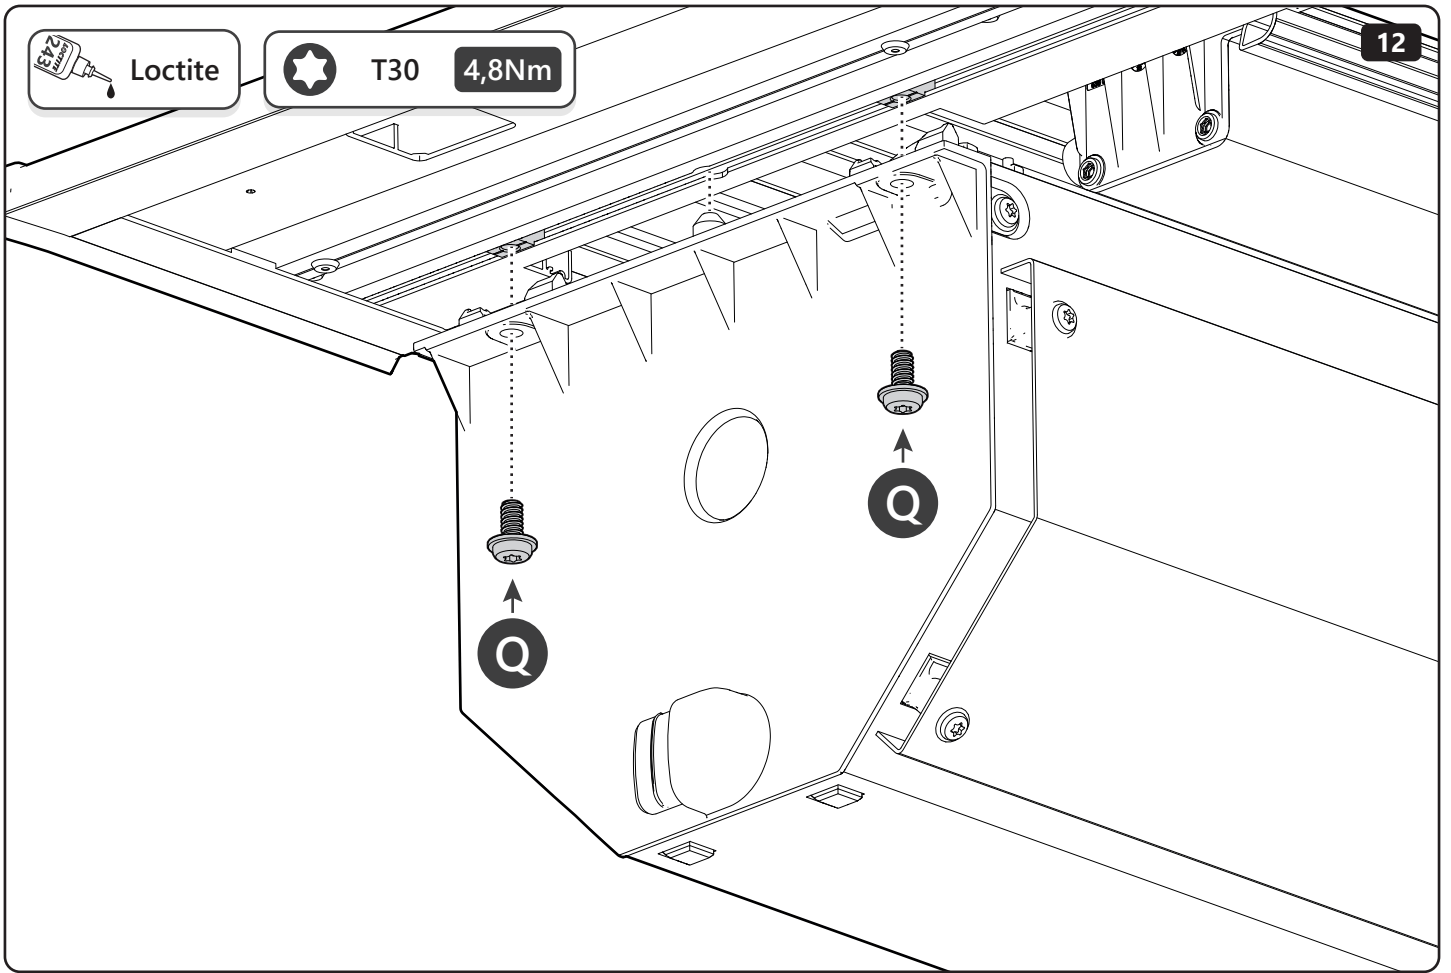

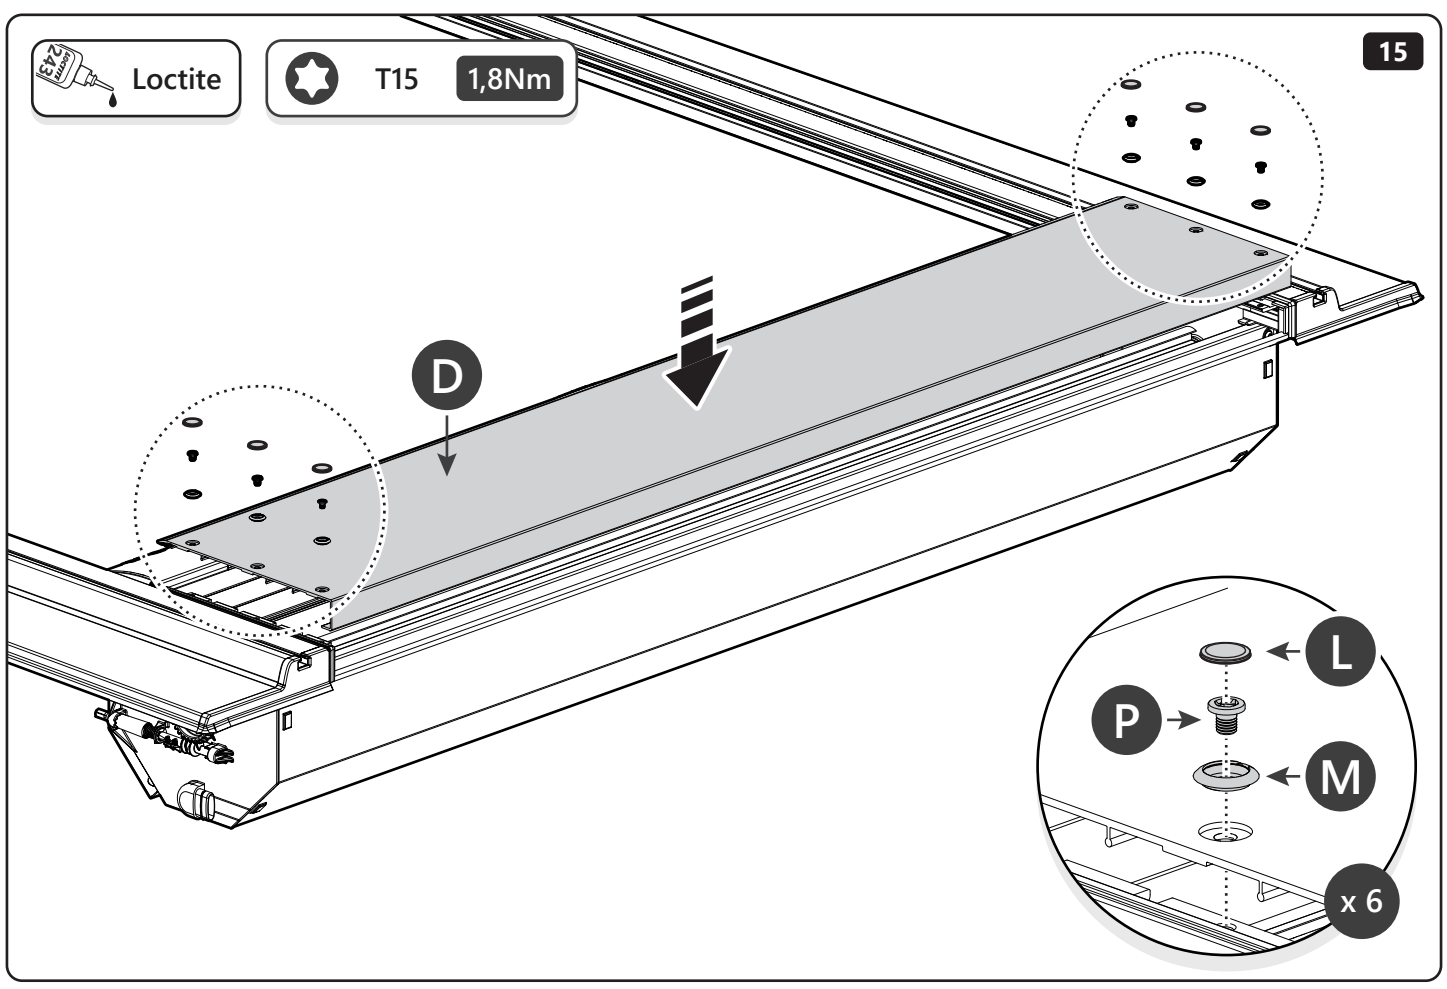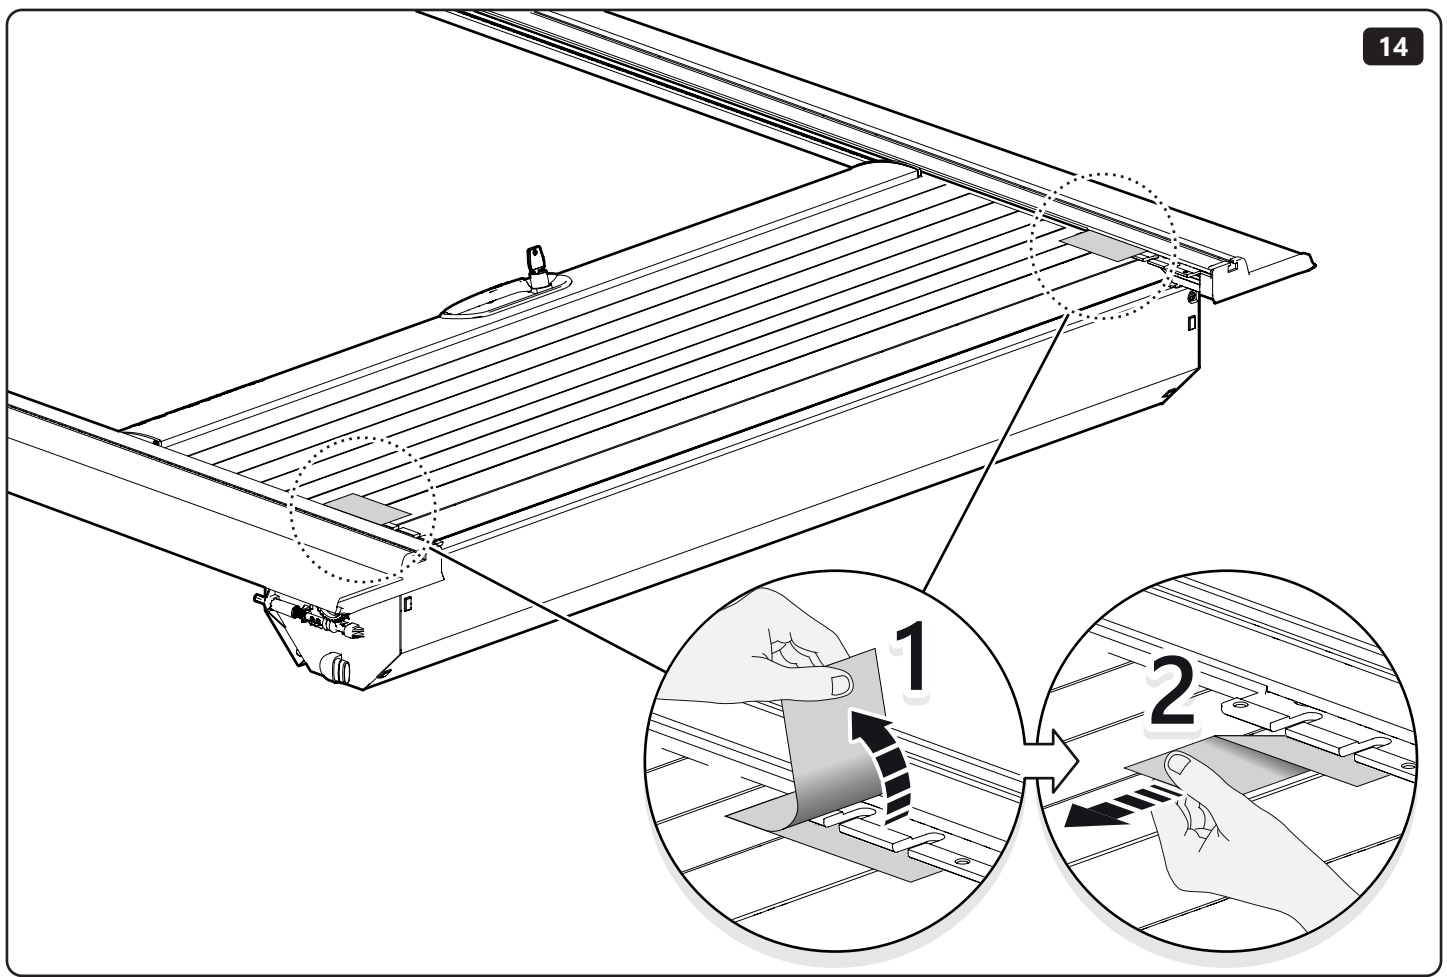
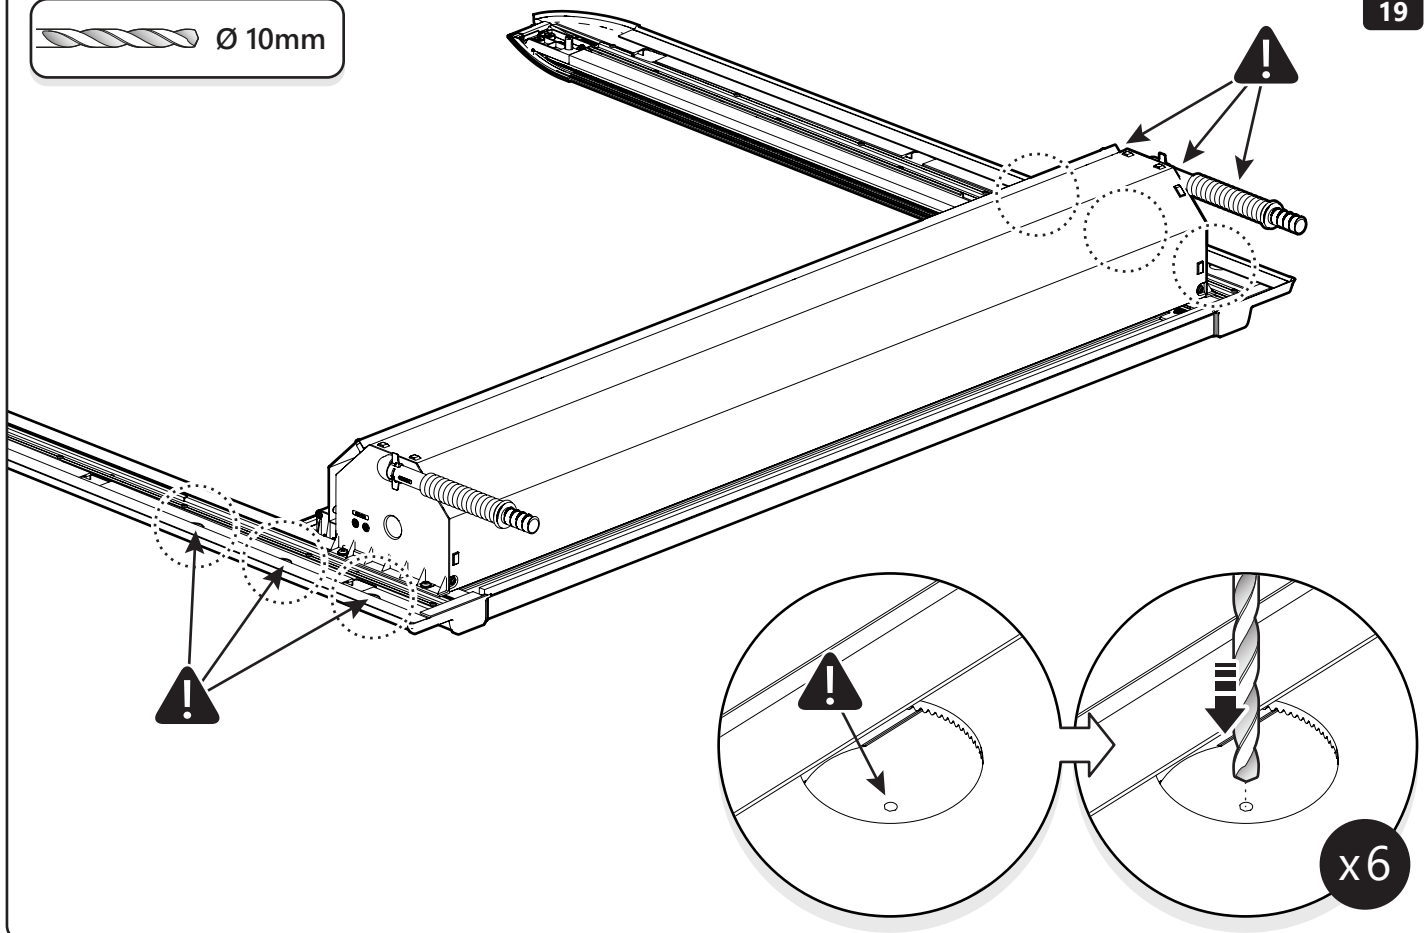


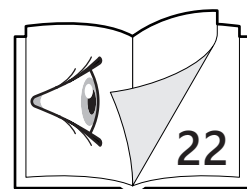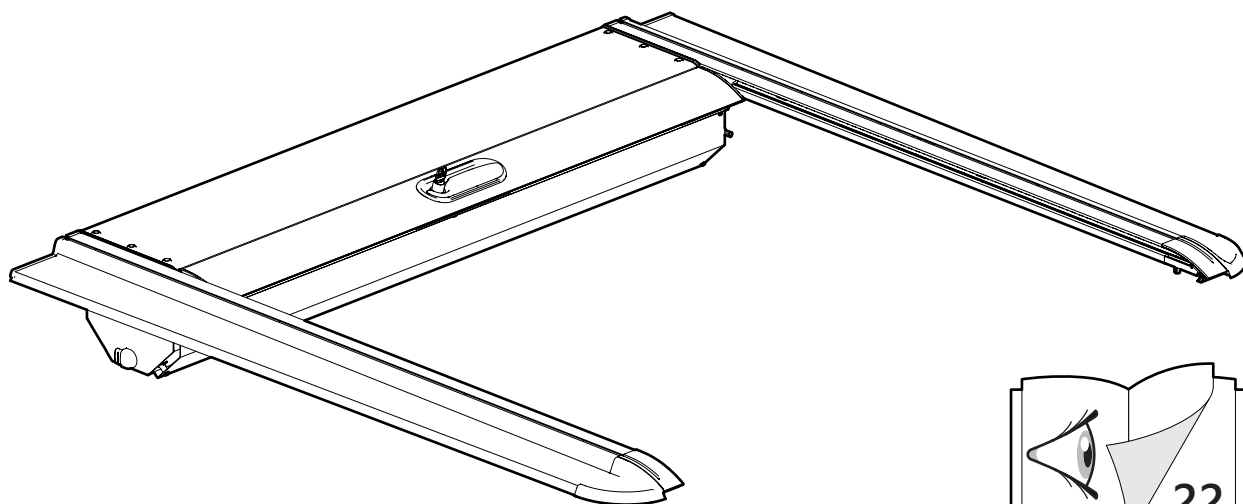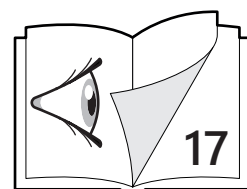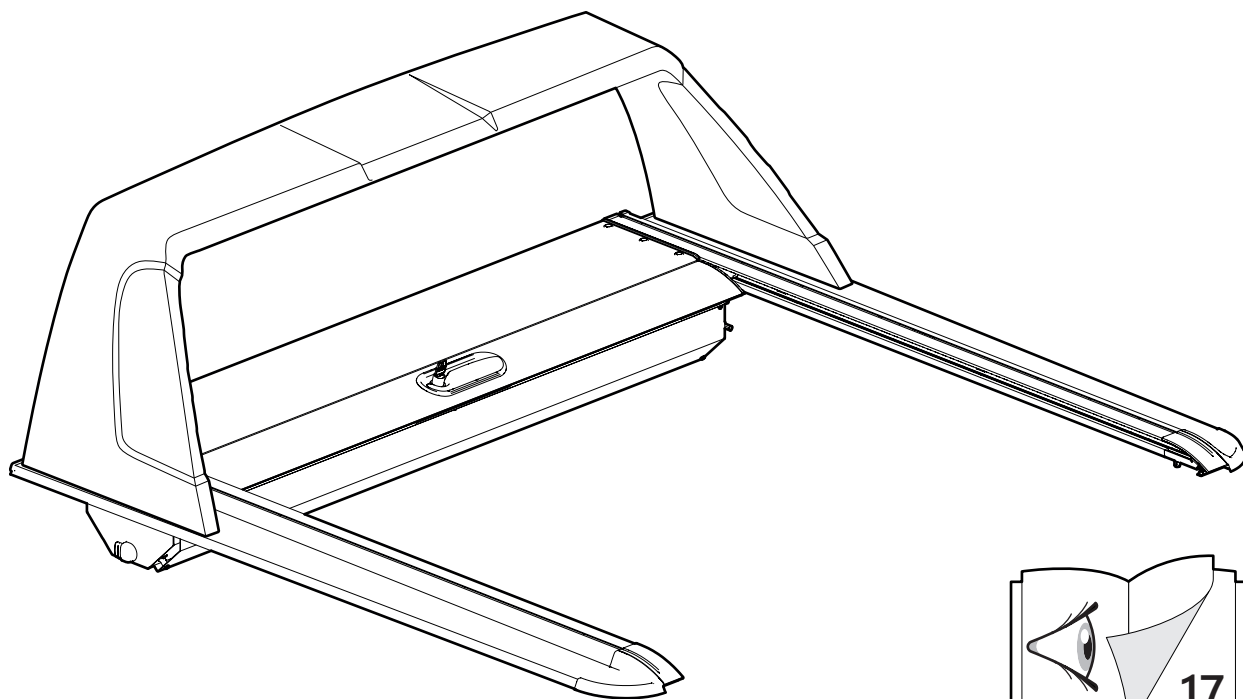

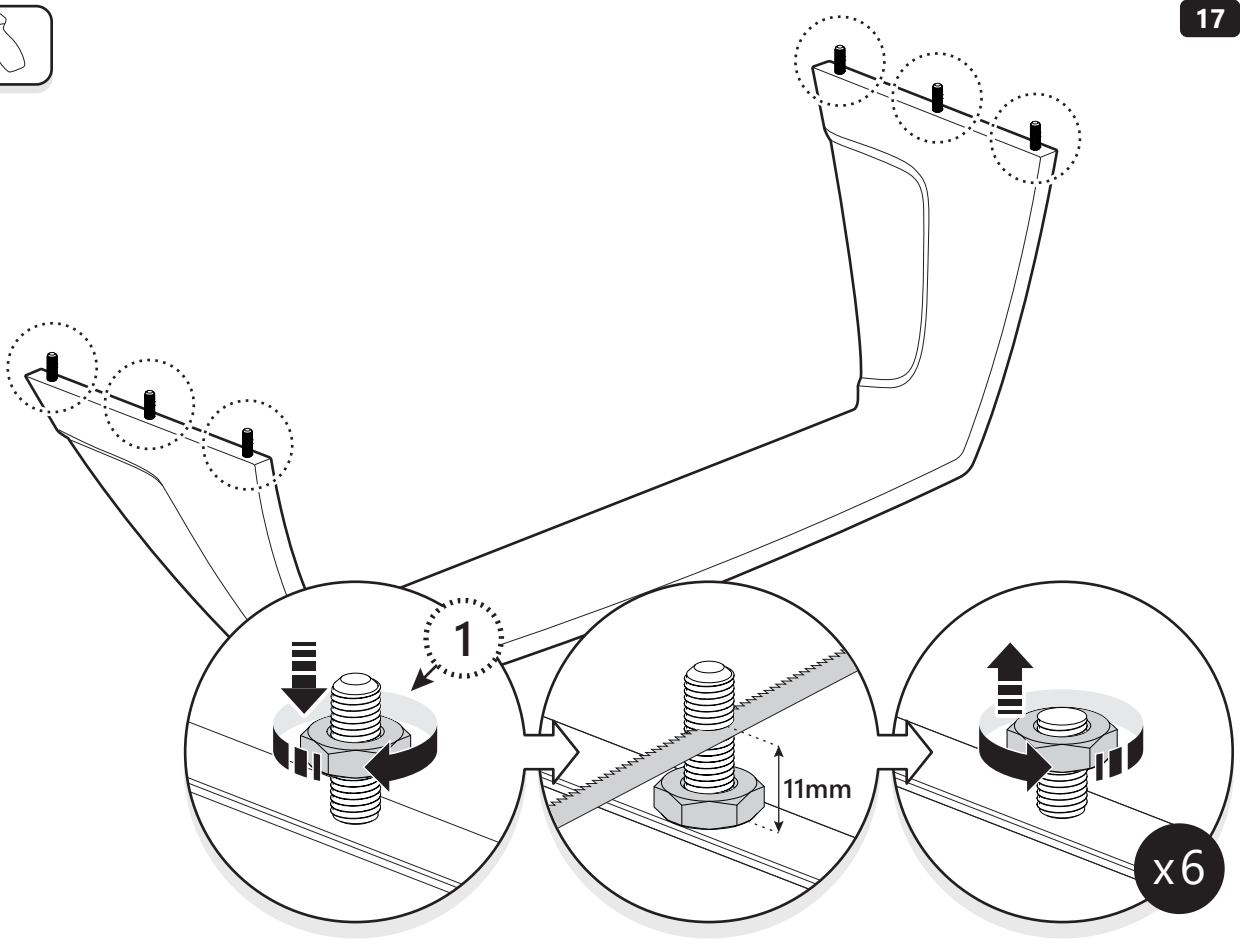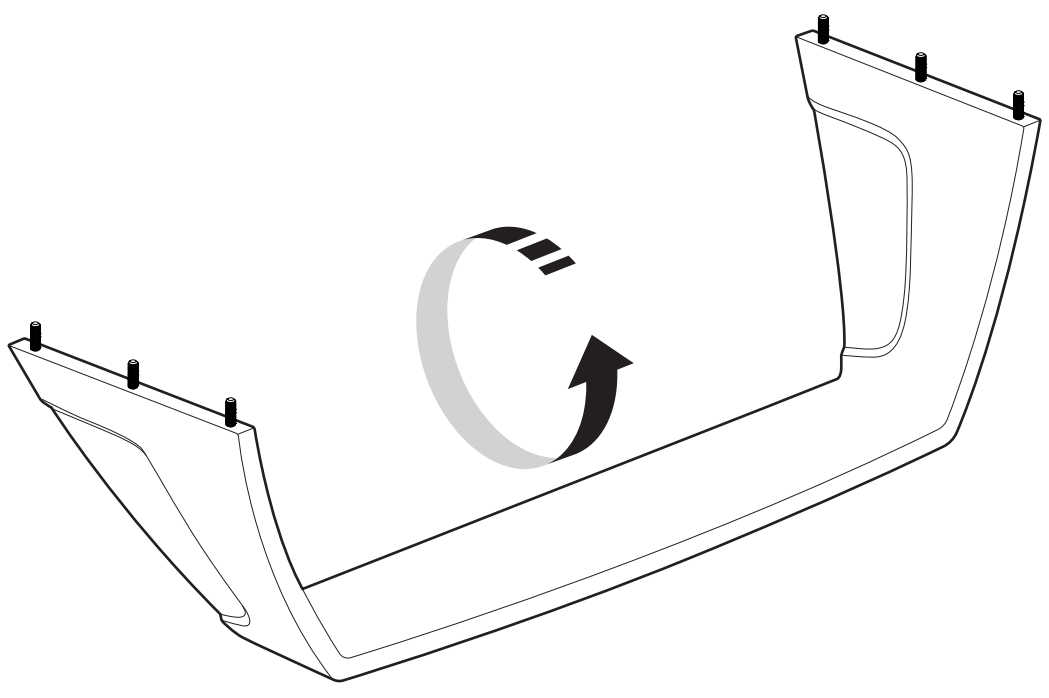


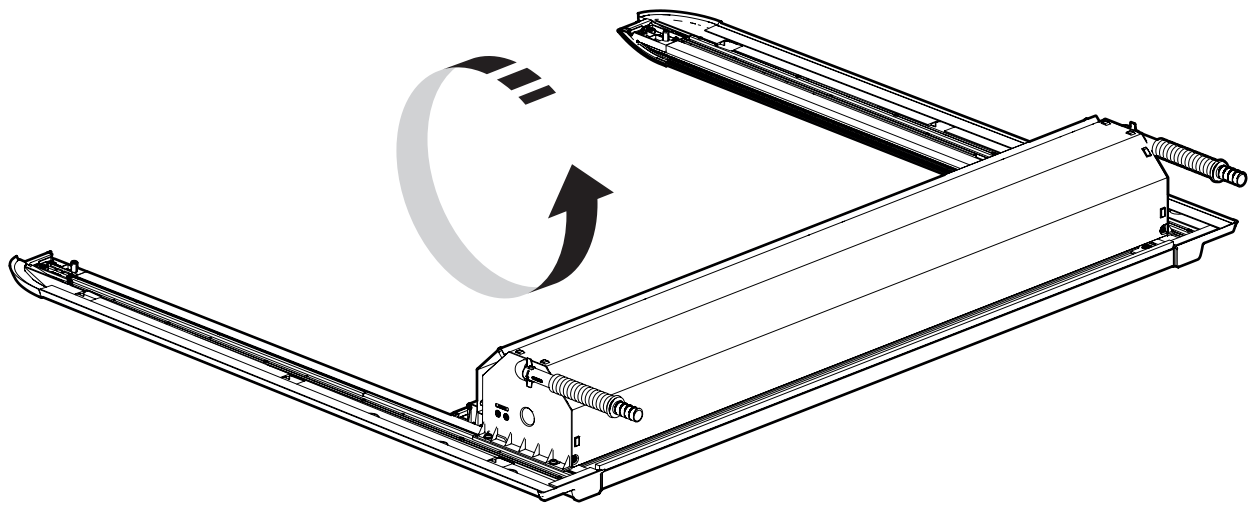


 Ø 10mm




20

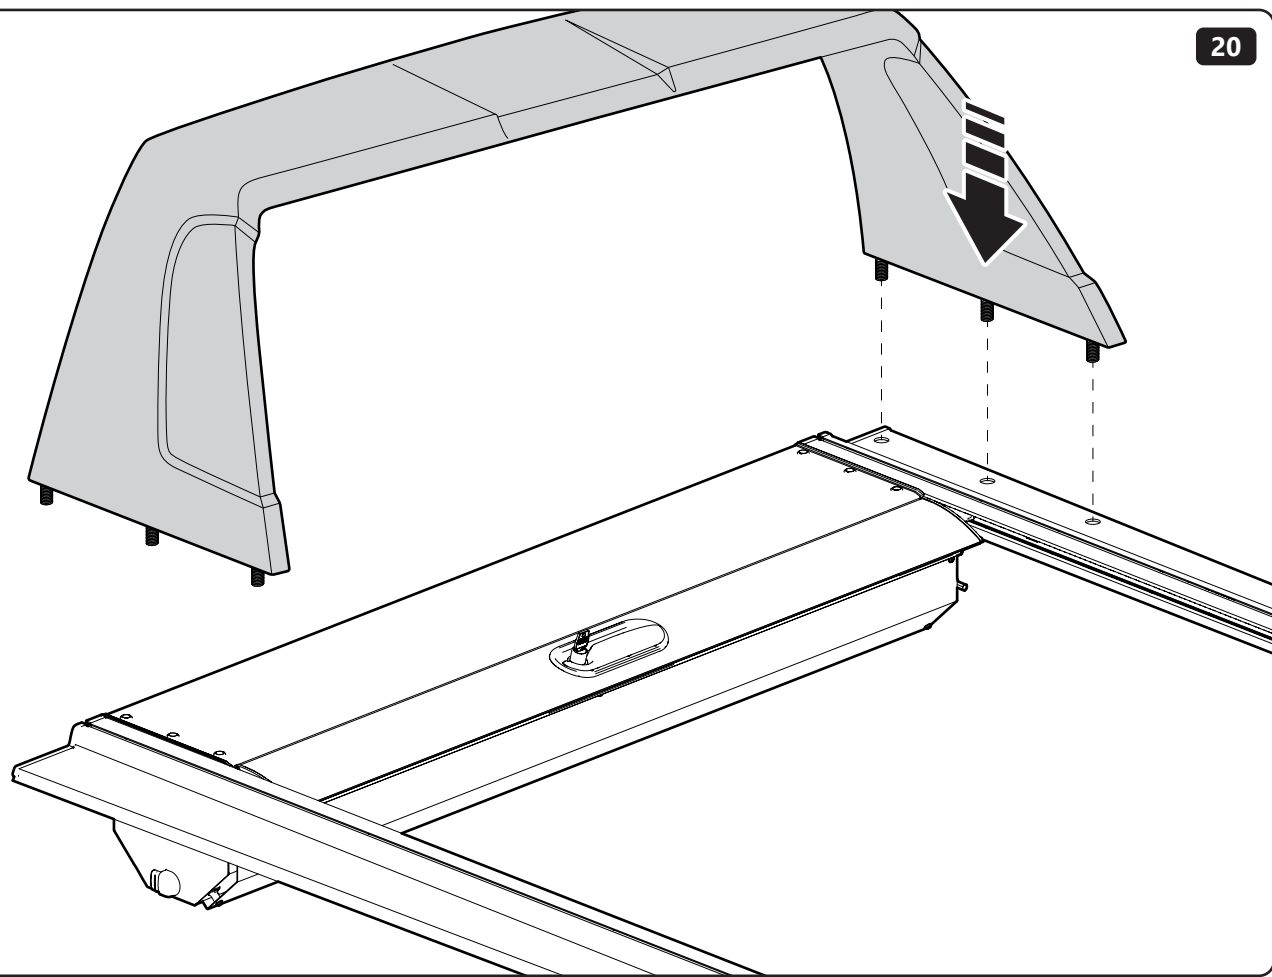



21


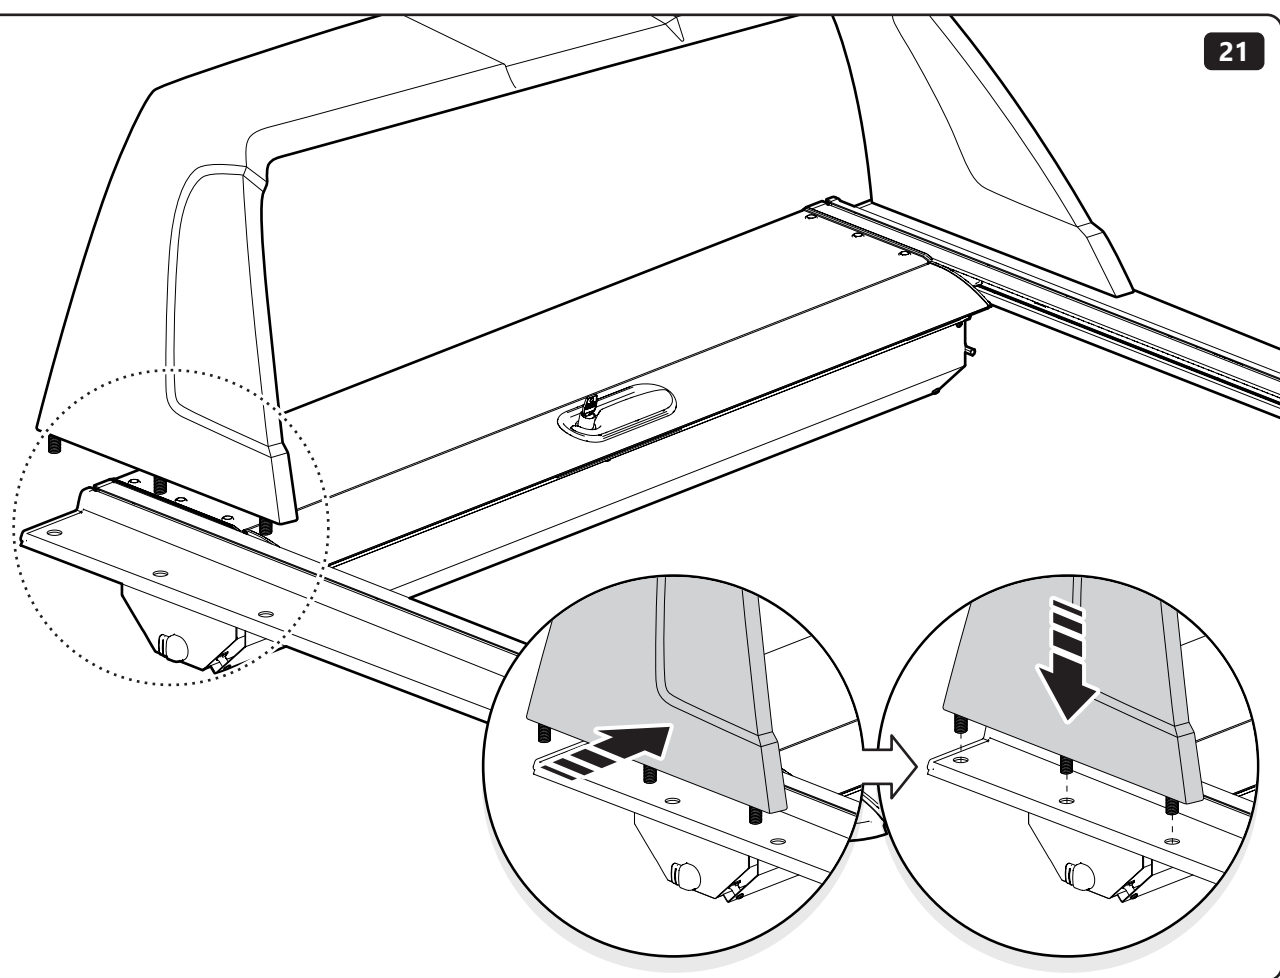




 LOCTITE 243



 13mm **10Nm**


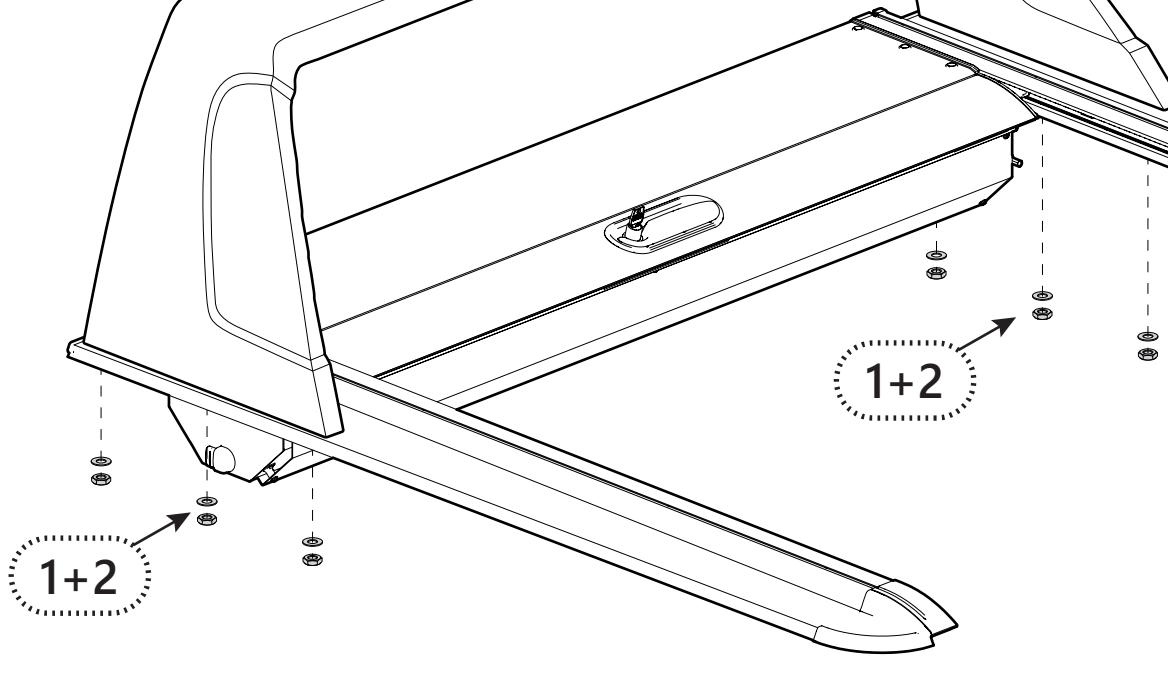



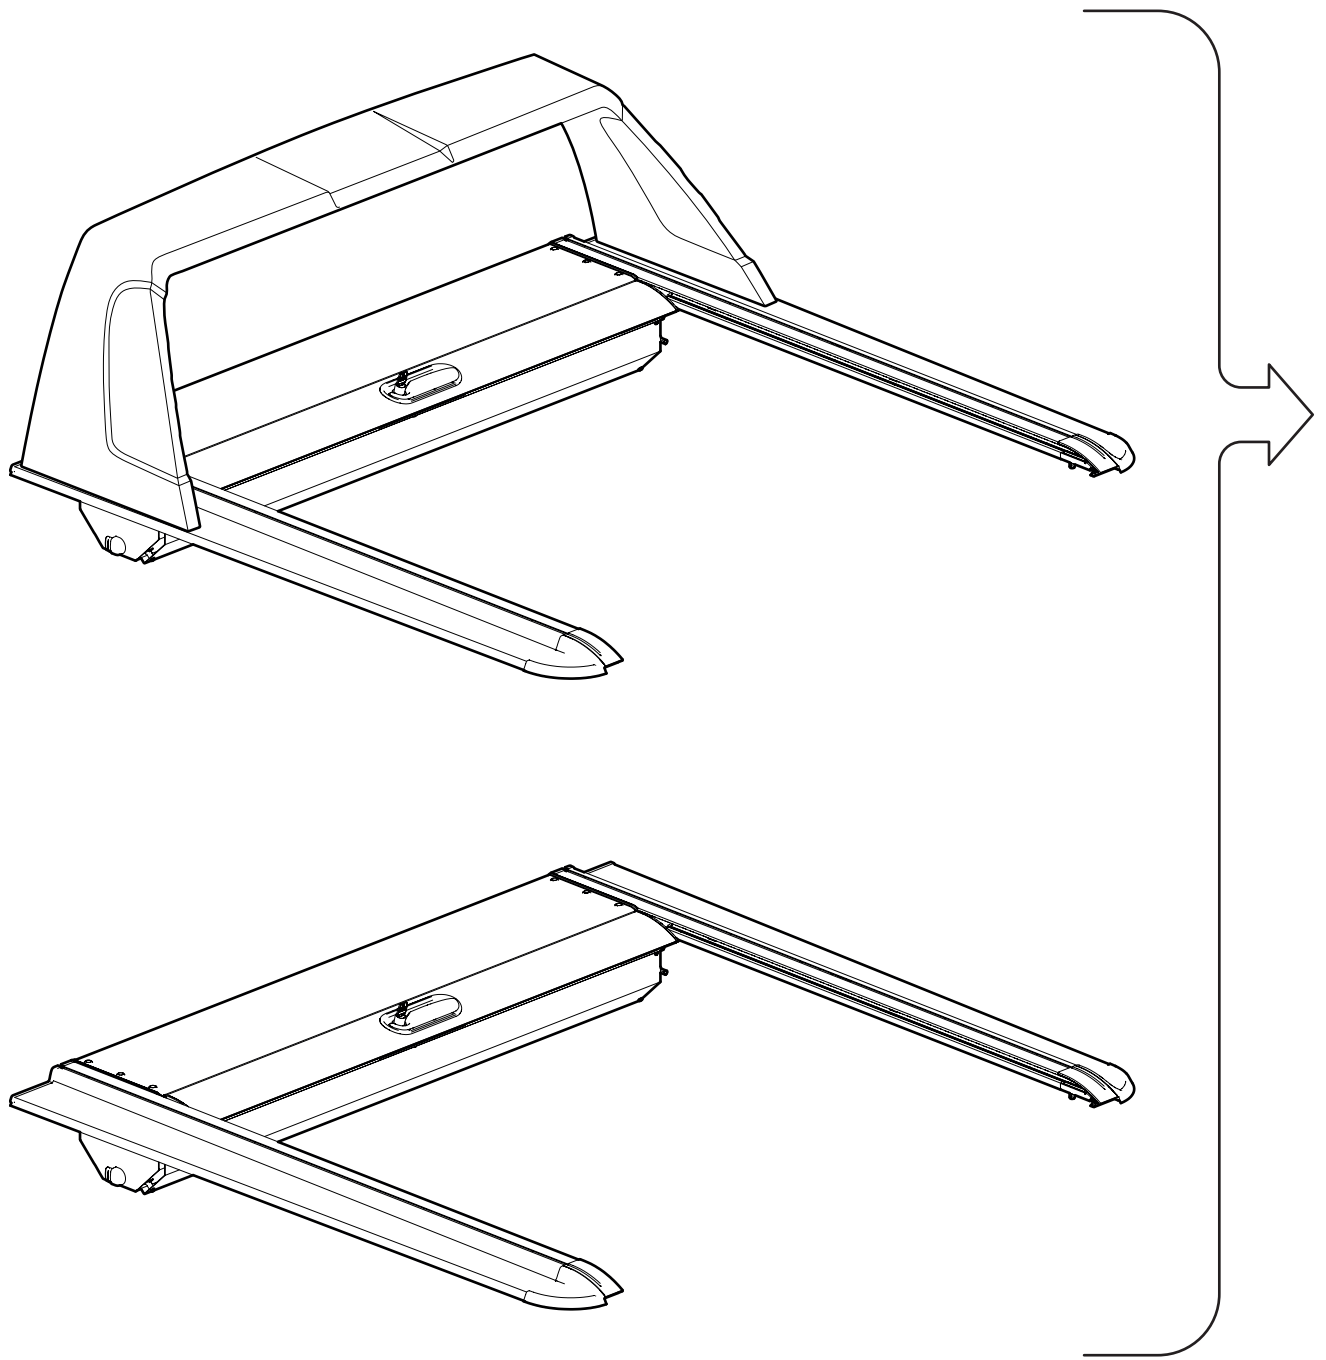


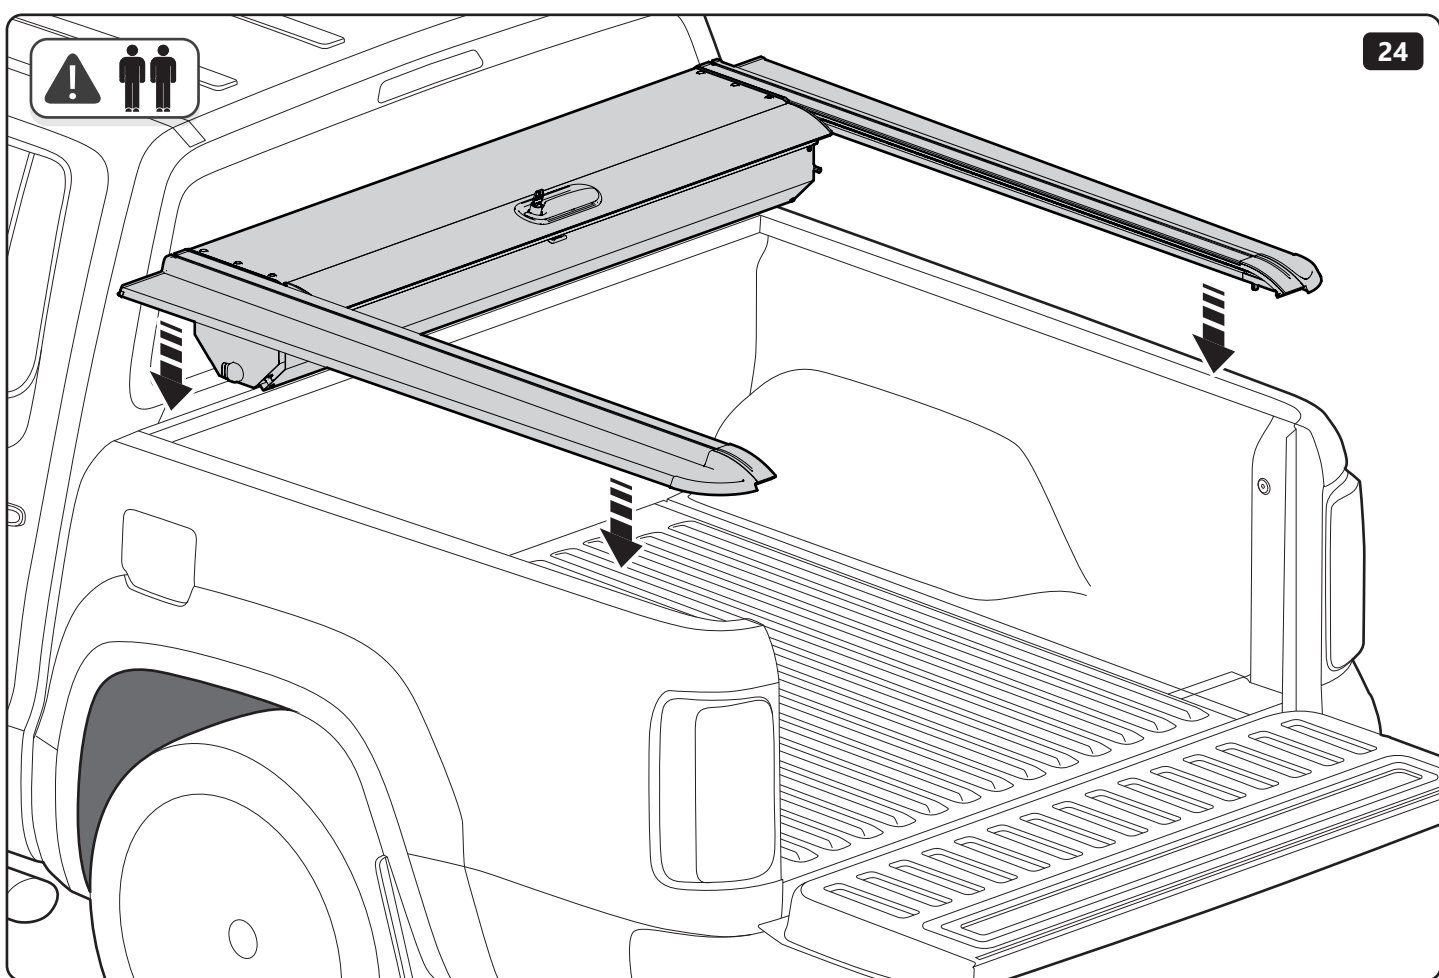
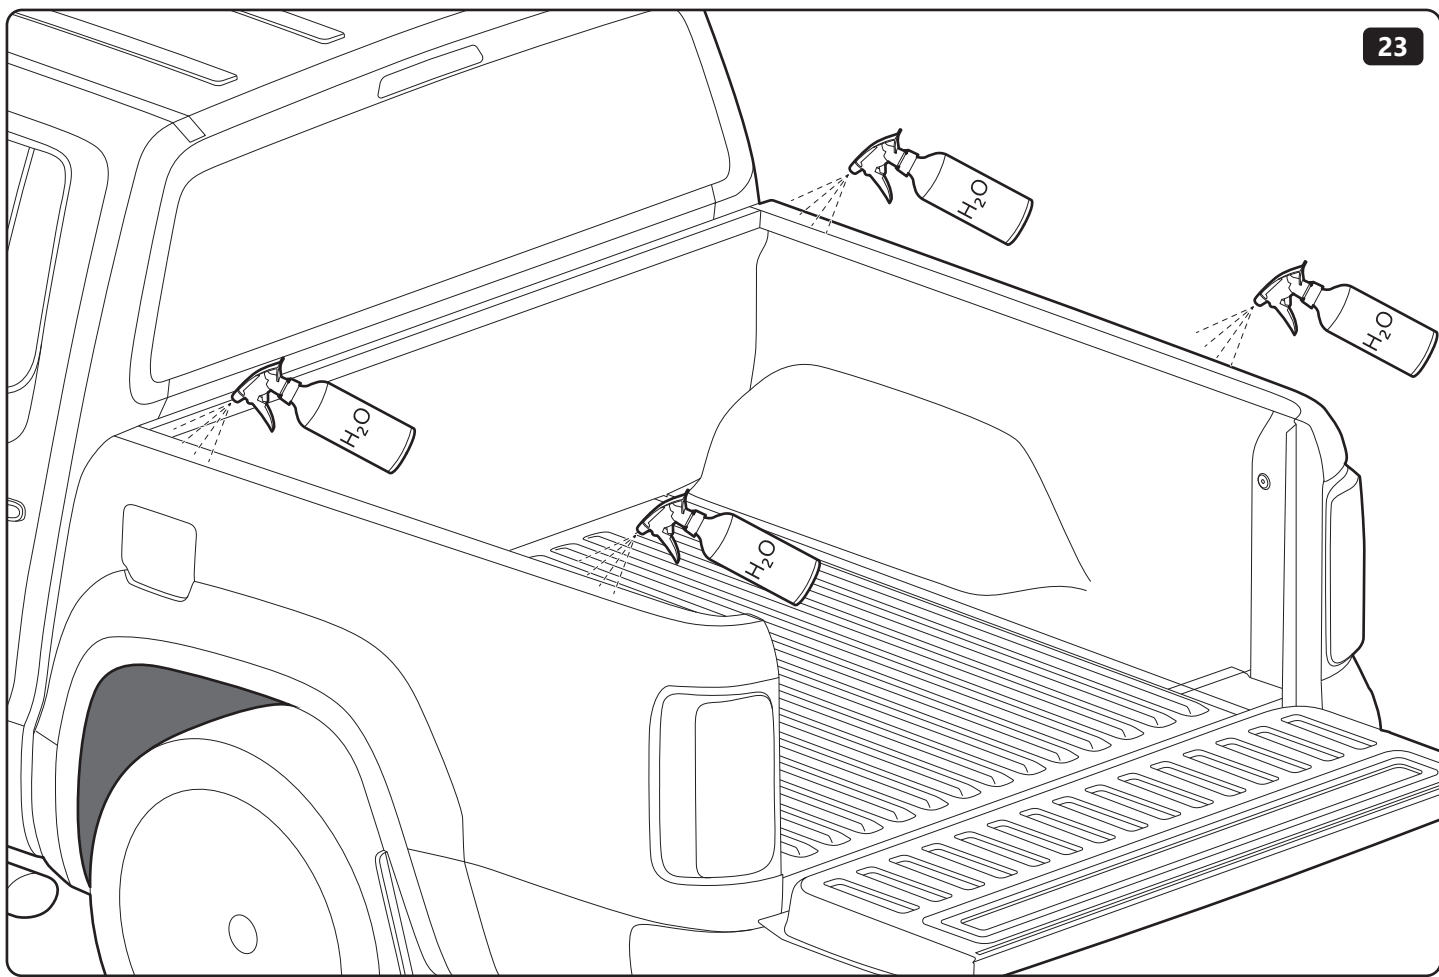


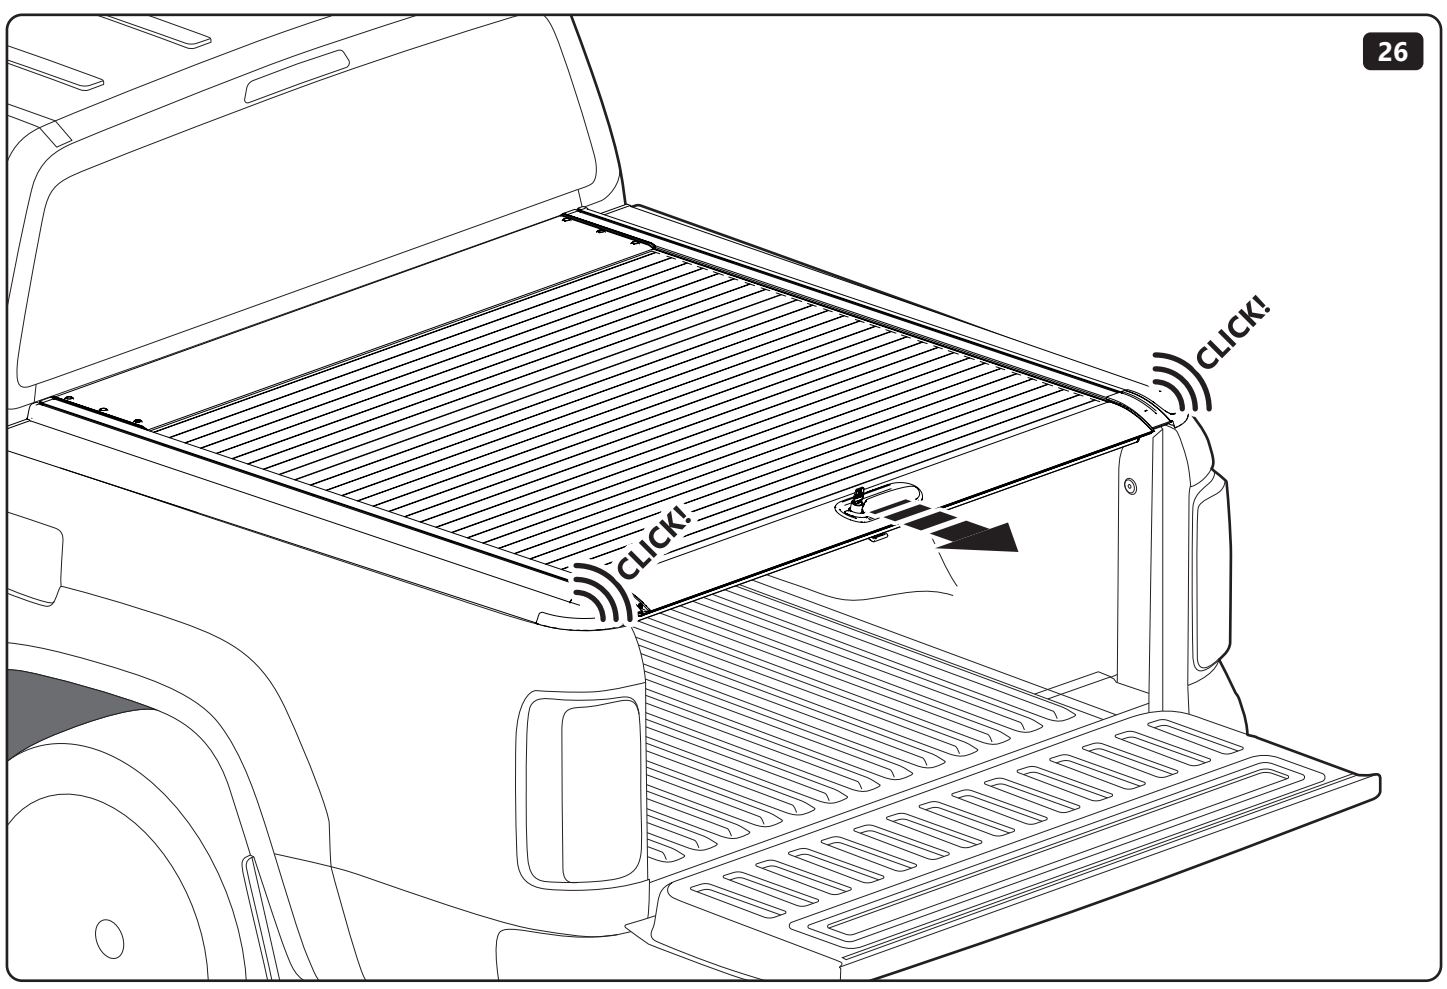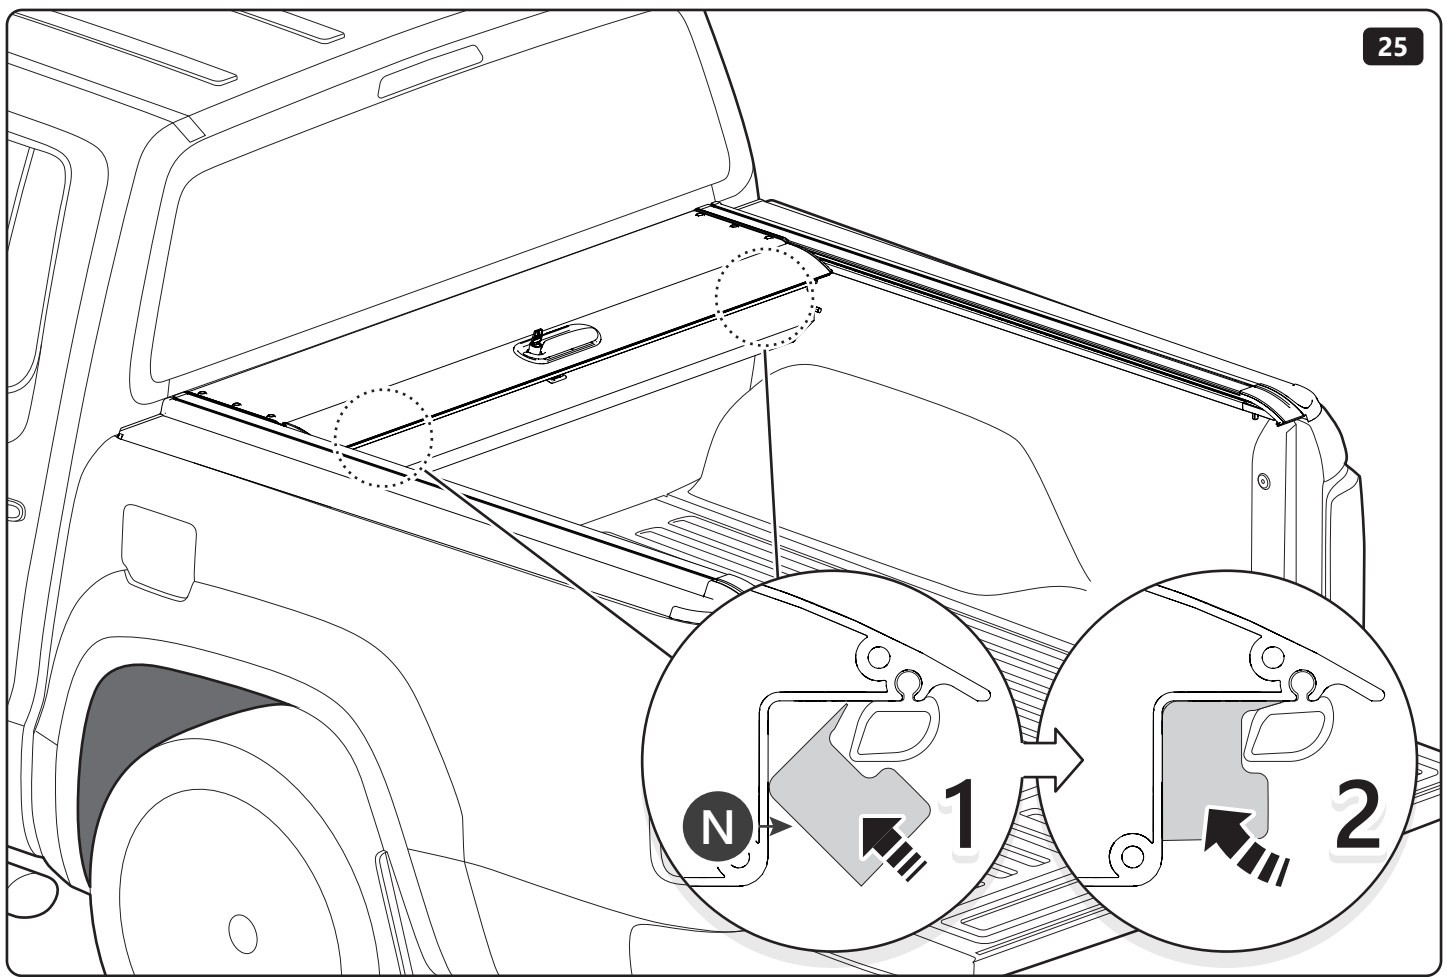

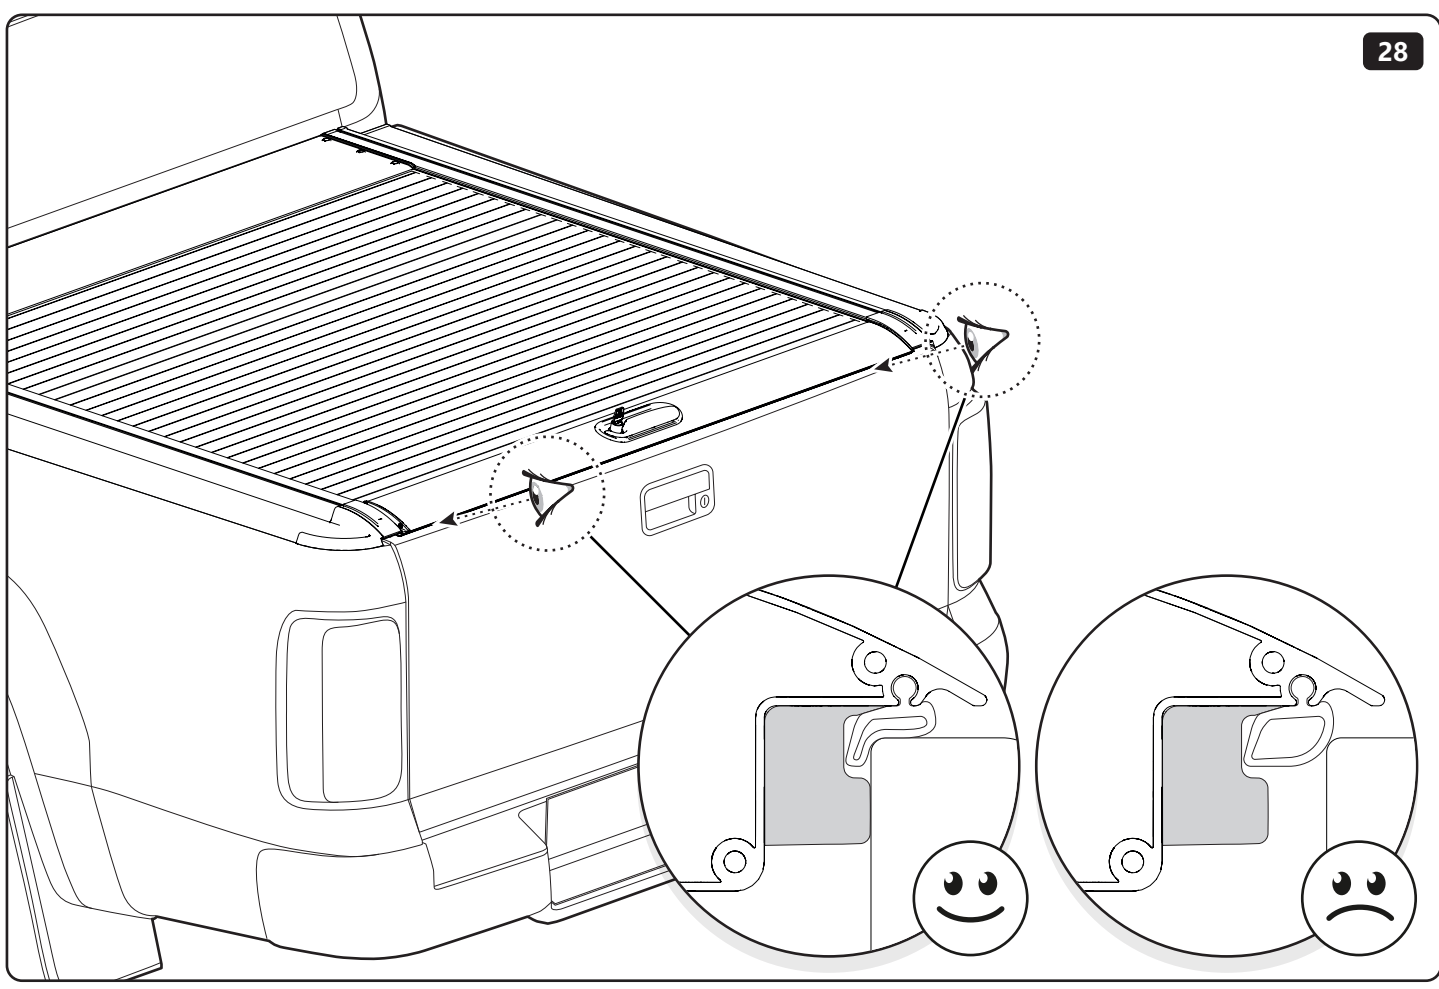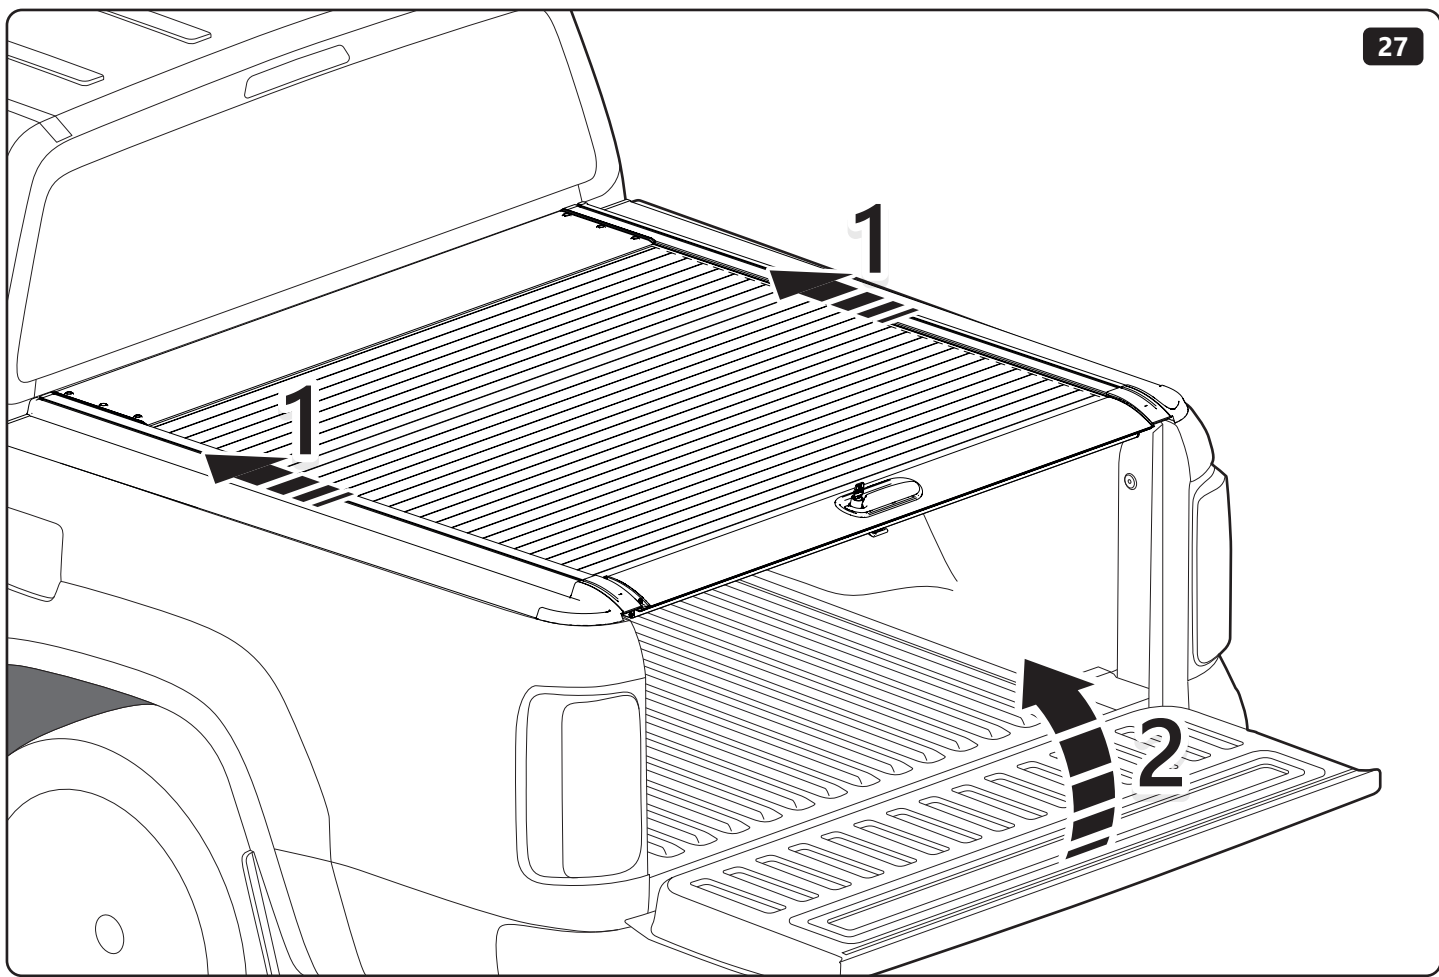


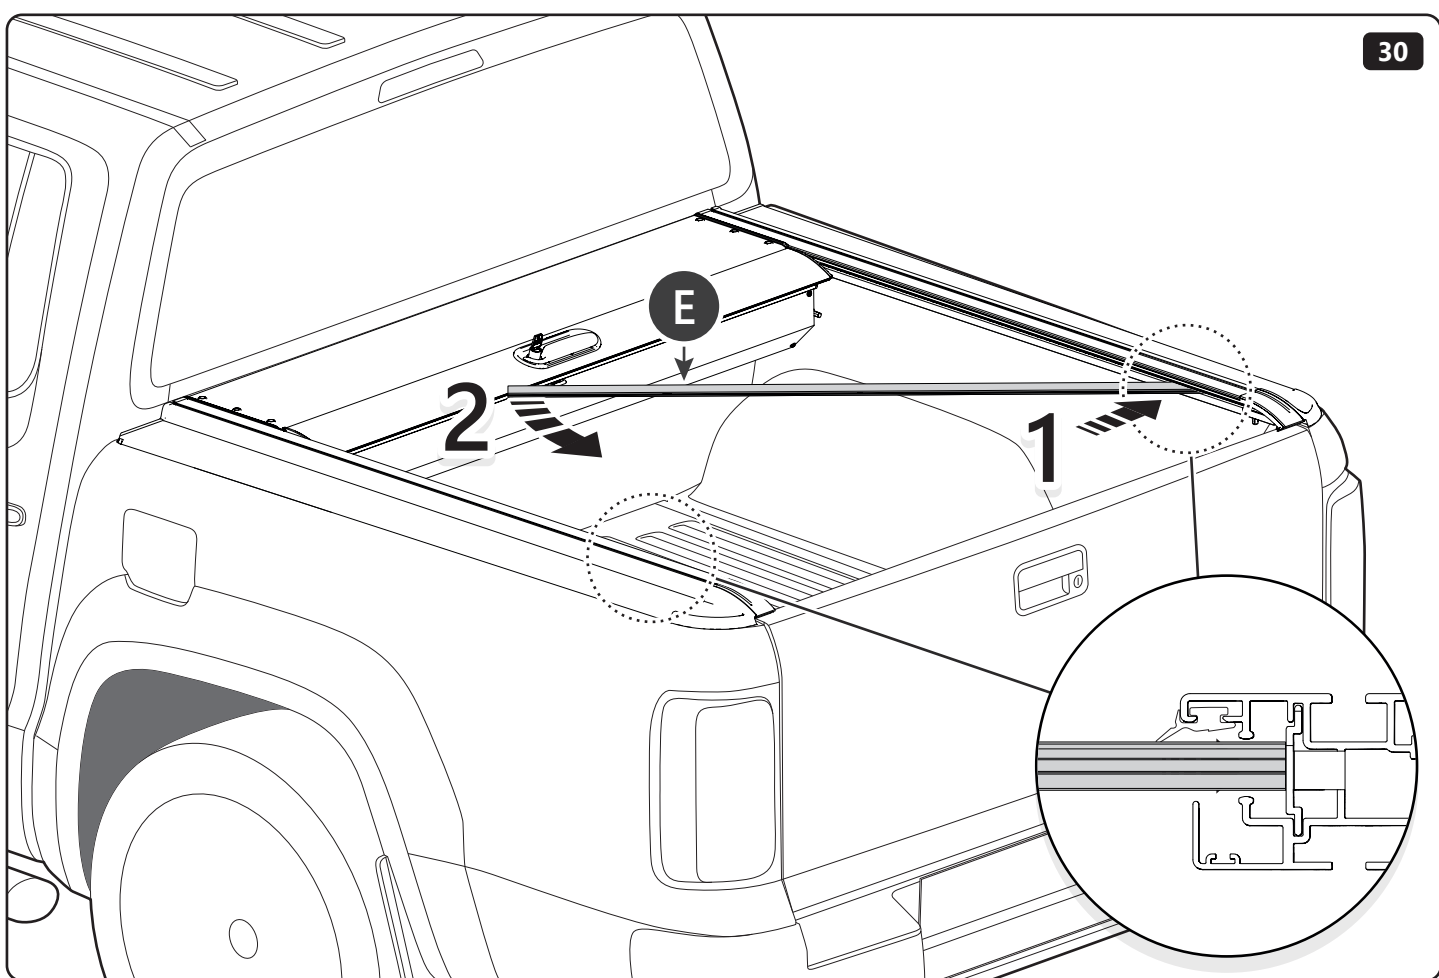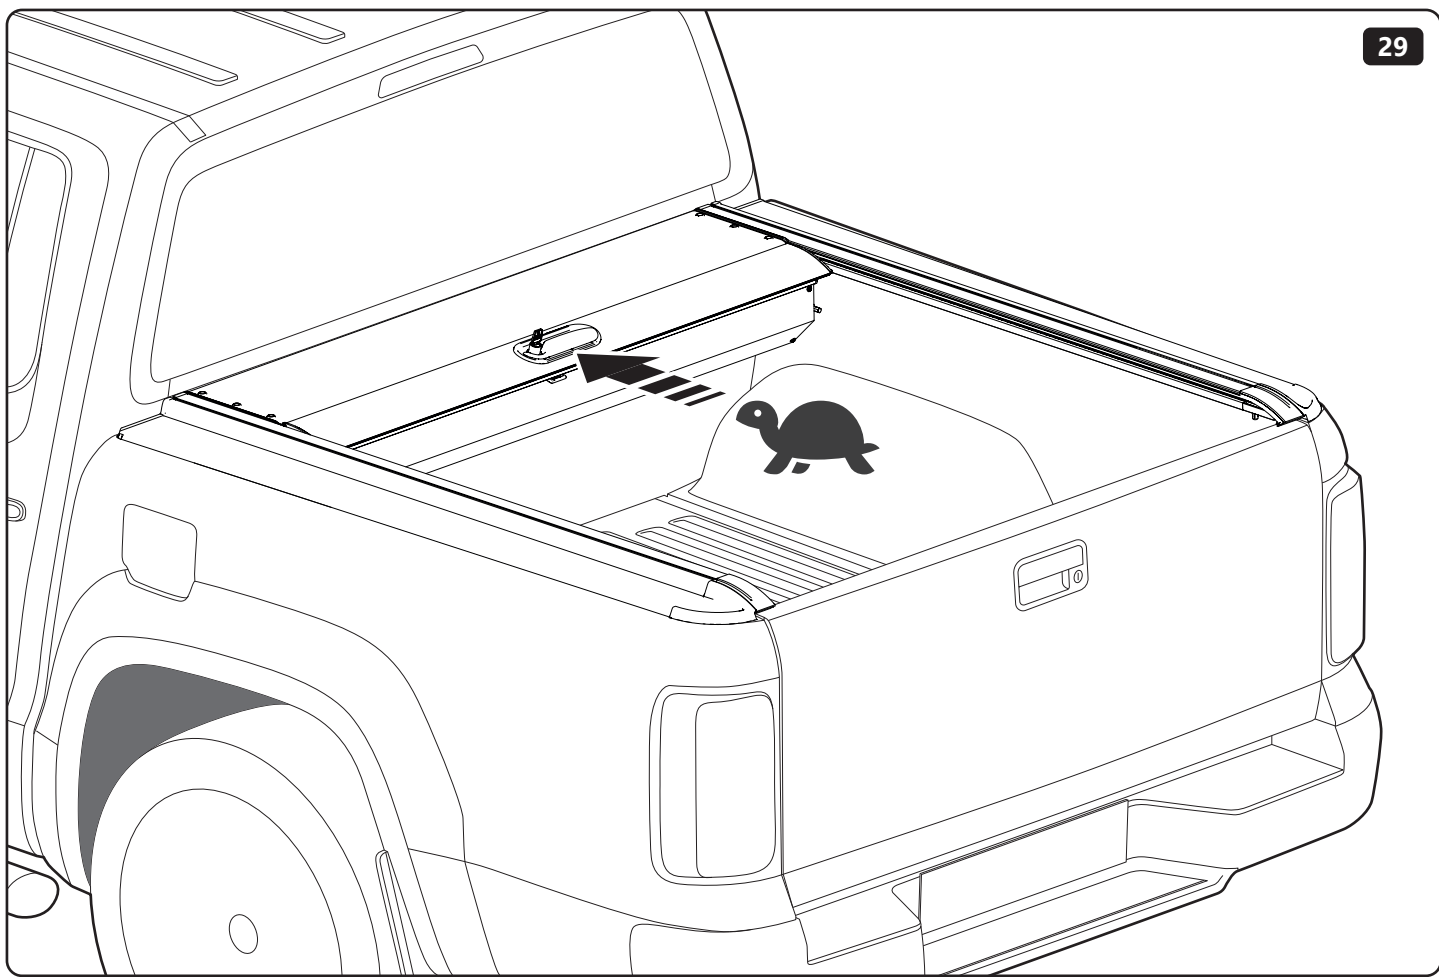

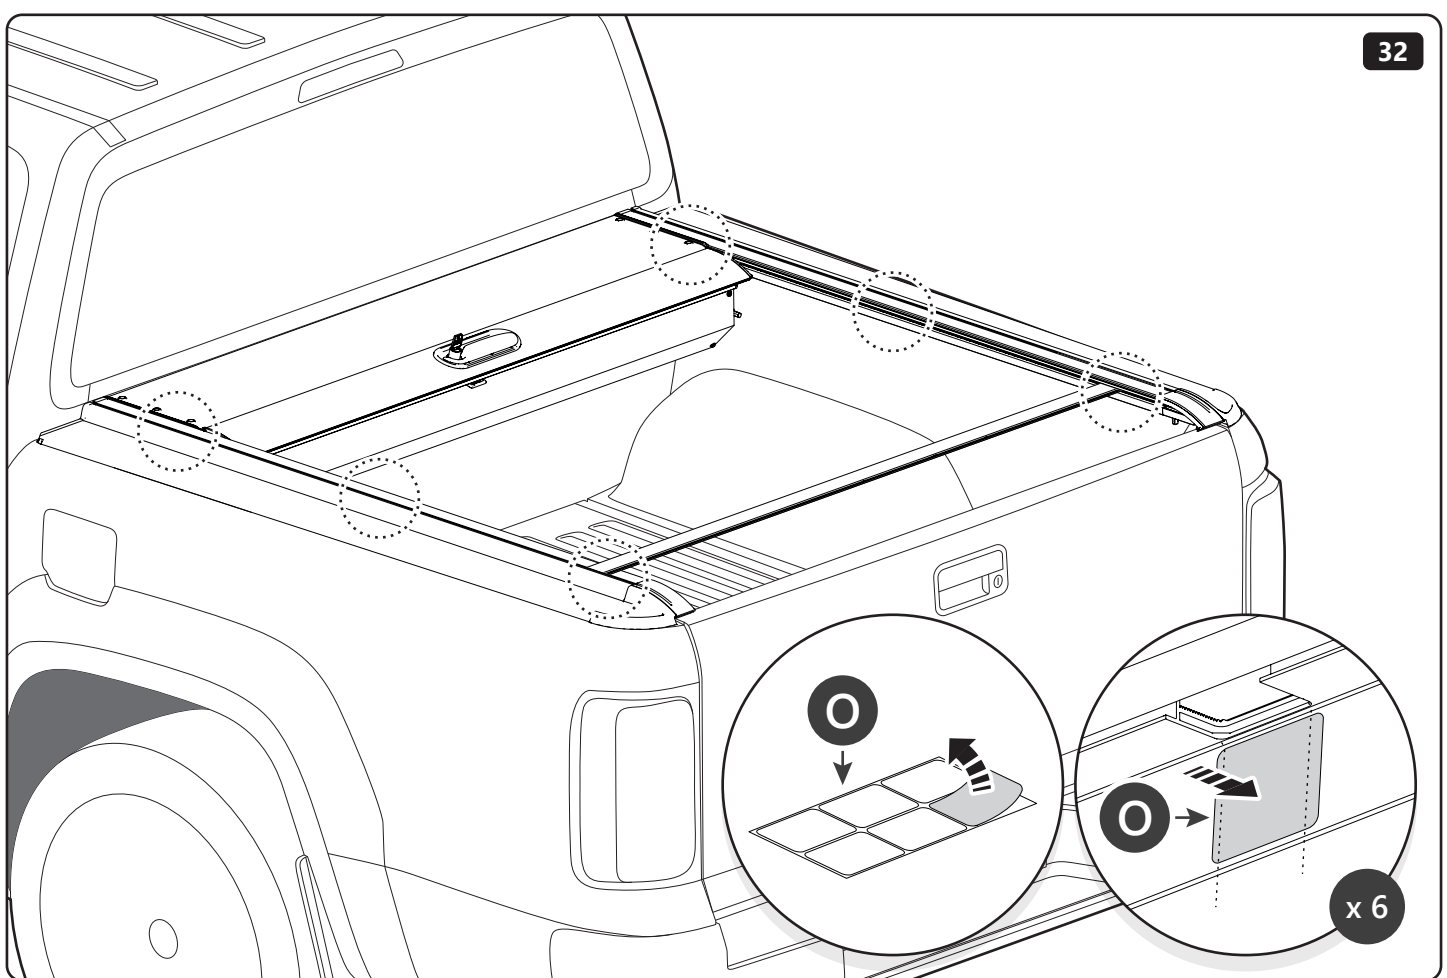
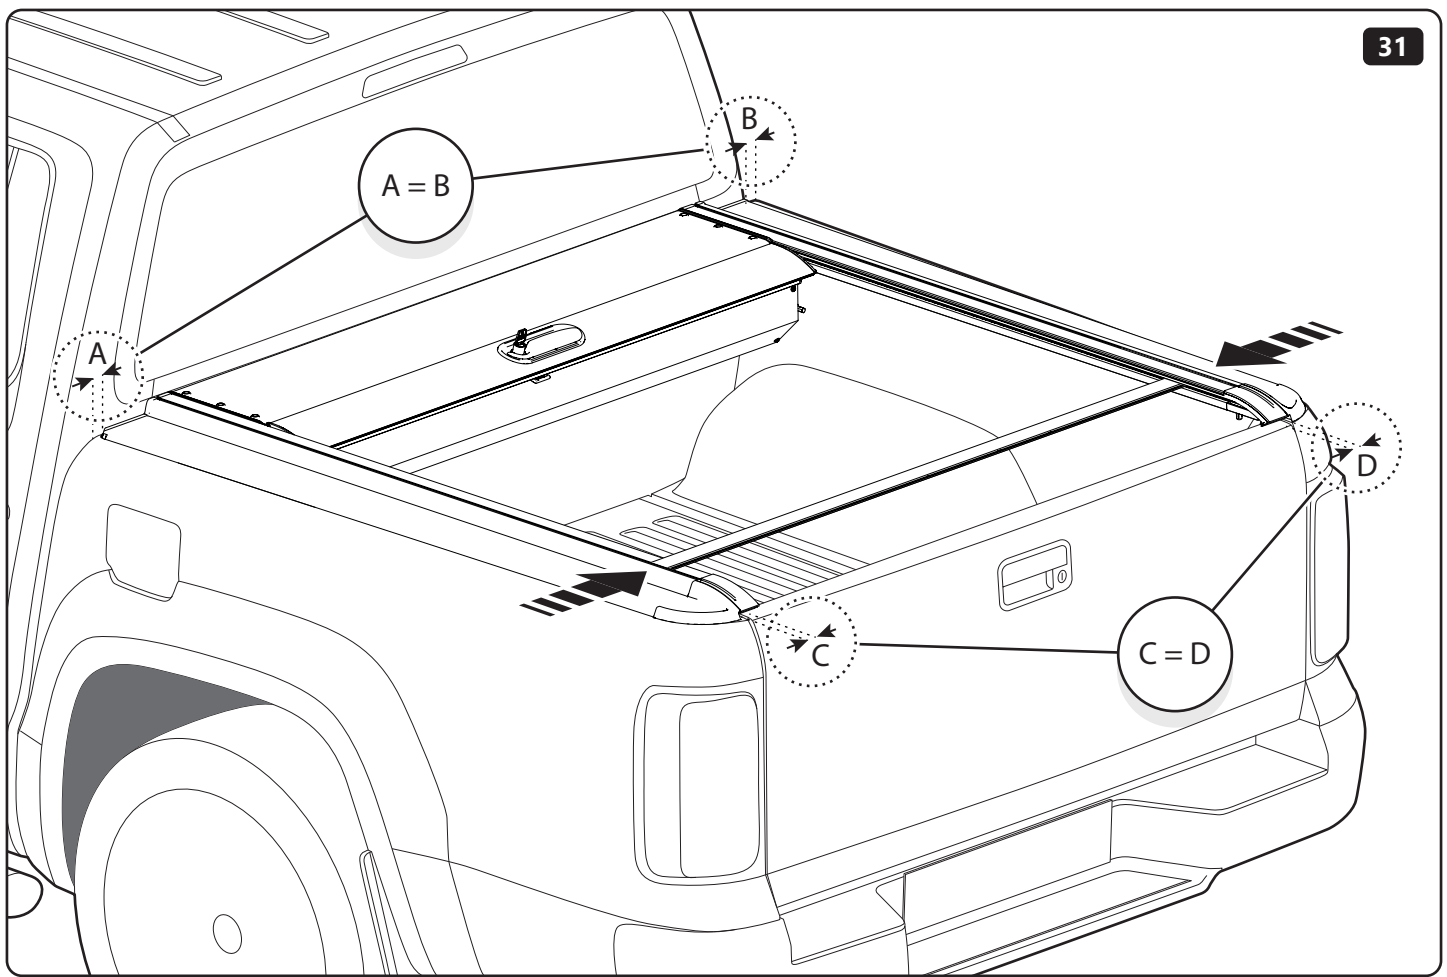


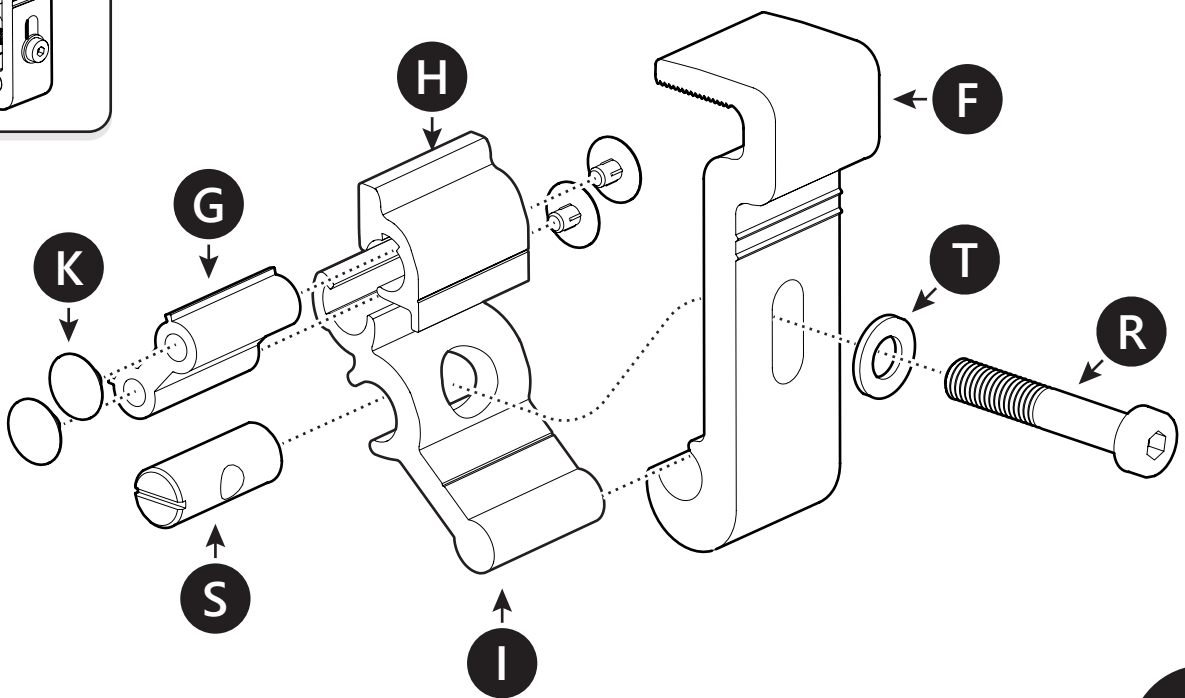
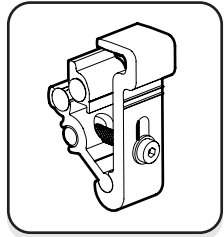




x 6


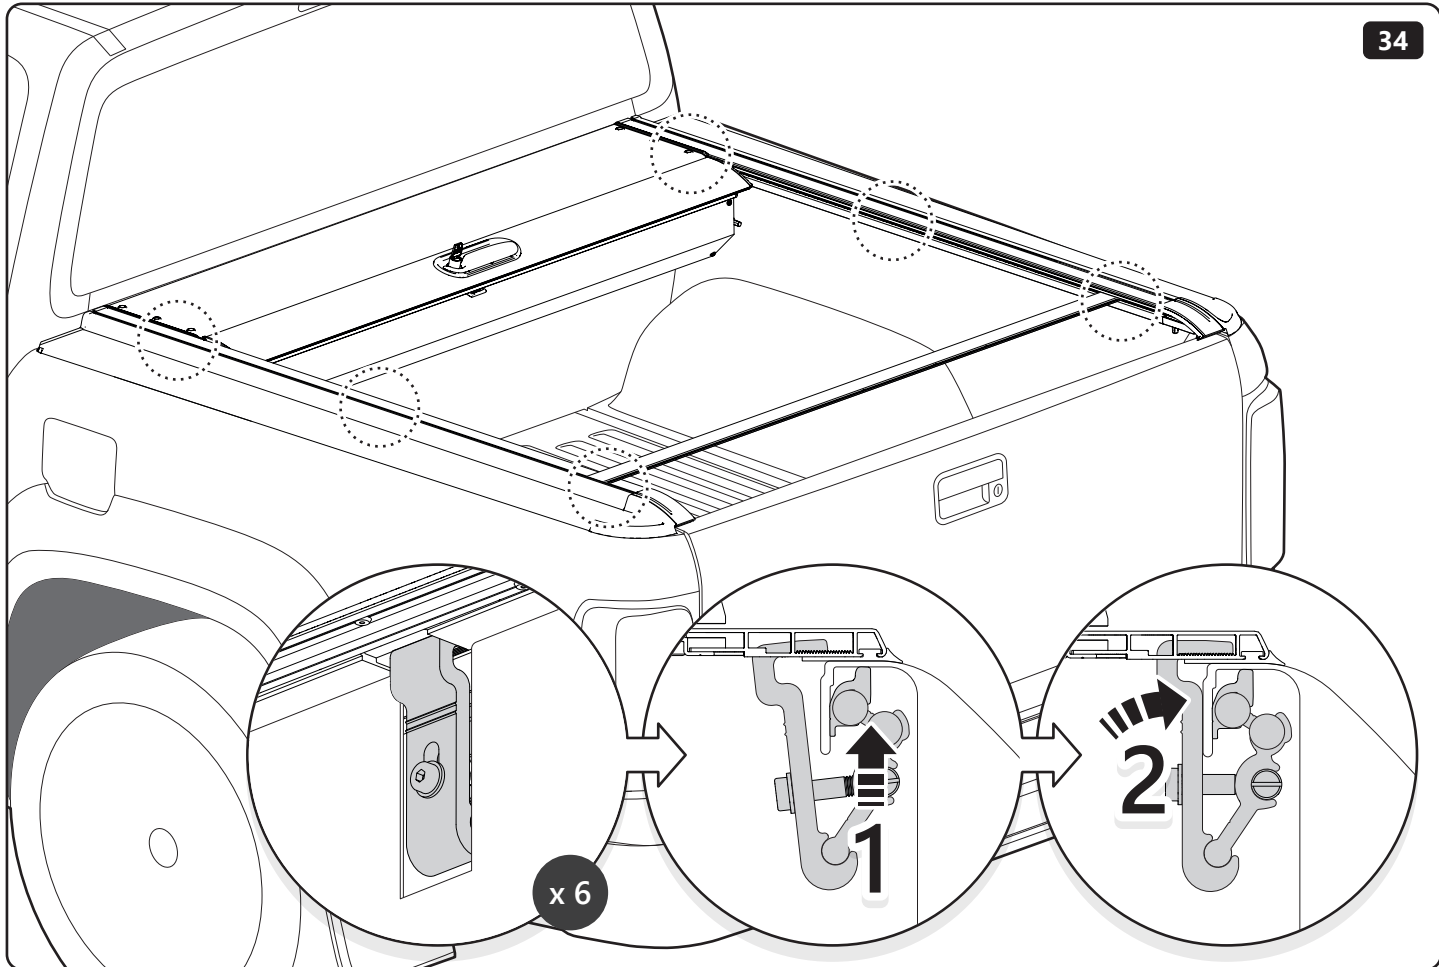




x 6

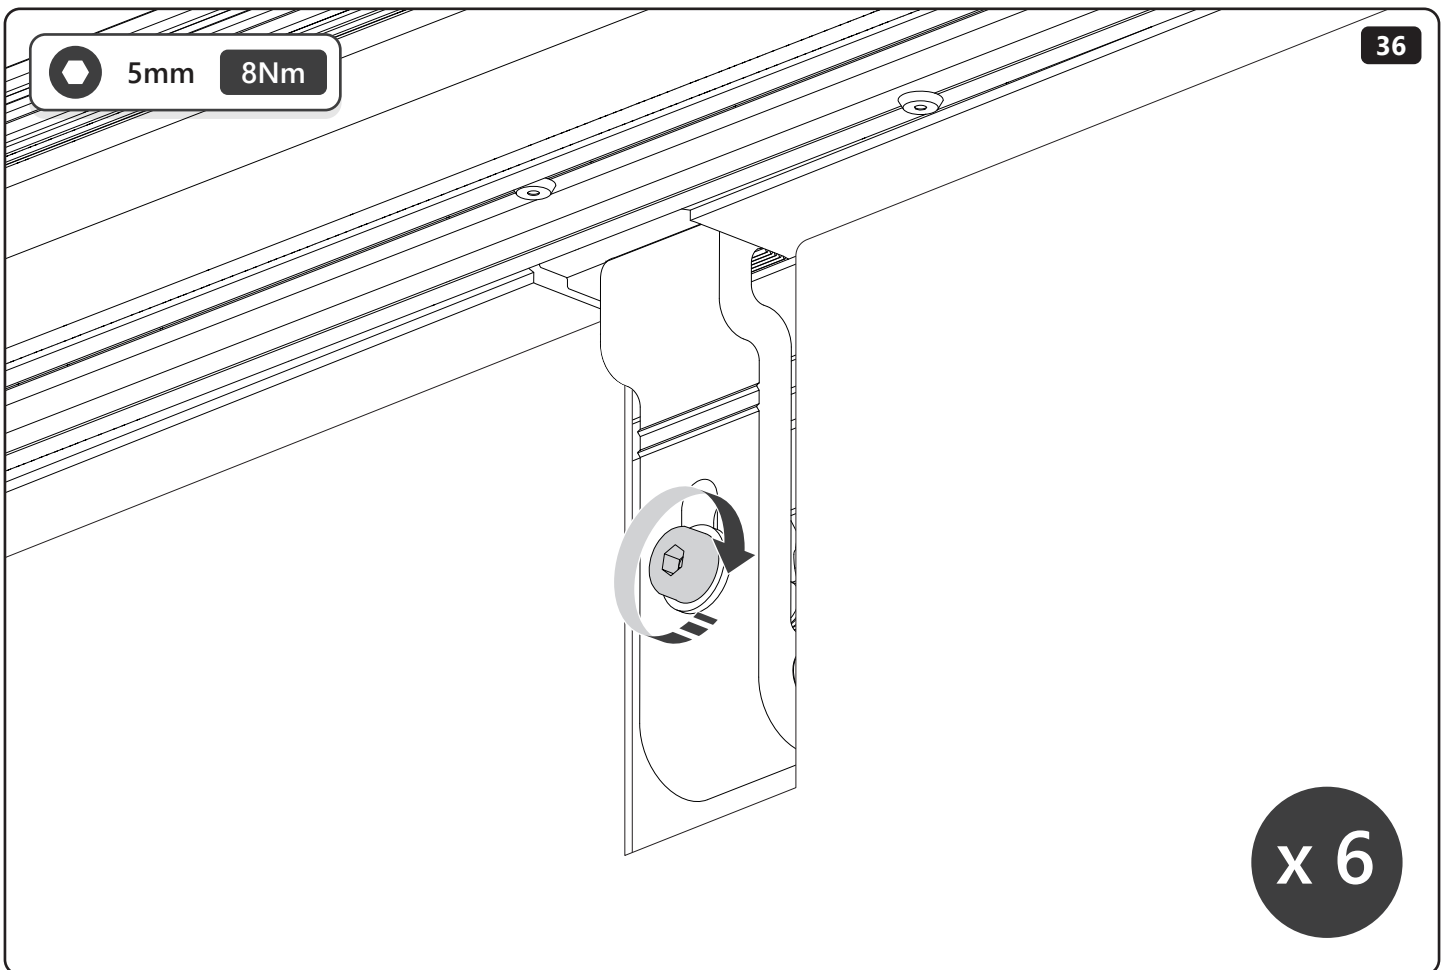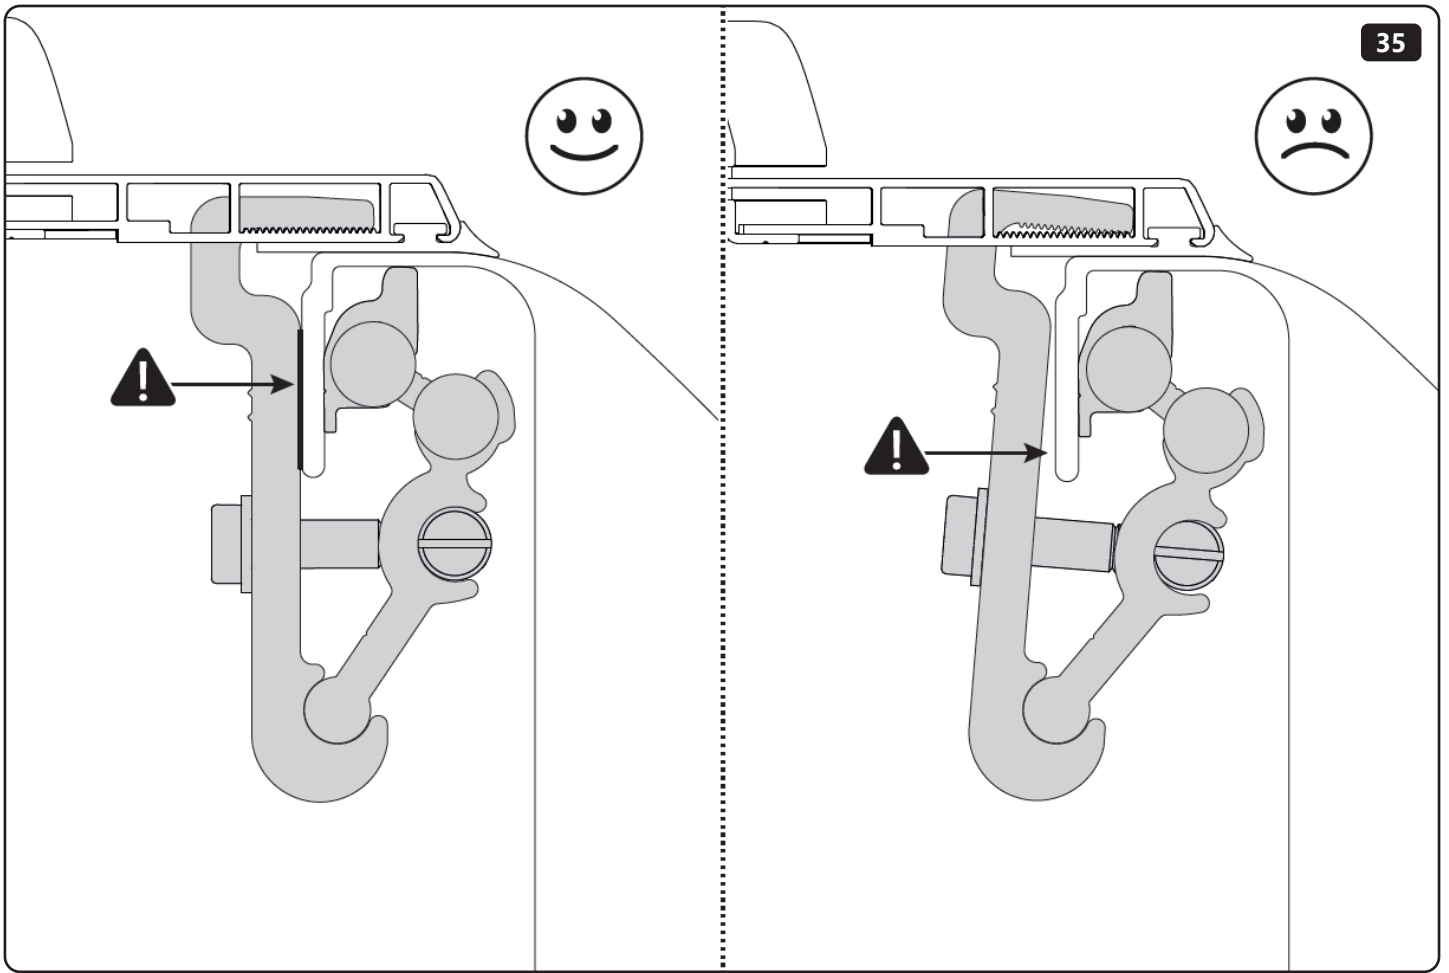

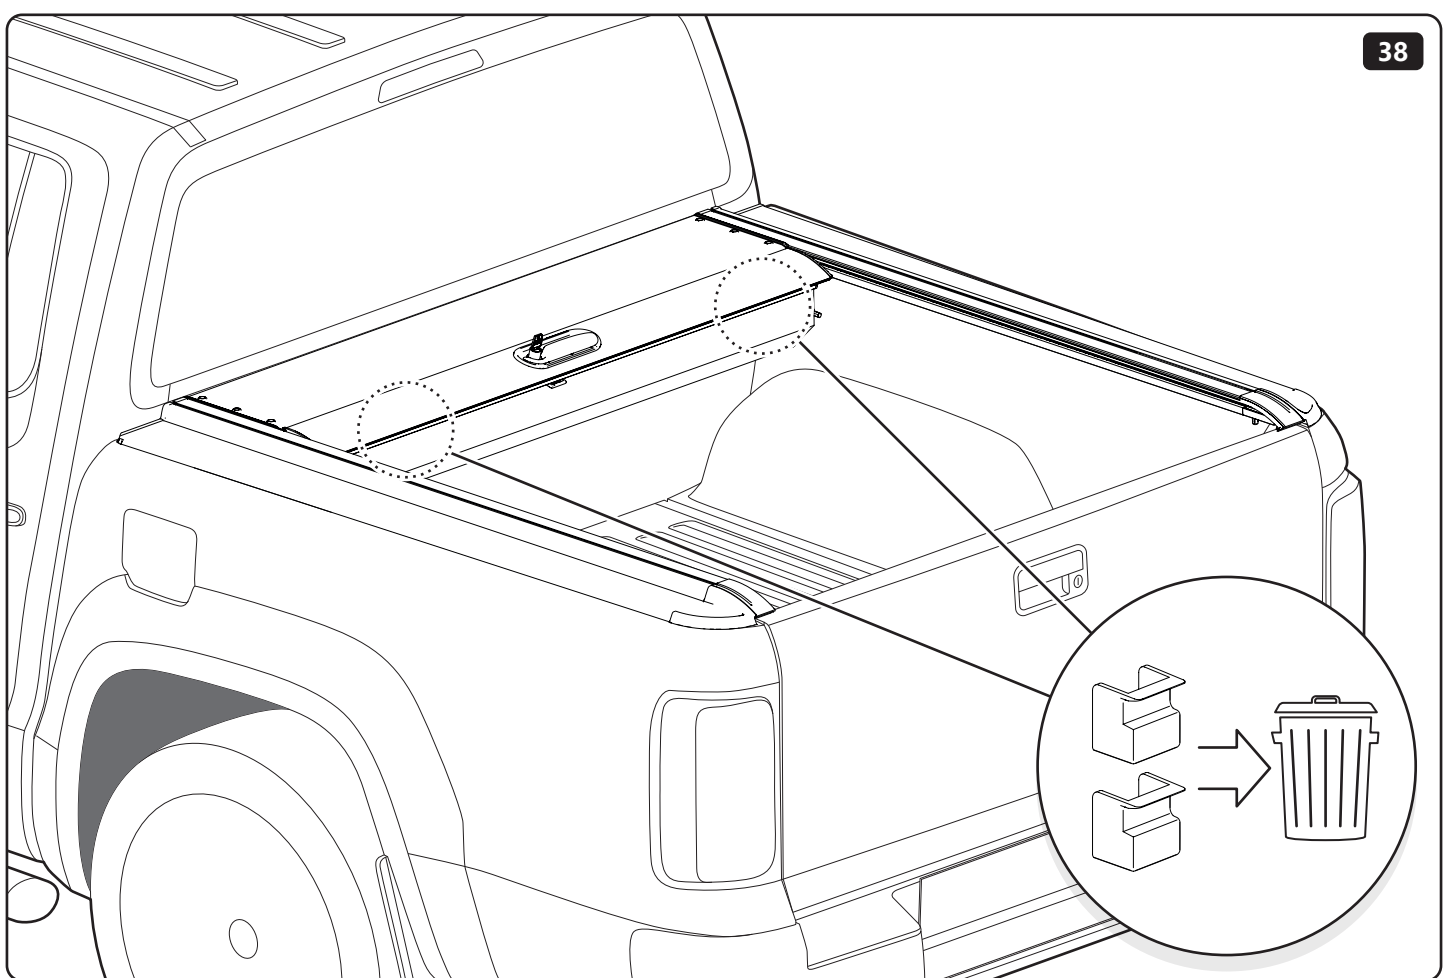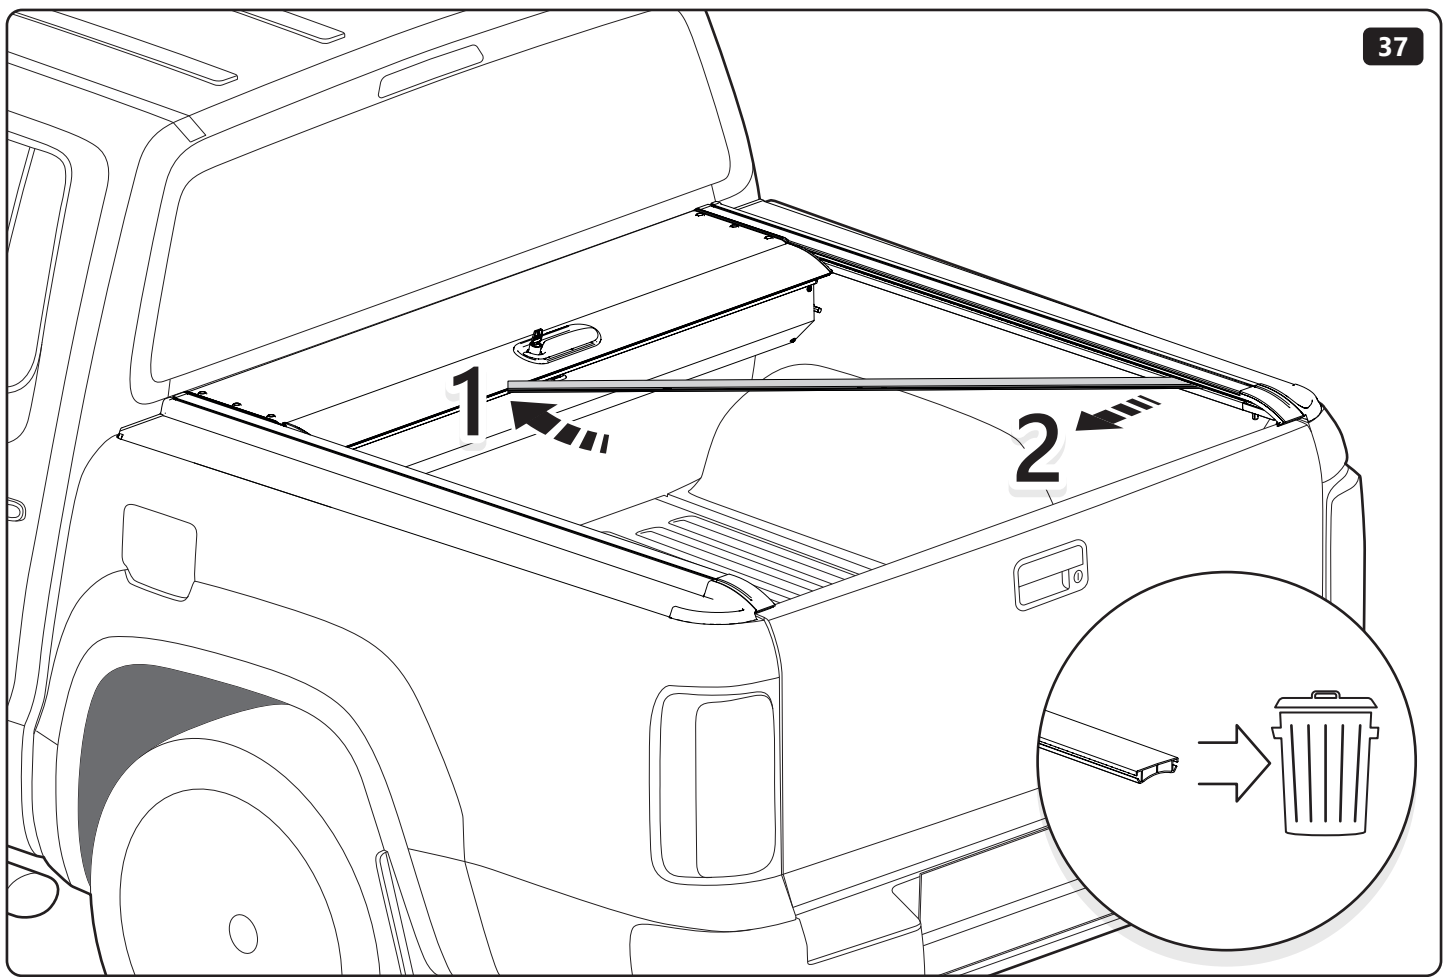

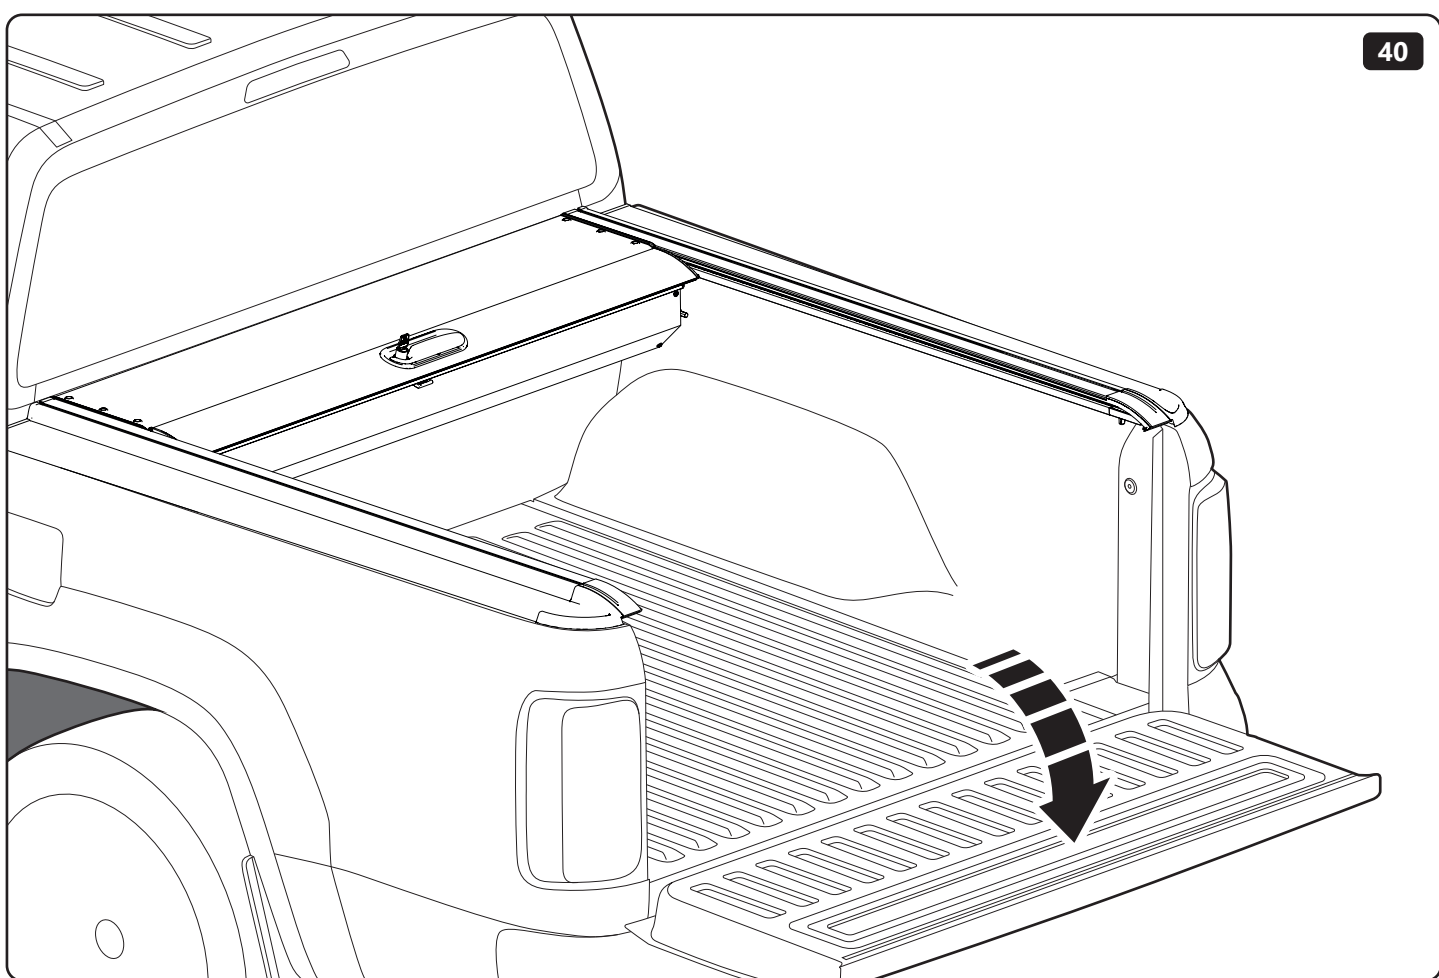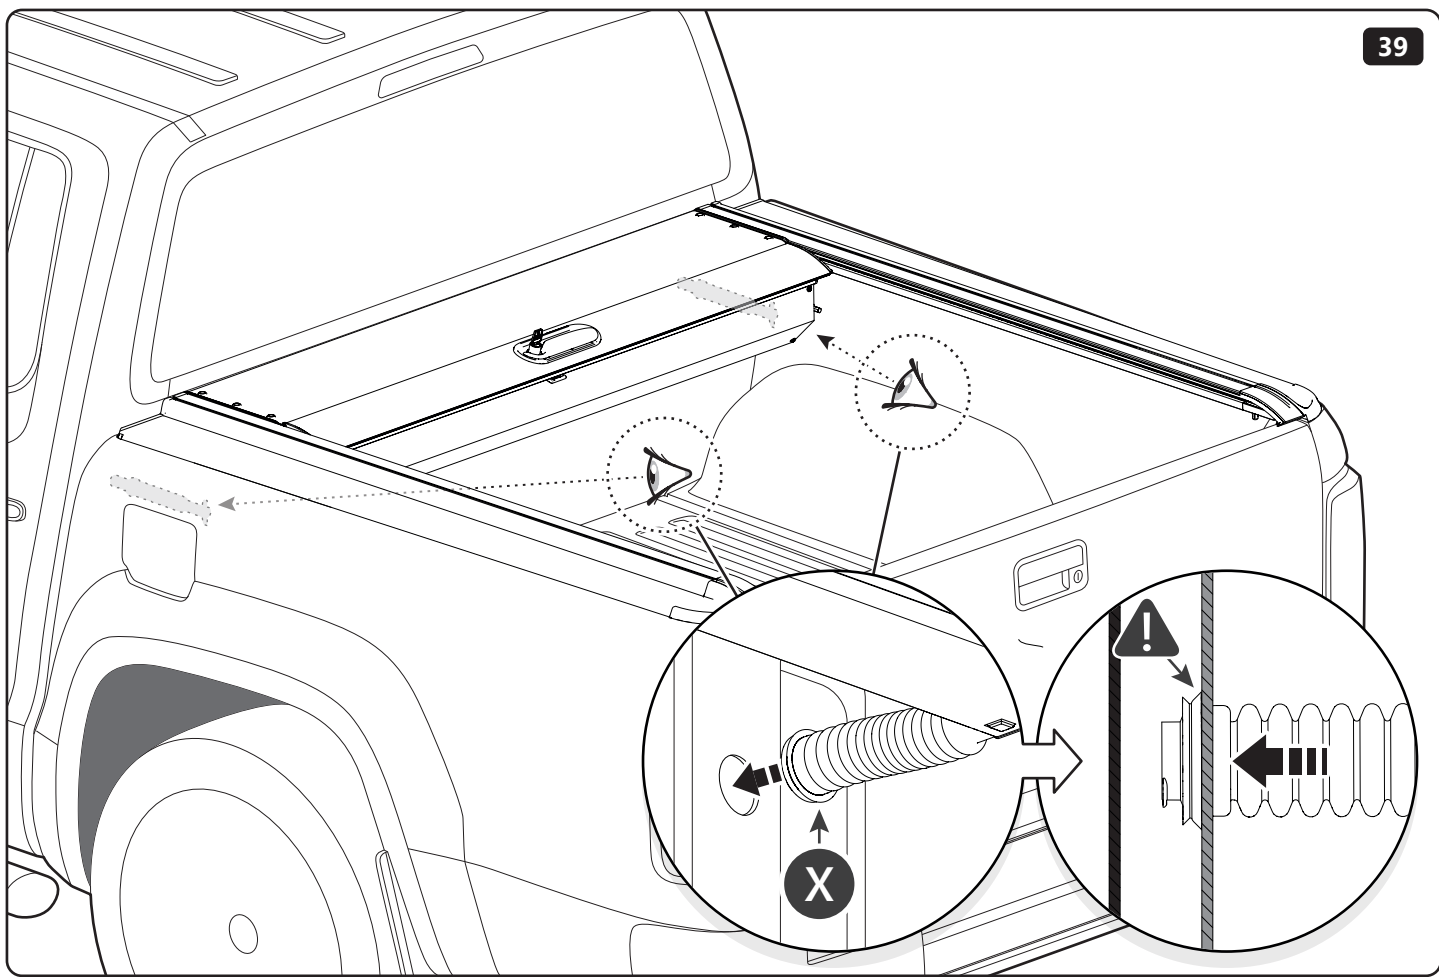


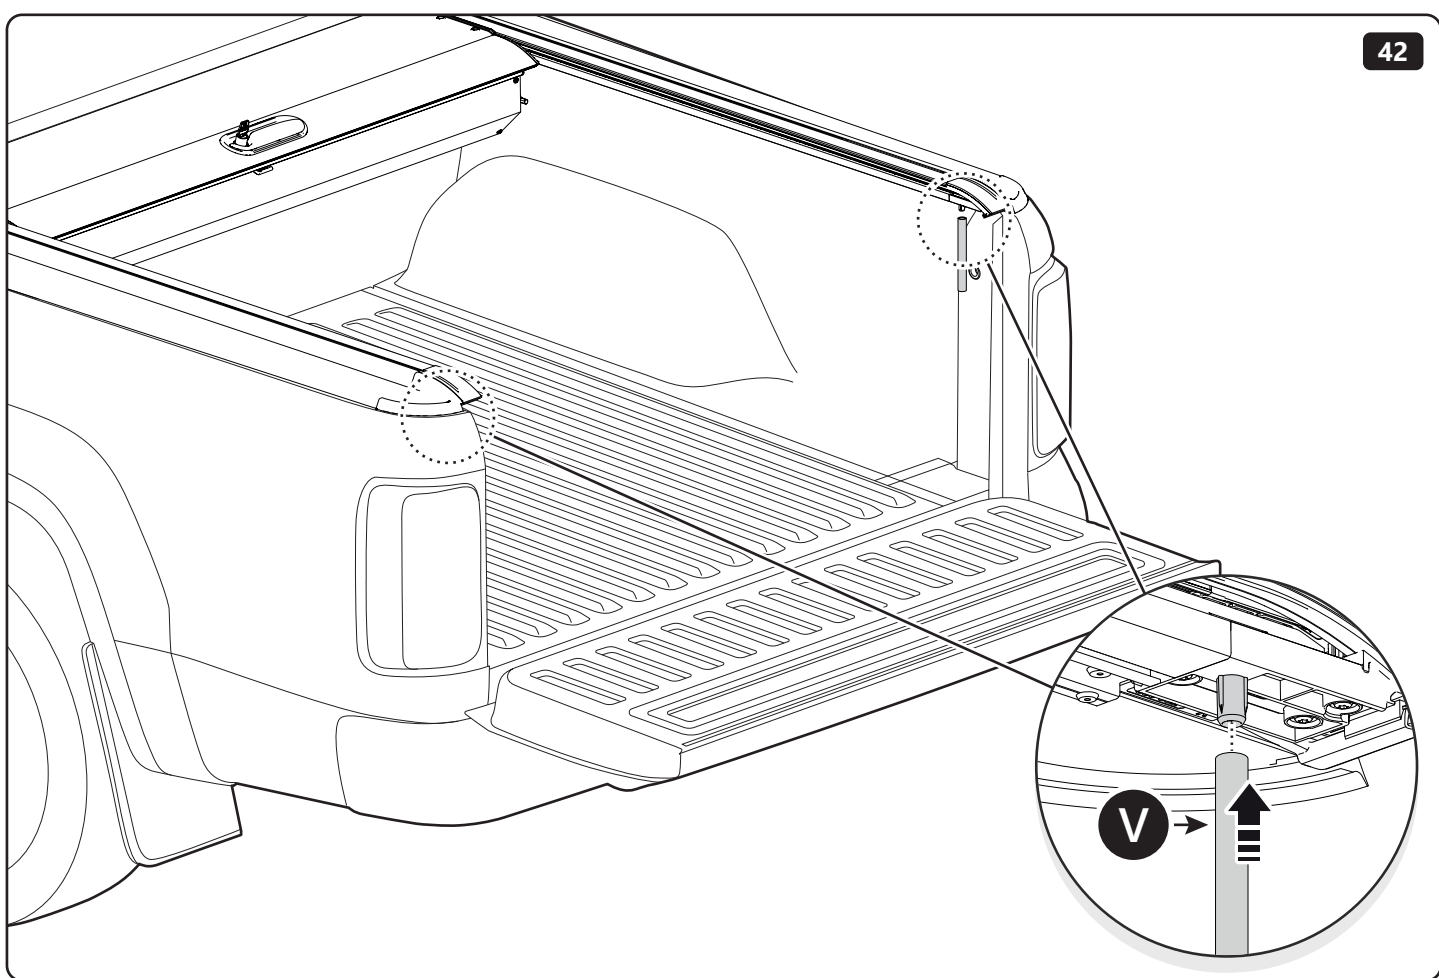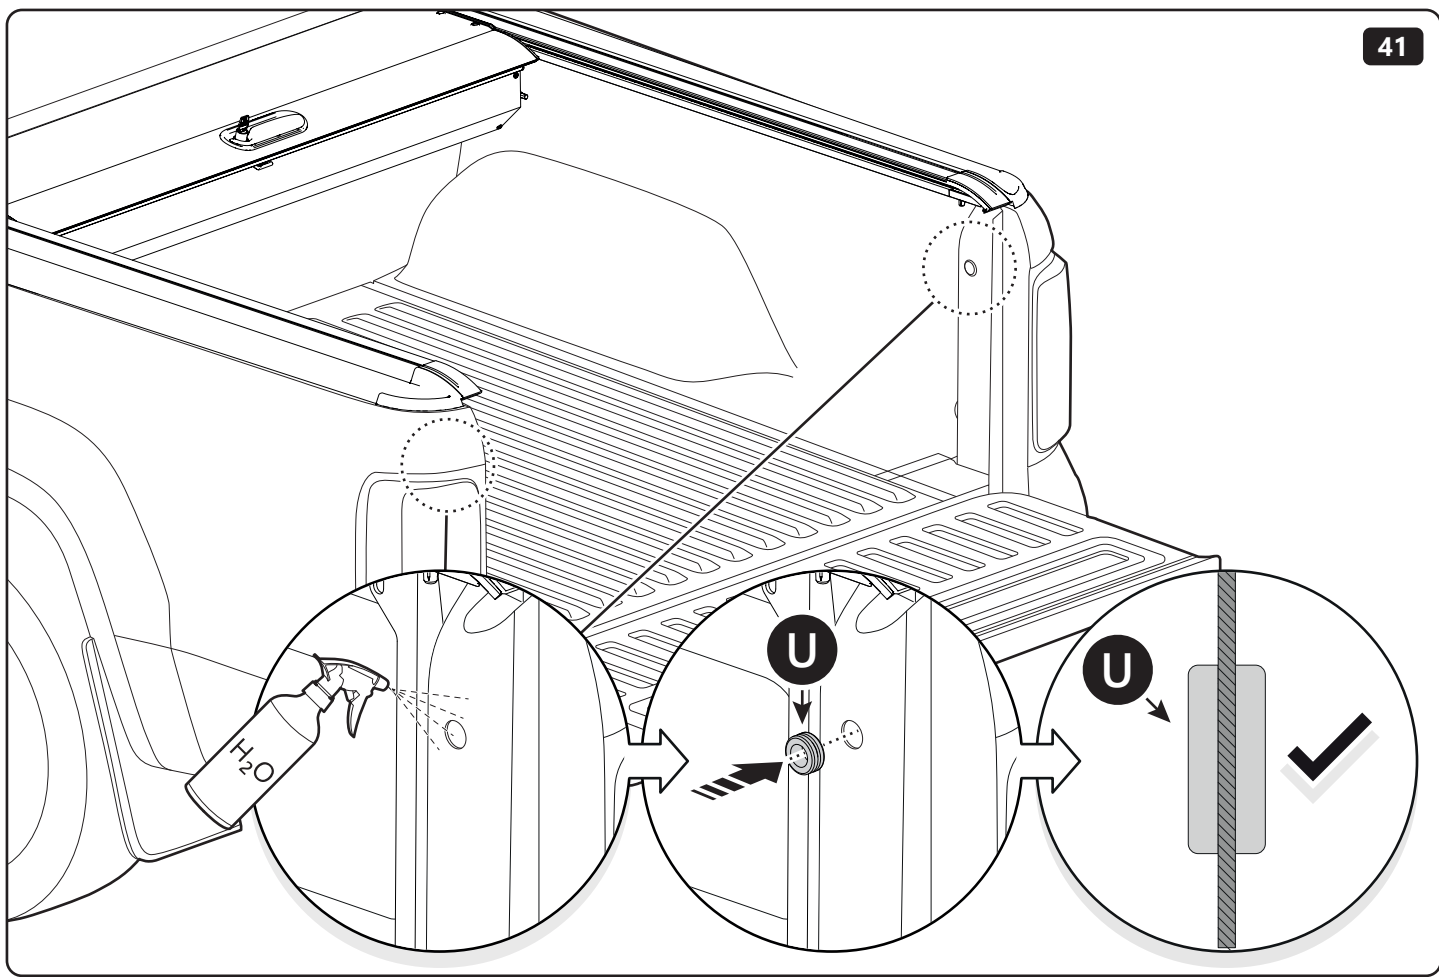

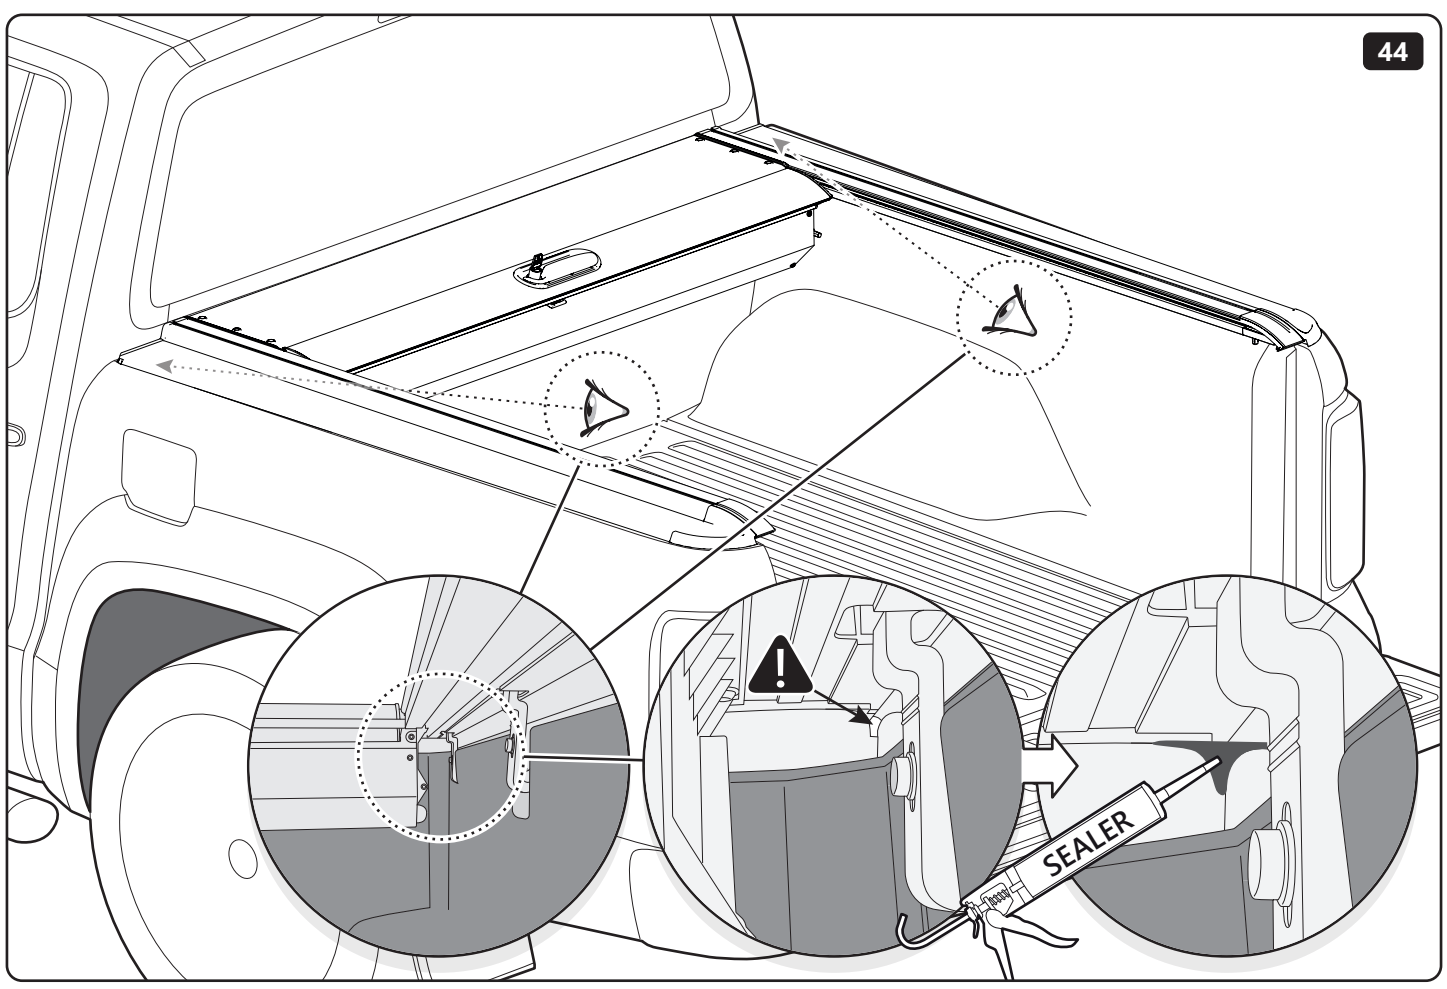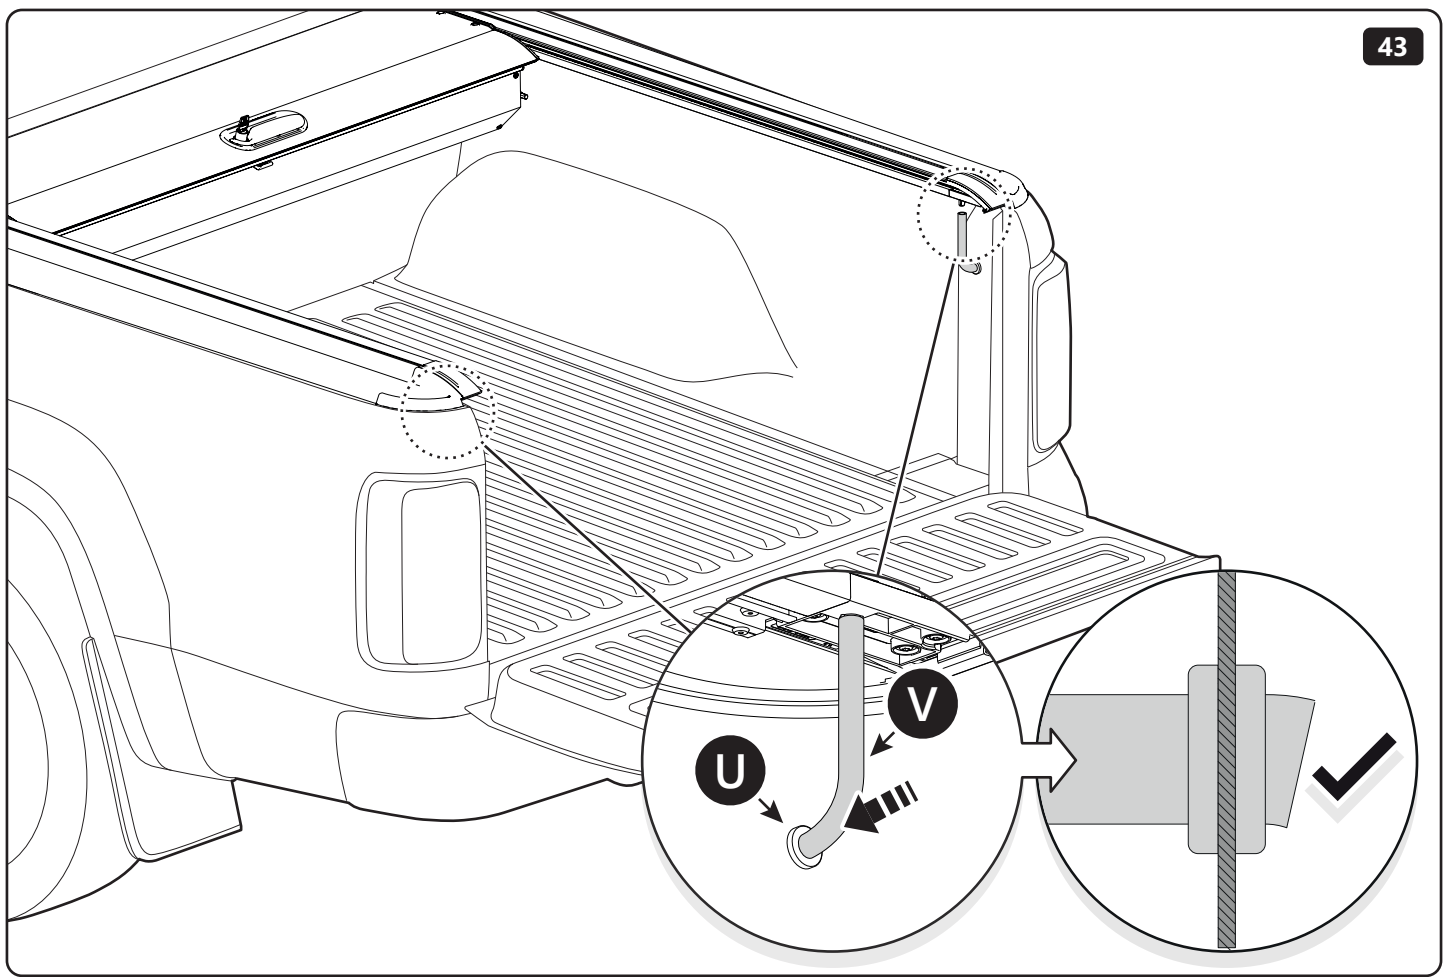


 Silicone oil


45

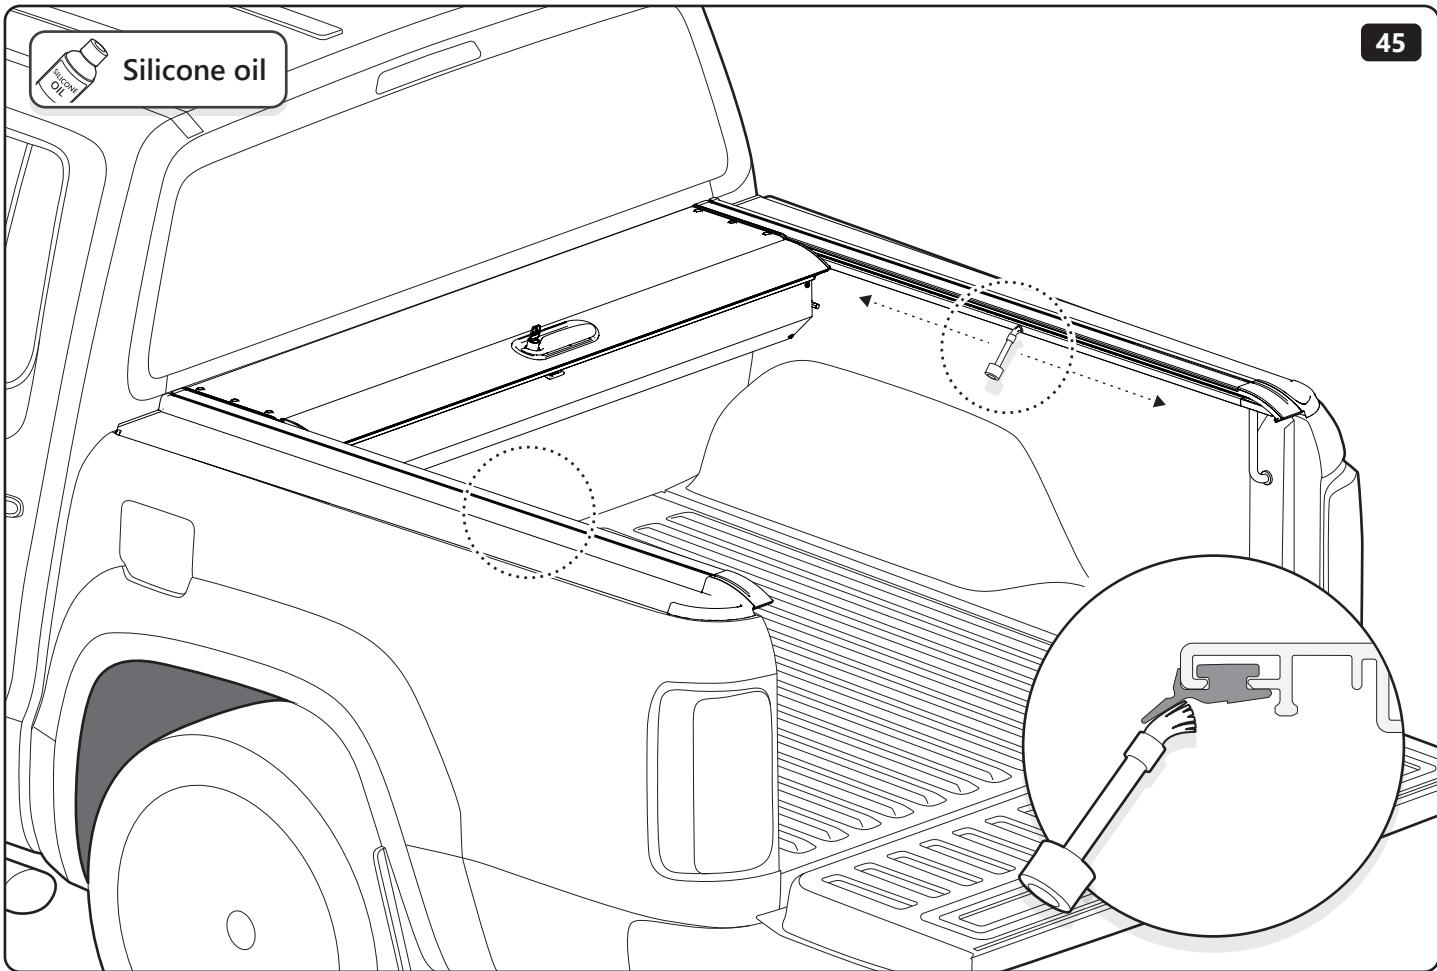


46

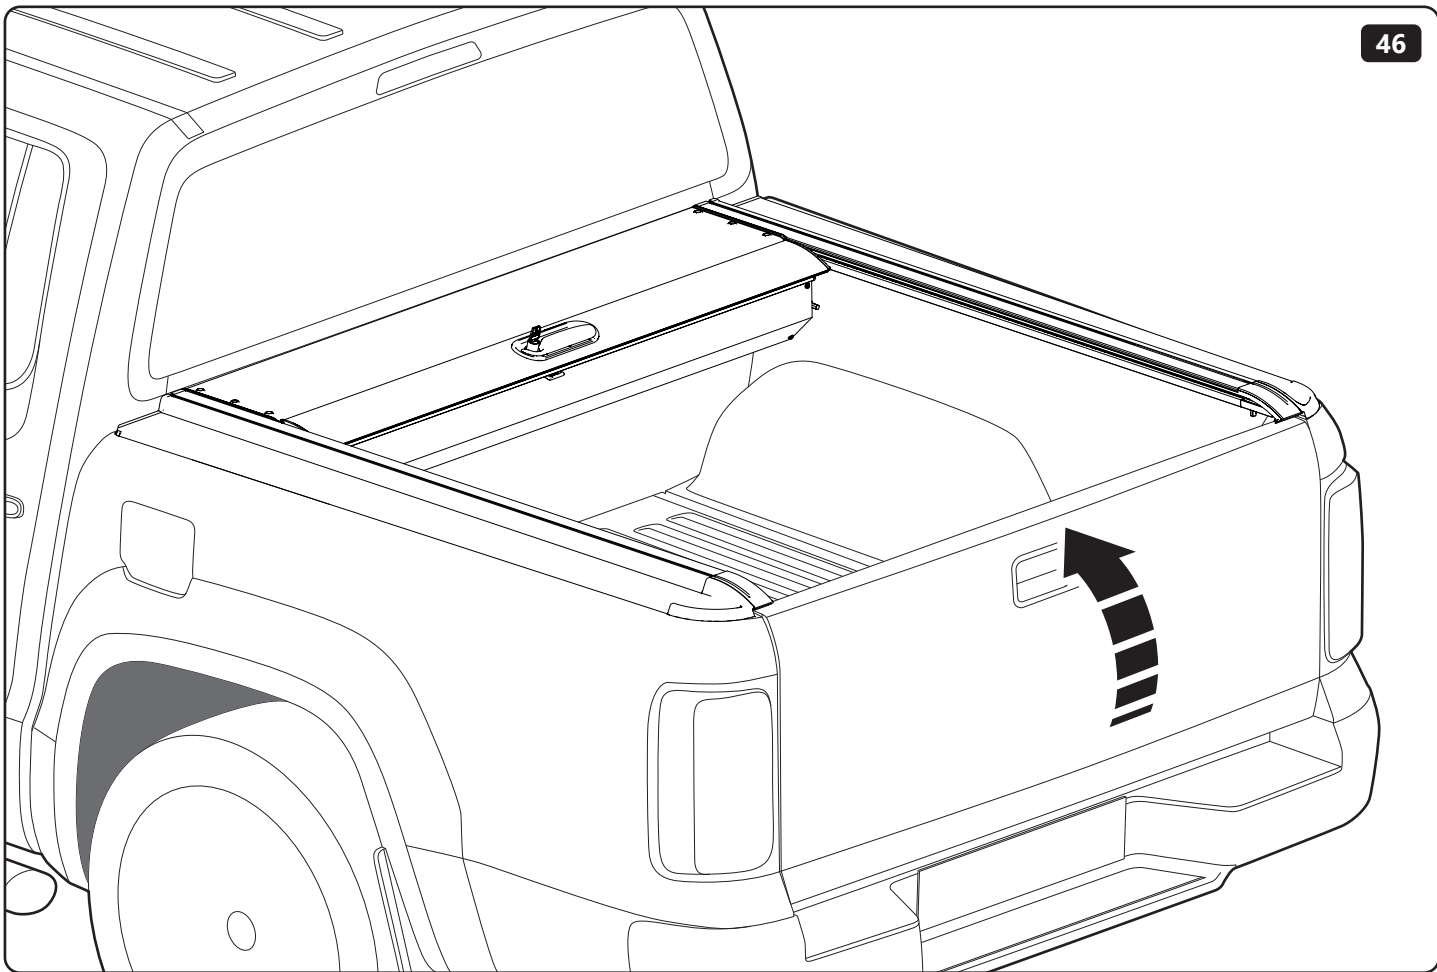


☰ ✓ Check function

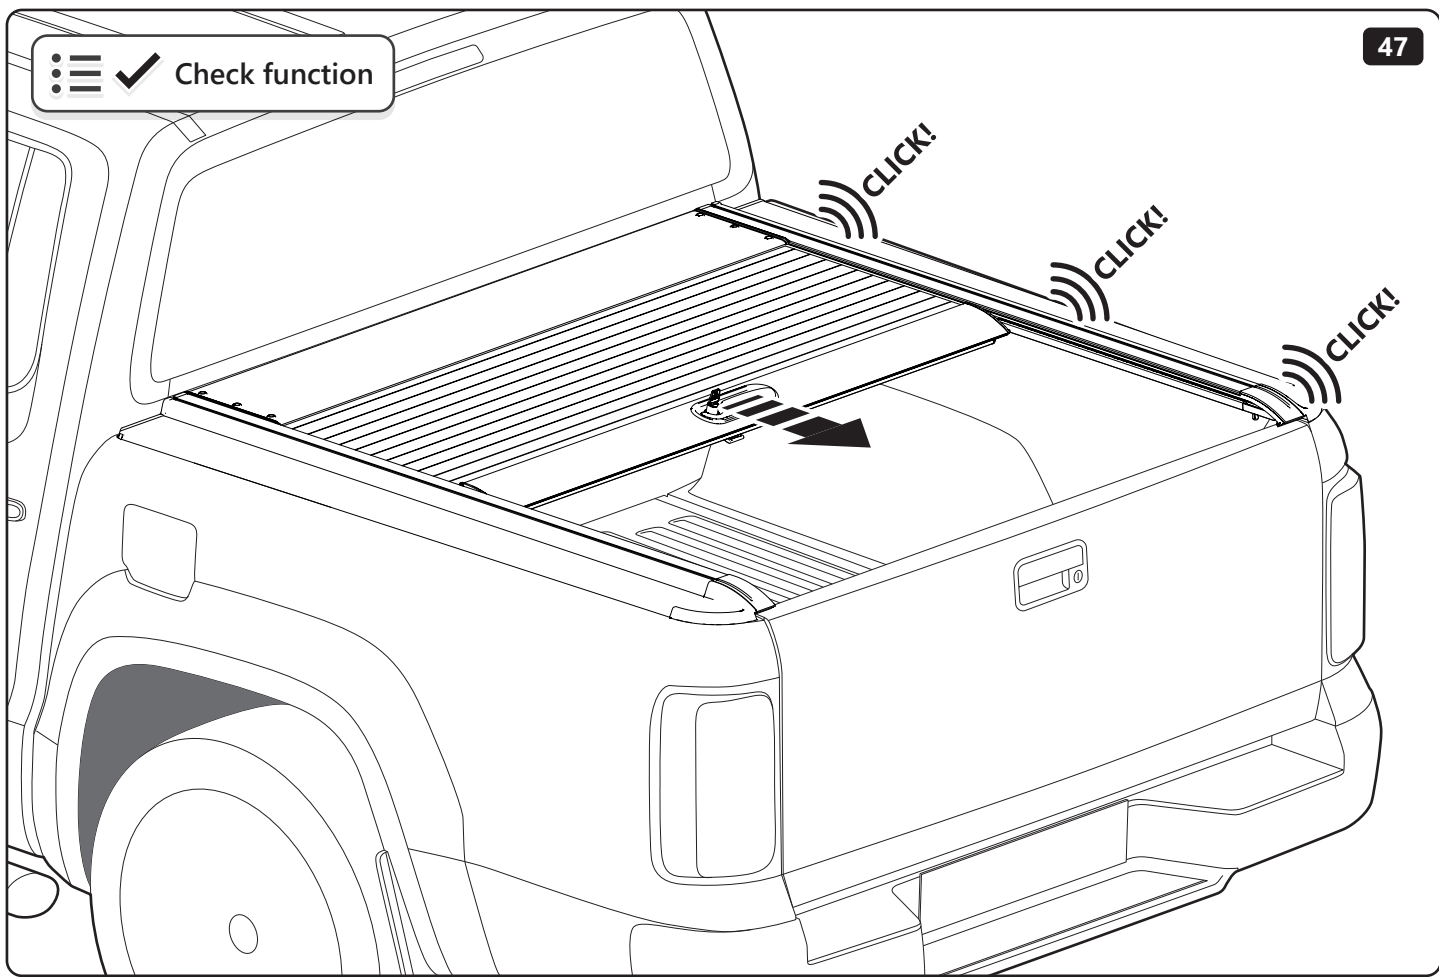


☰ ✓ Check function

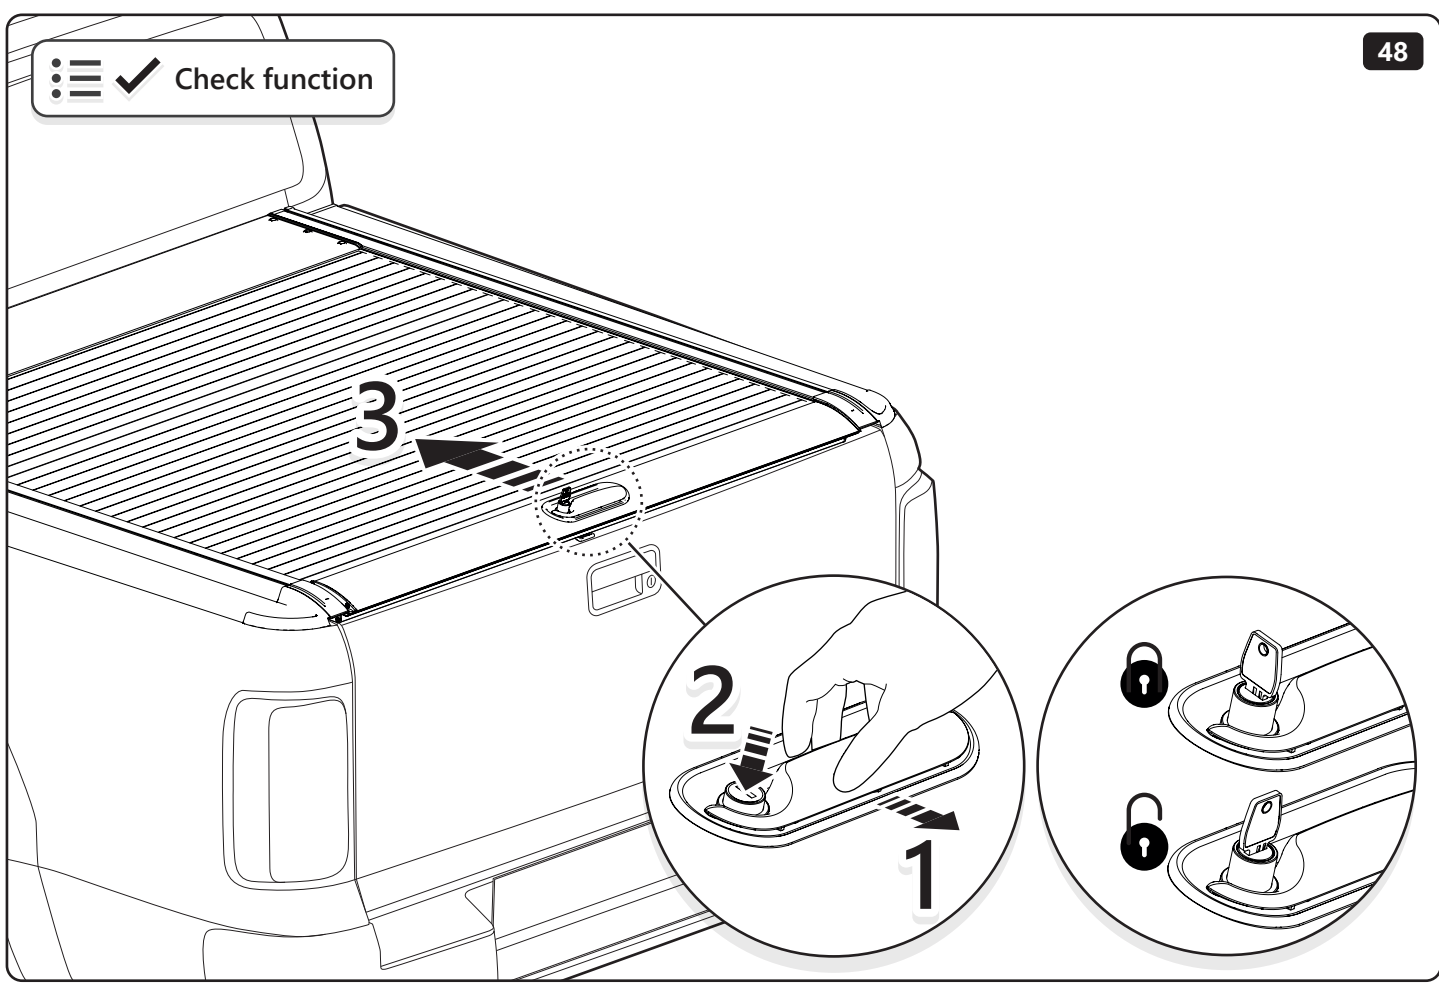

☰ ✓ Check function

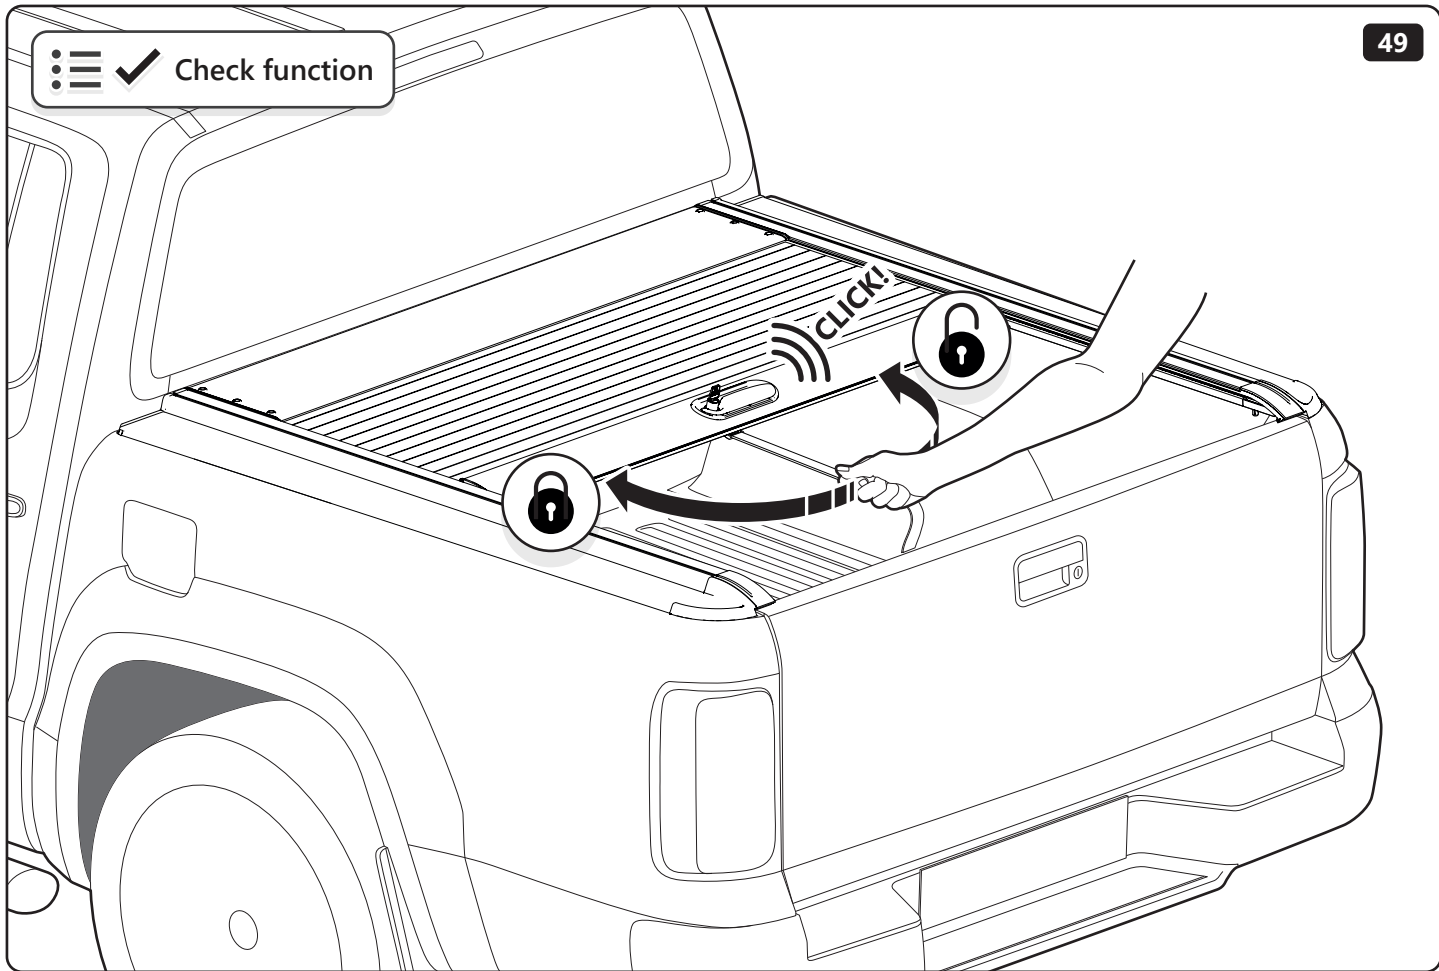

☰ ✓ Check function

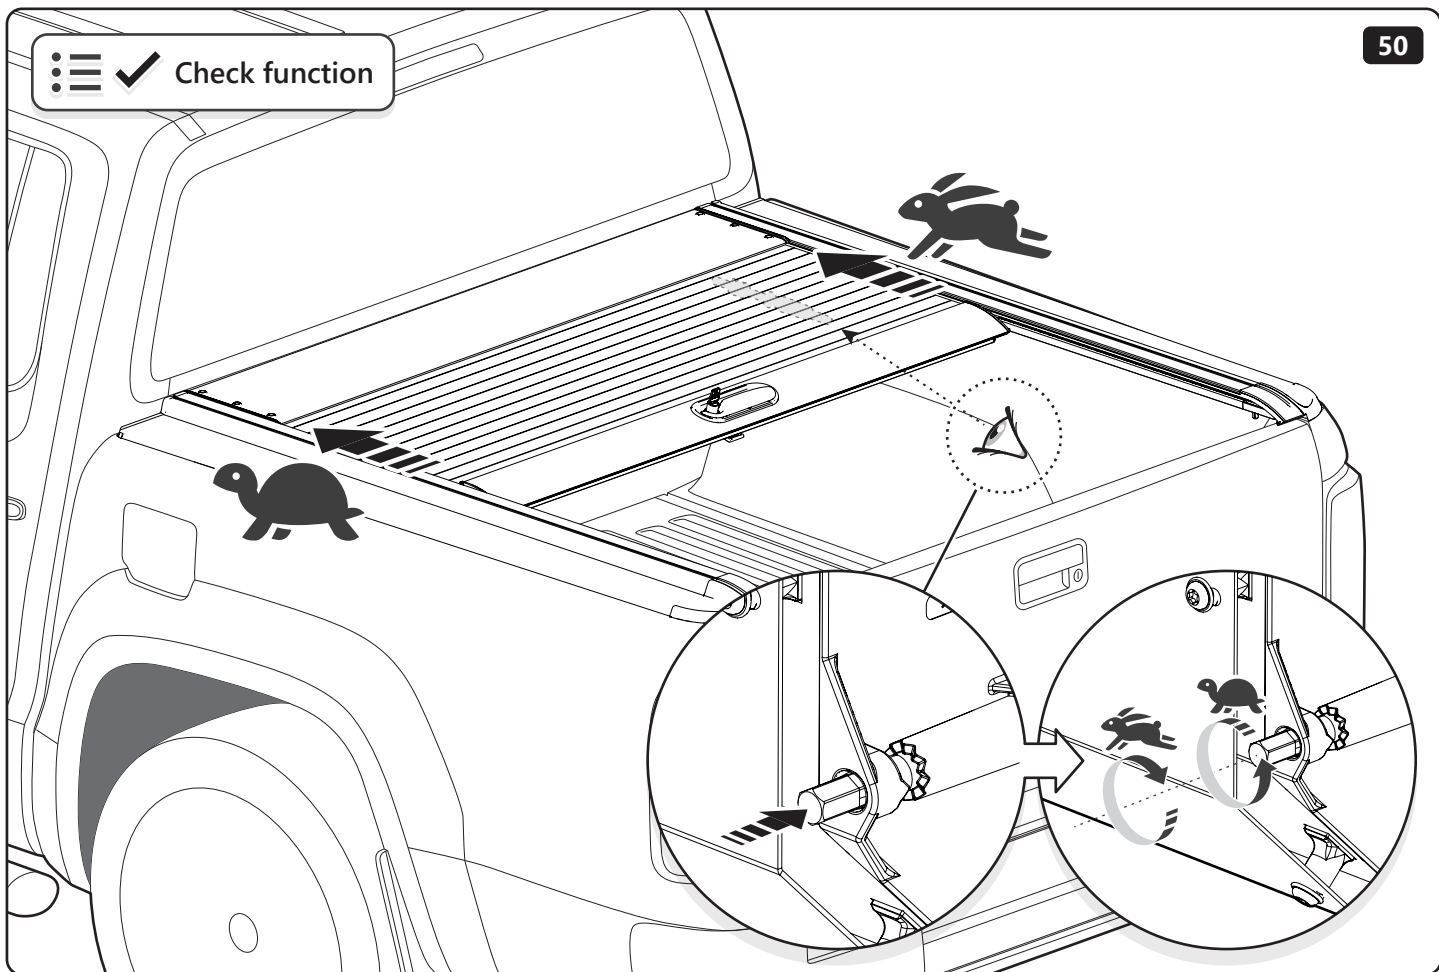

REALTRUCK

Customer Service +45 4810 2950 (08:00 - 16:00 CET)

Support info@realtruck.dk

Website www.realtruck.dk

Address Pedersholmparken 10, 3600 Frederikssund, Denmark

| PART NUMBER(S) | MODEL / YEAR | CAB TYPE(S) | INSTALLATION TIME | WEIGHT |
|----------------|--------------------|-------------|-------------------|----------|
| MTR SS90 | Ssangyong / 2018 → | Short Bed | 2 hour(s) | 31-37 Kg |
| MTRA SS91 | Ssangyong / 2018 → | Long Bed | 2 hour(s) | 31-37 Kg |

| | | |
|-----------------------------------|------------------------------------|-------------------------------------|
| GB Installation manual | S Monteringsanvisning | D Einbauanleitung |
| SF Asennusohje | E Instrucciones de montaje | CZ Návod k instalaci |
| F Notice de montage | H Szerelési utasítás | I Istruzioni de montaggio |
| PL Instrukcja montażu | P Instruções de instalação | GR Οδηγίες Εγκατάστασης |
| NL Installatie-instructies | RUS Инструкция по установке | DK Monteringsvejledning |
| TR Montaj Talimatı | N Monteringsveiledning | RO Instructiuni de instalare |