


ULLSTEIN
CONCEPTS
GMBH









Mountain Top[®] Bed Divider





Installation manual


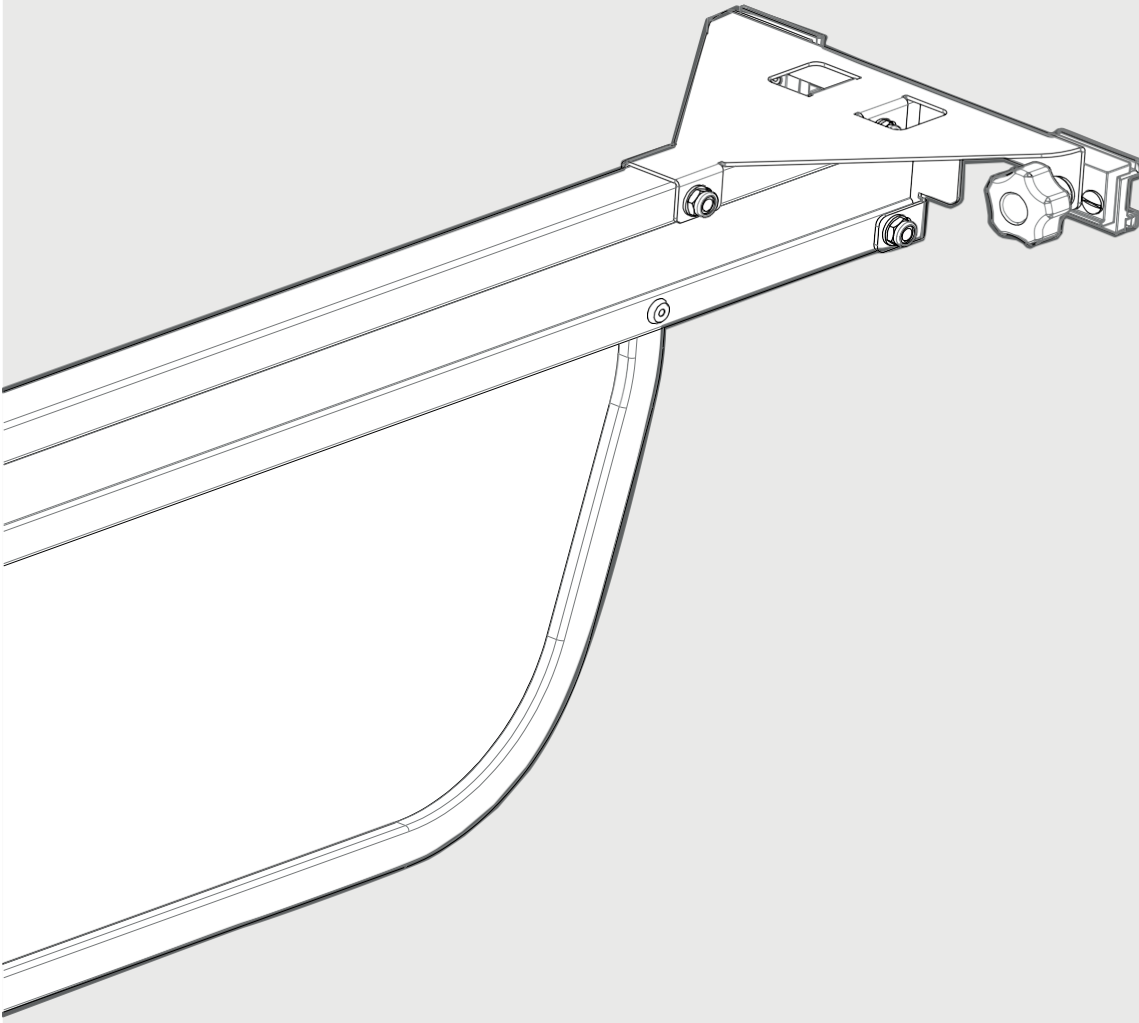




DOWNLOAD PDF

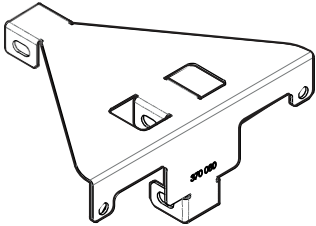
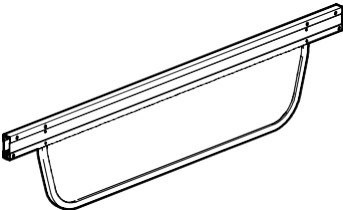
Parts		
A		x 2
B		x 1
C		x 1

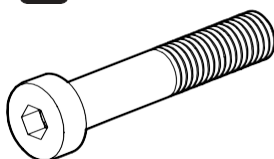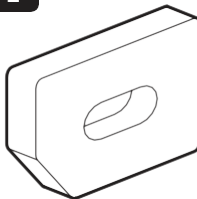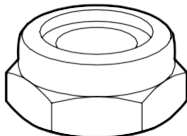
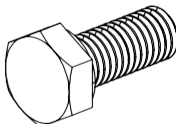
Kit					
D		x 6	E		x 2
F		x 16	G		x 8
L		x 2			

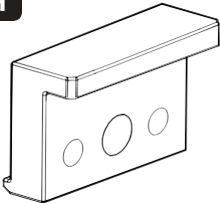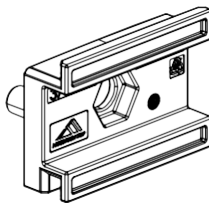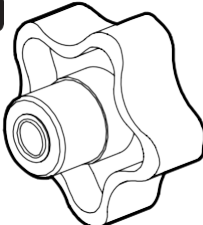
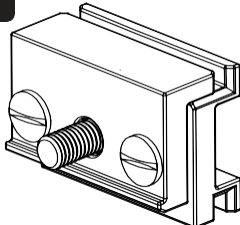
Kit					
H  x 2		I  x 2		J  x 2	
				K  x 2	

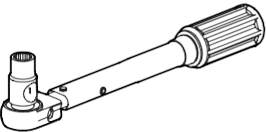
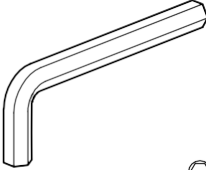
Tools and materials needed	
1 - 25 Nm	
	
⬡ 13 mm	⬡ 5 mm

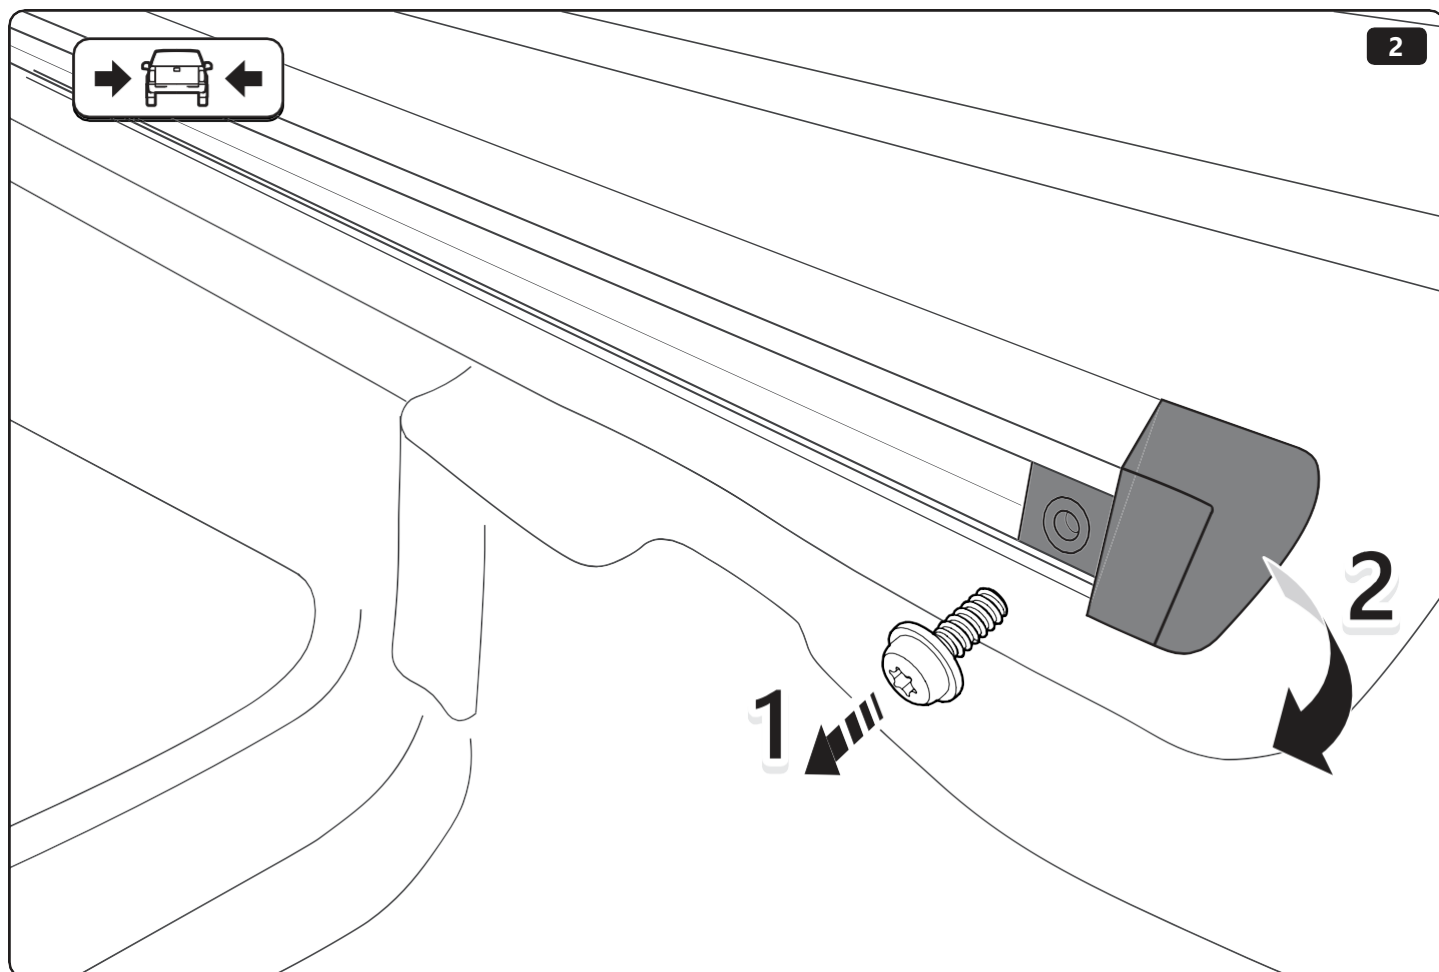
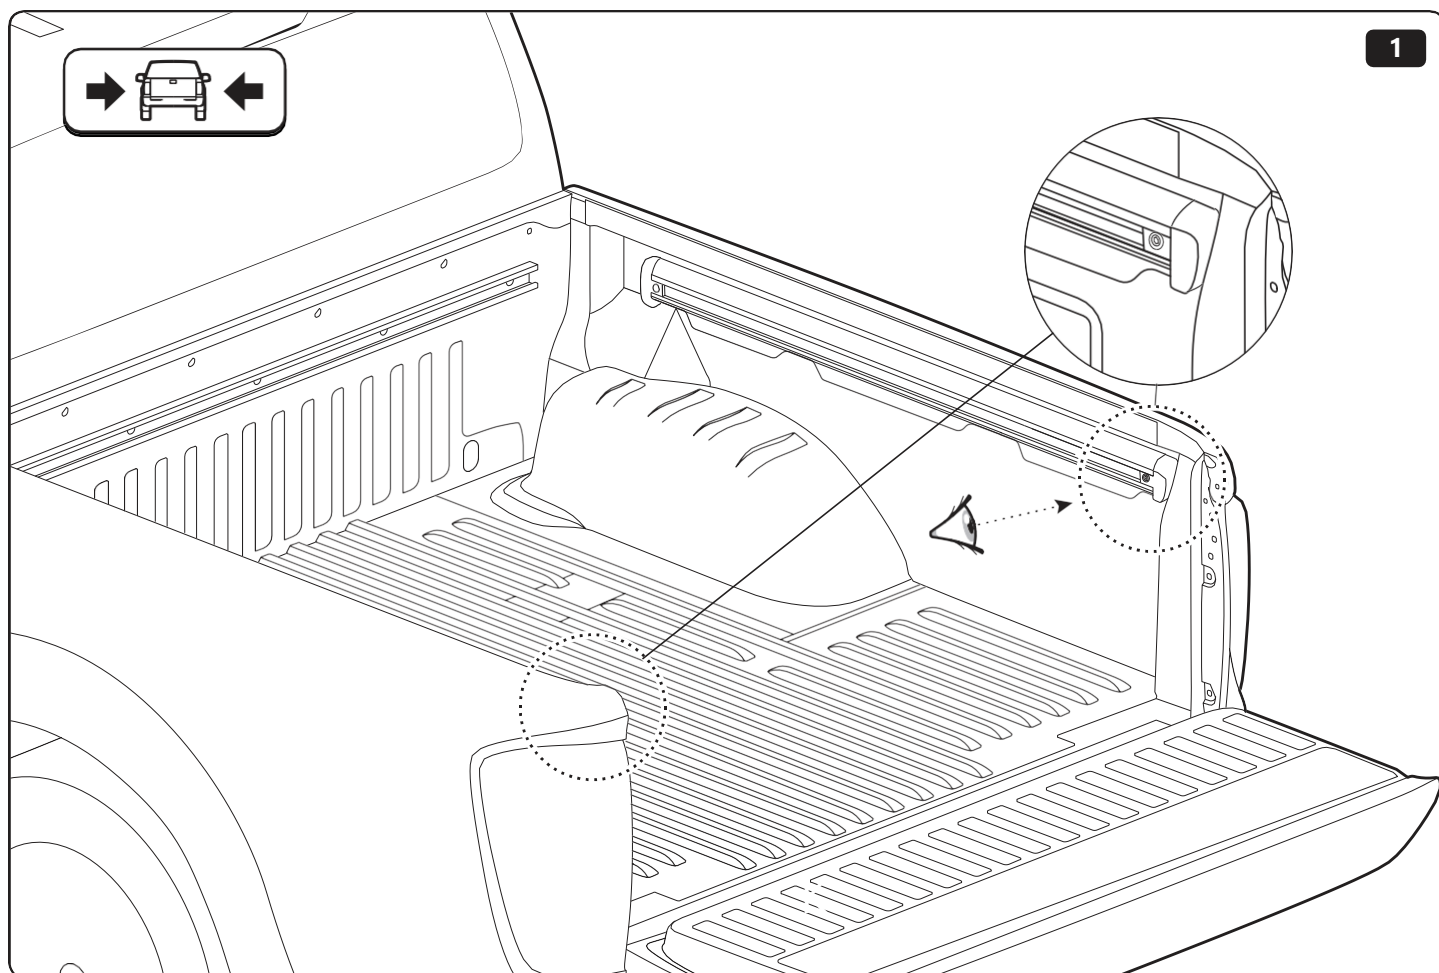


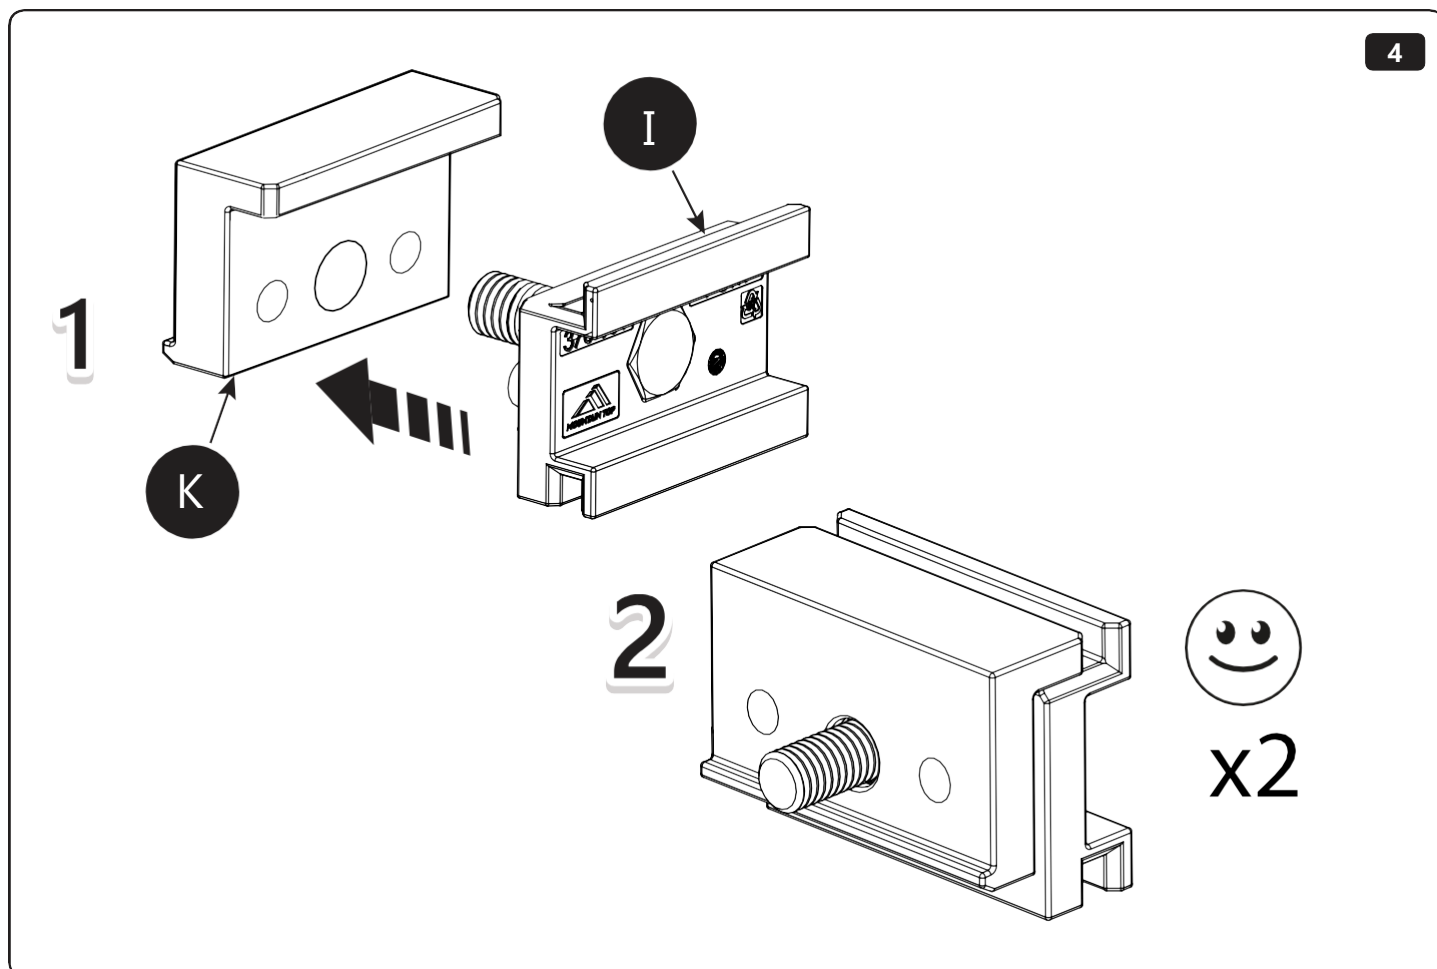
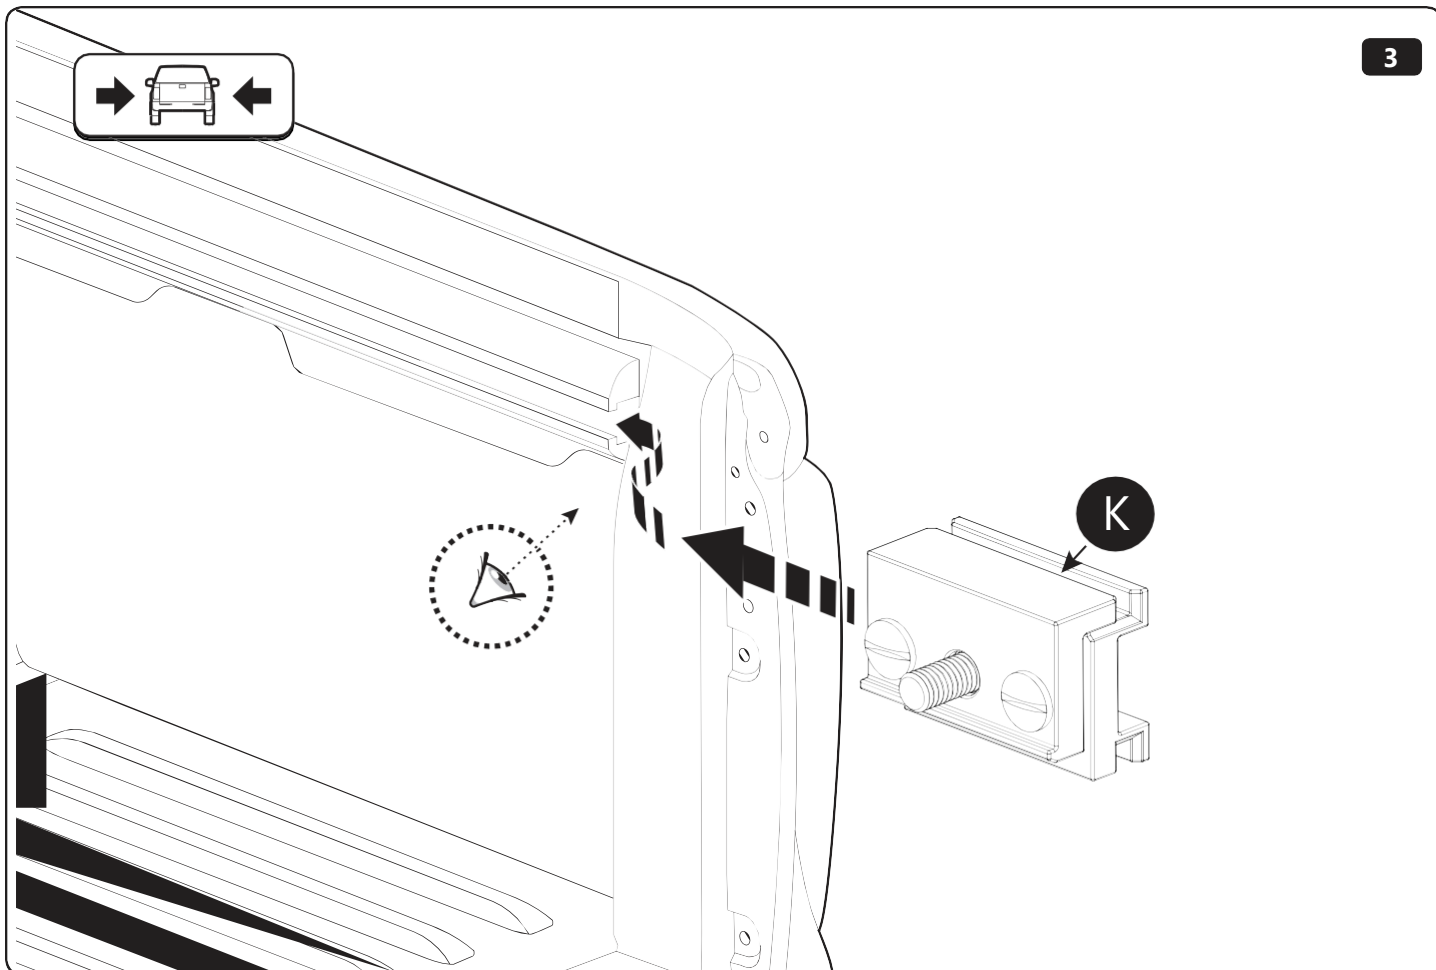


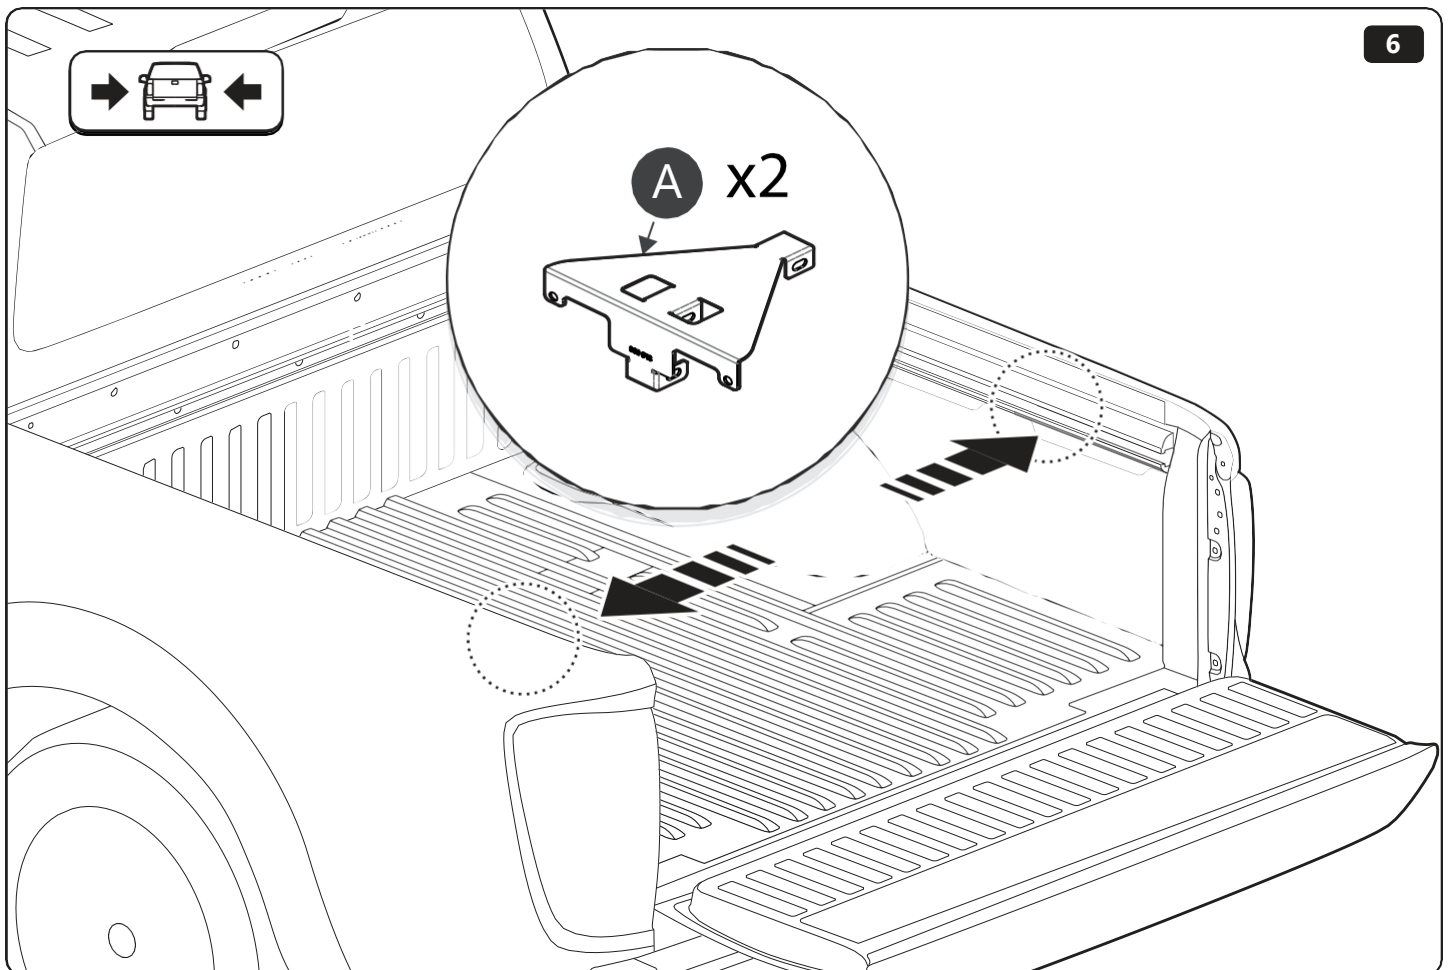
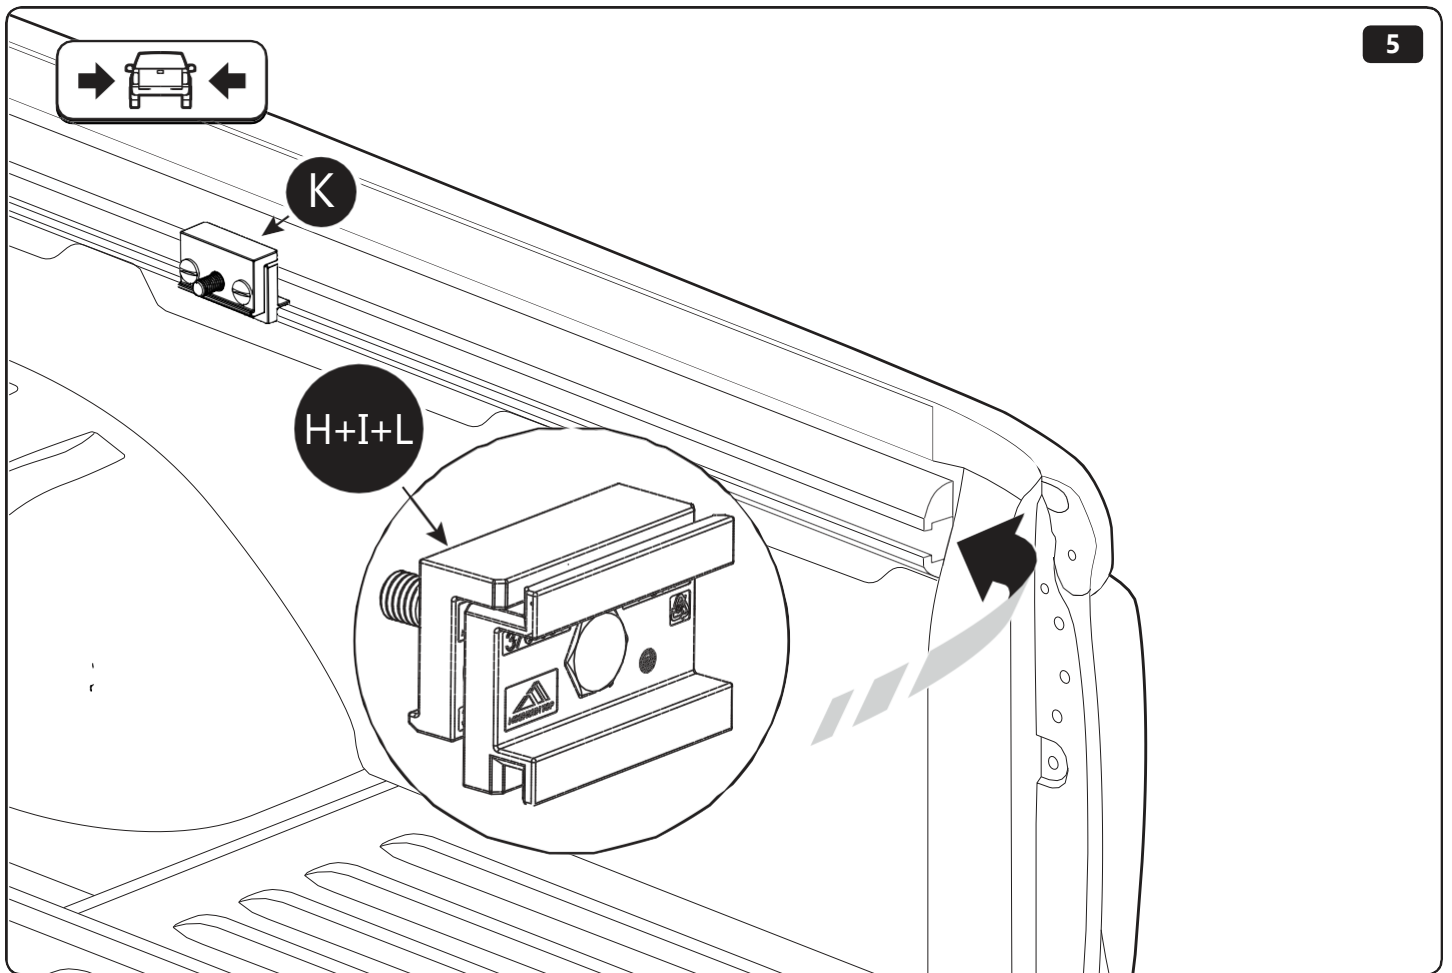


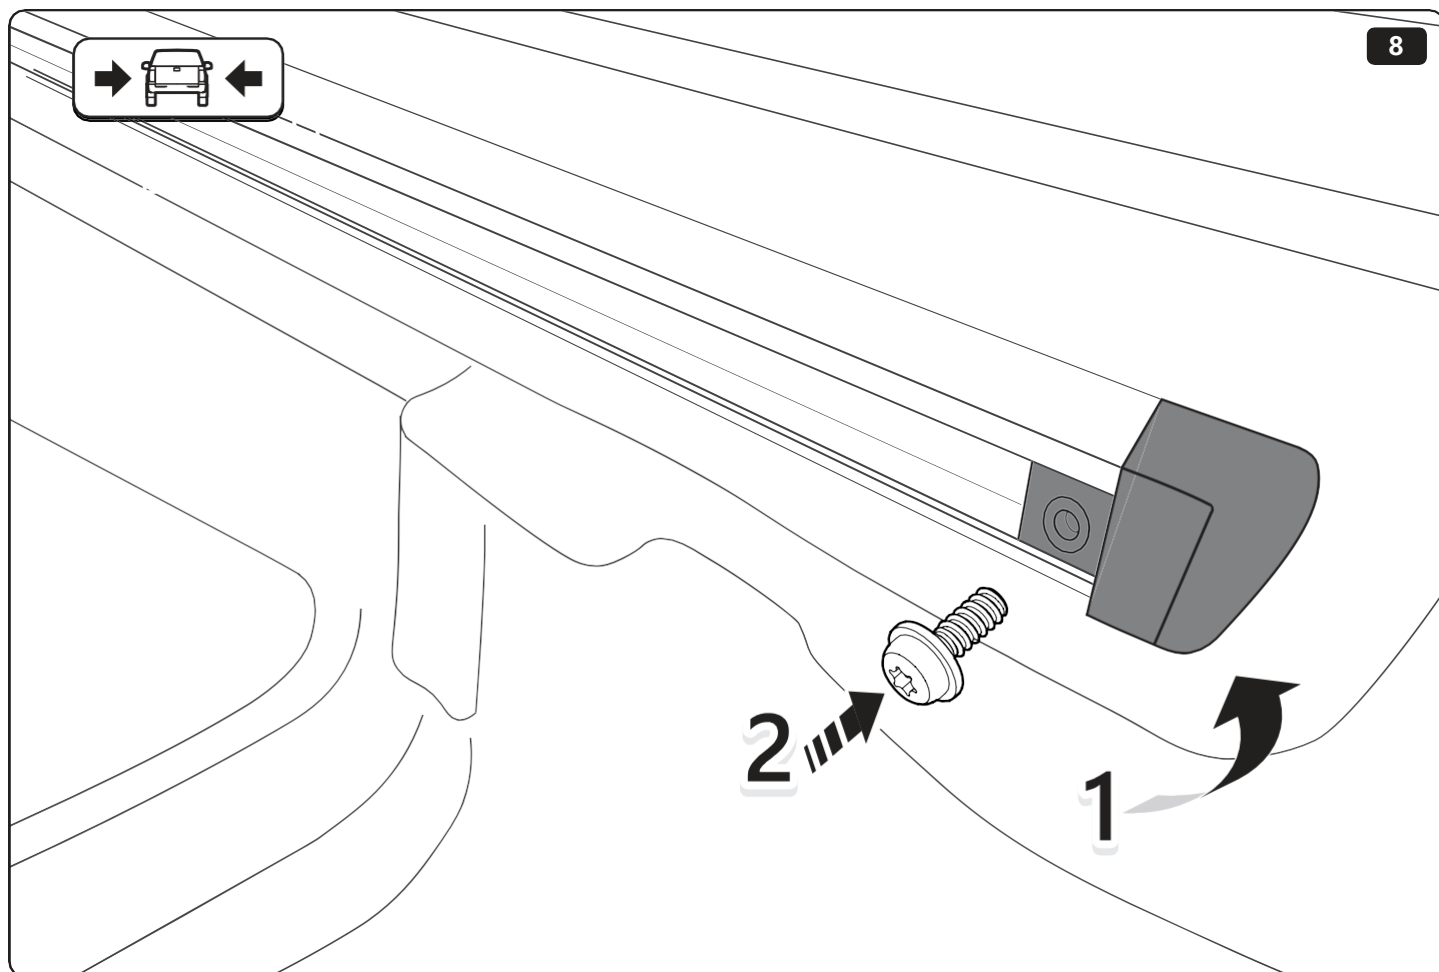
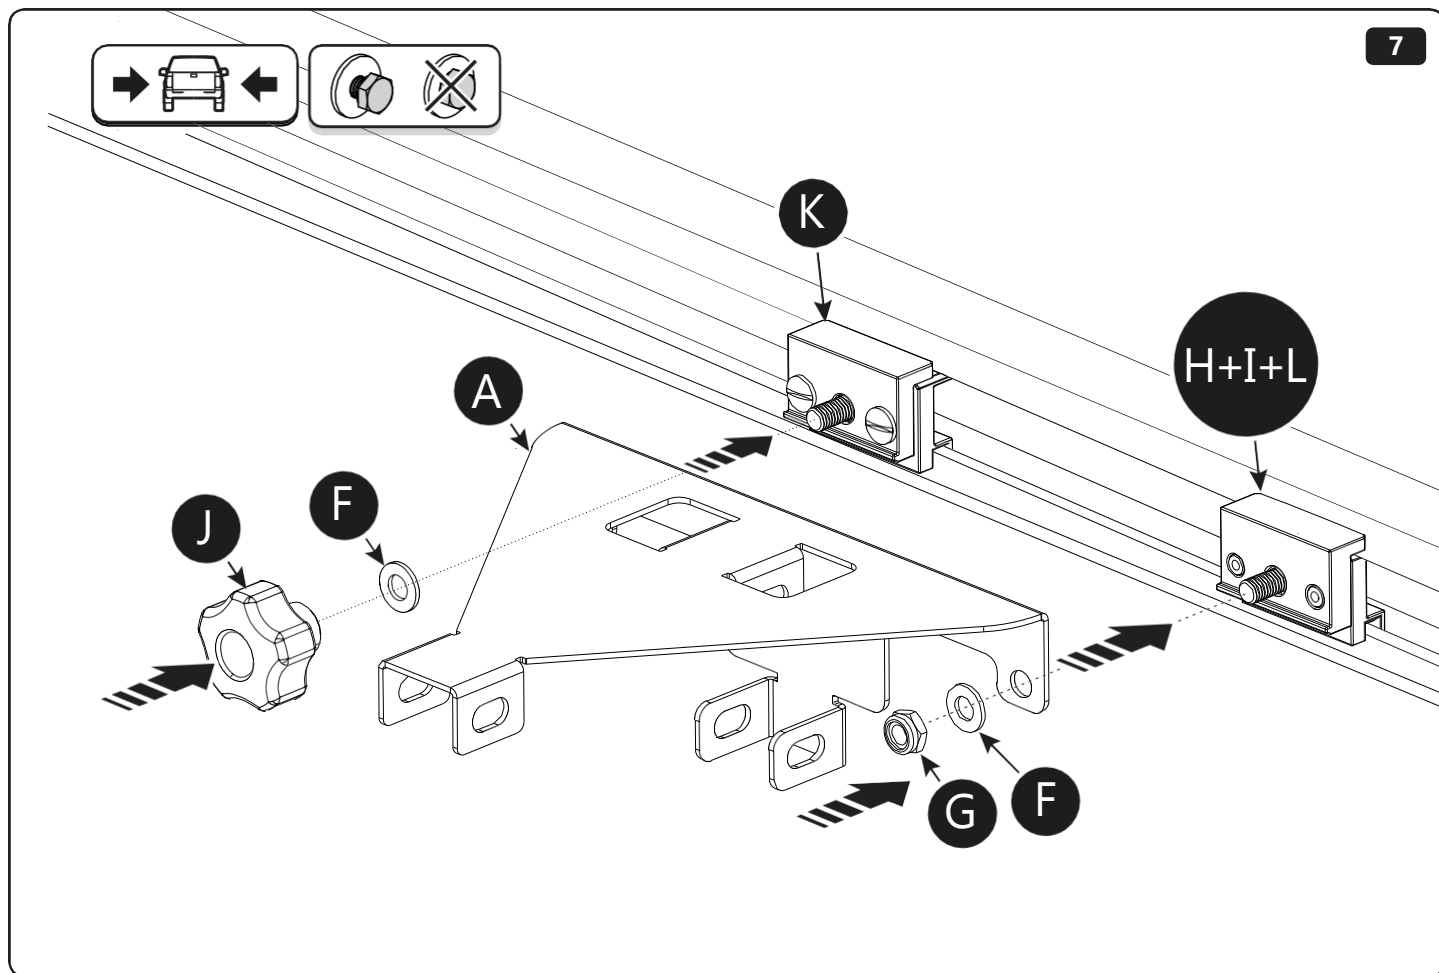


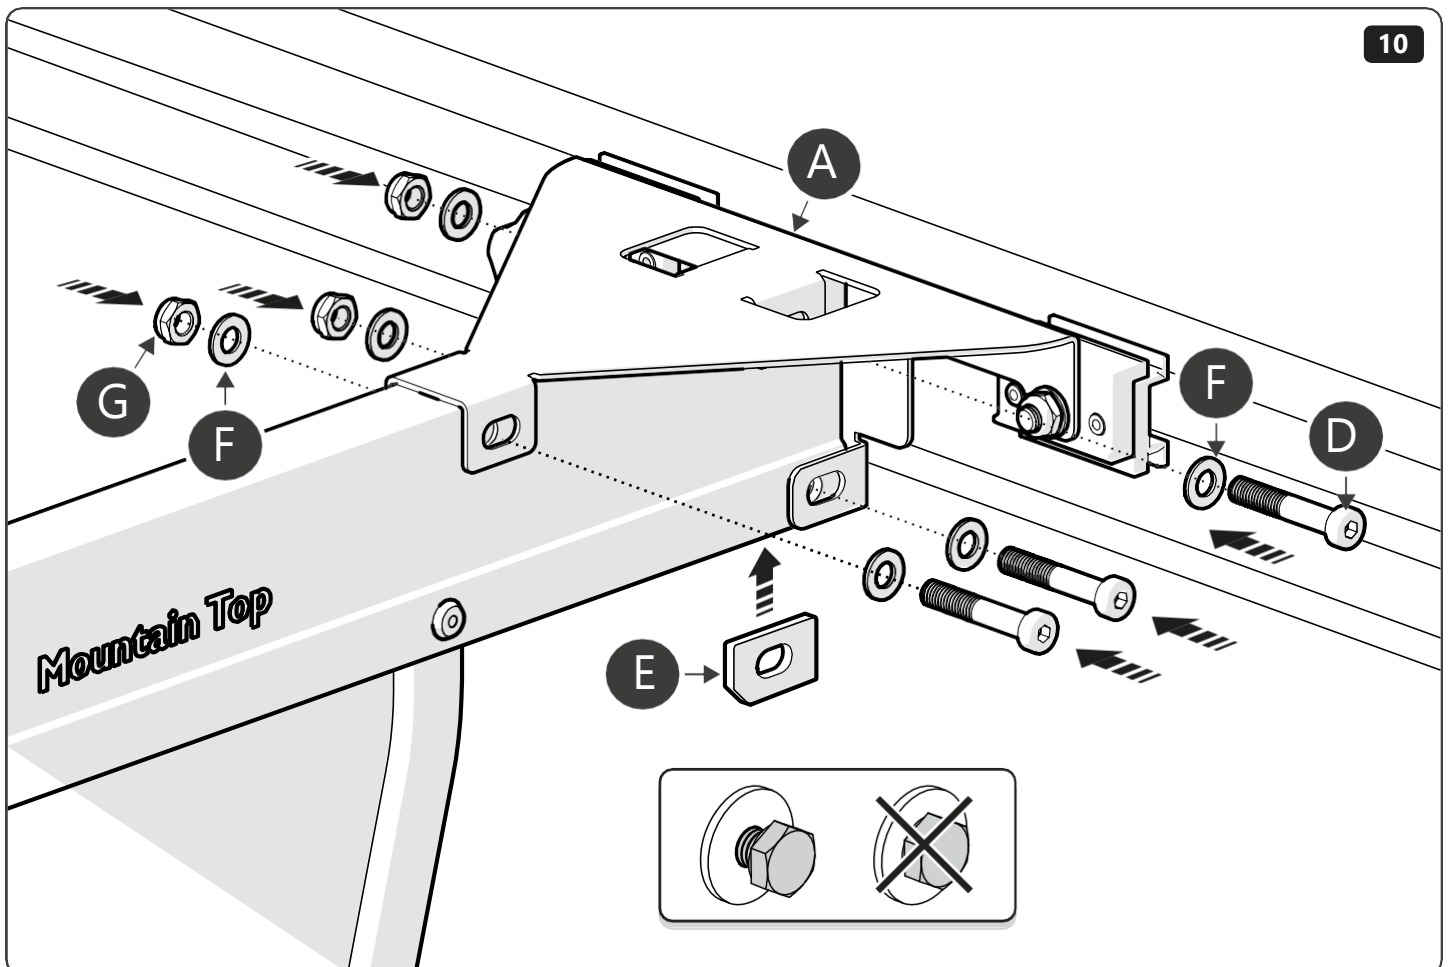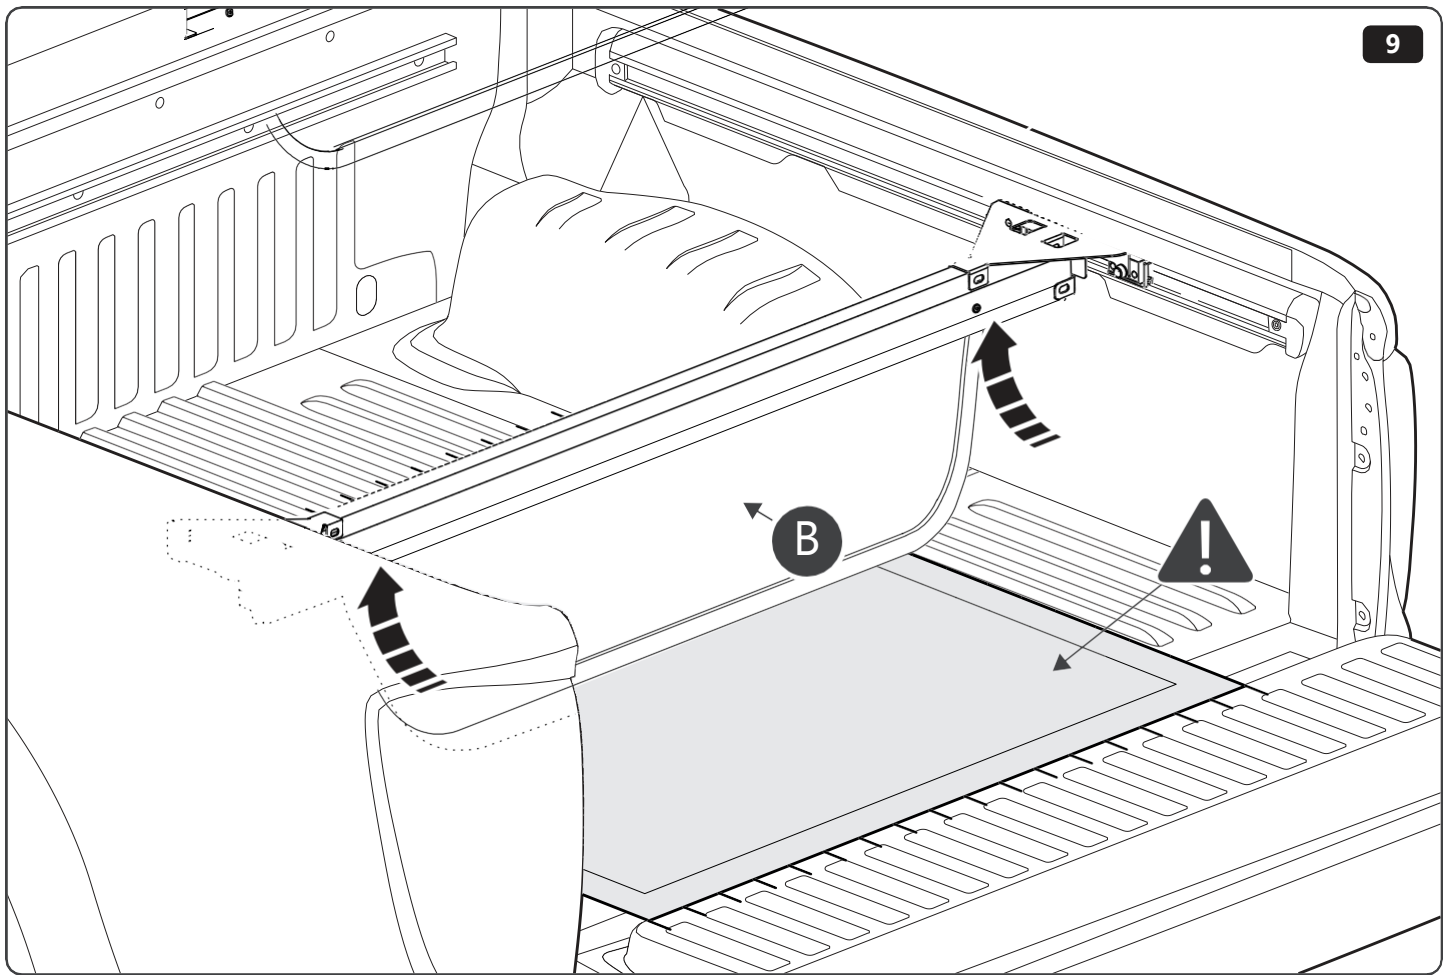

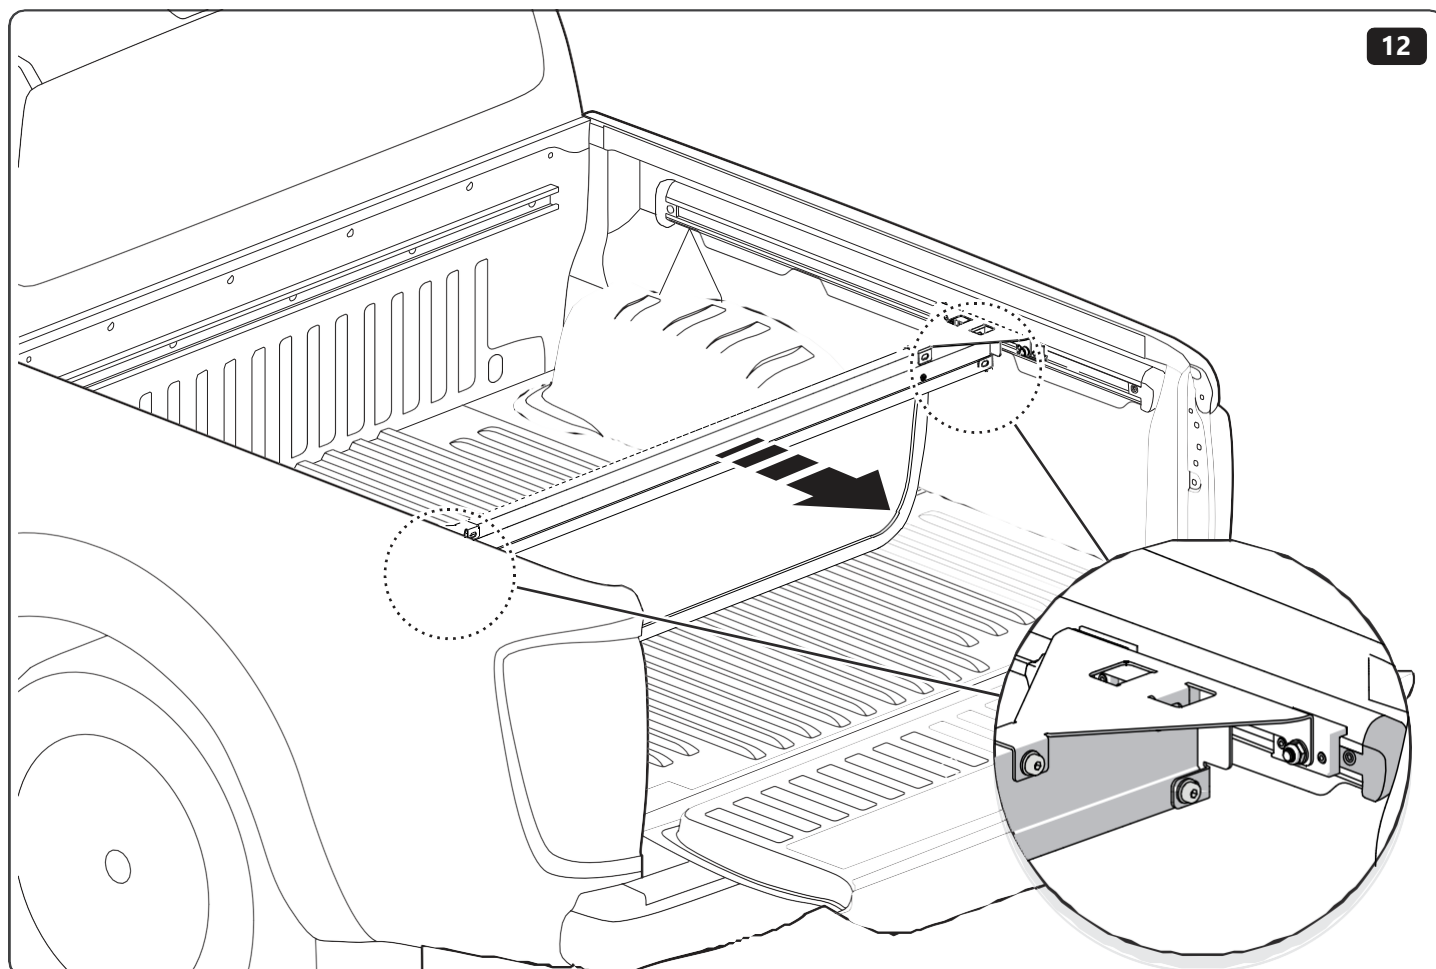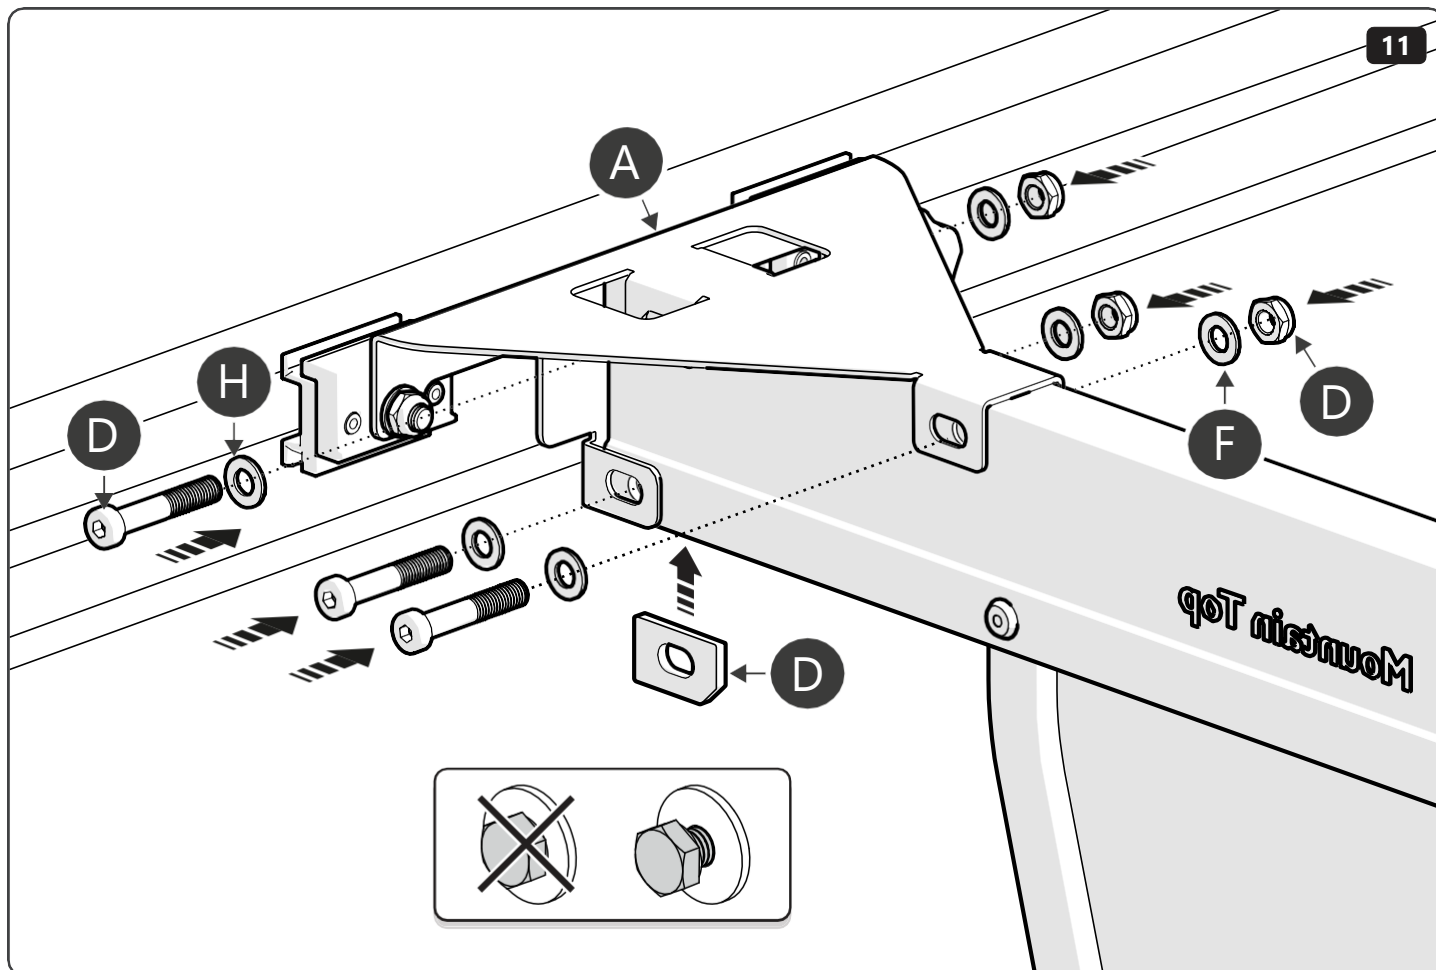

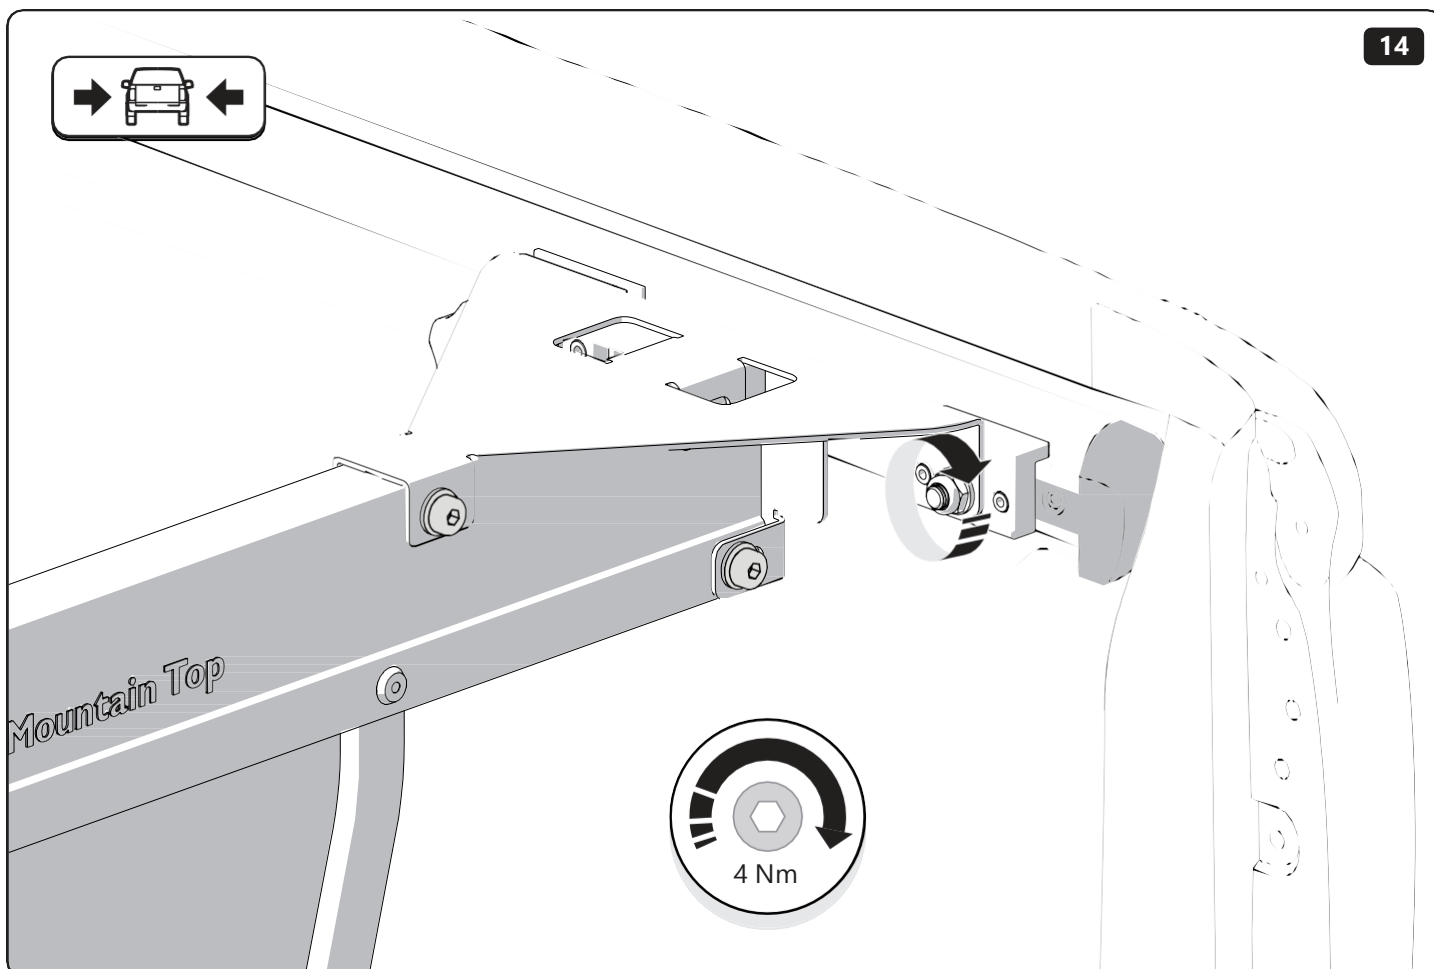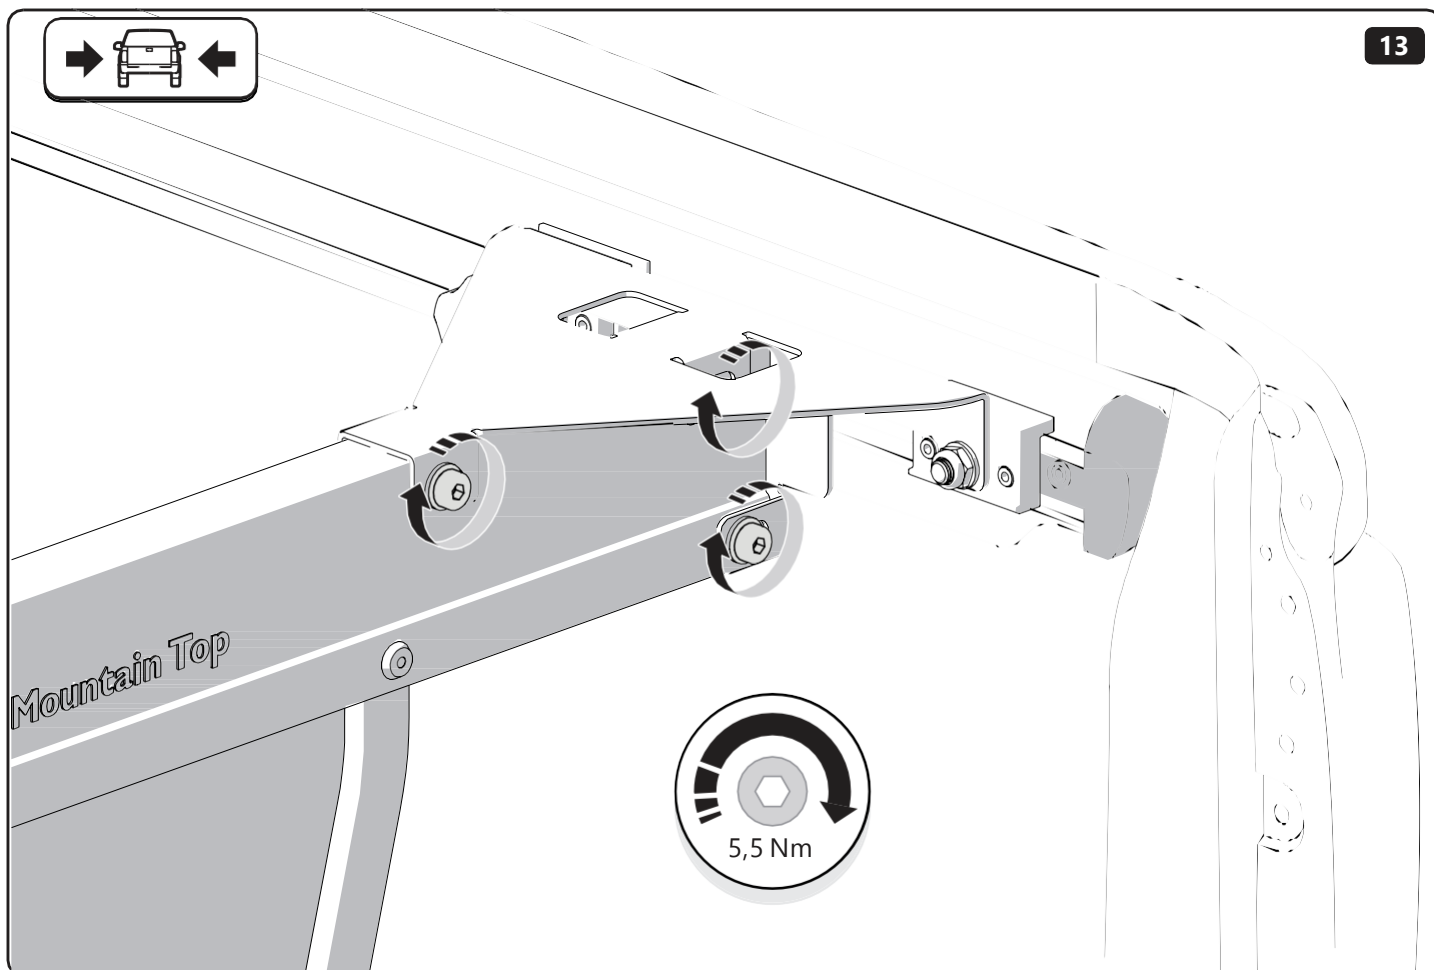

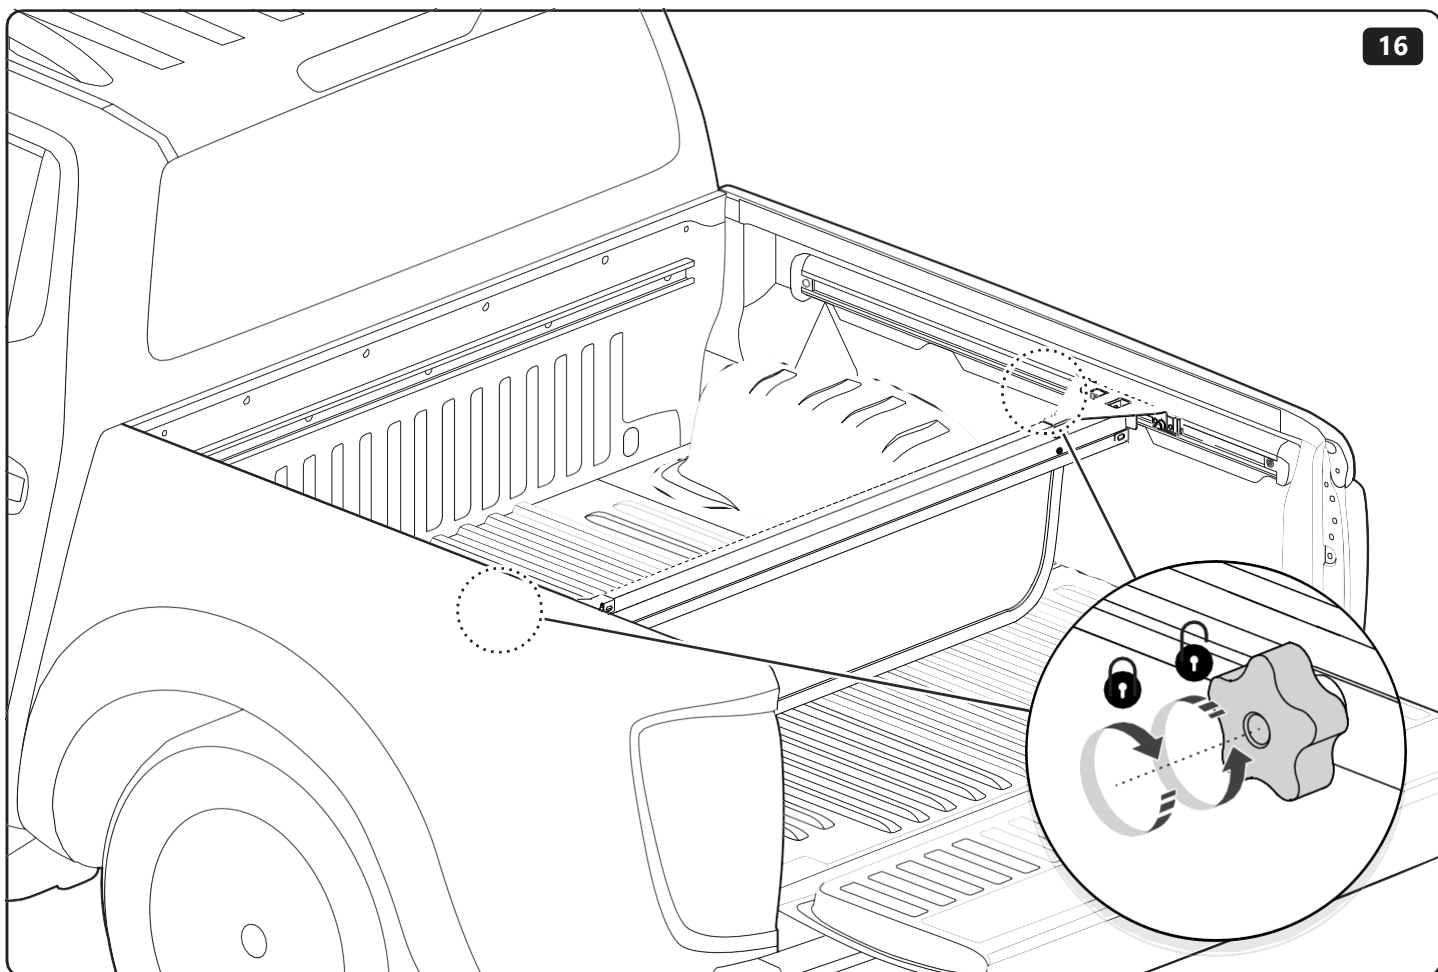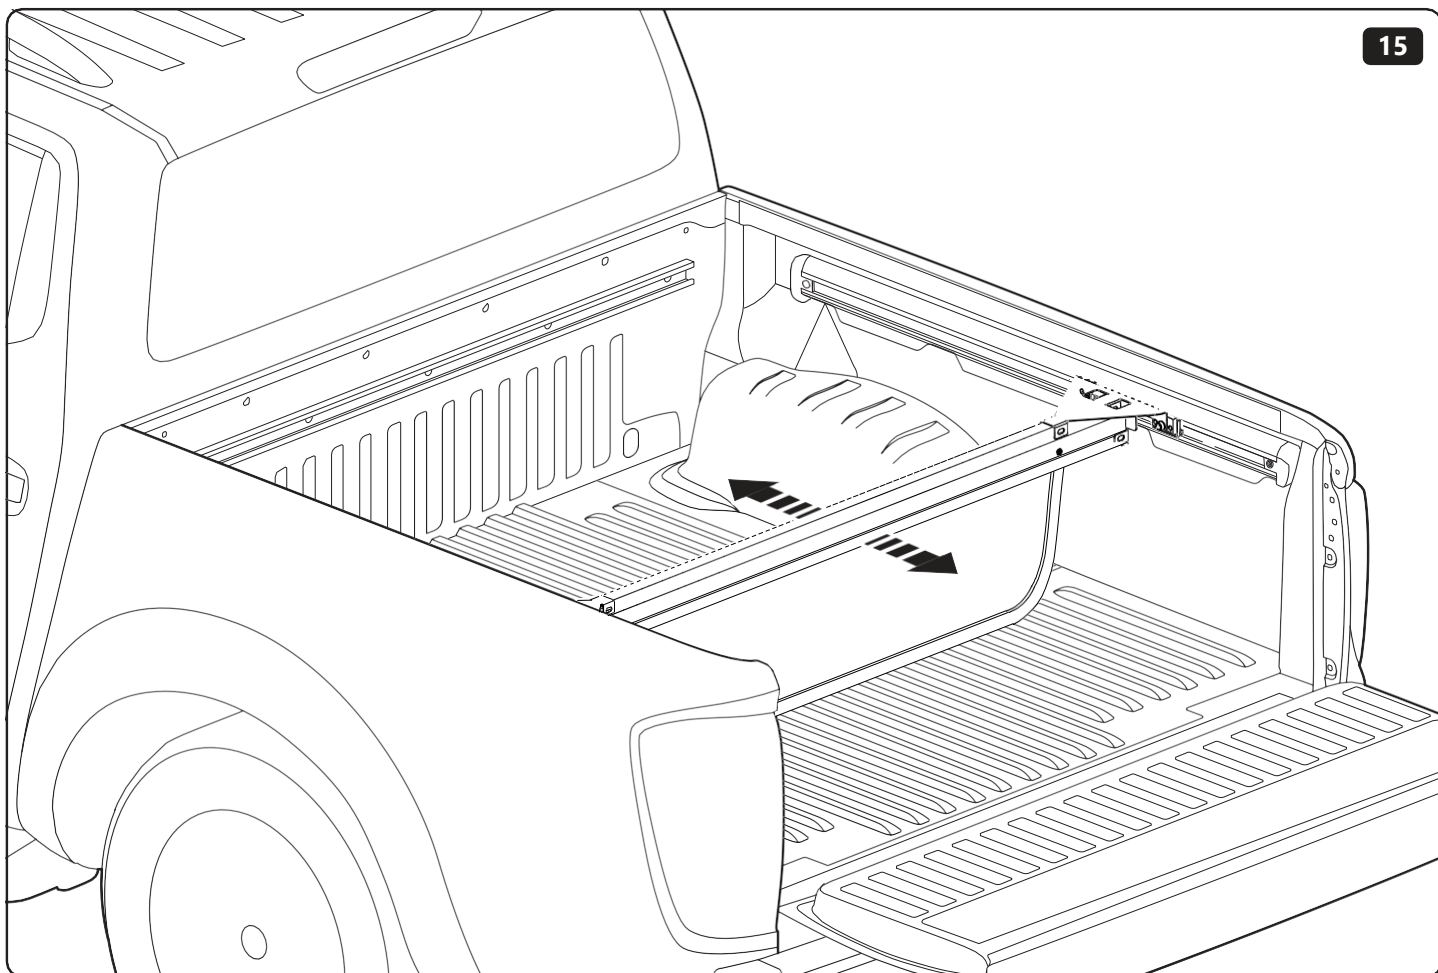

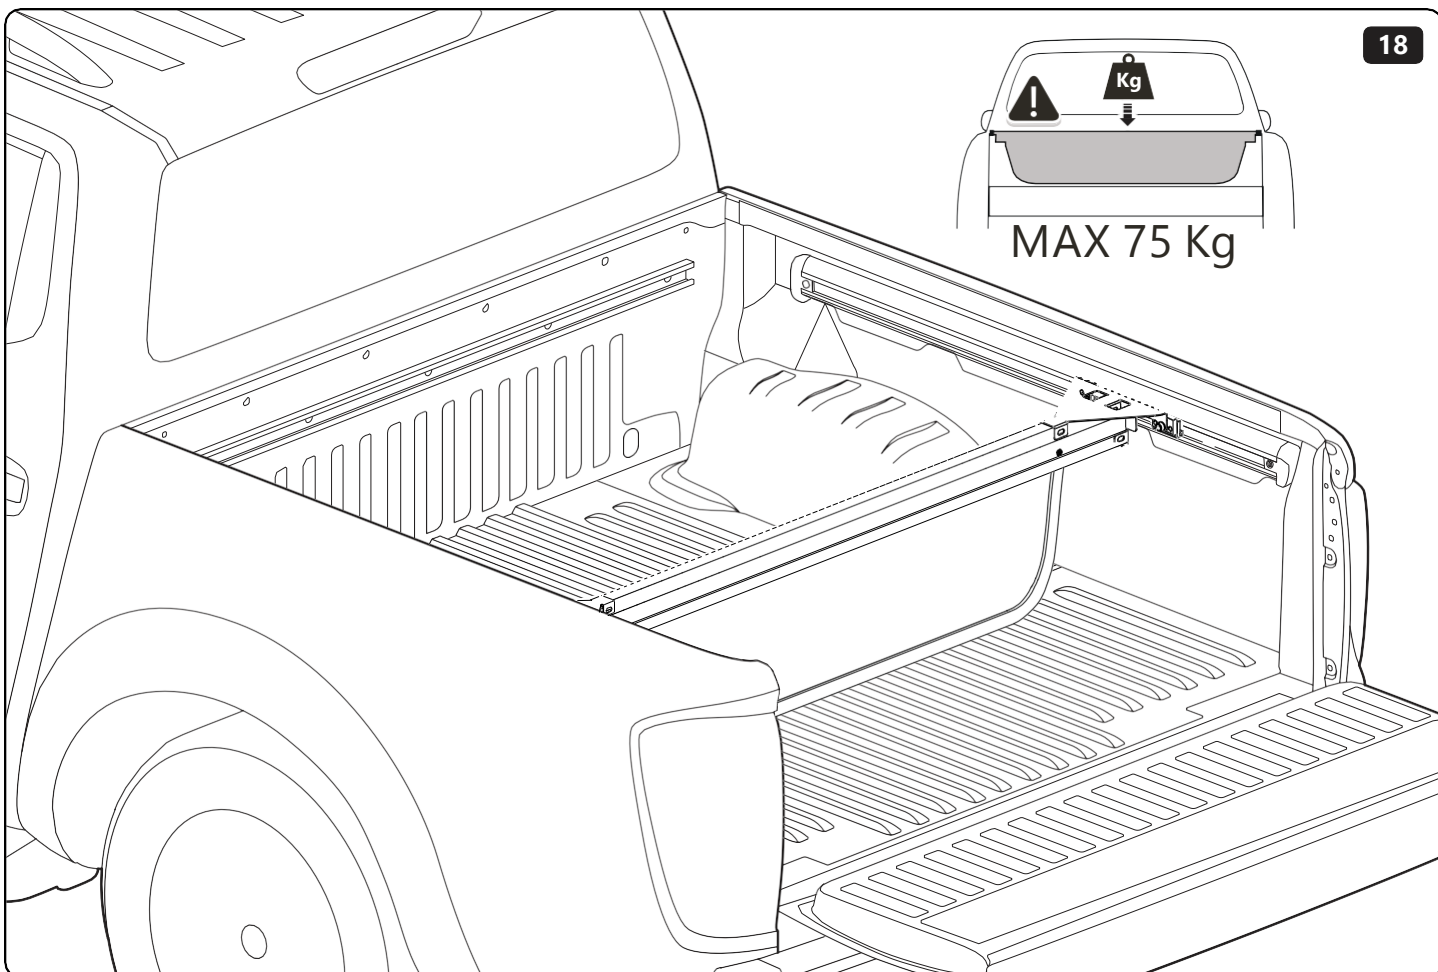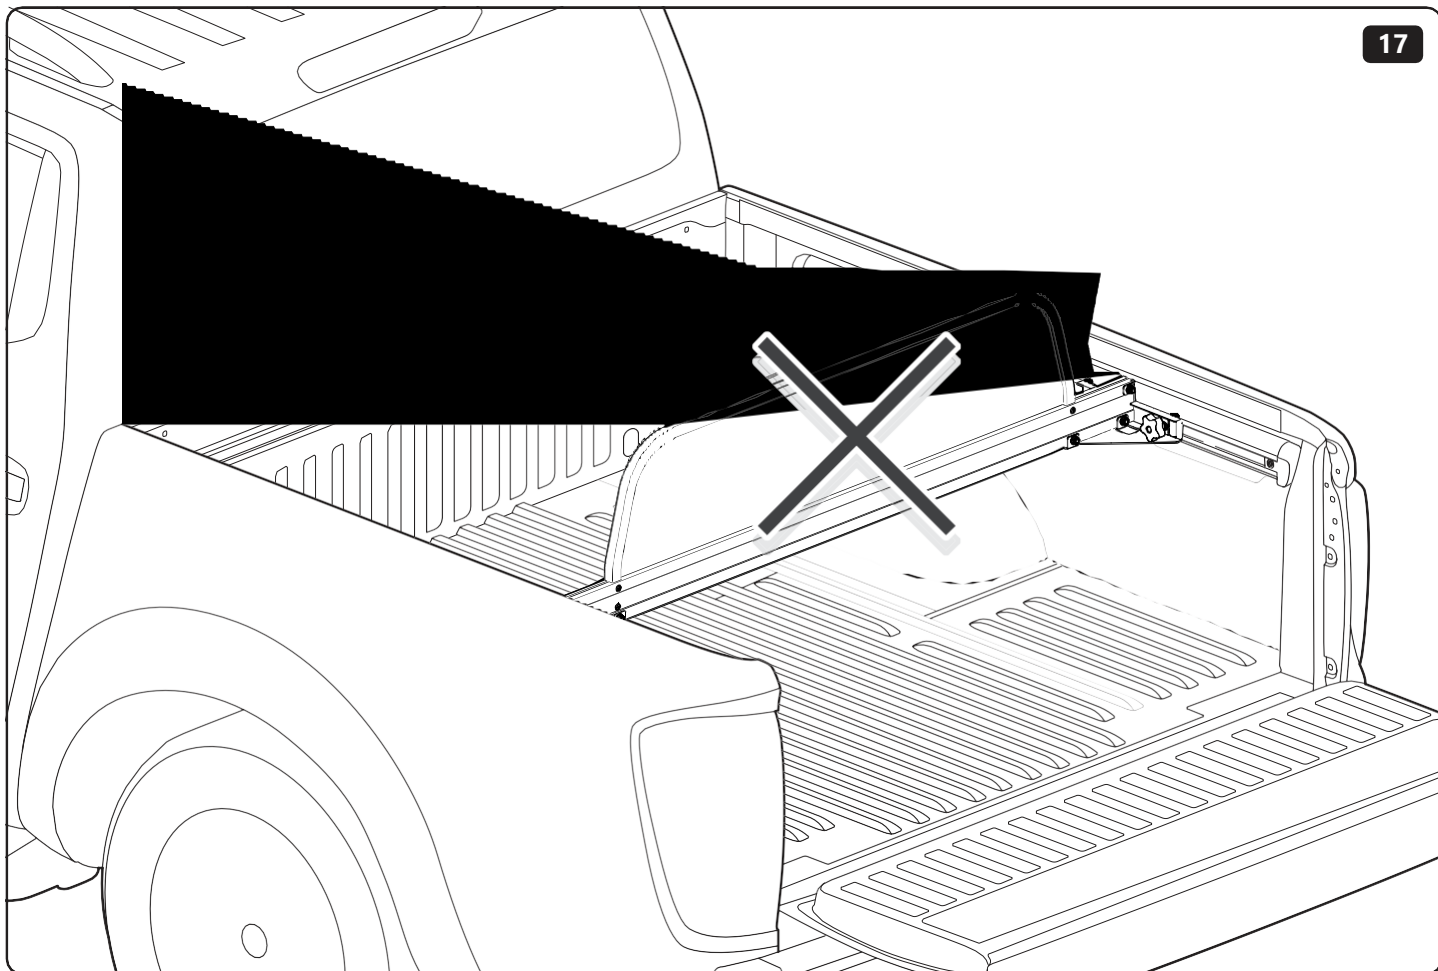



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Fax +45 4810 2960
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark



ULLSTEIN
CONCEPTS
GMBH

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
BD FO90/91	Ford / 2011 →	Double / King Cab	30 Minutes	5 Kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare