

Ford Transit, Kastenwagen & Personentransporter;

Modell 2006


Radstand 2933mm

Side Protection Pipe 60 straight / Flankenschutzrohr 60 gerade



FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucciones de montaje • Manual

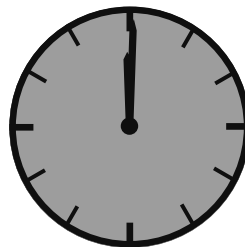

60 Minuten

Artikel-Nr:

IIW 4050 Stainless steel

IIW 5050 Steel

IIW 9050 Mounting Set

Revision 2: 12.12.2008




Ford Transit, Kastenwagen & Personentransporter; Modell 2006

Radstand 2933mm

Side Protection Pipe 60 straight / Flankenschutzrohr 60 gerade

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias


SW: 10 mm
SW: 13 mm
SW: 17 mm

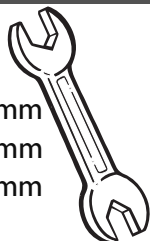

M6: 10 Nm

M8: 25 Nm

M10: 50 Nm

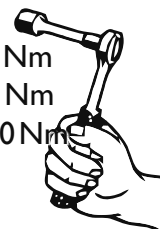

Parts list / Teileliste / Lista de accesorios

1 IIW 4050.1 R / IIW 4050.2 L



Mounting set IIW 9050 / Montagesatz IIW 9050

2 IIW 5052

2x



3 IIW 5152

2x



4 IIW 5054

2x



5 IIW 5154

4x



6 M10; I79 5018

6x



Standard Parts list / Normteileliste

a		M6x20; DIN 933	2x
b		M8x25; DIN 933	4x
c		M10x25; DIN 603	8x
d		M6; DIN 934	2x
e		M10; DIN 934	14x
f		Ø 6; DIN 127	2x
g		Ø 8; DIN 127	4x
h		Ø 10; DIN 127	14x
i		Ø 6,4; DIN 125	2x
k		Ø 6,4; DIN 9021	2x
m		Ø 8,4; DIN 9021	4x
n		Ø 10,5; DIN 9021	14x









Artikel-Nr:

IIW 4050 Stainless steel

IIW 5050 Steel







IIW 9050 Mounting Set

Revision 2: 12.12.2008

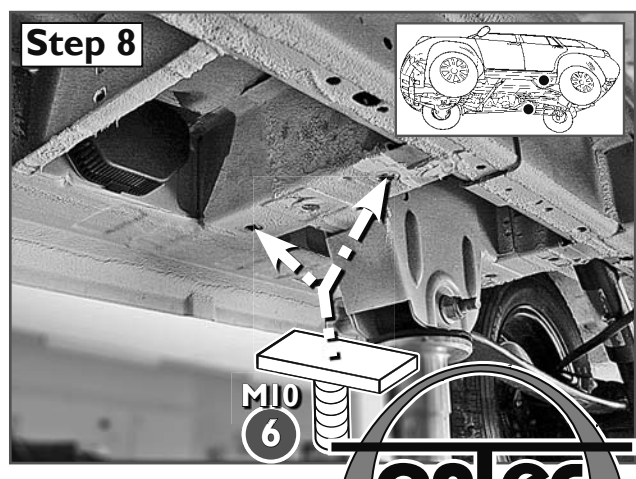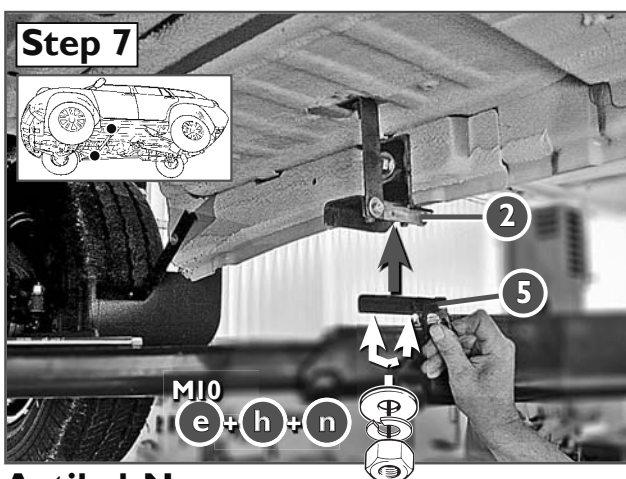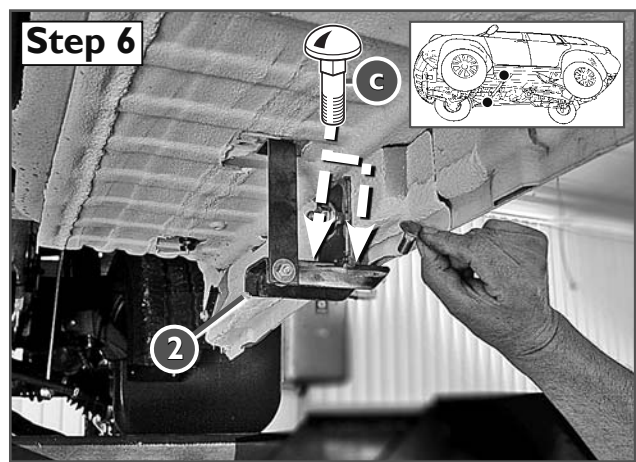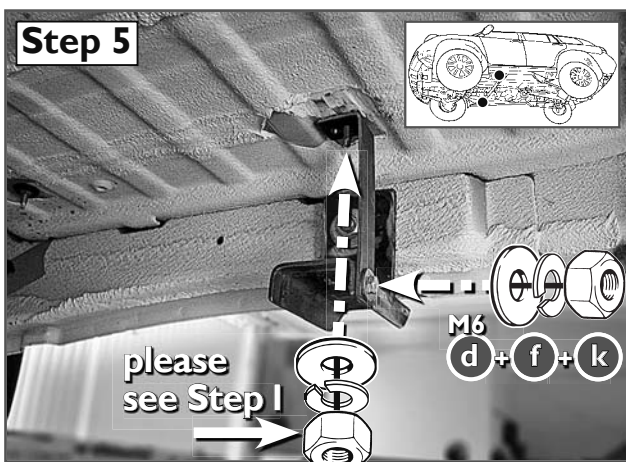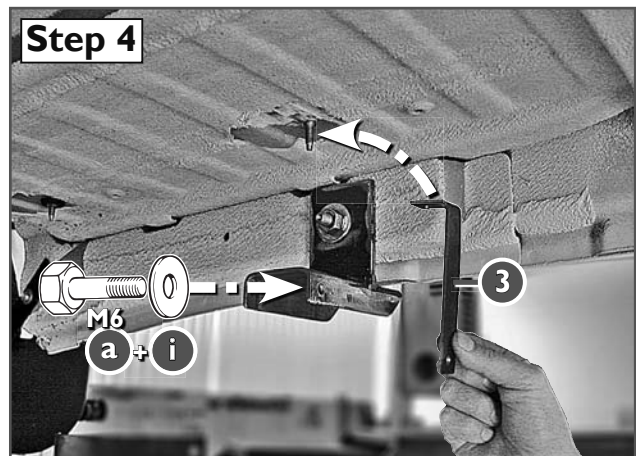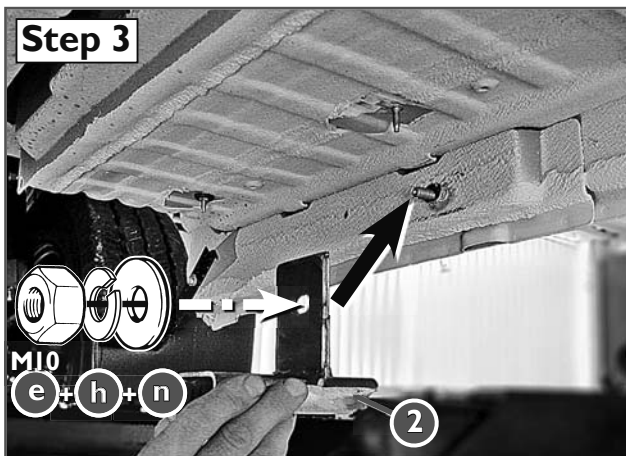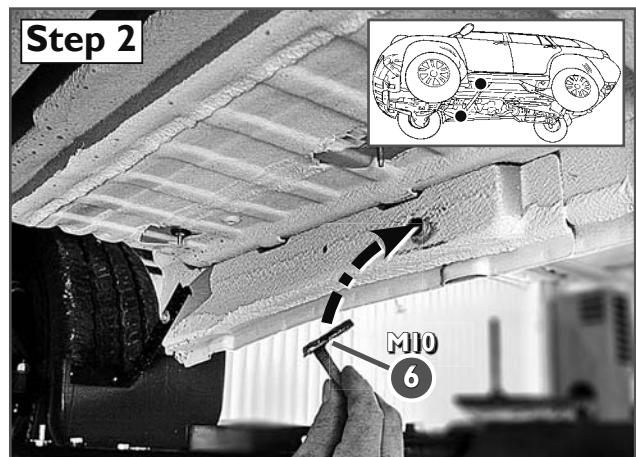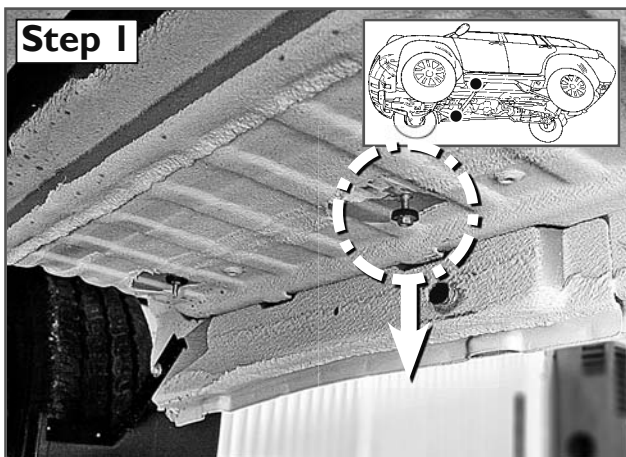

Artikel-Nr:
11W 4050 Stainless steel

Revision 2: 12.12.2008

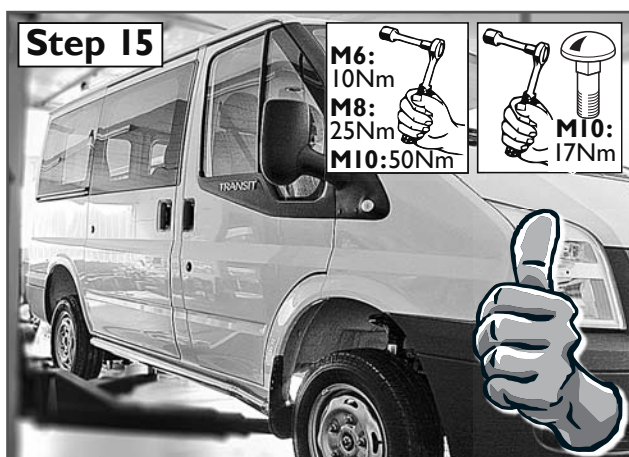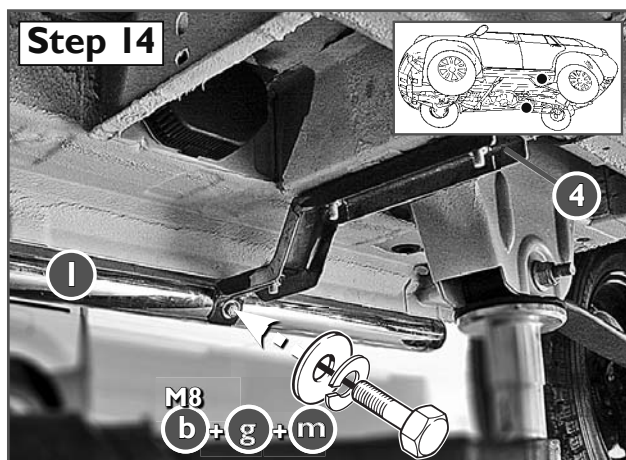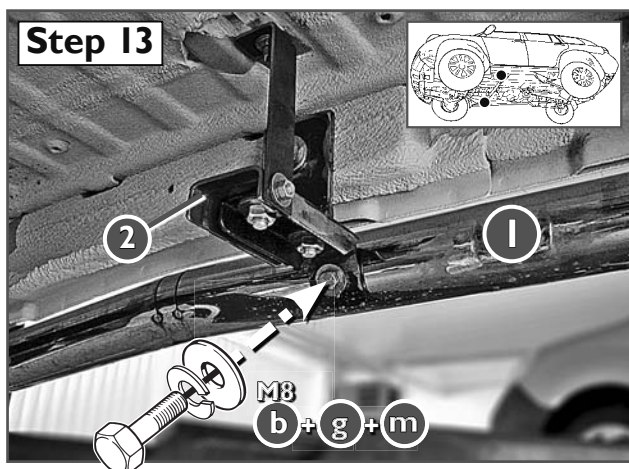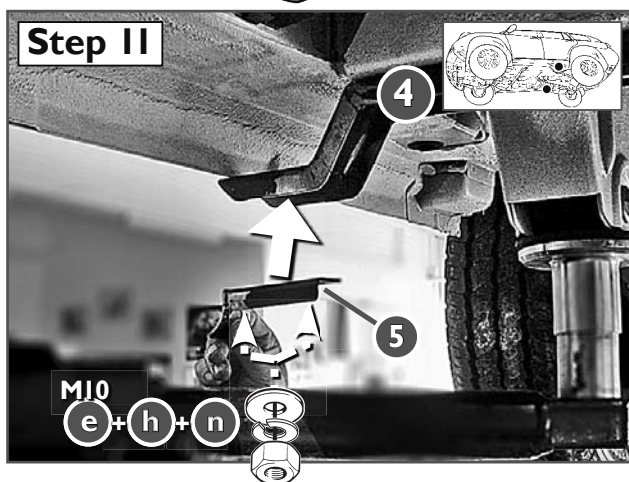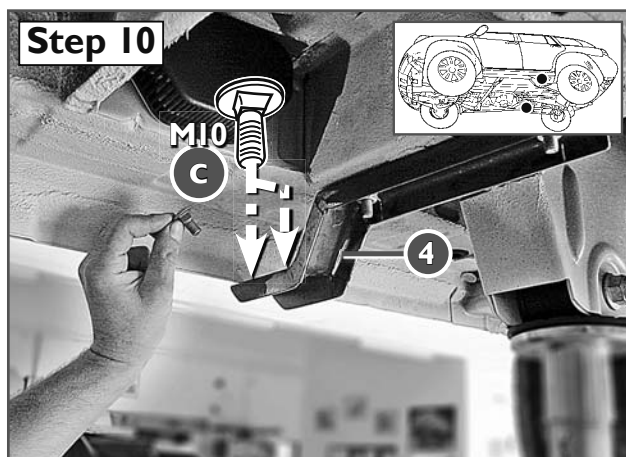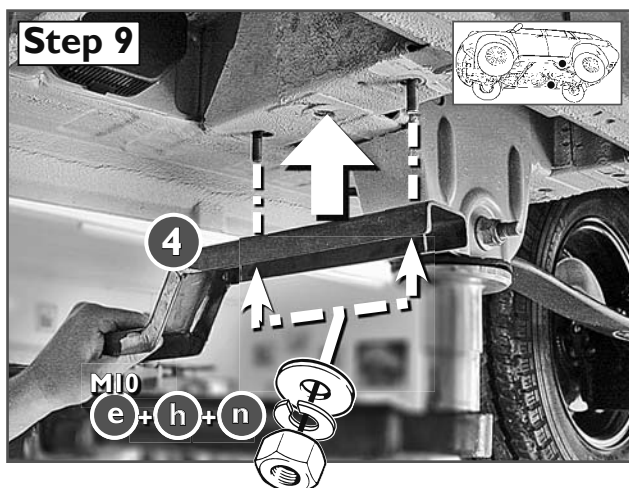

Artikel-Nr:
11W 4050 Stainless steel

Revision 2: 12.12.2008