

Renault Captur, Modell 2013

EU-Personenschutzbügel 60 mm hoch


EU-Pedestrian Protection Bar 60 mm high

Barre de protection des piétons CE 60 mm haut



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

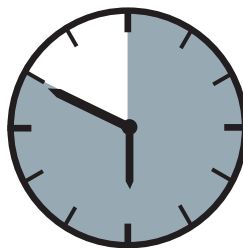

50 Minuten

Bitte kontaktieren Sie uns, wenn Sie PDC haben !!

Ullstein Concepts GmbH

Ferstlstr. 15c 85445 Oberding




Tel. 089/809902880

www.ullsteinconcepts.com

Revision 2: 05.03.2014









ULLSTEIN
CONCEPTS
GMBH

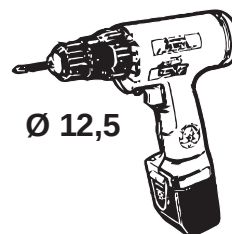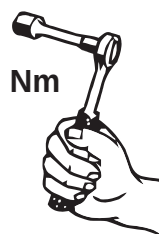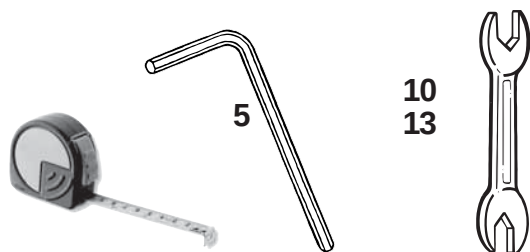


a		M6 x 30, DIN 912 A2	2x
b		M6 x 25, DIN 933 Zn	2x
c		M8 x 20, DIN 933 A2	2x
d		Ø 6,4, DIN 9021 Zn	2x
e		Ø 6,4, DIN 9021 A2	2x
f		Ø 8,4, DIN 9021 A2	2x
g		Ø 6, DIN 127 A2	2x
h		Ø 6, DIN 127 Zn	2x
i		Ø 8, DIN 127 A2	2x
j		SW 13 mm	2x
k		SW 10 mm	2x
l		Ø 20 (Art.-Nr. 15161)	2x
m		Getowell M6	4x

Bitte kontaktieren Sie uns, wenn Sie PDC haben !!




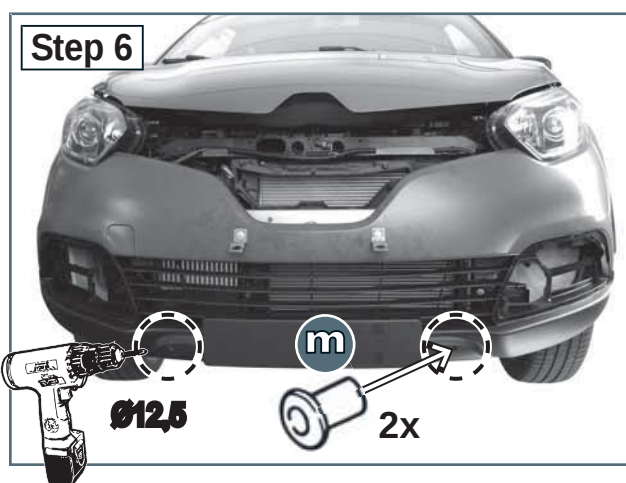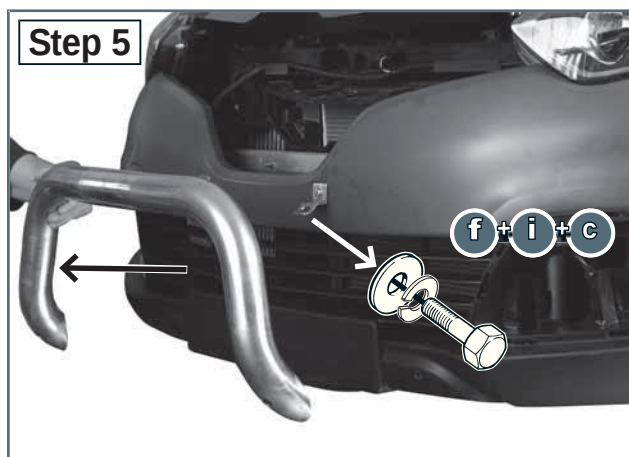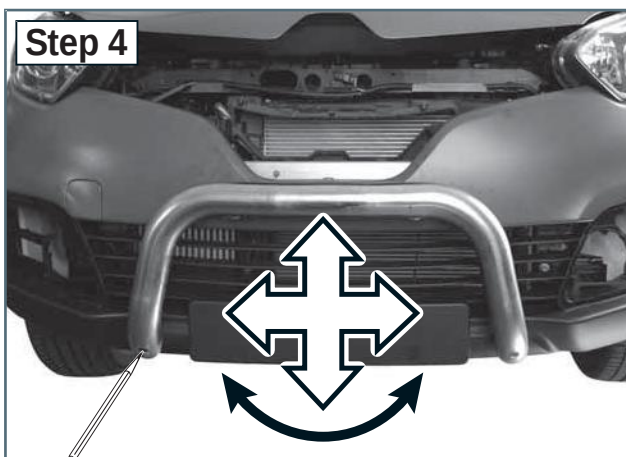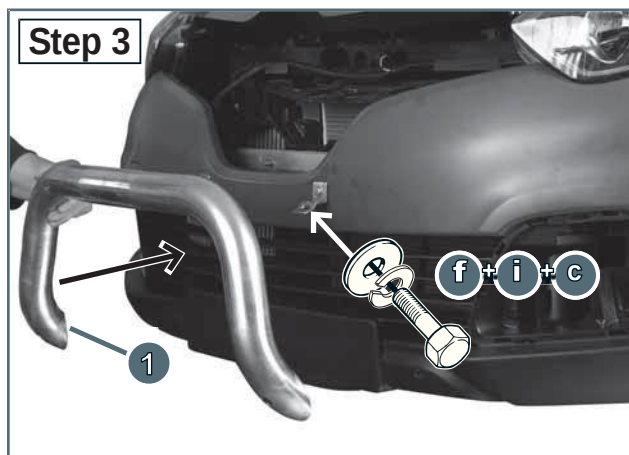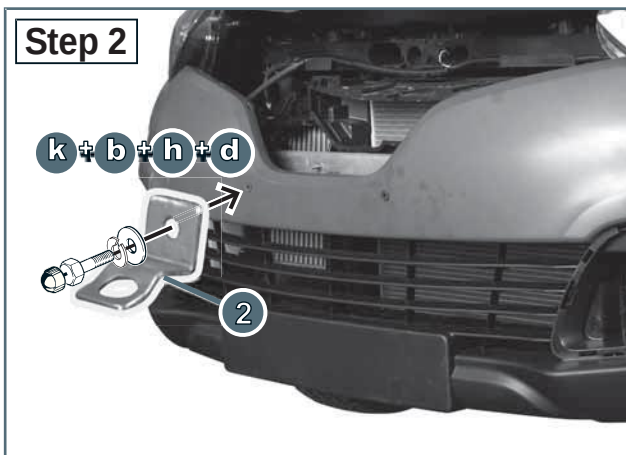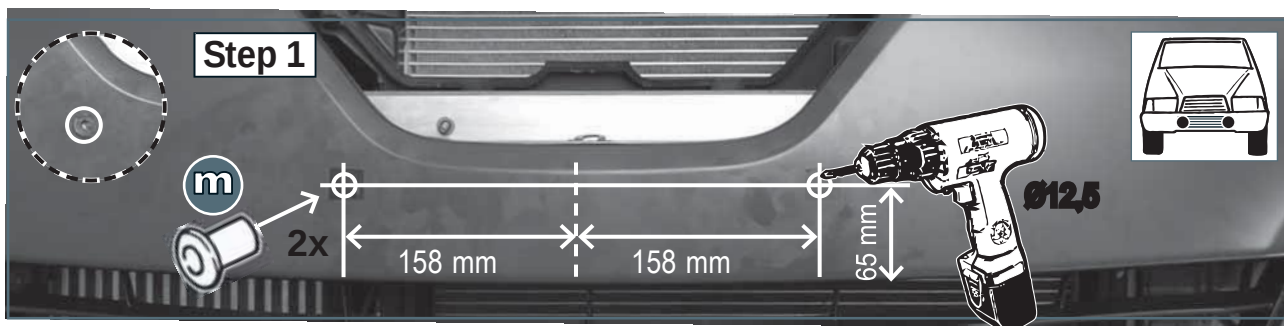

Step 7

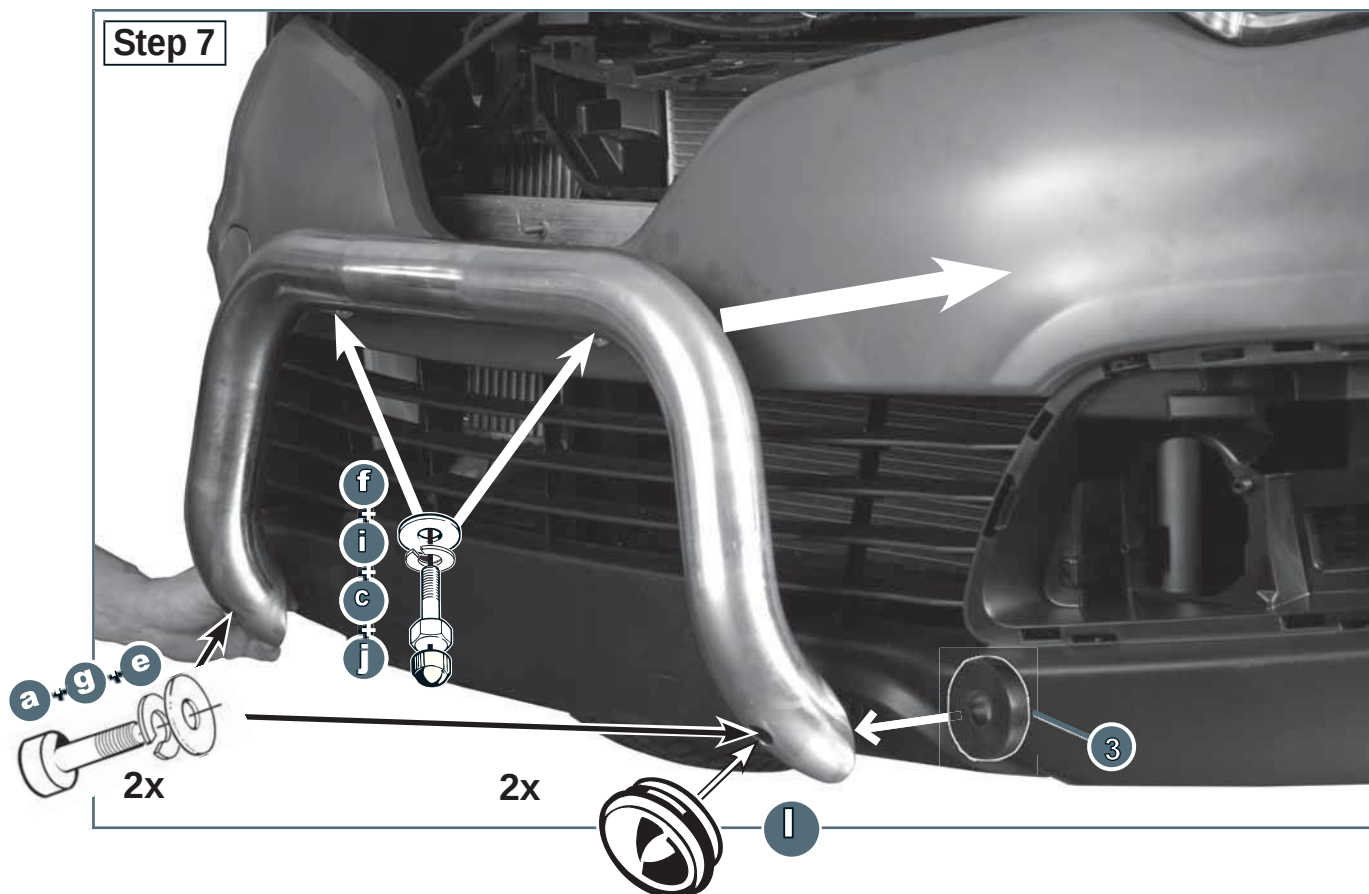

Step 8

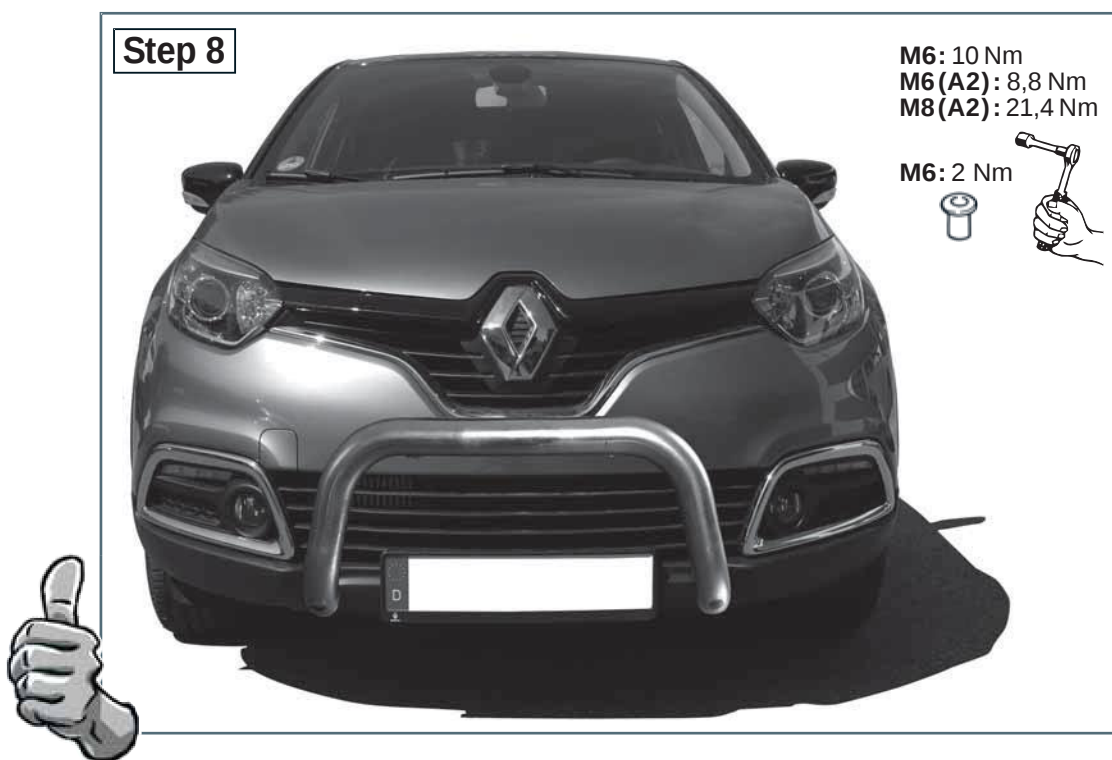

Revision 2: 05.03.2014



ULLSTEIN
CONCEPTS
 GMBH