

Renault Captur, Modell 2013

Parkrohr 42


Rear bumper protection 42

Protection de pare-chocs arrière 42



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

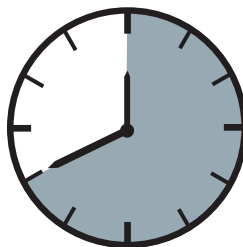


40 Minuten

Ullstein Concepts GmbH
Fesrtlstr. 15c
85445 Oberding
Teil. 089/809902880
www.UllsteinConcepts.com

Revision 1: 22.08.2013








ULLSTEIN
CONCEPTS
GMBH

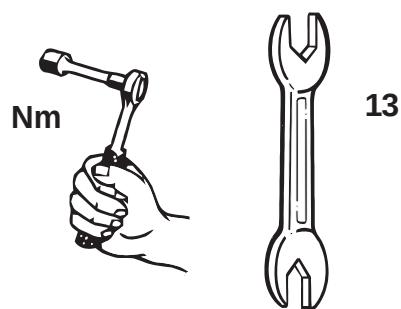

a		M8 x 25, DIN 933 Zn	2x
b		Ø 8,4, DIN 9021 Zn	2x
c		Ø 8, DIN 127 Zn	2x



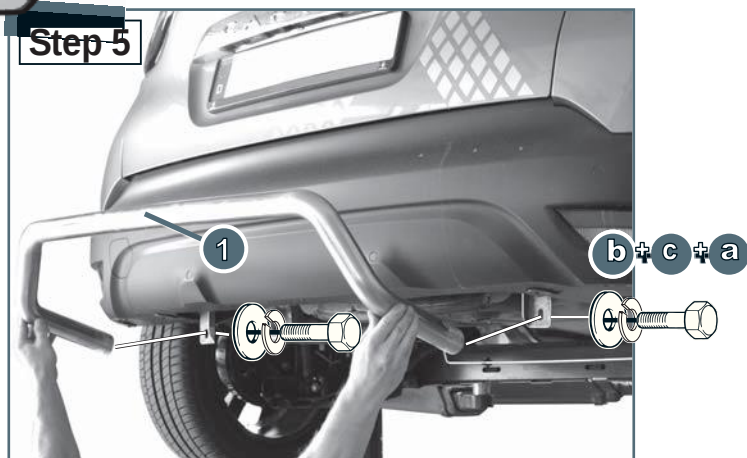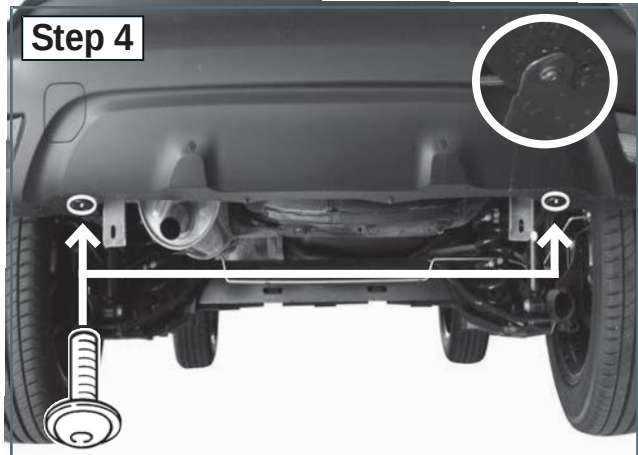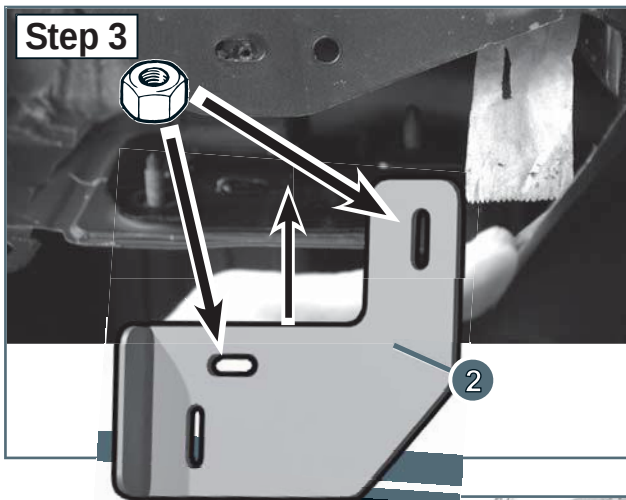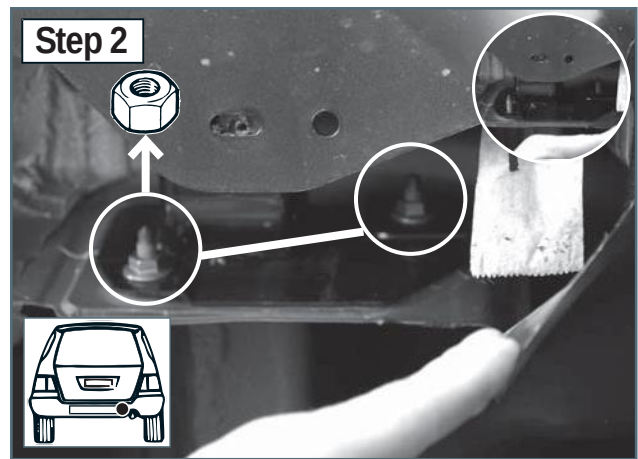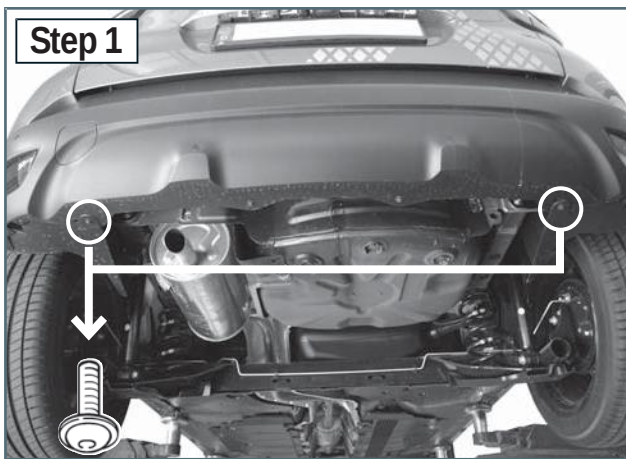

Revision 1: 22.08.2013



ULLSTEIN
CONCEPTS
GMBH