


INSTALLATION INSTRUCTION

AEROKLAS TAILGATE LIFT UP&DOWN FORD RANGER 11 / MAZDA BT-50 PRO 11



ULLSTEIN
CONCEPTS
GMBH


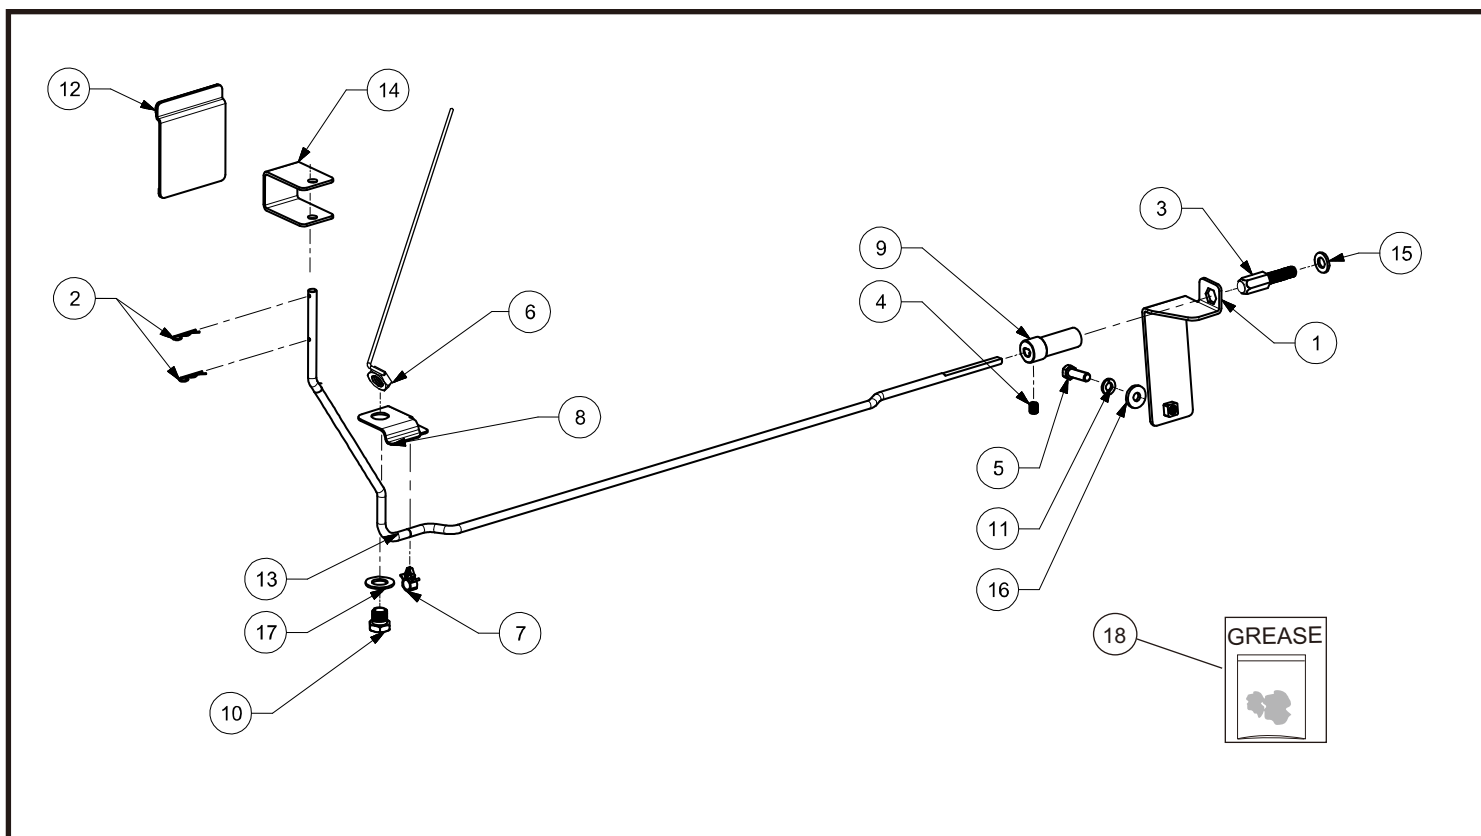


No.	Part Name	Part No.	Q'ty
1.	Bracket, Extension Bolt for Ford T6	-	1
2.	Clevis Pin R	-	2
3.	Extension Bolt M10x1.5xL35	-	1
4.	Socket screw M8x1.25xL10	-	1
5.	Hex Bolt M8x1.25x25 mm.	-	1
6.	Special Nut M14 for Ford T6	-	1
7.	Rod Holder (No.0356)	-	1
8.	Rod Holder Plate for Ford T6	-	1
9.	Shaft connector for Torsion Bar 8 mm. Tap M8x1.25	-	1
10.	Special Bolt M14x2xL13 for Ford T6	-	1
11.	Spring Washer M8	-	1
12.	Support Plate side 80x97x2 mm.	-	1
13.	Torsion Bar for Ford T6	-	1
14.	U-Bracket H50	-	1
15.	Washer M10	-	1
16.	Washer M8 Od22 THK 3 mm.	-	1
17.	Washer M14	-	1
18.	Grease	-	1

Installation Tools


1. Open-Ended Wrench No.12,13,19,22
2. Socket Wrench No. 13,14
3. Allen Wrench No. 4
4. Extension Socket
5. Wrench (Torx Head T30)

1

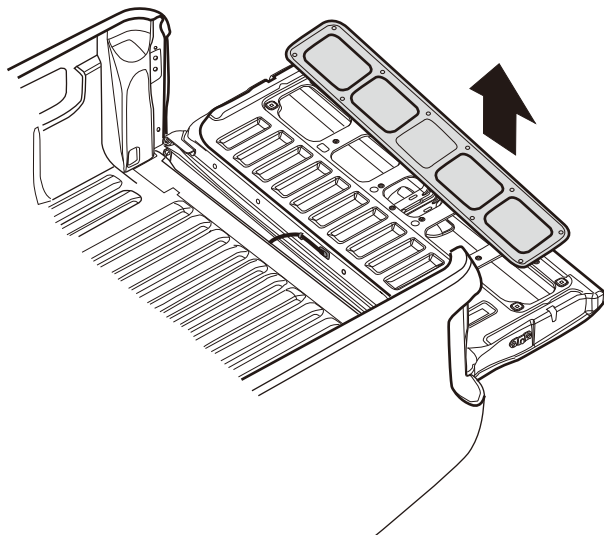


2

For Back Camera

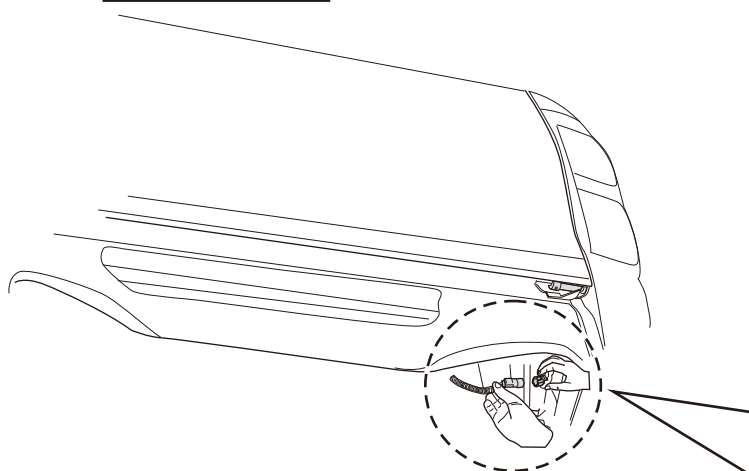


2.1

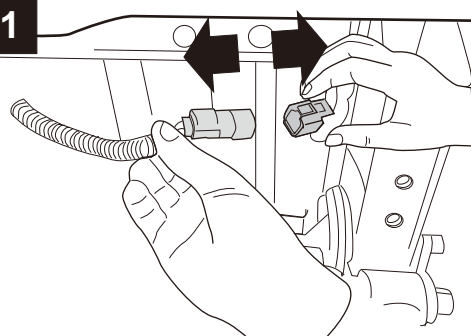

Remove wire the back camera under the truck



2.2

Truck

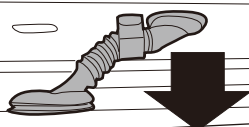

Tailgate

2.3

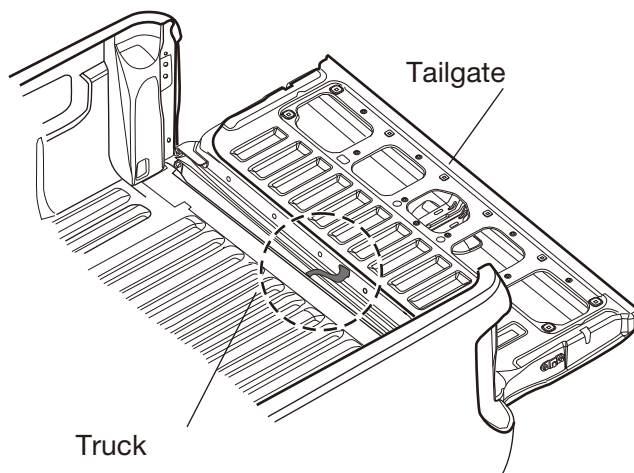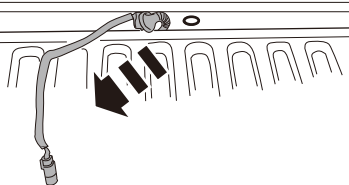

Truck



Tailgate




Remove wire the back camera under the truck

3


Remove screw at righthand side

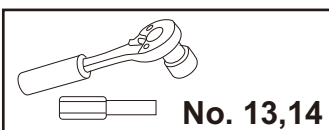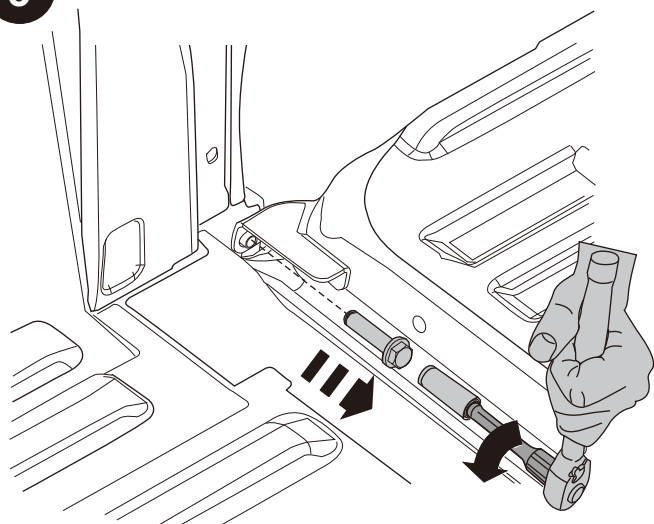


4

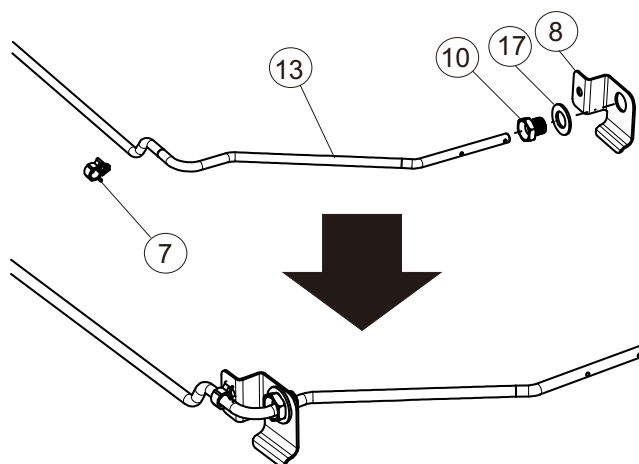


5

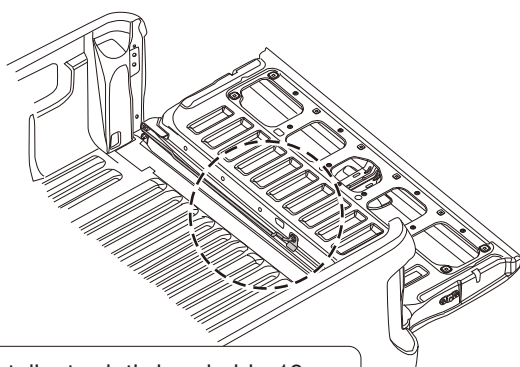


Lift up the tailgate righthand side 10 cm.
Put the end of torsion bar inside tailgate.

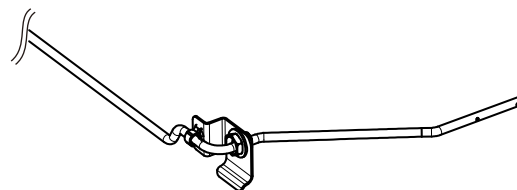

5.1

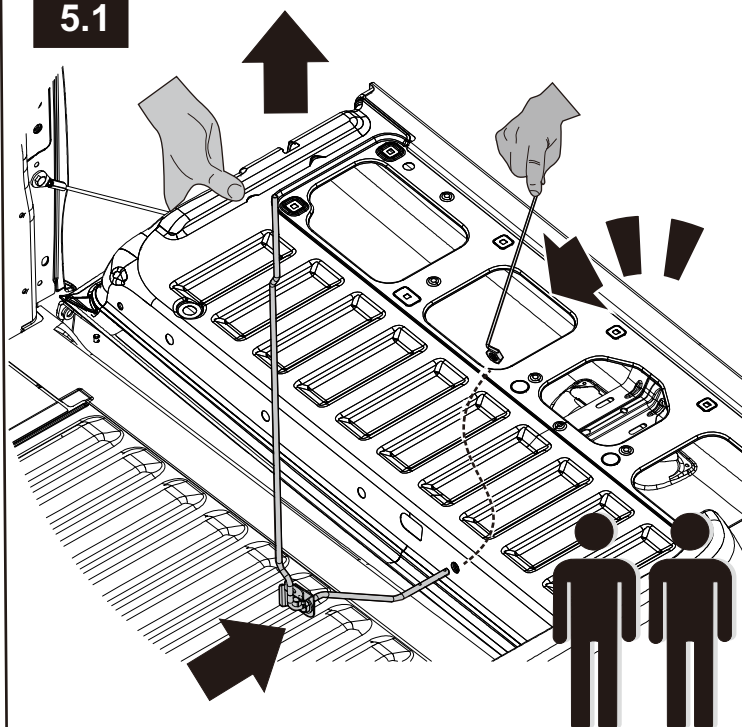


5.2

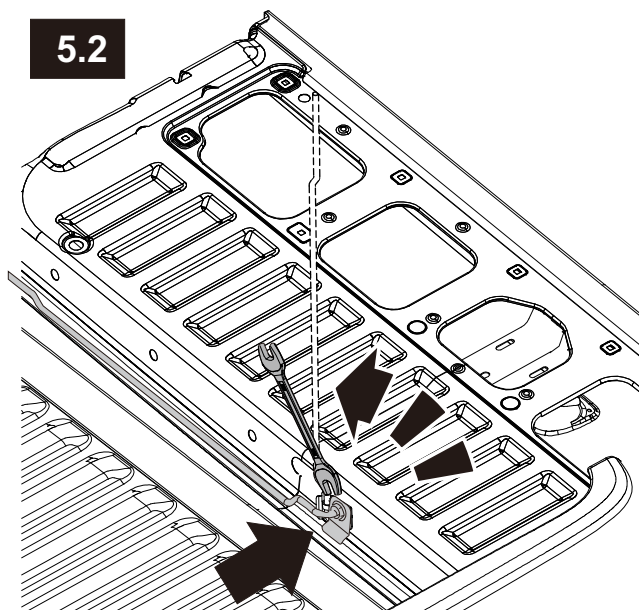


Torque = 8 Nm.



6

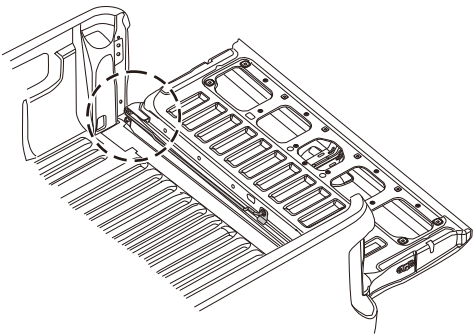



6.1



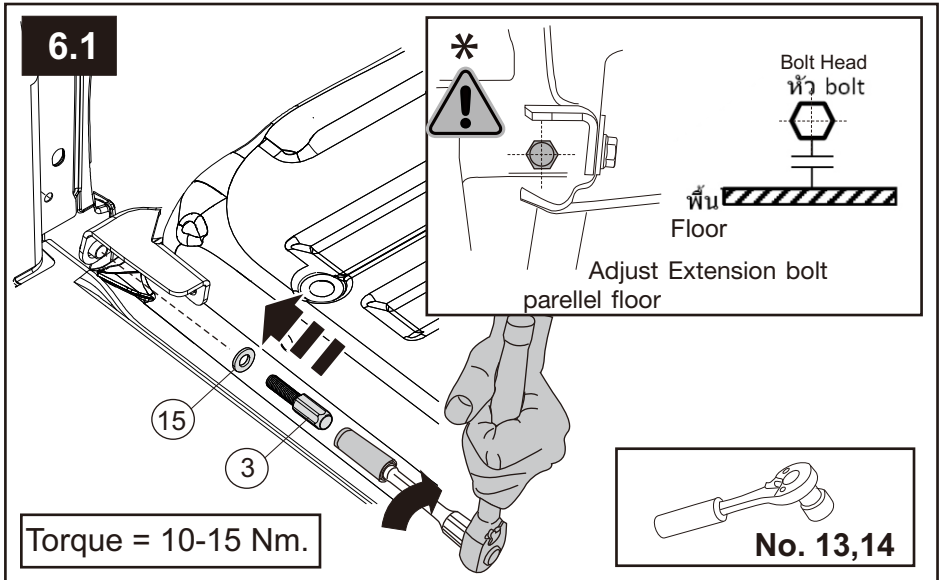


6.2

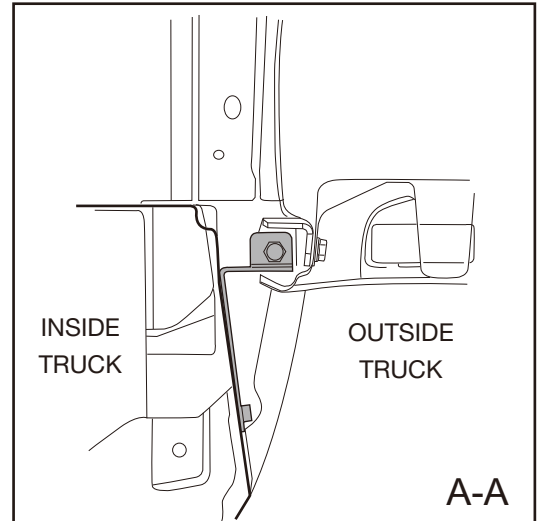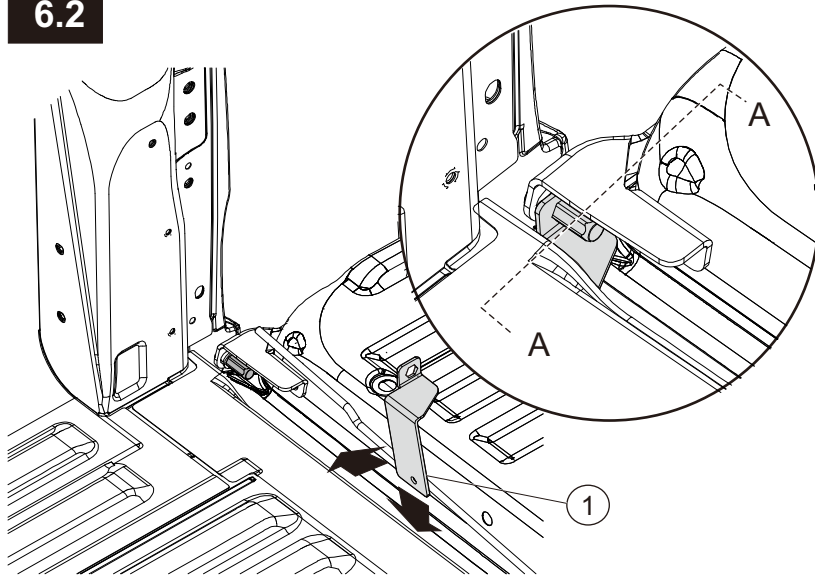


7

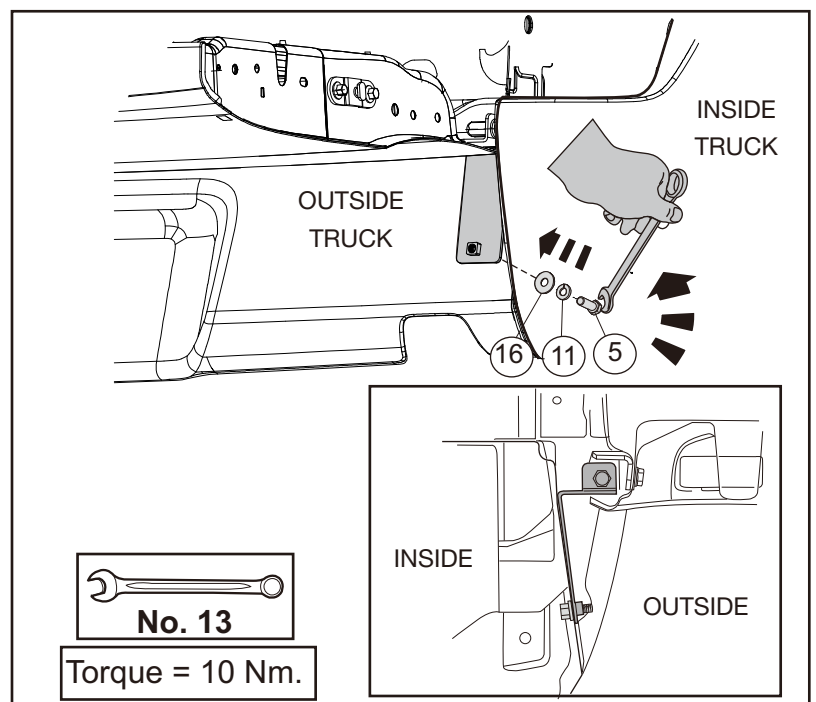
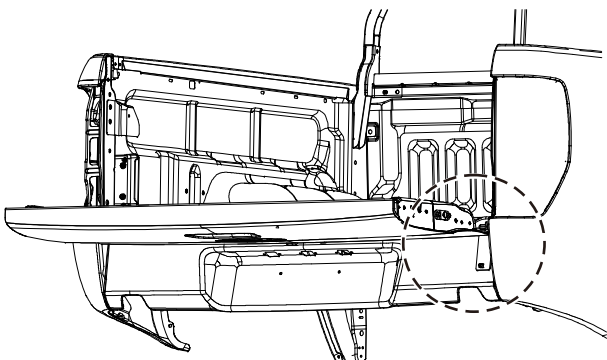


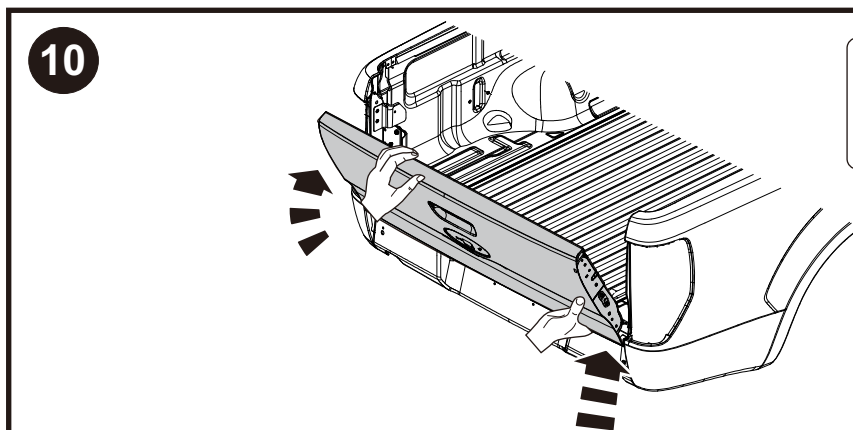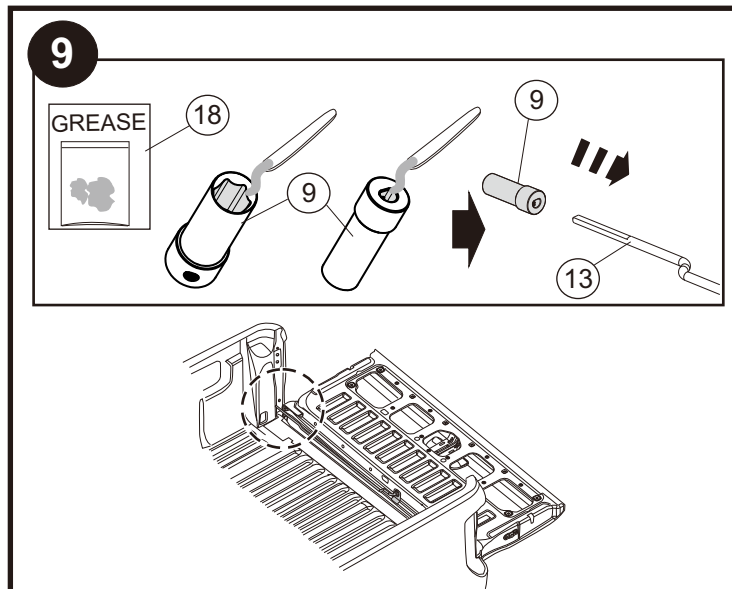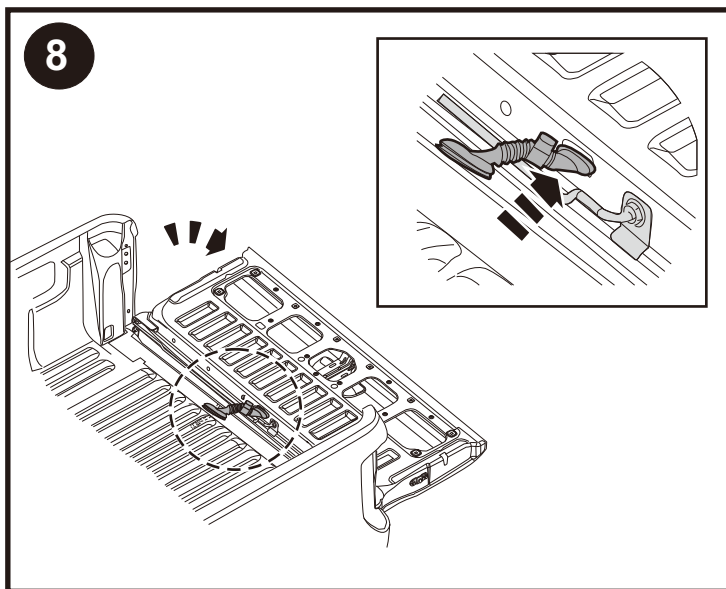

Close tailgate by one hand still hold
the end of torsion bar
Torsion bar

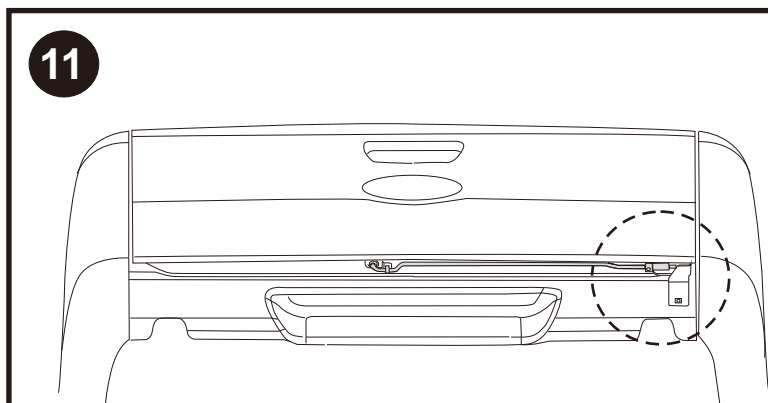

This step close the tailgate only

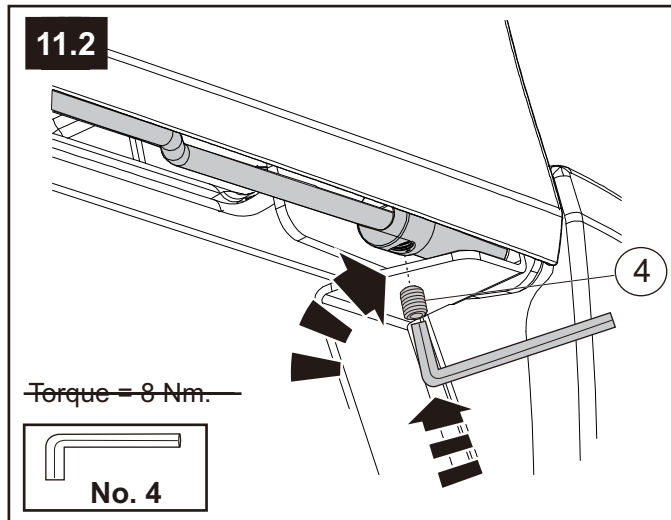
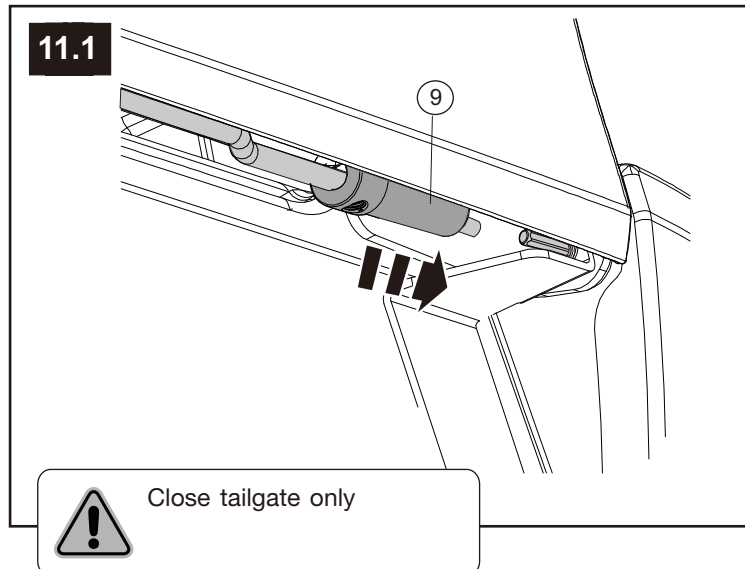


12

12.1



Remove tab tape

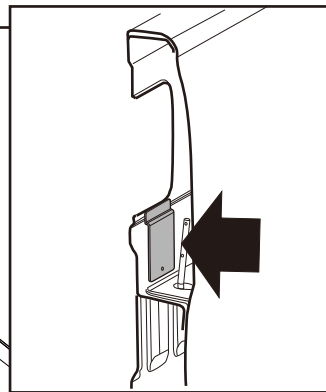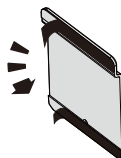

12



Beware oil/grease

12.2

2

12.3

14

12.4

2

13




No. T 30

INSTALLATION INSTRUCTION

AEROKLAS DAMPER FOR FORD RANGER 11 / MAZDA BT-50 PRO 11



ULLSTEIN
CONCEPTS
GMBH

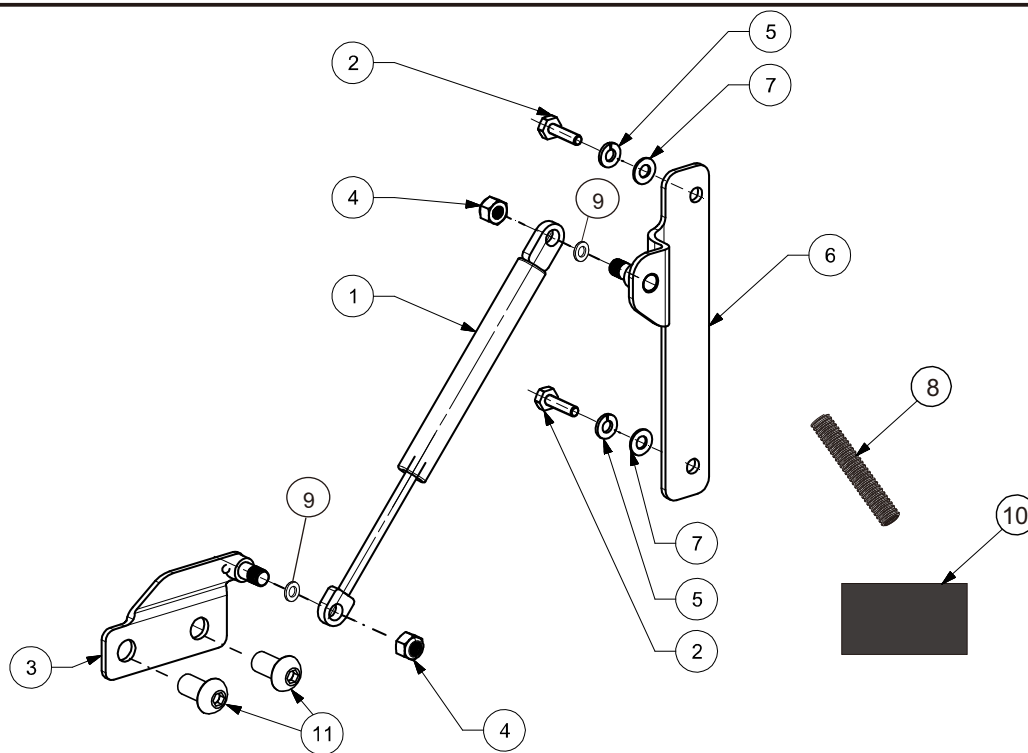


No.	Part Name	Part No.	Q'ty
1.	Damper	-	1
2.	Hex Bolt M6x1xL20	-	2
3.	Lower Support for Damper Ford	-	1
4.	Nylon Lock Nut M8	-	2
5.	Spring Washer M6	-	2
6.	Upper support for Damper Ford	-	1
7.	Washer M6	-	2
8.	PVC Flexible Corrugated Pipe	-	1
9.	Nylon Washer M8 (OD15x1.0 mm.)	-	2
10.	Aero Tape 35x50 mm.	-	1
11.	Socket button Head screw M10x1.5xL25	-	2


Installation Tools

1. Open-Ended Wrench No.10,13
2. Wrench (Torx head T50)
3. Socket Wrench No.6

1


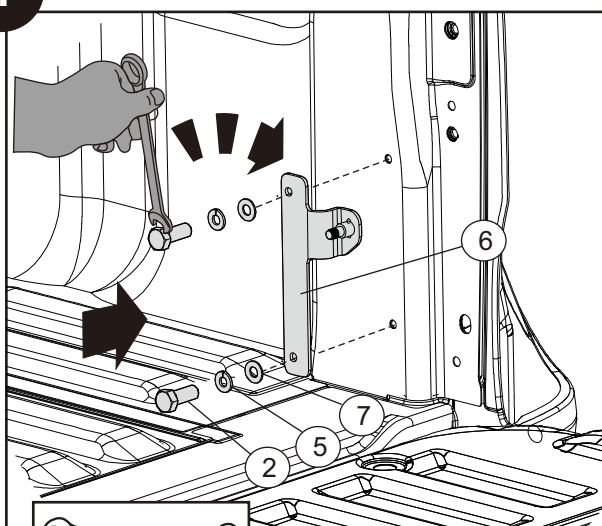


No. 10

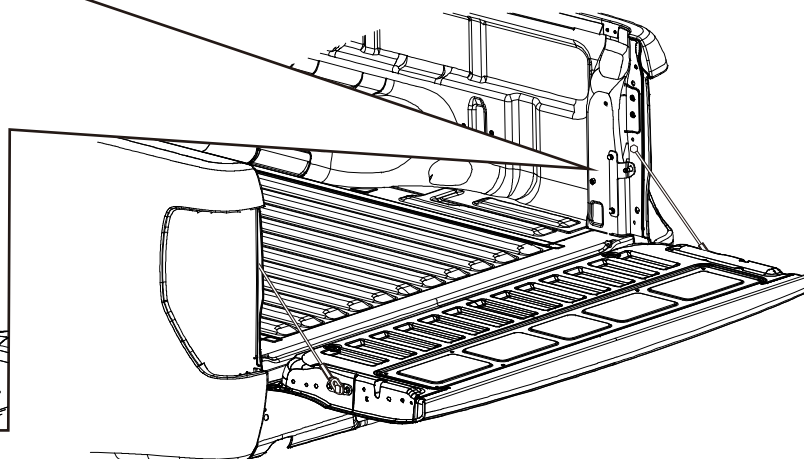


2

2.1

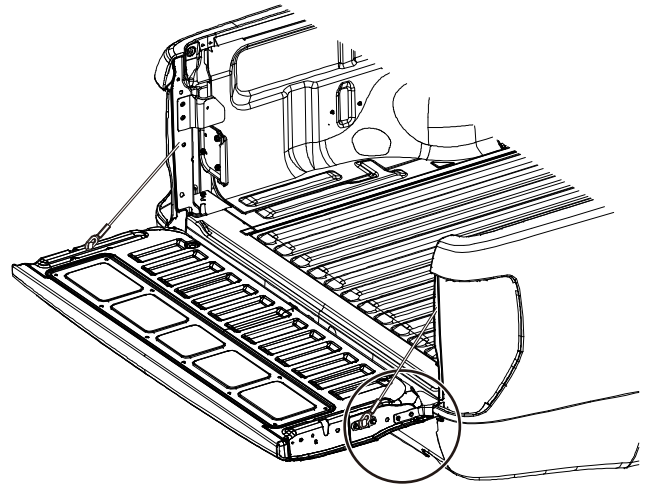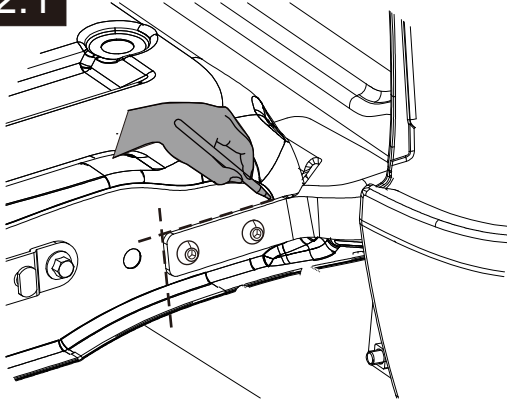


2.2

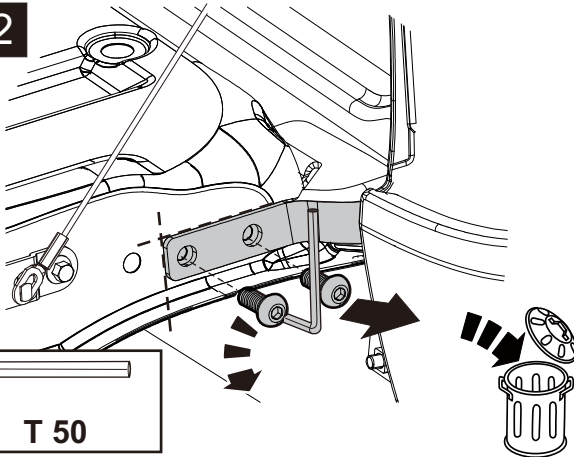


T 50

2.3


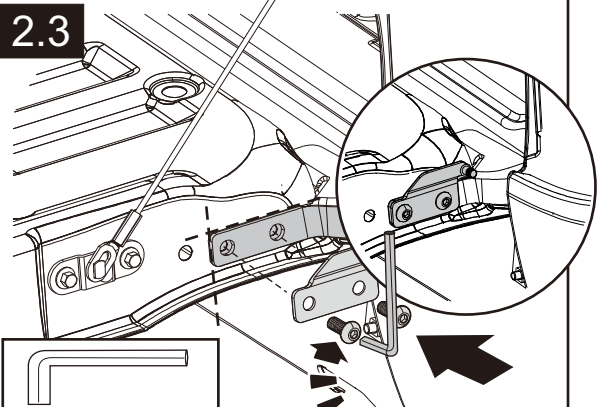


No. 6


3

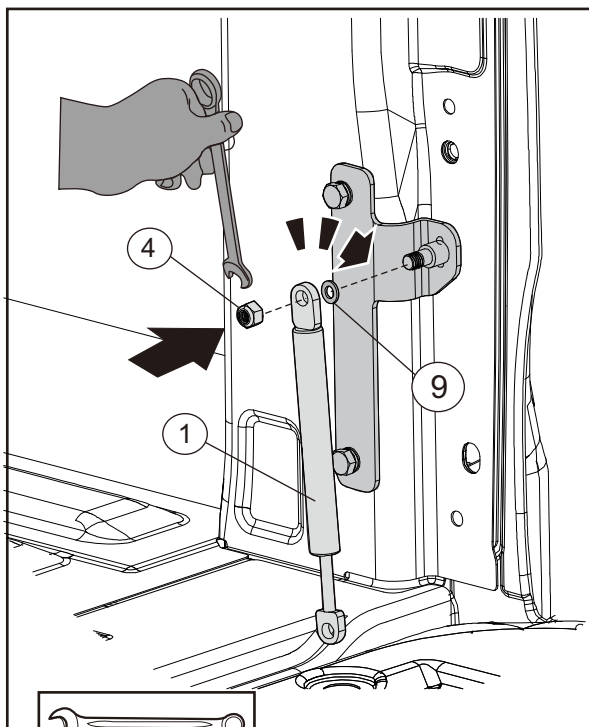

No. 13

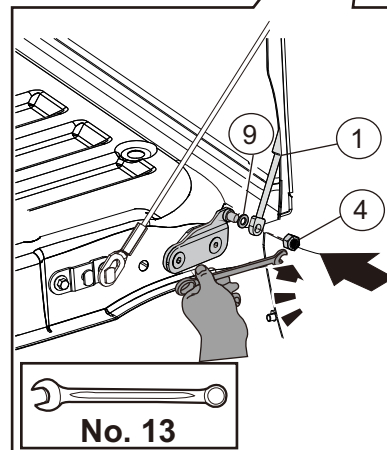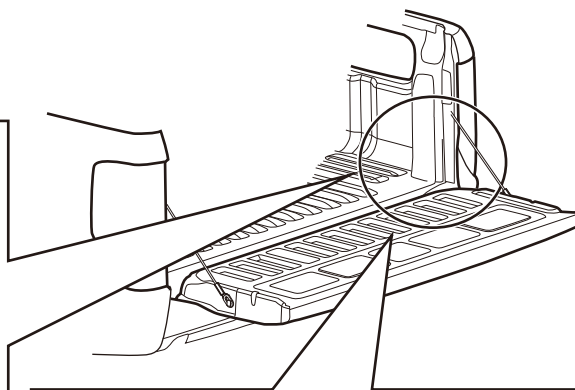

No. 13

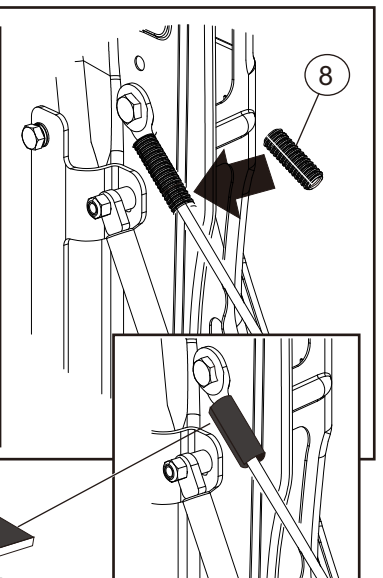

8

Aero Tape 35x50 mm