



MAKI48241621M

INSTALLATION INSTRUCTIONS

LED BAR KIT VOLKSWAGEN CRAFTER 2017-



MANY THANKS!

Thank you for choosing products from Strands. We offer everything for work vehicles, and on our website, you can find more information about our systems and products. For any questions, feel free to contact our sales team via strandseurope.com.

IMPORTANT TO CONSIDER!

Read the entire installation manual carefully before starting the assembly. Also, refer to your quotation to see how your interior should look when fully assembled. Carefully check under and inside the vehicle walls to avoid drilling into components such as the fuel tank, brake lines, fuel pipes, wiring, spare wheel, etc.

CONTENTS

Ensure that the following items are included in your order:

- 2x 10" led bars
- 1x Model-specific LED bar bracket, right center
- 1x Model-specific LED bar bracket, left center
- 1x Model-specific LED bar bracket, right side
- 1x Model-specific LED bar bracket, left side
- 1x Model-specific cutting template, right side
- 1x Model-specific cutting template, left side
- 2x Black M6/M8x14mm domed hex screw, 5mm Allen
- 2x Gray M6/M8x10mm cylindrical hex screw, 6mm Allen
- 6x Black PZ2 plastic screw

1

The yellow numbering refers to the order in which the assembly steps should be performed, with corresponding descriptions below.

strands[®]
-lighting division

1

Carefully cut an opening in the grille to fit the LED bar.


A: Attach the included orange cutting template and slide it toward the center. Cut off the horizontal bar next to the cutting template at the center and measure a distance of $L = 300$ mm. Then cut off the remaining vertical bars close to the edge.

2

Slide the center bracket toward the vehicle's logo from the side.

3

Fasten the bracket using the supplied screw.

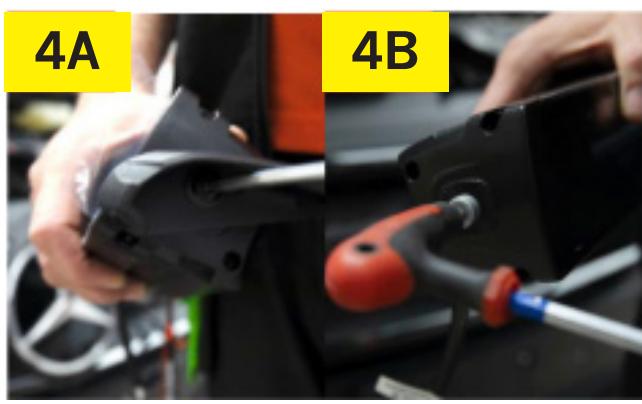4A**4B****5**


4A Fasten the outer bracket with the MXx14 hex screw without tightening it fully.

4B On the side facing the center of the light bar, screw the MXx10 hex screw all the way down.

Slide the side of the light bar with the MXx10 hex screw into the hole on the side of the bracket next to the vehicle's logo.



Fasten the side bracket using the supplied plastic screws. Push the light bar and bracket toward the center before tightening the screws.

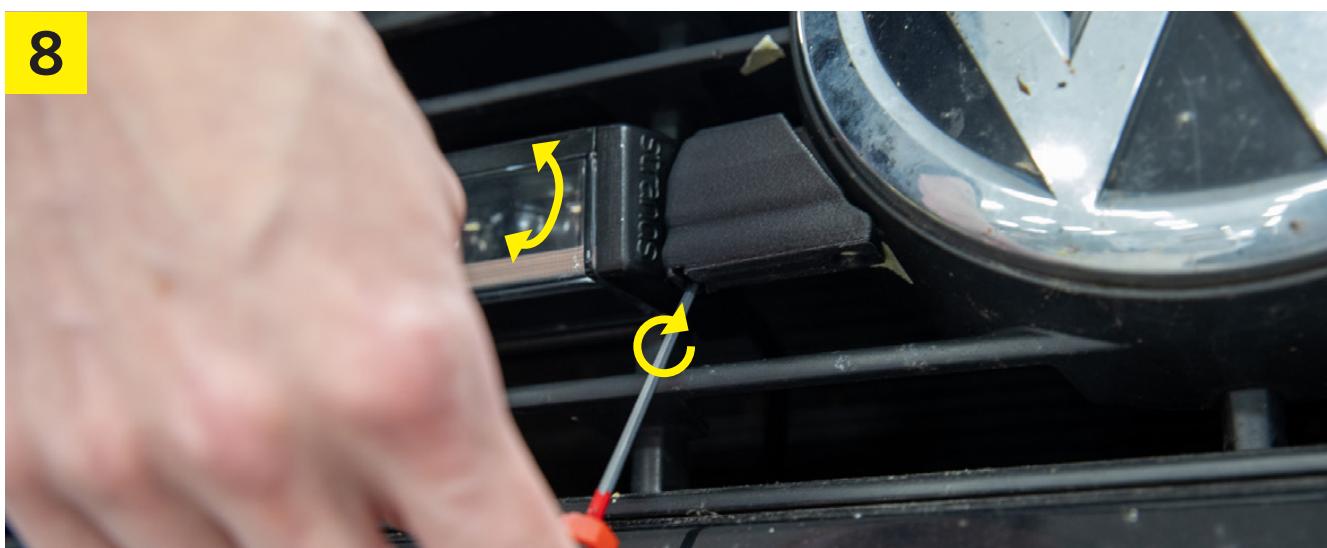

Adjust the angle of the light bar, then tighten the screw on the underside of the center bracket to lock the bar in place. Repeat all steps on the other side.



Connect the light bars and check that everything is correctly installed and securely connected.