Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

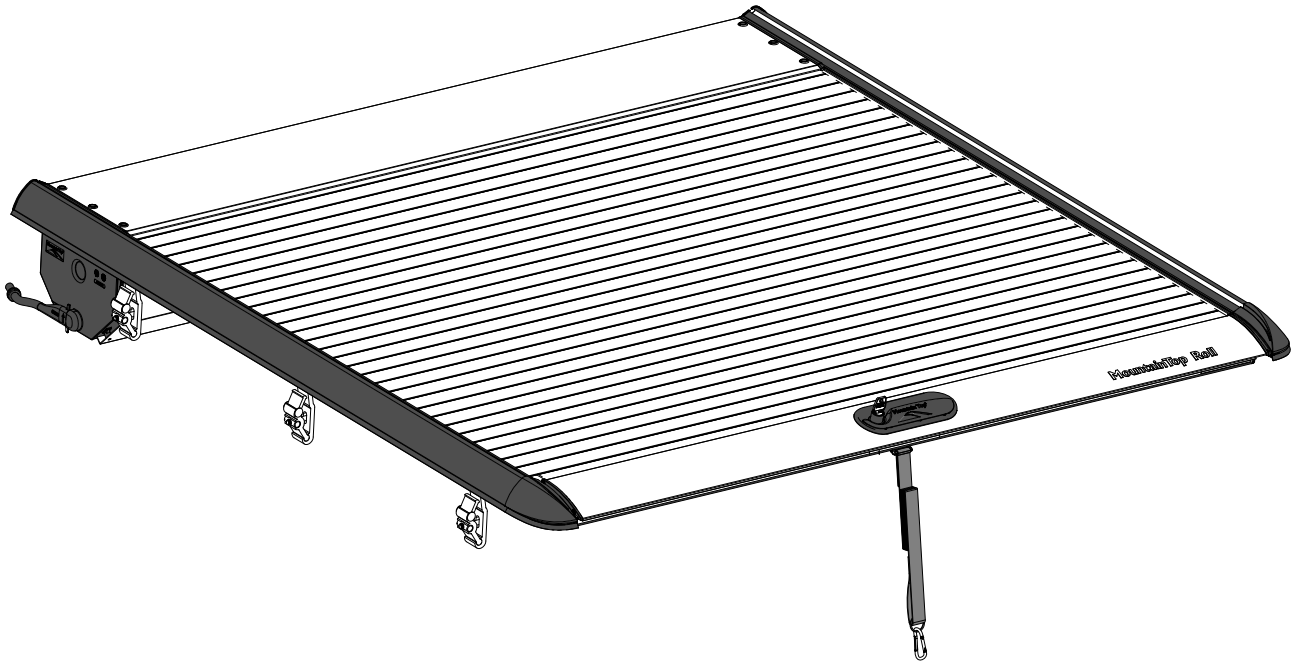

GR	Installation instruction Mountain Top Roll	S	Monteringsanvisning Mountain Top Roll
D	Einbauanleitung Mountain Top Roll	SF	Asennusohje Mountain Top Roll
E	Instrucciones de montaje Mountain Top Roll	CZ	Návod k instalaci Mountain Top Roll
F	Notice de montage Mountain Top Roll	H	Szerelési utasítás Mountain Top Roll
I	Istruzioni de montaggio Mountain Top Roll	PL	Instrukcja montażu Mountain Top Roll
P	Instruções de instalação Mountain Top Roll	GR	Οδηγίες Εγκατάστασης Mountain Top Roll
NL	Installatie-instructies Mountain Top Roll	RUS	Инструкция по установке Mountain Top Roll
DK	Monteringsvejledning Mountain Top Roll	TR	Montaj Talimatı Mountain Top Roll
N	Monteringsveiledning Mountain Top Roll	RO	Instructiuni de instalare Mountain Top Roll

Model Year:	2011 →	
Part Number:	MTR FO90 A01	Double cab
	MTR FO91 A01	Super cab
Weight:	31 / 36 kg	
Installation Time:	1 hr	

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	1 /19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

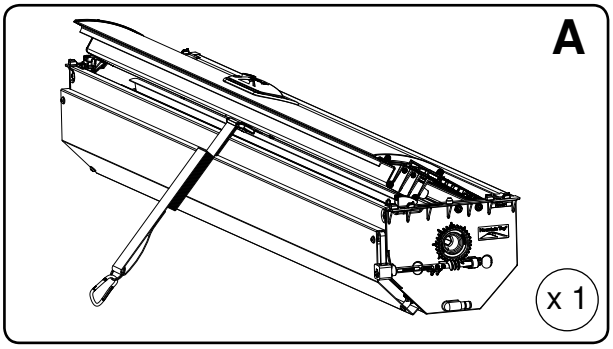

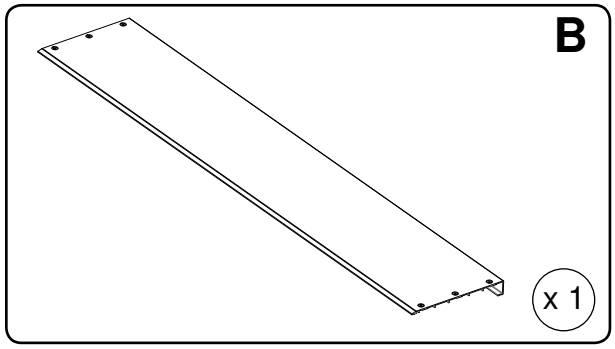

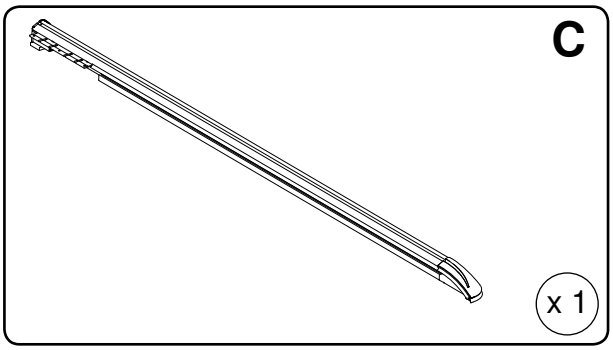

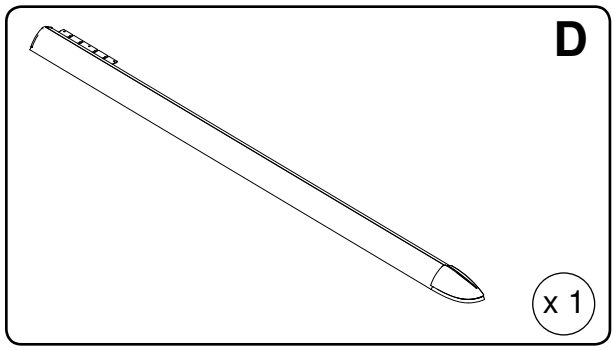

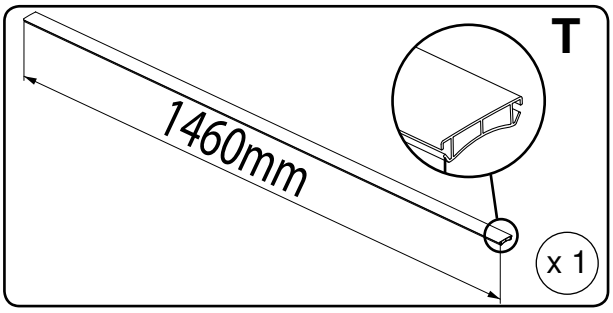

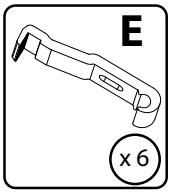

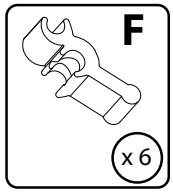

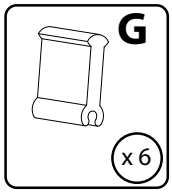

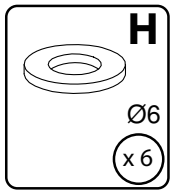

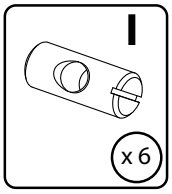

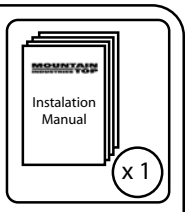

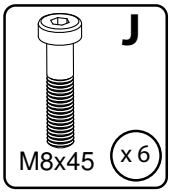

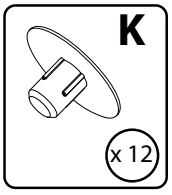

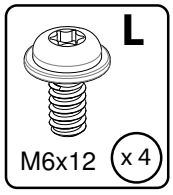

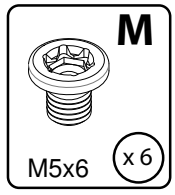

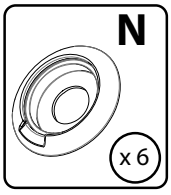

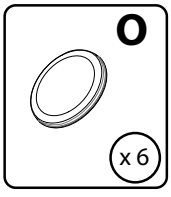

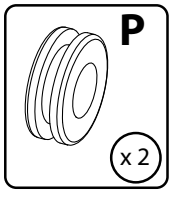

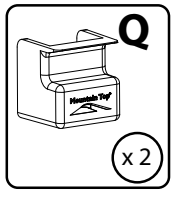

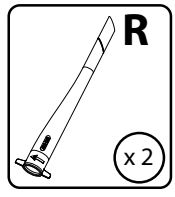

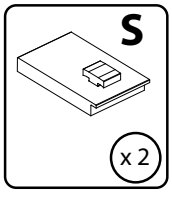

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

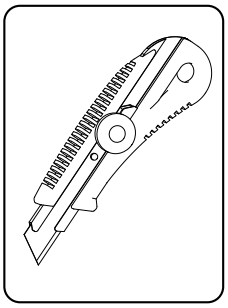

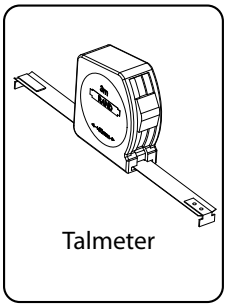

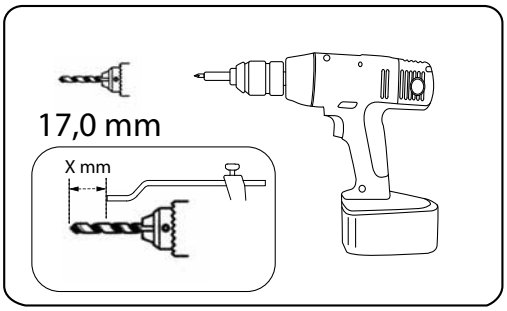

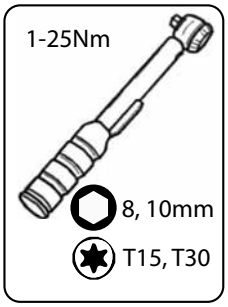

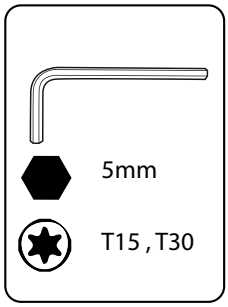

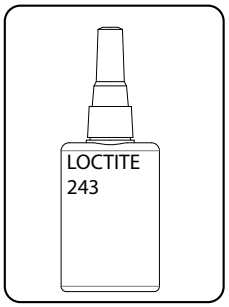

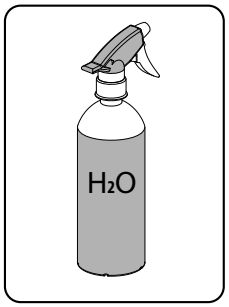

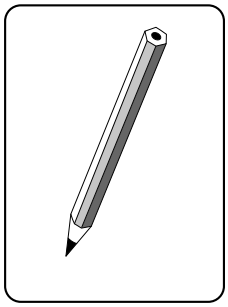

Ø 17mm

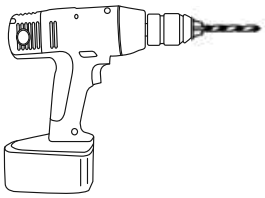

+

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

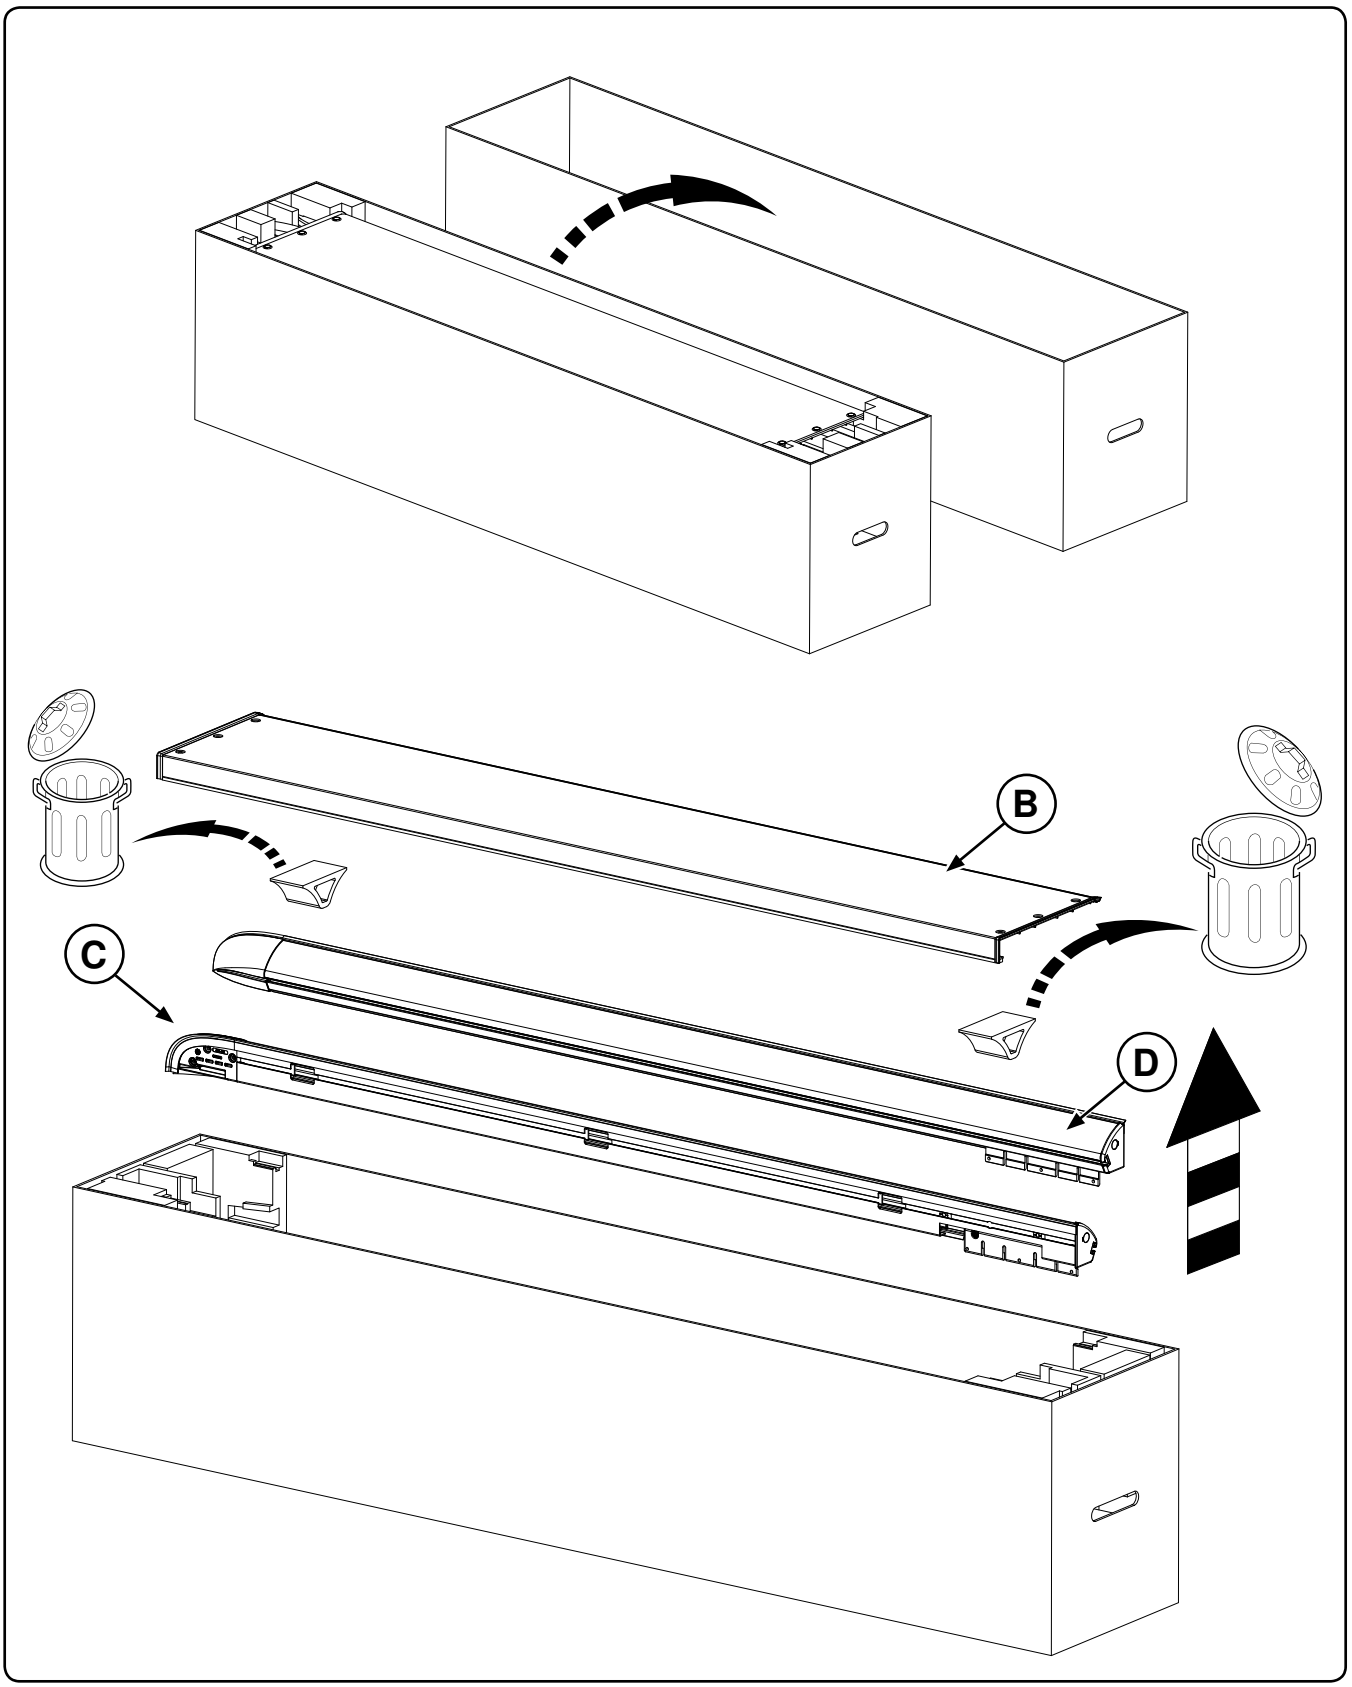

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

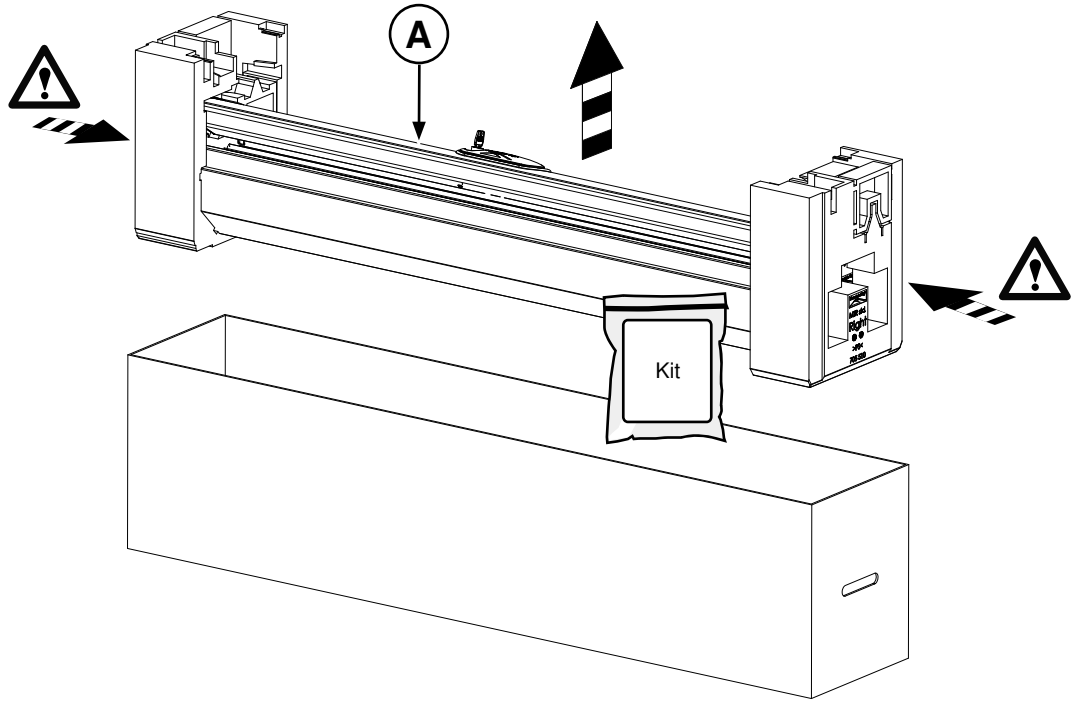

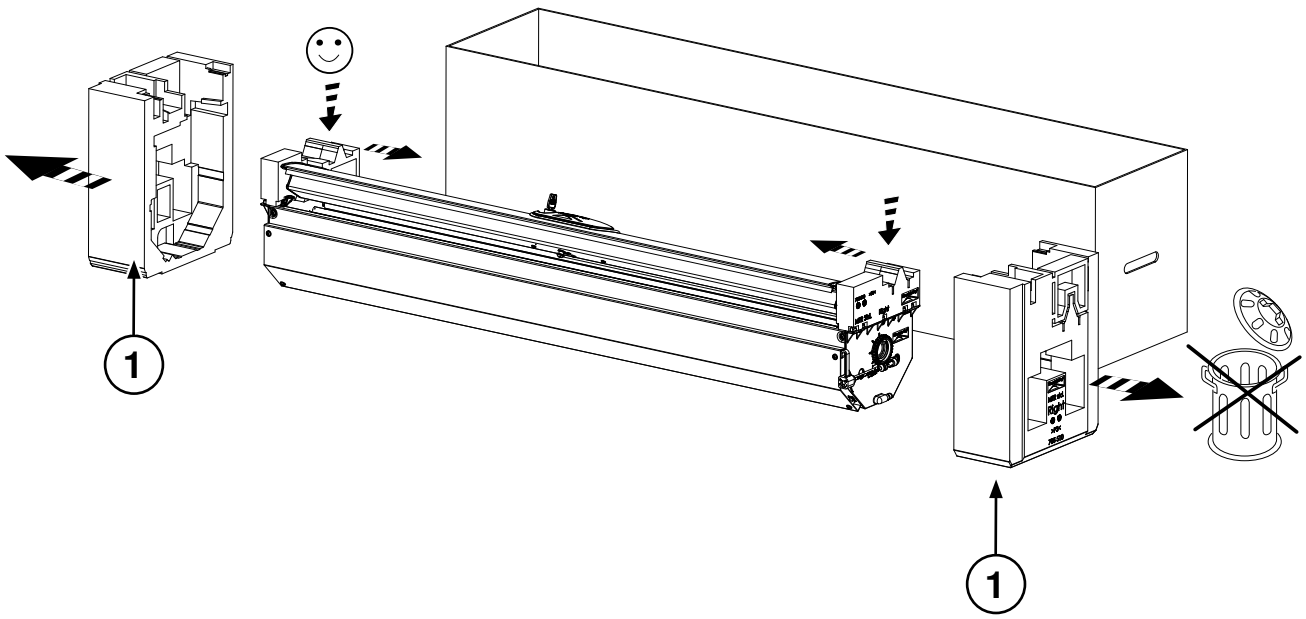

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	5 /19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

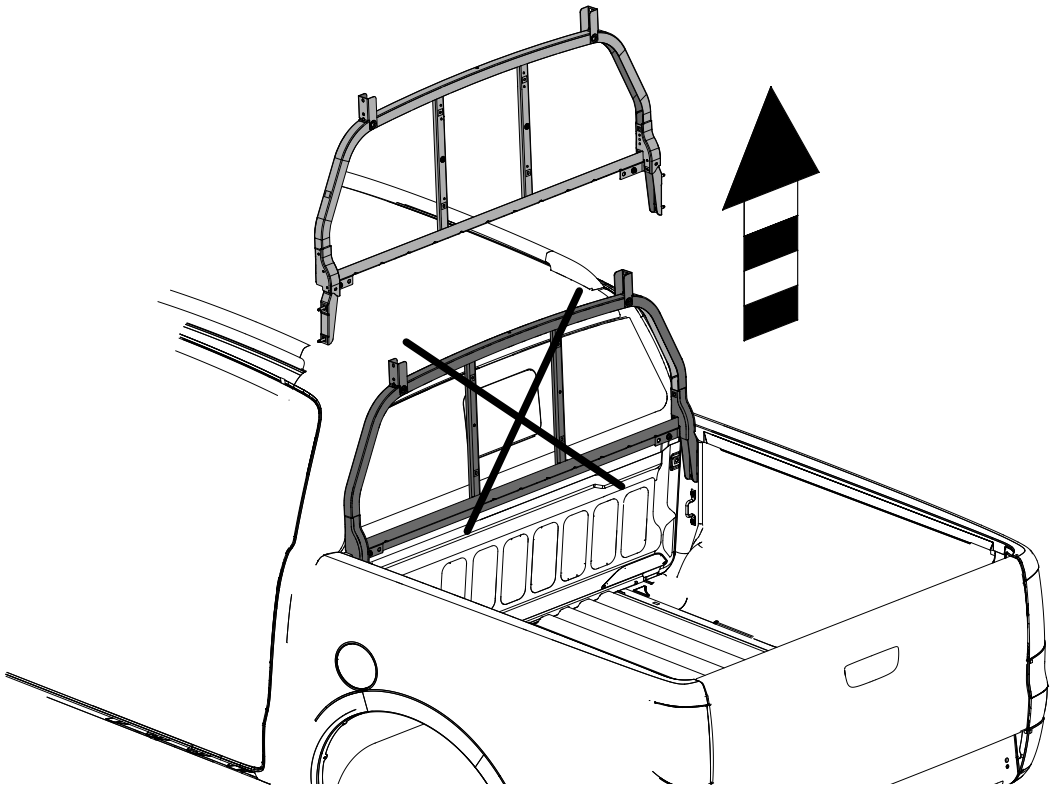

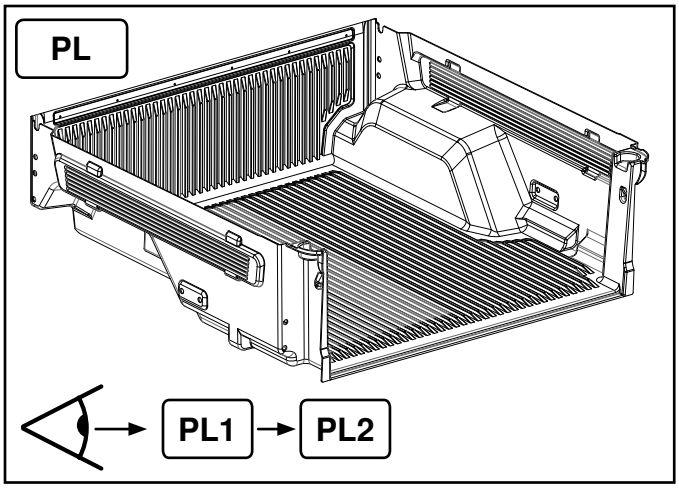

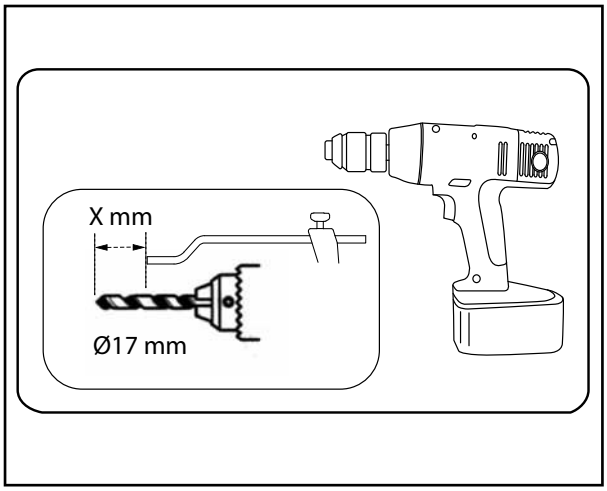

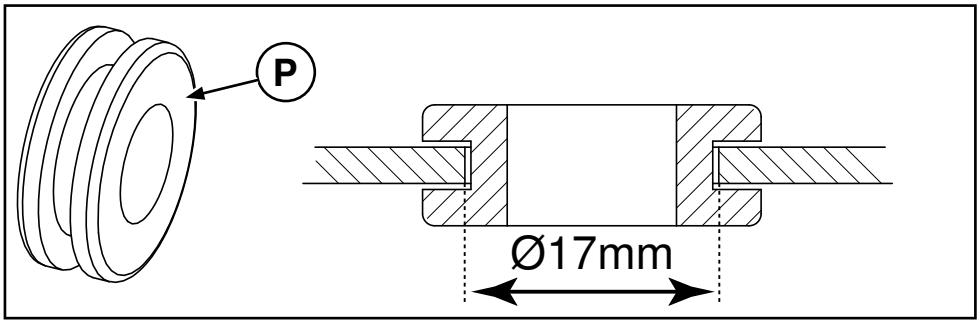

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

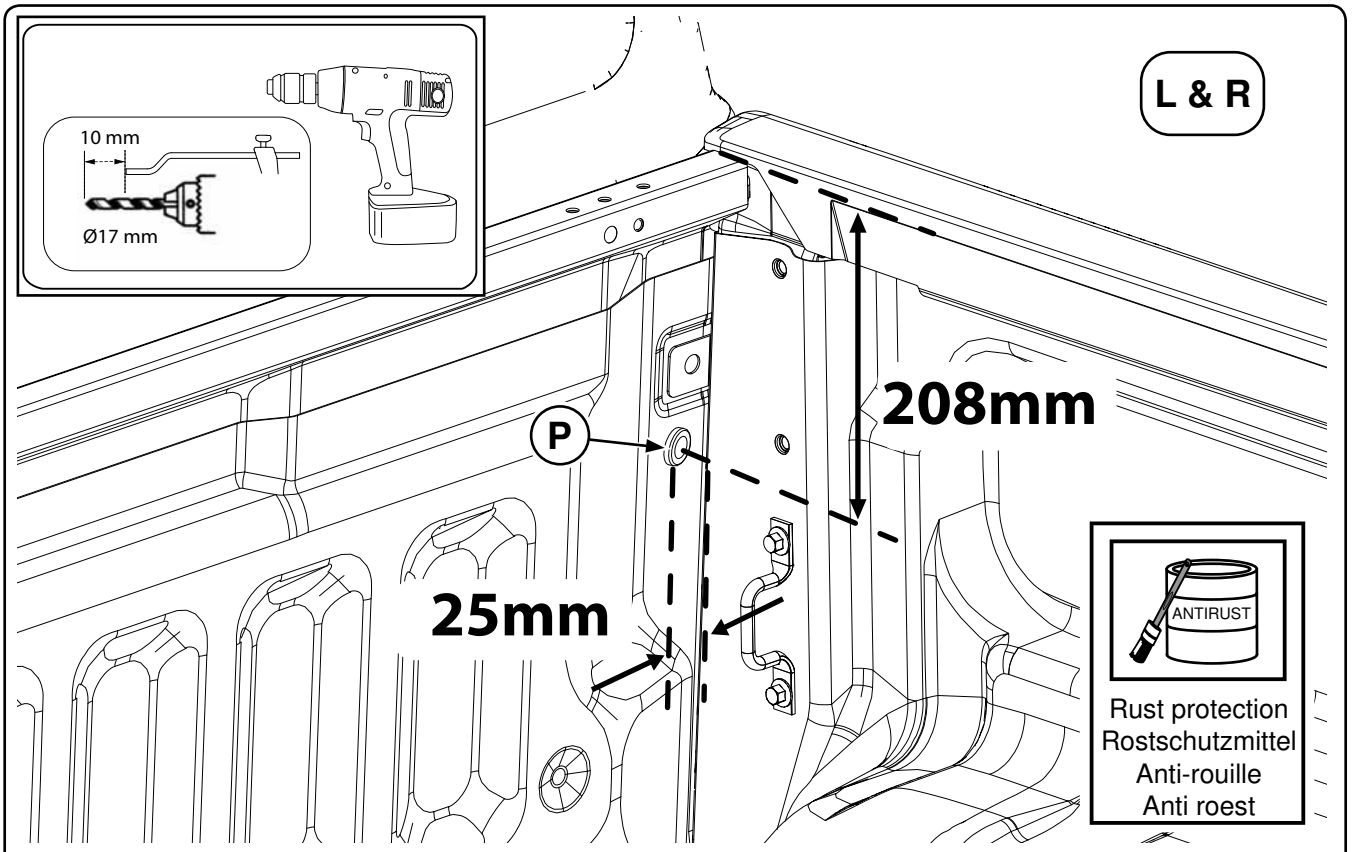

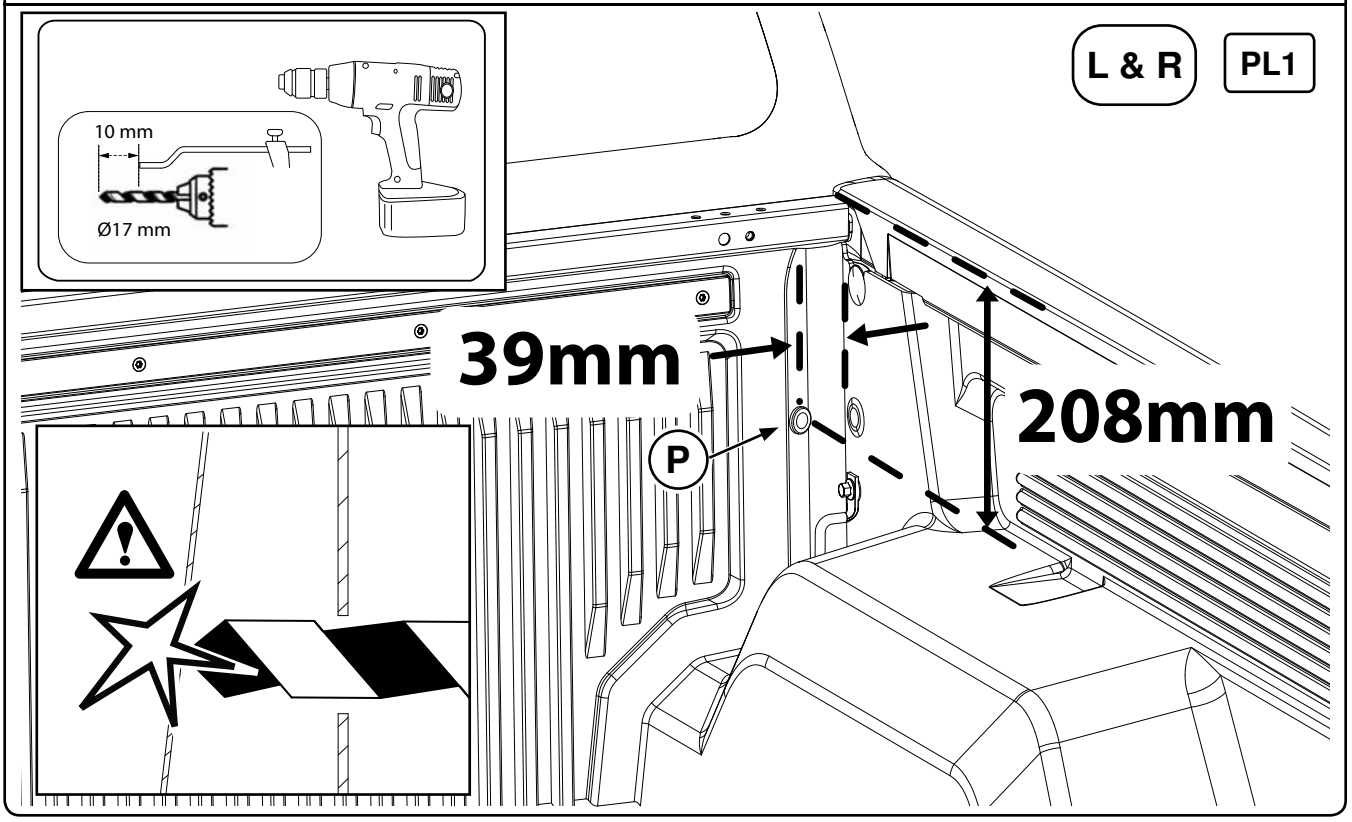

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

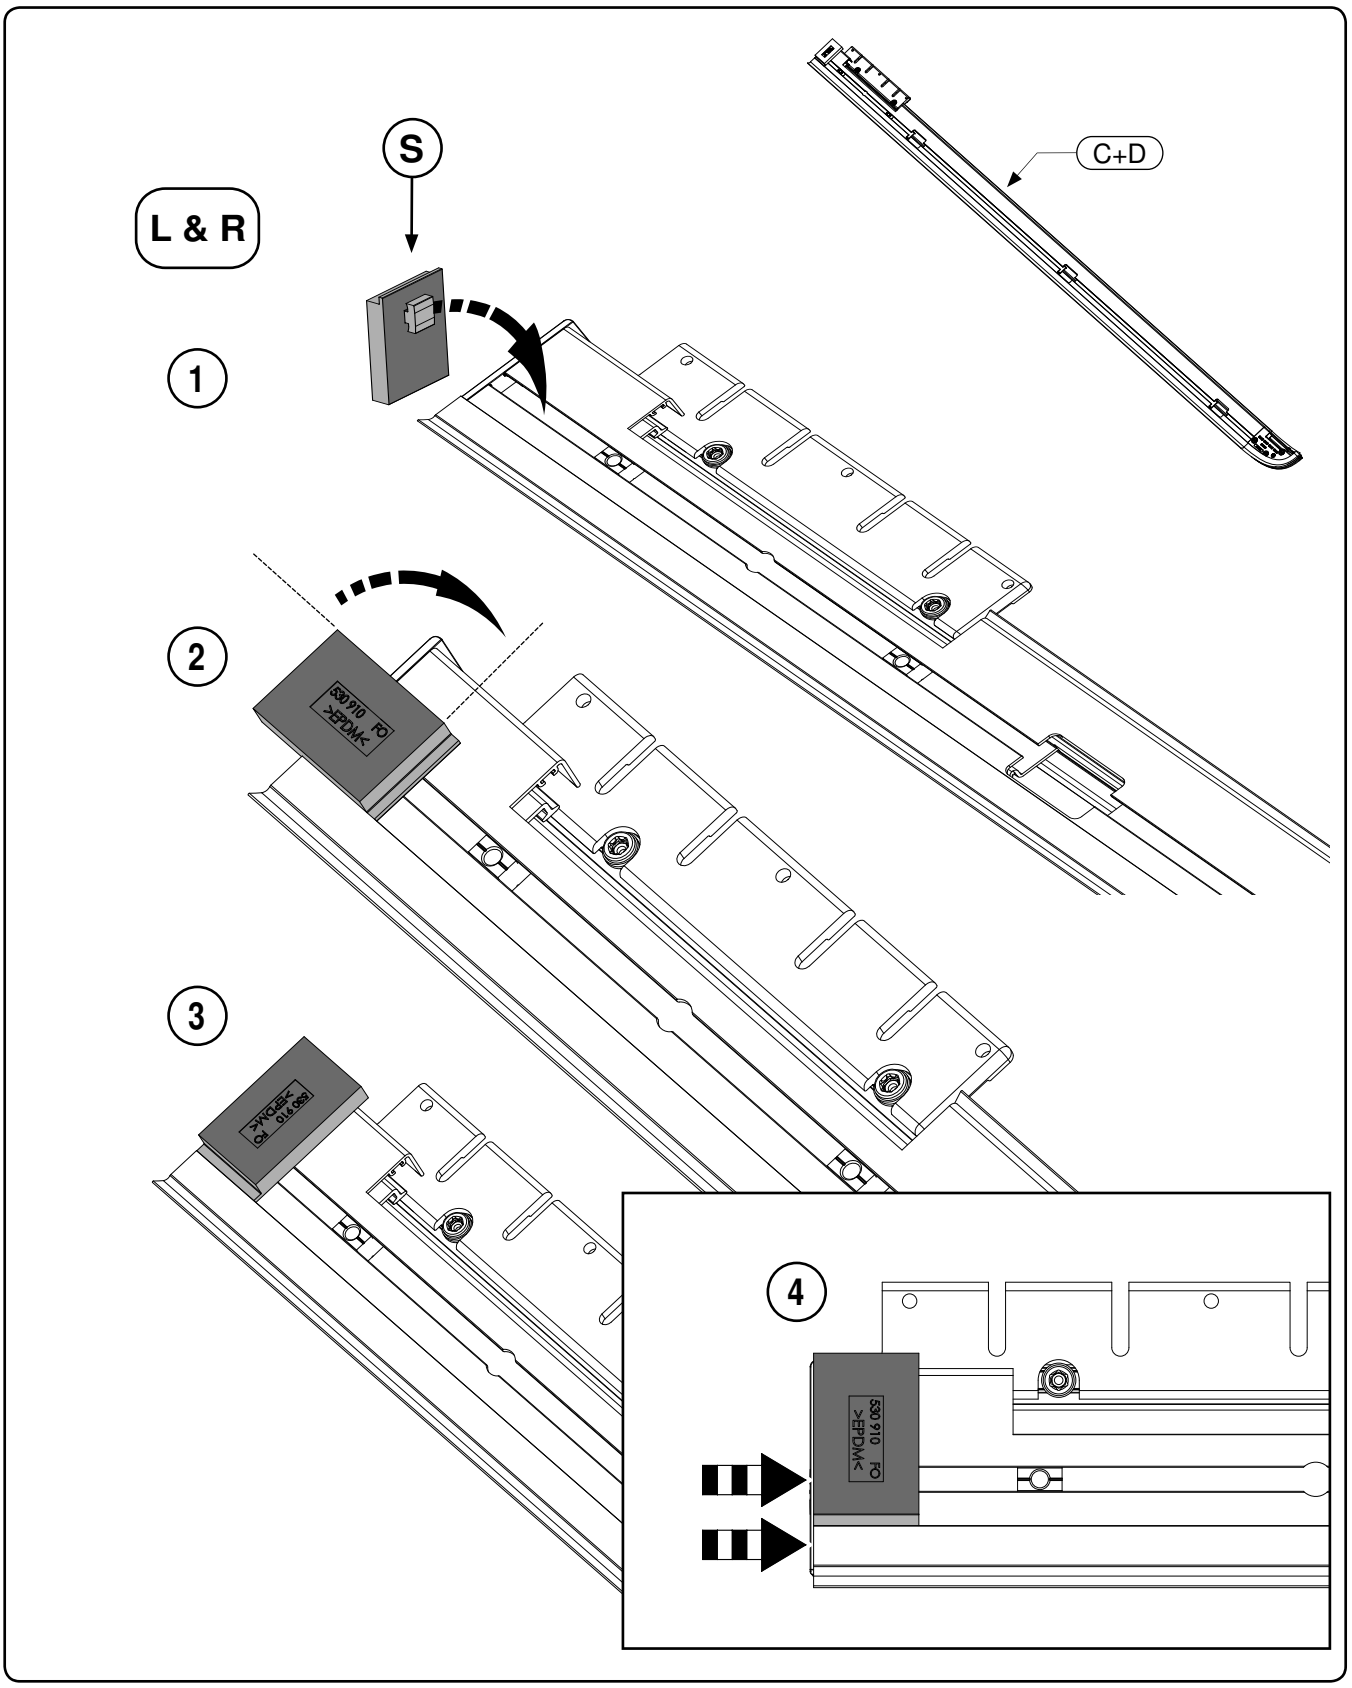

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	8 /19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

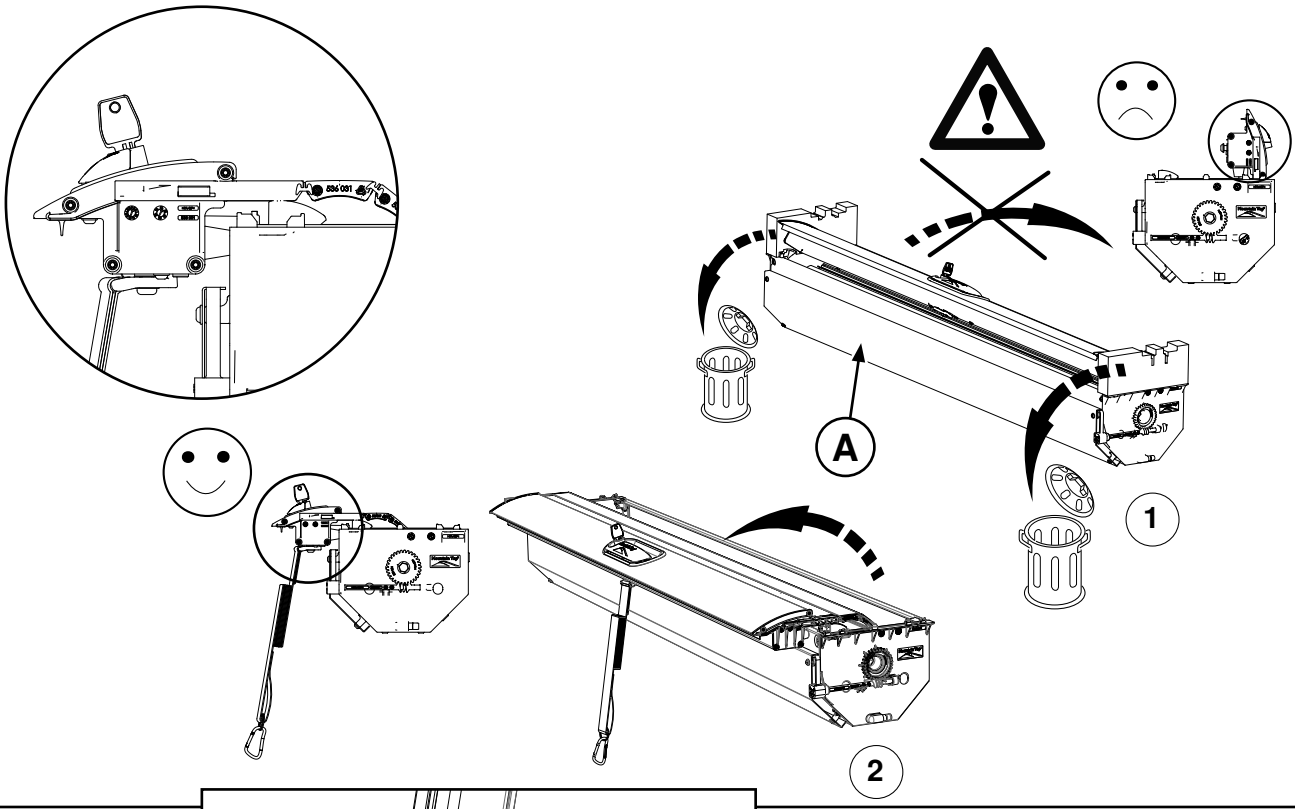

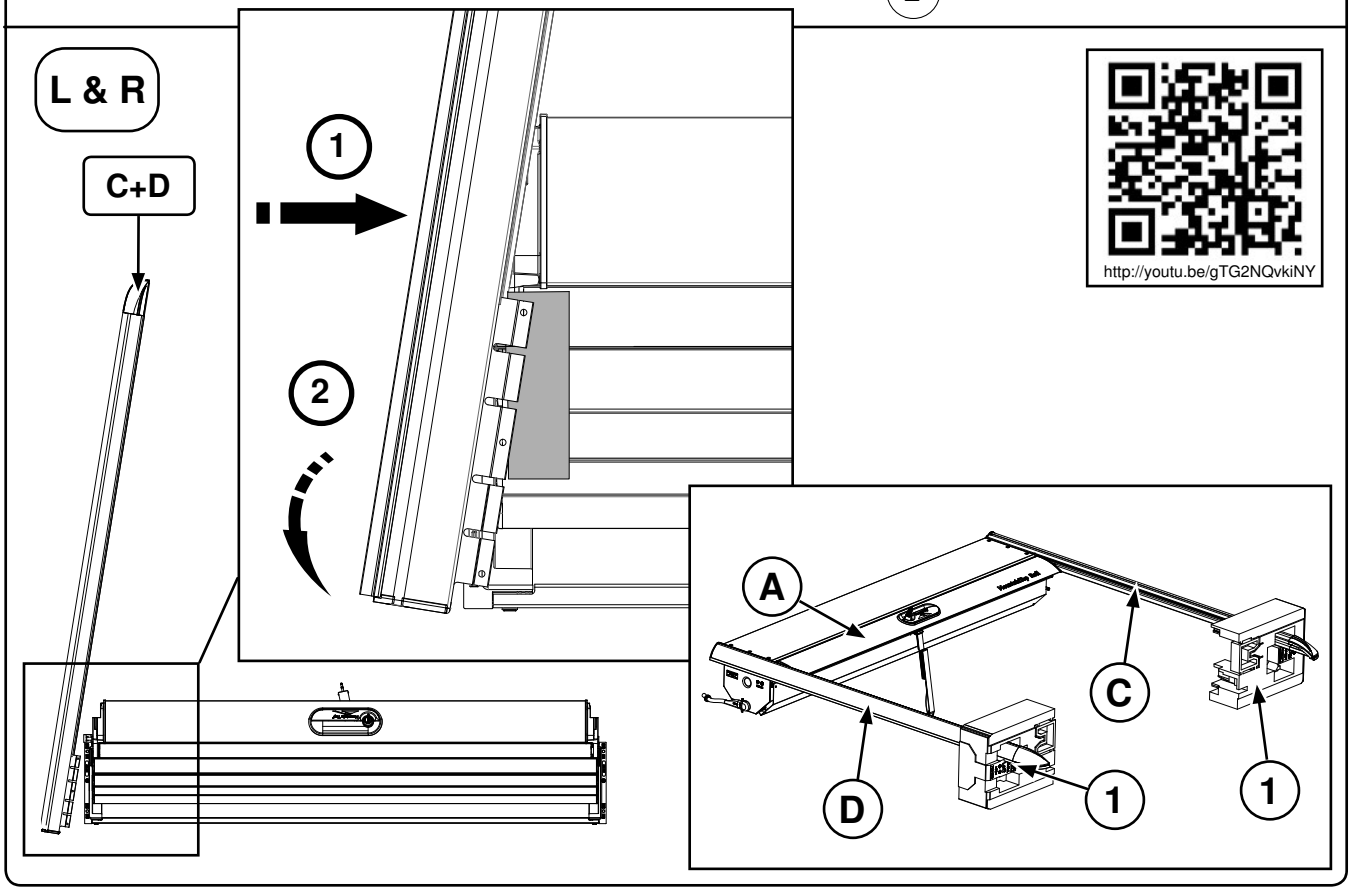

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	9 /19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

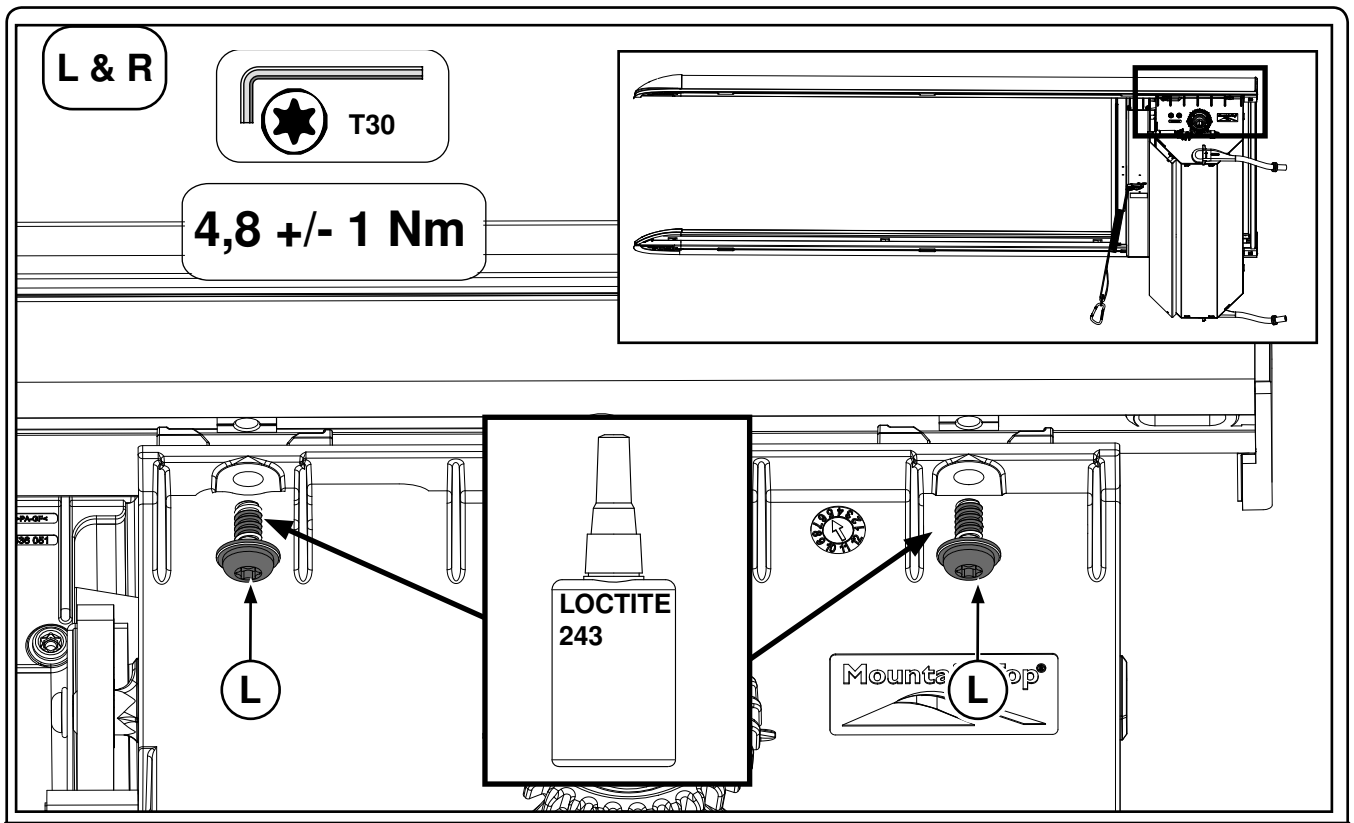

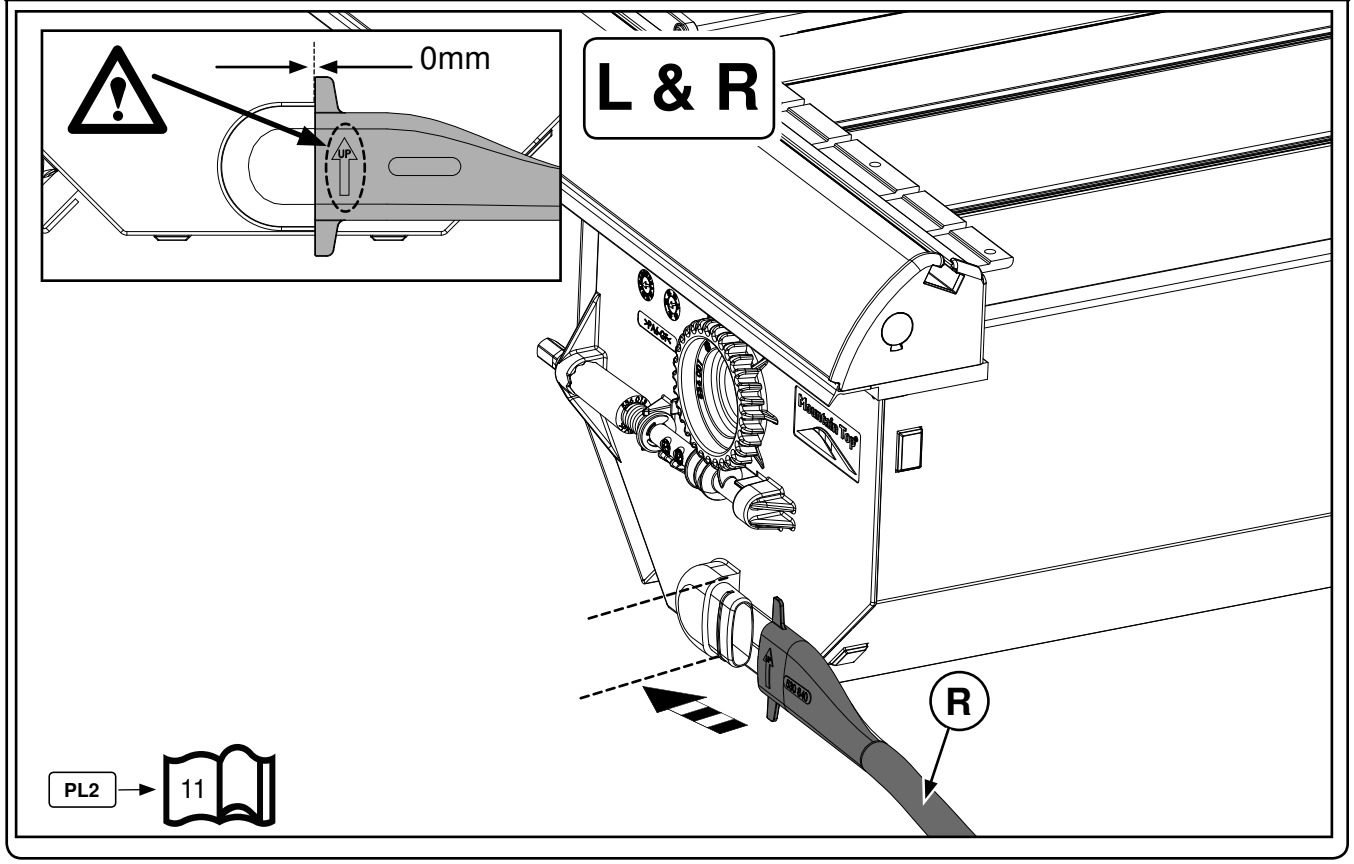

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	10/19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

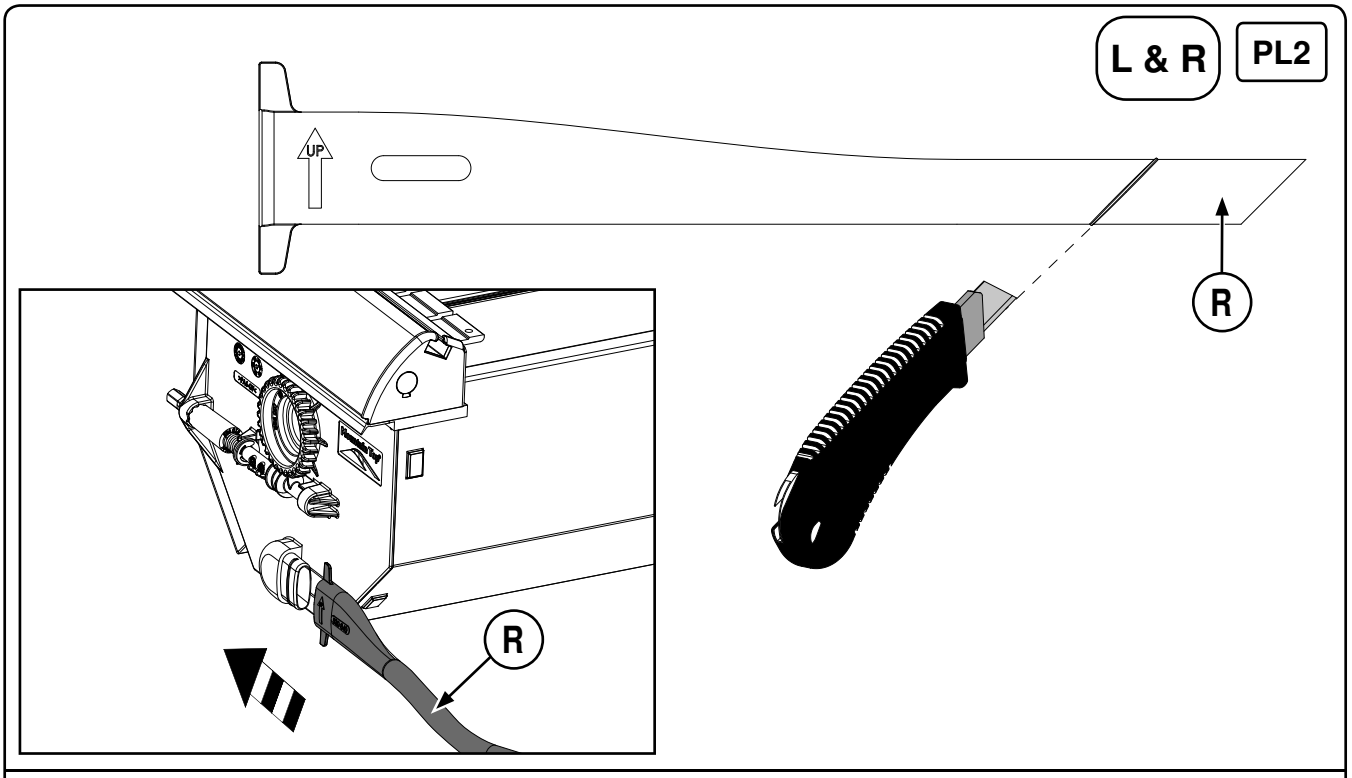

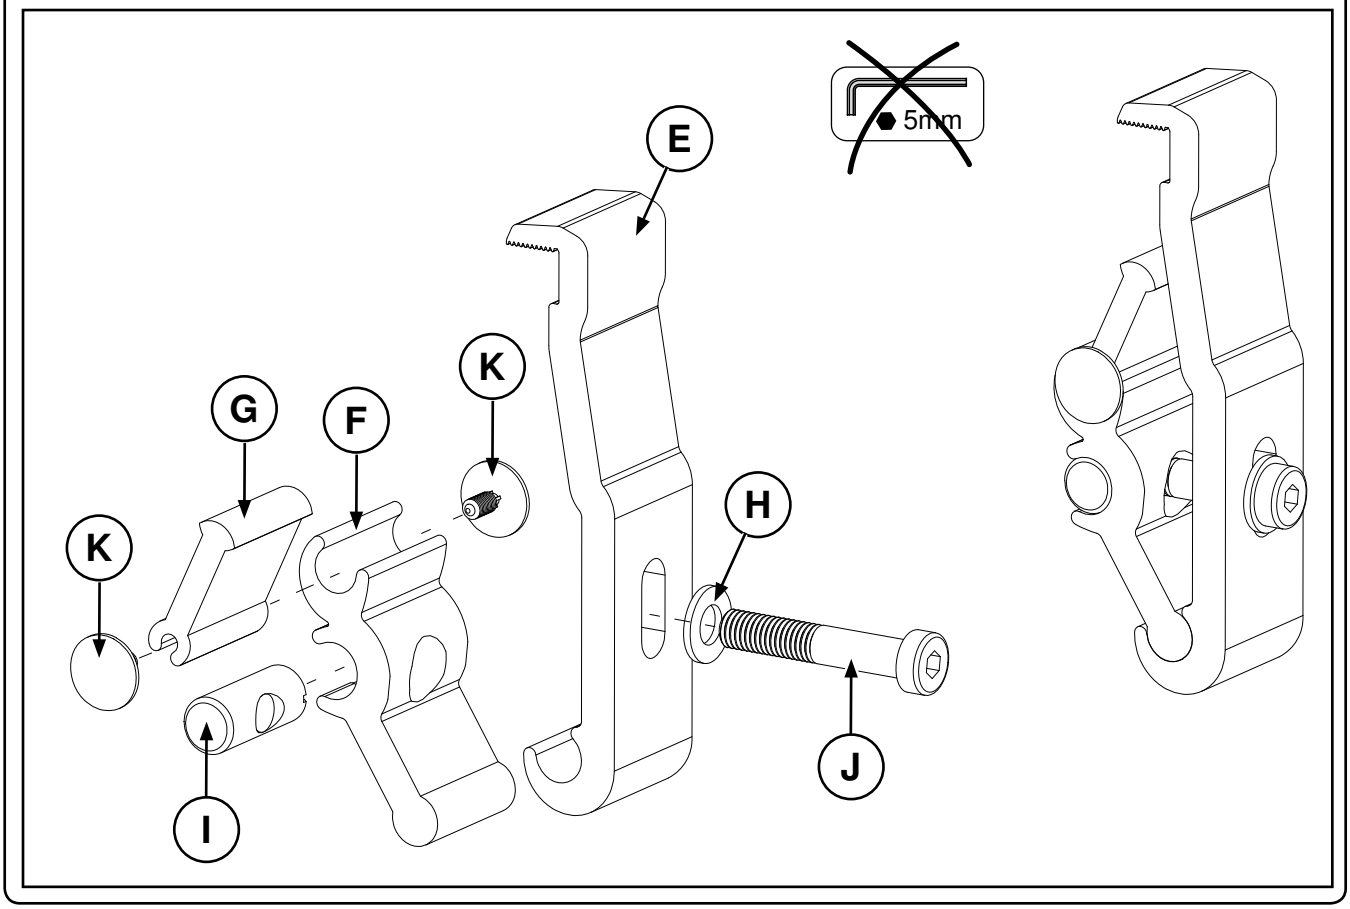

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	11/19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

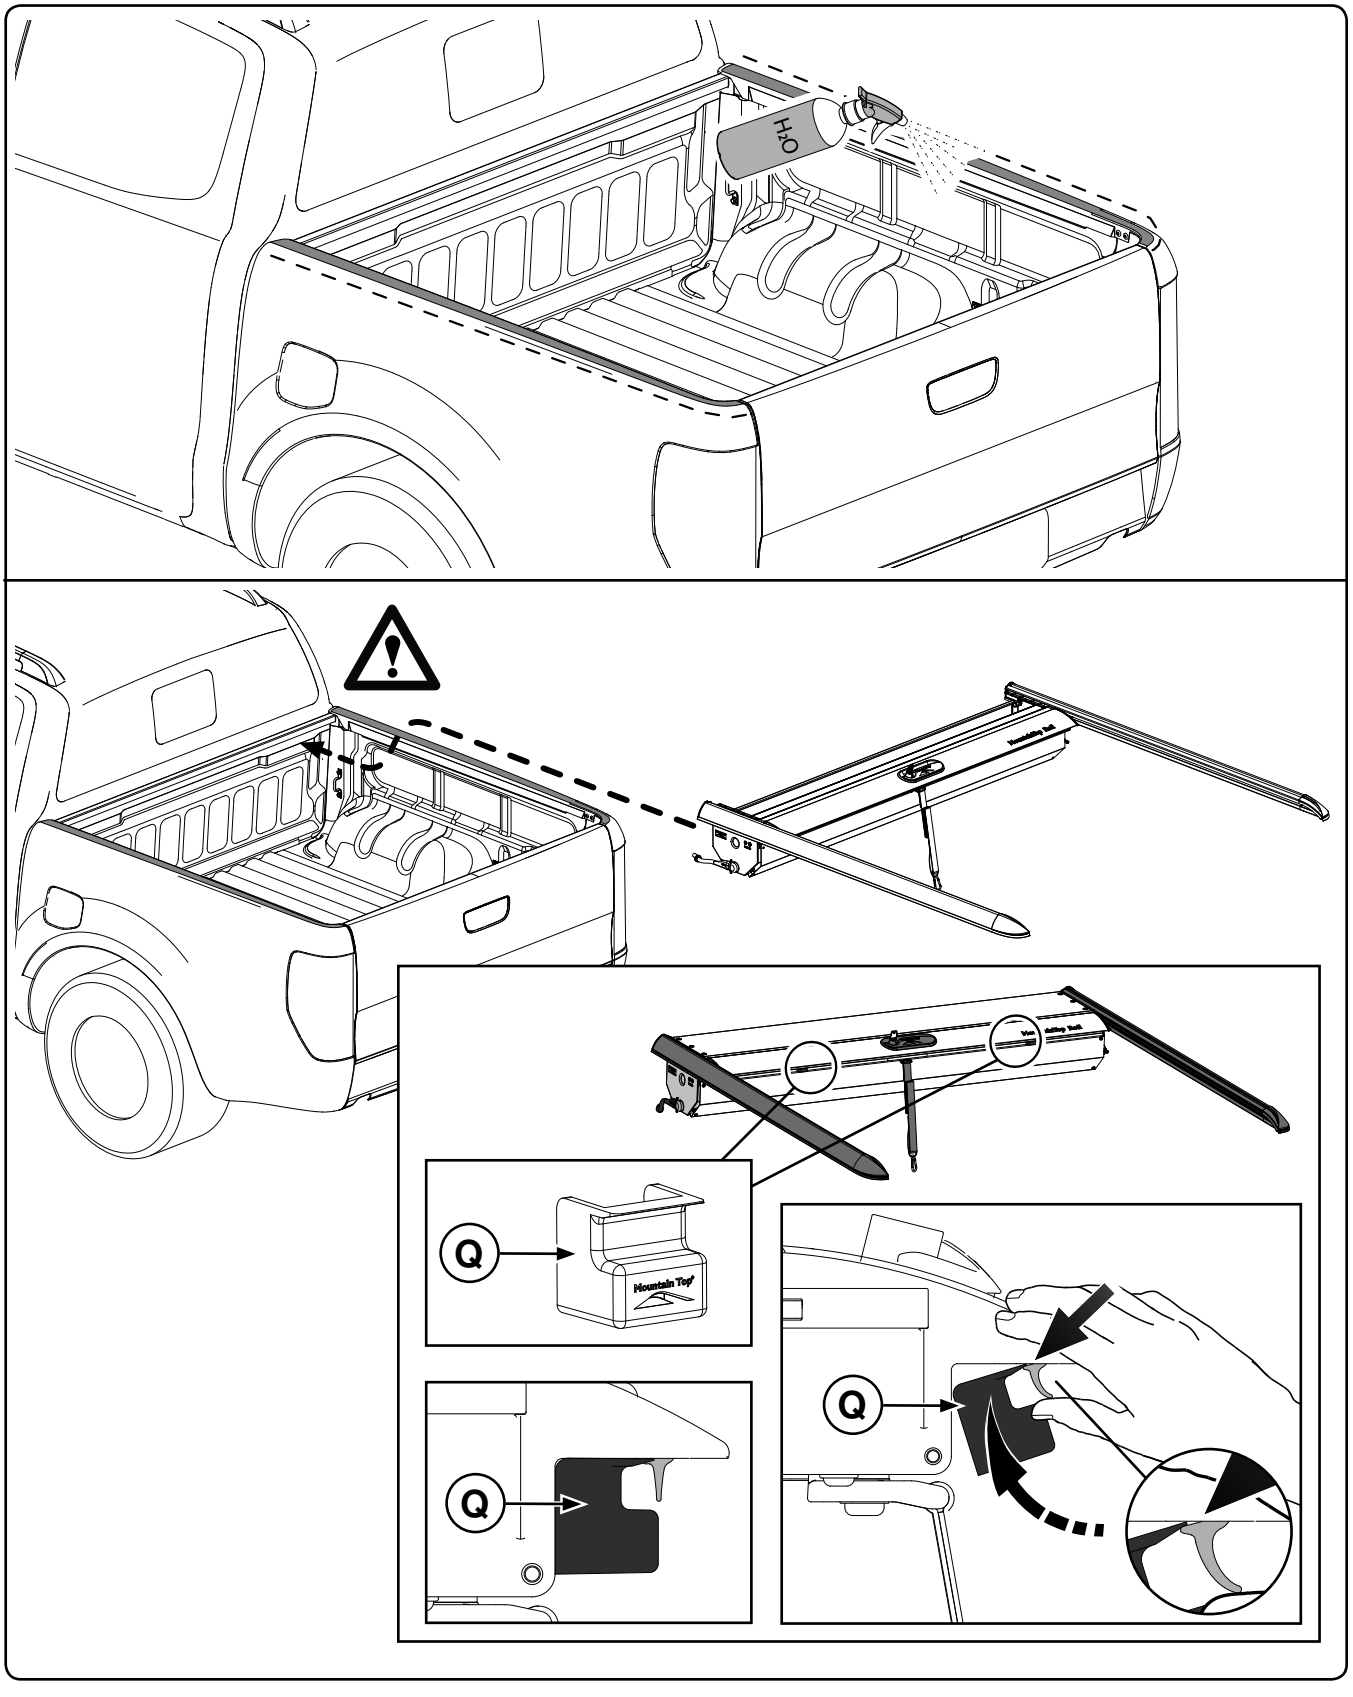

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	12/19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

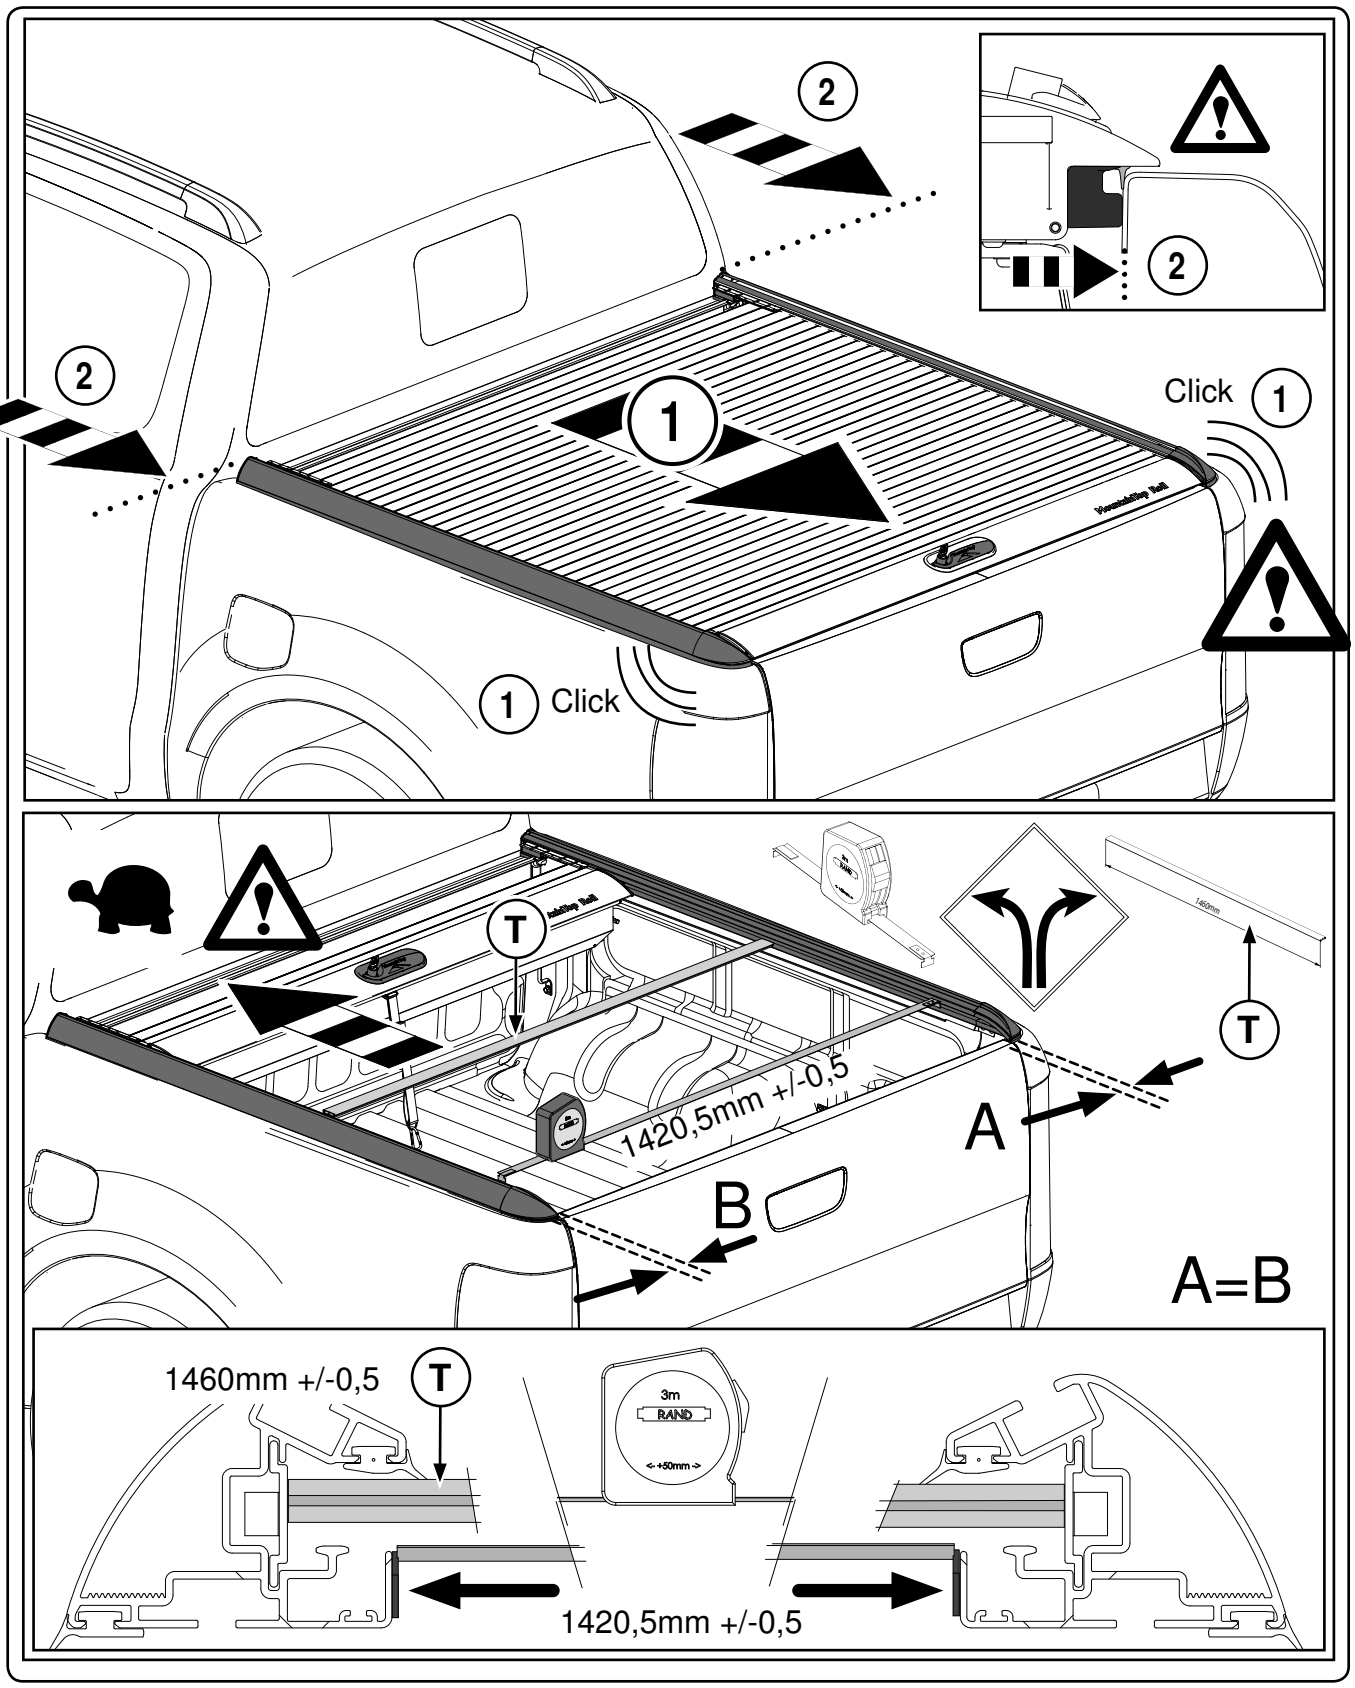

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

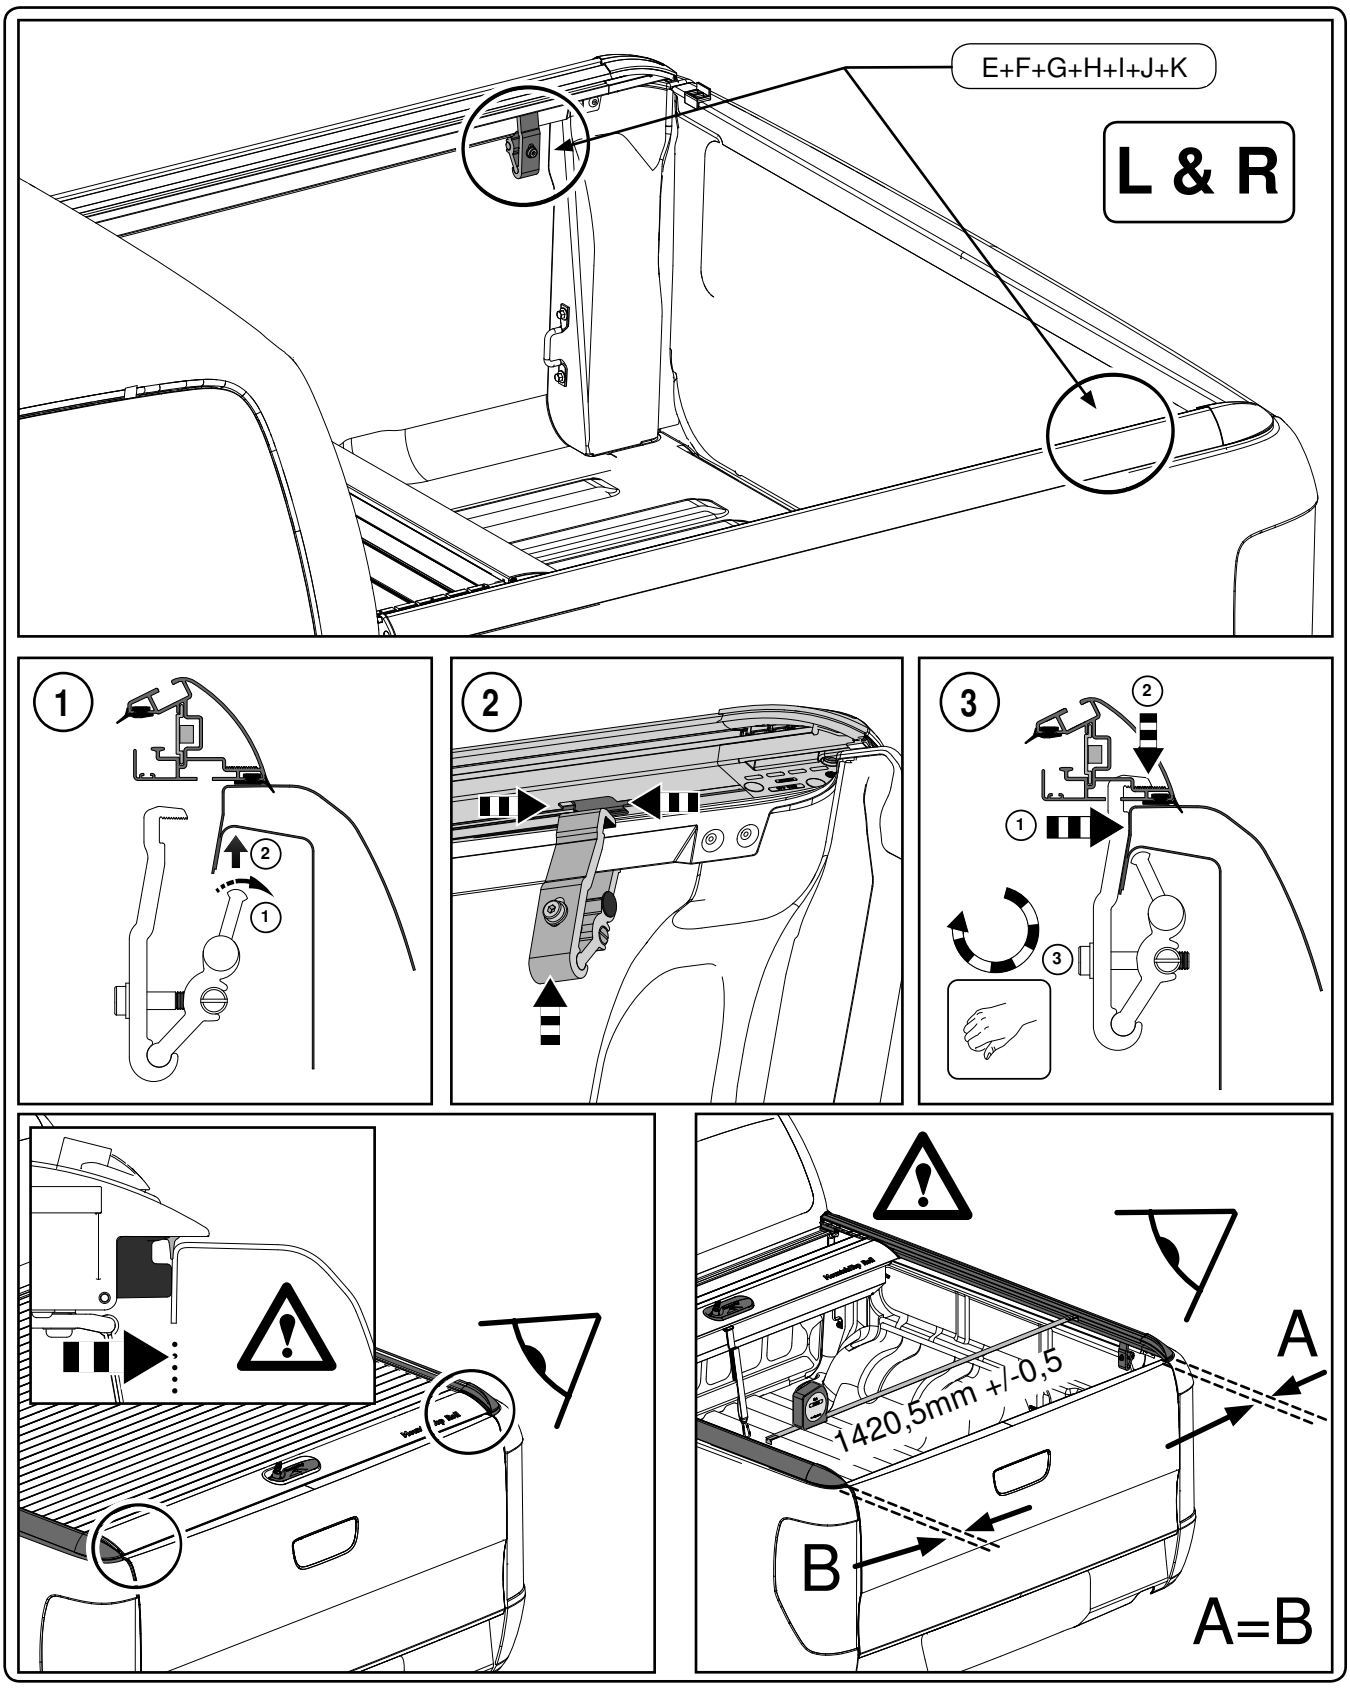

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	14/19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

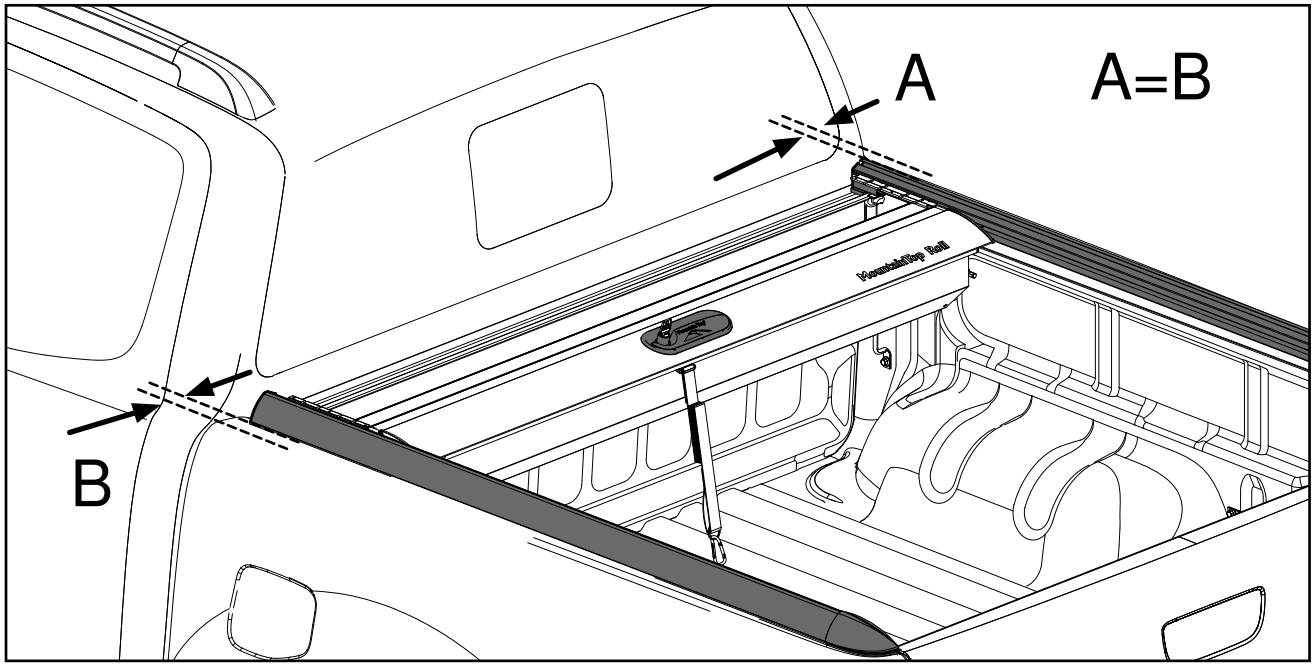

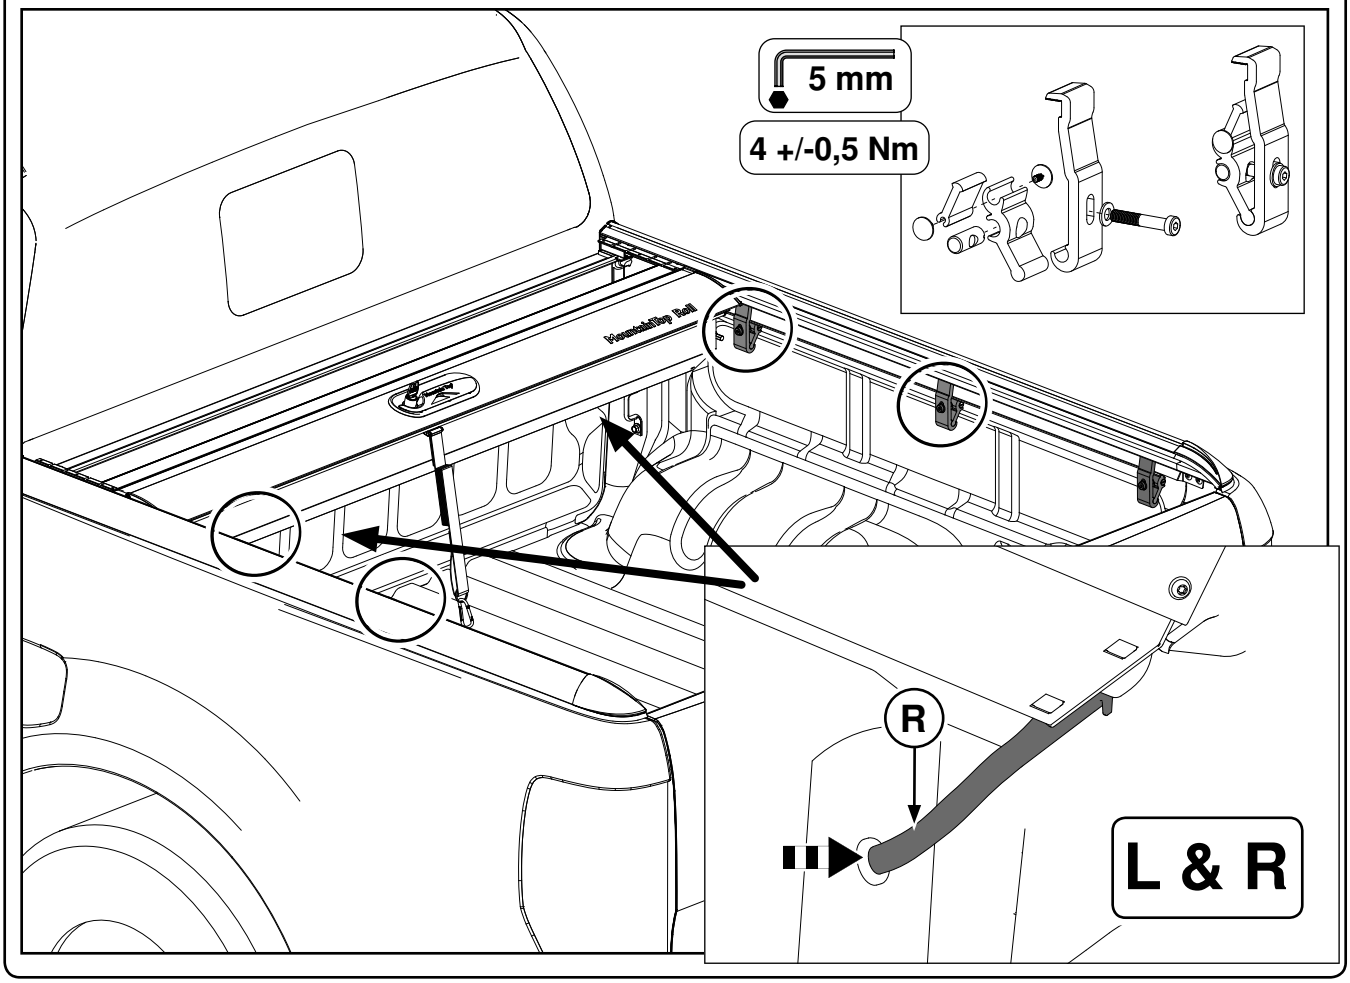

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

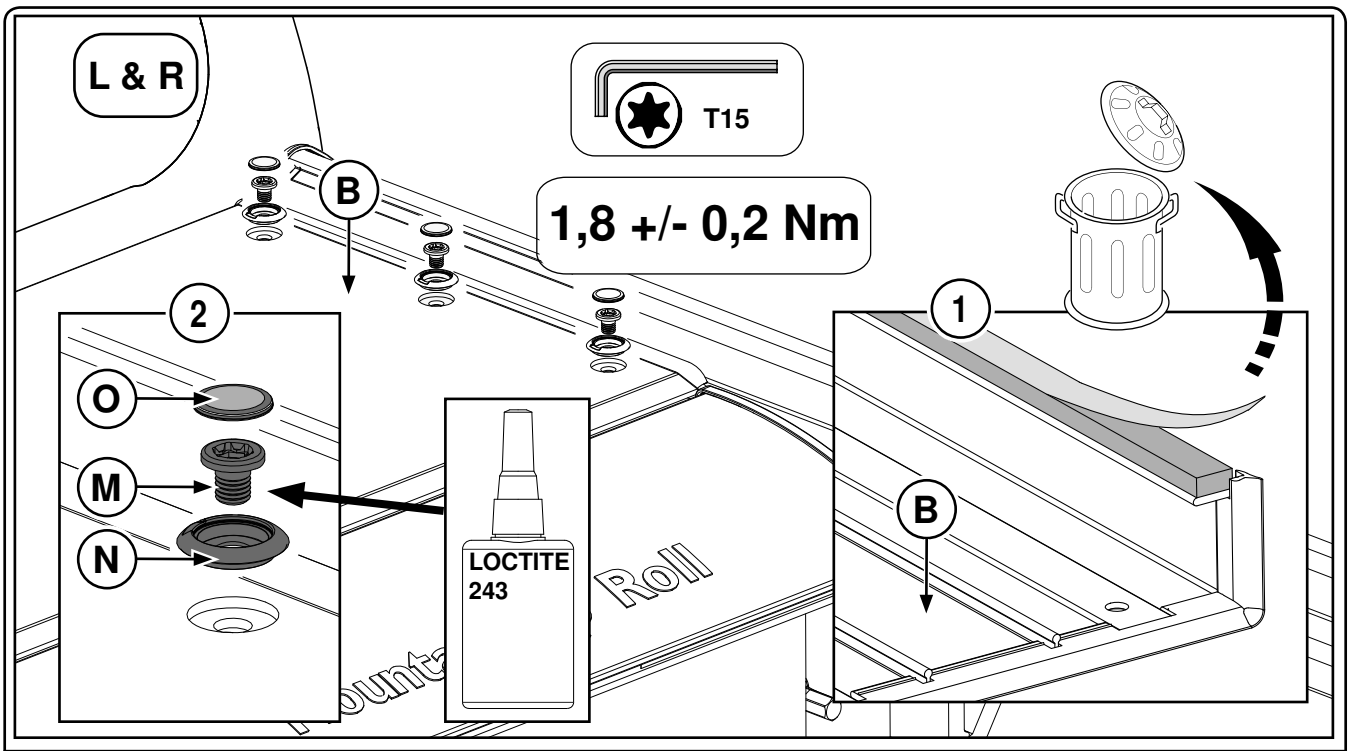

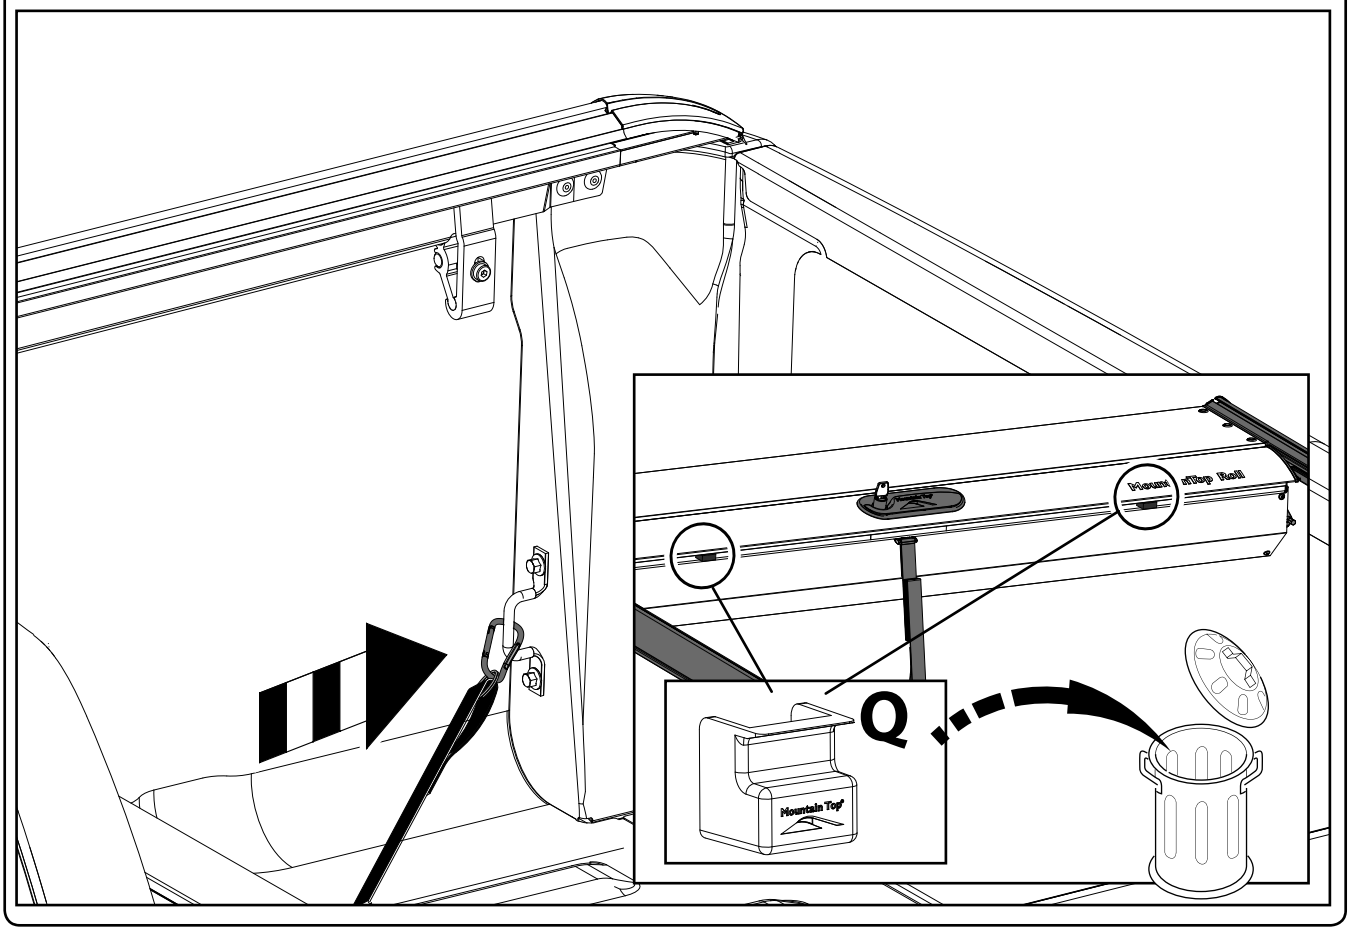

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	16/19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

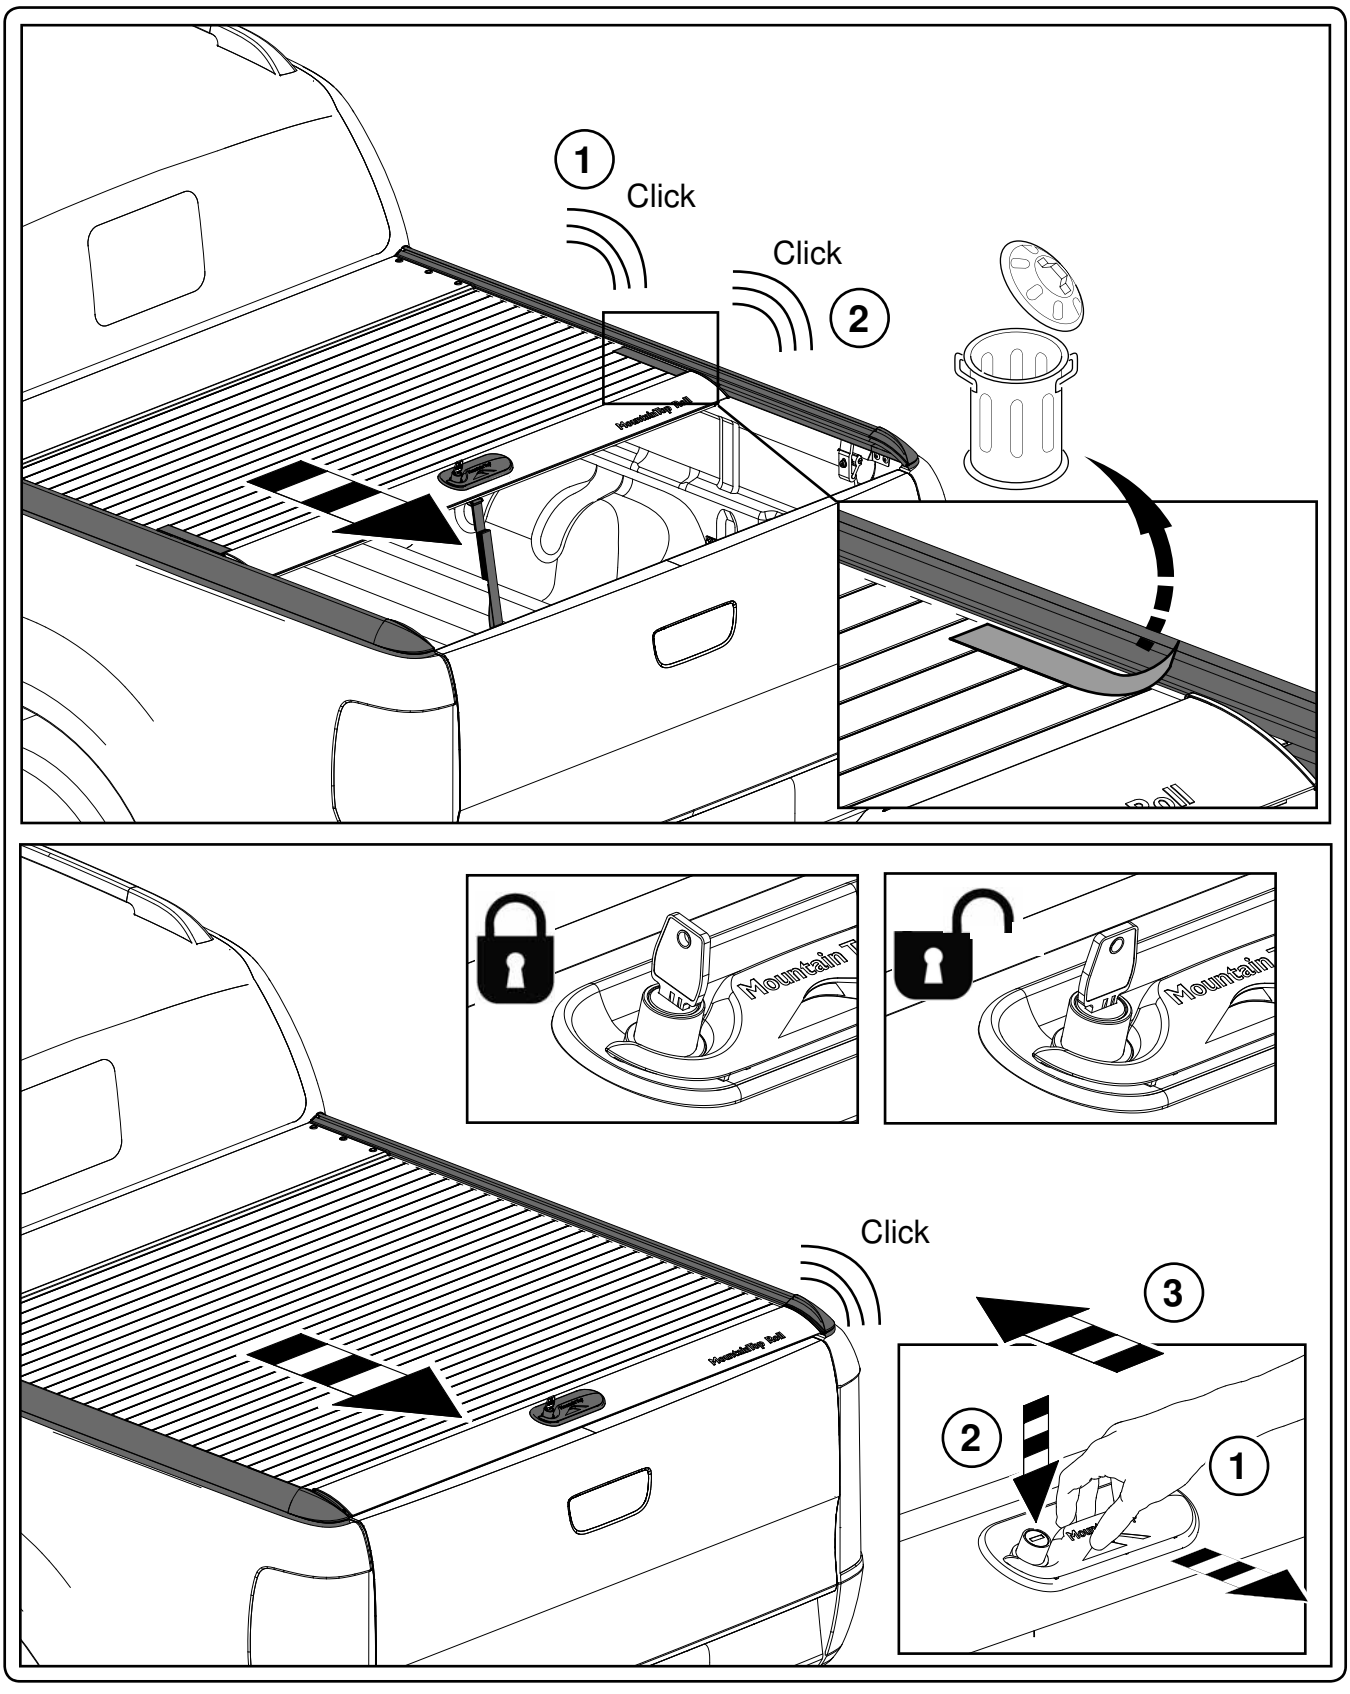

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	17/19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

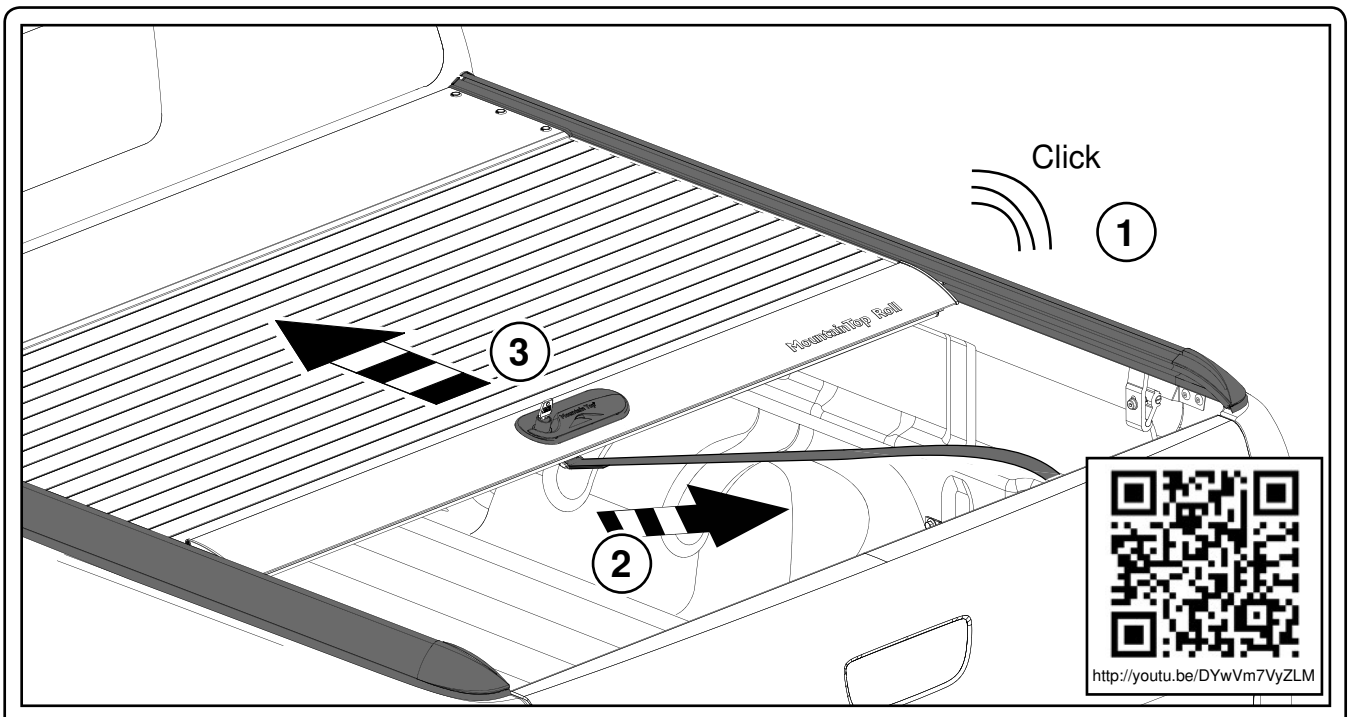

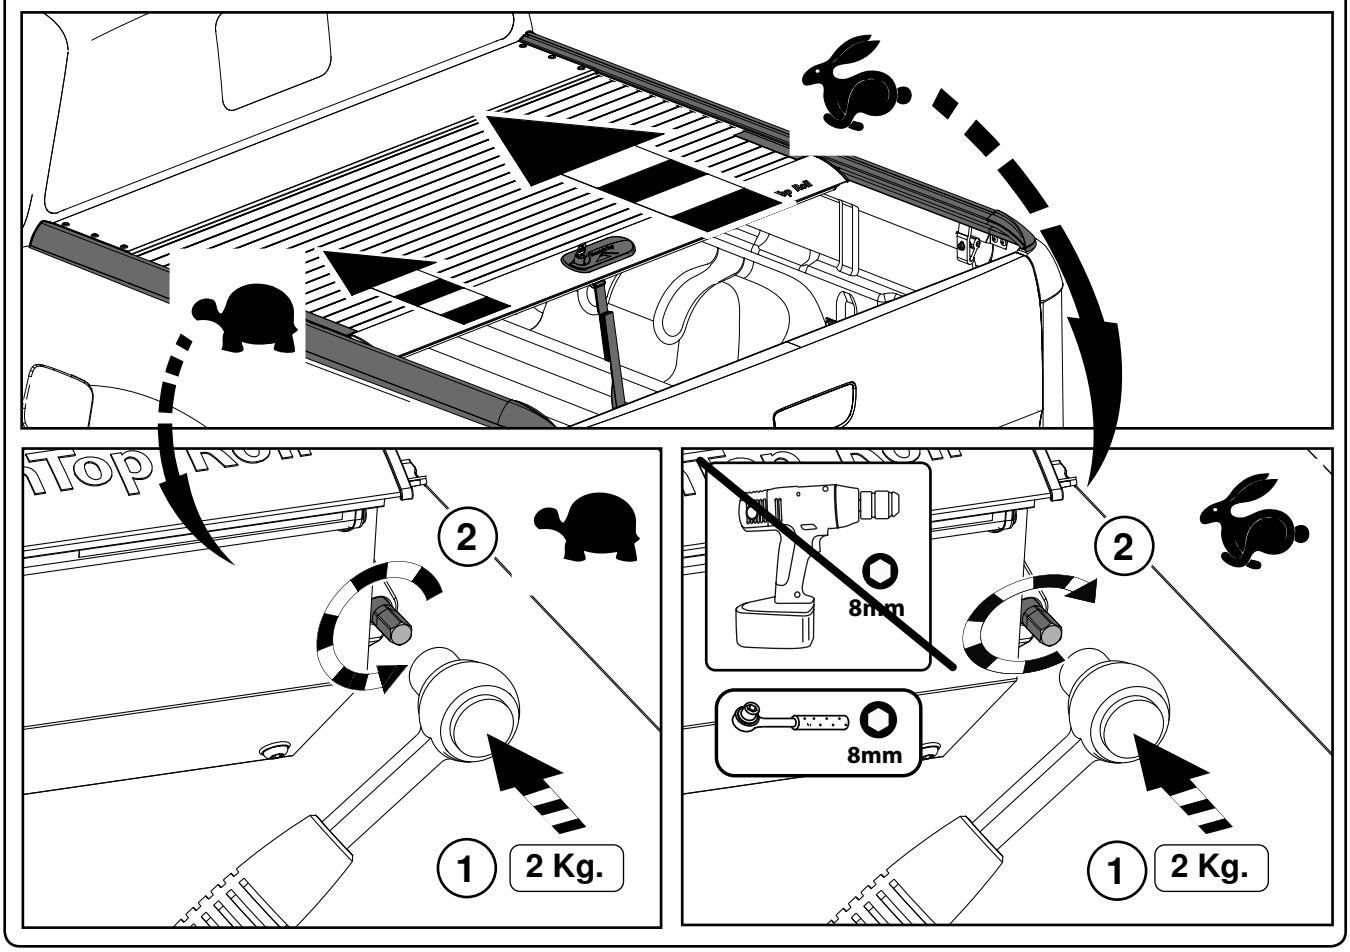

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	18/19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Ford Ranger XL, XLT and Limited

Mountain Top Roll
Installation Instructions

Mountain Top®
INDUSTRIES APS

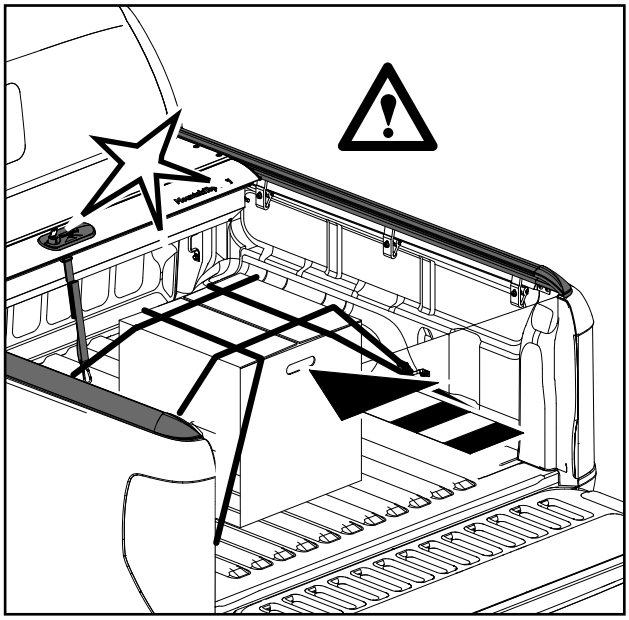

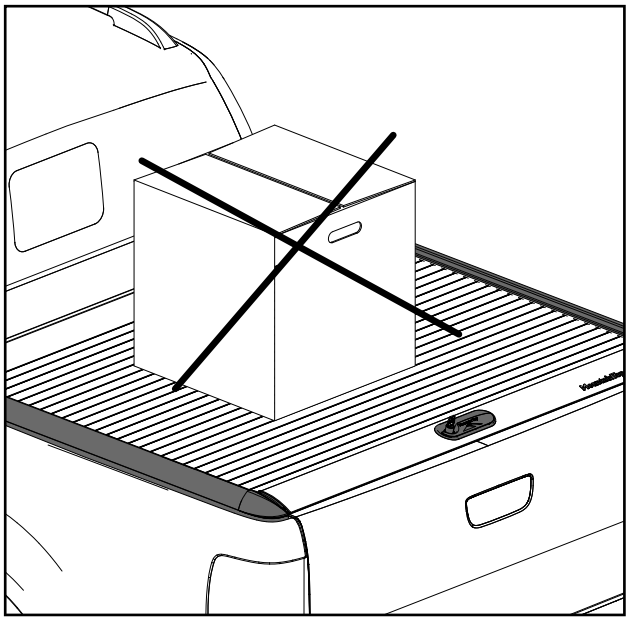

MTI-number	Issue	Date			Page
886 035	02	30/04/2013	A66SX-26501A34-DA A66SX-19501A34-CA	Finish Code 1762118 Finish Code 1762116	19/19

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

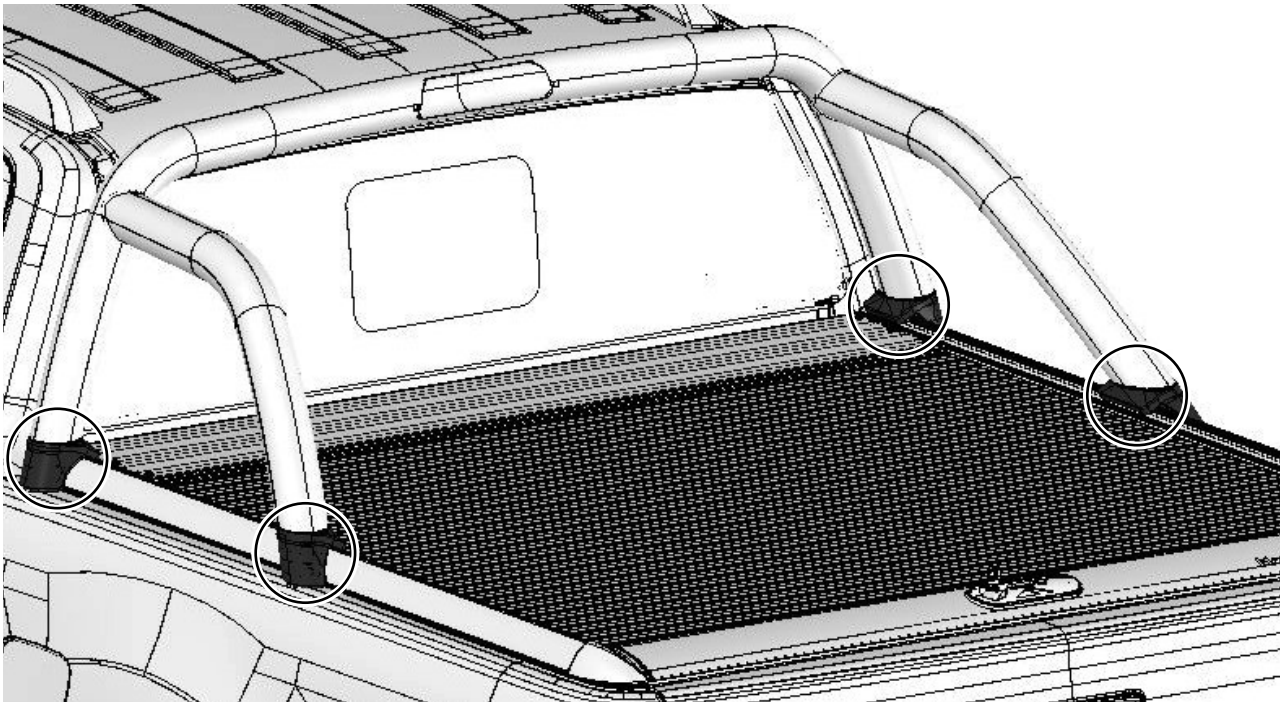

GR	Installation instruction Mountain Top Roll	S	Monteringsanvisning Mountain Top Roll
D	Einbauanleitung Mountain Top Roll	SF	Asennusohje Mountain Top Roll
E	Instrucciones de montaje Mountain Top Roll	CZ	Návod k instalaci Mountain Top Roll
F	Notice de montage Mountain Top Roll	H	Szerelési utasítás Mountain Top Roll
I	Istruzioni de montaggio Mountain Top Roll	PL	Instrukcja montażu Mountain Top Roll
P	Instruções de instalação Mountain Top Roll	GR	Οδηγίες Εγκατάστασης Mountain Top Roll
NL	Installatie-instructies Mountain Top Roll	RUS	Инструкция по установке Mountain Top Roll
DK	Monteringsvejledning Mountain Top Roll	TR	Montaj Talimatı Mountain Top Roll
N	Monteringsveiledning Mountain Top Roll	RO	Instructiuni de instalare Mountain Top Roll

Model Year: 2012 →

Part Number: -

Weight: 8kg App.

Installation Time: 1 hr

PedersholmParken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

A

Front Left 532 002

B

Front Right 532 001

C

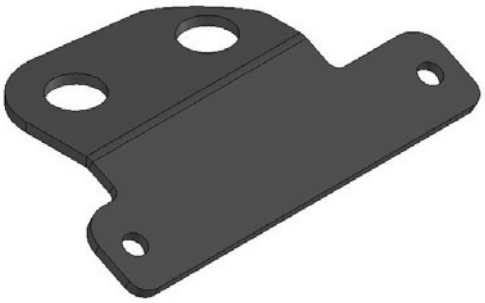

Rear Left 532 004

D

Rear Right 532 003

E

Front Left 532 012

F

Front Right 532 011

G

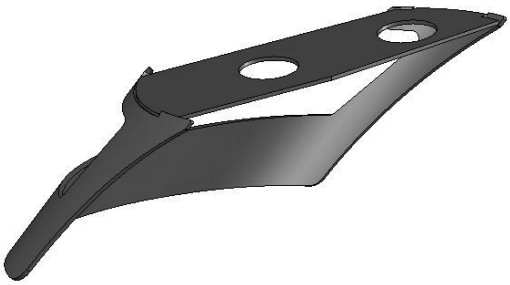

Rear Left 532 014

H

Rear Right 532 013

PedersholmParken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

I

Front Left 532 022

J

Front Right 532 021

K

Rear Left 532 024

L

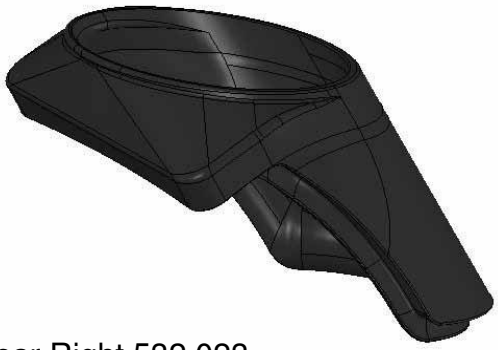

Rear Right 532 023

M

532 015 x 2

N

532 016 x 2

O

M8x25 x 8

P



x 2

Q



x 2

x 1

R

M6x12 x 8

S



x 8

T

Ø6
x 8

U



Ø8
x 8

V



Ø8
x 8

W



x 2

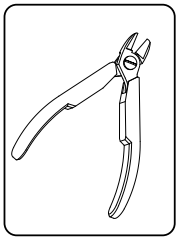

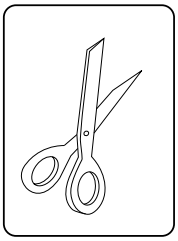

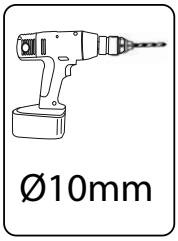

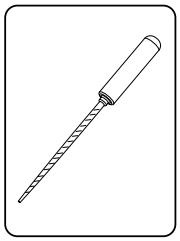

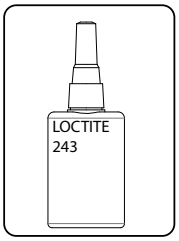

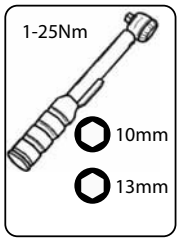

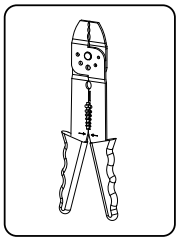

PedersholmParken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

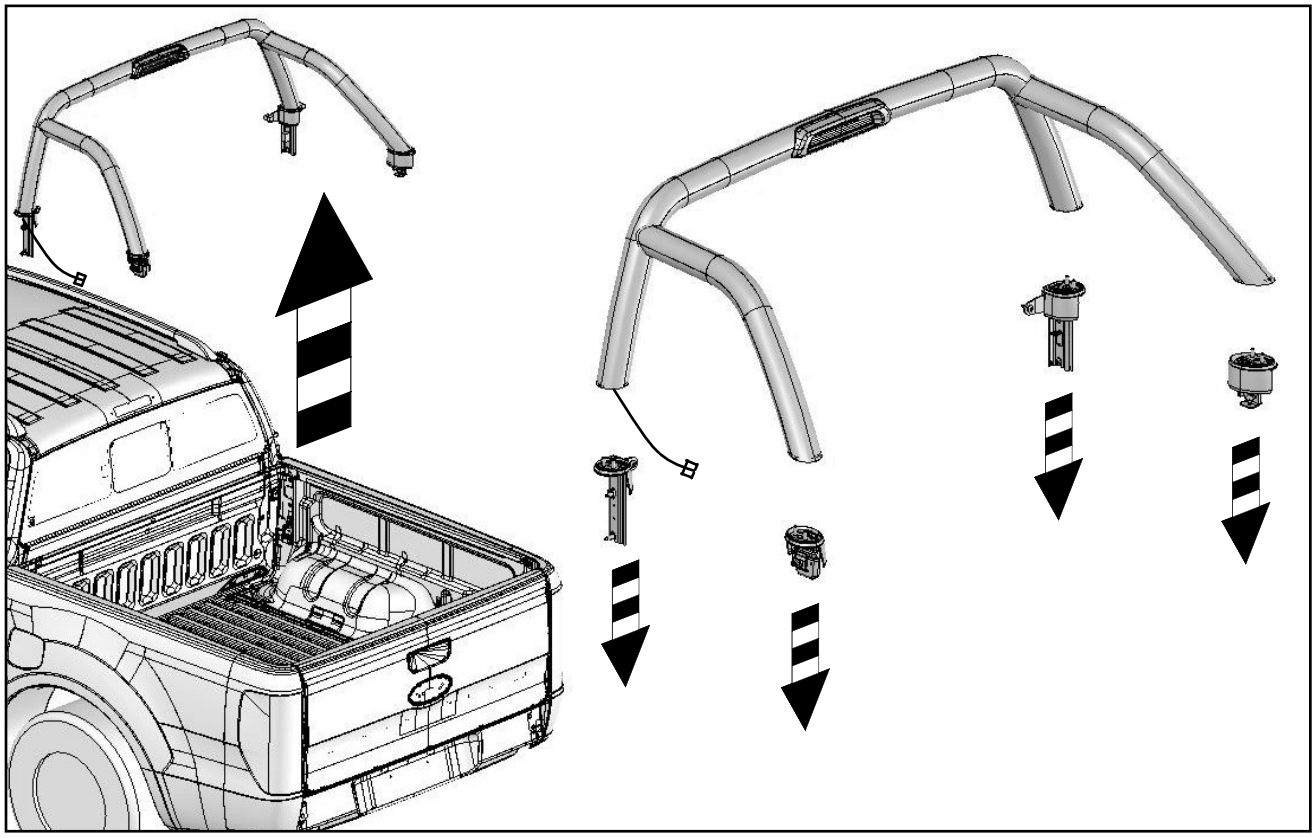

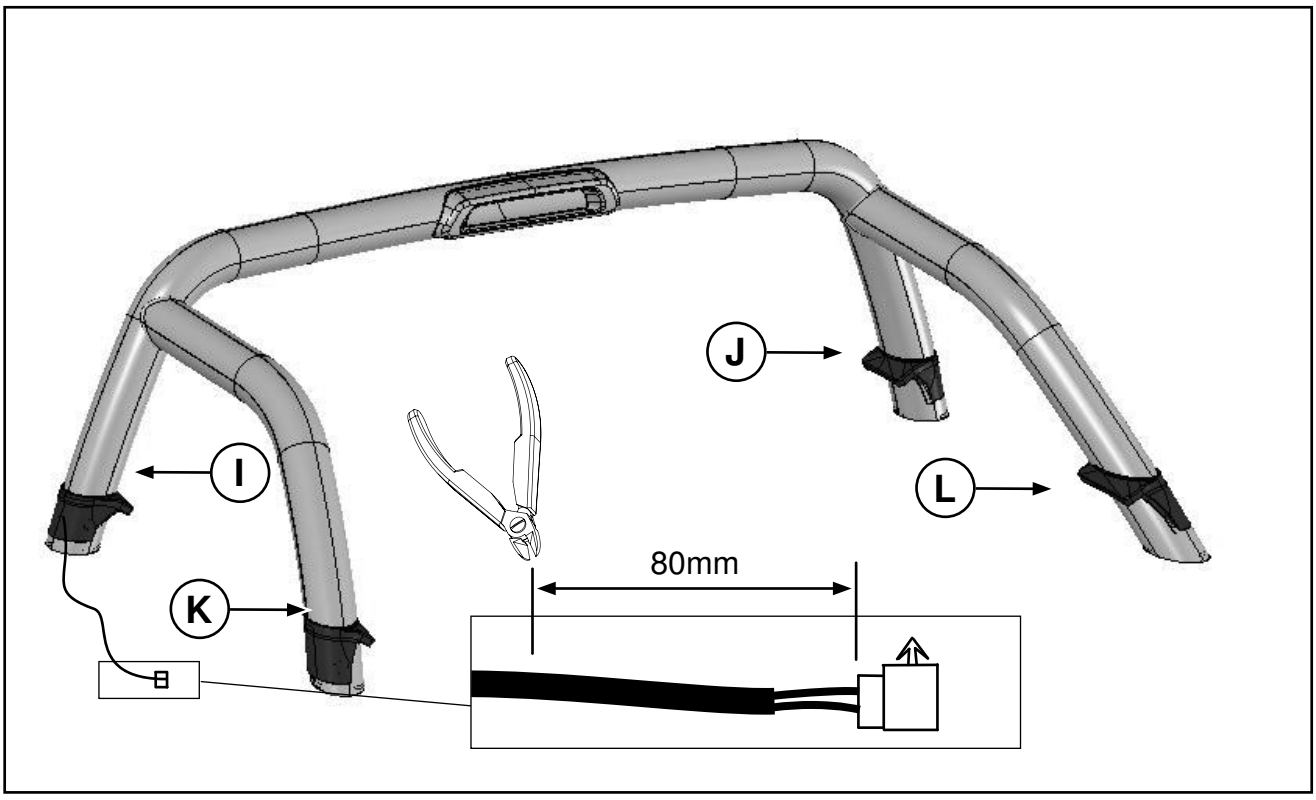

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Genuine Ford Sport Bar
Installation Instructions

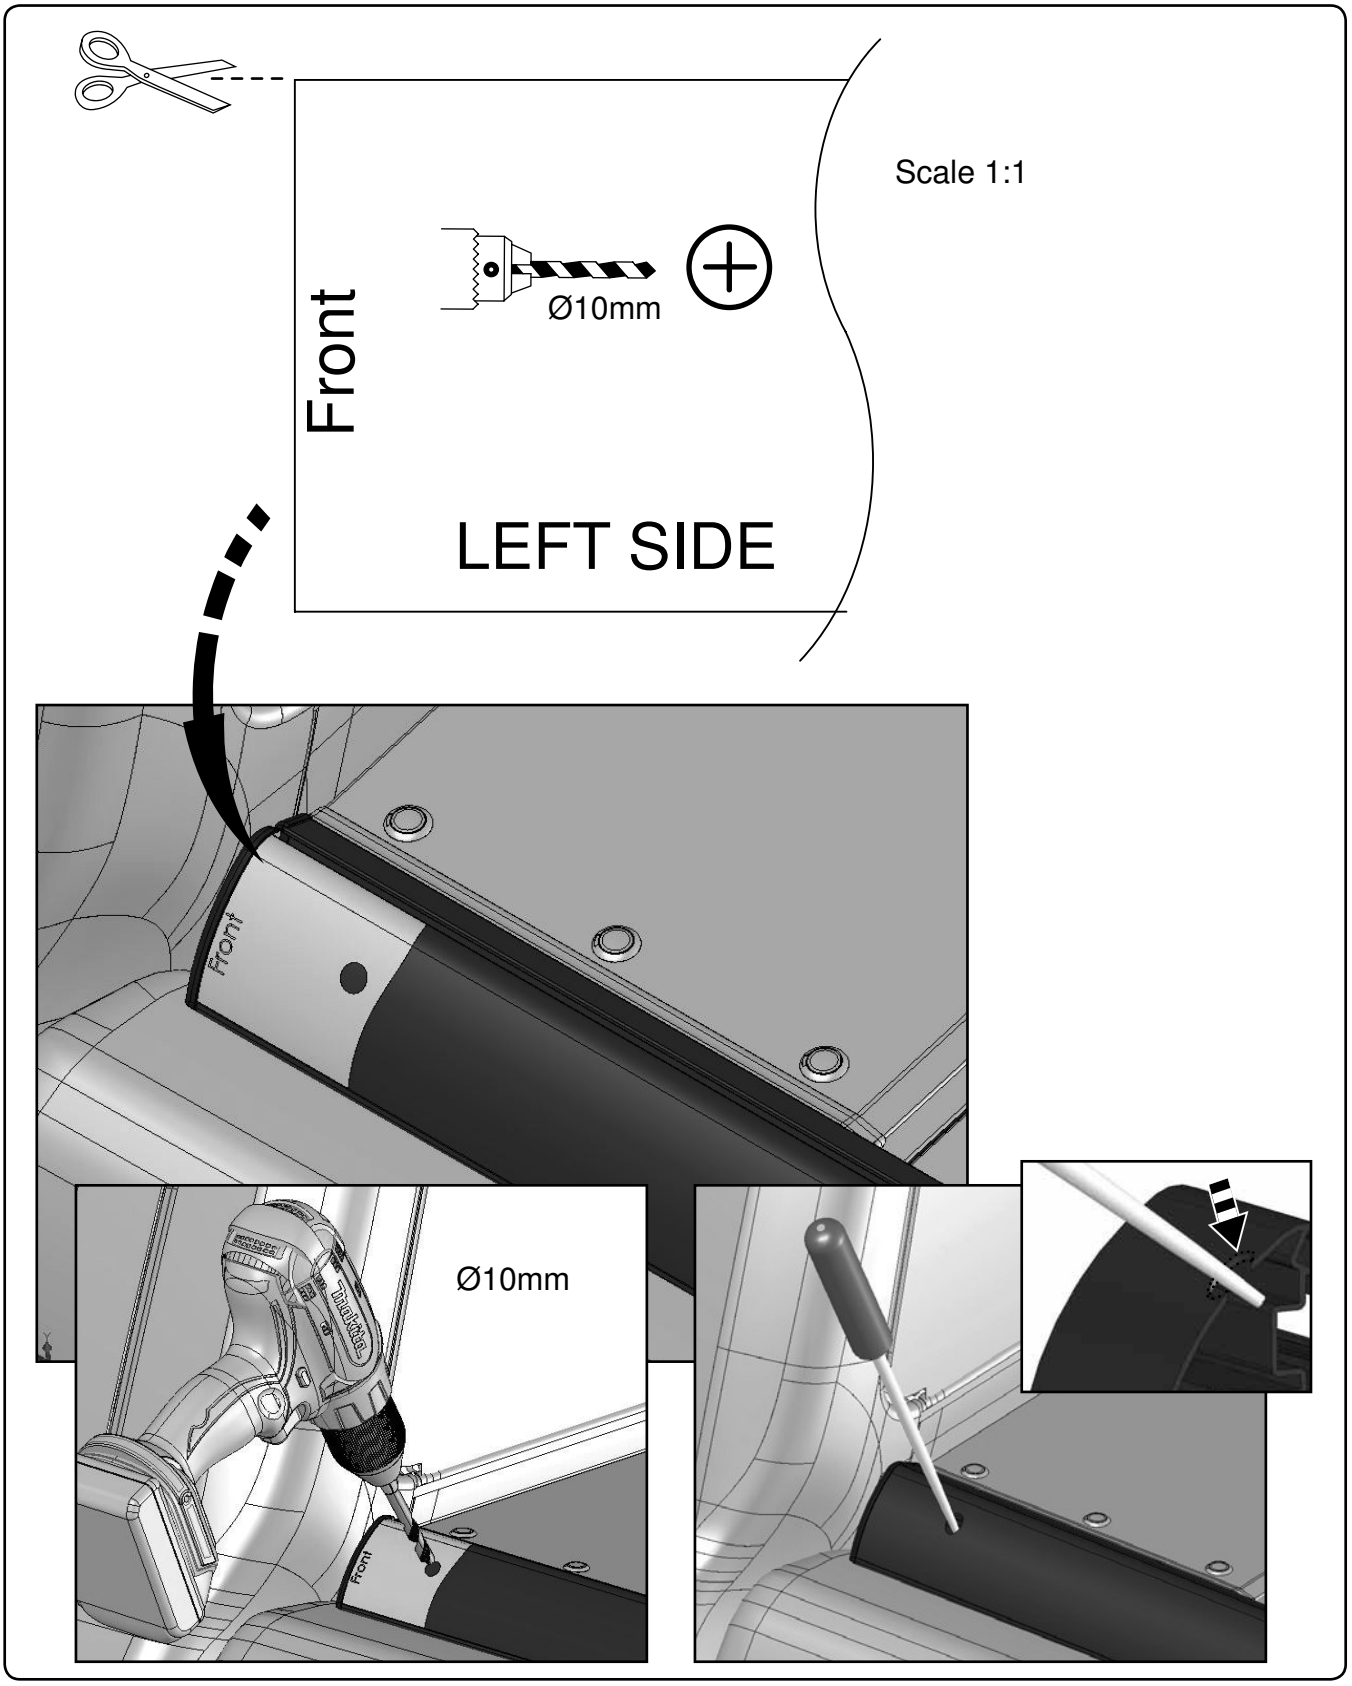

© Copyright, Mountain Top Industries ApS

Genuine Ford Sport Bar
Installation Instructions

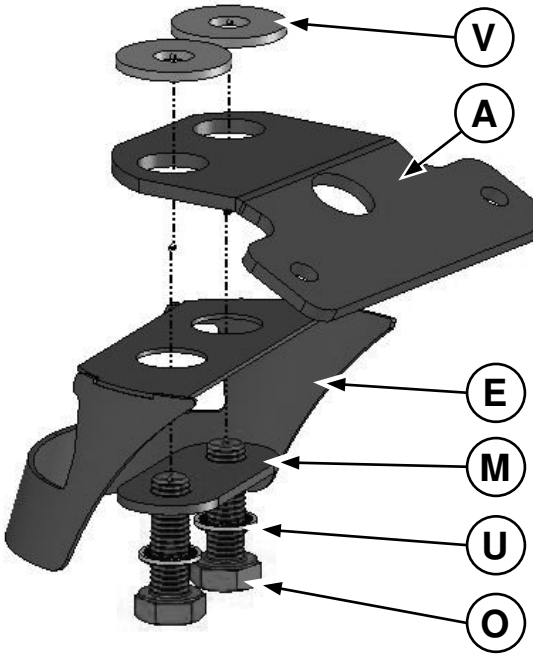

Front Left

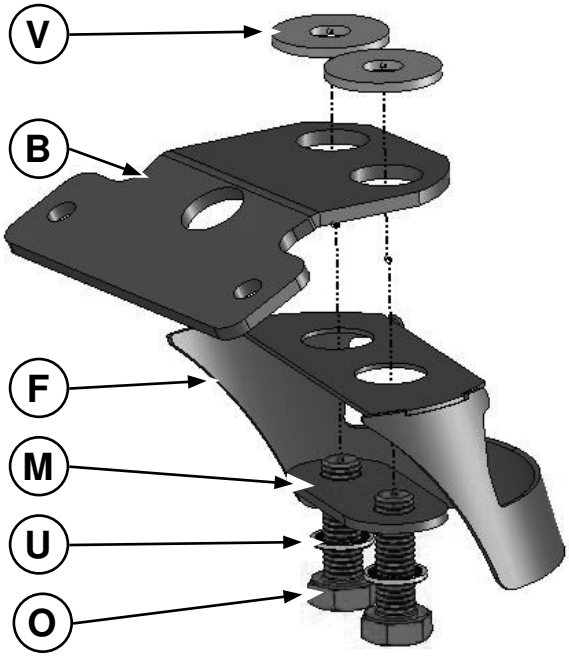

Front Right

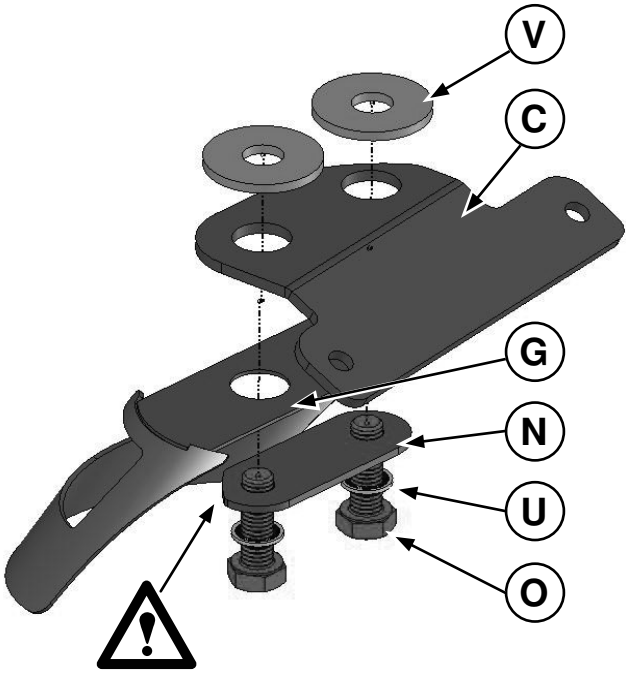

Rear Left

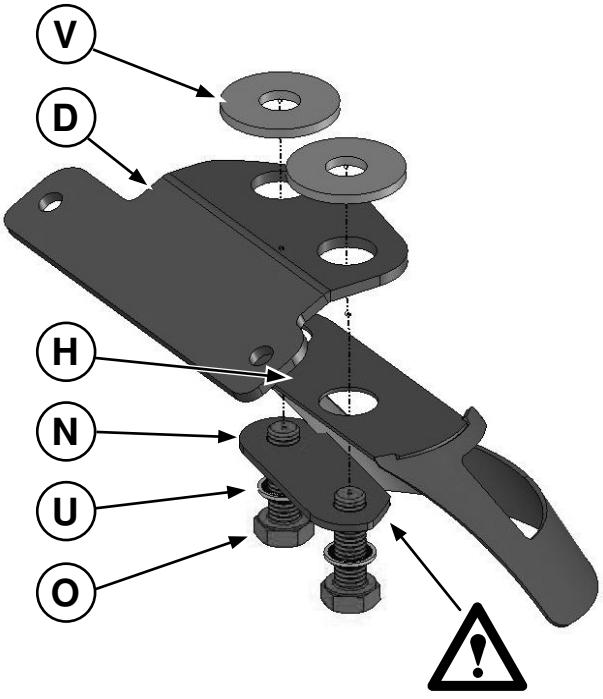

Rear Right

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

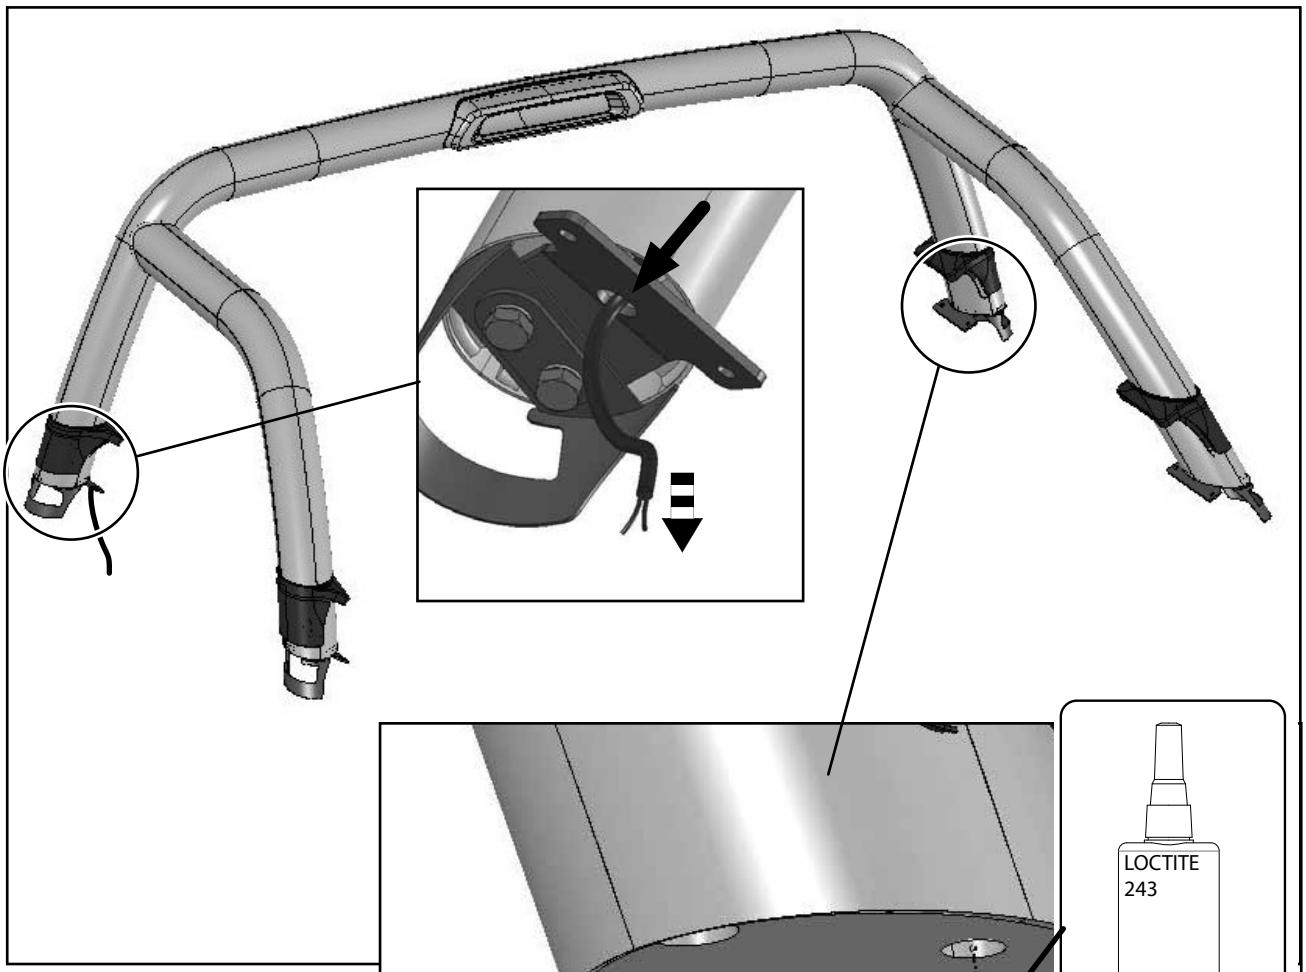

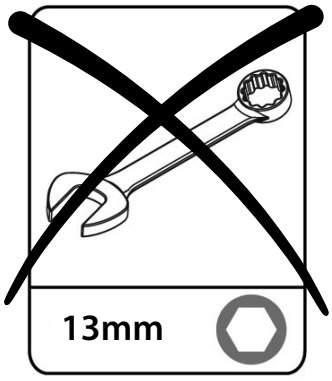

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

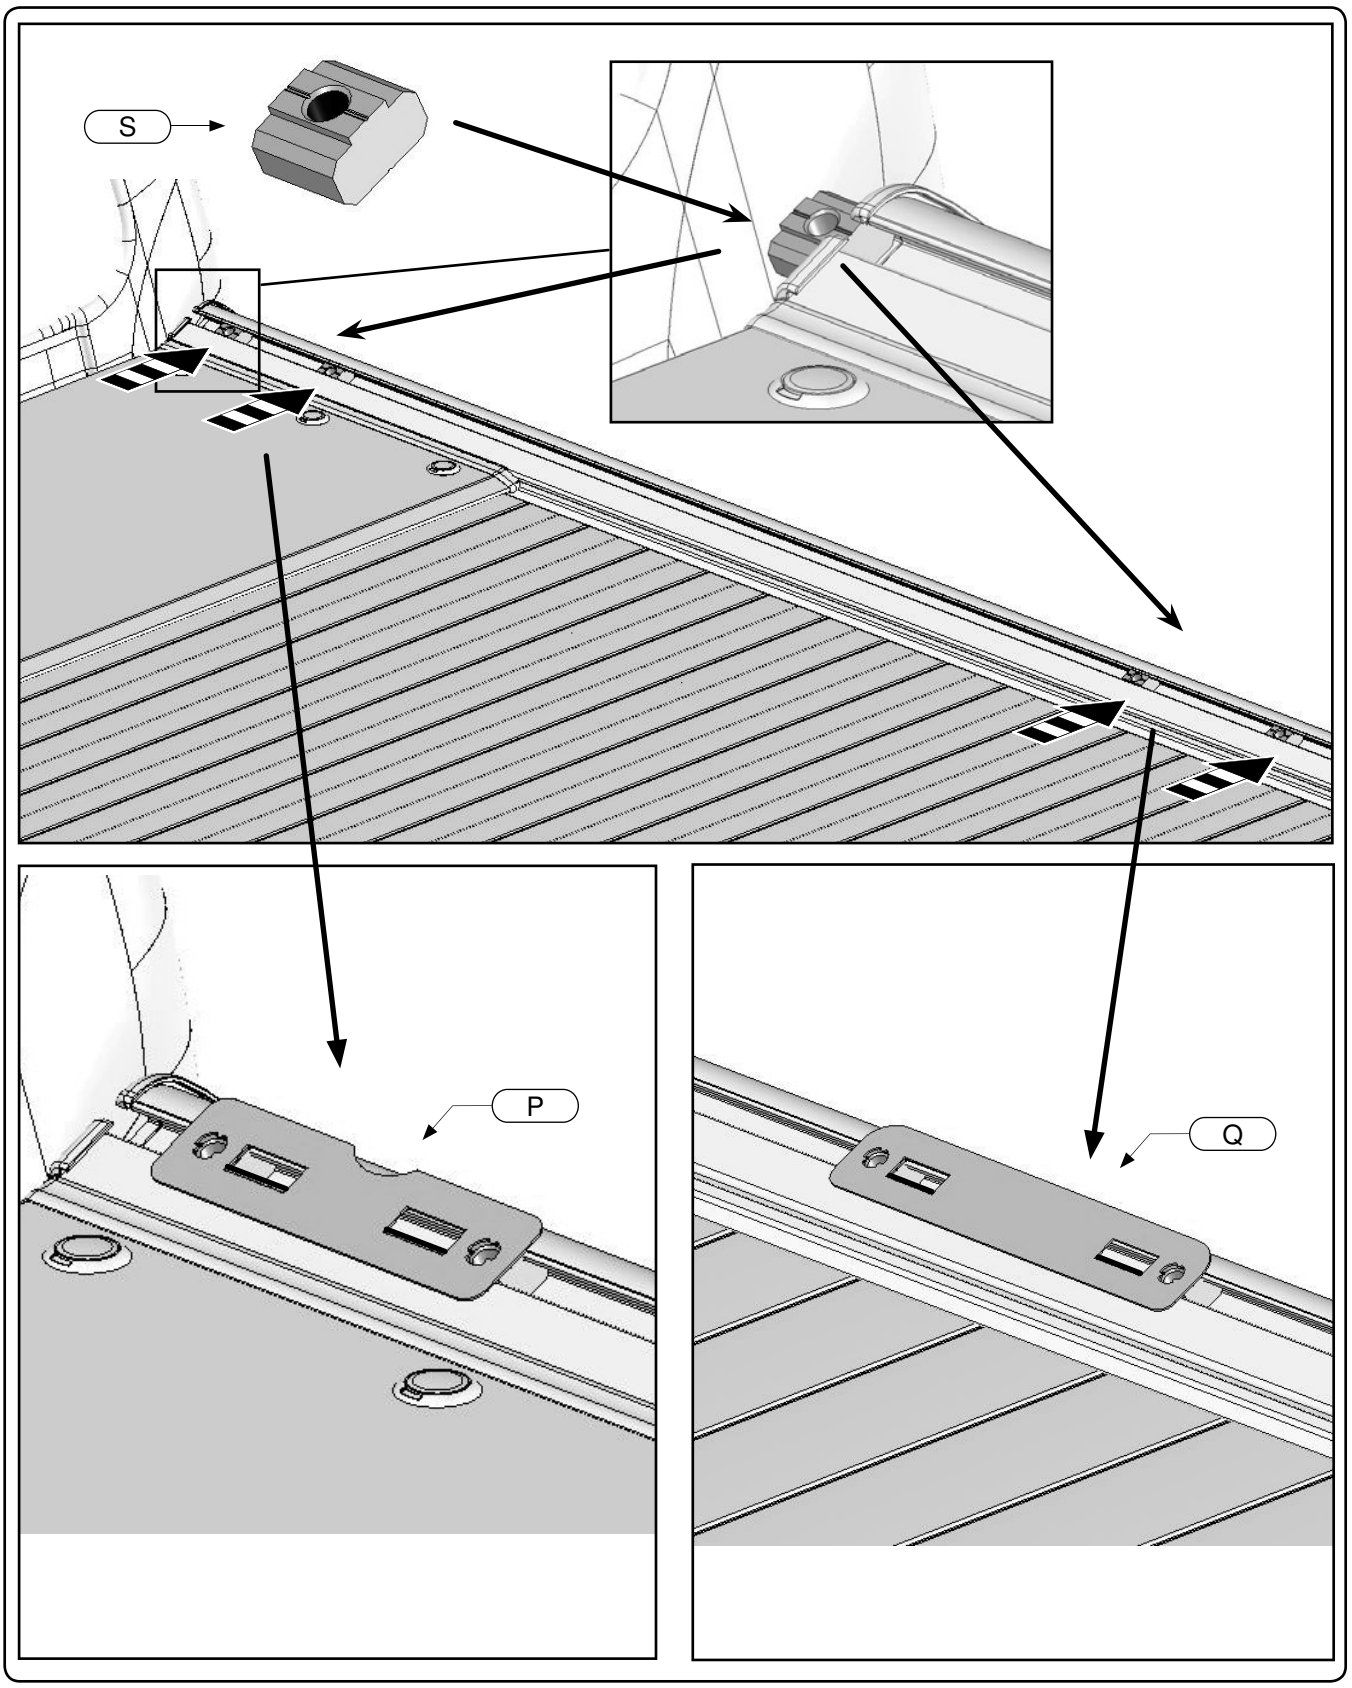

© Copyright, Mountain Top Industries ApS

Genuine Ford Sport Bar
Installation Instructions

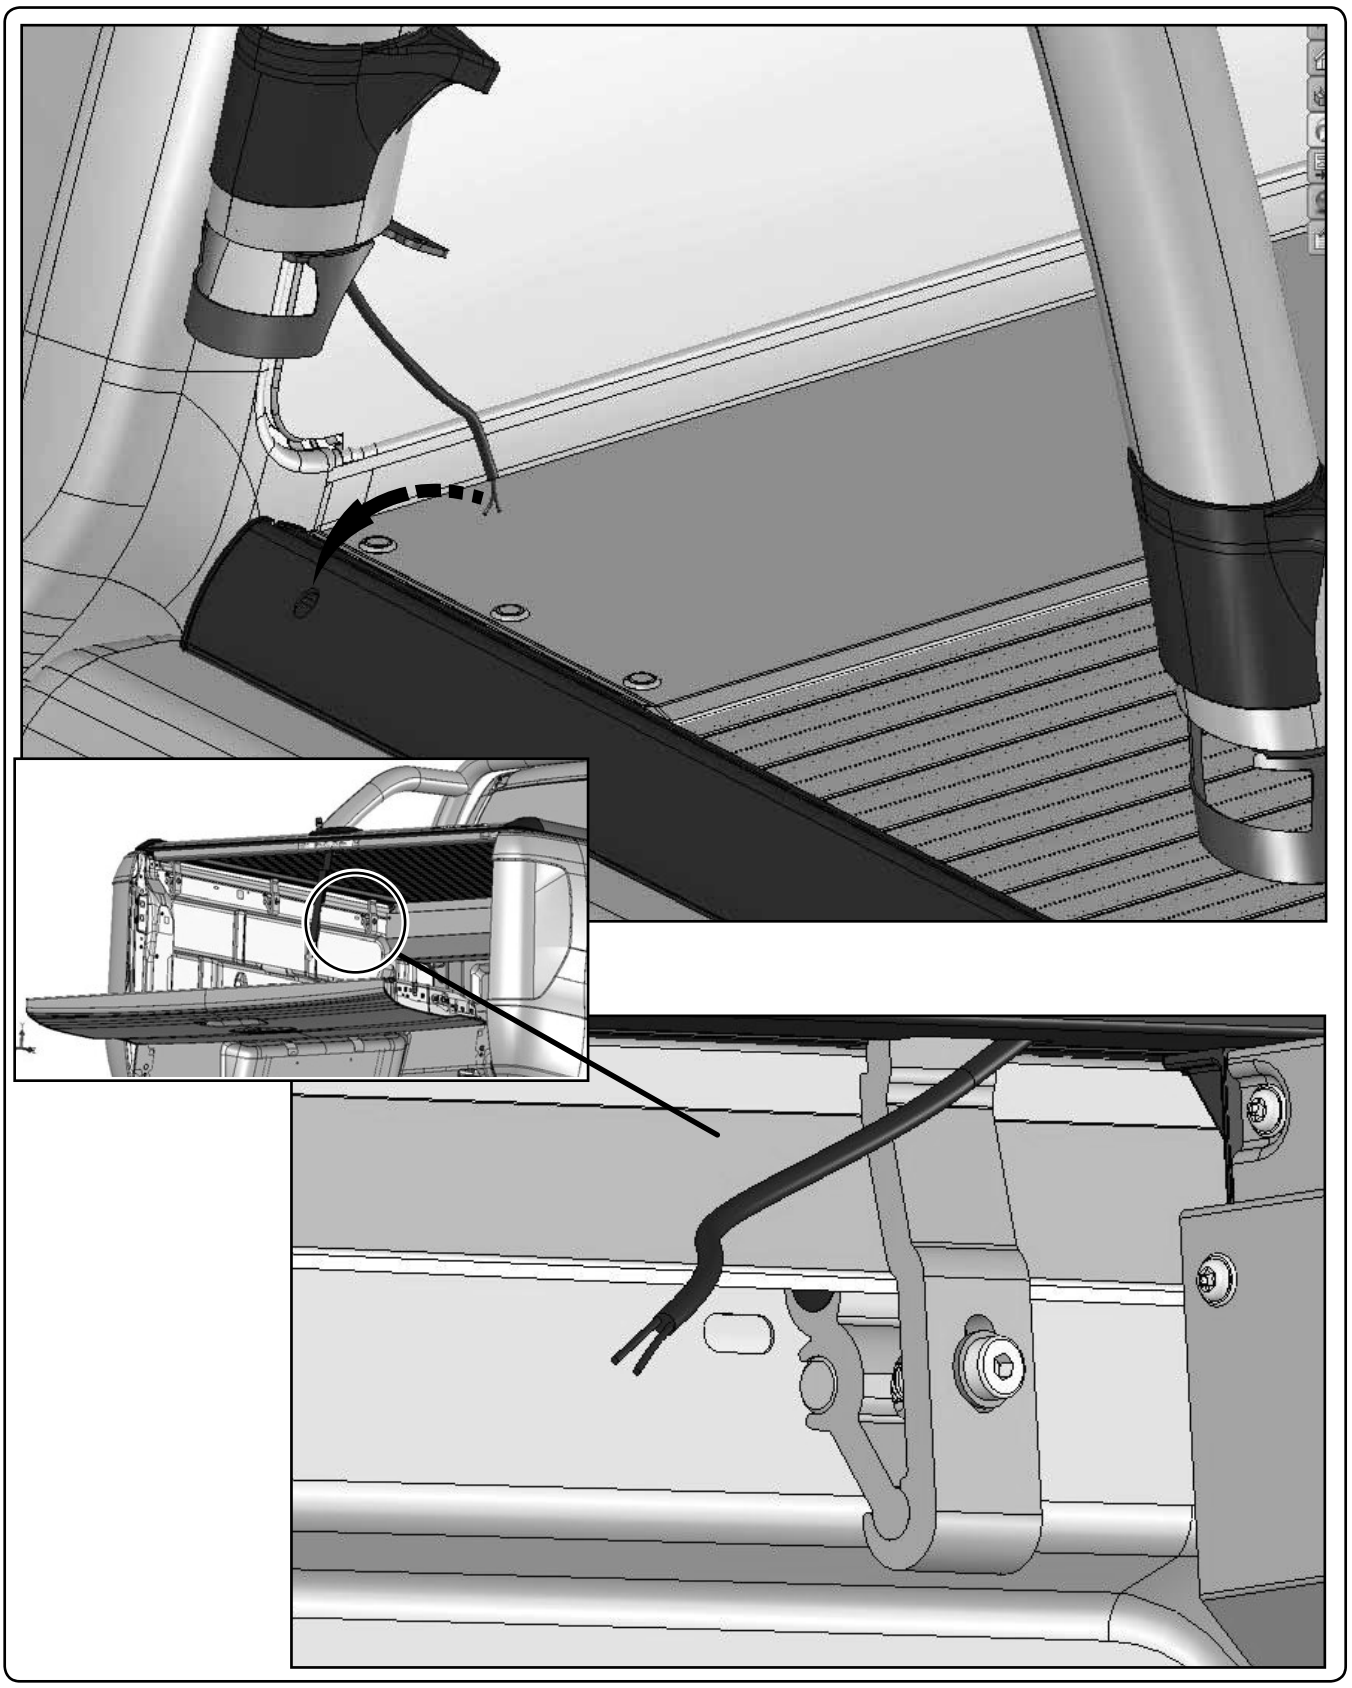

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

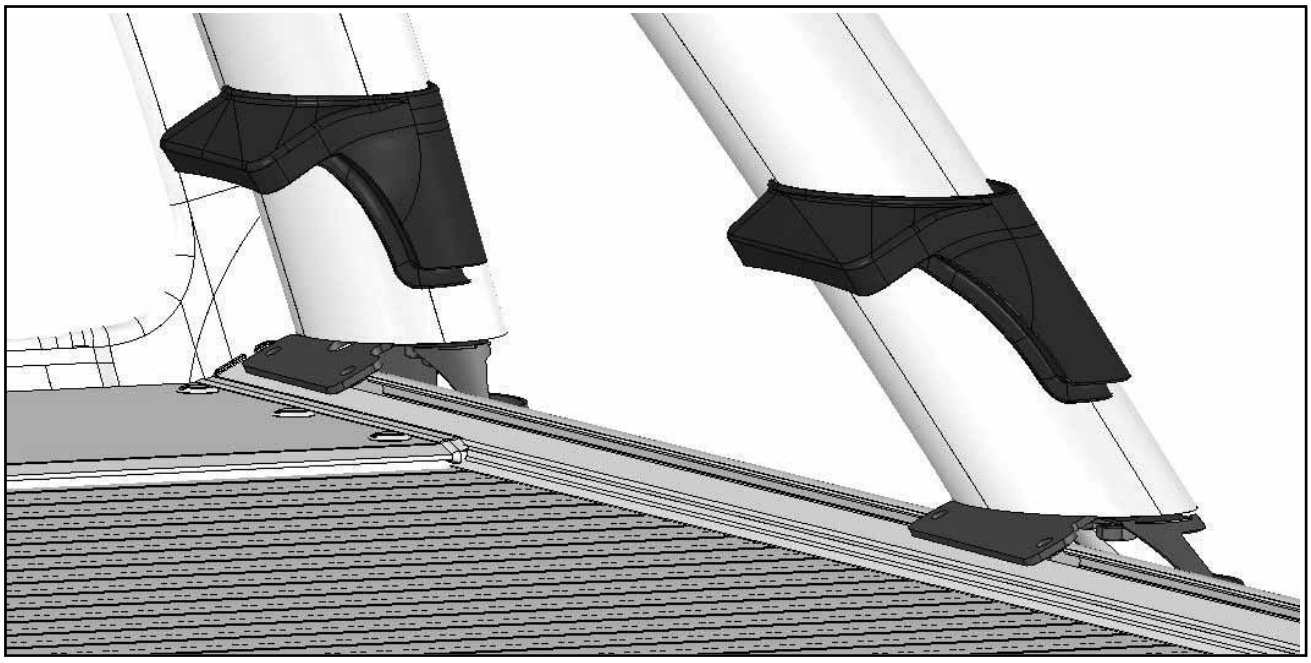

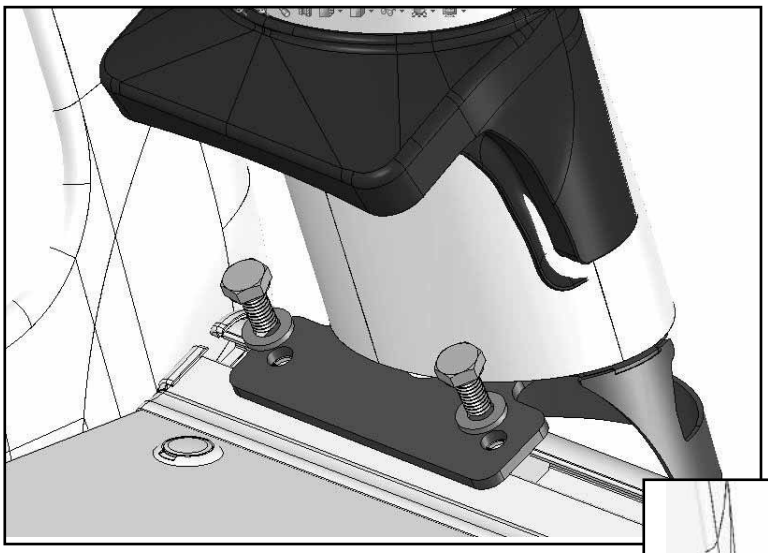

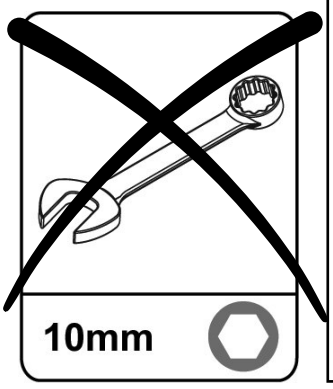

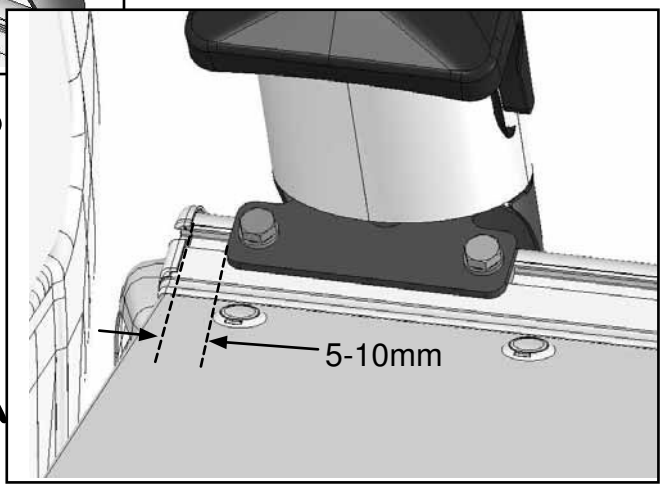

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

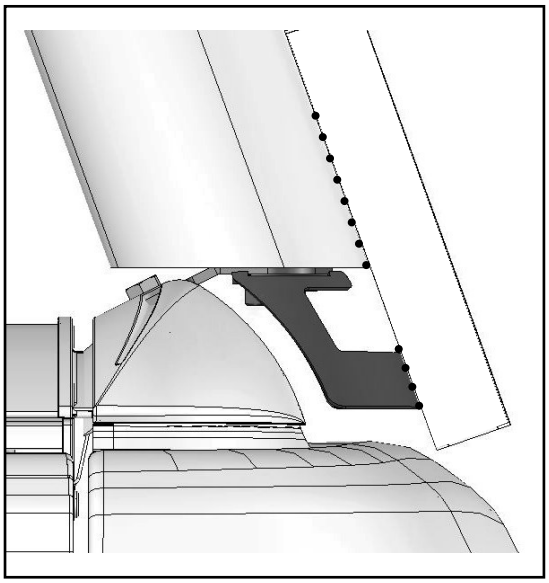

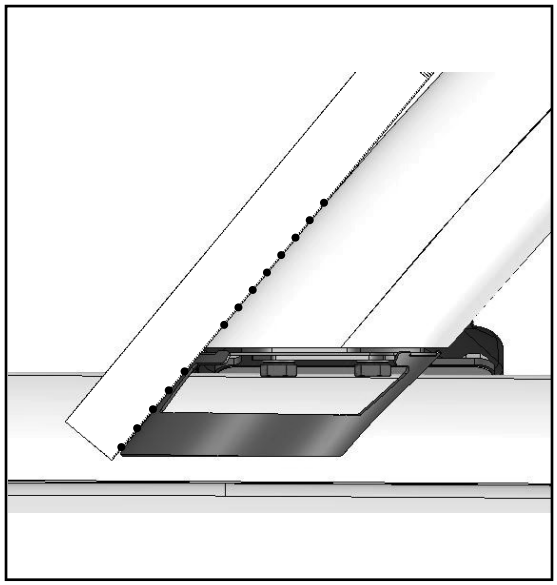

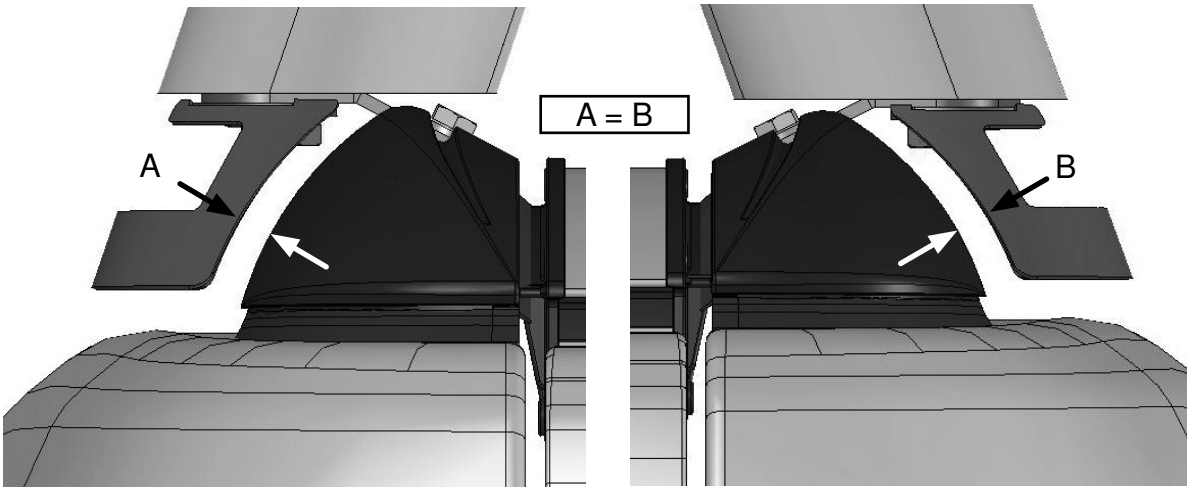

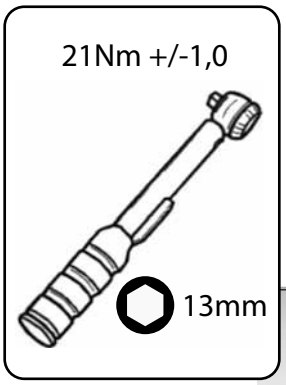

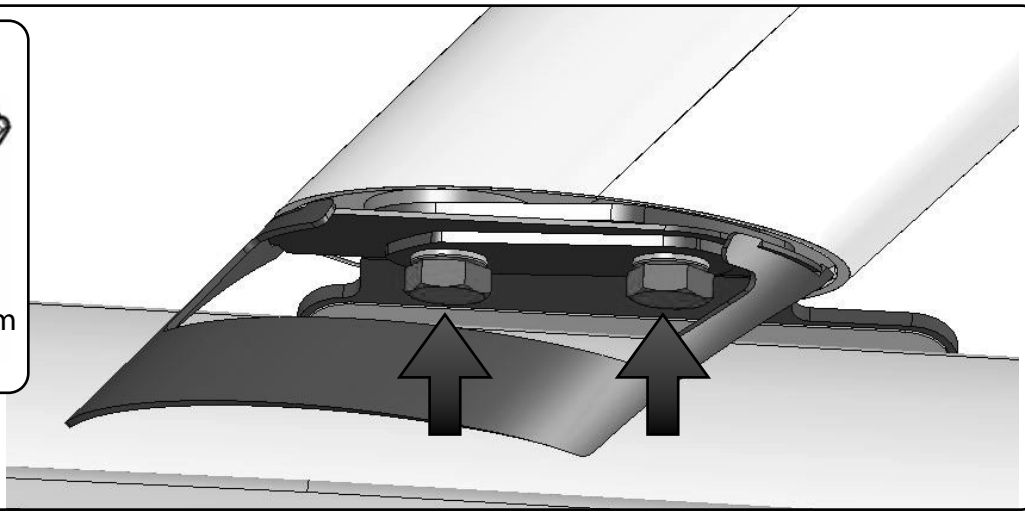

Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

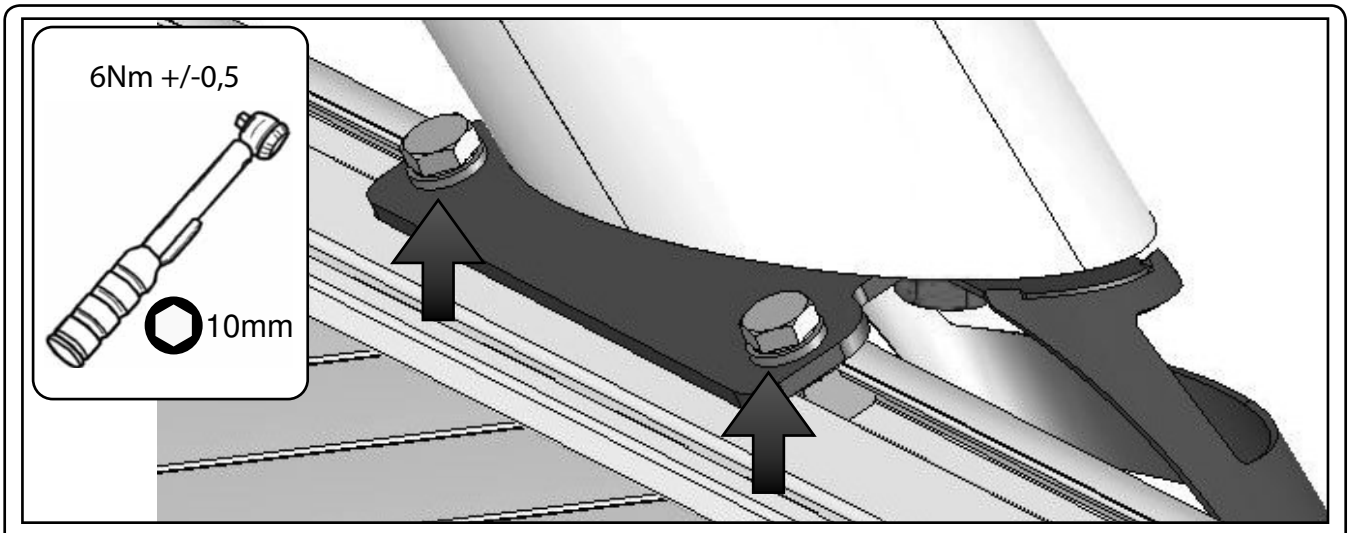

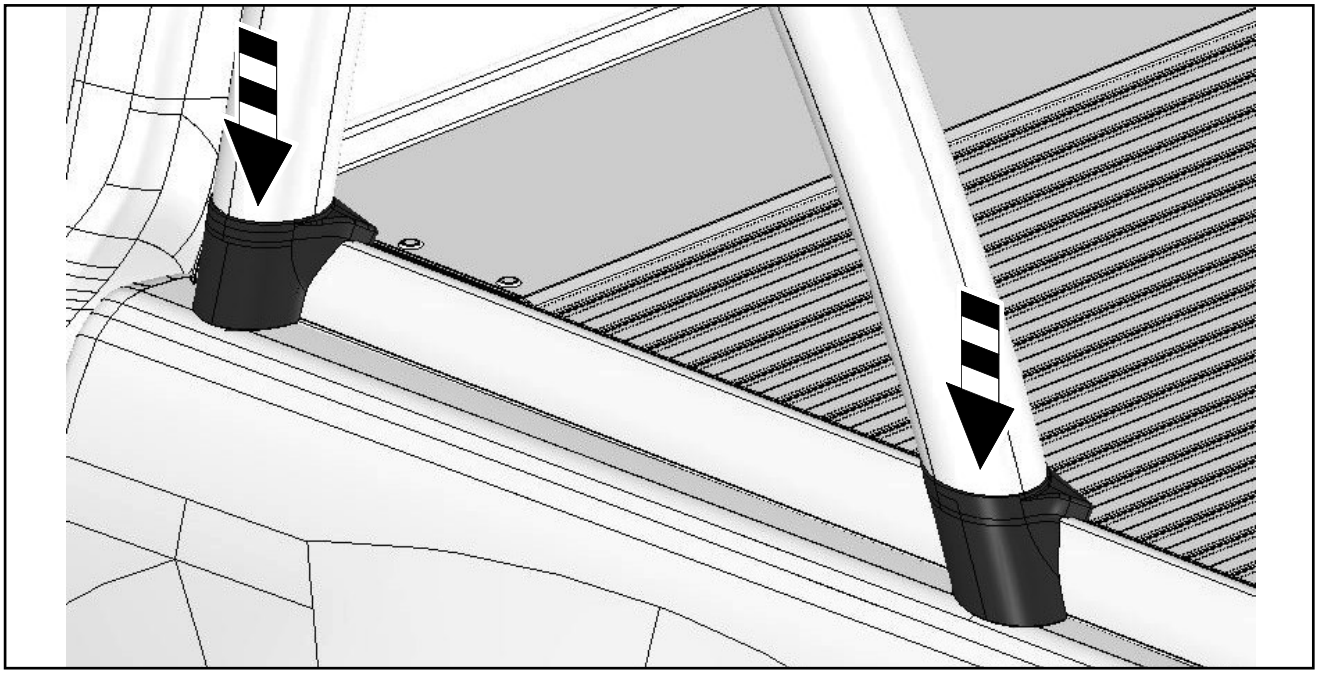

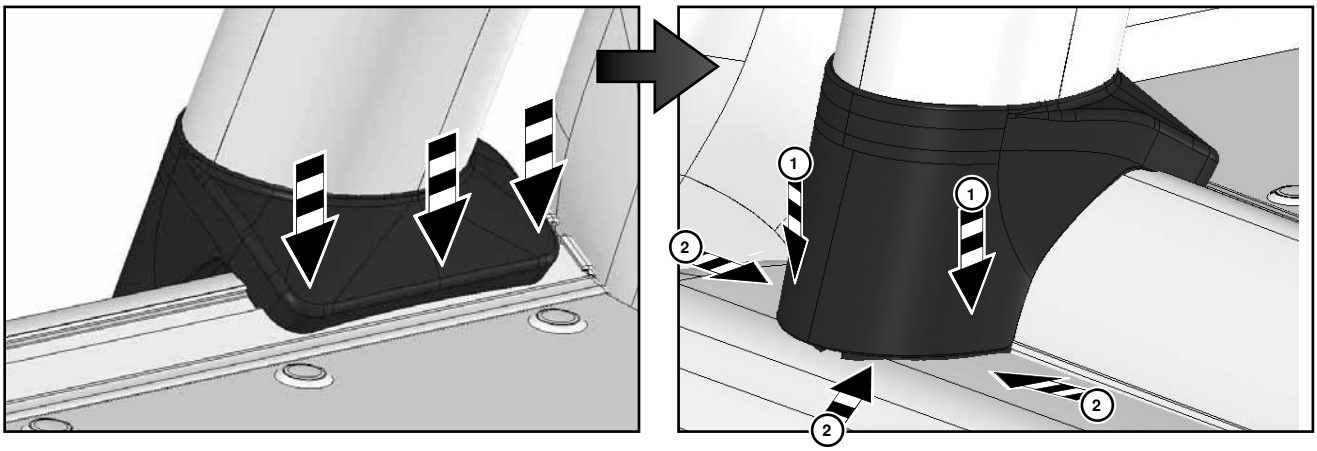

PedersholmParken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk

© Copyright, Mountain Top Industries ApS

Mountain Top®
INDUSTRIES APS

Genuine Ford Sport Bar
Installation Instructions

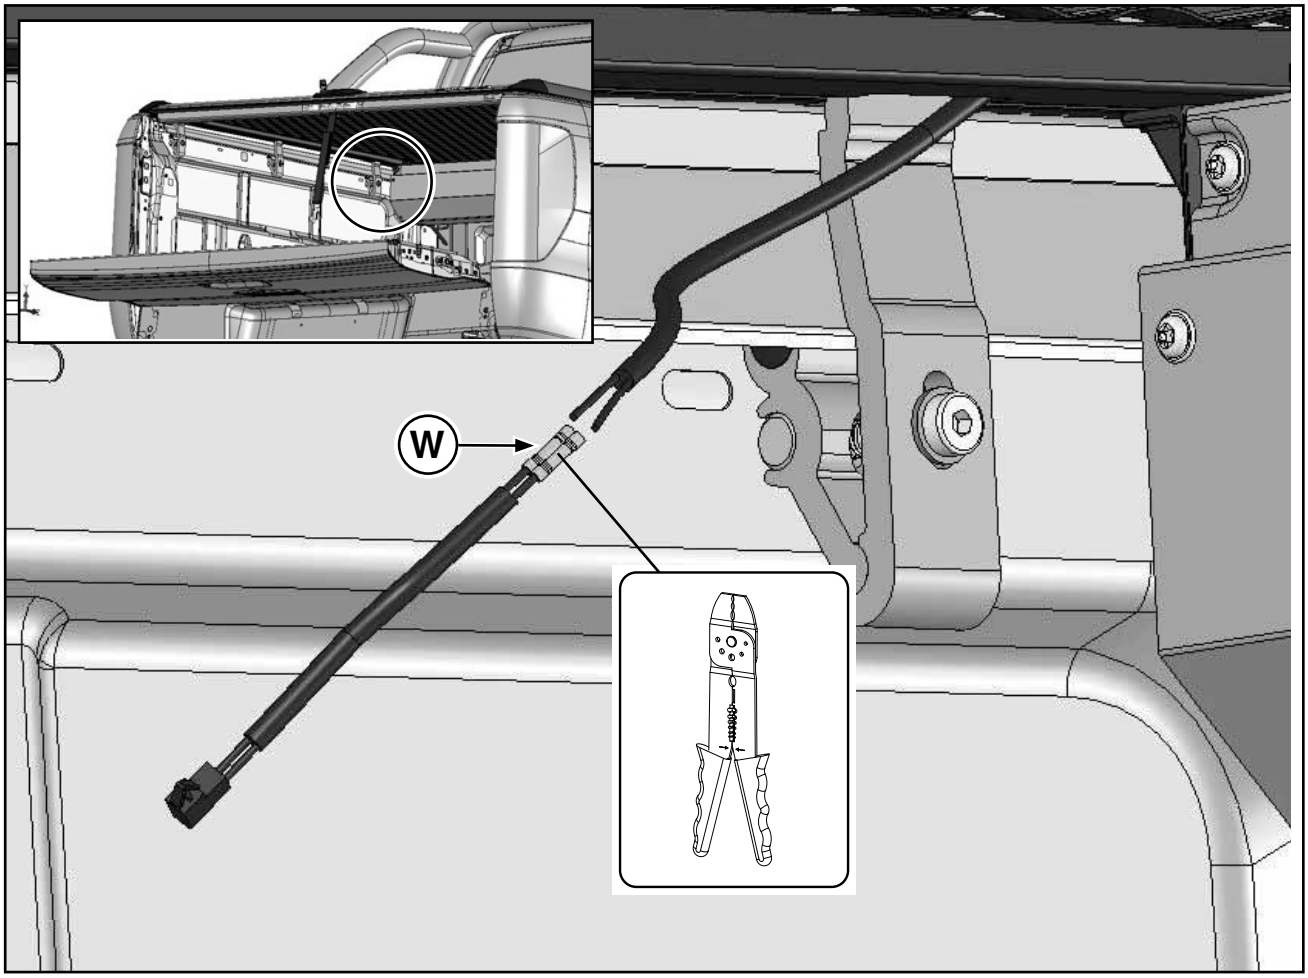

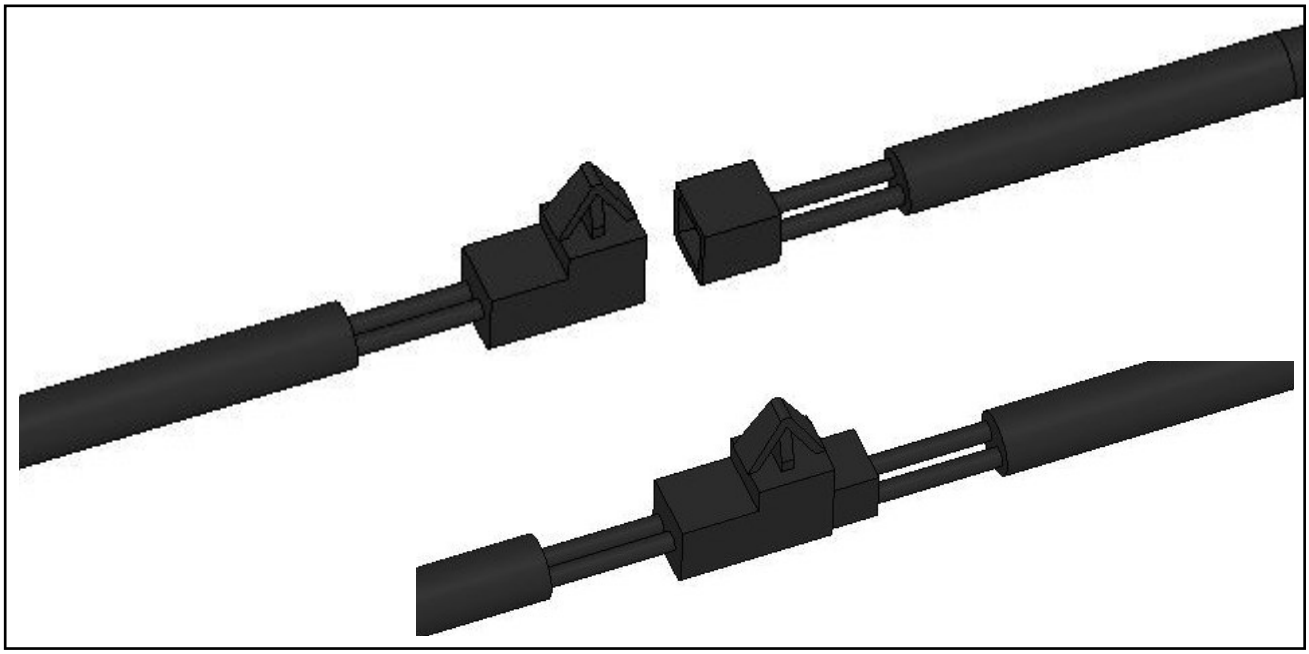

© Copyright, Mountain Top Industries ApS