


Genuine Ford Sport Bar  
Installation Instructions

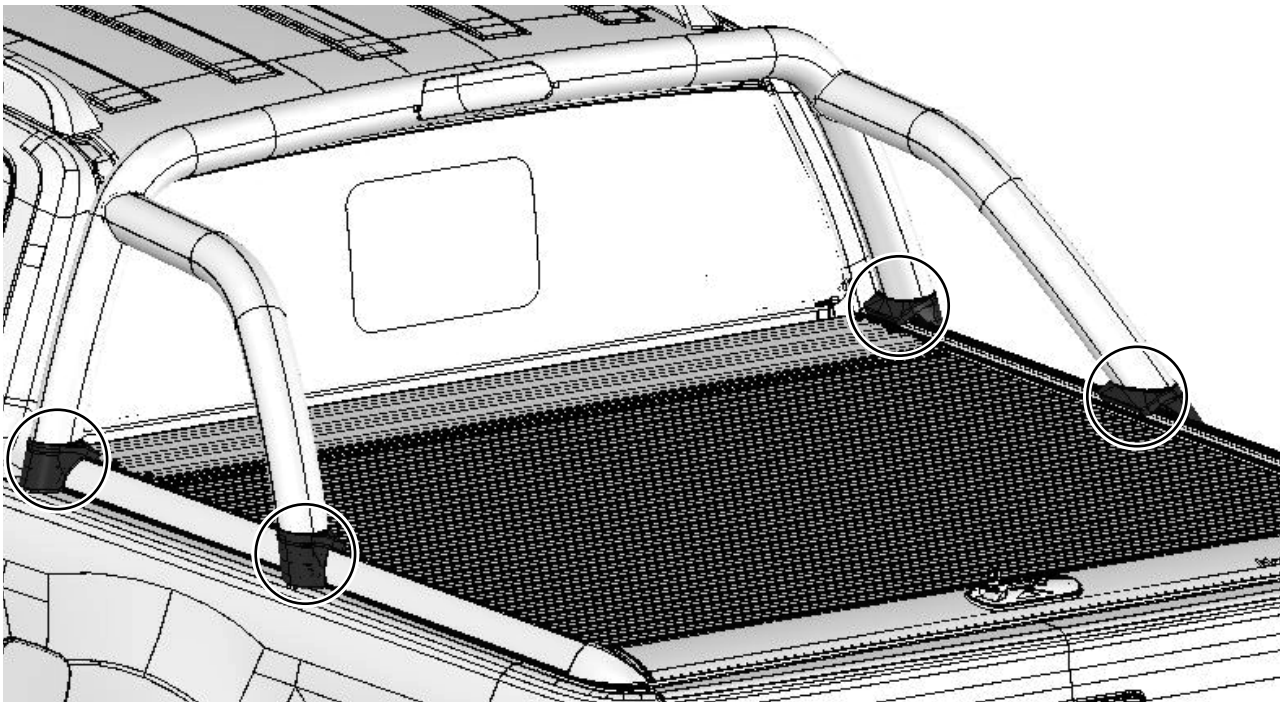

- GR** Installation instruction  
Mountain Top Roll
- D** Einbauanleitung  
Mountain Top Roll
- E** Instrucciones de montaje  
Mountain Top Roll
- F** Notice de montage  
Mountain Top Roll
- I** Istruzioni di montaggio  
Mountain Top Roll
- P** Instruções de instalação  
Mountain Top Roll
- NL** Installatie-instructies  
Mountain Top Roll
- DK** Monteringsvejledning  
Mountain Top Roll
- N** Monteringsveiledning  
Mountain Top Roll

- S** Monteringsanvisning  
Mountain Top Roll
- SF** Asennusohje  
Mountain Top Roll
- CZ** Návod k instalaci  
Mountain Top Roll
- H** Szerelési utasítás  
Mountain Top Roll
- PL** Instrukcja montażu  
Mountain Top Roll
- GR** Οδηγίες Εγκατάστασης  
Mountain Top Roll
- RUS** Инструкция по установке  
Mountain Top Roll
- TR** Montaj Talimatı  
Mountain Top Roll
- RO** Instrucțiuni de instalare  
Mountain Top Roll

Model Year: 2012 →

Part Number: -









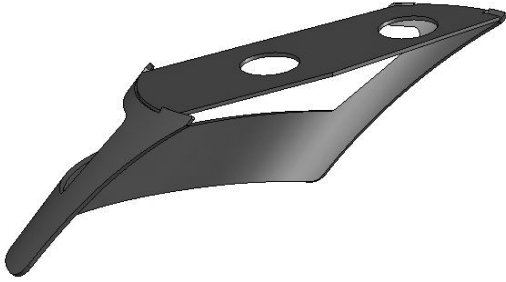

Weight: 8kg App.



Installation Time: 1 hr

Genuine Ford Sport Bar  
Installation Instructions

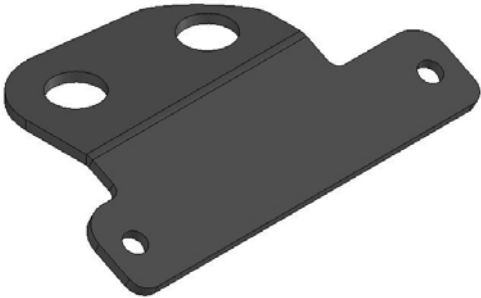

<p><b>A</b></p>  <p>Front Left 532 002</p>	<p><b>B</b></p>  <p>Front Right 532 001</p>
<p><b>C</b></p>  <p>Rear Left 532 004</p>	<p><b>D</b></p>  <p>Rear Right 532 003</p>
<p><b>E</b></p>  <p>Front Left 532 012</p>	<p><b>F</b></p>  <p>Front Right 532 011</p>
<p><b>G</b></p>  <p>Rear Left 532 014</p>	<p><b>H</b></p>  <p>Rear Right 532 013</p>

Genuine Ford Sport Bar  
Installation Instructions



Front Left 532 022



Front Right 532 021



Rear Left 532 024



Rear Right 532 023



Kit




532 015 (x 2)




532 016 (x 2)



M8x25 (x 8)

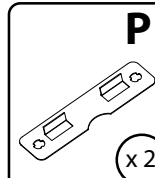


(x 2)

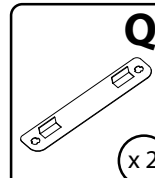


(x 2)




(x 1)

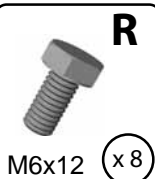

M6x12 (x 8)

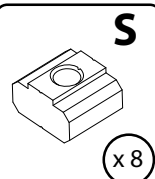


(x 8)

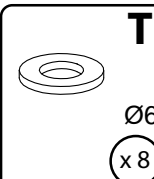


Ø6

(x 8)

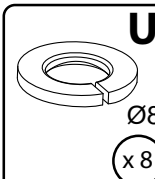


Ø8

(x 8)



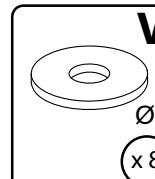


Ø8



(x 8)

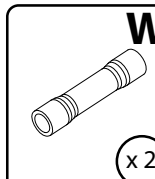


(x 2)

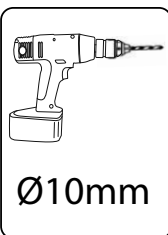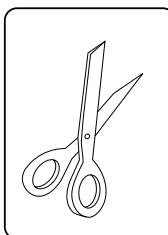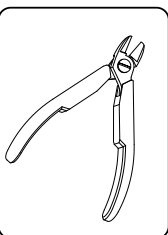

Ø10mm

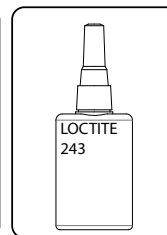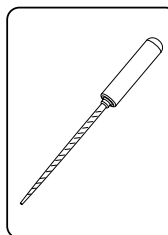


LOCTITE  
243

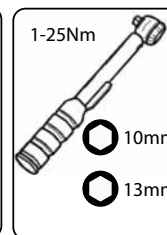



1-25Nm

10mm






13mm

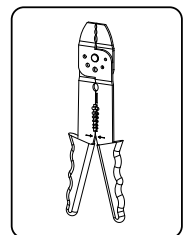


Genuine Ford Sport Bar  
Installation Instructions

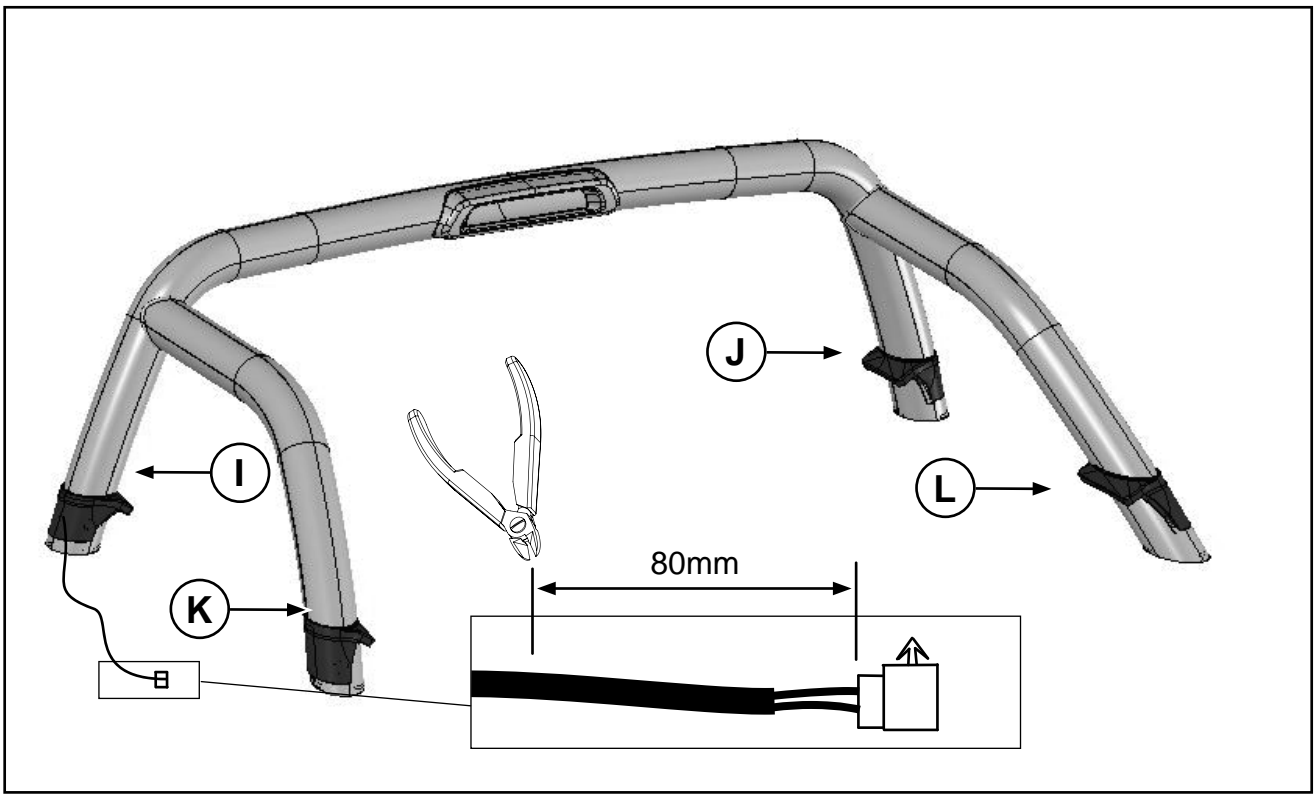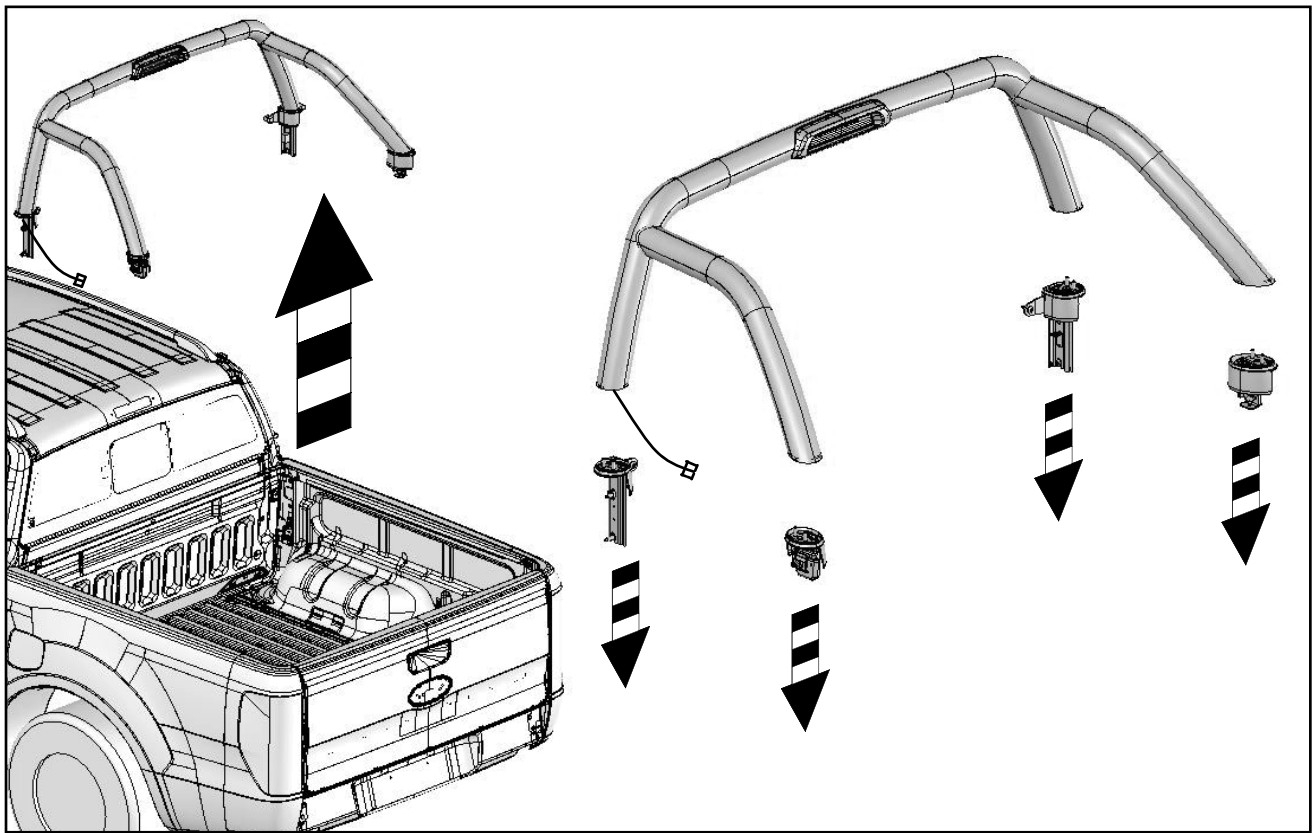


Genuine Ford Sport Bar  
Installation Instructions

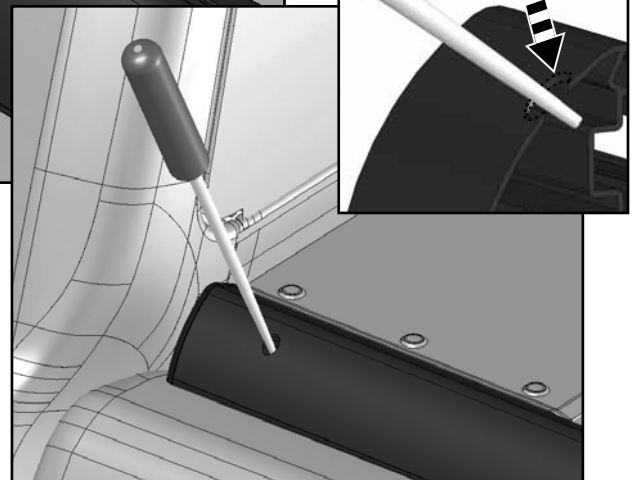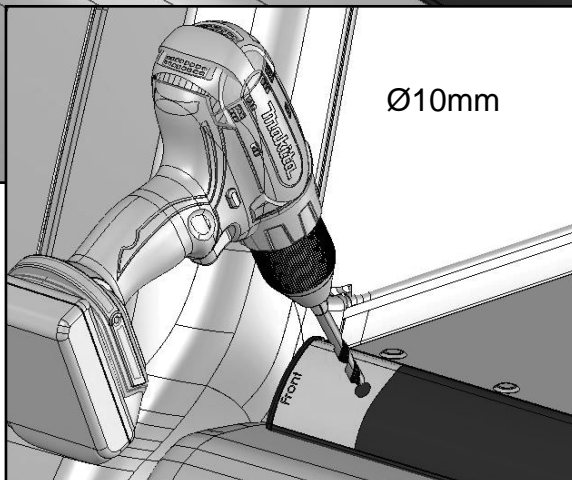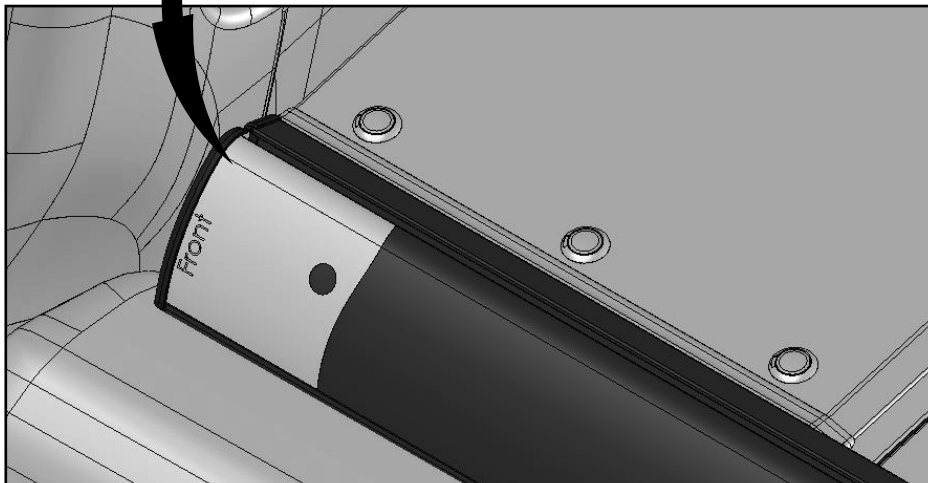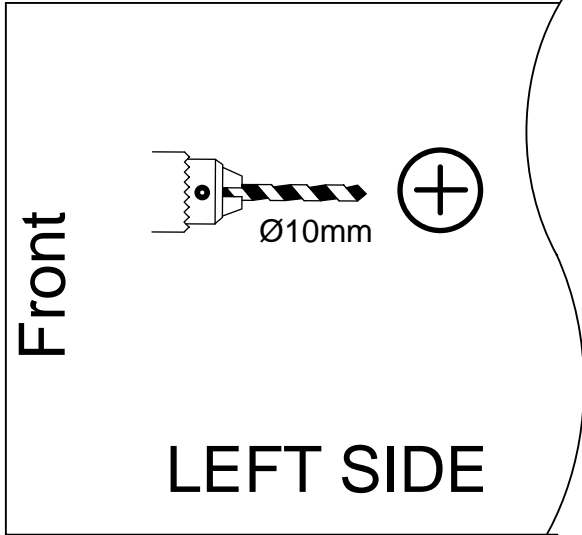


Genuine Ford Sport Bar  
Installation Instructions

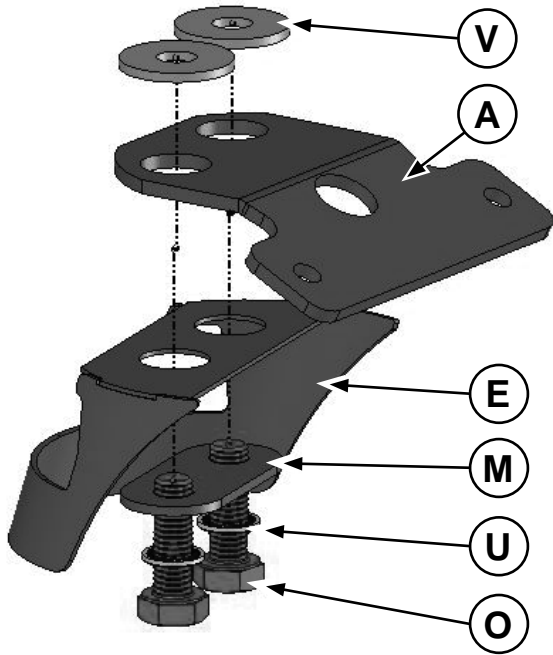


Front Left

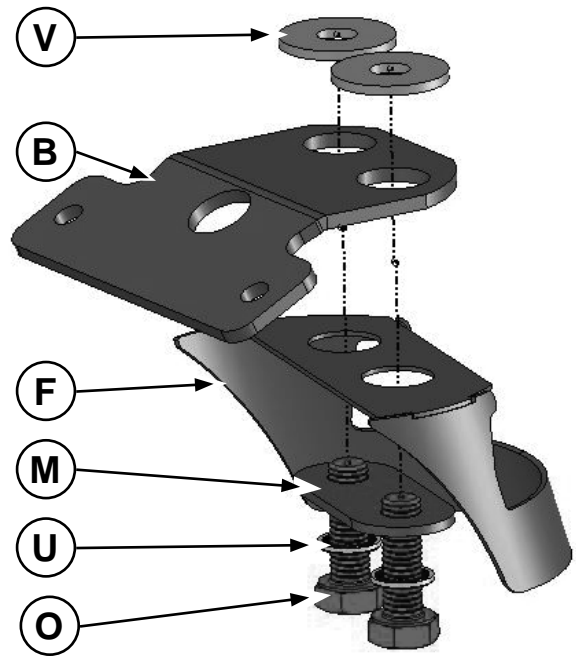

Front Right

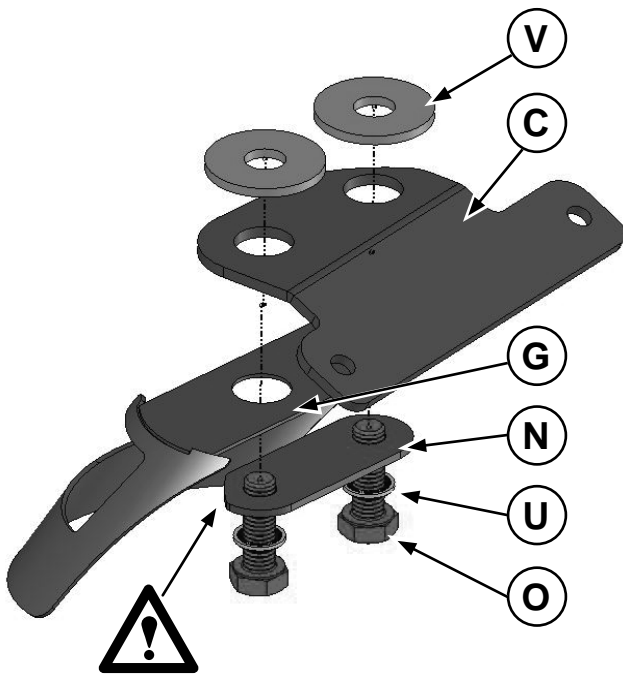


Rear Left



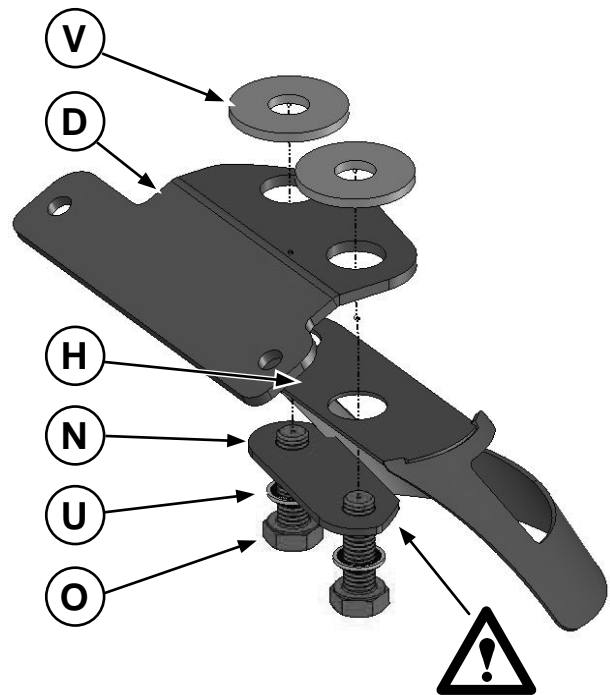


Rear Right

Genuine Ford Sport Bar  
Installation Instructions

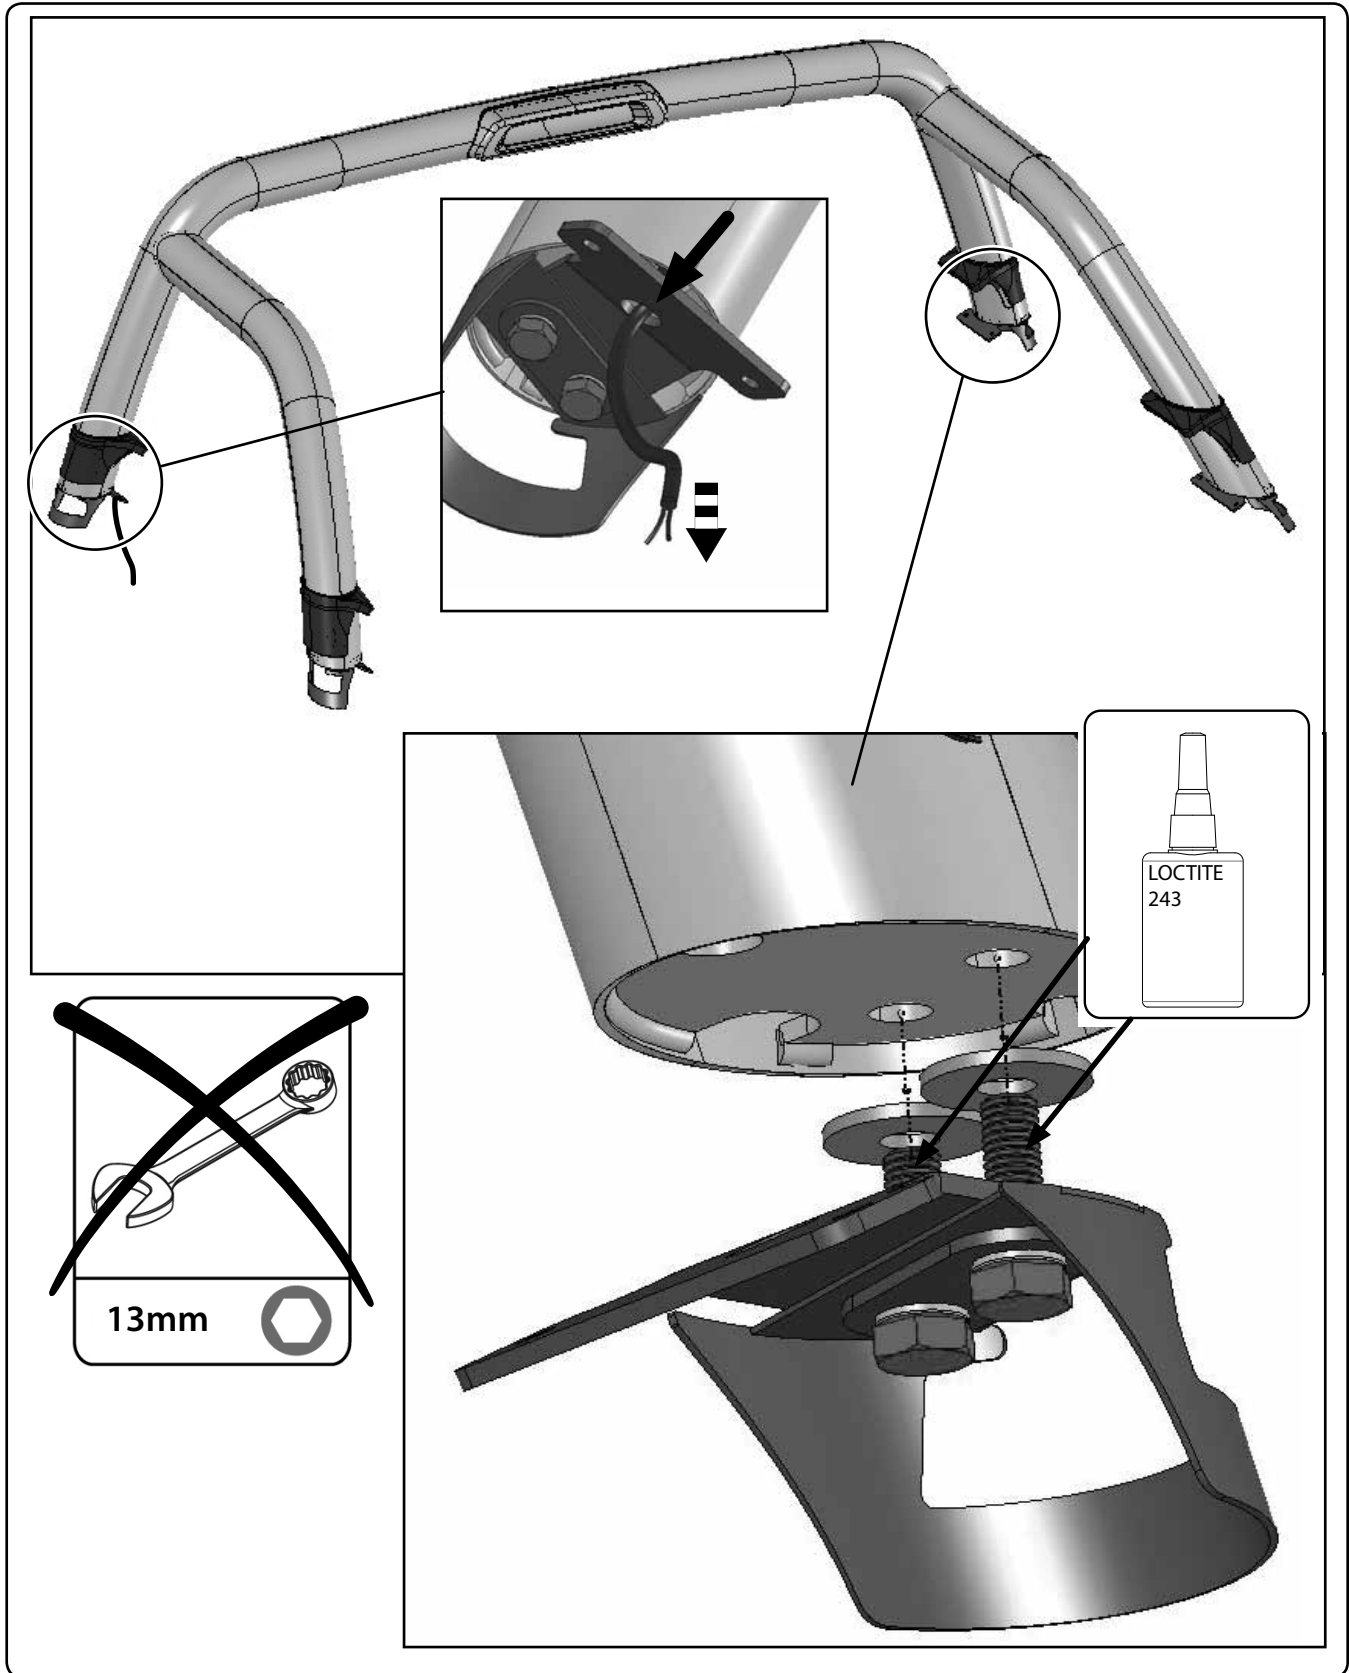


Genuine Ford Sport Bar  
Installation Instructions


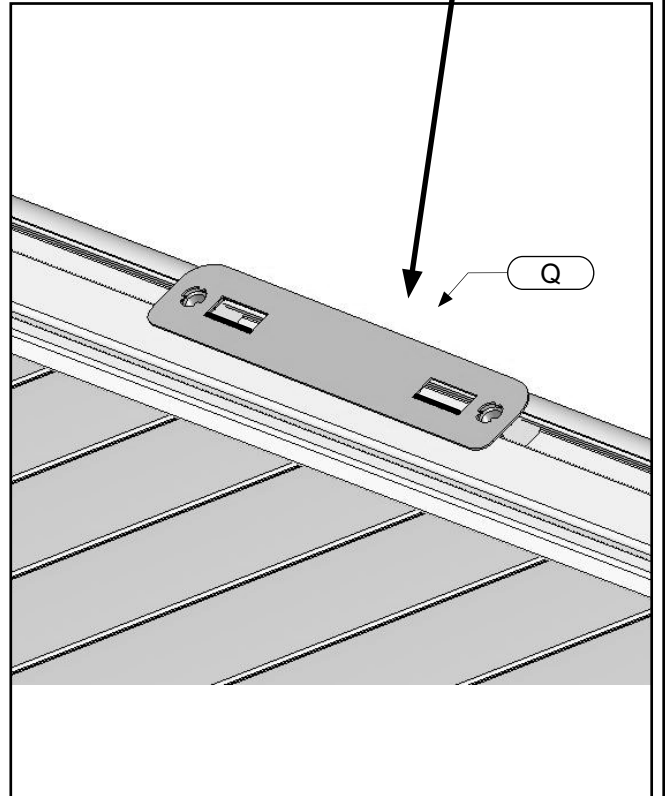
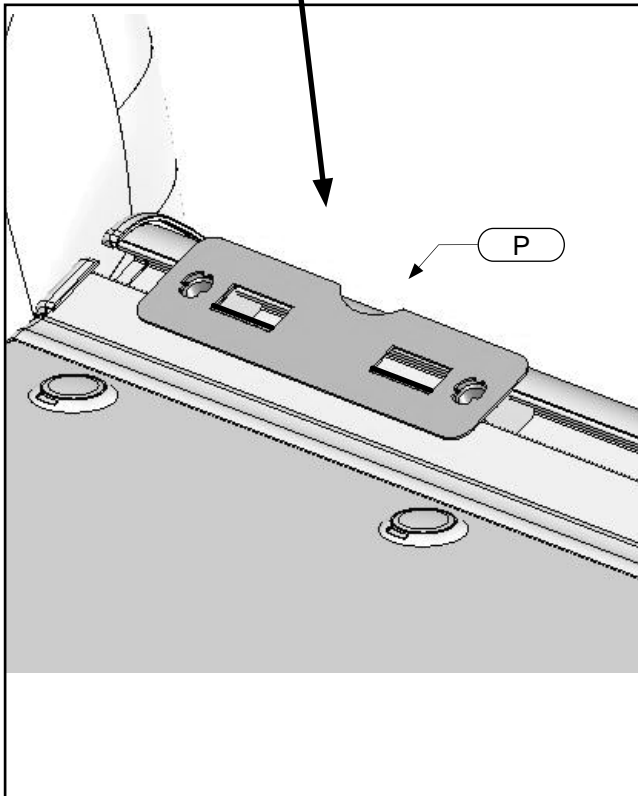
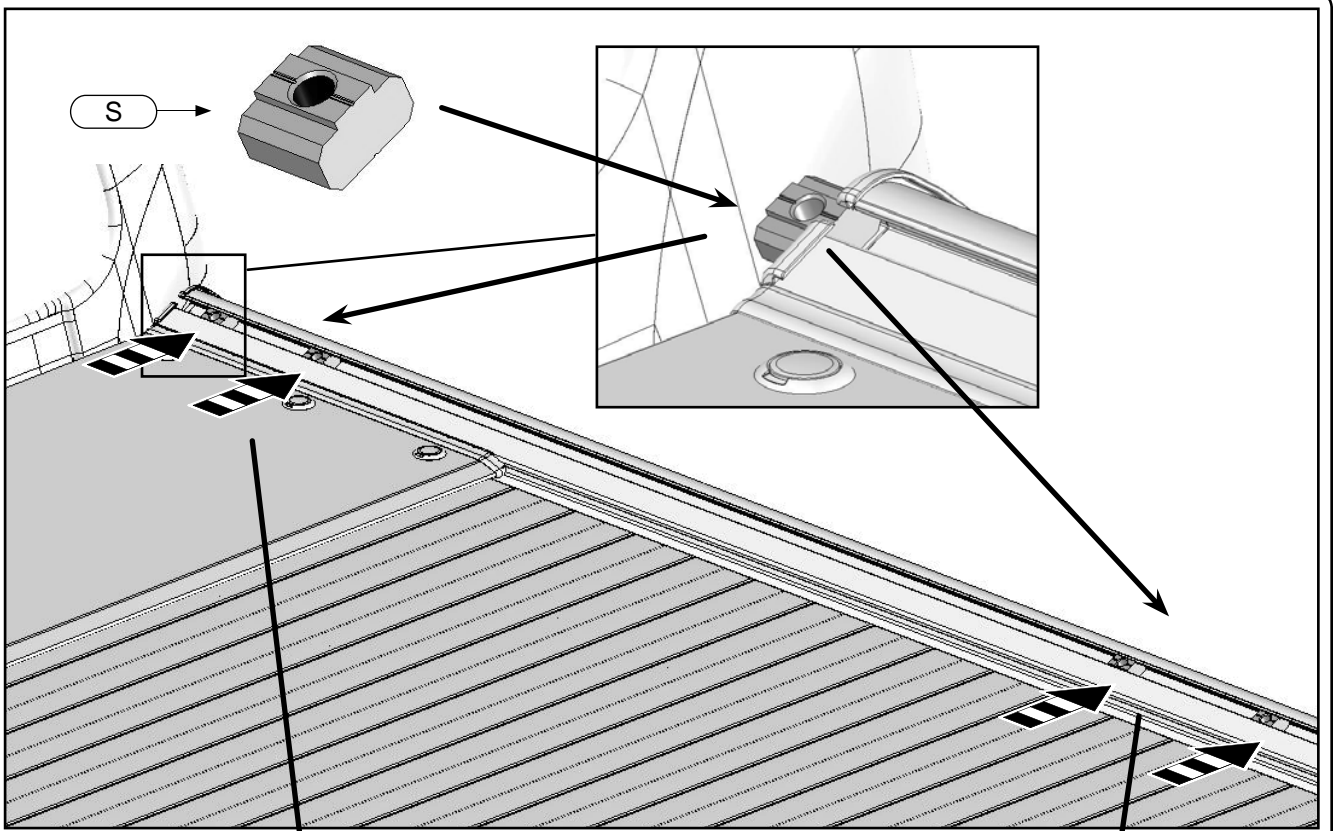







Genuine Ford Sport Bar  
Installation Instructions

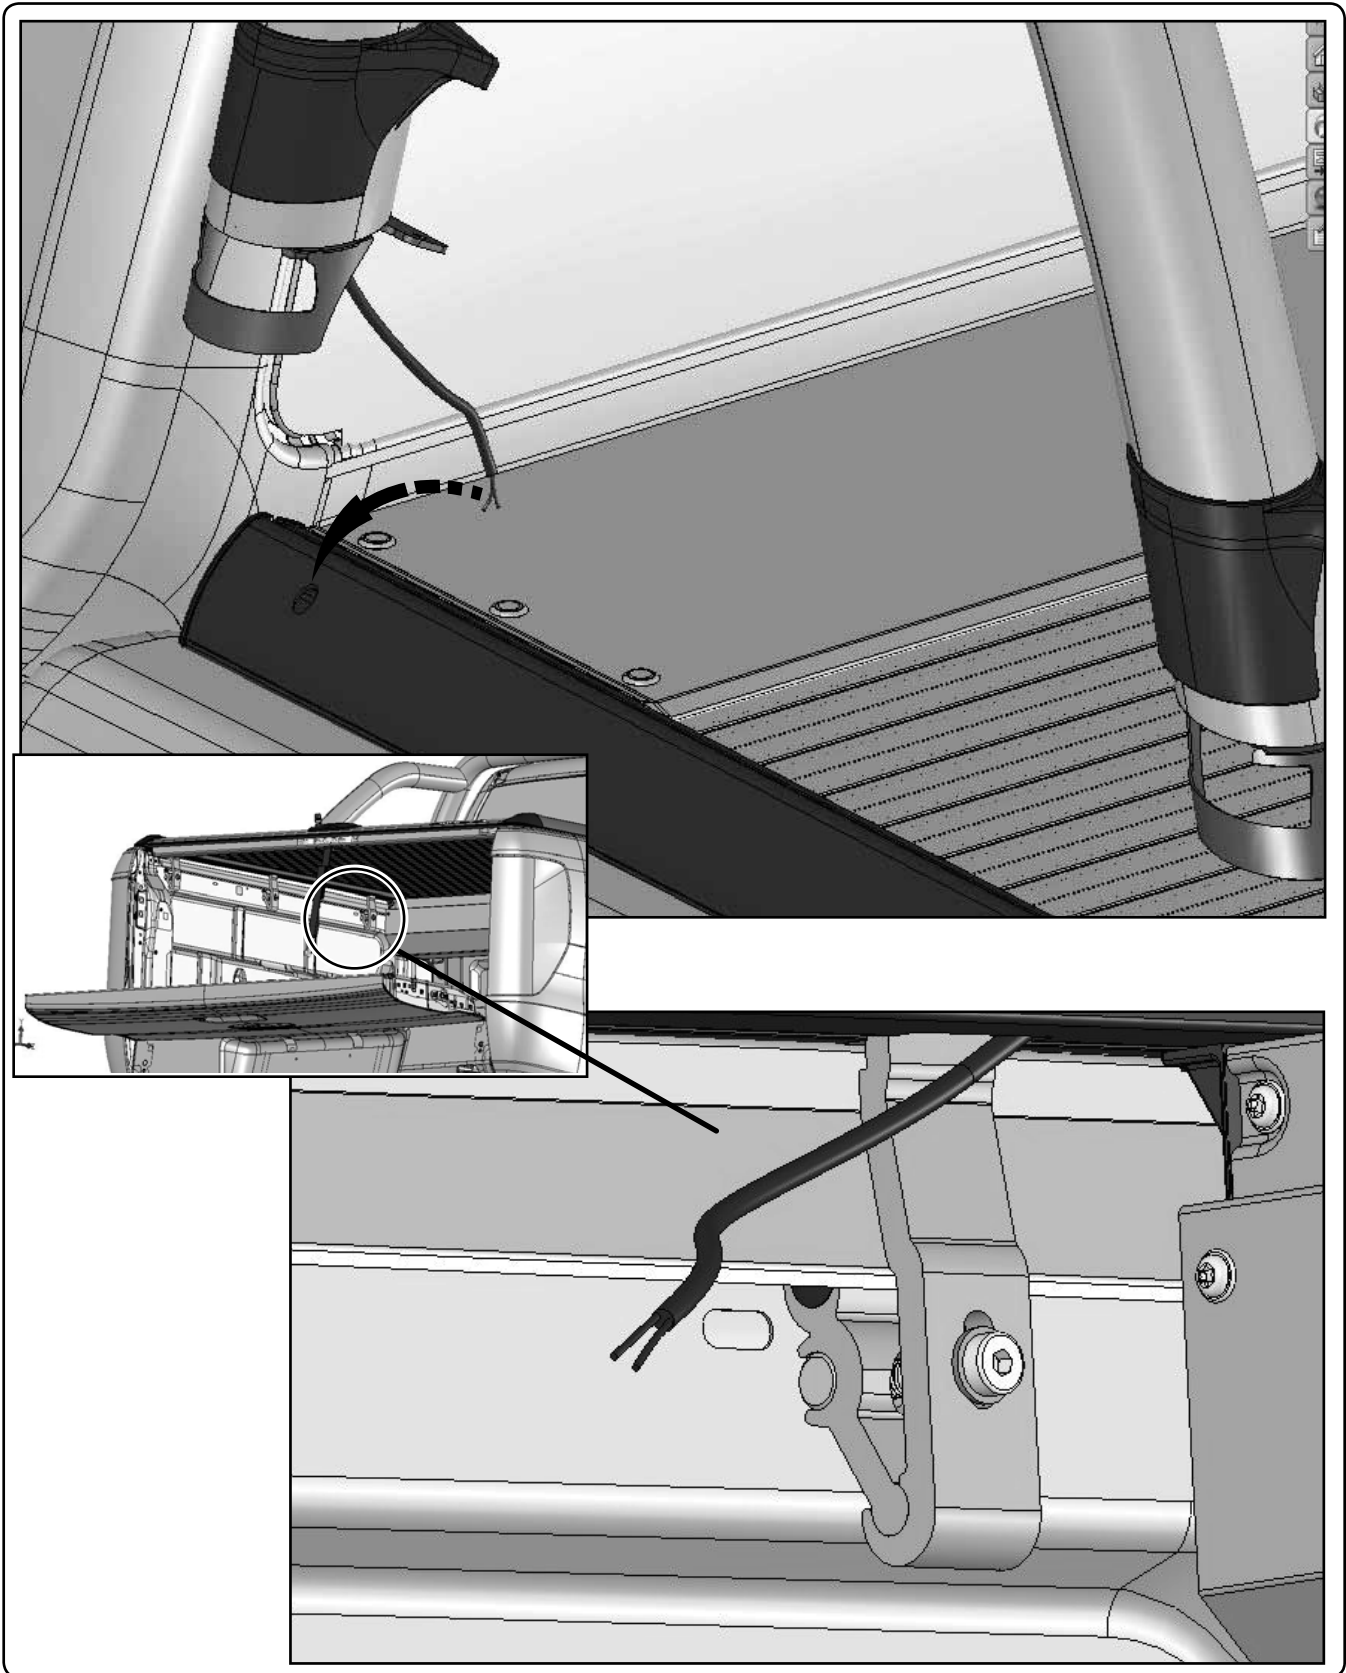


Genuine Ford Sport Bar  
Installation Instructions

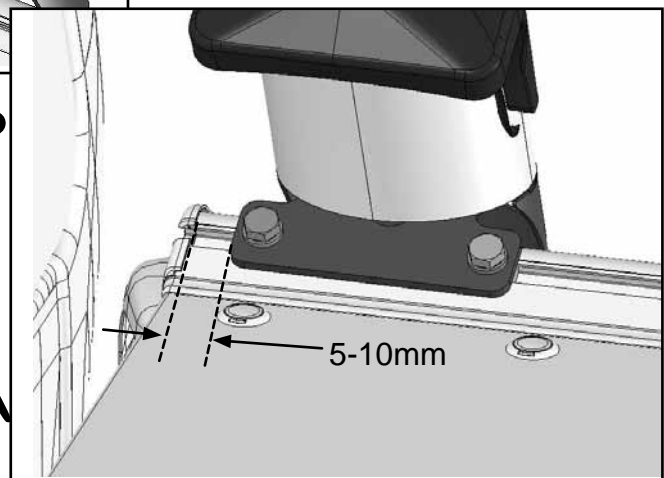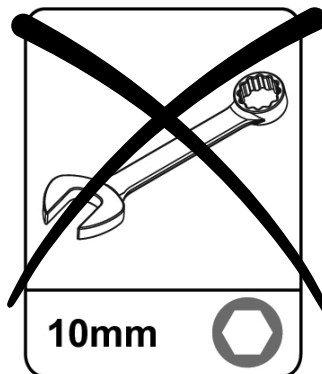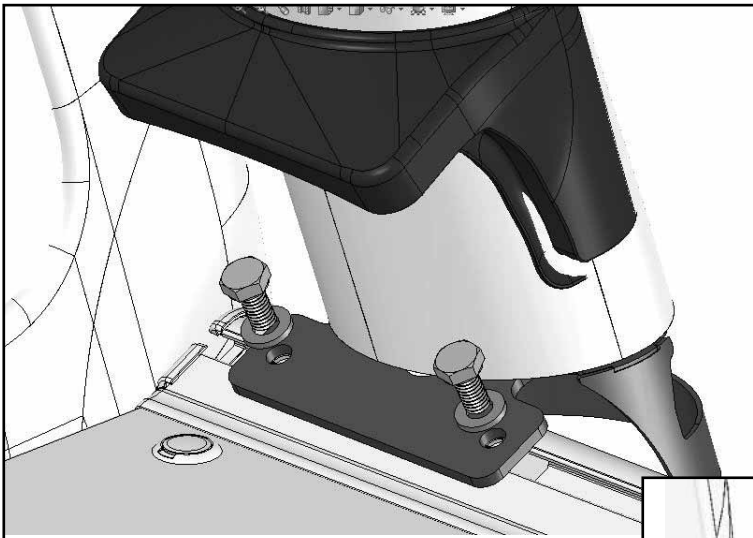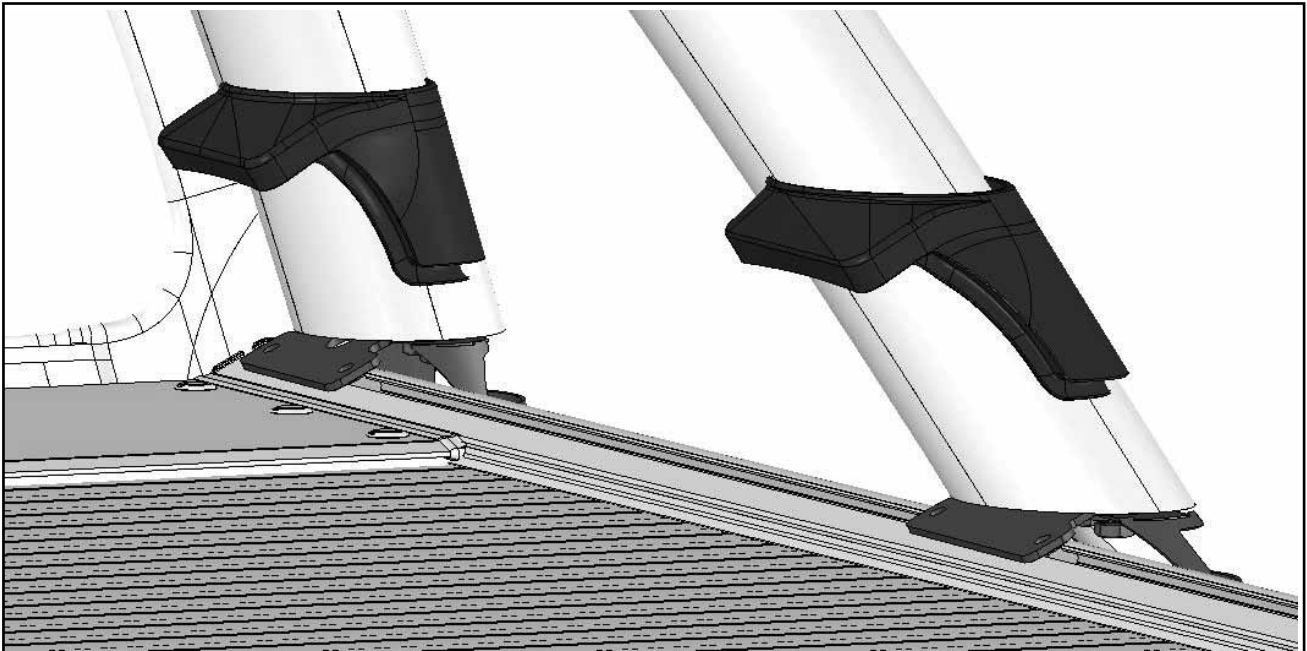

Genuine Ford Sport Bar  
Installation Instructions

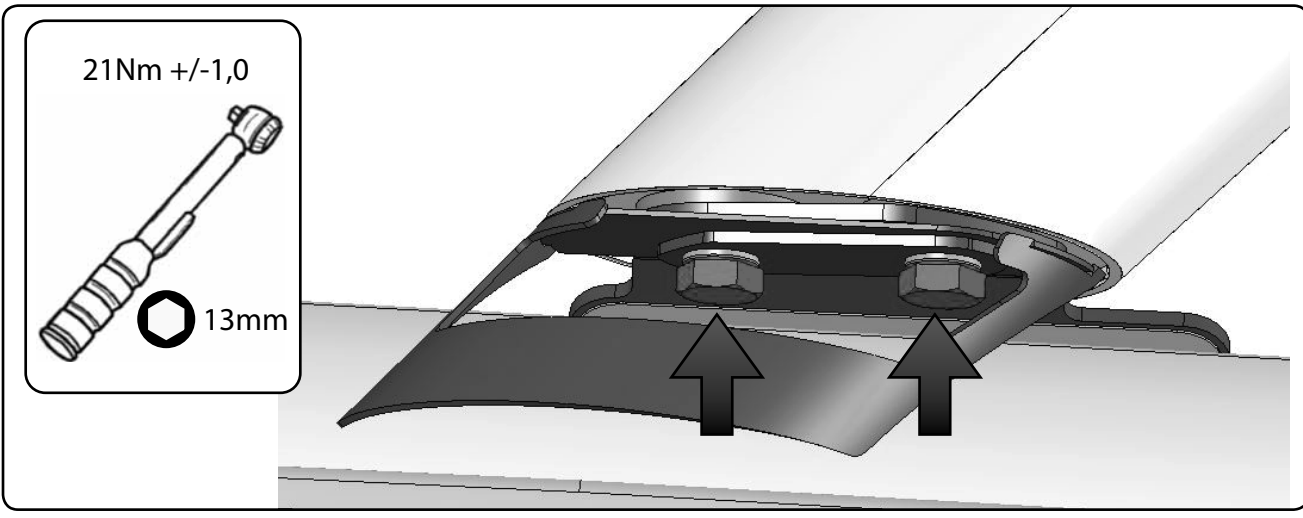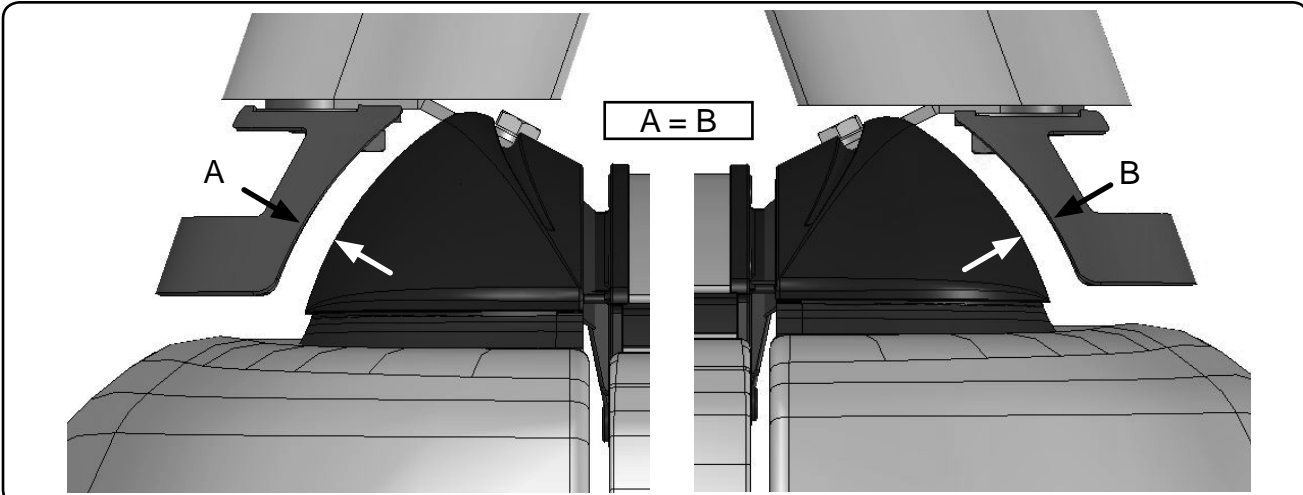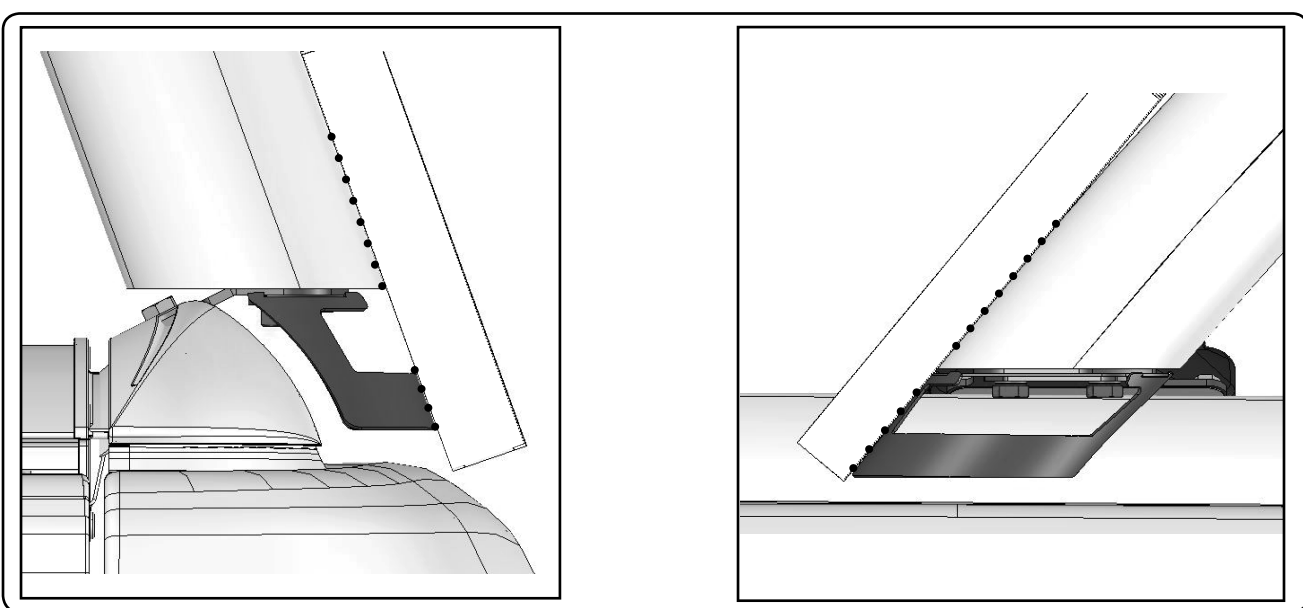

Genuine Ford Sport Bar  
Installation Instructions

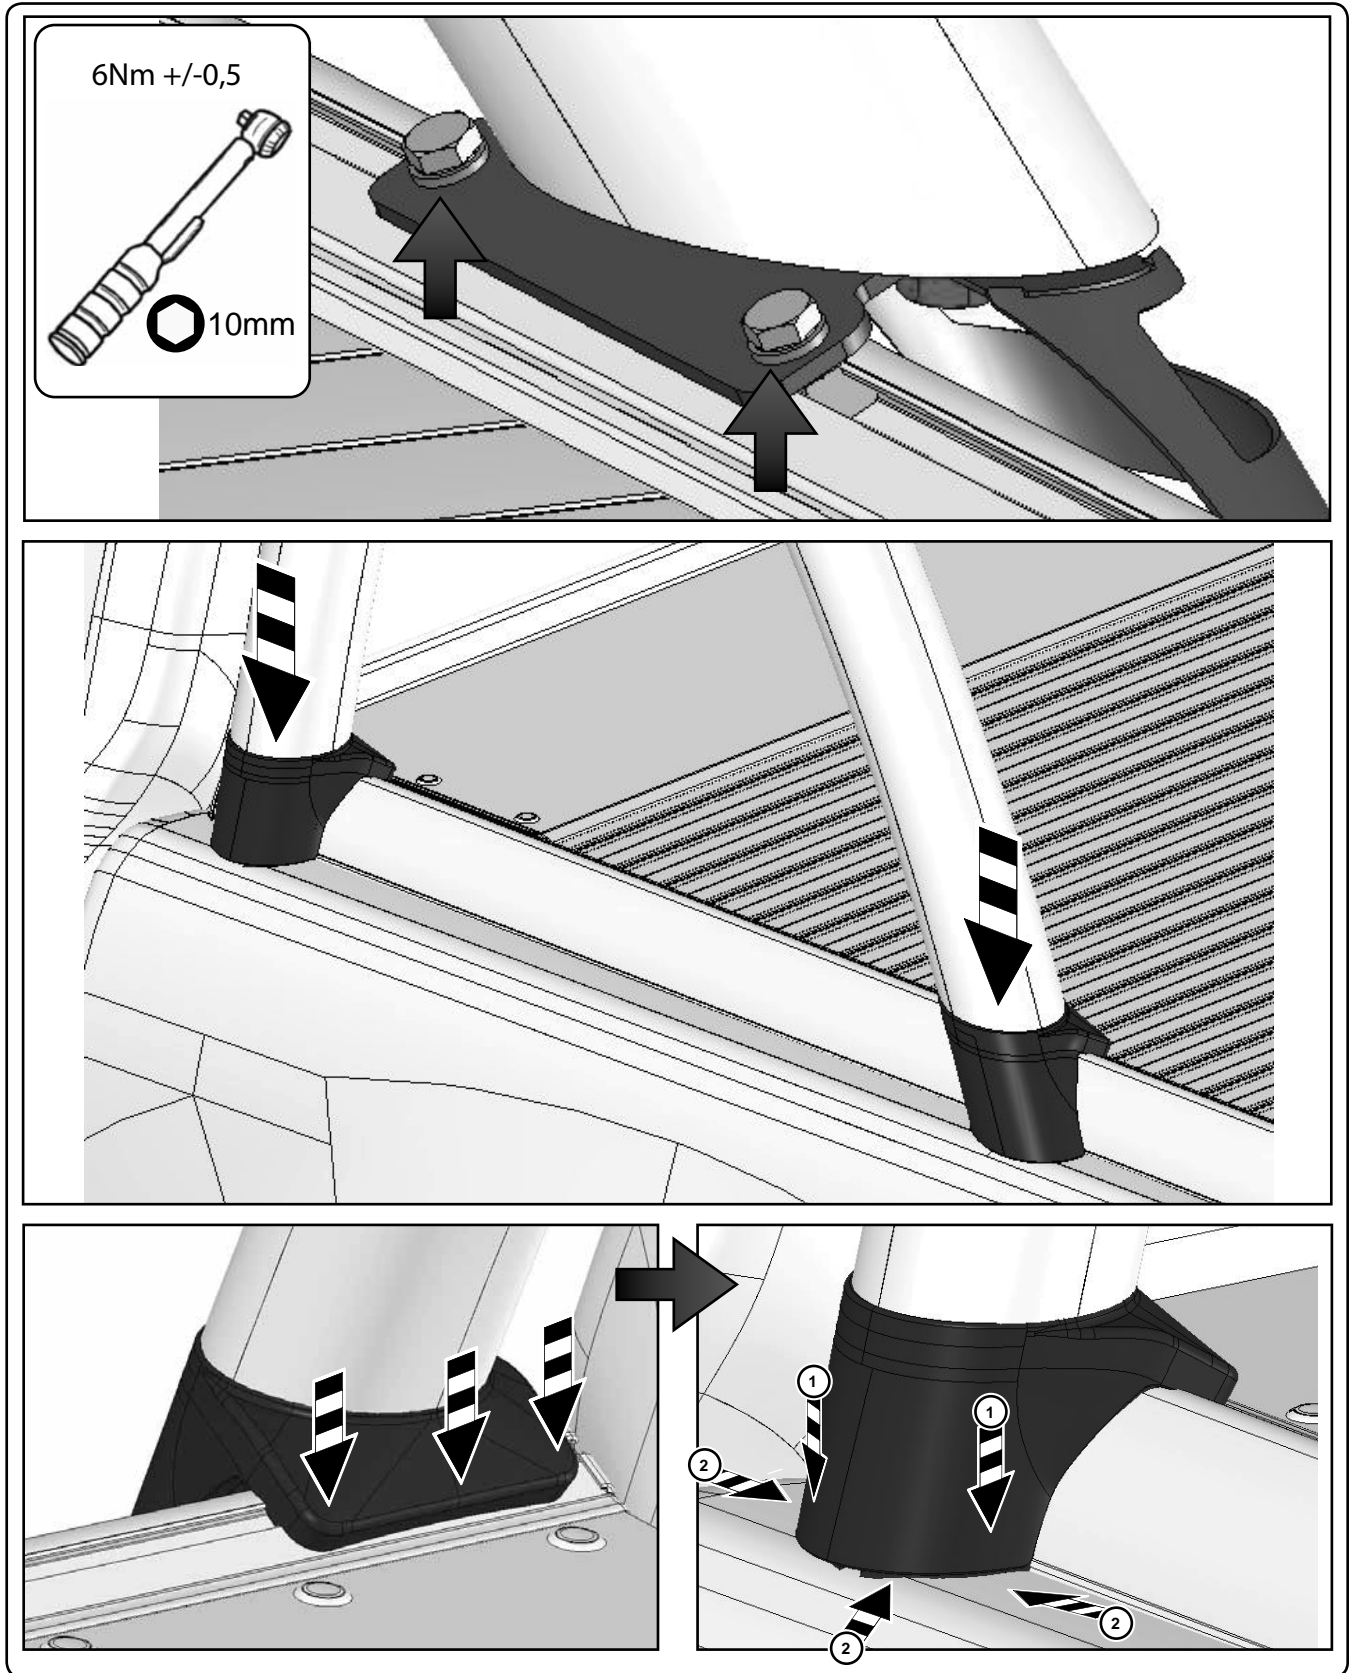

Genuine Ford Sport Bar  
Installation Instructions

