


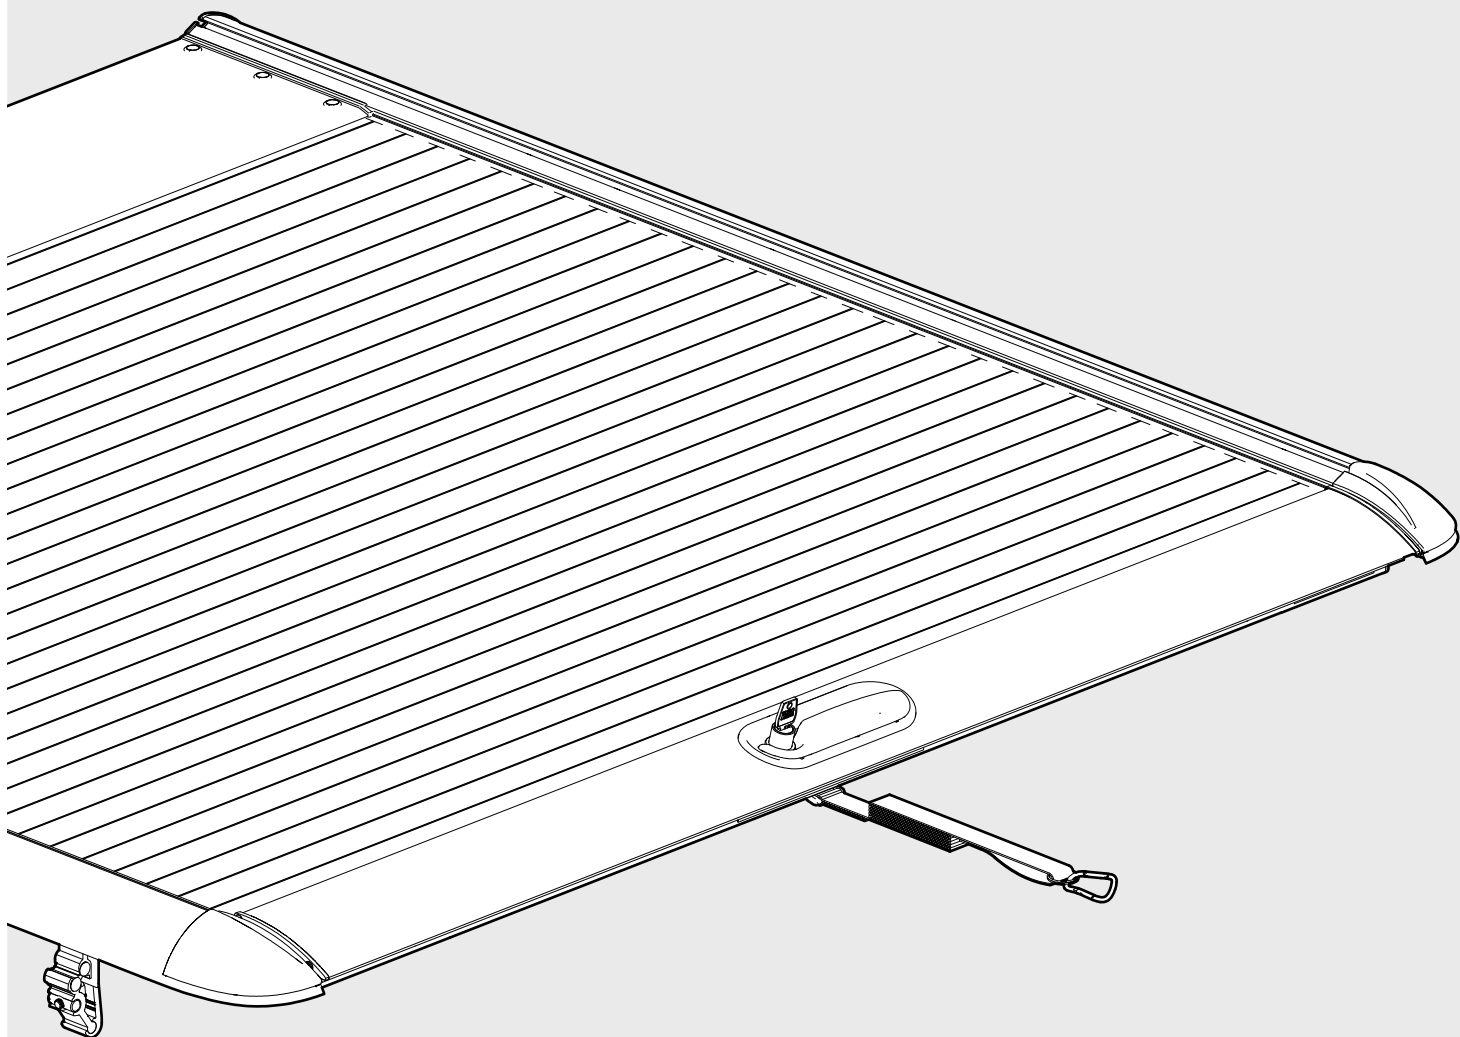






ULLSTEIN
CONCEPTS
GMBH





Mountain Top® Roll






Installation manual



DOWNLOAD PDF

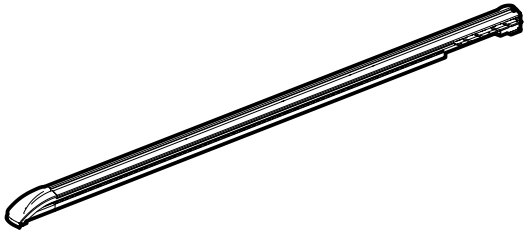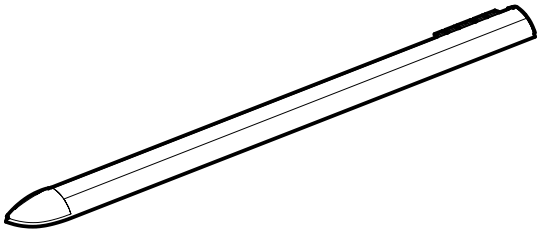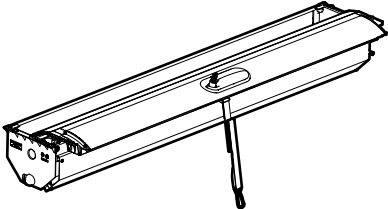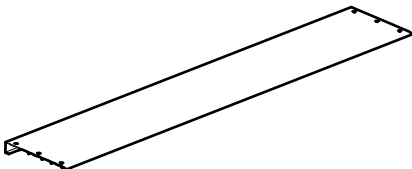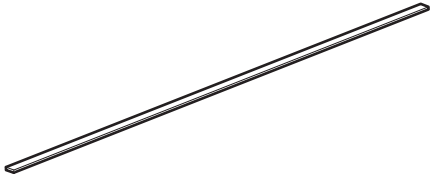Parts	
A	 x 1
B	 x 1
C	 x 1
D	 x 1
E	 x 1

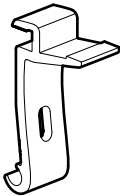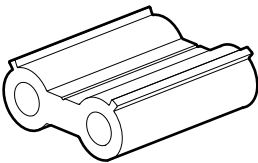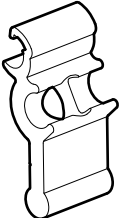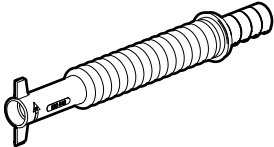
Kit	
F	 x 6
G	 x 6
H	 x 6
I	 x 6
J	 x 2
K	 x 1
L	 x 1

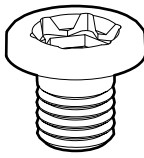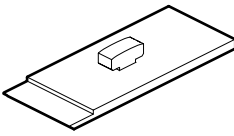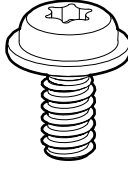Kit	
M	 x 24
N	 x 6
O	 x 6
P	 x 6
Q	 x 2
R	 x 2
S	 x 1
T	 x 4




Kit # 824 087

U

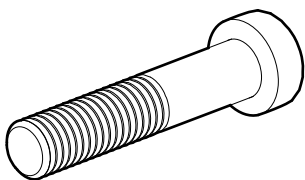

x 6

V

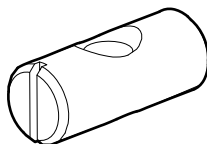

x 6


W




x 6




Tools and materials needed

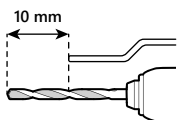

Ø 24 mm

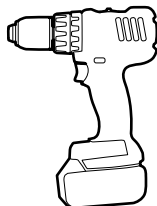



1 - 25 Nm

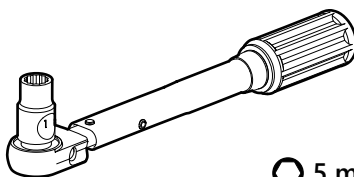

○ 5 mm
★ T15







Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

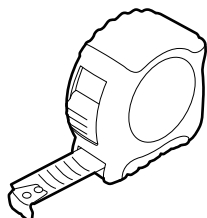




1



Applying rust protection

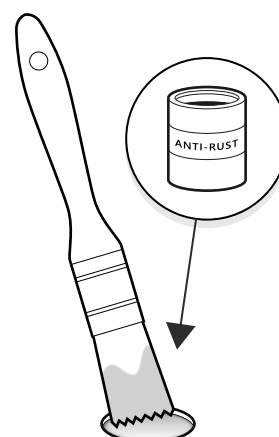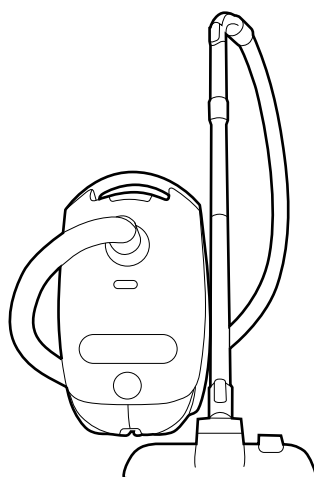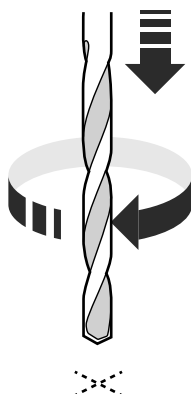



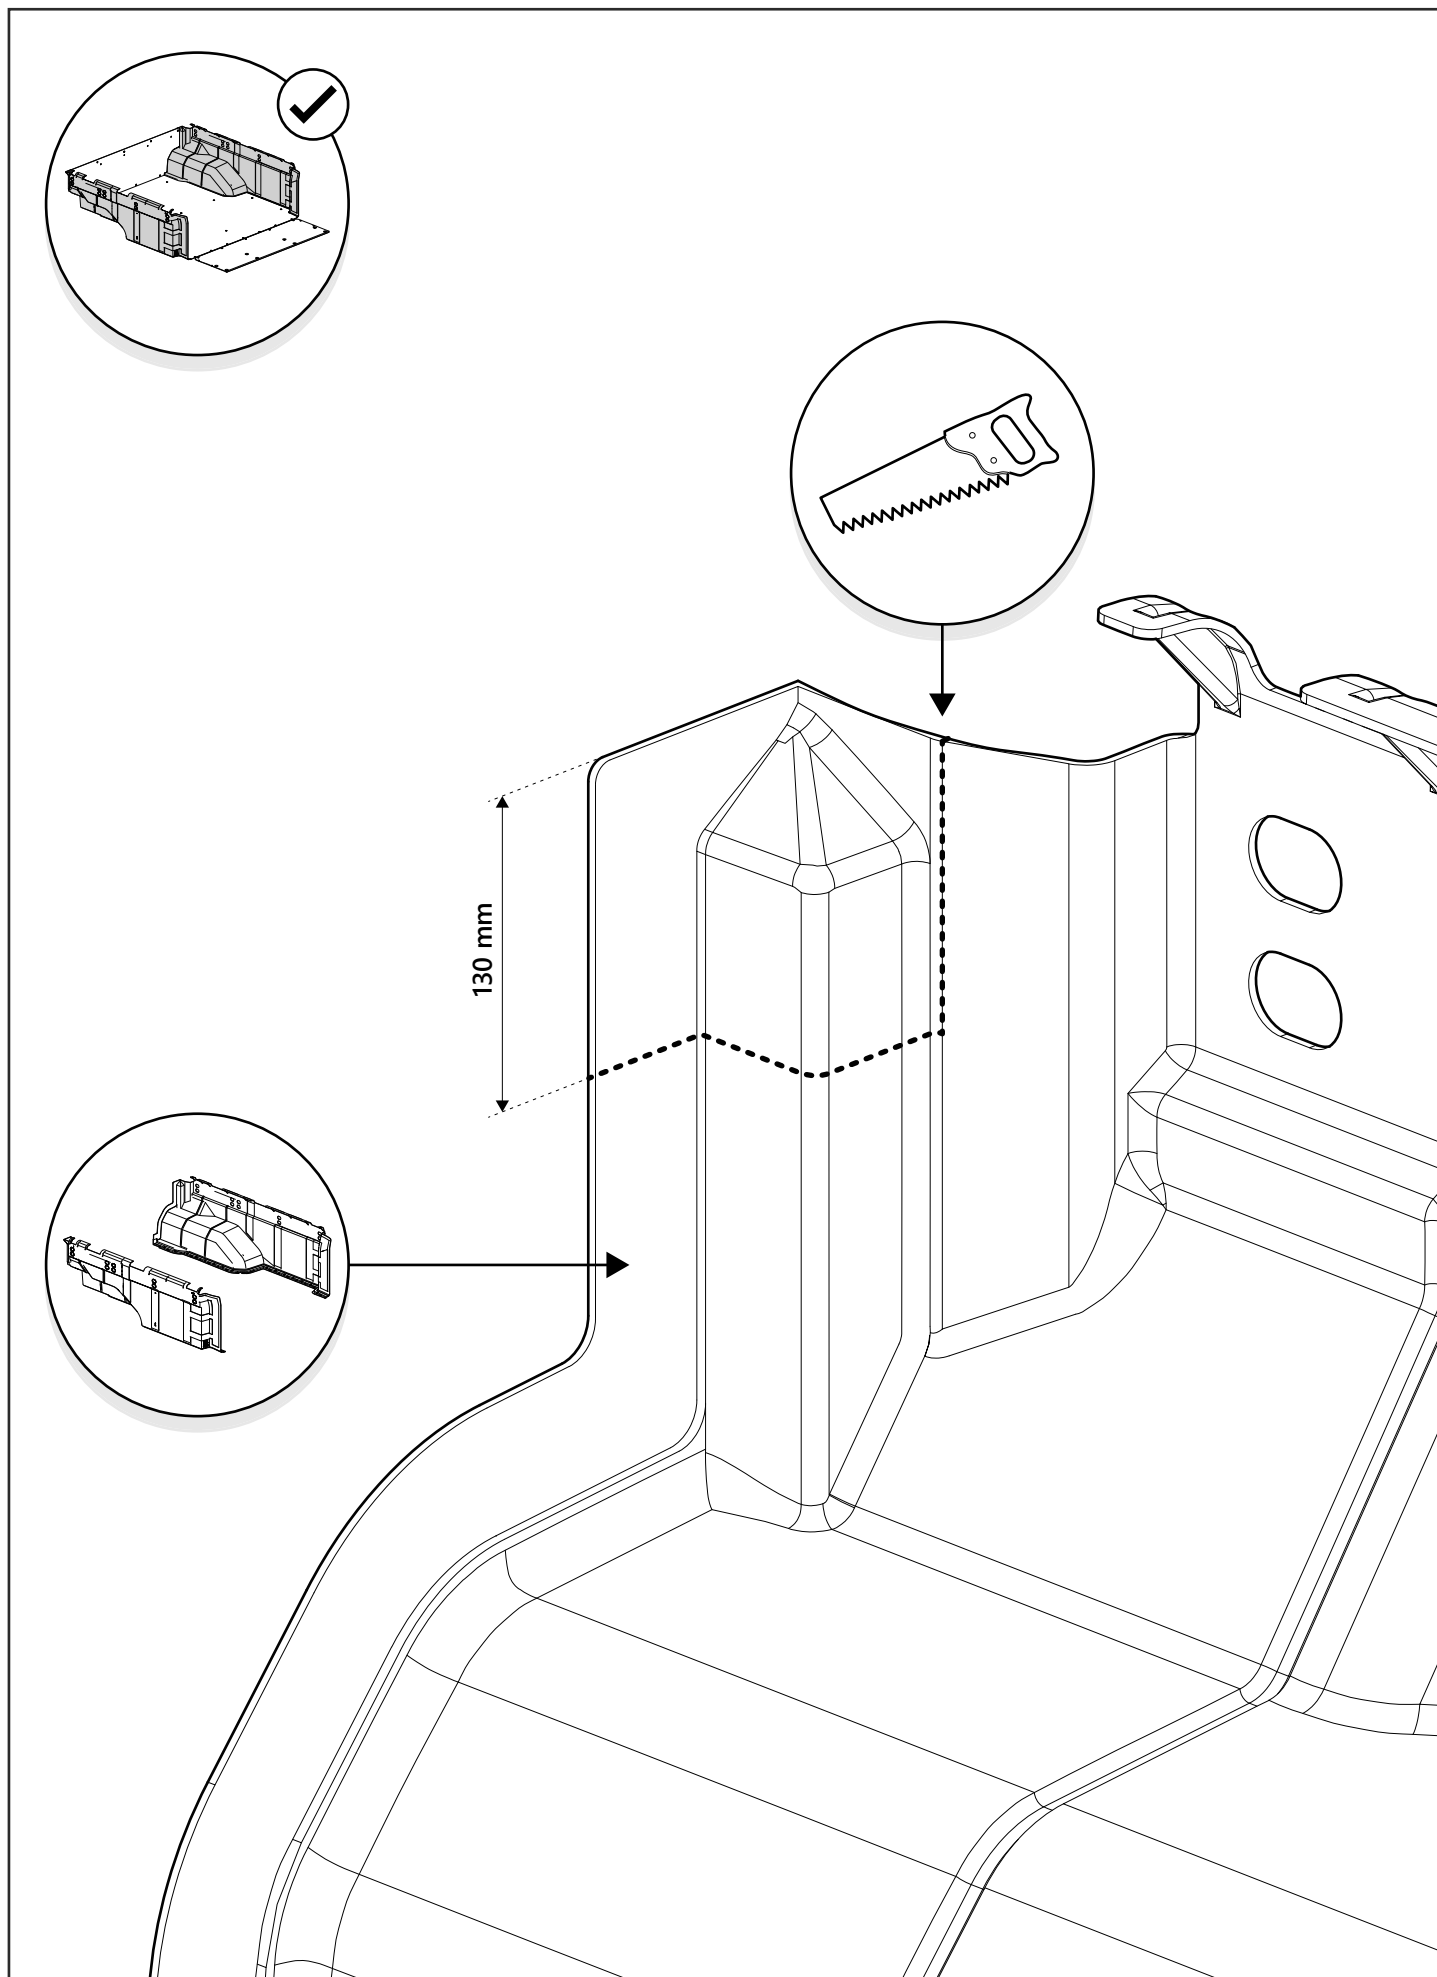



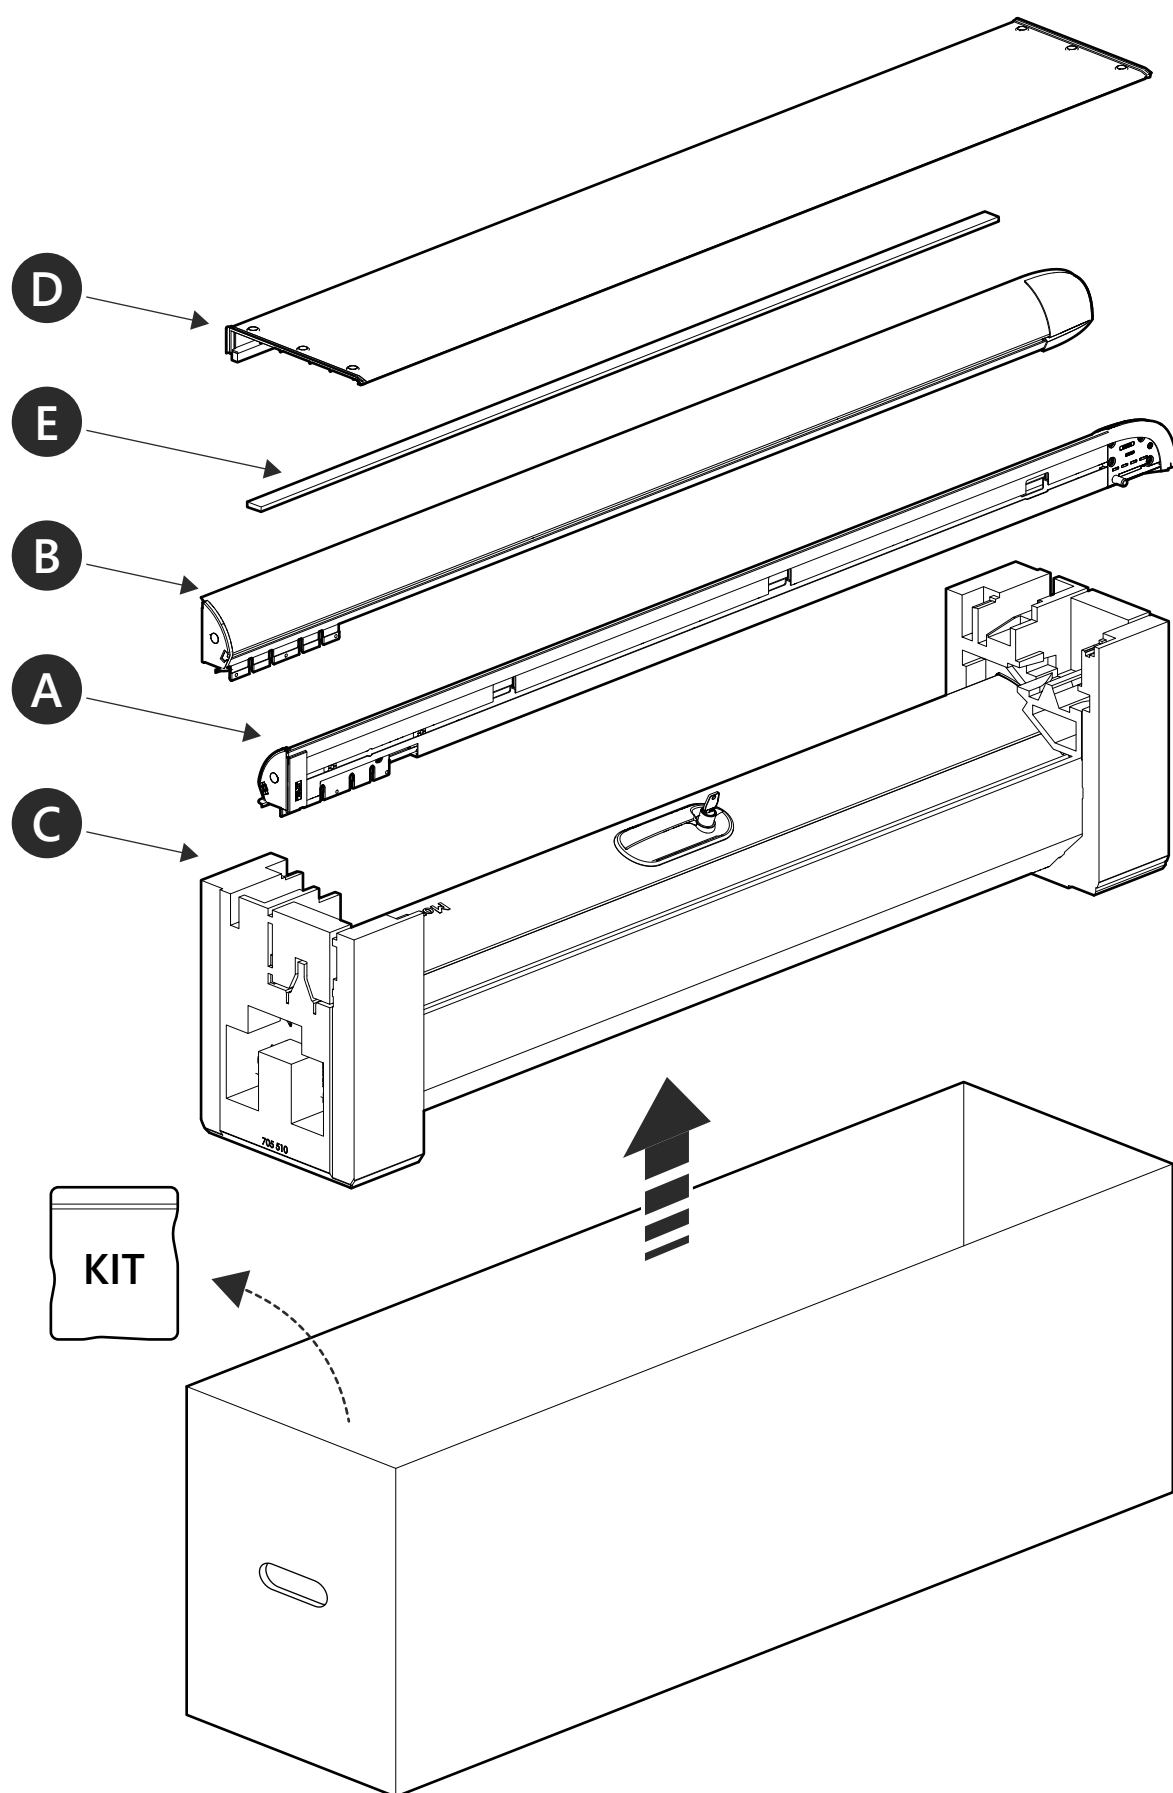


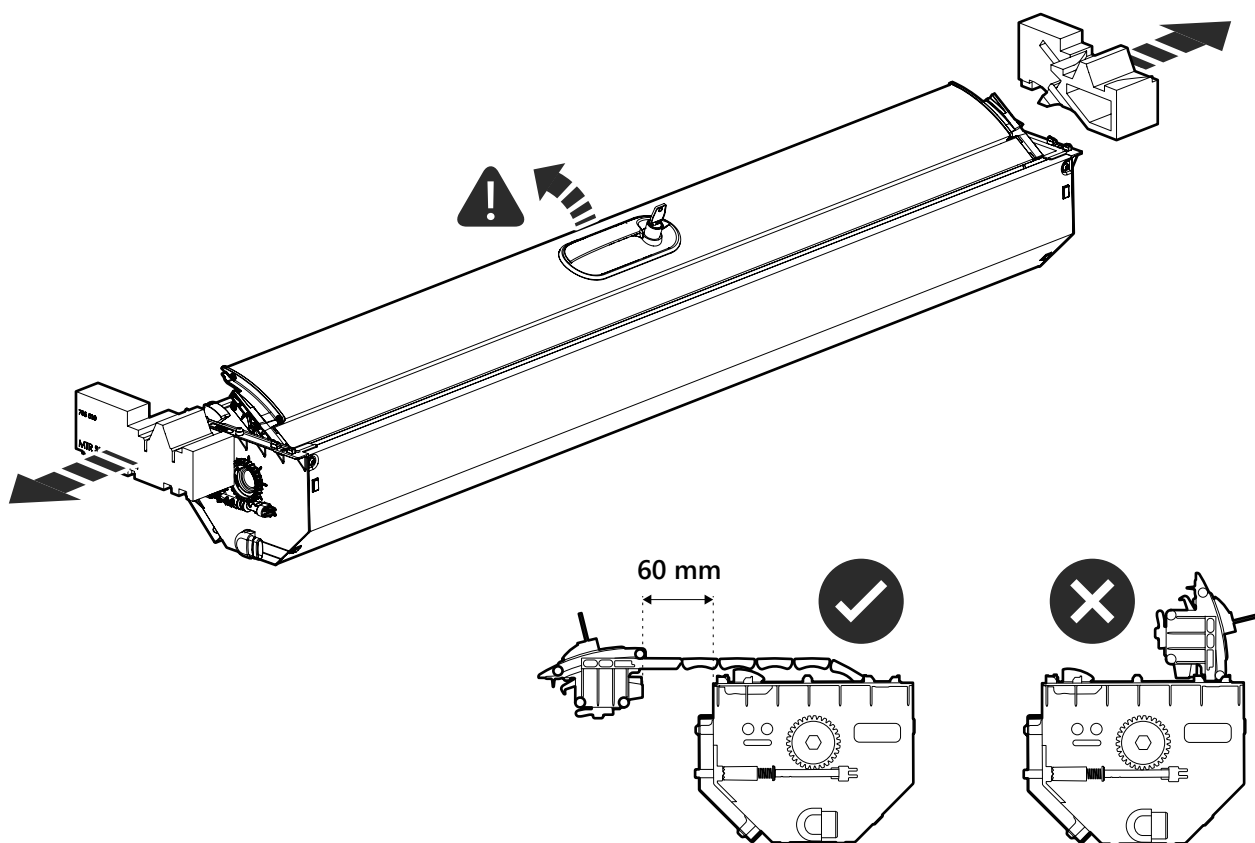
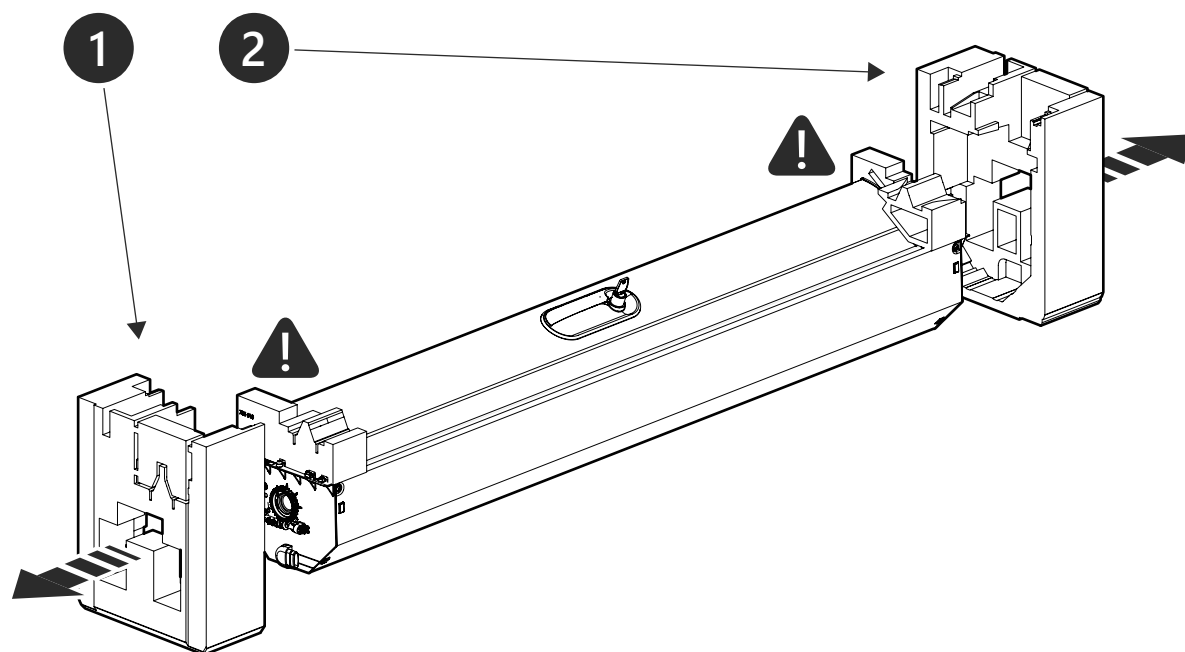


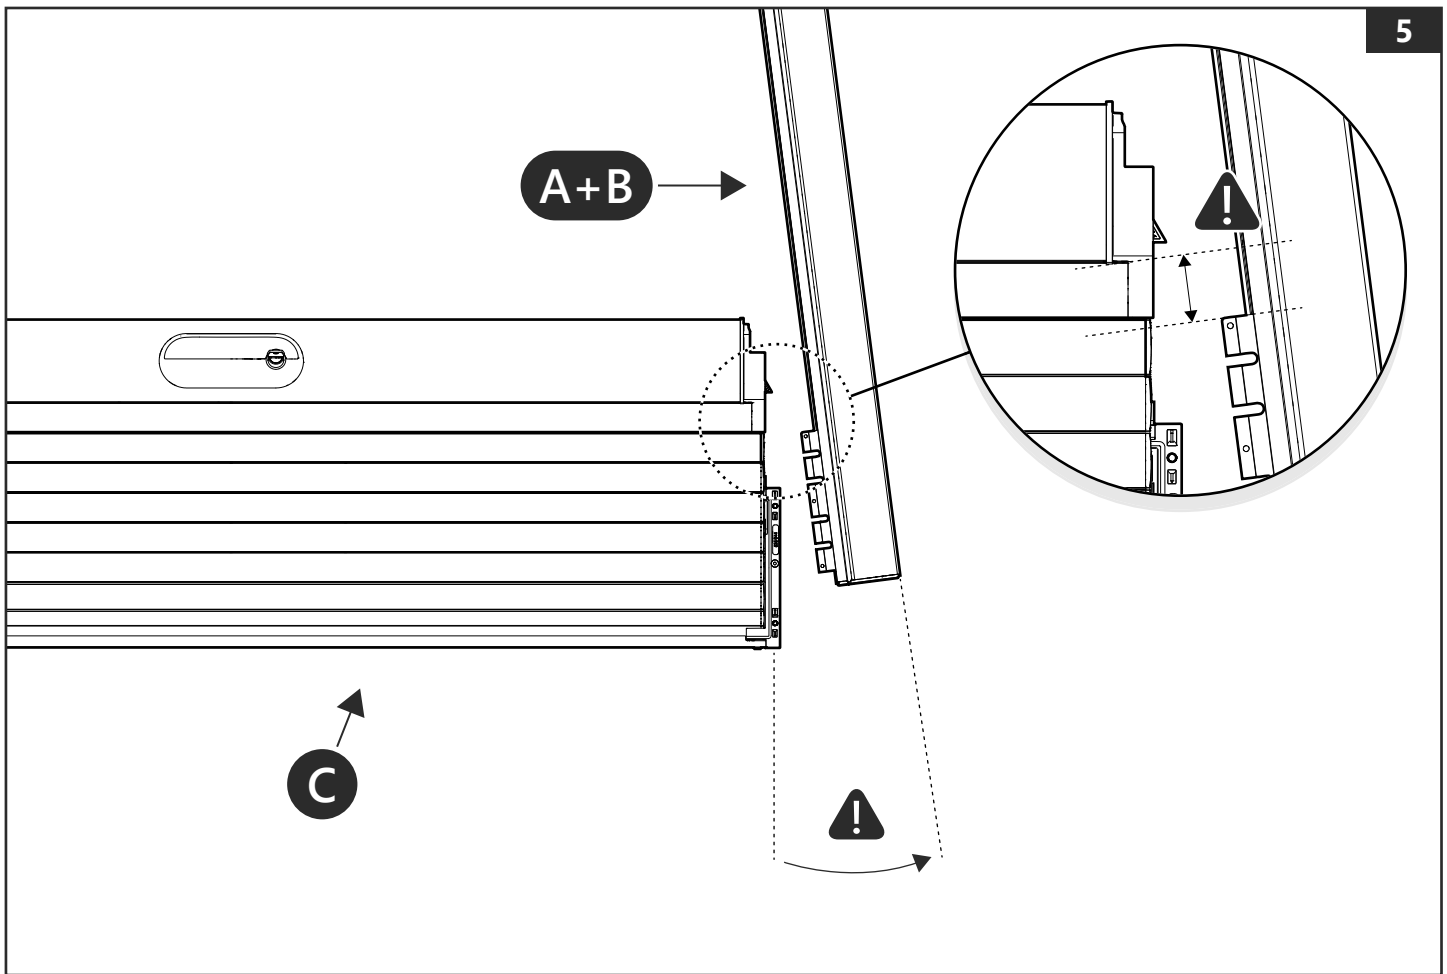
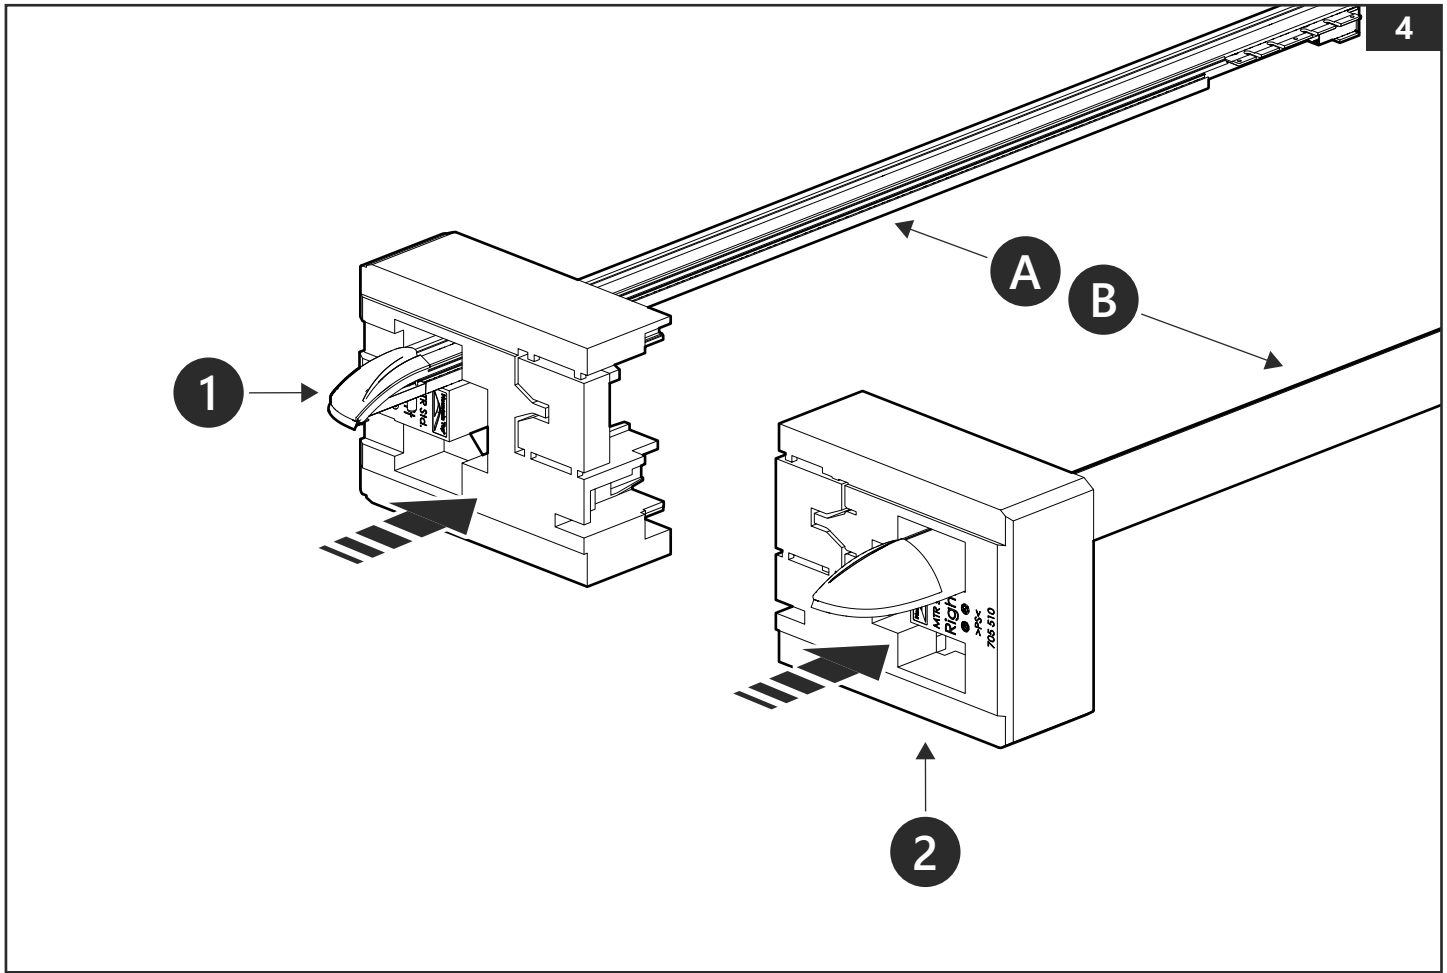



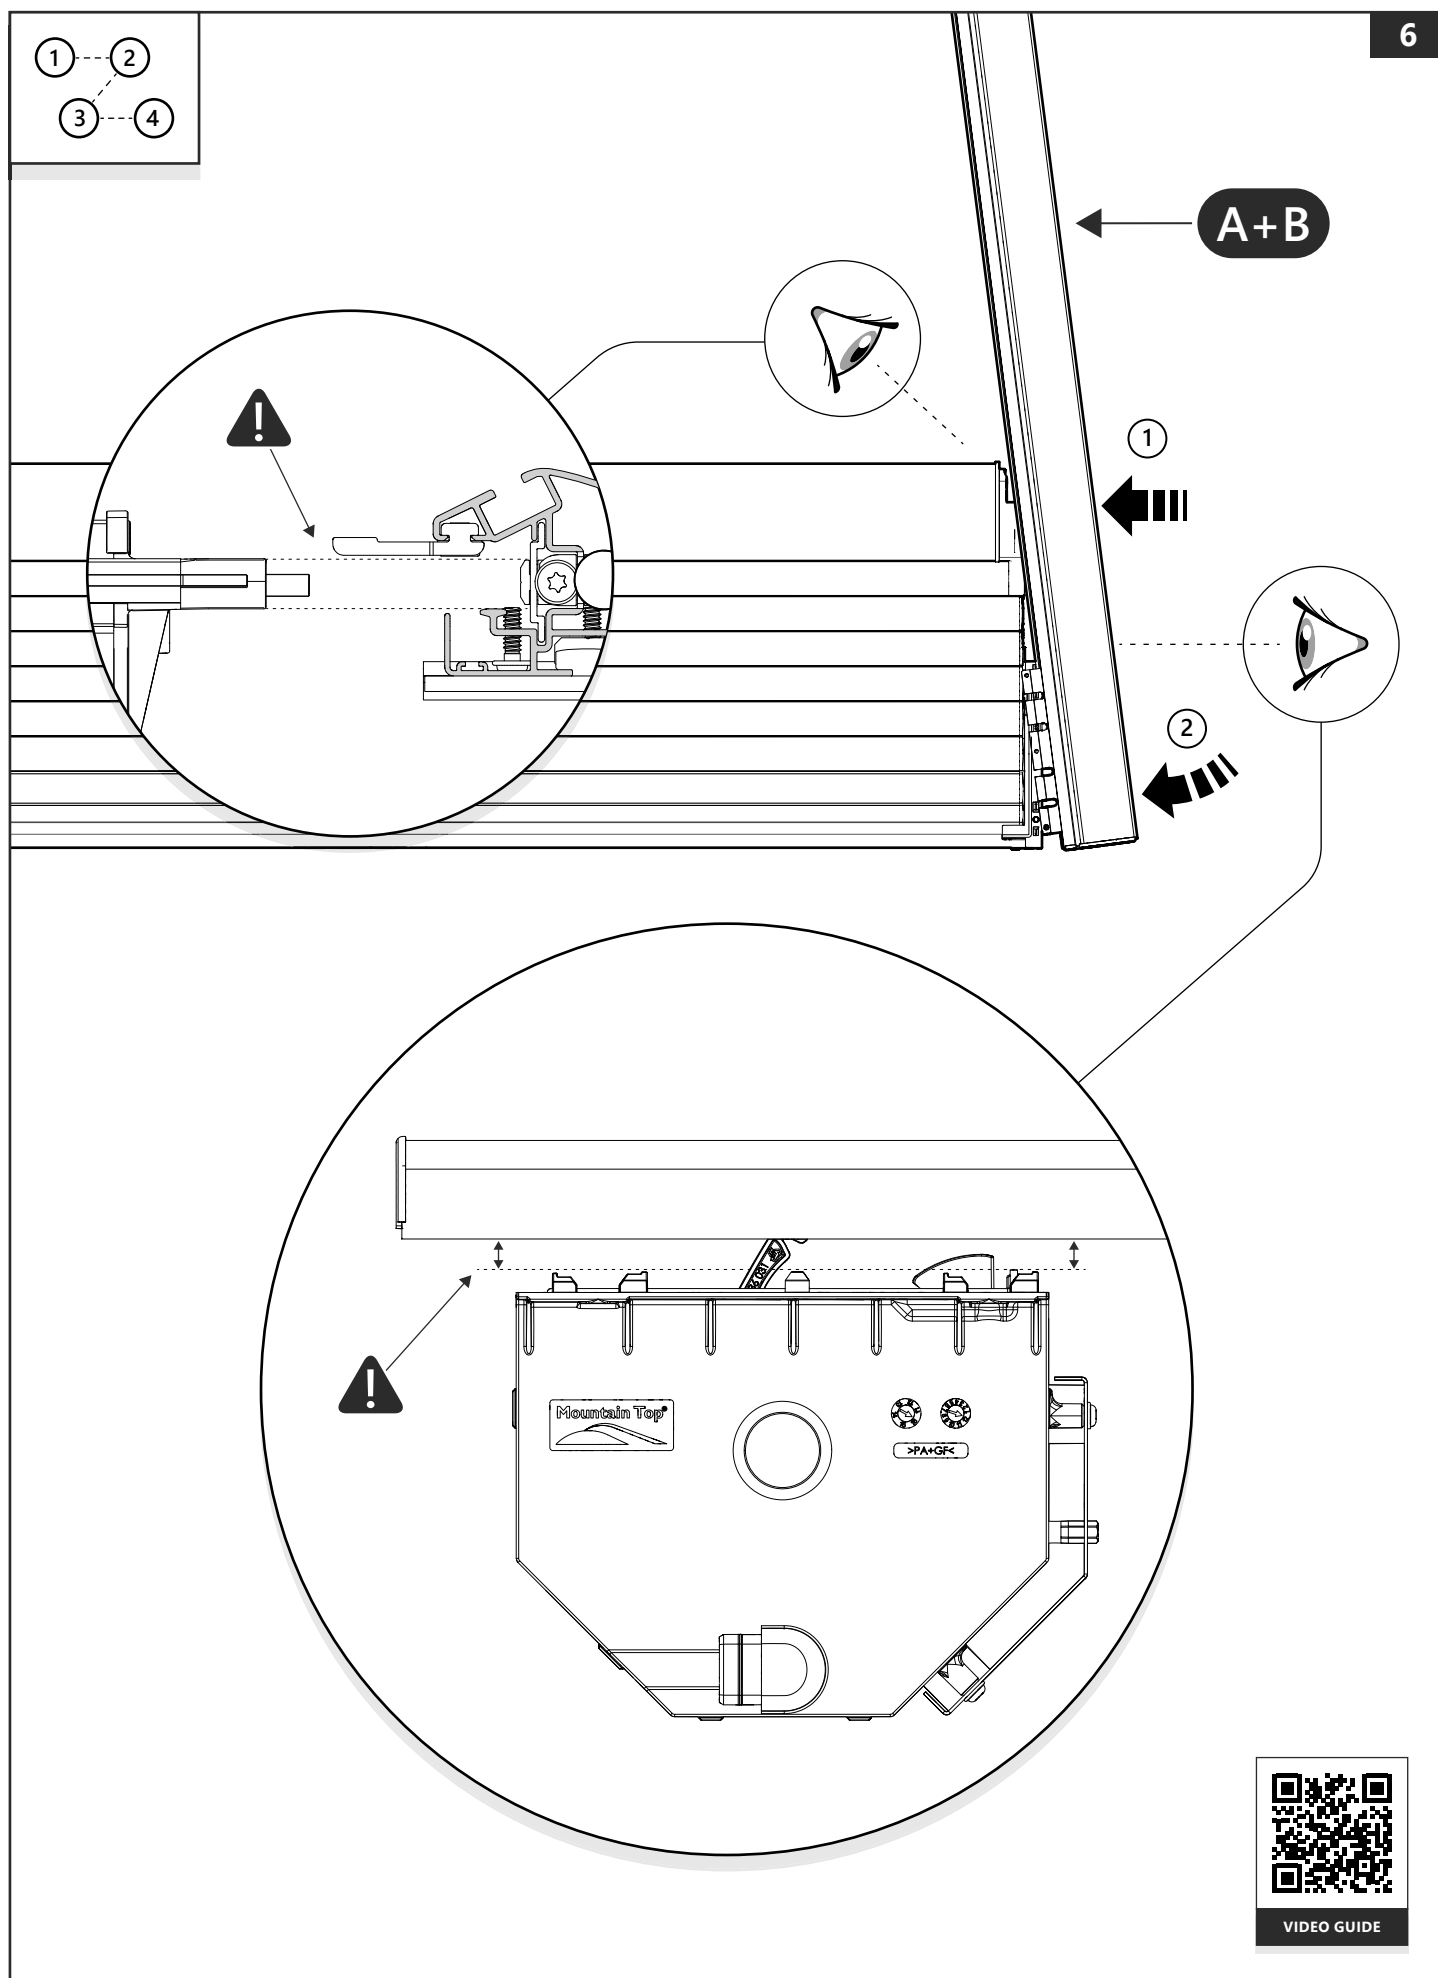


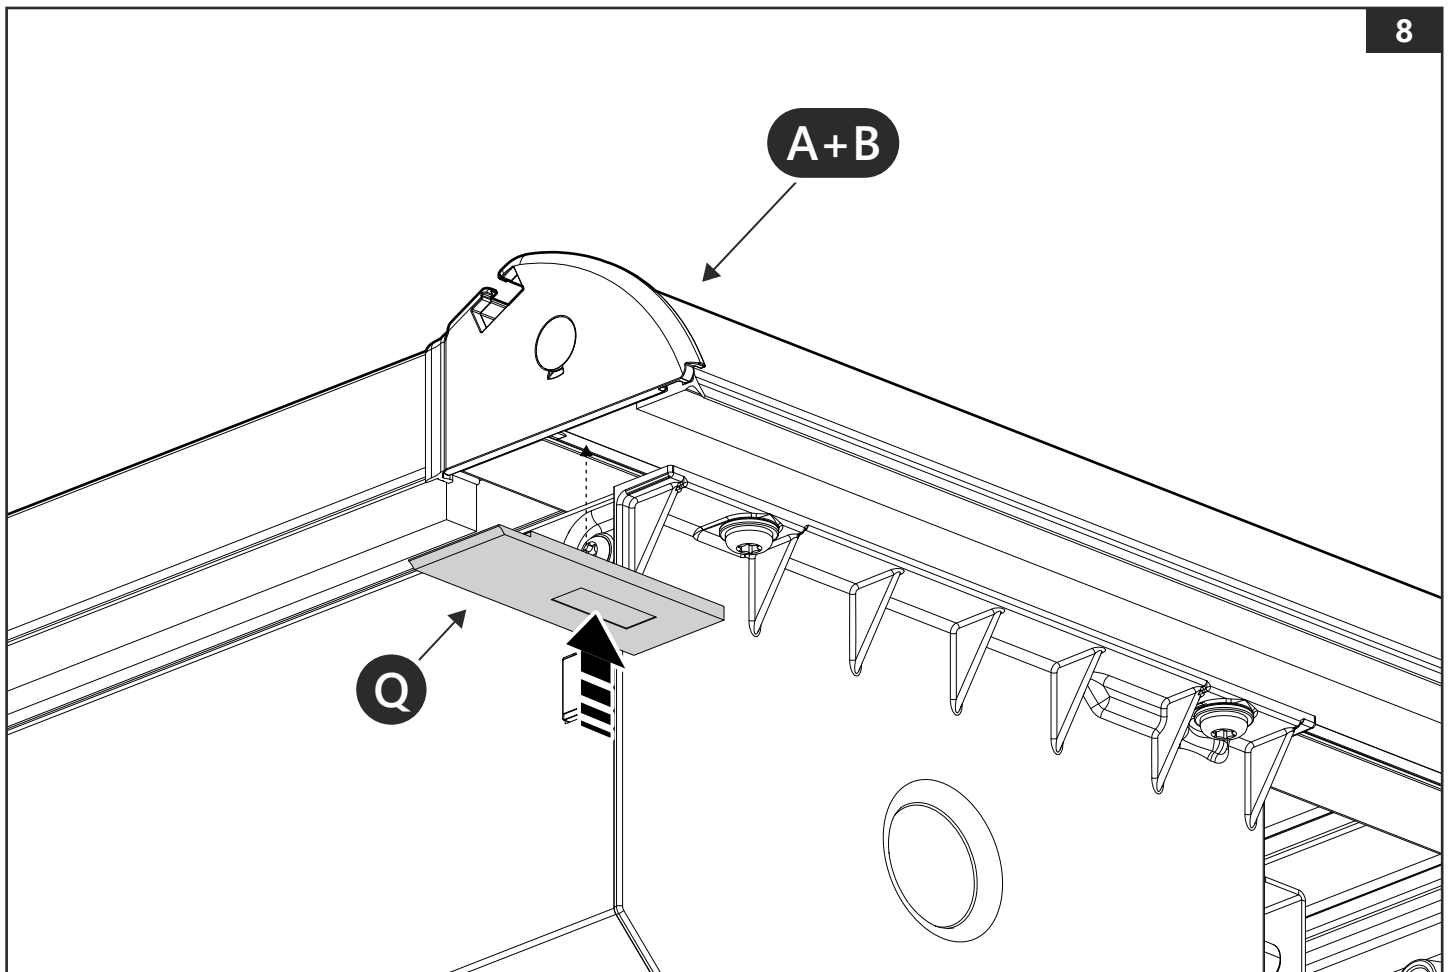
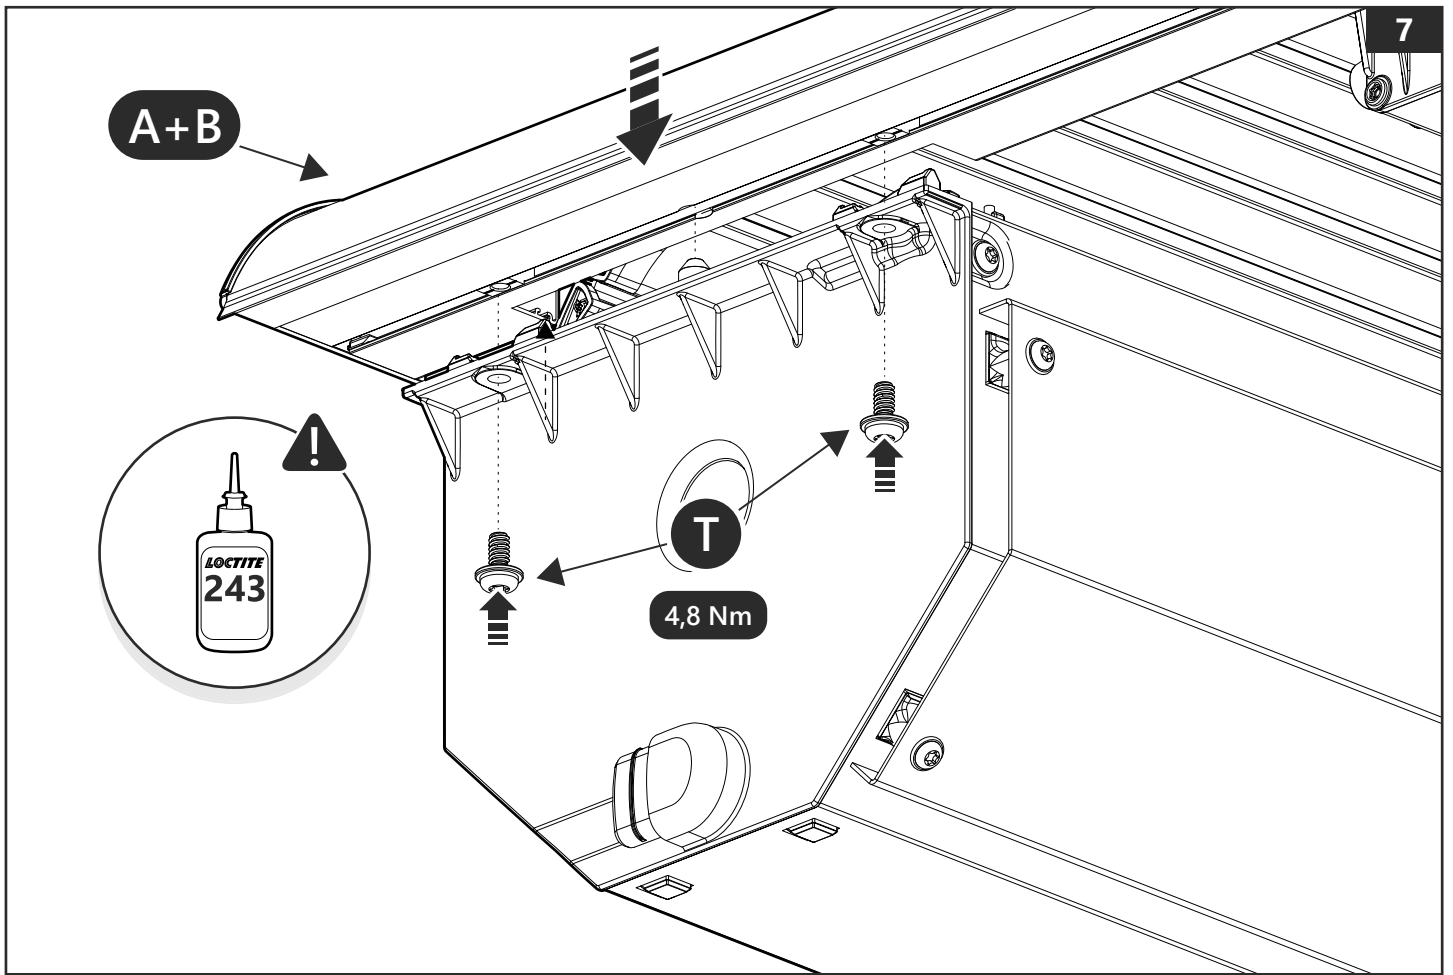


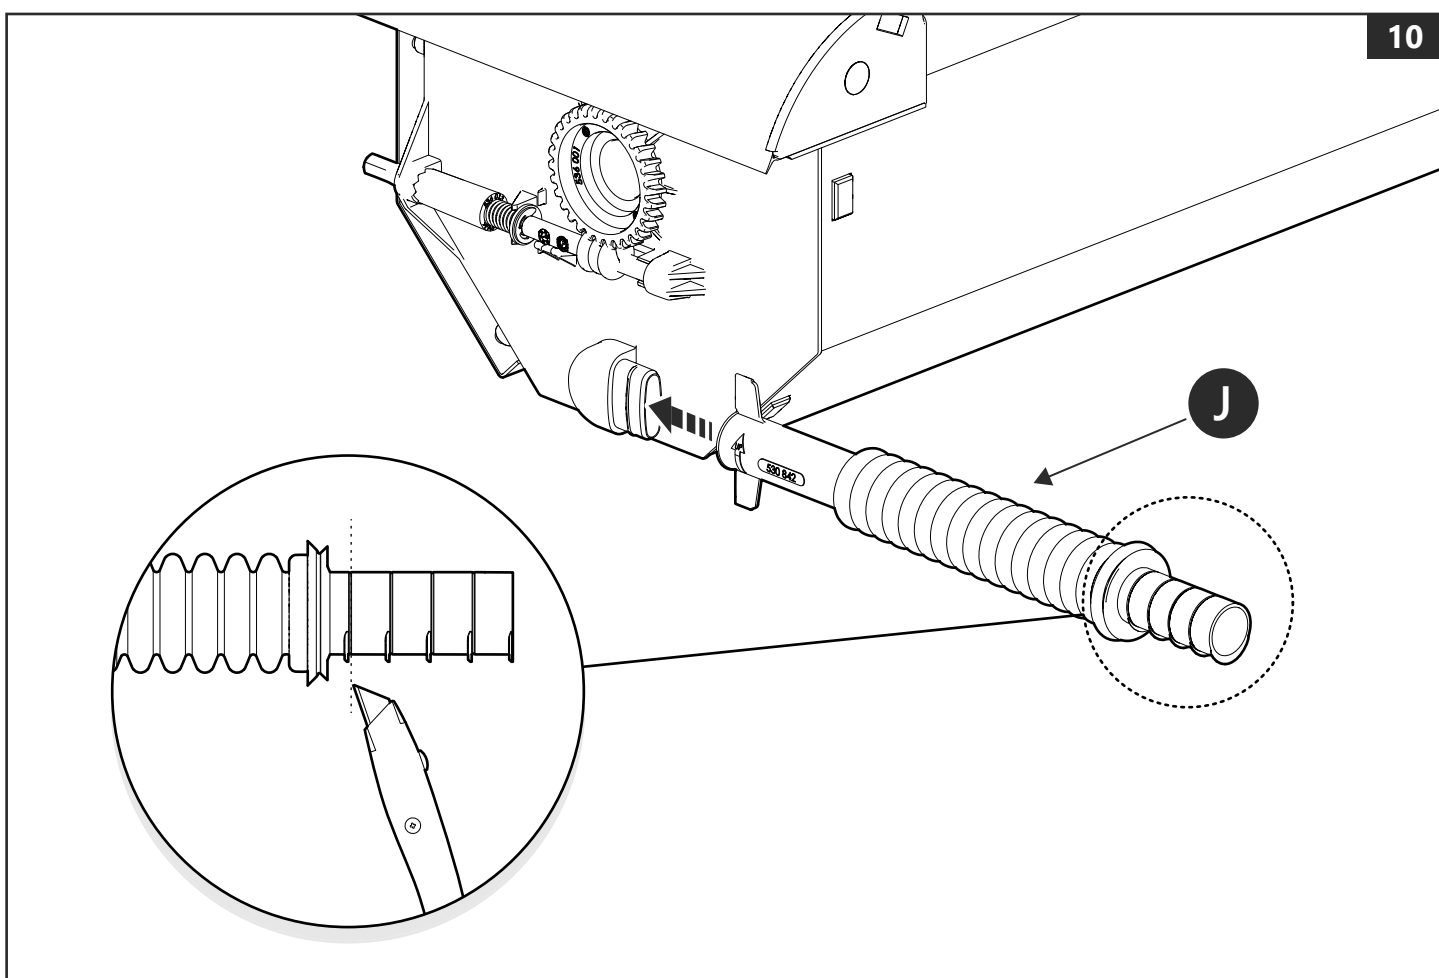
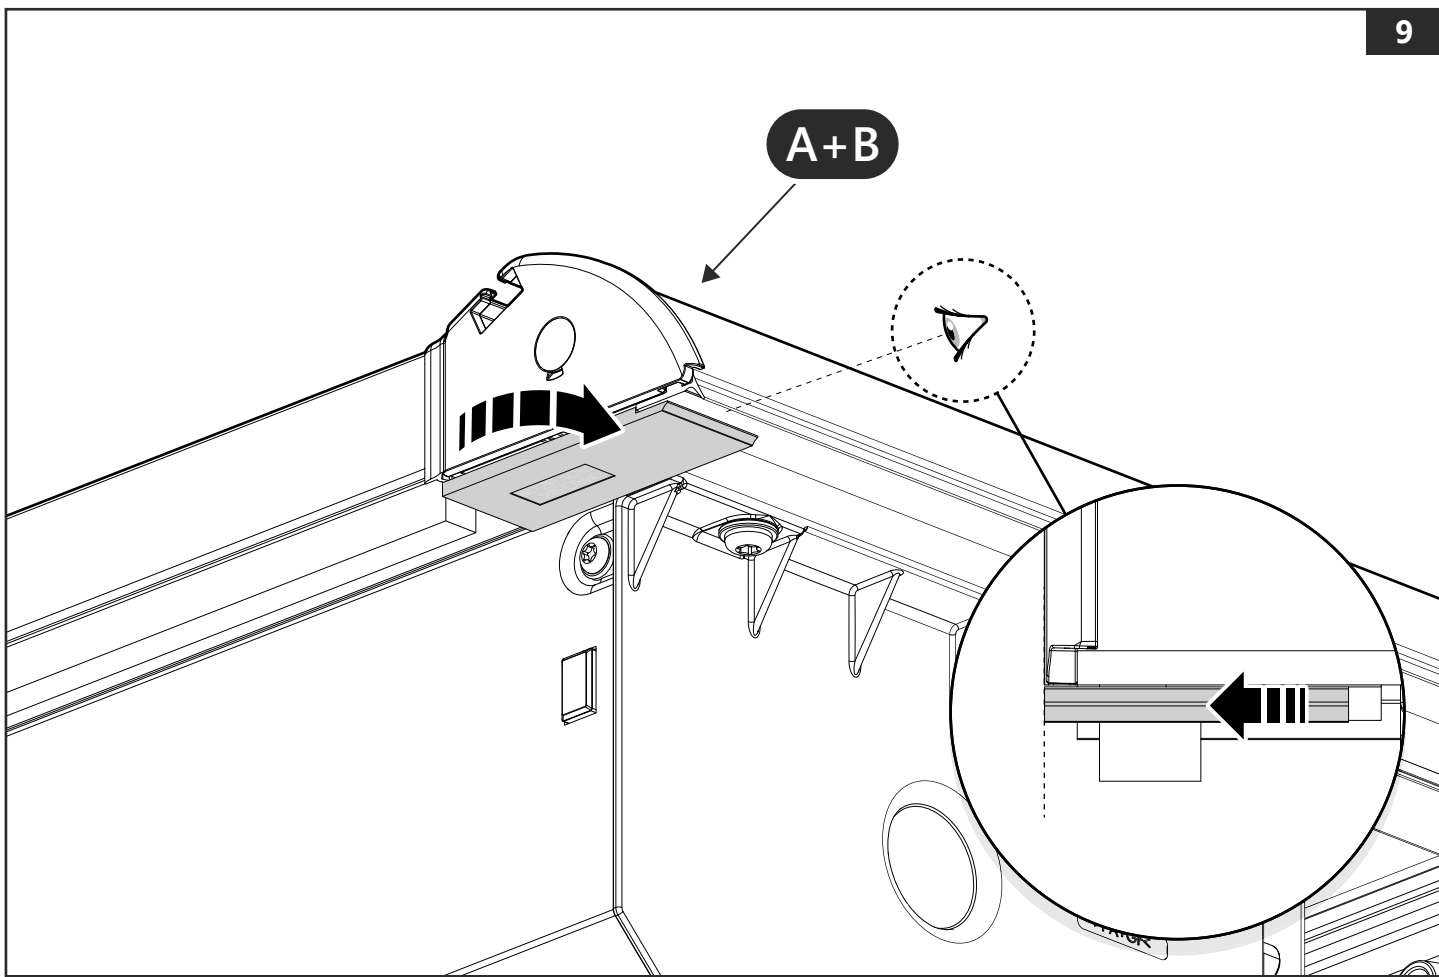


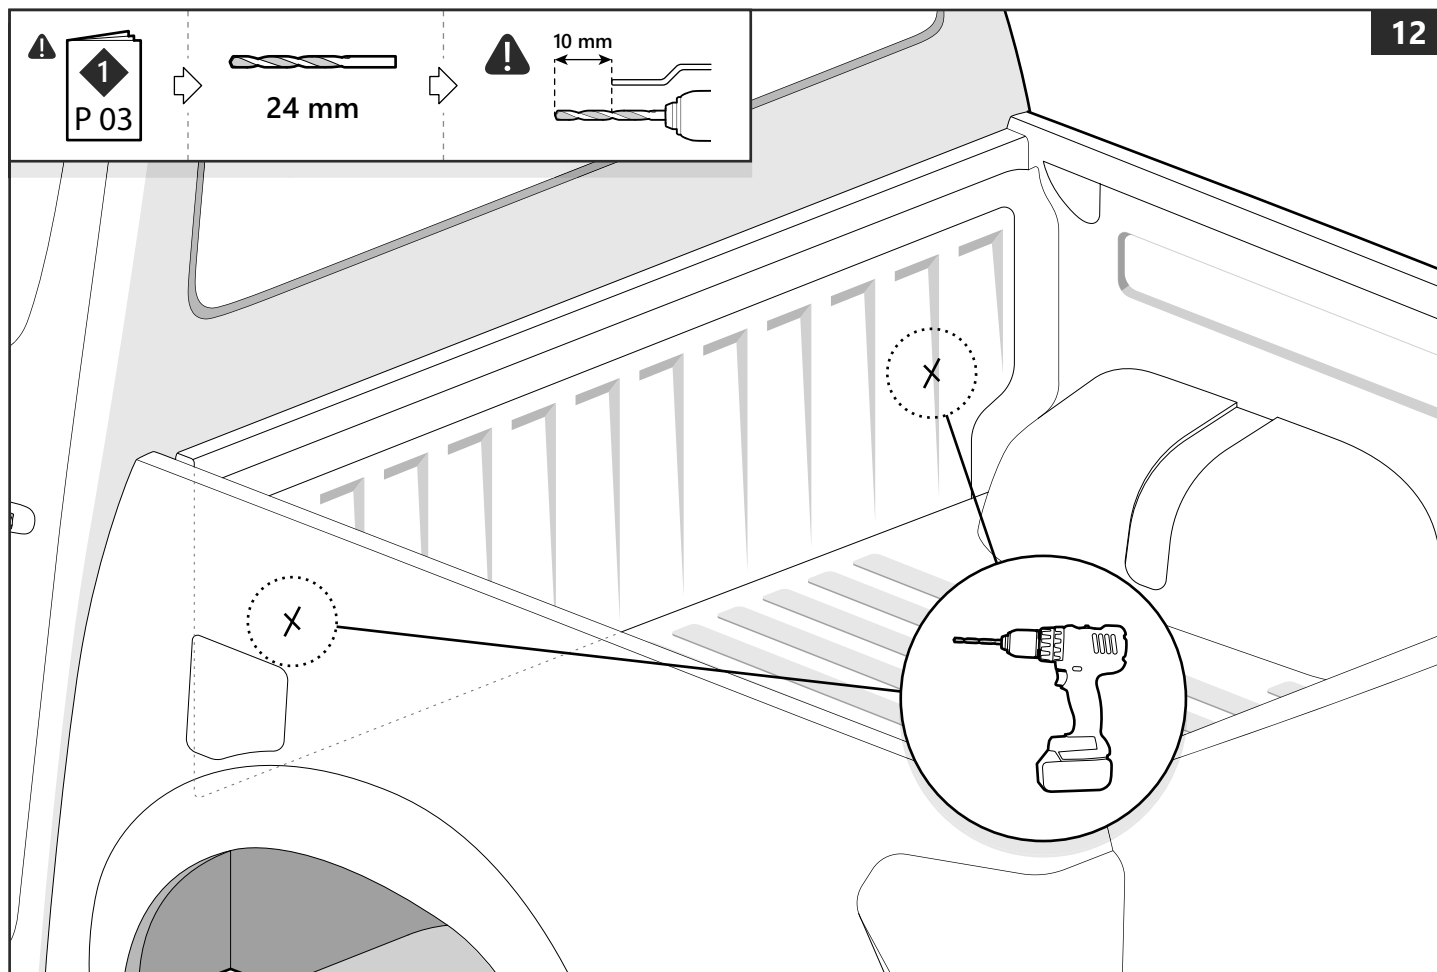
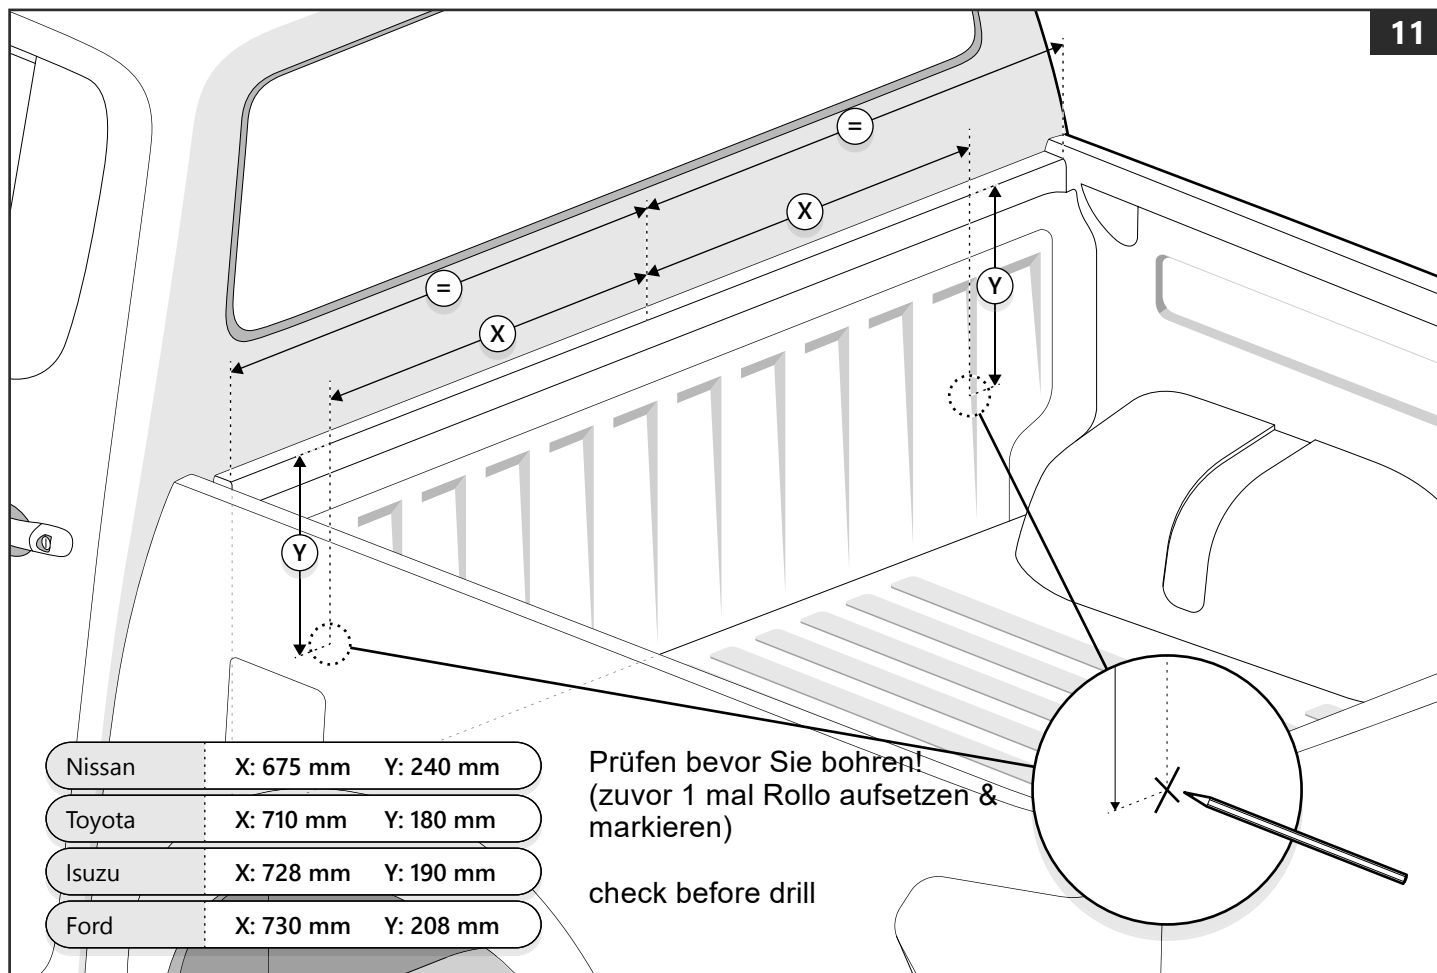


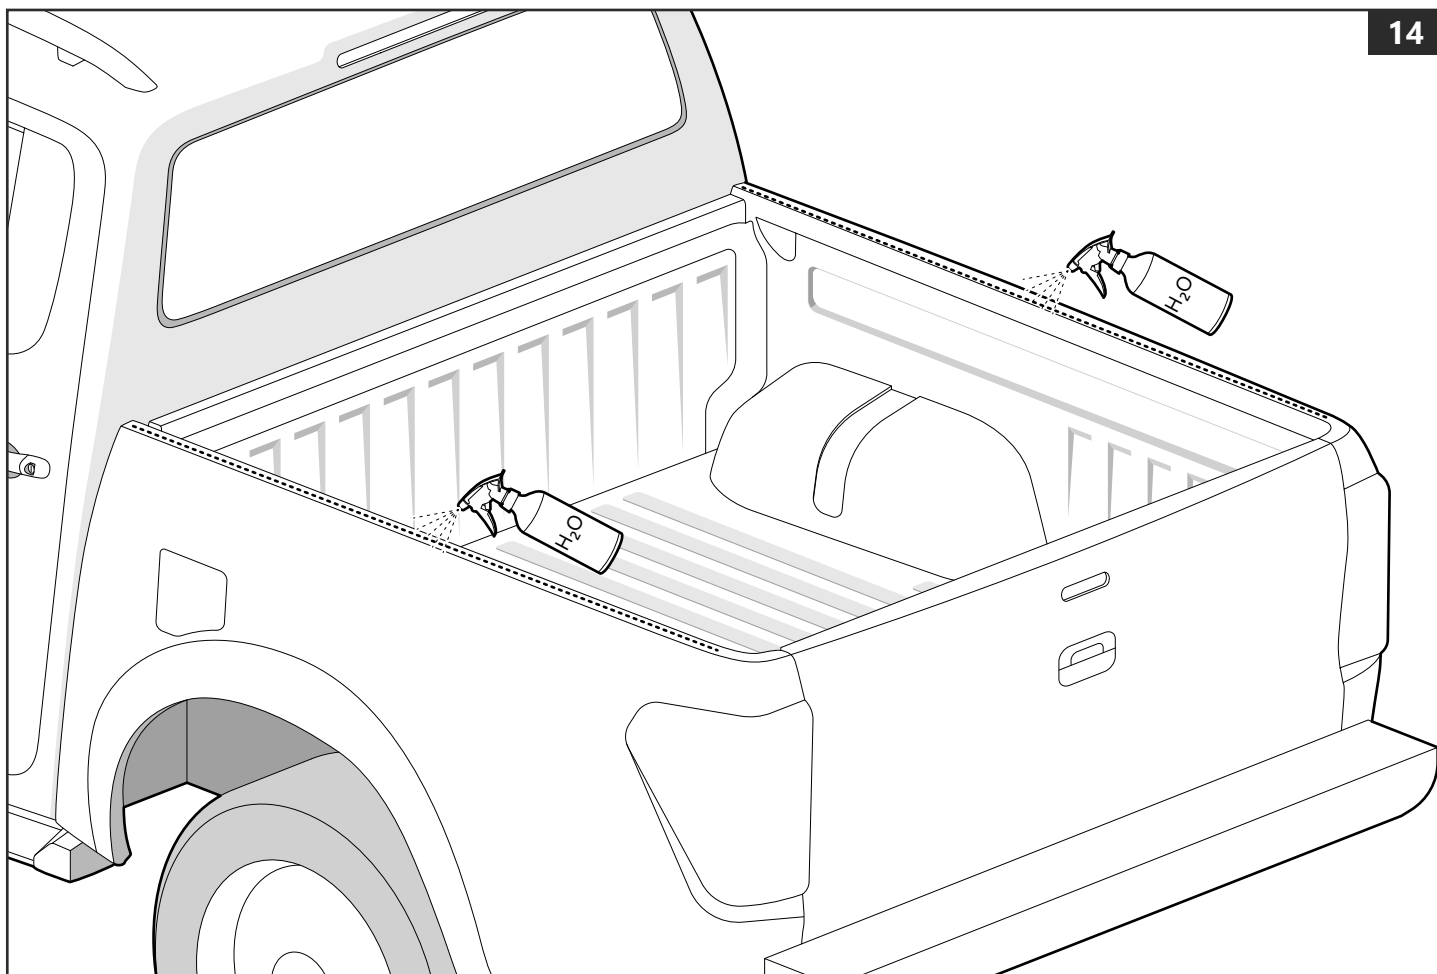
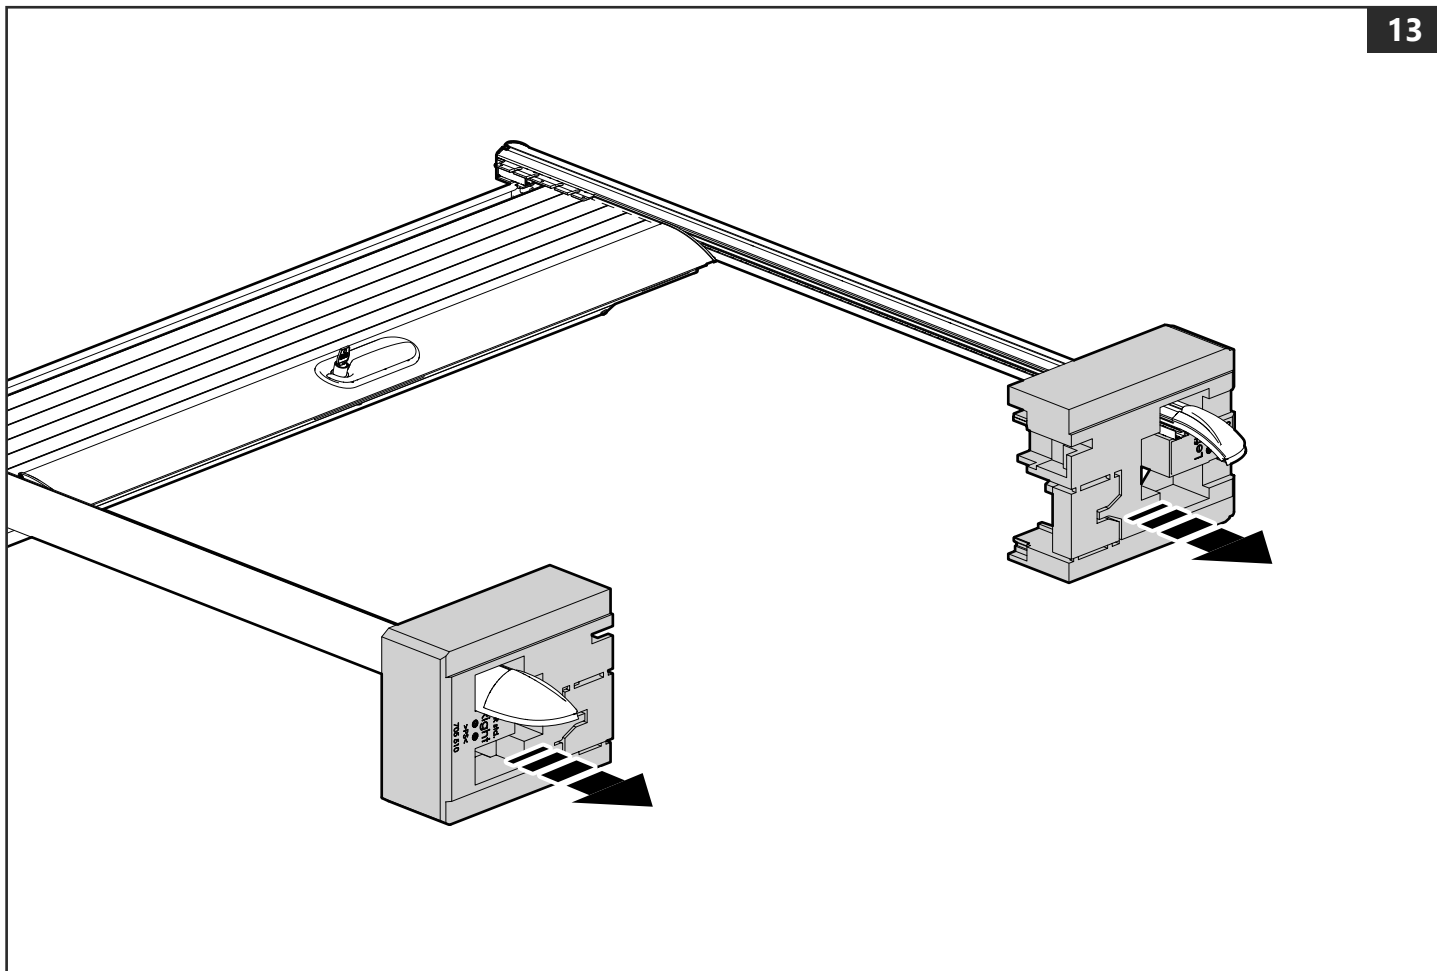


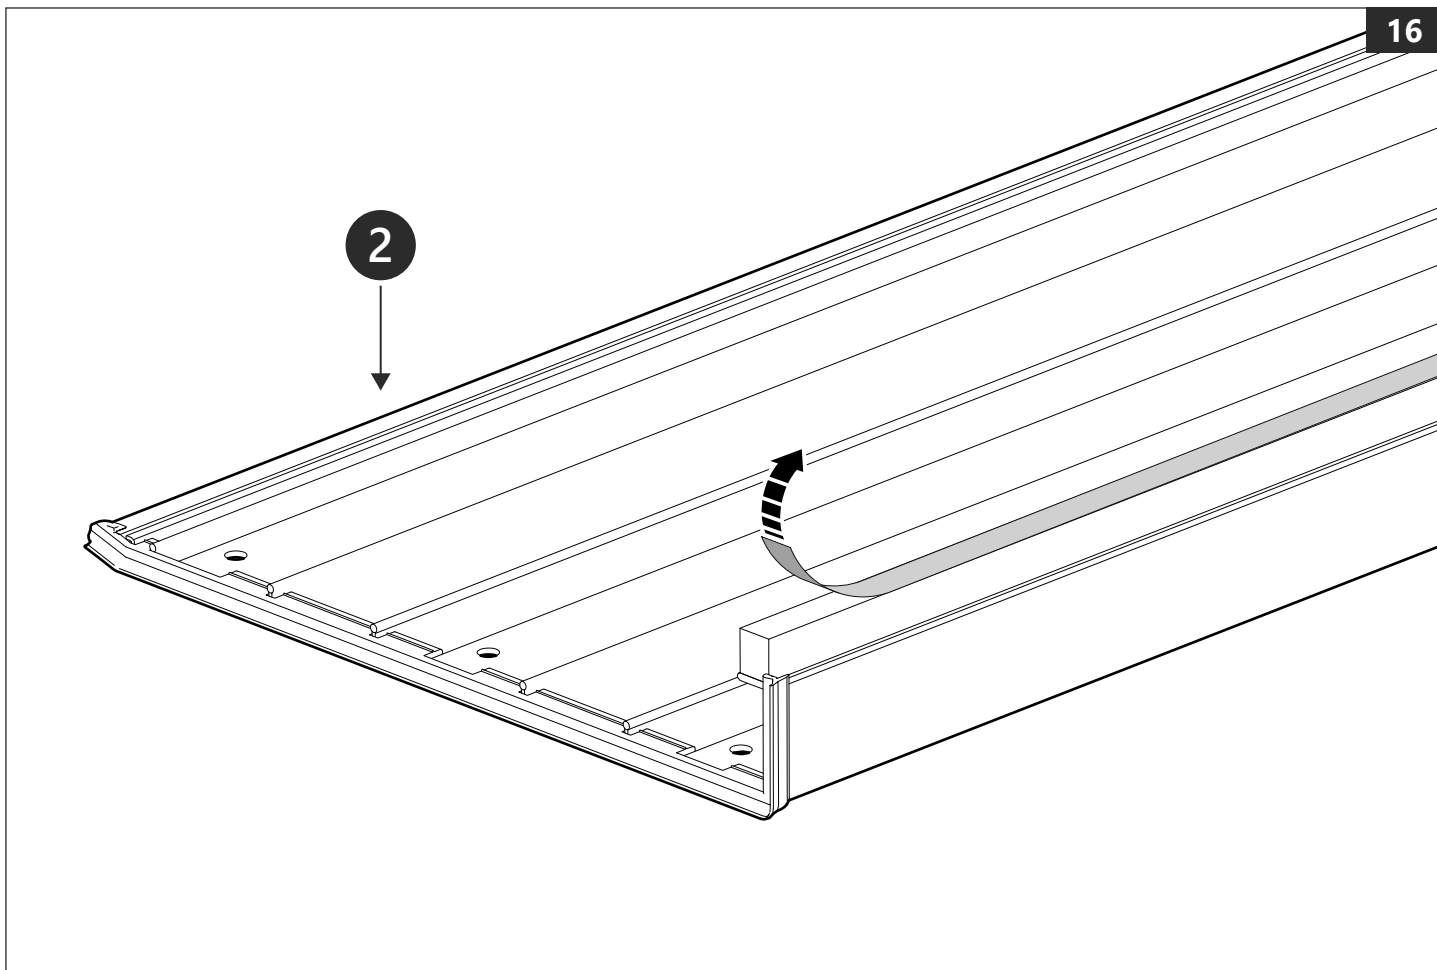
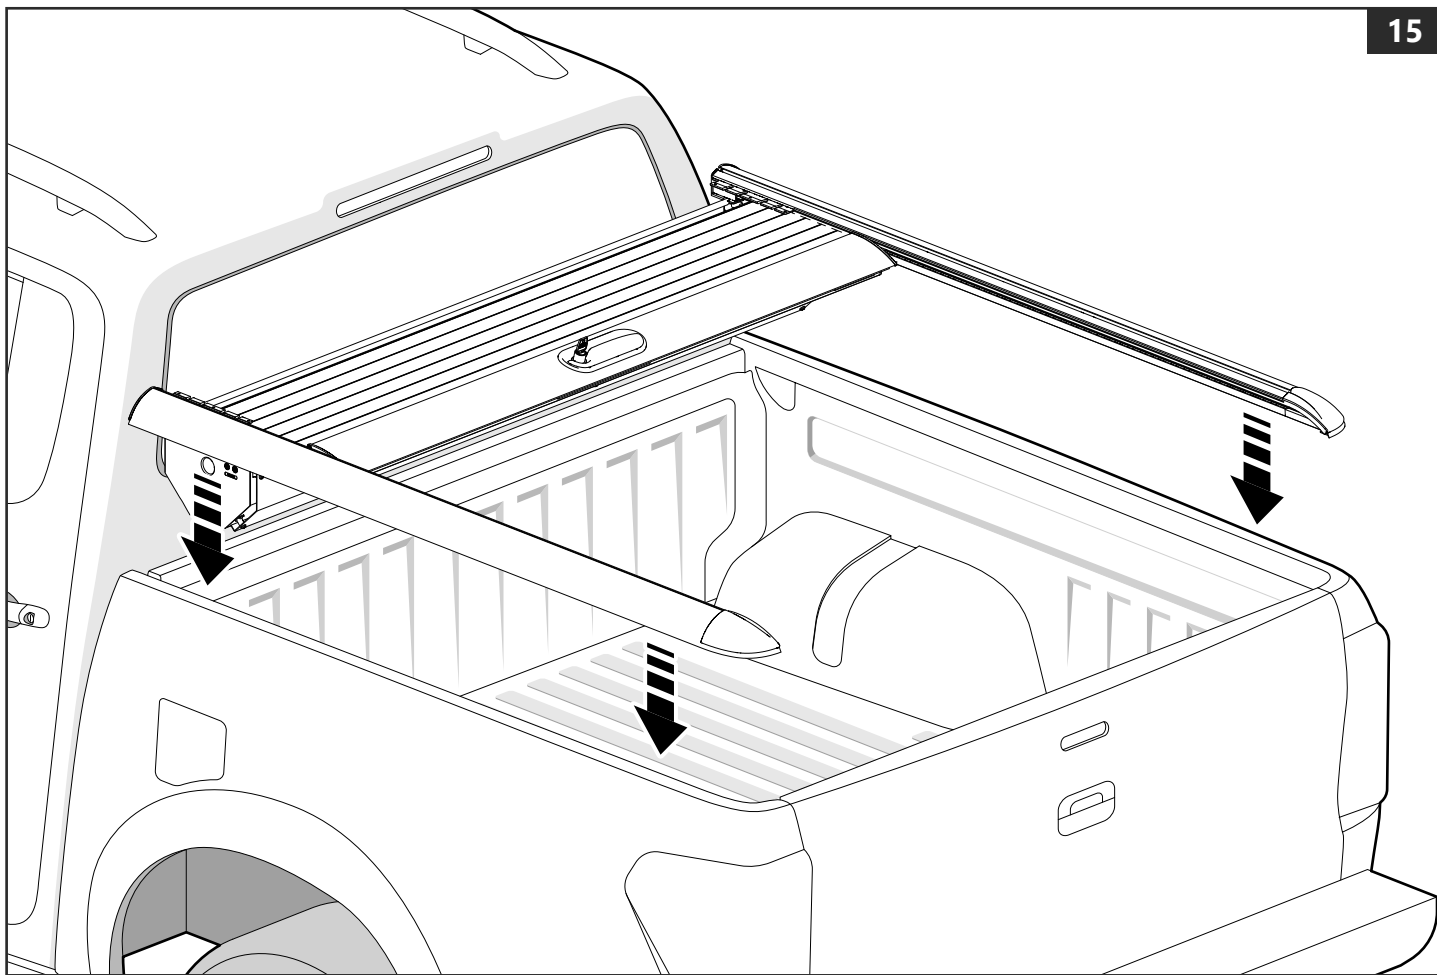


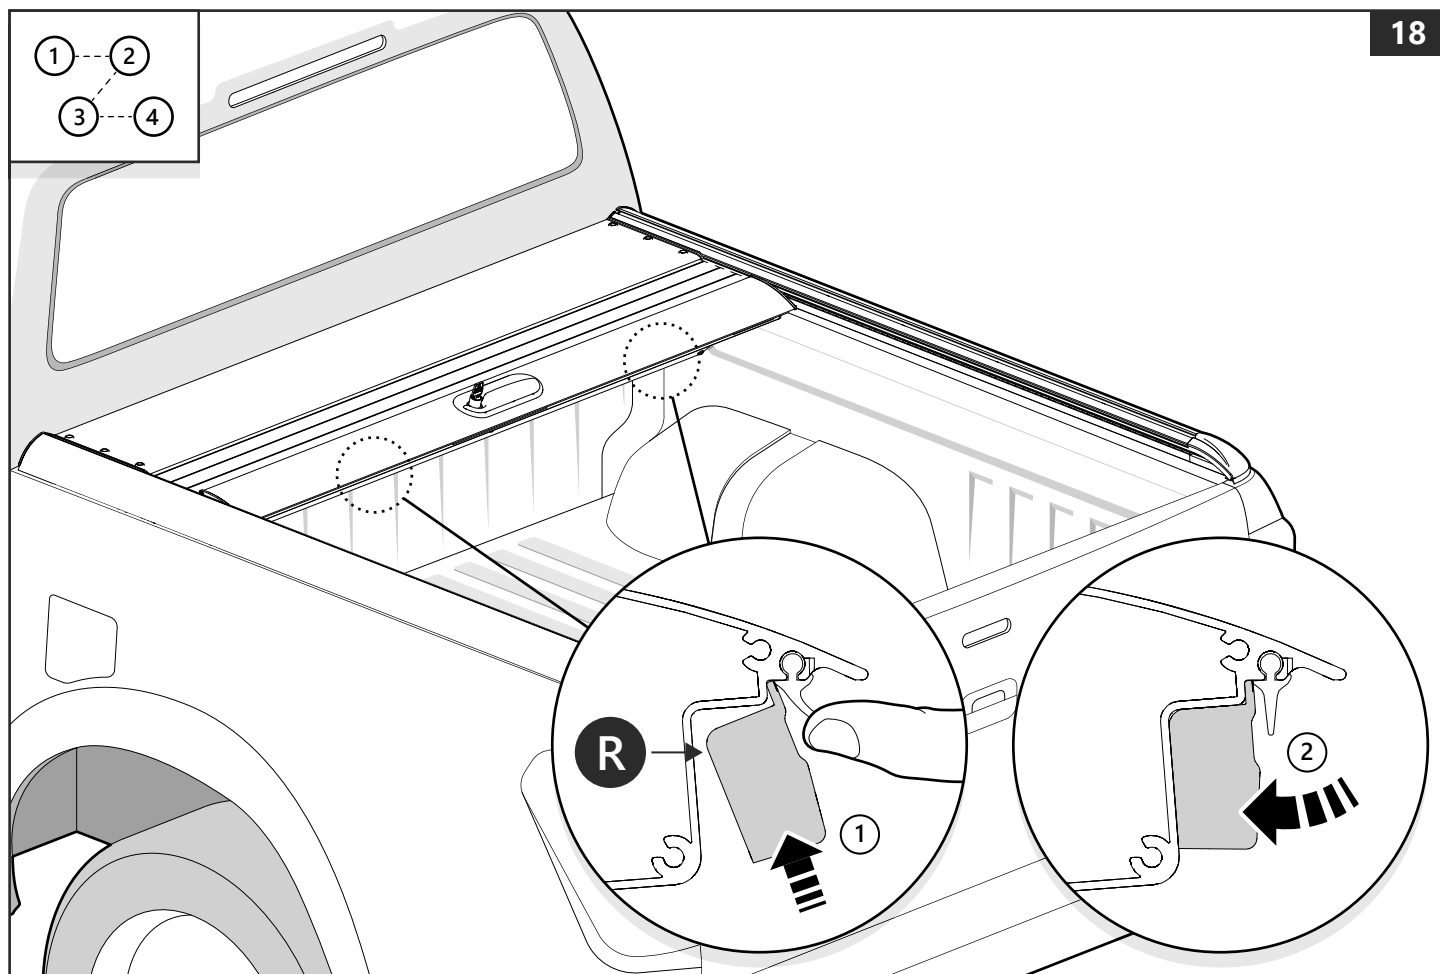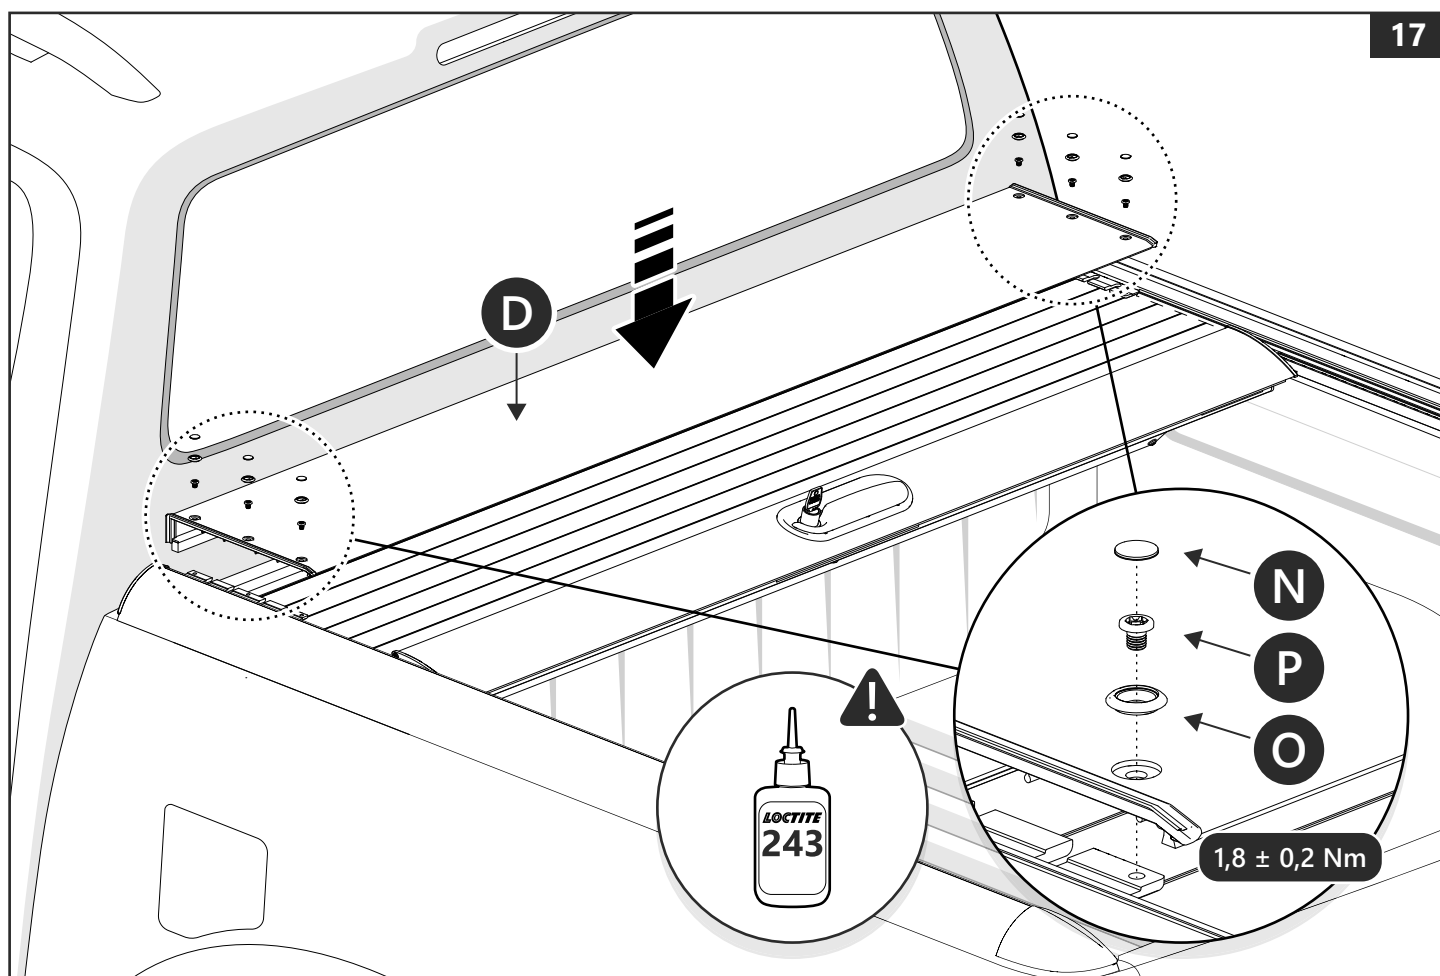


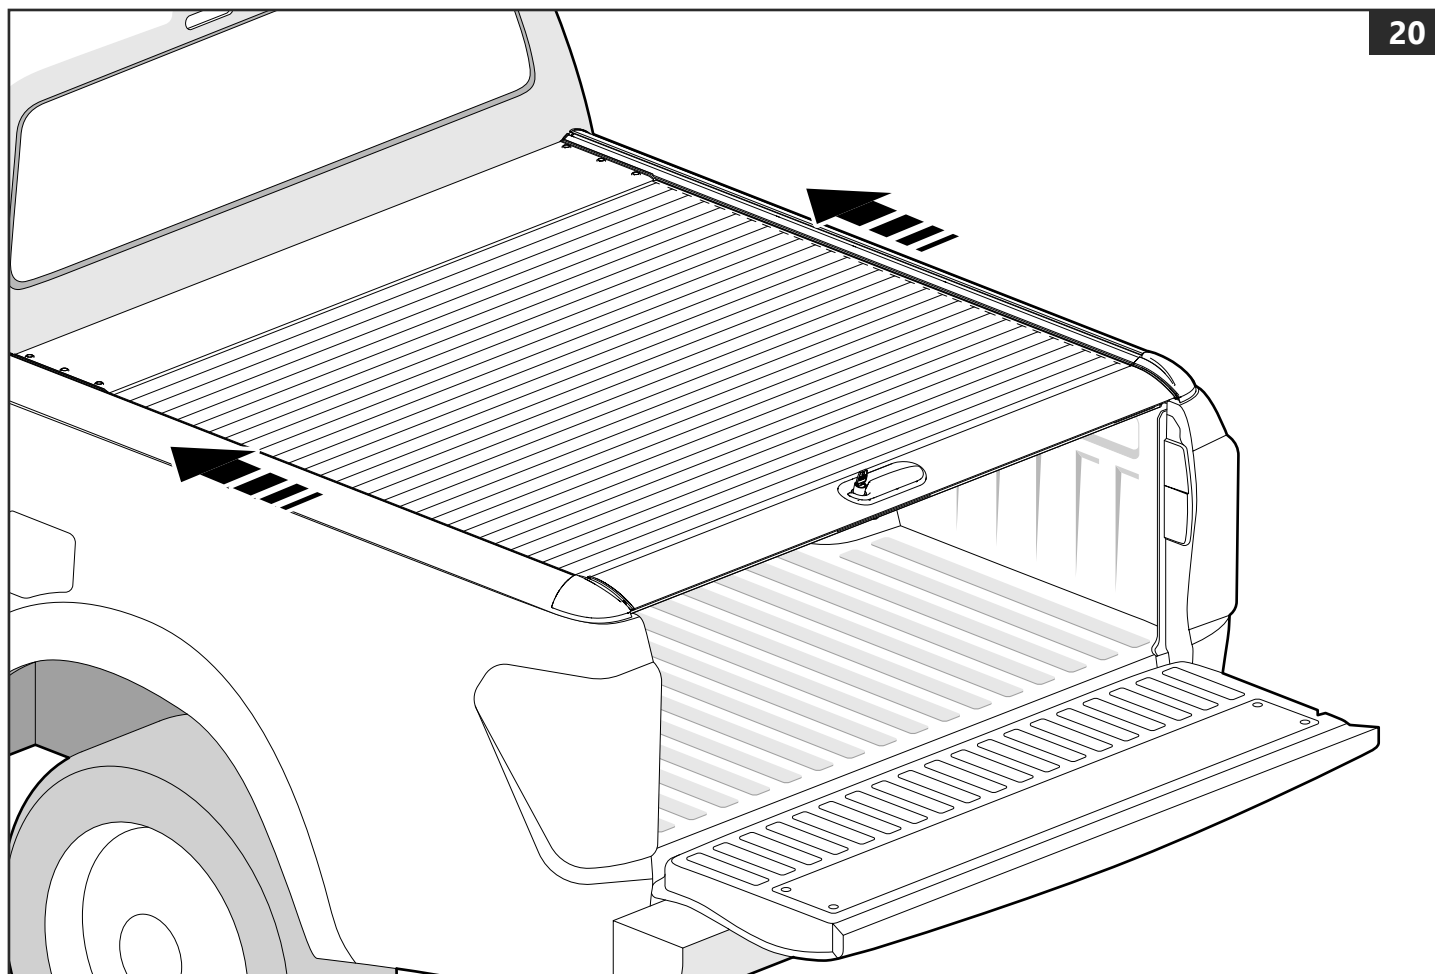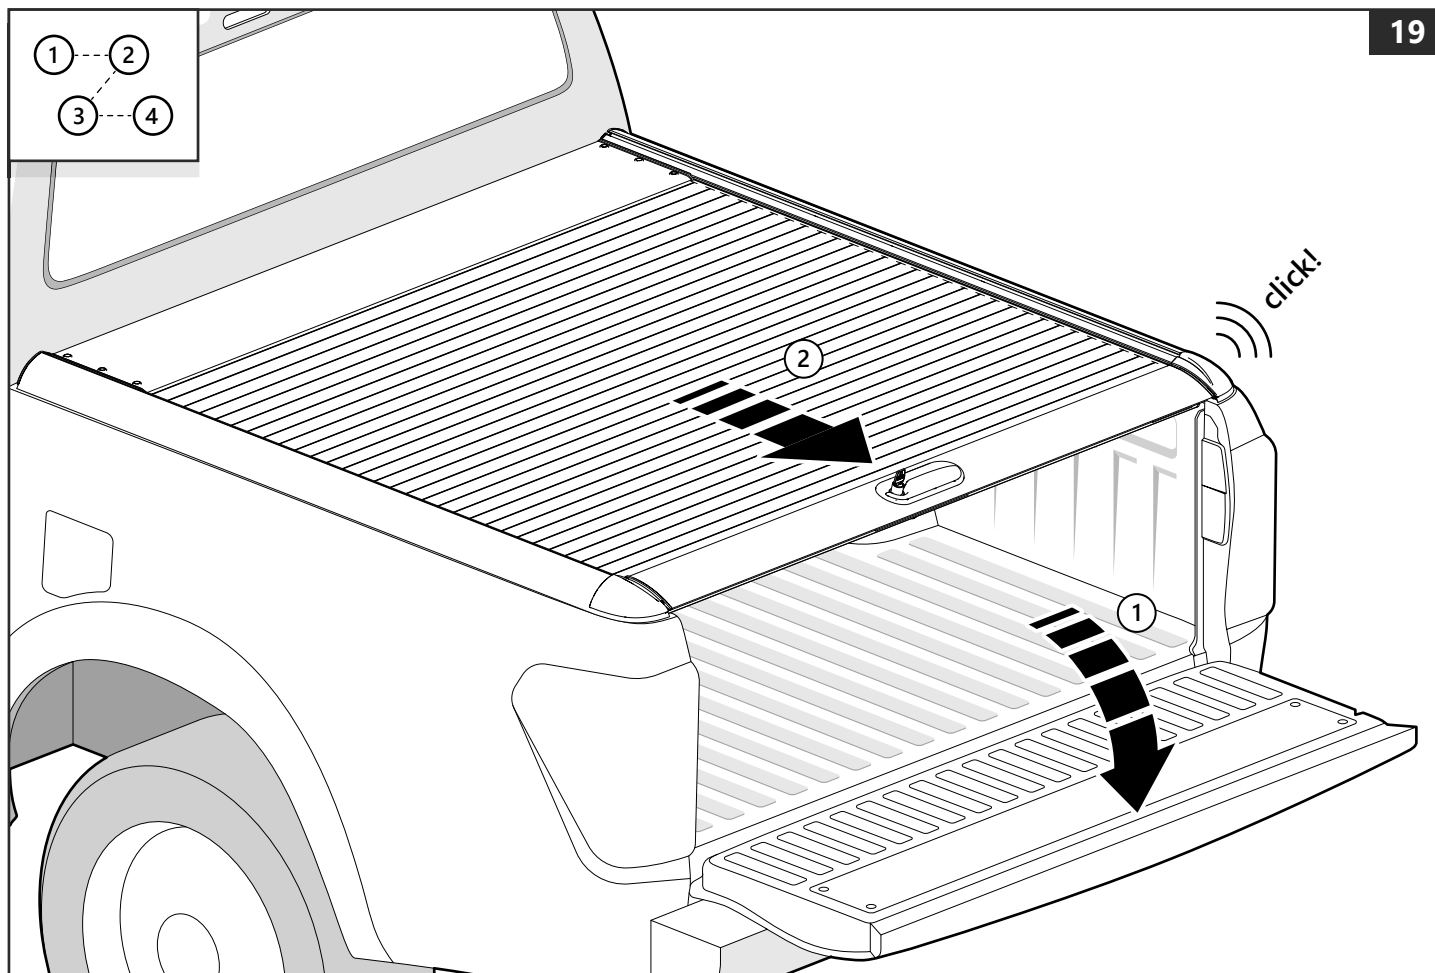

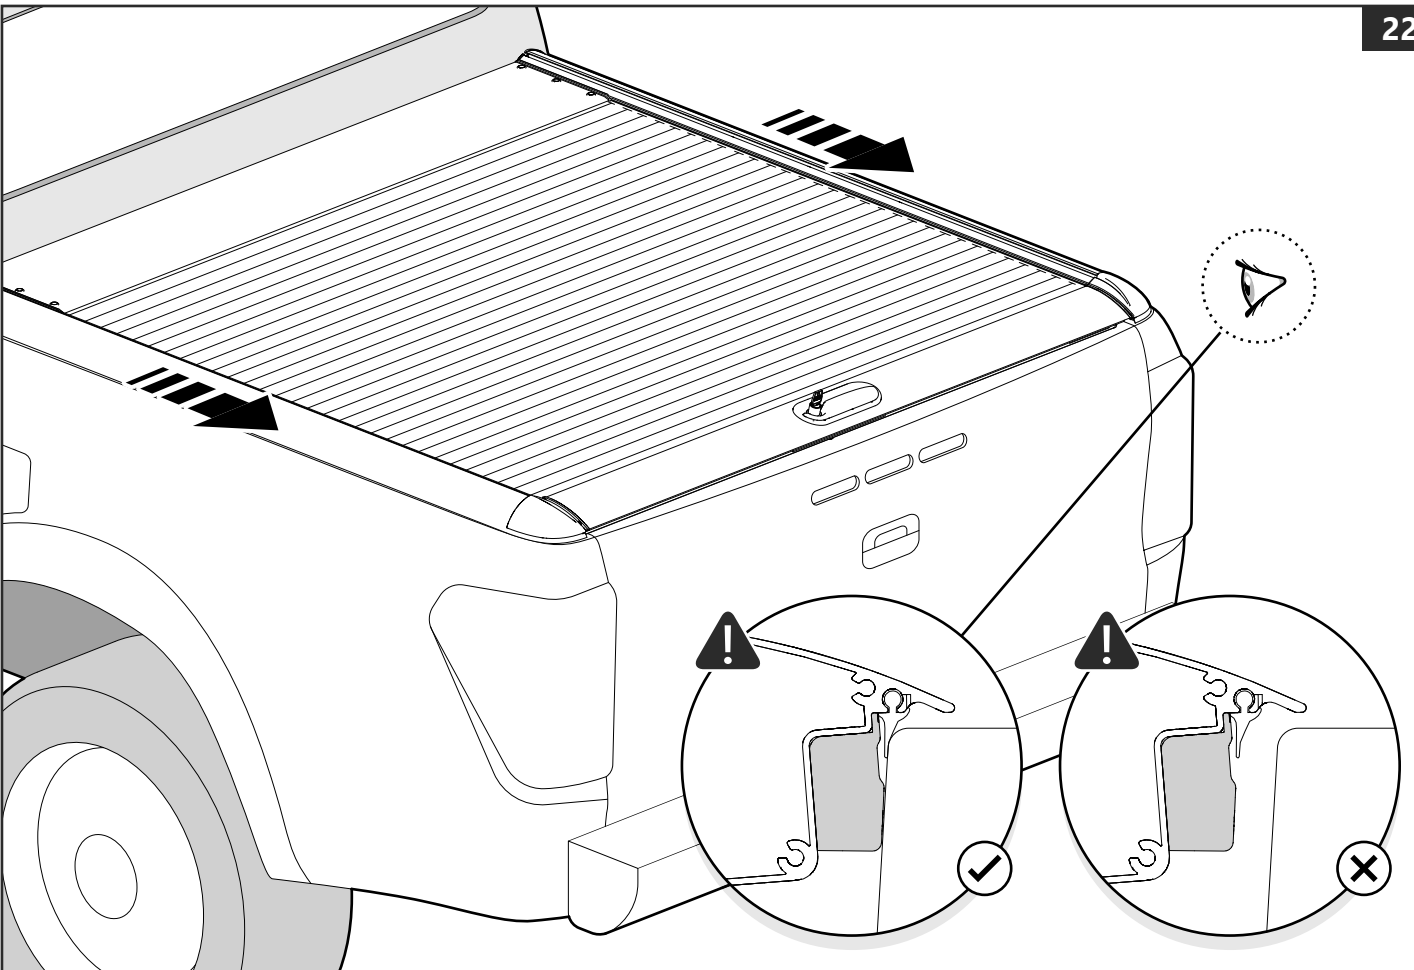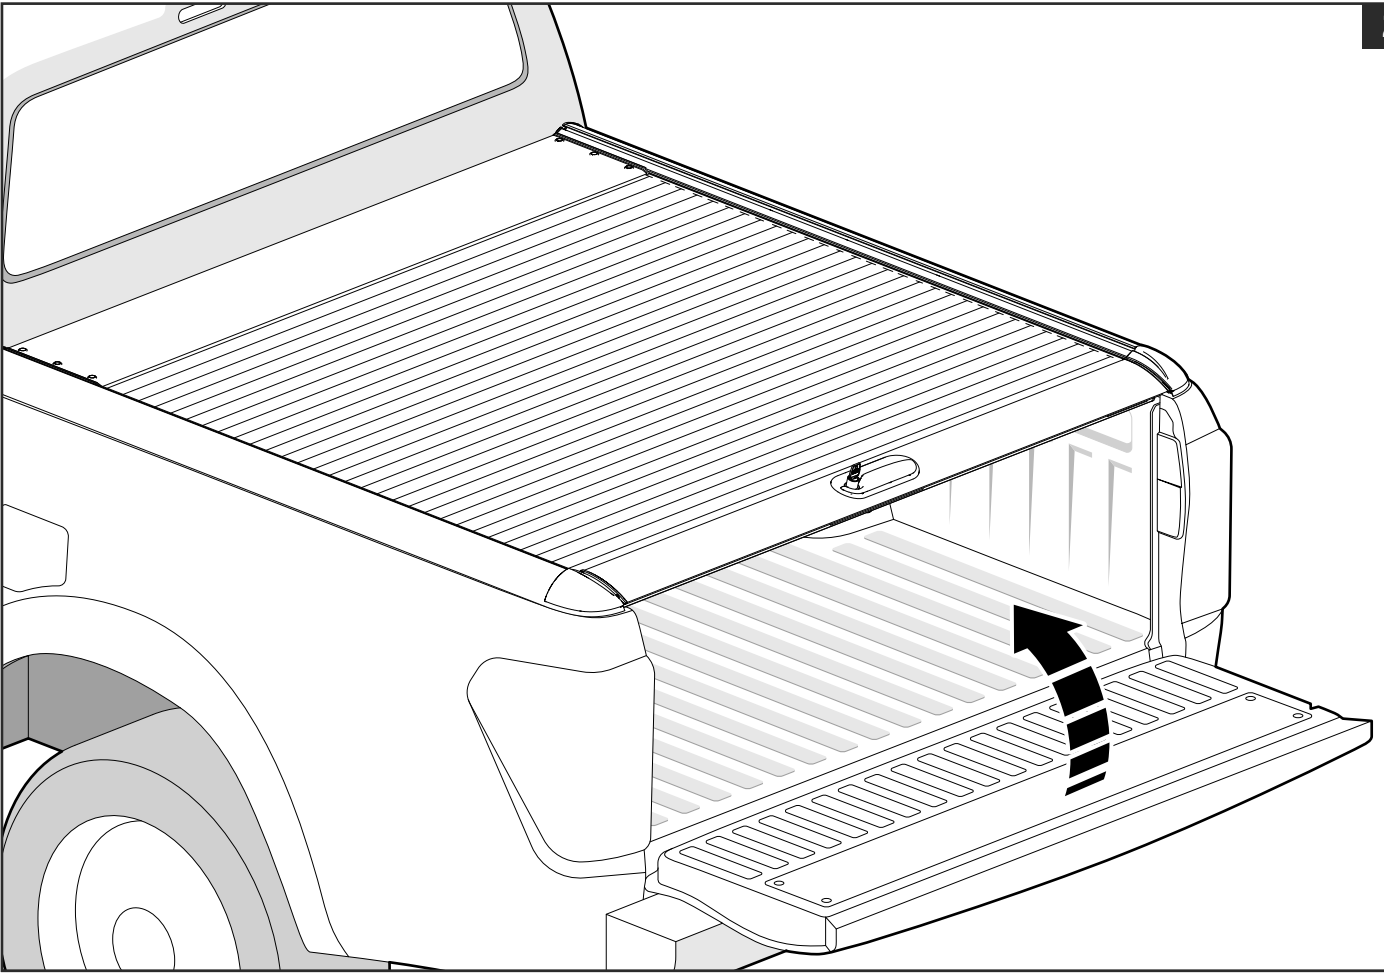


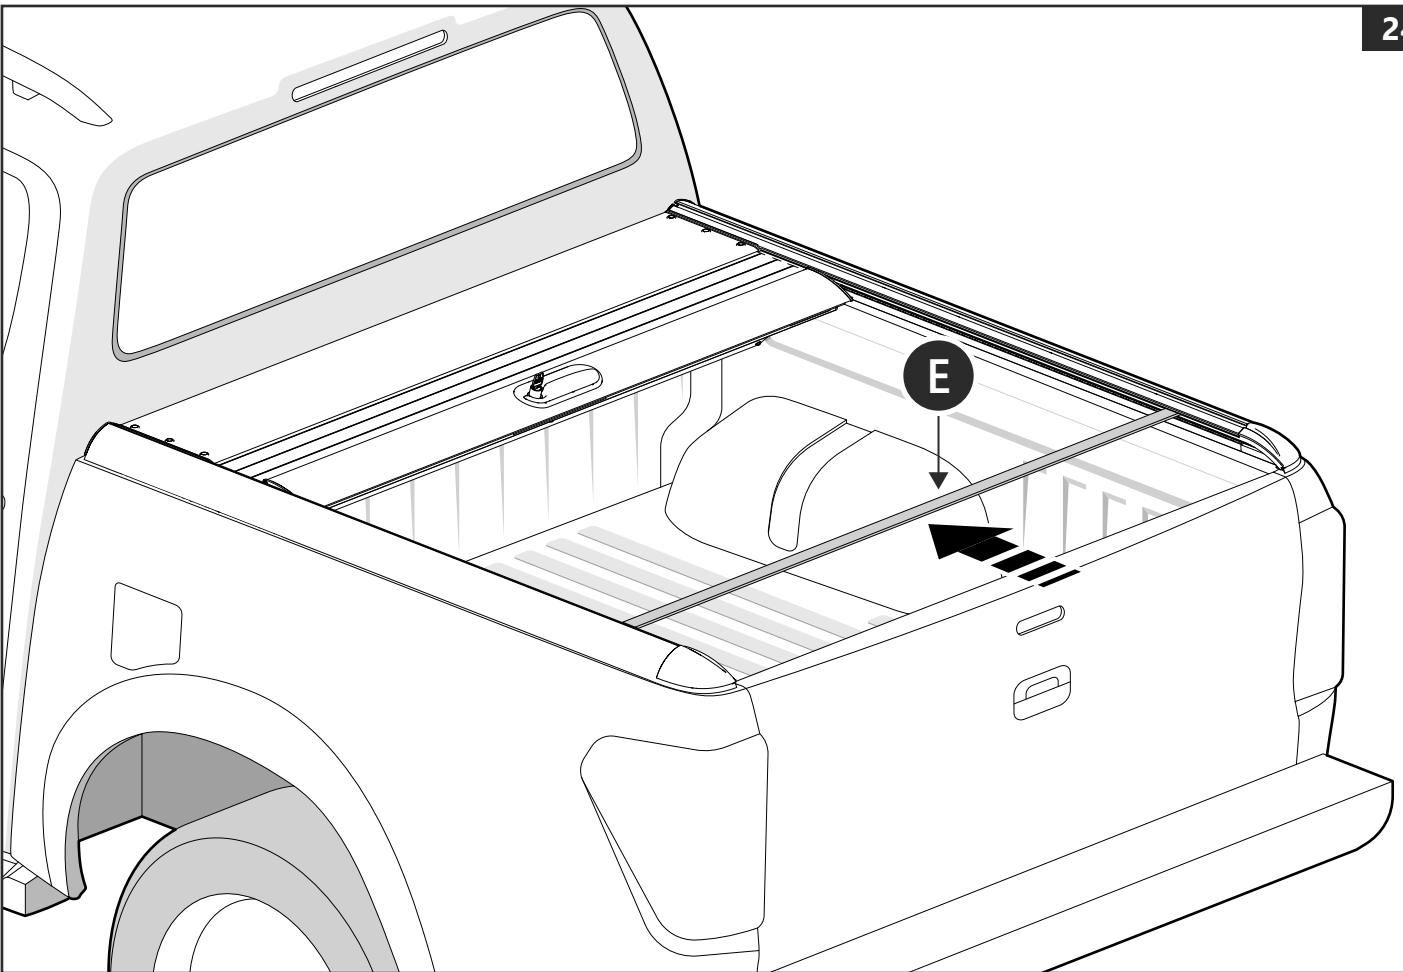
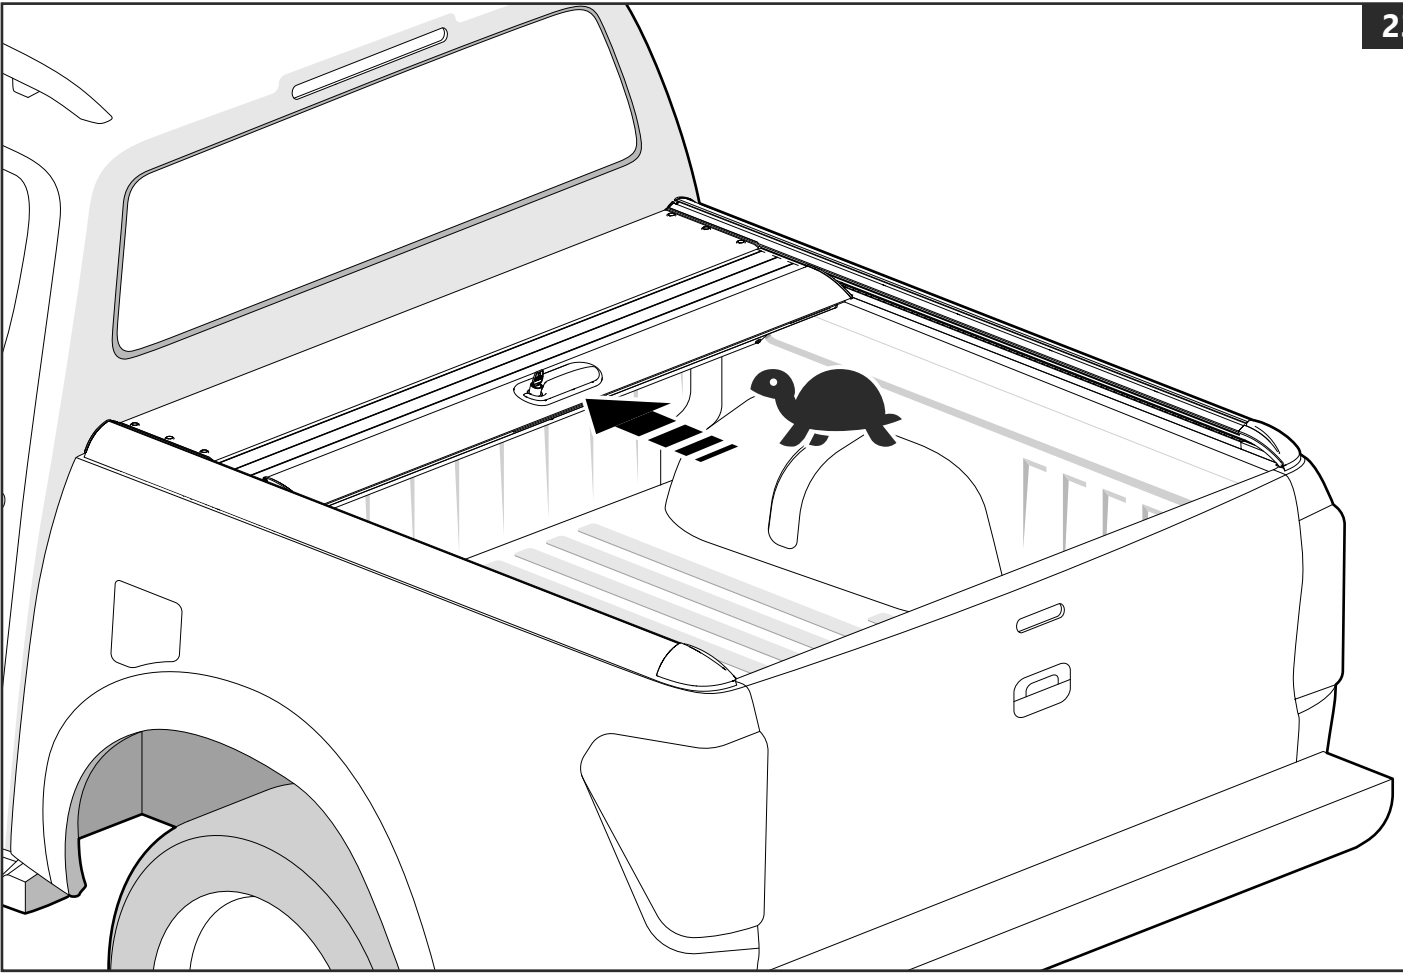


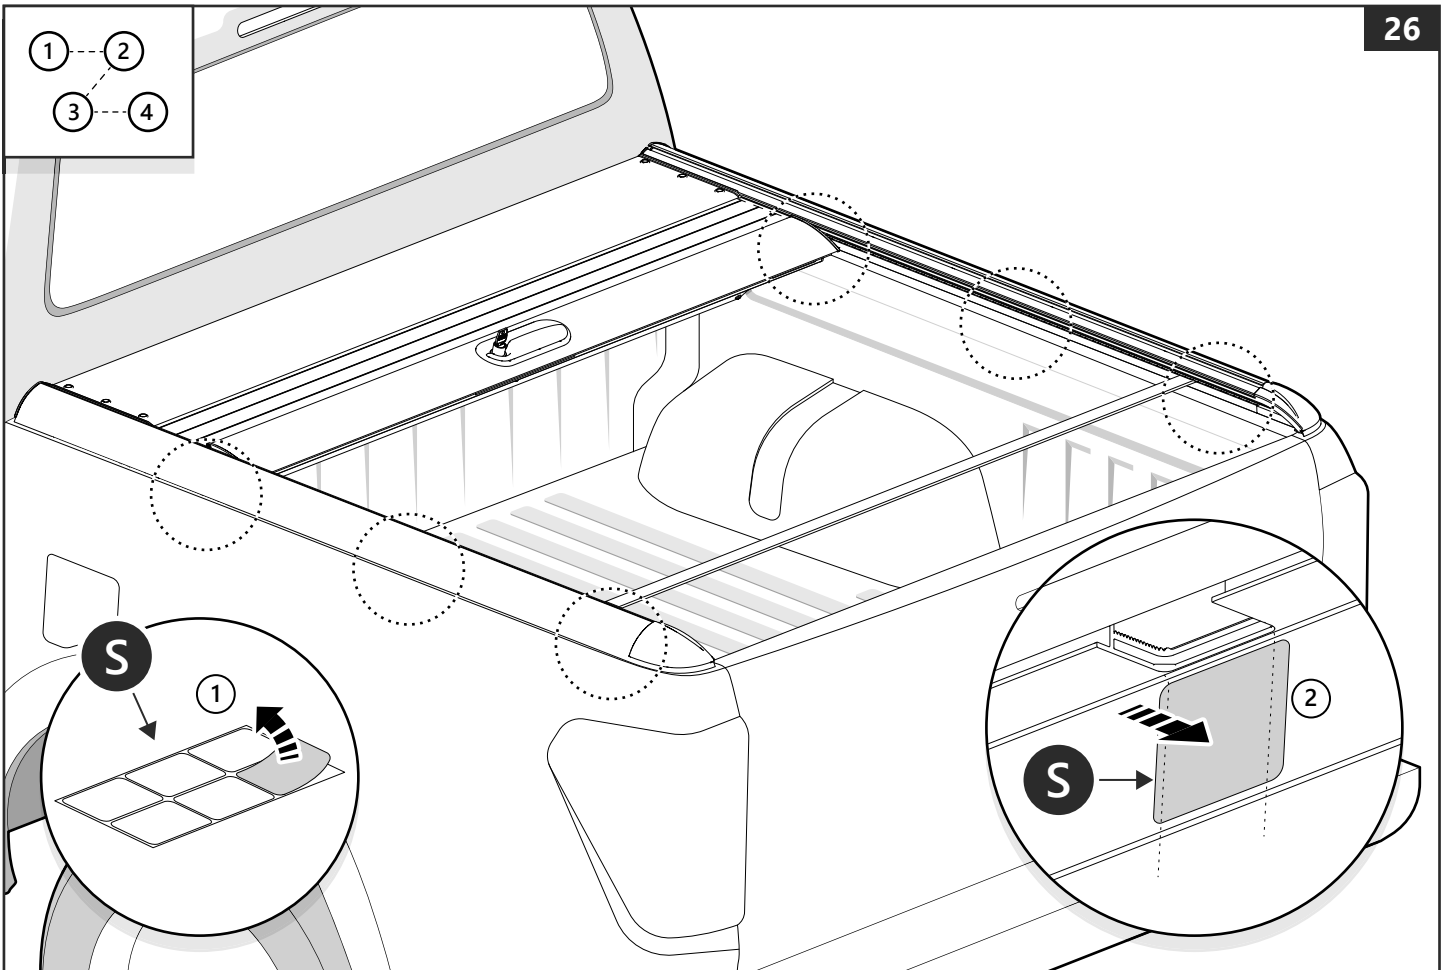
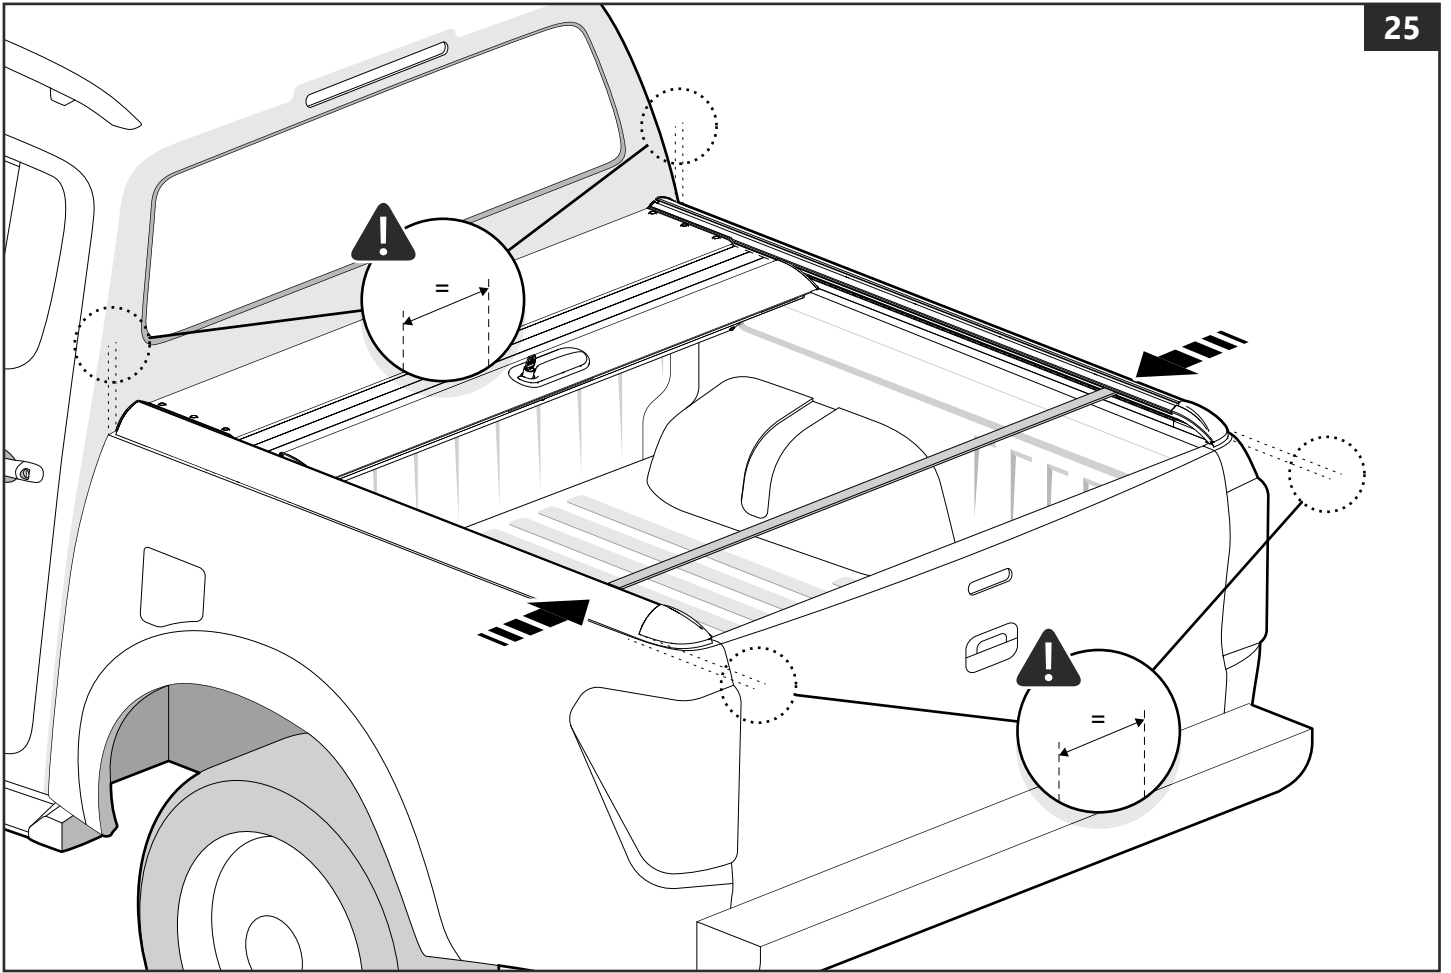



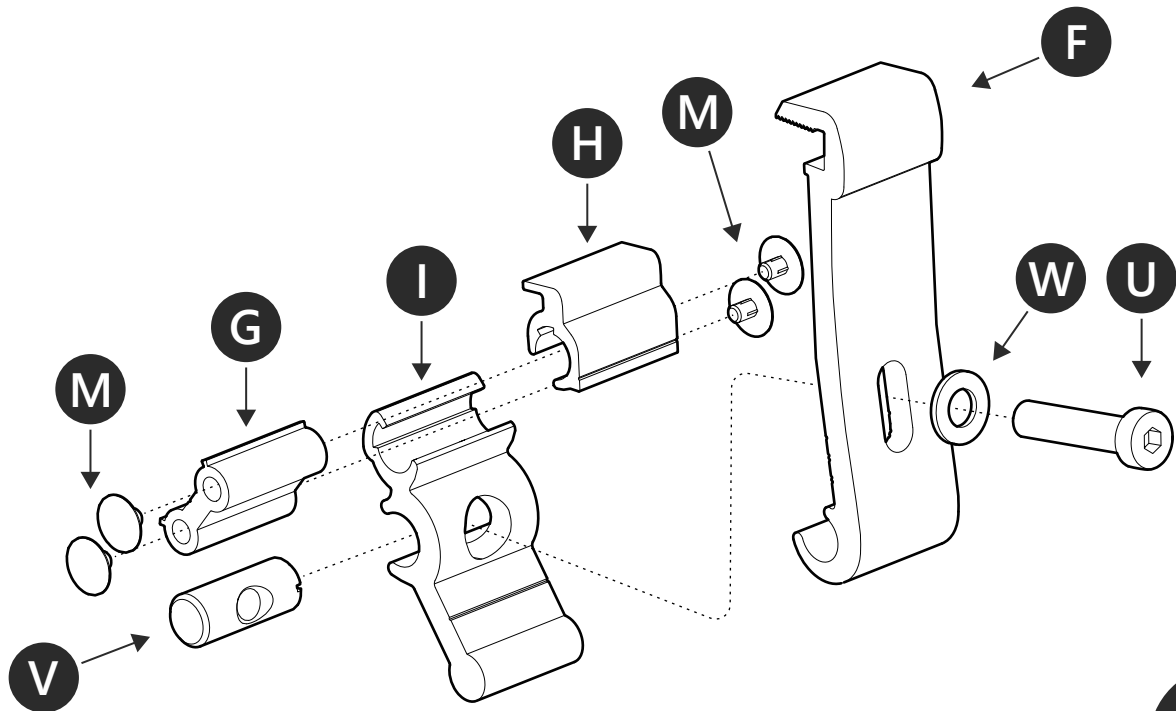




x 6

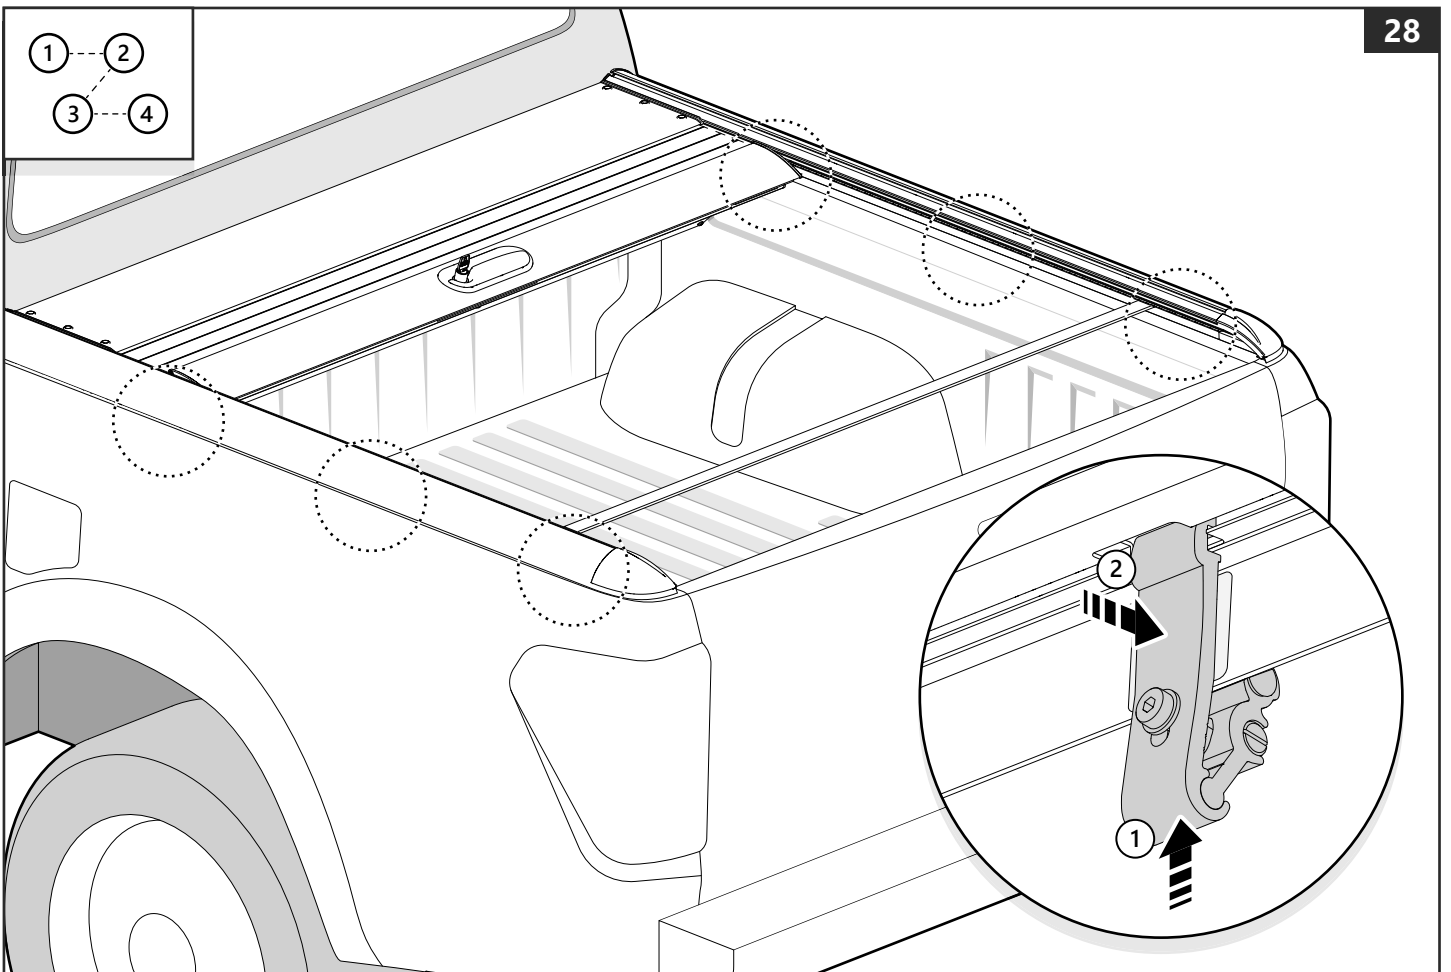

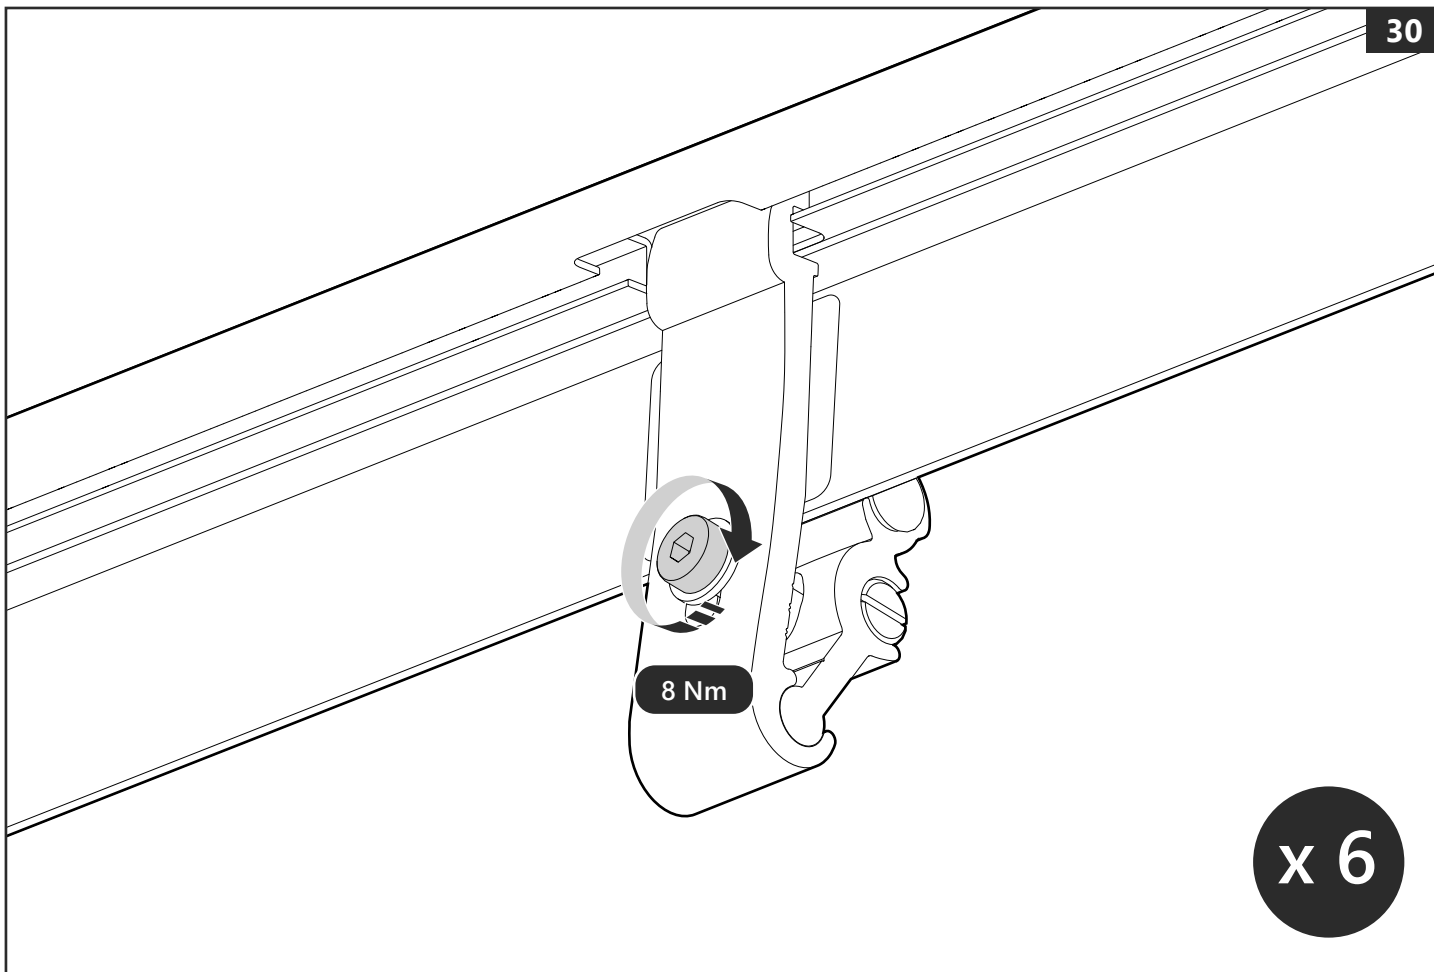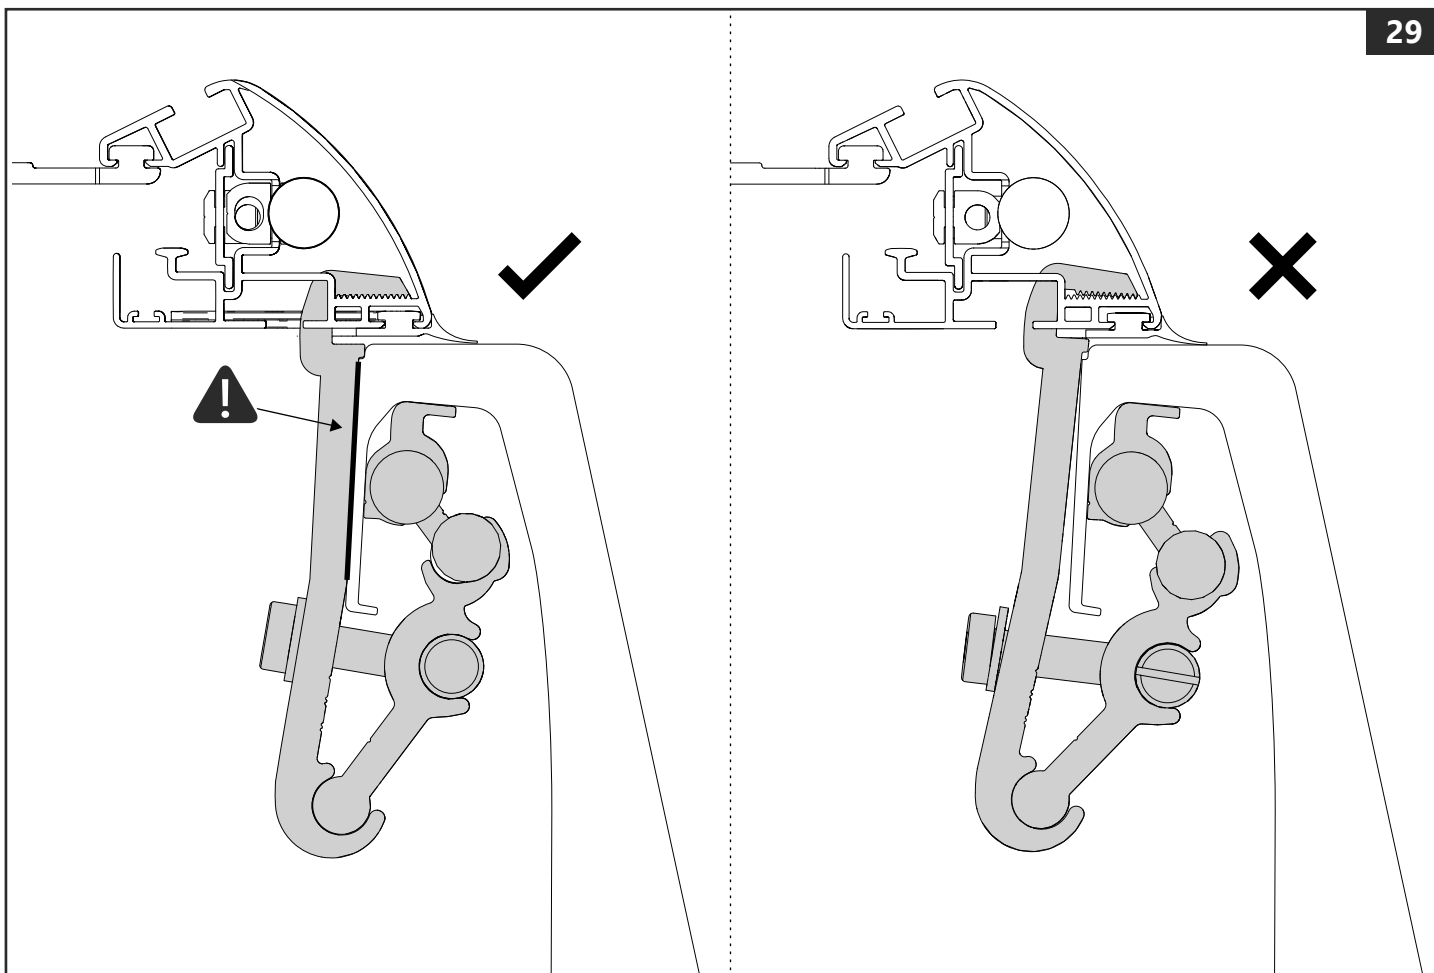

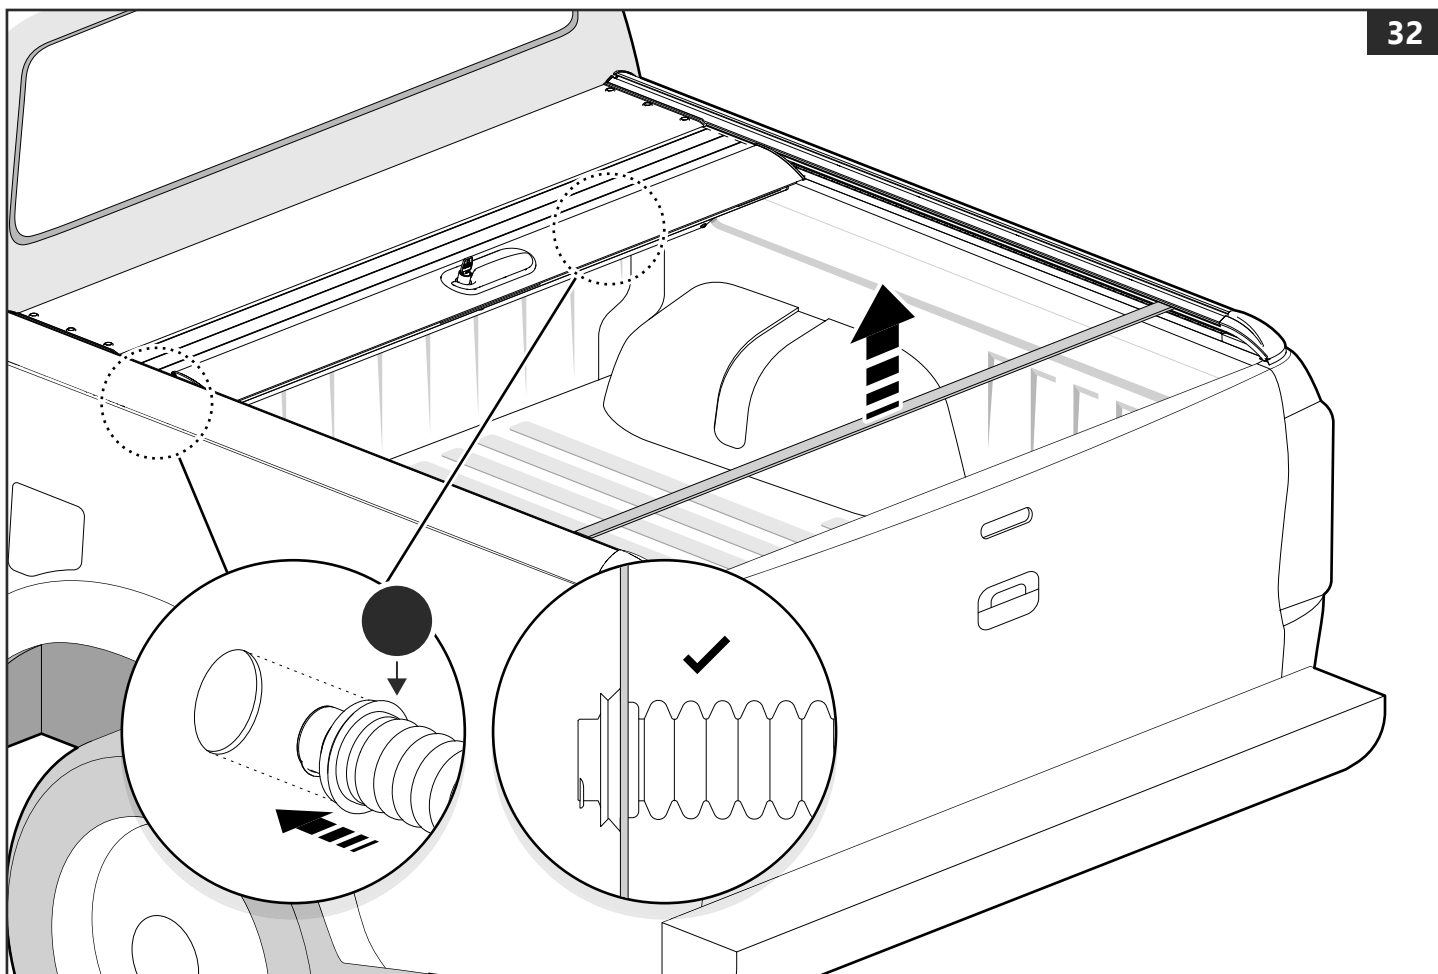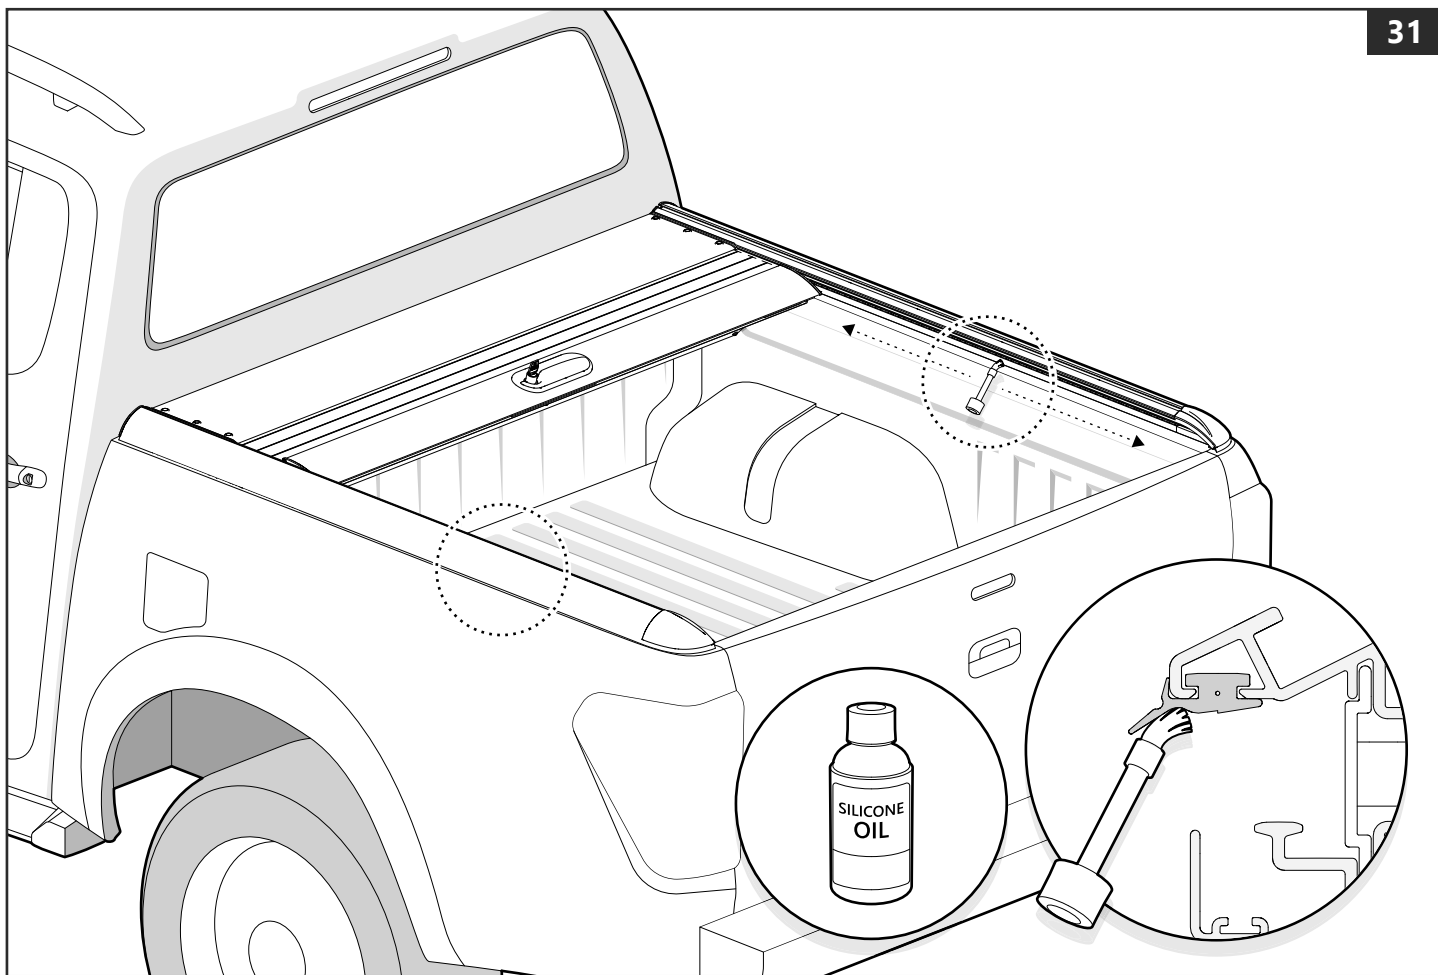

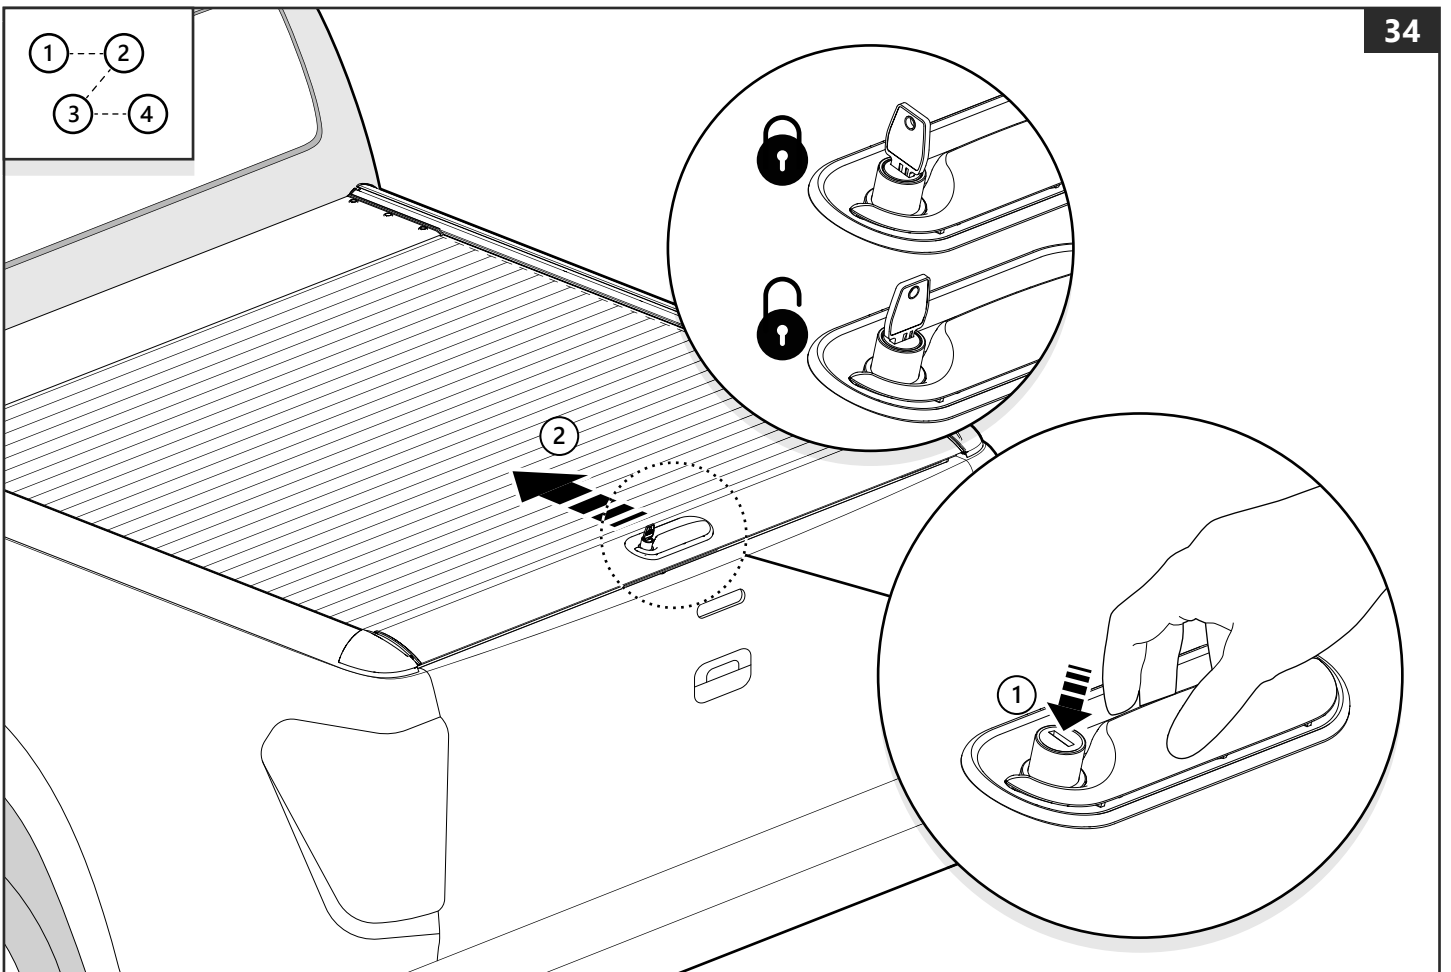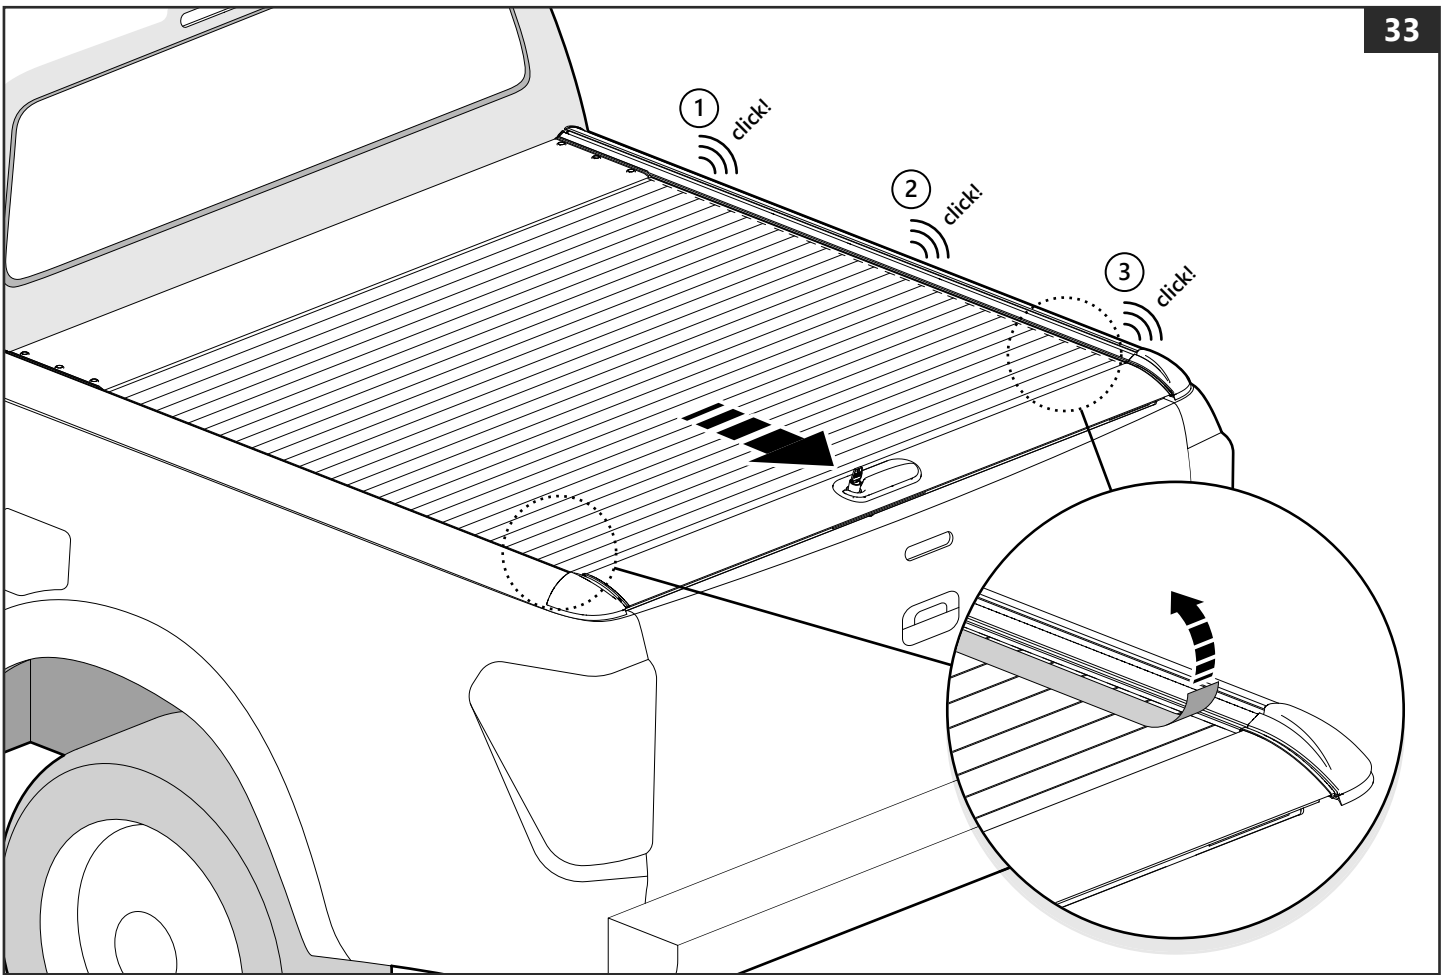

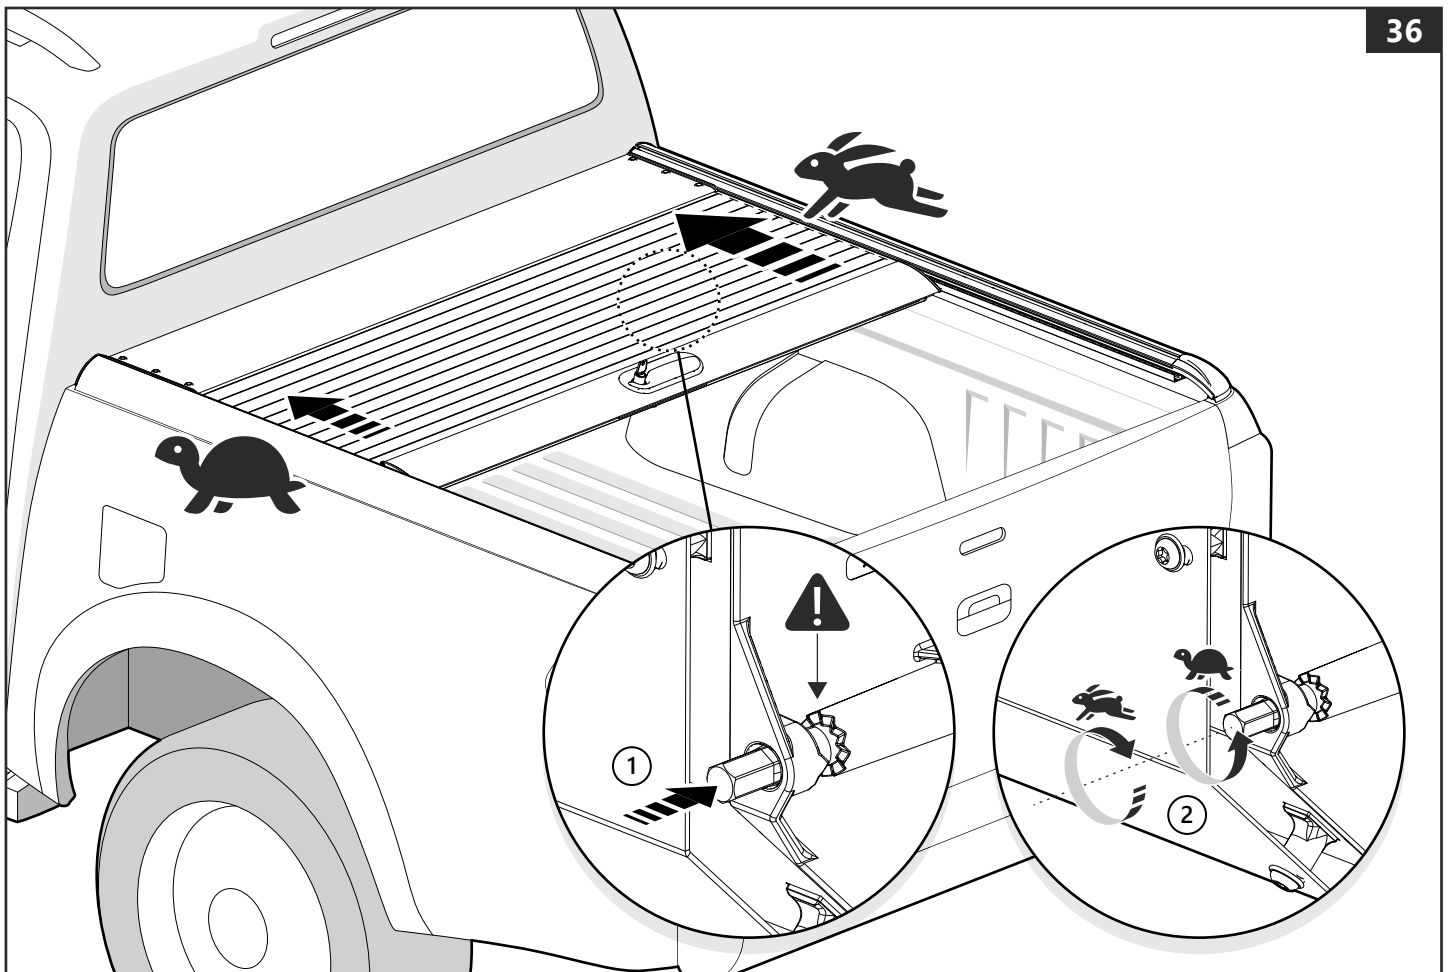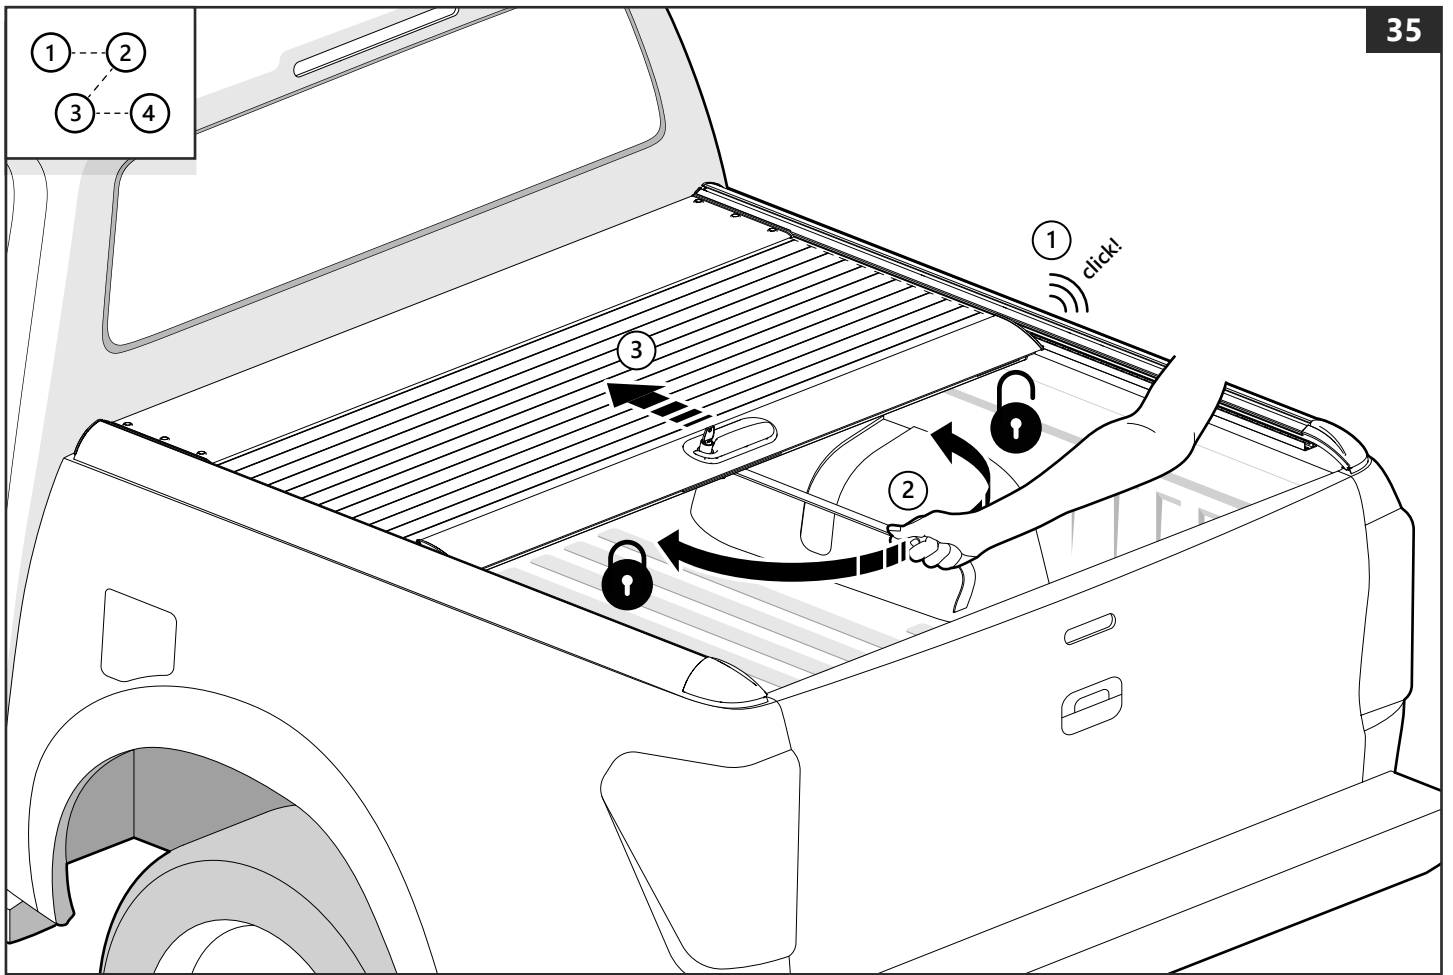



Customer Service	+49 80 990 2880 (08:30 - 18:00 CET)
Fax	+49 89 80 990 2888
Support	mail@ullsteincinepts.com
Website	www.ullsteinconcepts.com
Address	Bahnhofstr. 20; 85416 Langenbach Germany



ULLSTEIN
CONCEPTS
GMBH

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTR TO80/81	Toyota / 2006 - 2016	Double / Extra	2 hour(s)	31 - 36 Kg
MTR TO90/91	Toyota / 2015 →	Double / Extra	2 hour(s)	31 - 36 Kg
MTR IS90/91	Isuzu / 2006 - 2011	Double / Space	2 hour(s)	31 - 36 Kg
MTR FO90/91	Ford / 2011 →	Double / Super	2 hour(s)	31 - 36 Kg
MTR MA90/91	Mazda / 2011 →	Double / Super	2 hour(s)	31 - 36 Kg
MTR NI90/91	Nissan / 2015 →	Double / King	2 hour(s)	31 - 36 Kg
MTR VW80	Volkswagen / 2010 →	Double	2 hour(s)	31 - 36 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare