


13H | VW Amarok; Modell 2010

EU-Personenschutzbügel 70 niedrig /
EU-pedestrian protection bar 70 low



FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucctionnes de montage • Manual

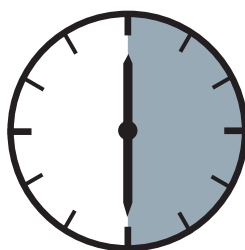

30 Minuten

Artikel-Nr:


13H 4213 Stainless Steel
13H 5213 Steel black
13H 9213 Mounting Set

Revision 1: 16.2.2011

13H | VW Amarok; Modell 2010

EU-Personenschutzbügel 70 niedrig /
EU-pedestrian protection bar 70 low

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

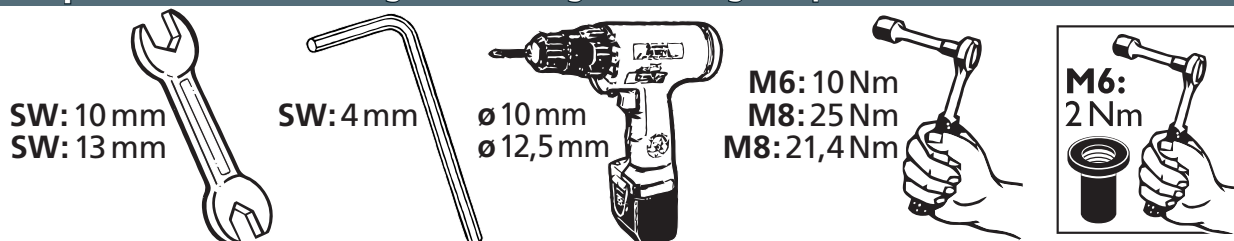

Parts list / Teileliste / Lista de accesorios

1 ø70; 13H 4213.1 (13H5213.1)



Standard Parts list / Normteileliste

a		M6x25; DIN 7991	4x
b		M6x20; ~ISO 7380 A2	2x
c		M6x25; DIN 933 A2	2x
d		M8x20; DIN 933 A2	2x
e		ø6; DIN 127 A2	4x
f		ø8; DIN 127 A2	2x
g		ø6,4; DIN 9021 A2	4x
h		ø8,4; DIN 9021 A2	2x
i		SW 10	2x
k		SW 13	2x
m		M6; Geto-Well	4x

Mounting set 13H9213 / Montagesatz 13H9213

2 13H 5072



3 13H 5073 2x




4 13B5047



5 12X5132



6 006009.1 4x

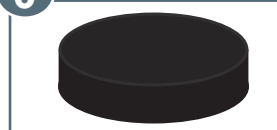

Artikel-Nr:

13H 4213 Stainless Steel


13H 5213 Steel black

13H 9213 Mounting Set


Revision 1: 16.2.2011




Step 1a

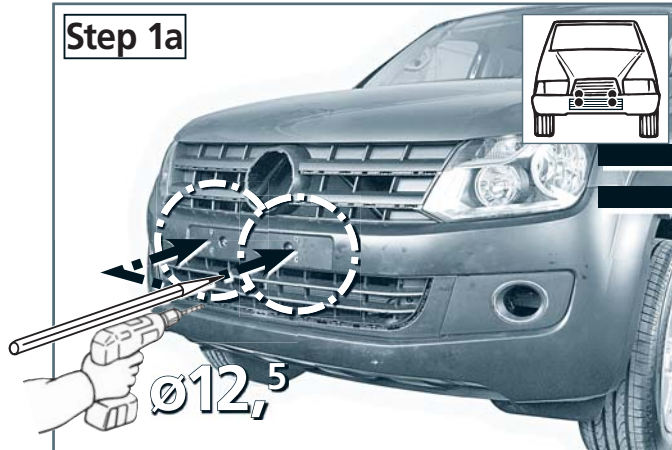


Step 1b

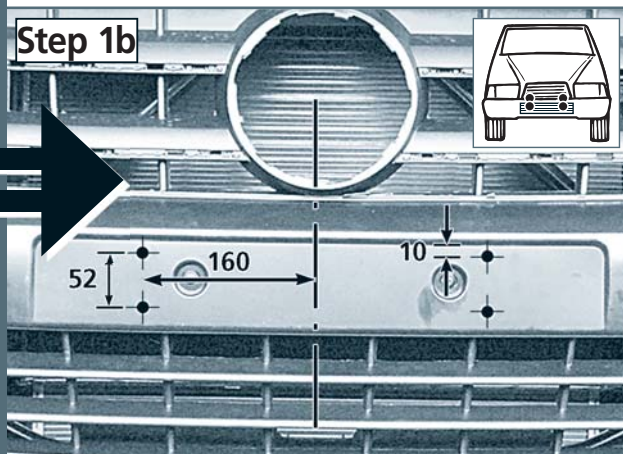


Step 2

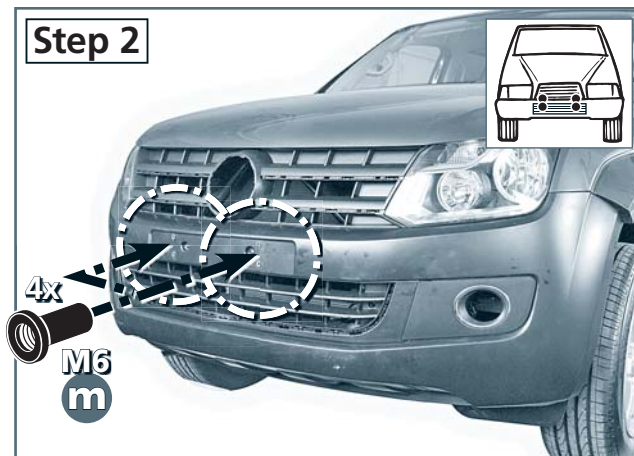


Step 3








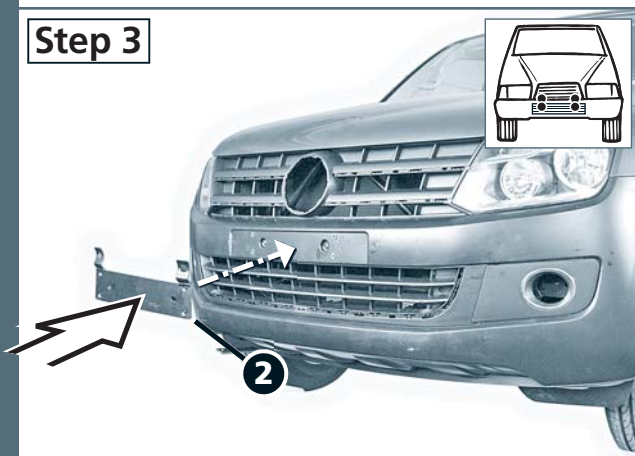









Step 4

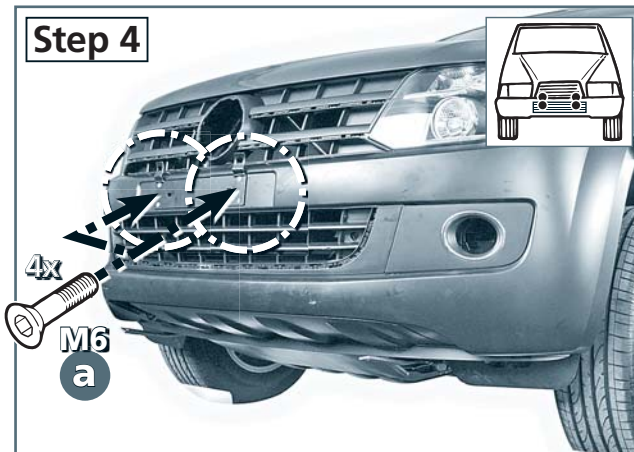


Step 5a

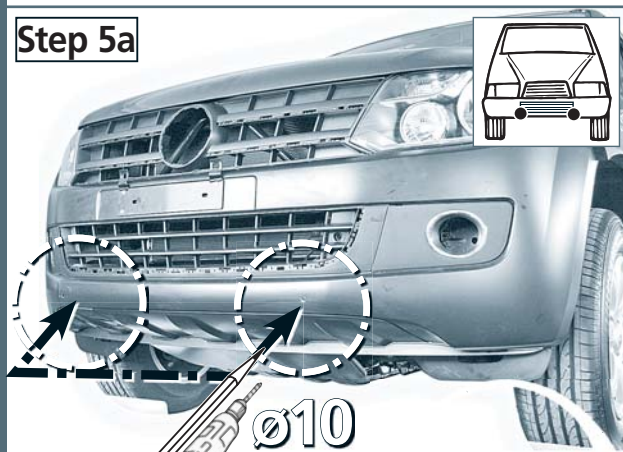

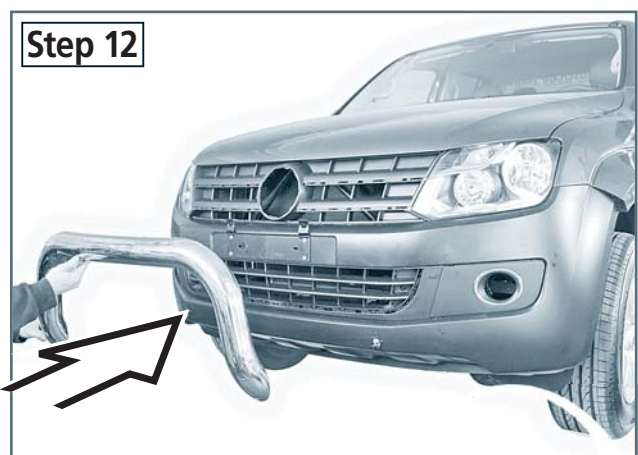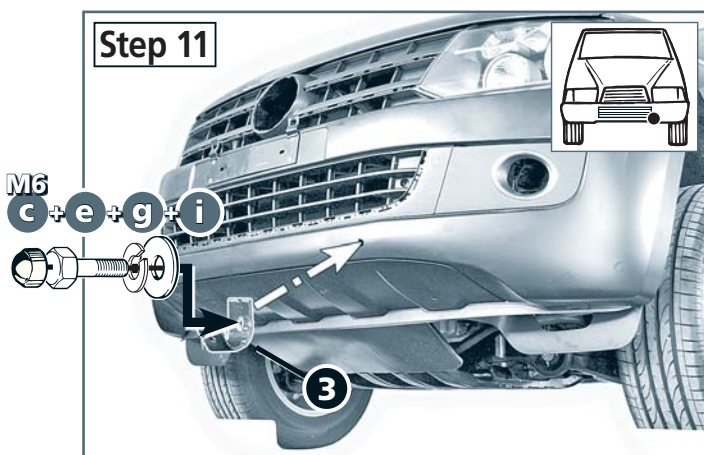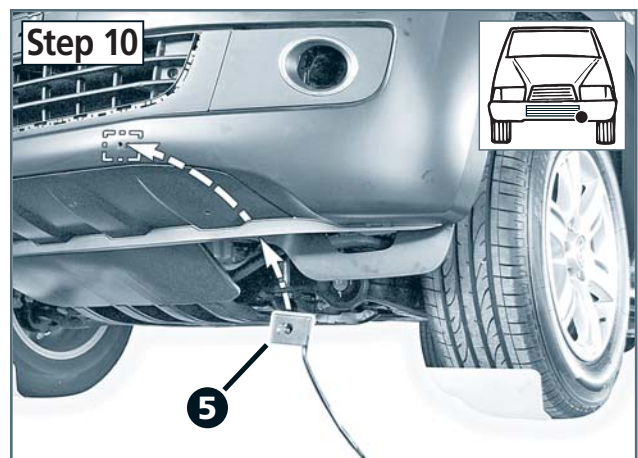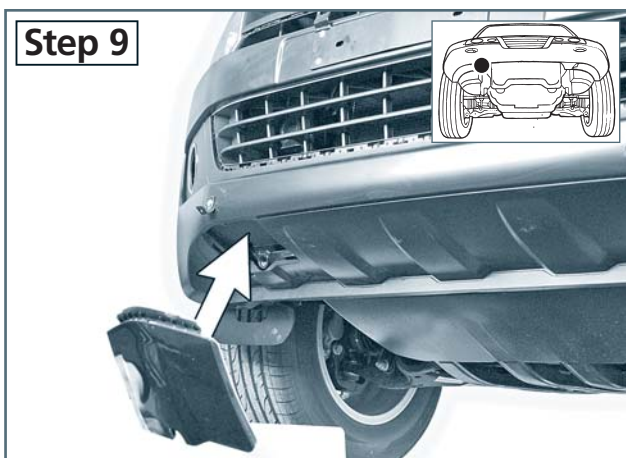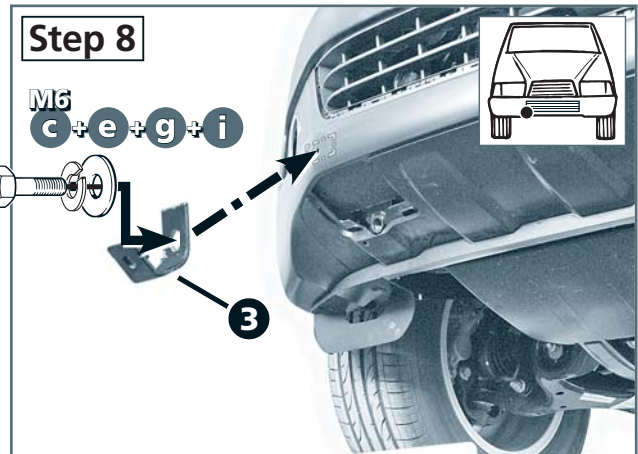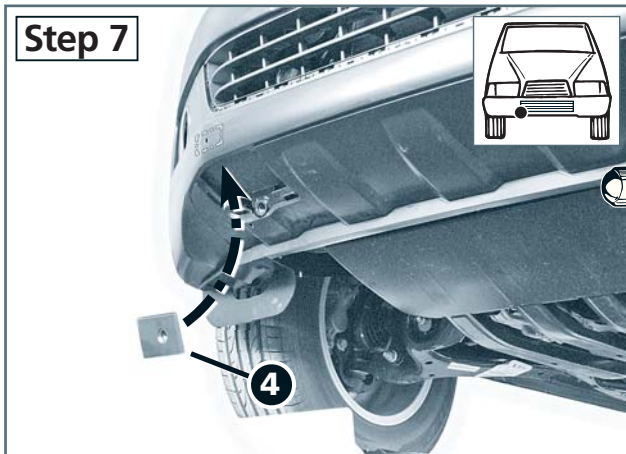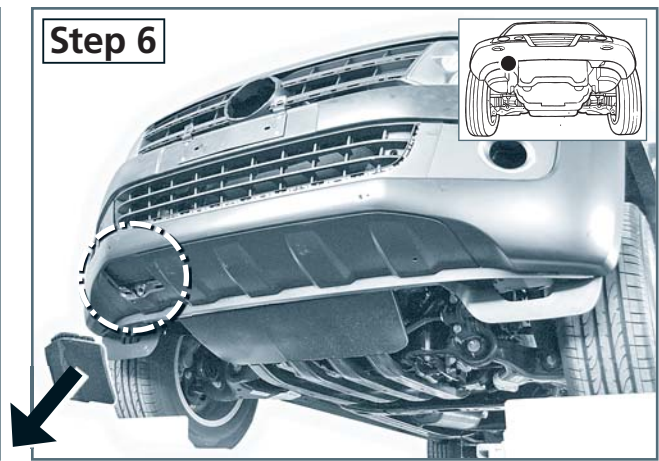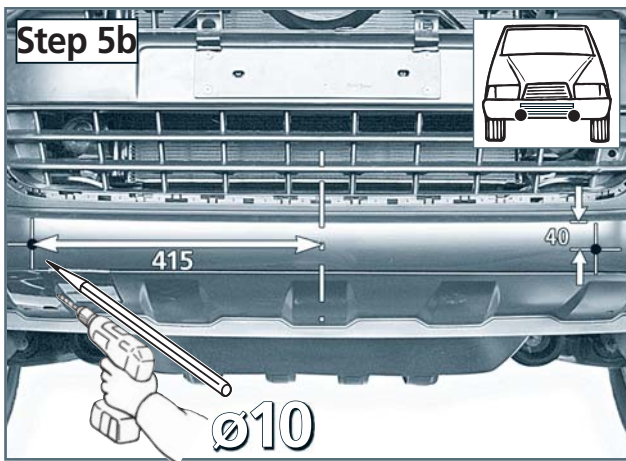

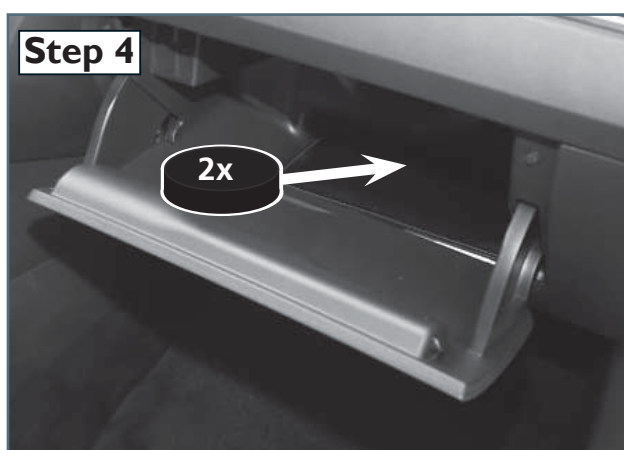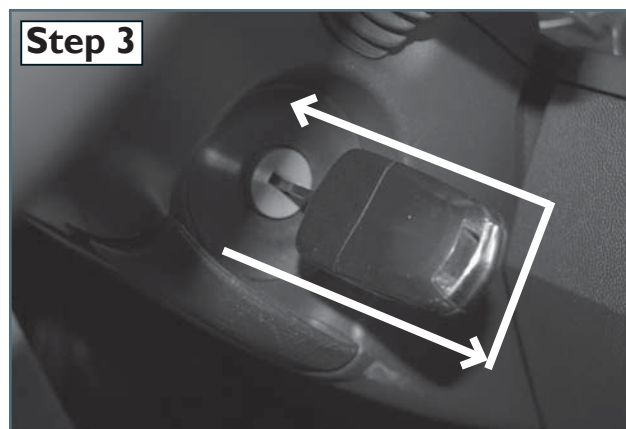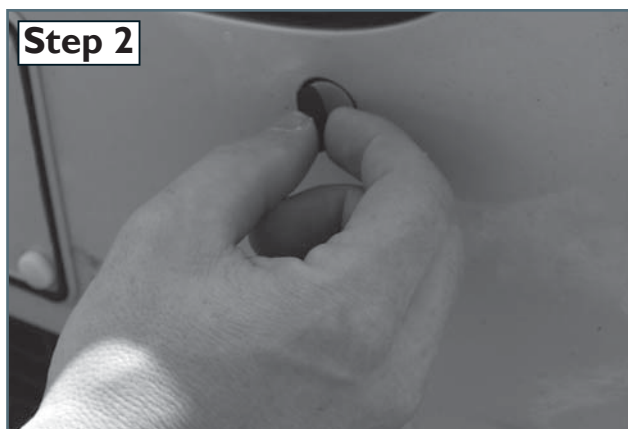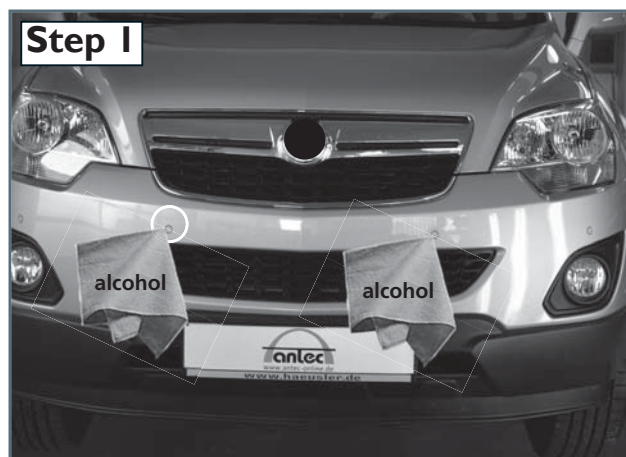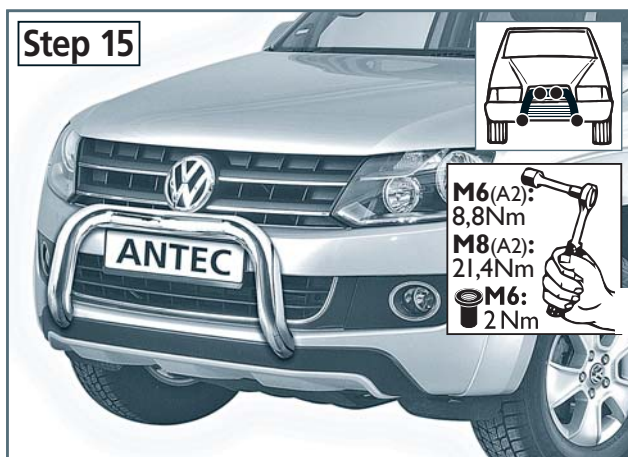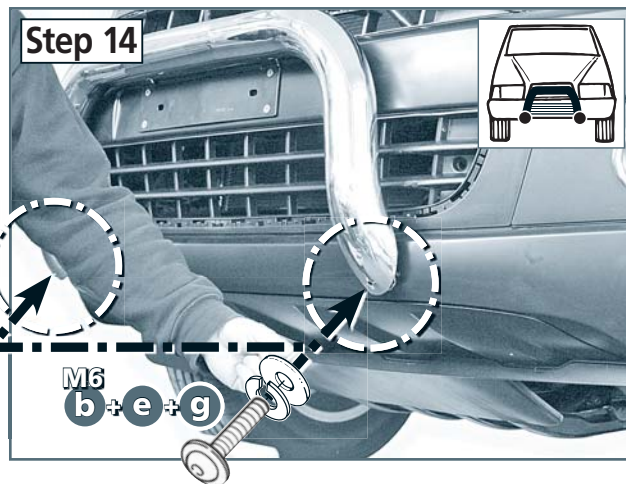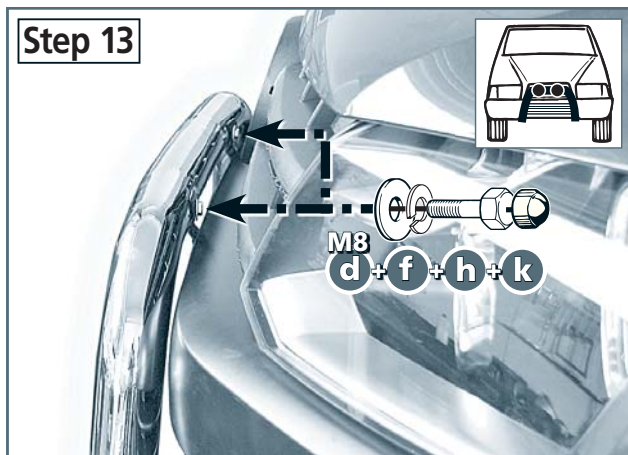

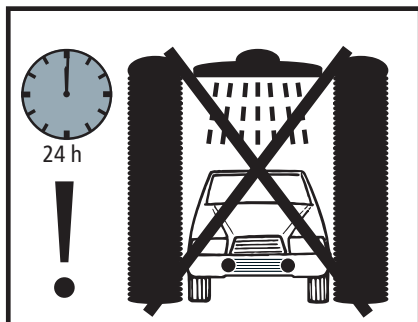

Die Funktion des PDC ist eingeschränkt
The function of the PDC will be restricted
La fonction de la pdc est limitée
La función de la PDC se restringirá
Funkcio PDC on rajoitettu
Funkce PDC bude omezeno
Funksjonen til PDC vil være begrenset
Funktionen för PDC kommer att begränsas

