

11X


**Opel Movano / Renault Master ; Md. 2010
Nissan NV 400; Modell 2012**

Spoiler Protective Tube 42 straight / Spoilerschutzrohr 42 gerade



ASSEMBLY INSTRUCTIONS

**Montageanleitung • Instructions de montage
Intructionnes de montage • Manual**

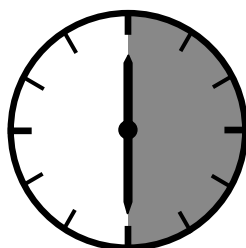

30 Minuten

Artikel-Nr:

11X 4016 Stainless Steel
11X 5016 black Steel
11X 9016 Assembly-kit

Revision 2: 18.4.2012




**ULLSTEIN
CONCEPTS
GMBH**

11X

Opel Movano/Renault Master; Md.2010 Nissan NV 400; Modell 2012

Spoiler Protective Tube 42 straight / Spoilerschutzrohr 42 gerade

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

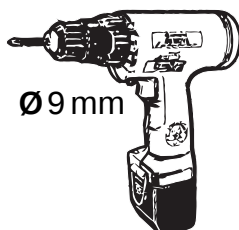

Parts list / Teileliste / Lista de accesorios

1 11X 4016.1 / 11X 5016.1




Standard Parts list / Normteileliste



Assembly-kit 11X9016 / Montagesatz 11X9016

2 005898

4x 3 M6; 13B 5047 4x






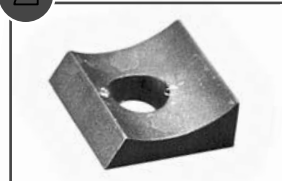


Stainless Steel

Revision 2: 18.4.2012



ULLSTEIN
CONCEPTS
GMBH

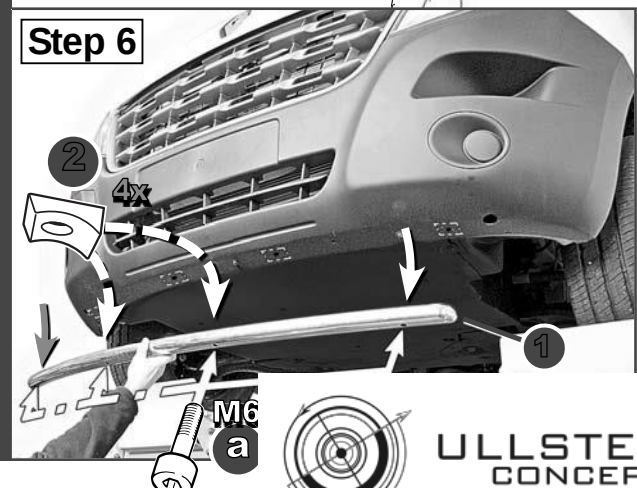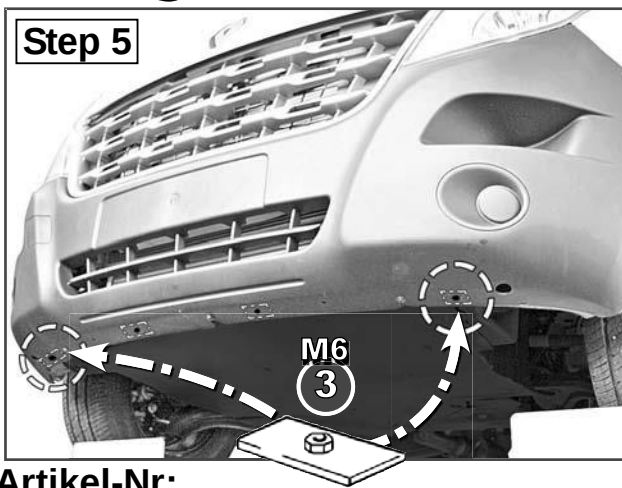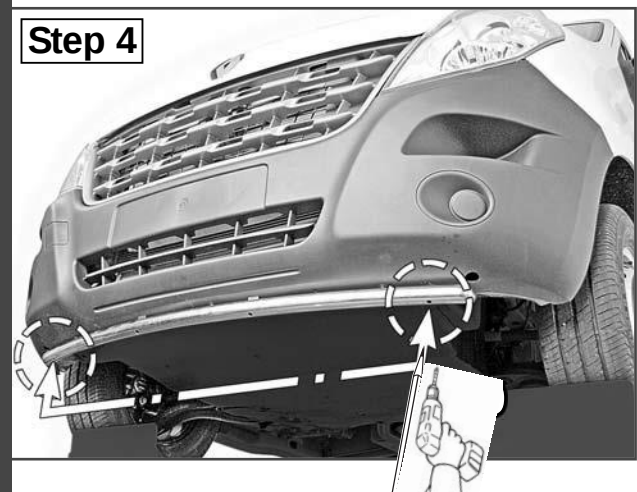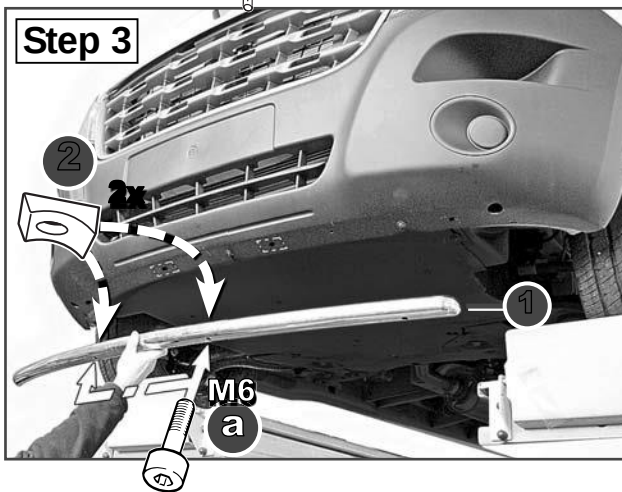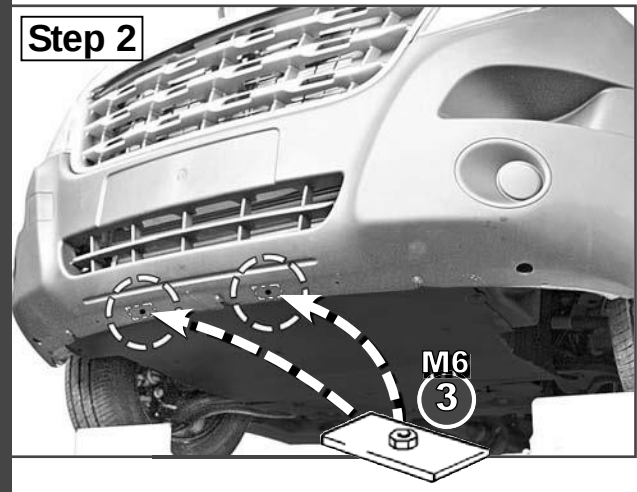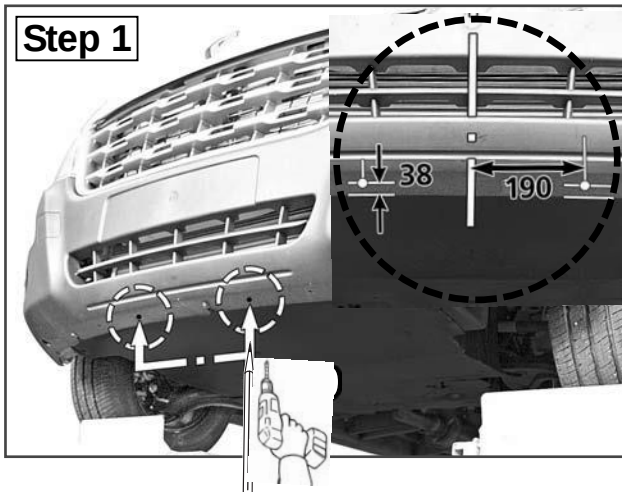


Artikel-Nr:
11X 4016 Stainless Steel

Revision 2: 18.4.2012




ULLSTEIN
CONCEPTS
GMBH

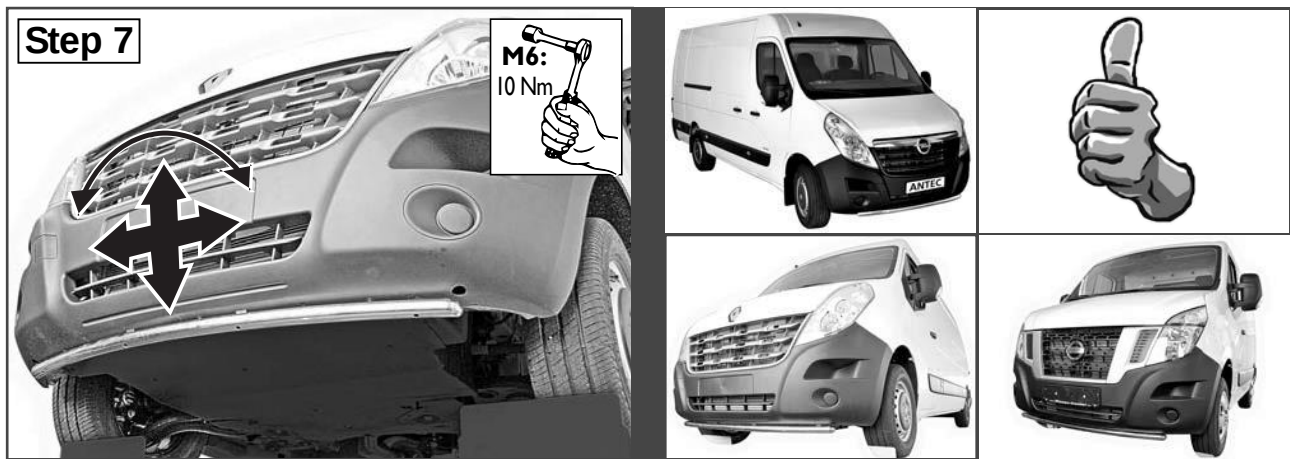

Artikel-Nr:
11X 4016 Stainless Steel

Revision 2: 18.4.2012

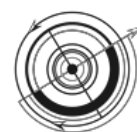

ULLSTEIN
CONCEPTS
GMBH