

Ford Transit Custom, Modell 2013 Ford Tourneo Custom, Modell 2013

Flankenschutzrohr 90 x 45 mm oval mit Noppen


Oval side bar 90 x 45 mm with dots

Barre latérale ovale 90 x 45 mm avec des points



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

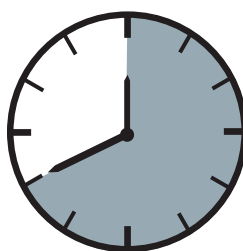


40 Minuten

Artikel-Nr:

Revision 1: 12.11.2013



ULLSTEIN
CONCEPTS
GMBH

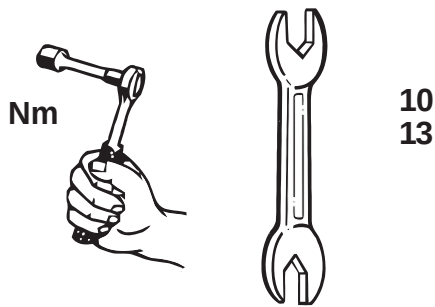

16T4051.1R / 16T5051.1R
16T4051.2L / 16T5051.2L

1

1x



2

16T5027.1R / 16T5027.2L

1x



3

16T5026

4x



4

16T5033

2x



a		M6 x 25; DIN 933 Zn	2x
b		M8 x 20; DIN 933 A2	6x
c		M8; DIN 934 Zn	4x
d		Ø 6,4; DIN 9021 Zn	2x
e		Ø 8,4; DIN 9021 Zn	4x
f		Ø 8,4; DIN 9021 A2	6x
g		Ø 10,5; DIN 9021 Zn	4x
h		Ø 6; DIN 127 Zn	2x
i		Ø 8; DIN 127 Zn	4x
j		Ø 8; DIN 127 A2	6x
k		SW 13 mm	6x









5



16T5032

2x



ULLSTEIN
CONCEPTS
GMBH

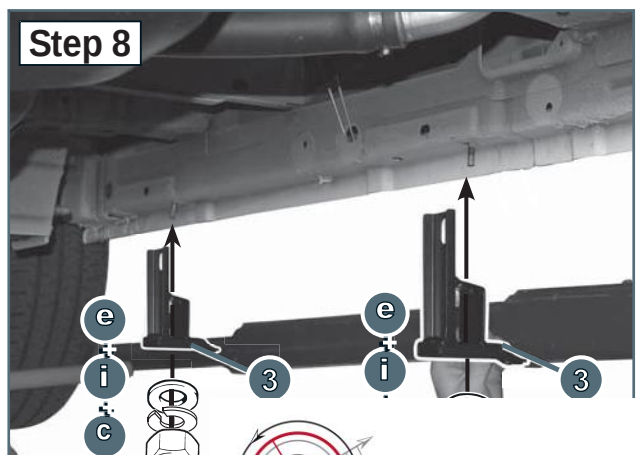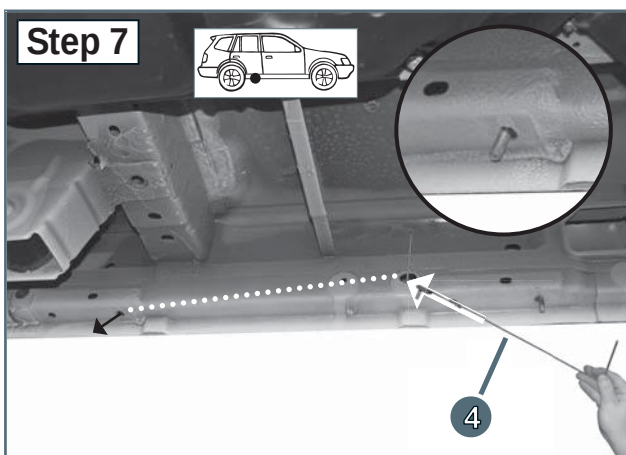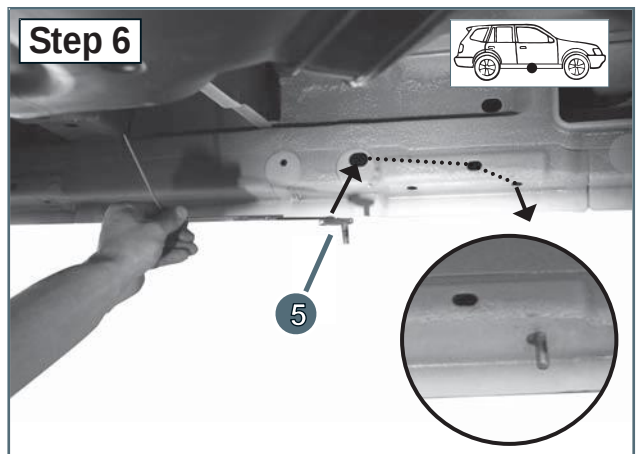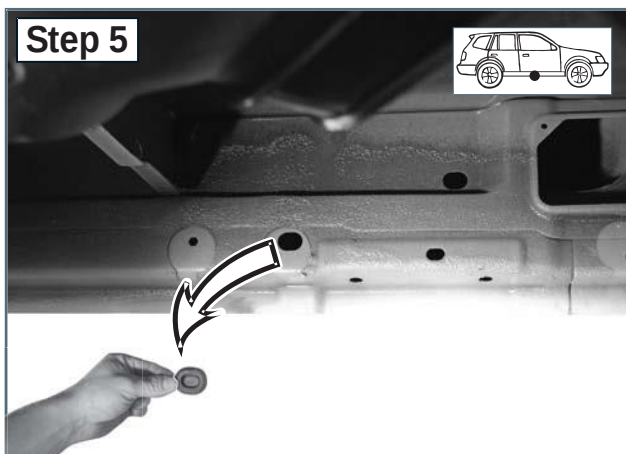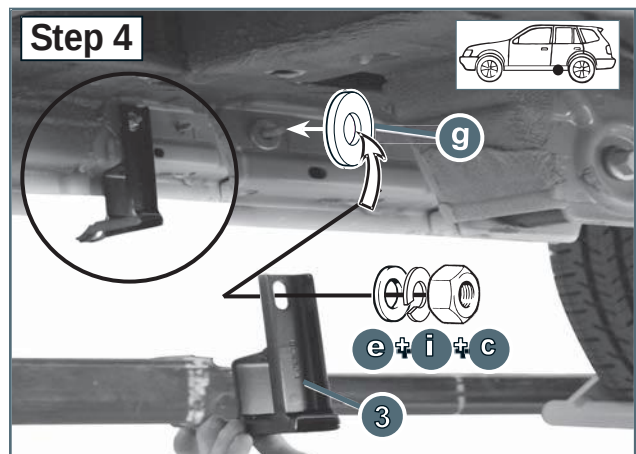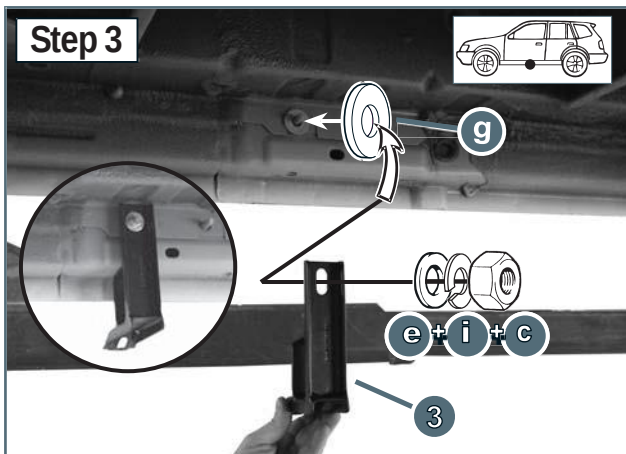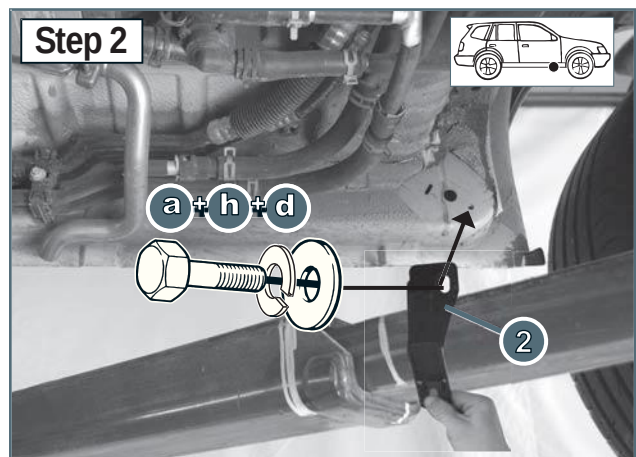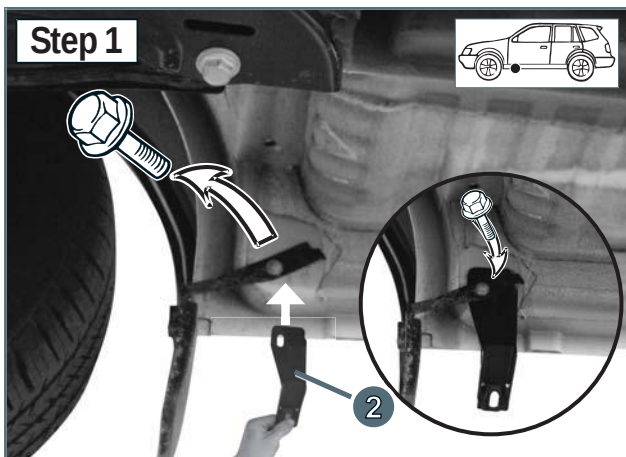

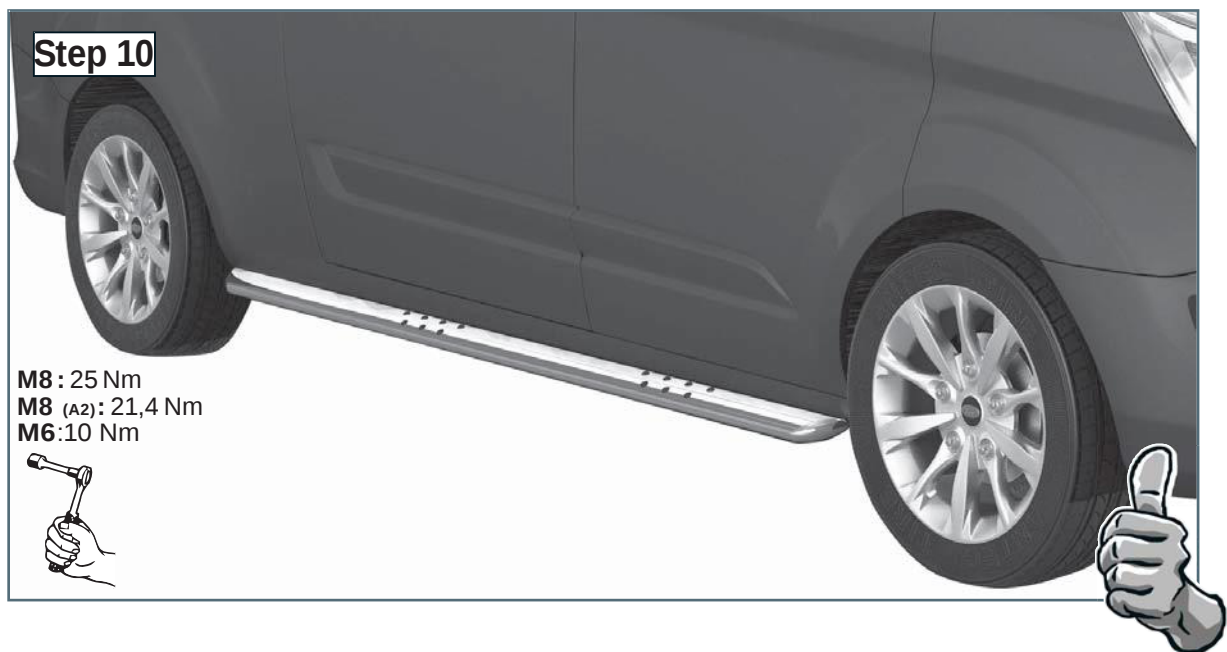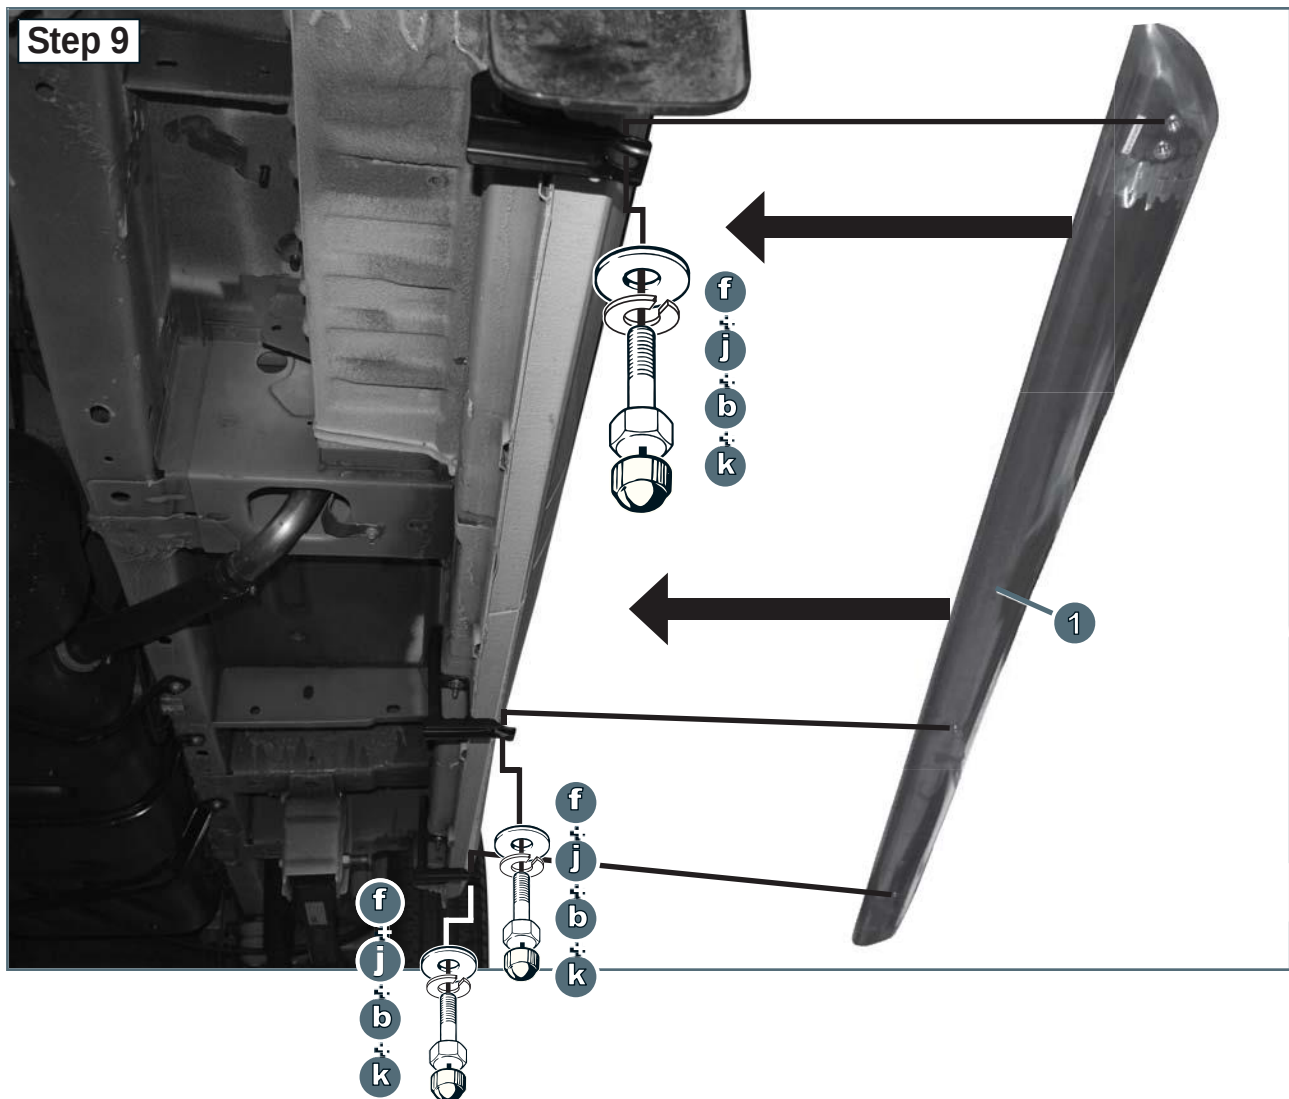

ULLSTEIN
CONCEPTS
 GMBH

Revision 1: 12.11.2013