


Mitsubishi L200 DC/CC, 2015+ Fiat Fullback DC/CC, 2016+

Side protection bar 76 mm


Flankenschutzrohr 76 mm

Protection latérale rondes (76 mm)

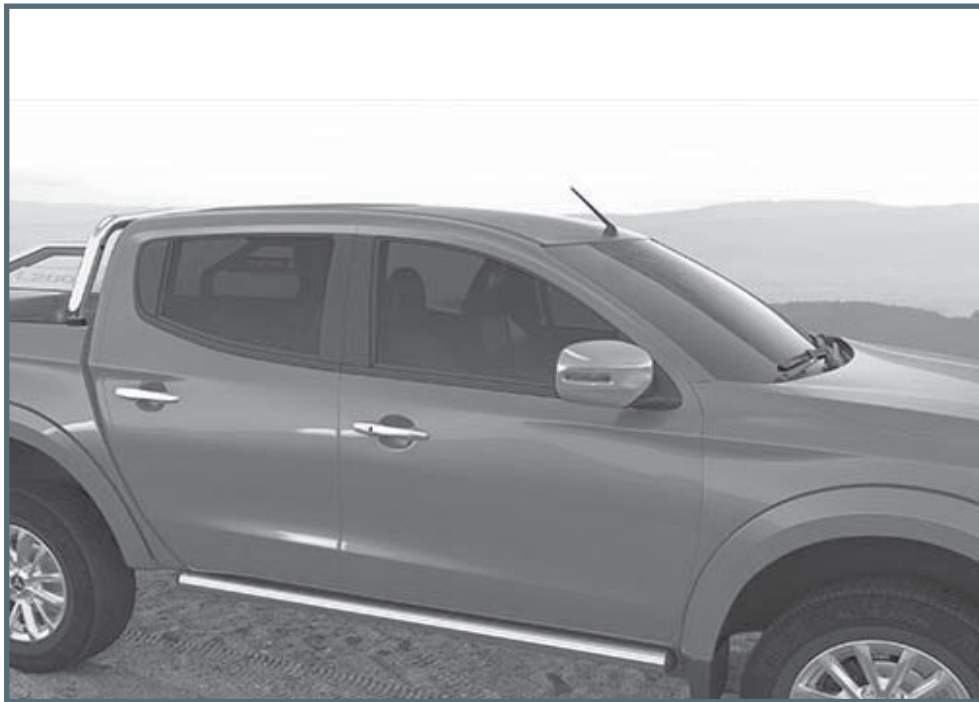

ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

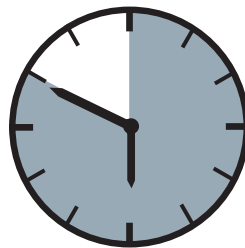

50 Minuten

Artikel-Nr:





204616051 stainless steel

204616051B black steel

Revision 4: 02.02.2017






ULLSTEIN
CONCEPTS
GMBH

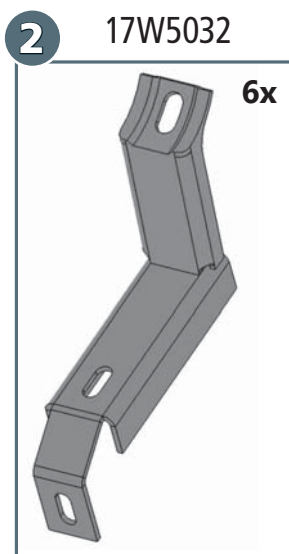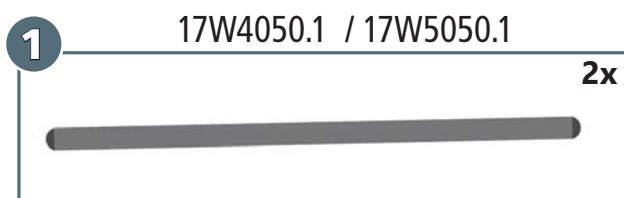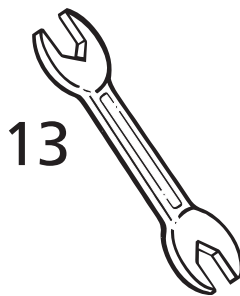
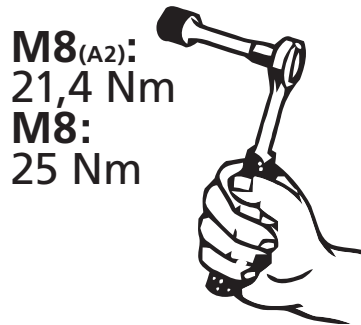


a		M8x20; DIN 933 Zn	6x
b		M8x25; DIN 933 A2	6x
c		M8; DIN 934 Zn	6x
d		Ø 8; DIN 127 Zn	12x
e		Ø 8; DIN 127 A2	6x
f		Ø 8,4; DIN 9021 Zn	12x
g		Ø 8,4; DIN 9021 A2	6x
h		SW 13	6x


Step 1

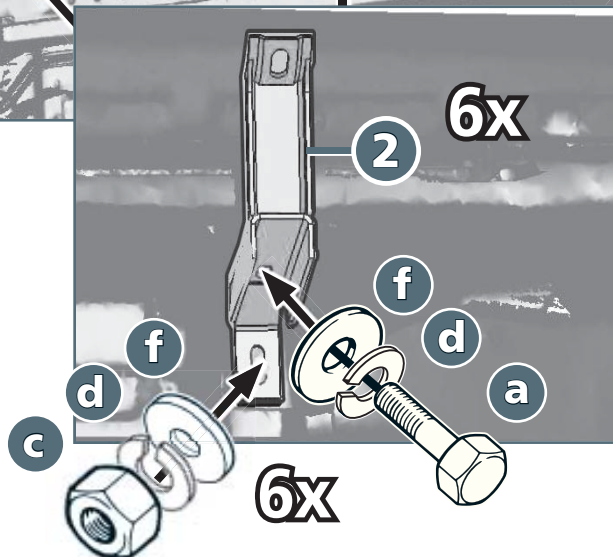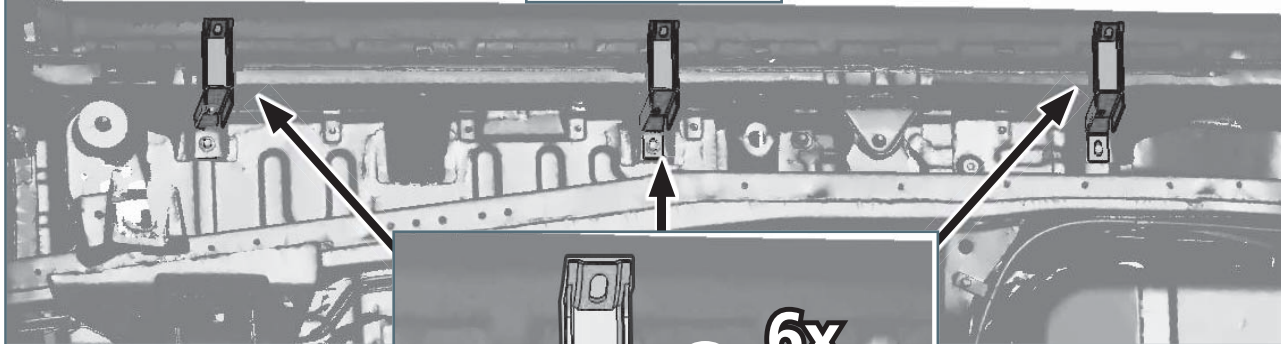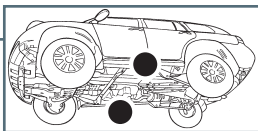

Step 2

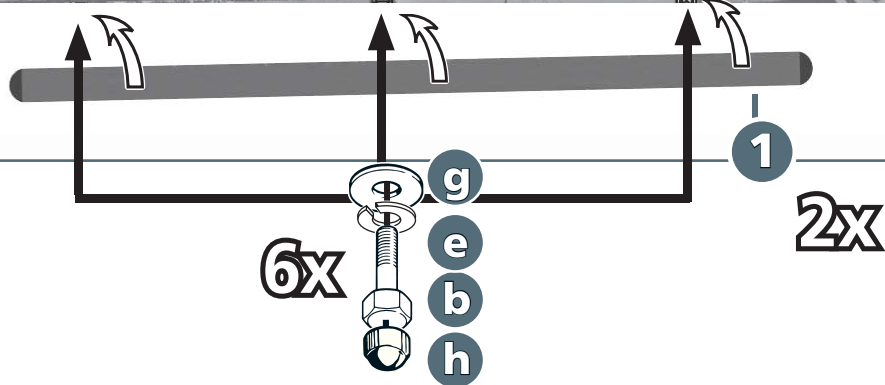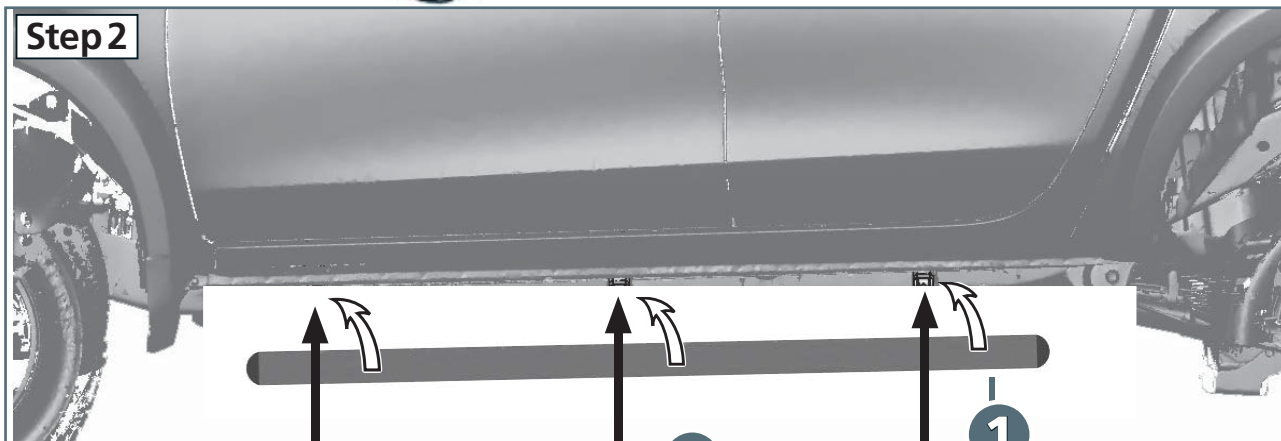

Step 3

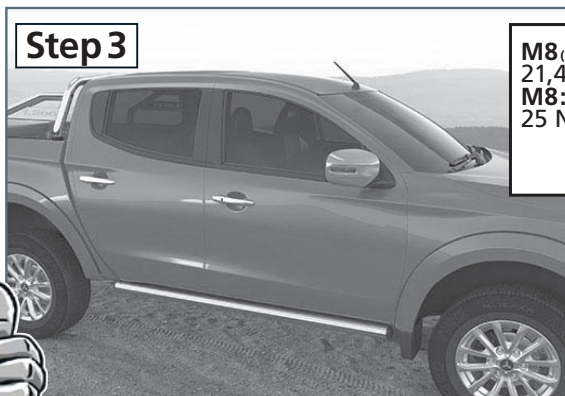

M8 (A2):
21,4 Nm
M8:
25 Nm



Revision 4: 02.02.2017



**ULLSTEIN
CONCEPTS
GMBH**