

203003024


Hyundai Tucson, Modell 2015

Flankenschutzrohr oval mit Noppen
Side bar oval with nubs
Côté bar ovale avec Nubs




ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage




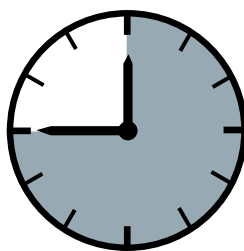


45 Minuten




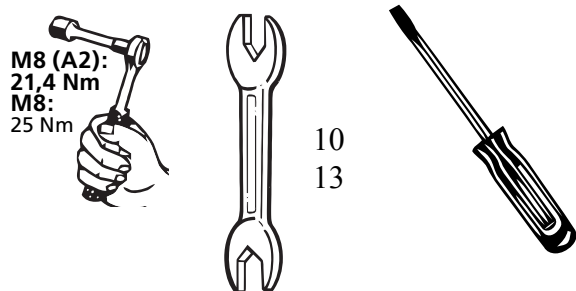


18A4051.1 / 18A5051.1
18A4051.2 / 18A5051.2

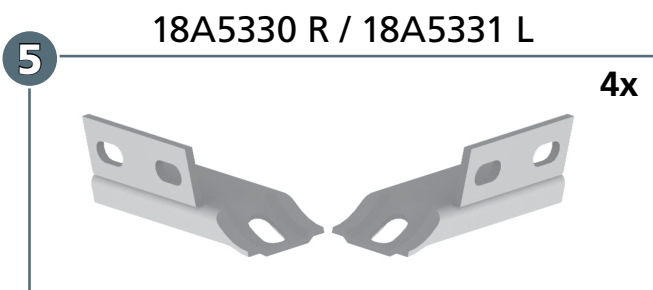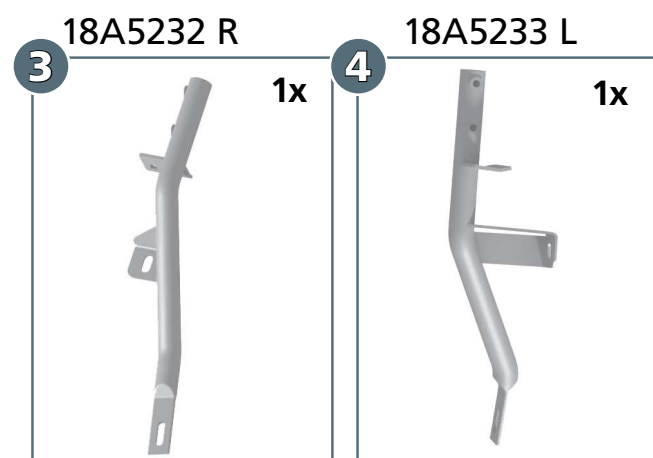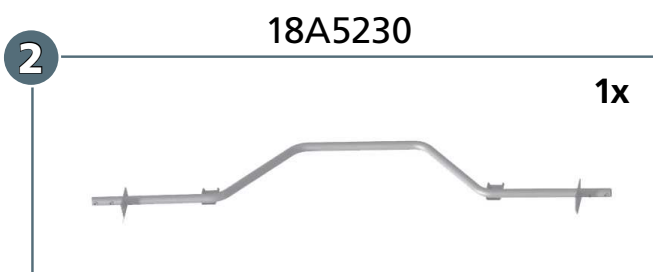
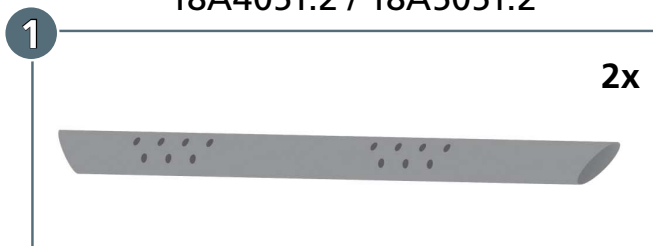


mounting kit: 18A9051

	M8 x 20; DIN 933 Zn	10x
	M8 x 30; DIN 933 Zn	6x
	M8 x 25; DIN 933 A2	4x
	M8; DIN 934 Zn	10x
	Ø 8; DIN 127 Zn	20x
	Ø 8; DIN 127 A2	4x
	Ø 8,4; DIN 9021 Zn	26x
	Ø 8,4; DIN 9021 A2	4x

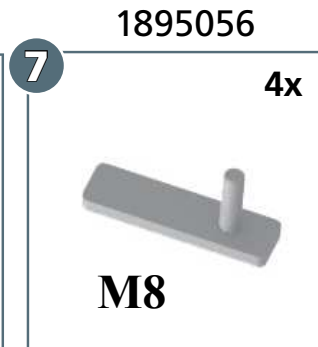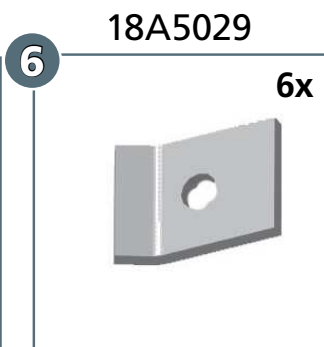


Step 1

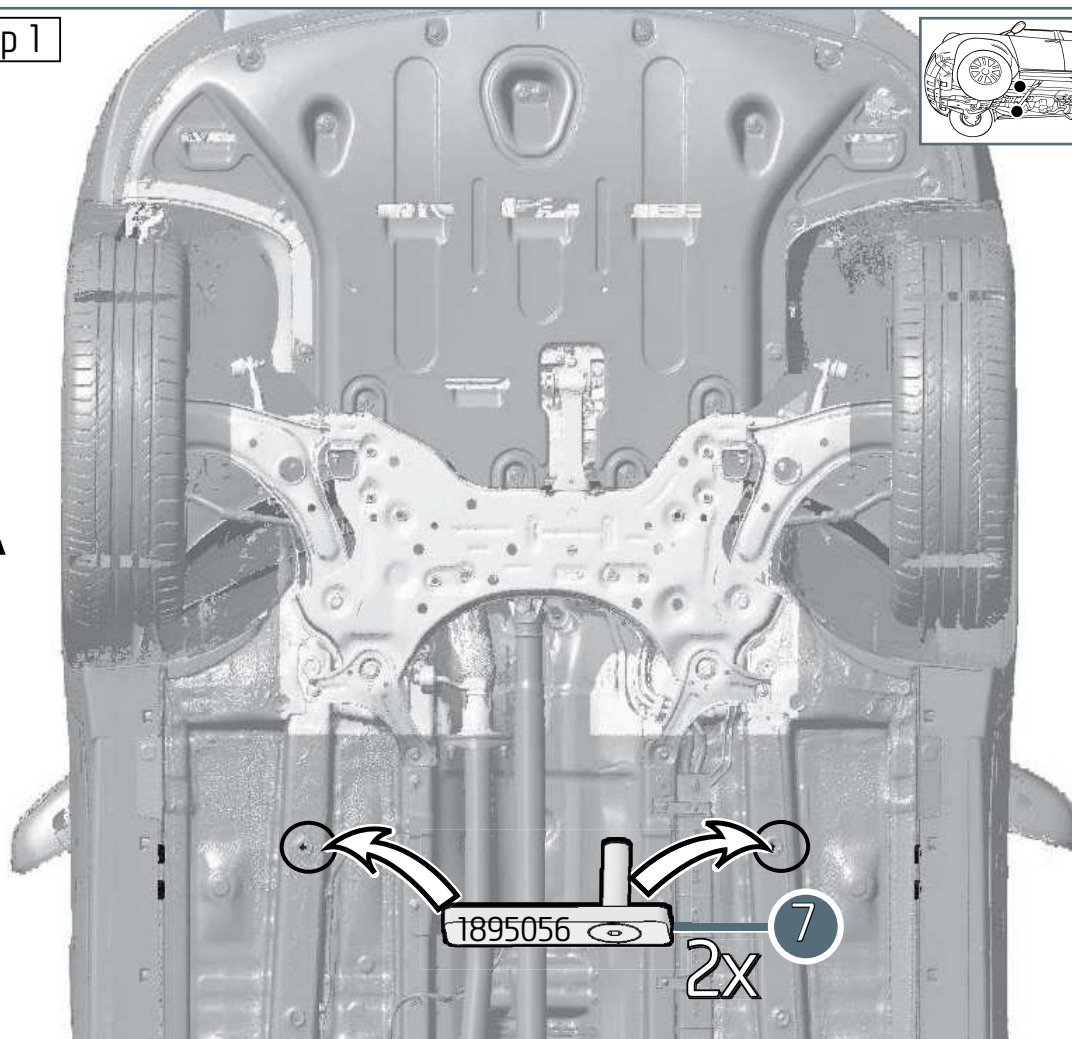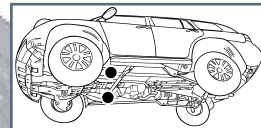

Step 2



Fahrtrichtung
driving direction



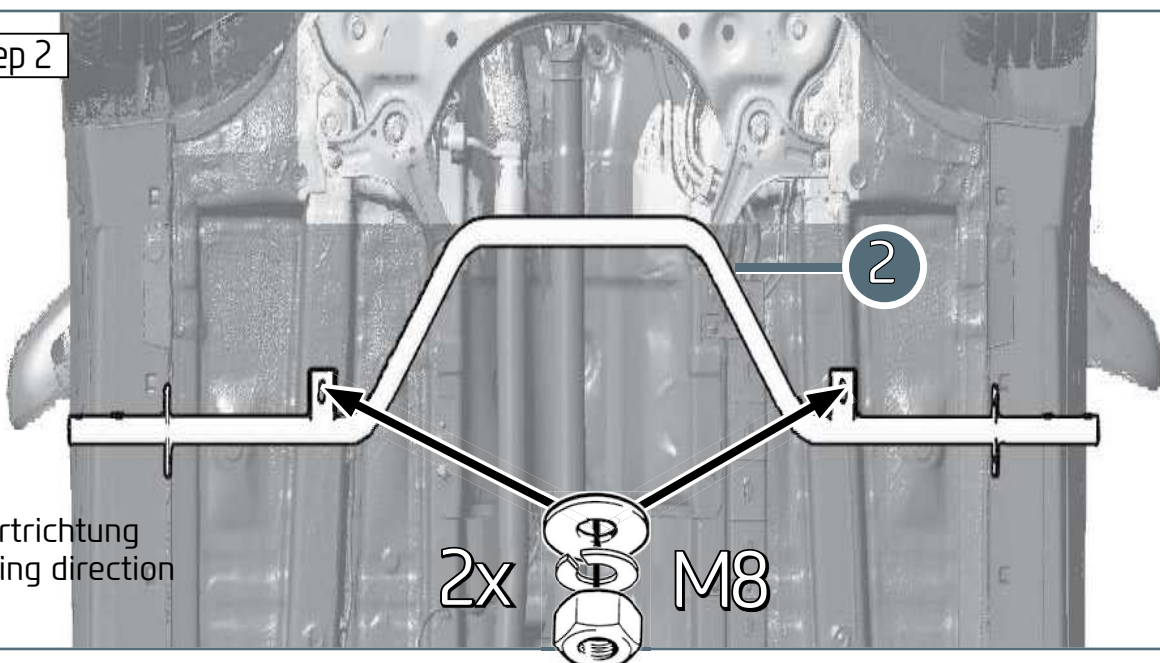





ULLSTEIN
CONCEPTS
GMBH

www.ullsteinconcepts.com



Revision 3: 18.092018




page / Seite 3

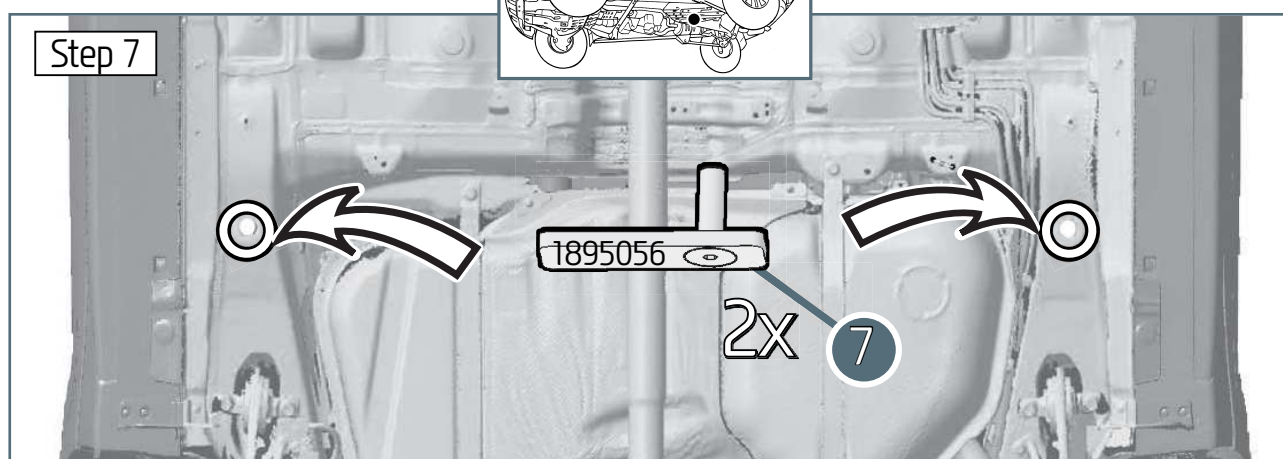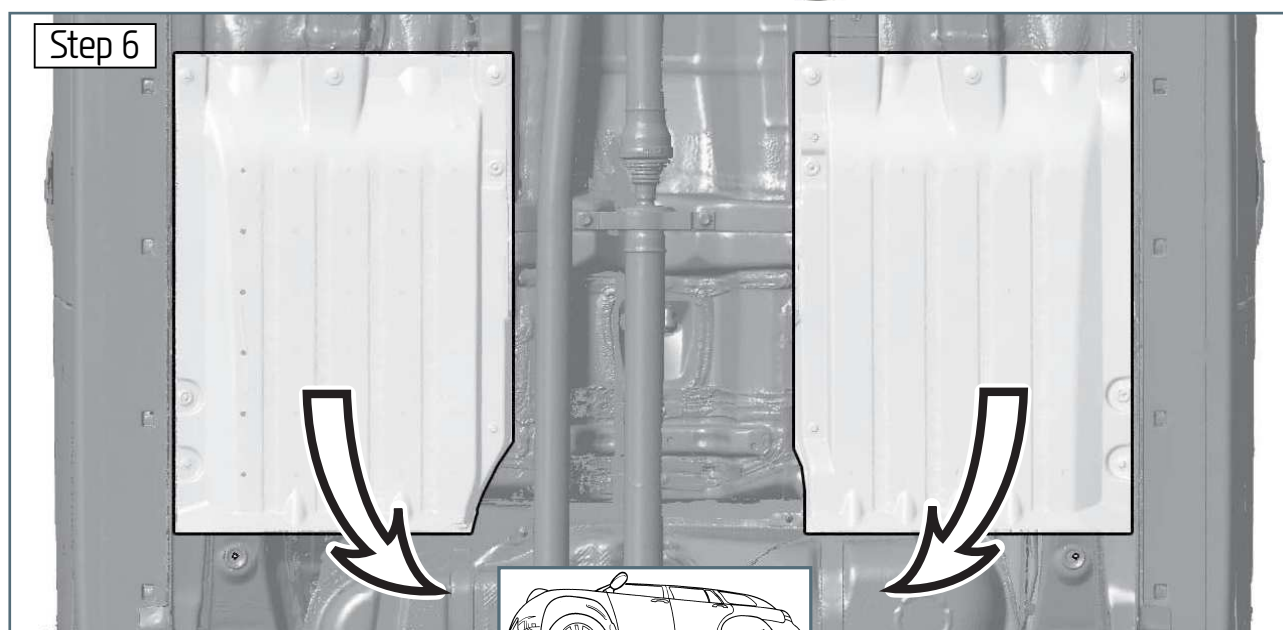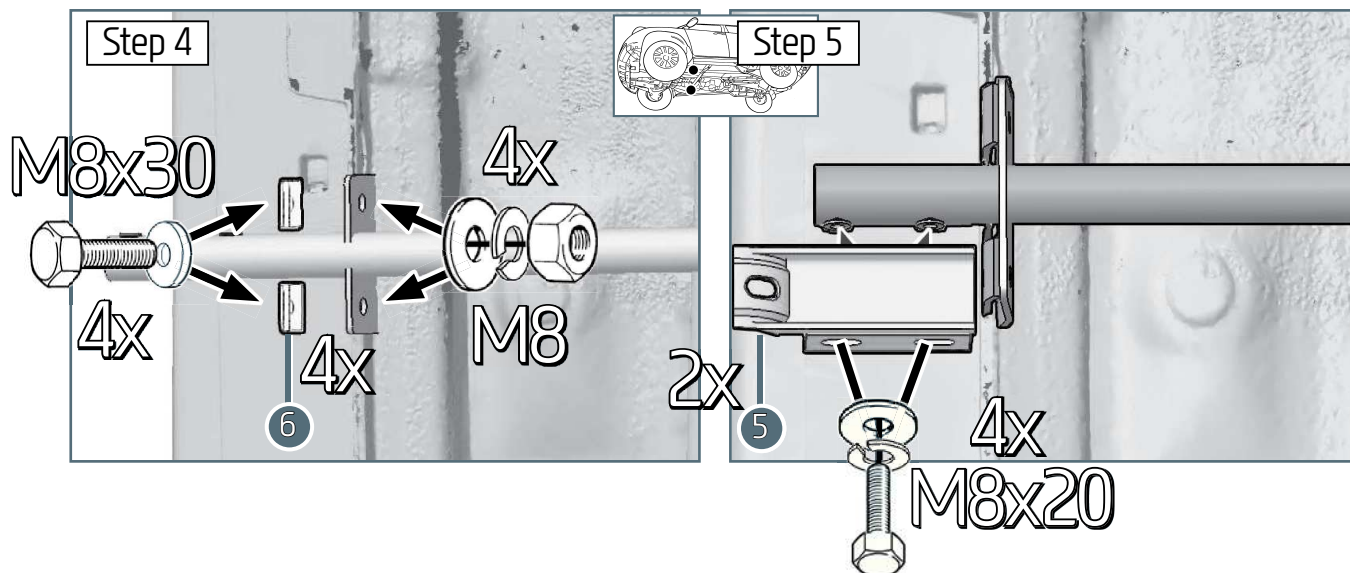

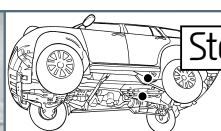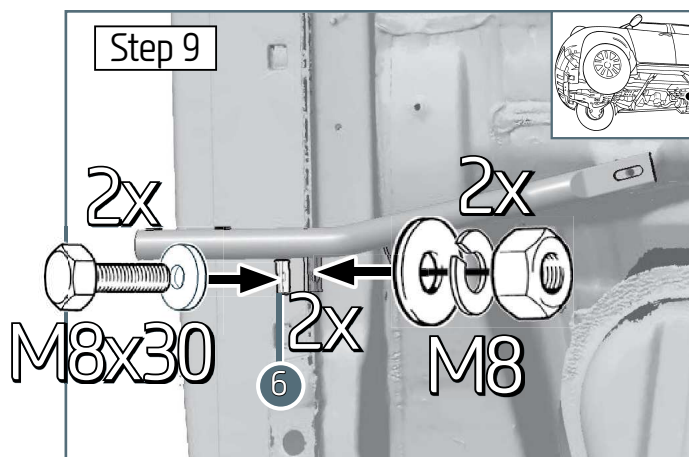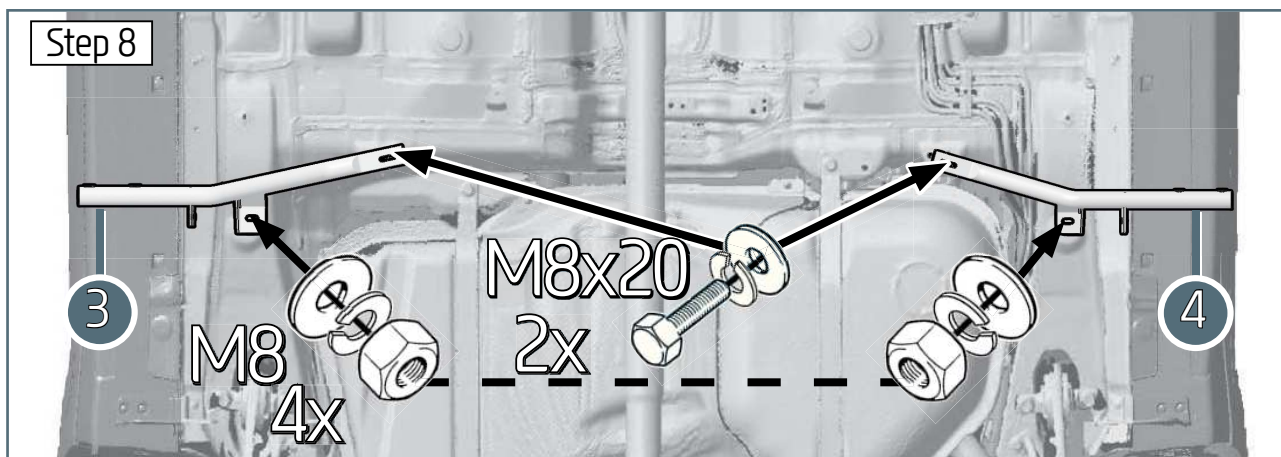

Step 10

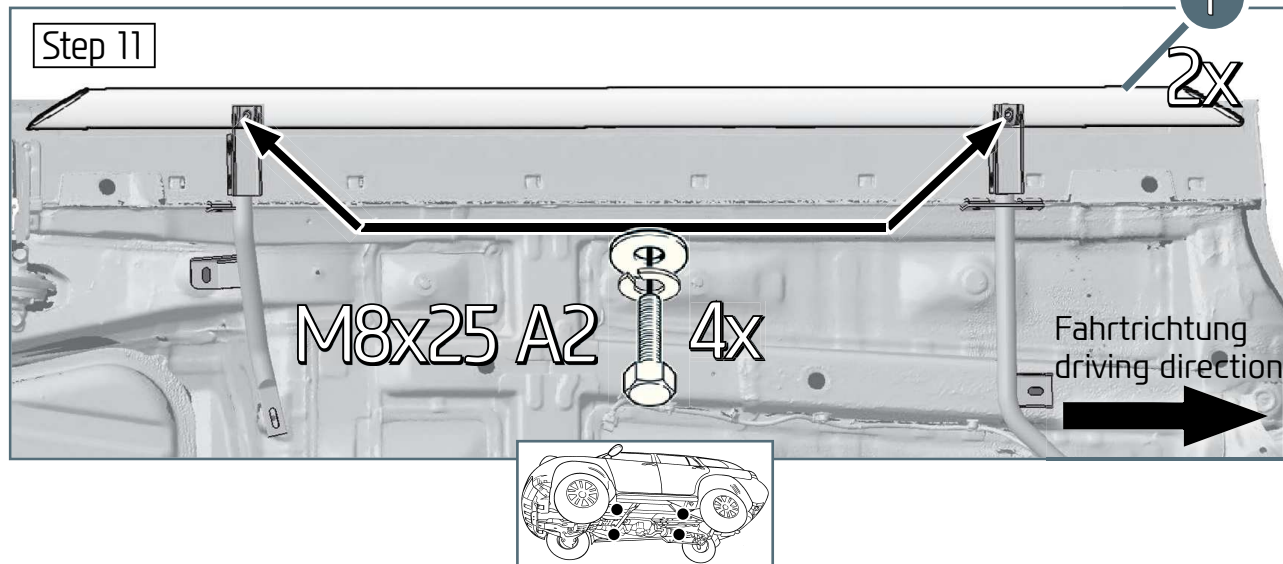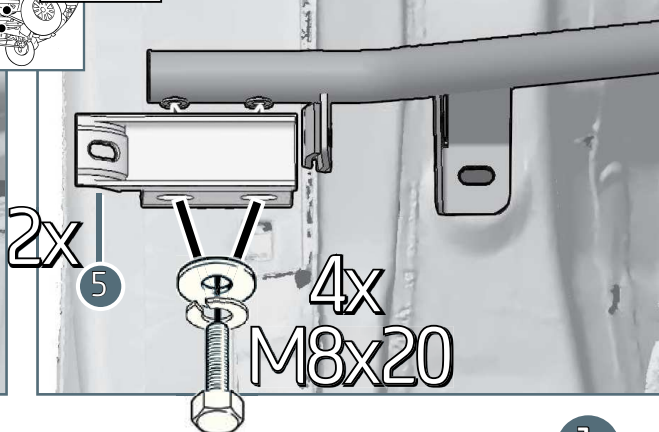

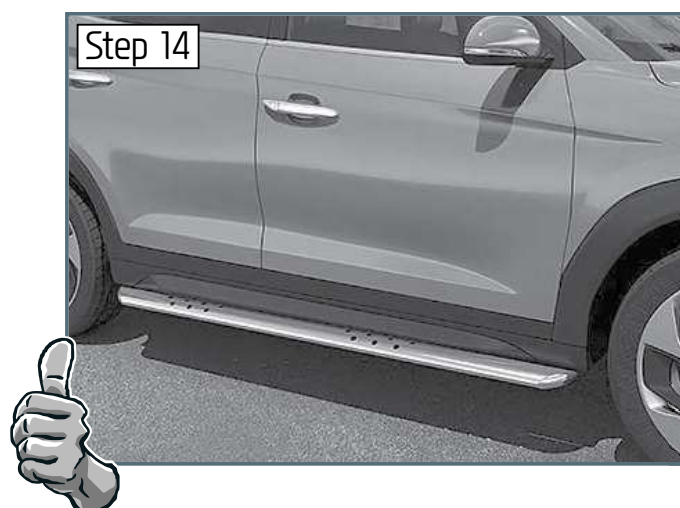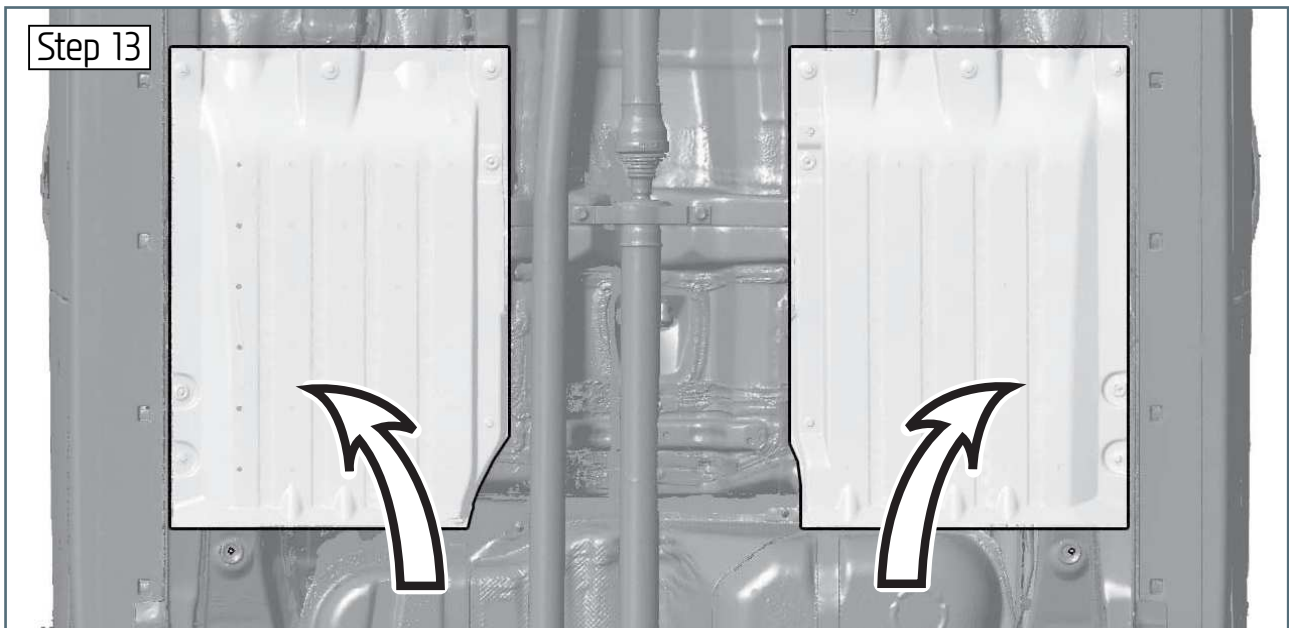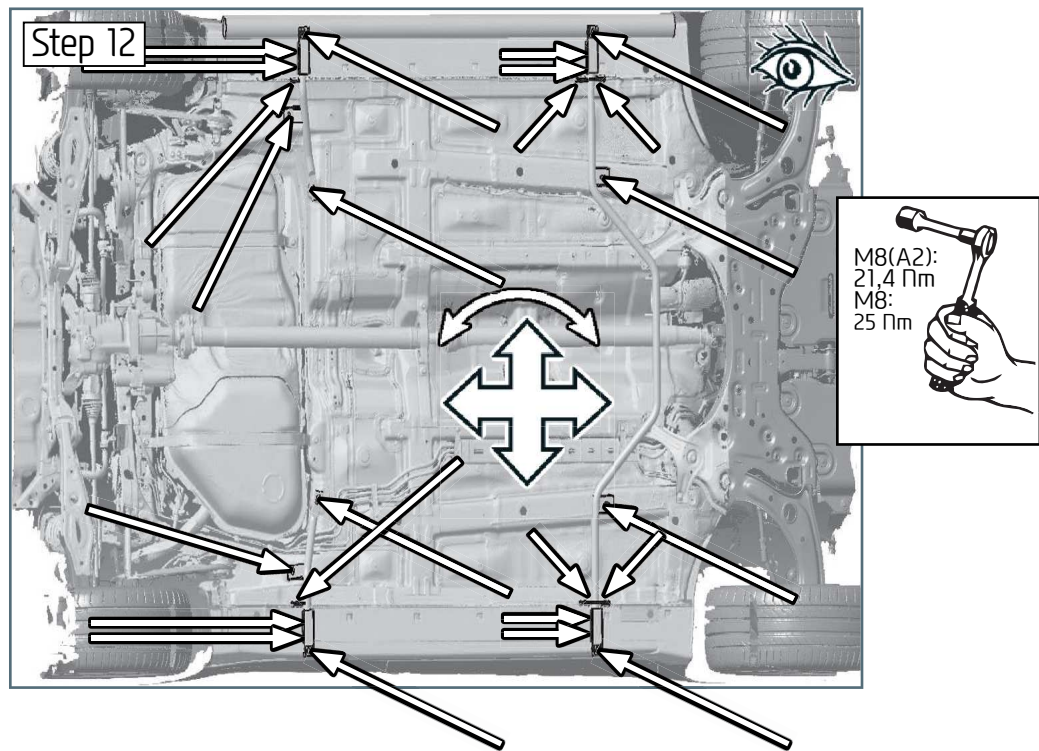

Revision 3: 18.092018



ULLSTEIN
CONCEPTS
GMBH

www.ullsteinconcepts.com

page / Seite 6