

204500135

Mercedes X-Klasse, Md. 2016

Side protection bar 76 mm with Step


Flankenschutzrohr 76 mm mit Auftritt

Tube de protection 76 mm latérale avec marchepied à relief antidérapant



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

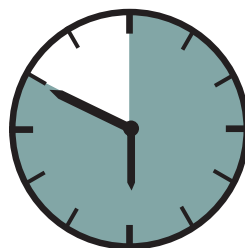

50 Minuten




ULLSTEIN
CONCEPTS
GMBH


Revision 4: 22.03.2018
Anleitung-Nr.: 7500080

www.ullsteinconcepts.com


M8_(A2):
21,4 Nm
M8:
25 Nm

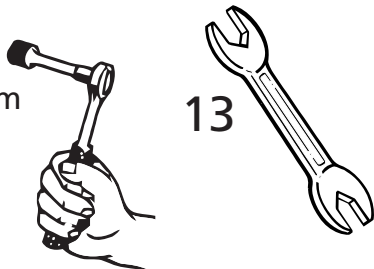

18N4150.1 / 18N5050.1
18N4150.2 / 18N5050.2

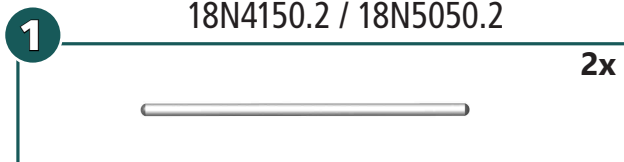


mounting kit: 18N9050

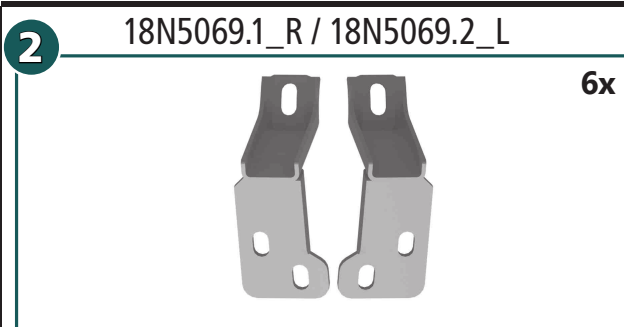



	M8x25; DIN 933 A2	6x
	M8; DIN 439 Zn	12x
	Ø 8; DIN 127 A2	6x
	Ø 8; DIN 127 Zn	12x
	Ø 8,4; DIN 9021 A2	6x
	Ø 8,4; DIN 9021 Zn	12x
	Inden 10070	2x



Step 1

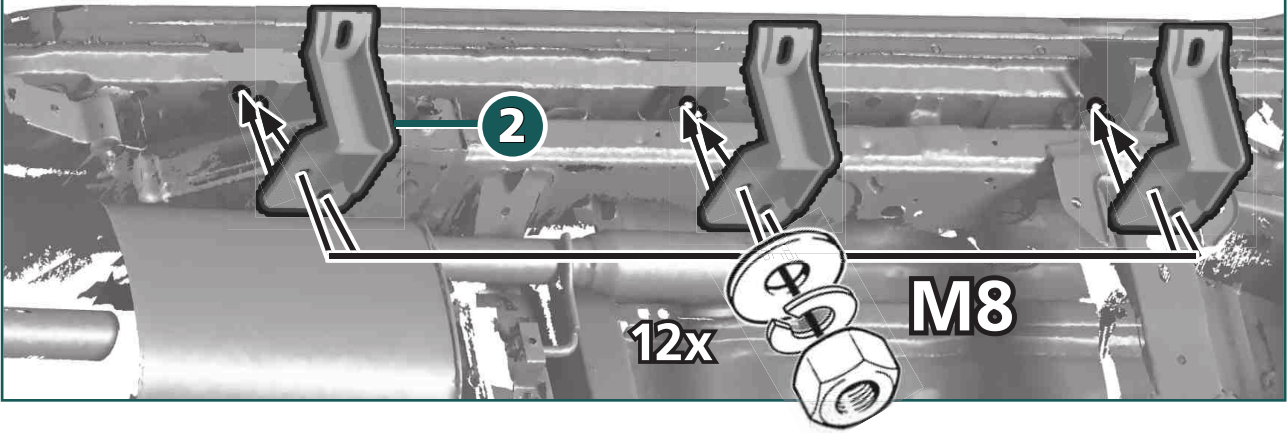

Step 2

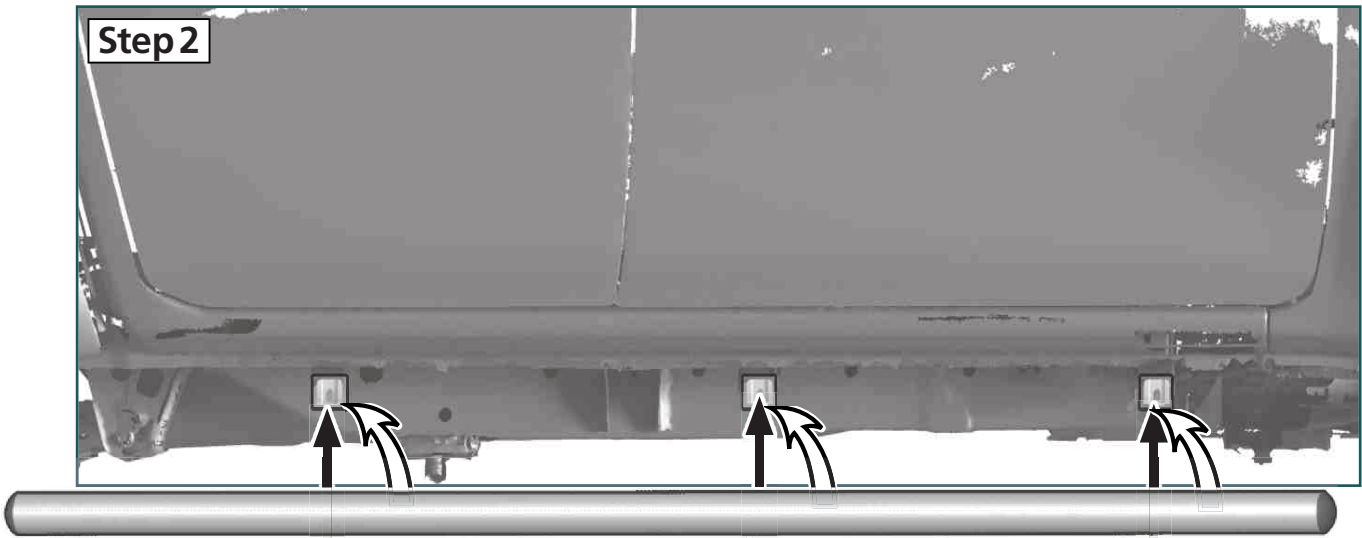

1

M8 A2 6x

