


**13H
9021T**

VW Amarok

Montagesatz (Befestigung Schublade ohne Bohren)


Mounting kit (mounting drawer without drilling)

Kit de montage (tiroir de montage sans perçage)

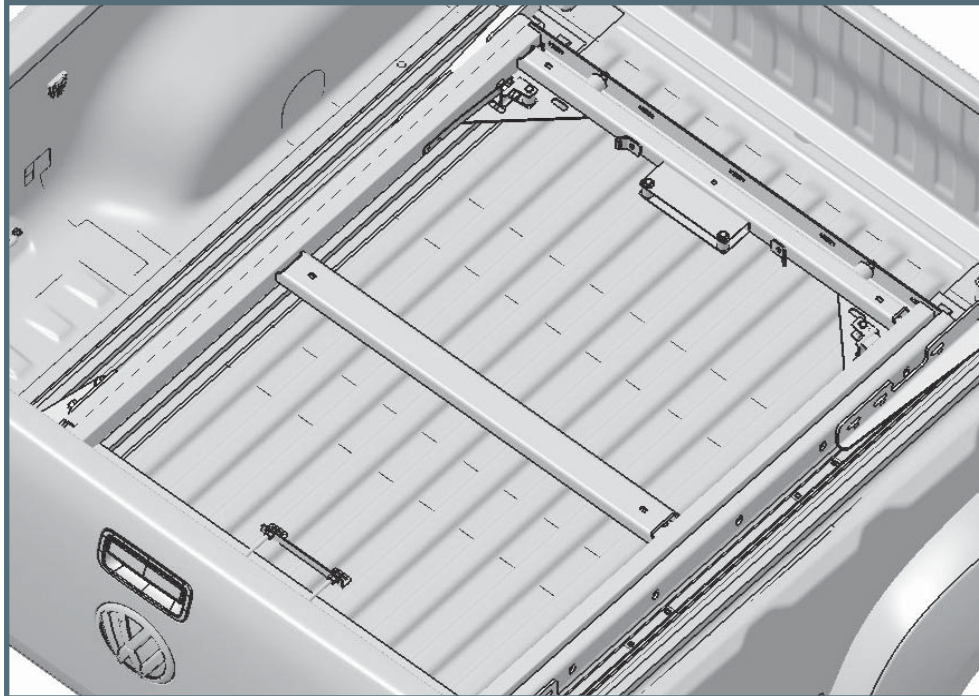

ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

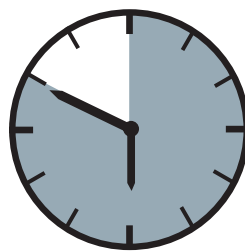







50 Minuten

Artikel-Nr:
13H9021T stainless steel **Revision 4:** 16.01.2018



**ULLSTEIN
CONCEPTS
GMBH**

M8:
25 Nm
M10:
50 Nm

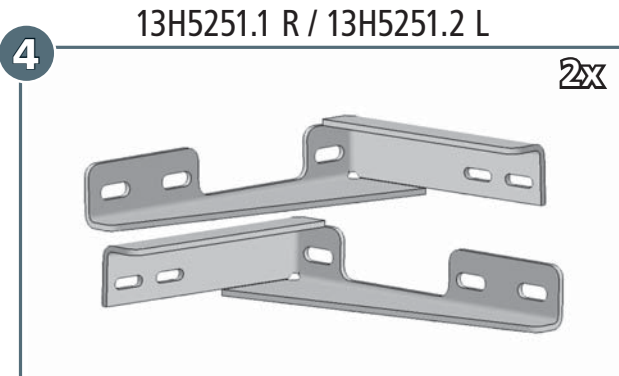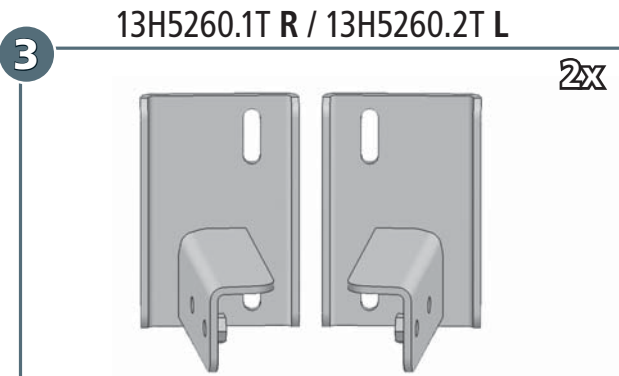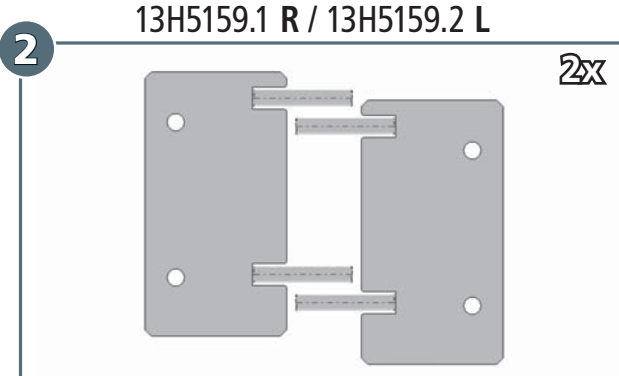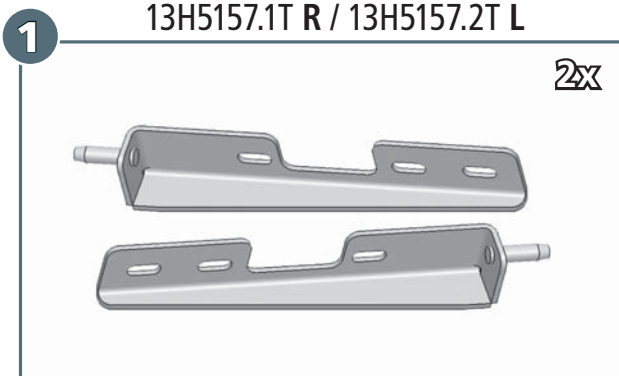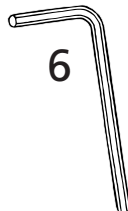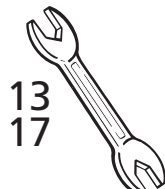

	M8 x 25; DIN 933 Zn	8x
	M8 x 35; DIN 933 Zn	4x
	M10 x 30; DIN 7991 Zn	12x
	M8; DIN 934 Zn	4x
	M10; DIN 934 Zn	12x
	Ø 8; DIN 127 Zn	16x
	Ø 10; DIN 127 Zn	12x
	Ø 8,4; DIN 9021 Zn	16x
	Ø 10,5; DIN 9021 Zn	18x

