












ULLSTEIN
CONCEPTS
GMBH


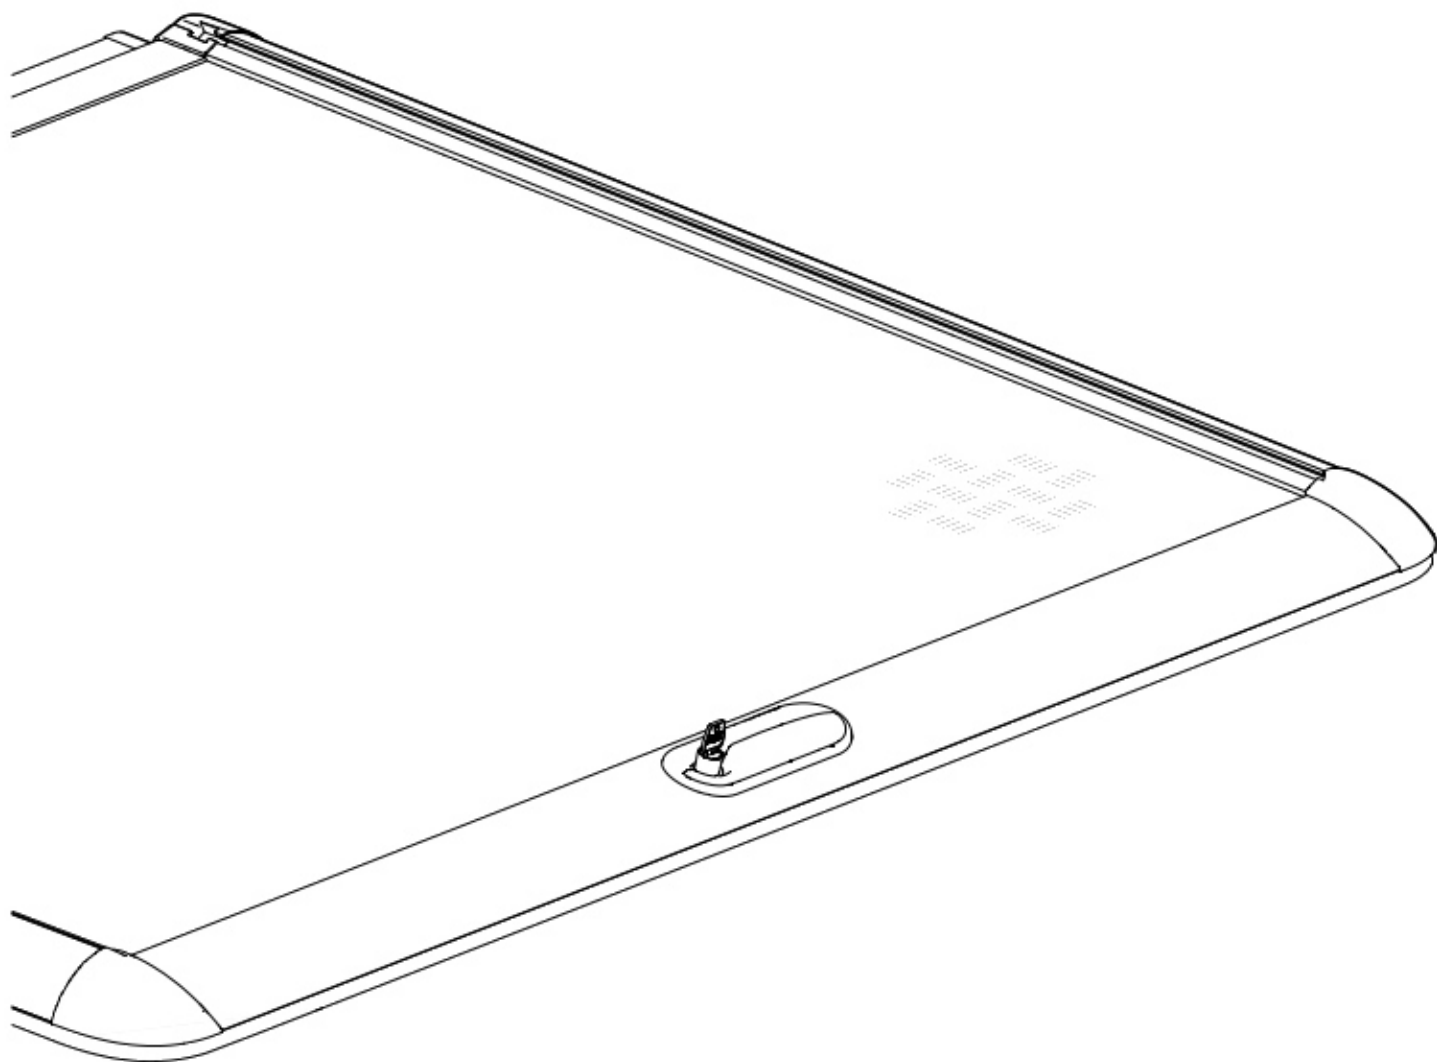



Mountain Top[®] 2




Installation manual

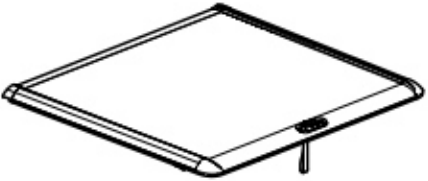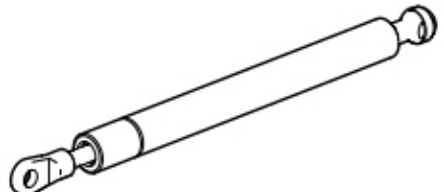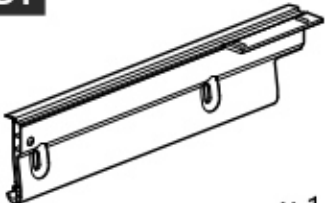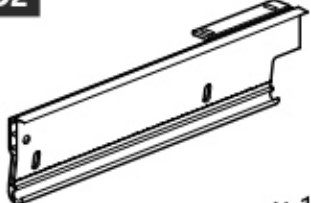
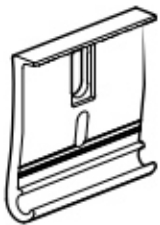
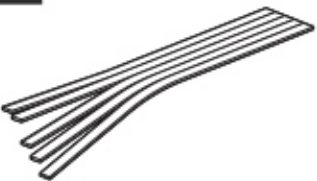
Parts			
A		B	
	x 1		x 1
C			
	x 2		
D1		D2	
	x 1		x 1
E			
	x 2		
F			
	5 x 1m		

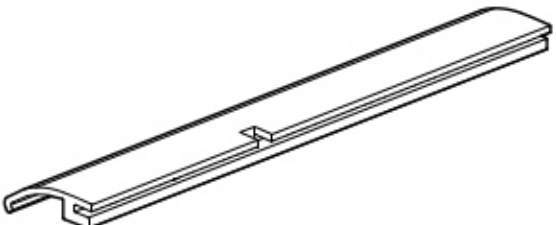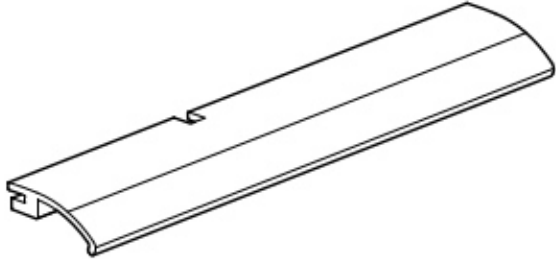Kit	
G1	
	x 1
G2	
	x 1

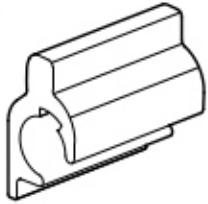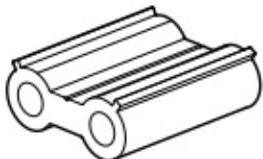Kit			
H		I	
	x 6		x 6
J			
	x 6		
K			
	x 24		

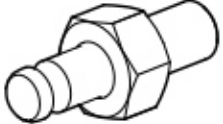Kit			
L		M	
	x 2		x 2
N			
	x 2		
O			
	x 2		

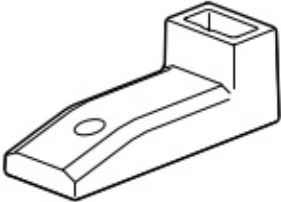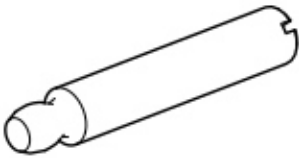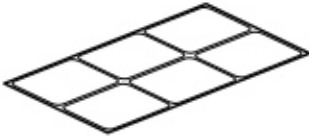Kit			
P		Q	
x 2		x 4	
R		R2	
x 4		x 1	

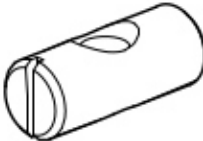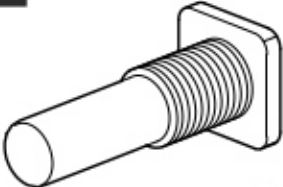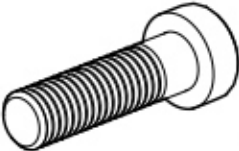
Kit			
S		T	
x 2		x 6	
U		V	
x 6		x 6	
W		X	
x 2		x 2	
Y		Z	
x 6 TOYOTA x 4		TOYOTA x 2	

Kit			
A2		B2	
x 4		x 4	
C2		D2	
x 4		x 4	






Tools and materials needed



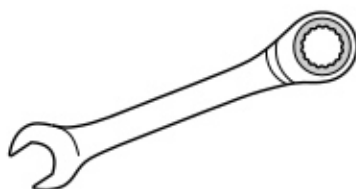




19 mm



1-25 Nm




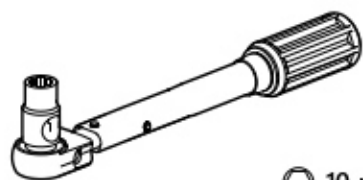




⊗ 10 mm
⊙ 5 mm

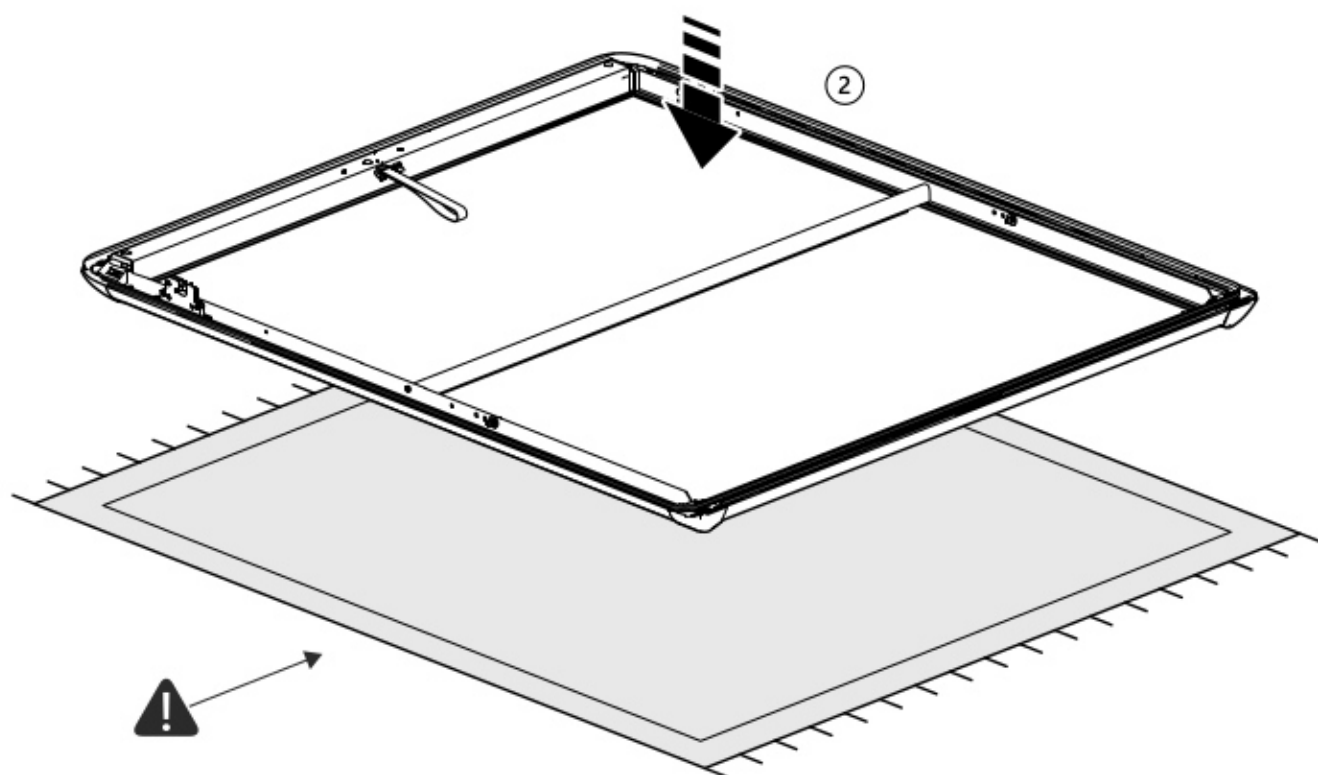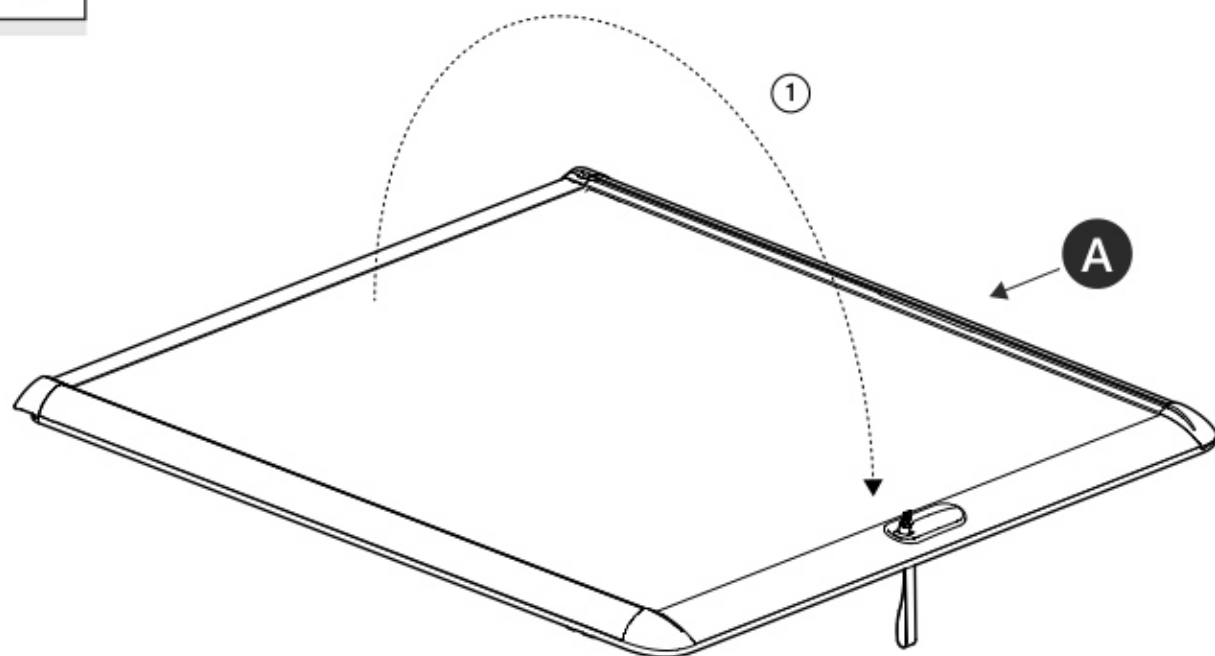





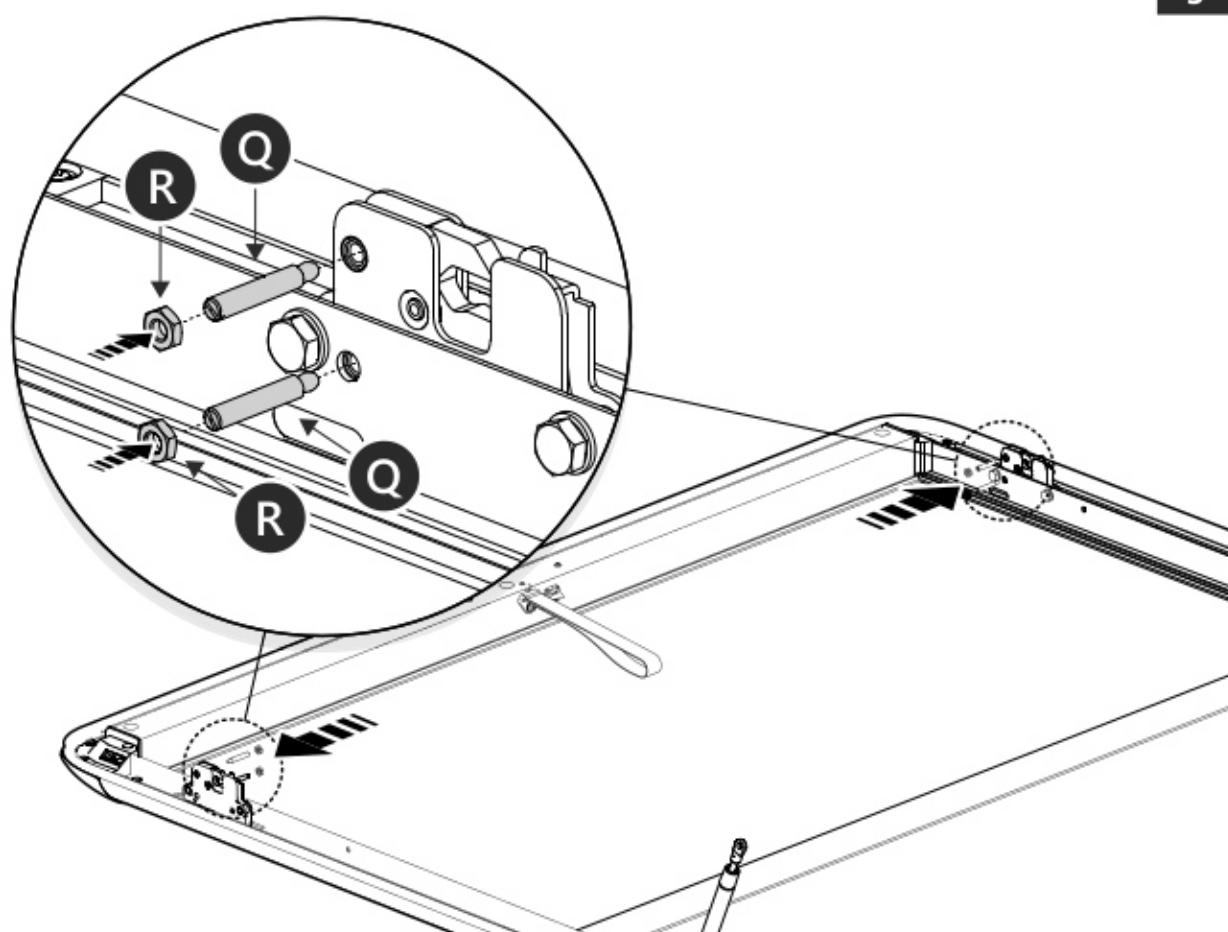
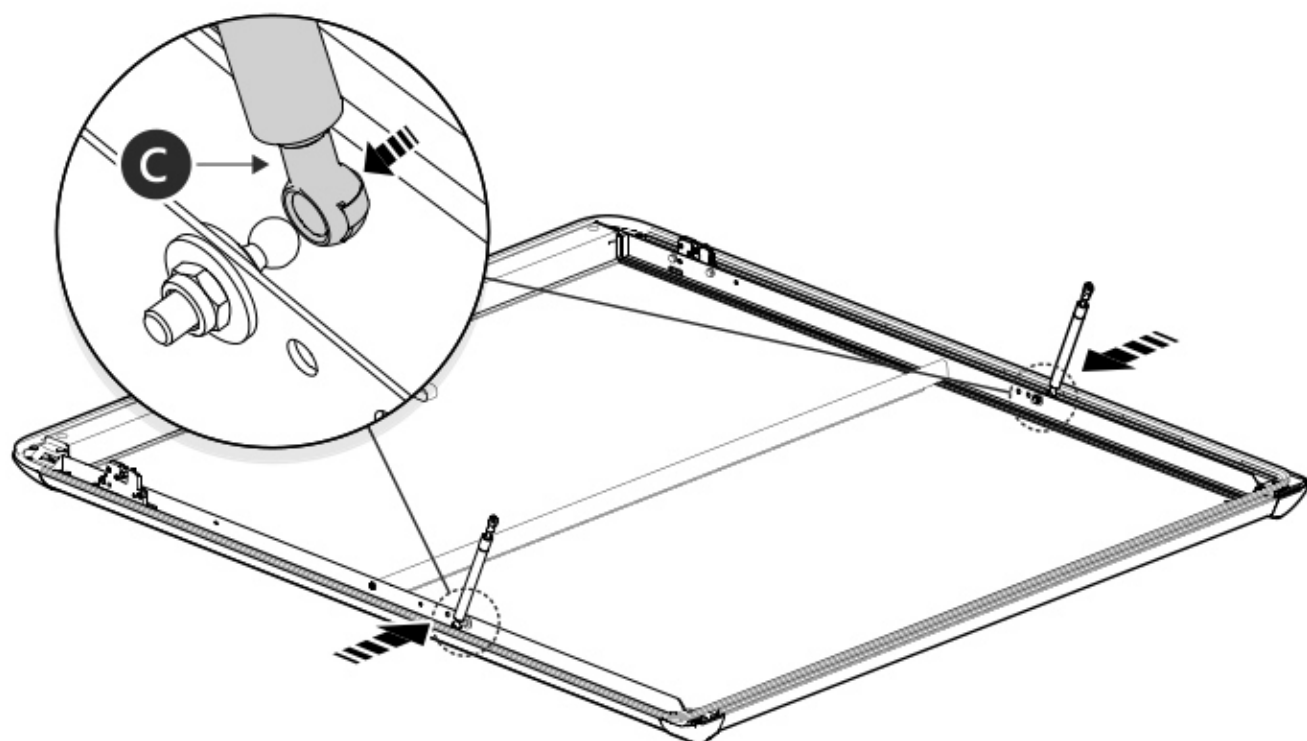


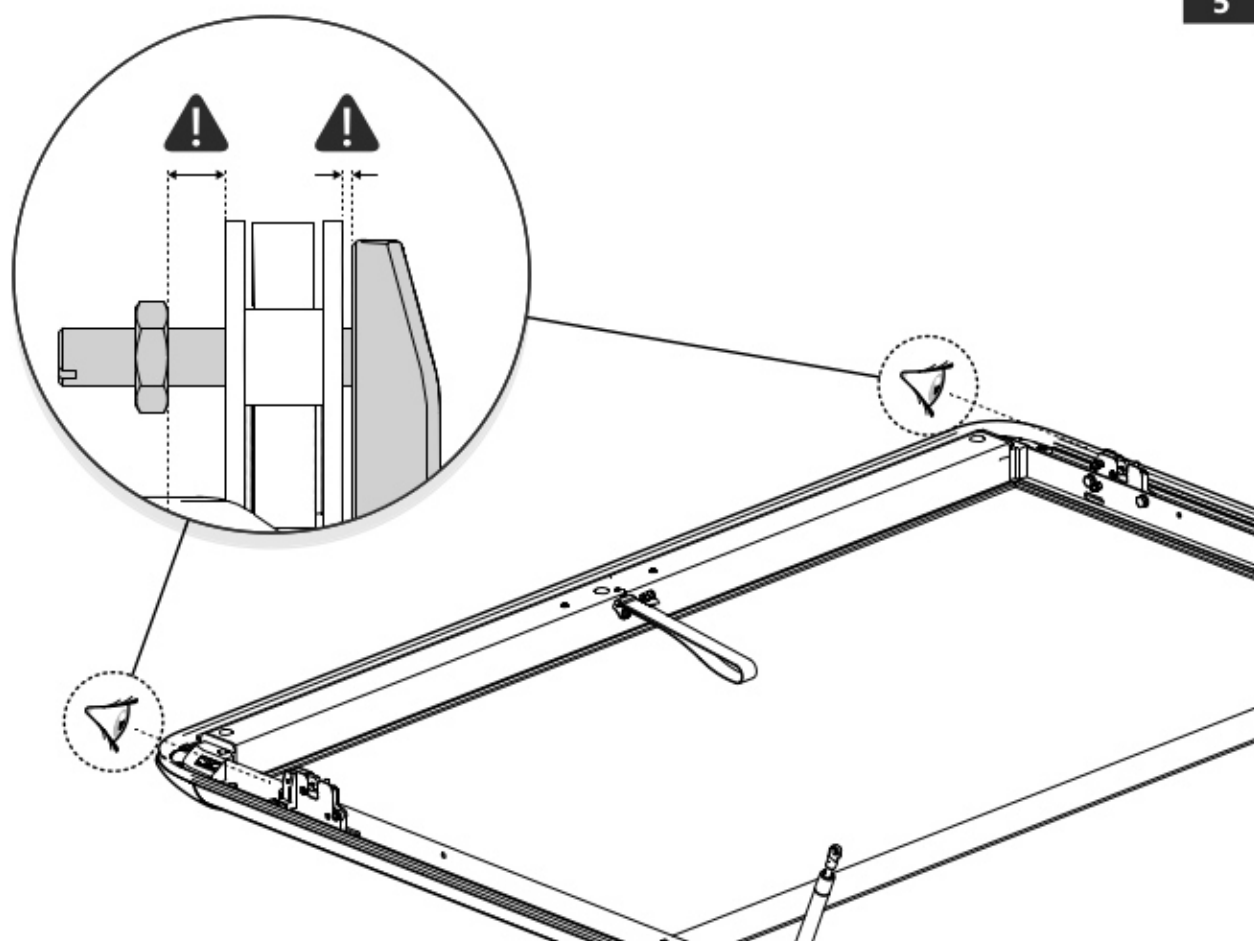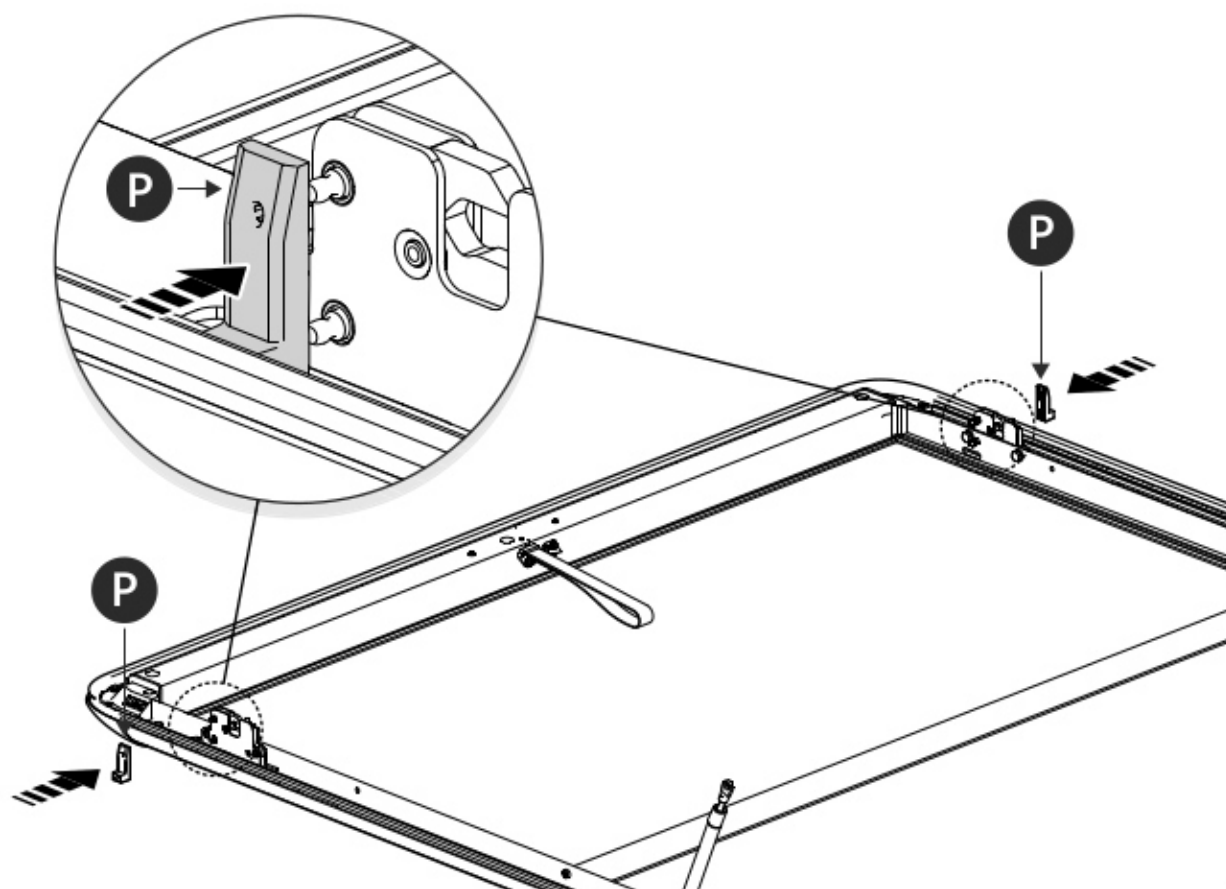


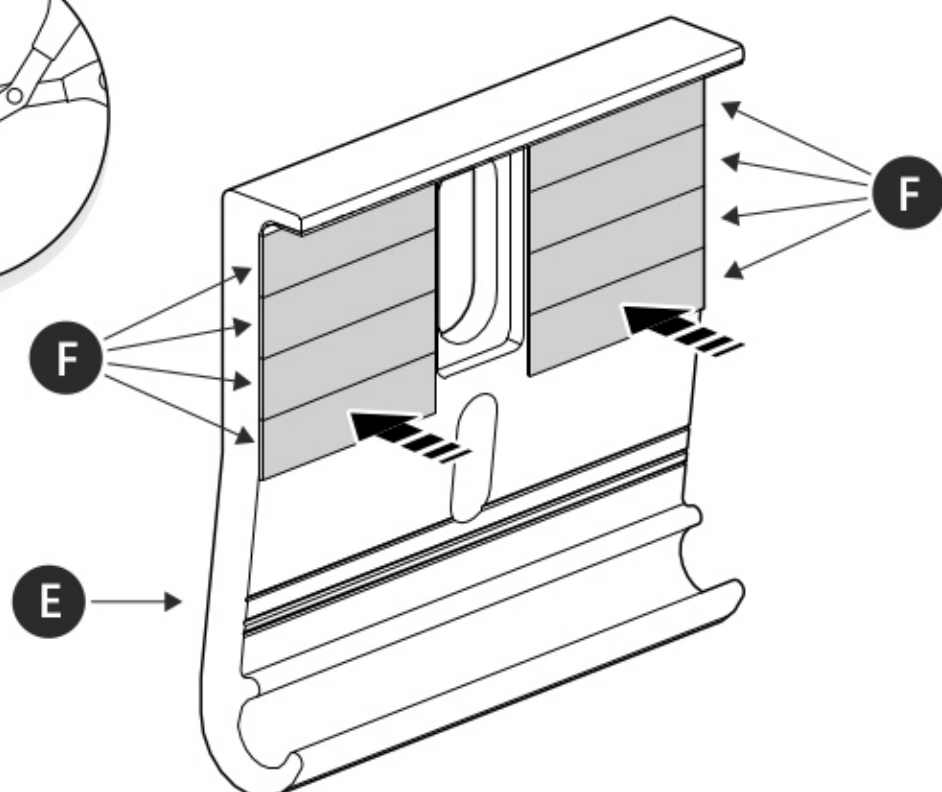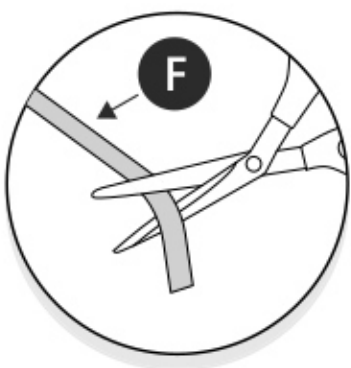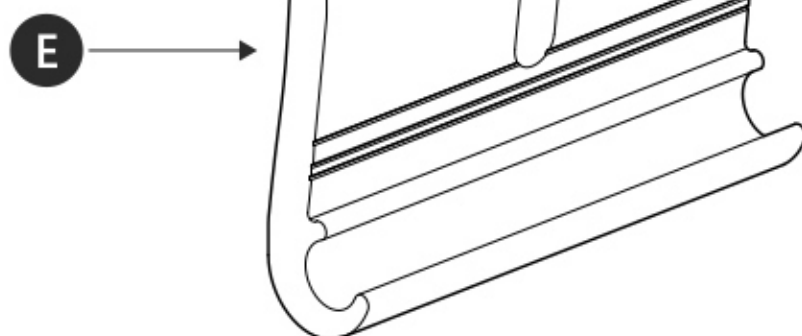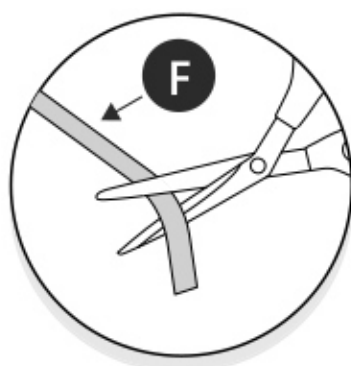

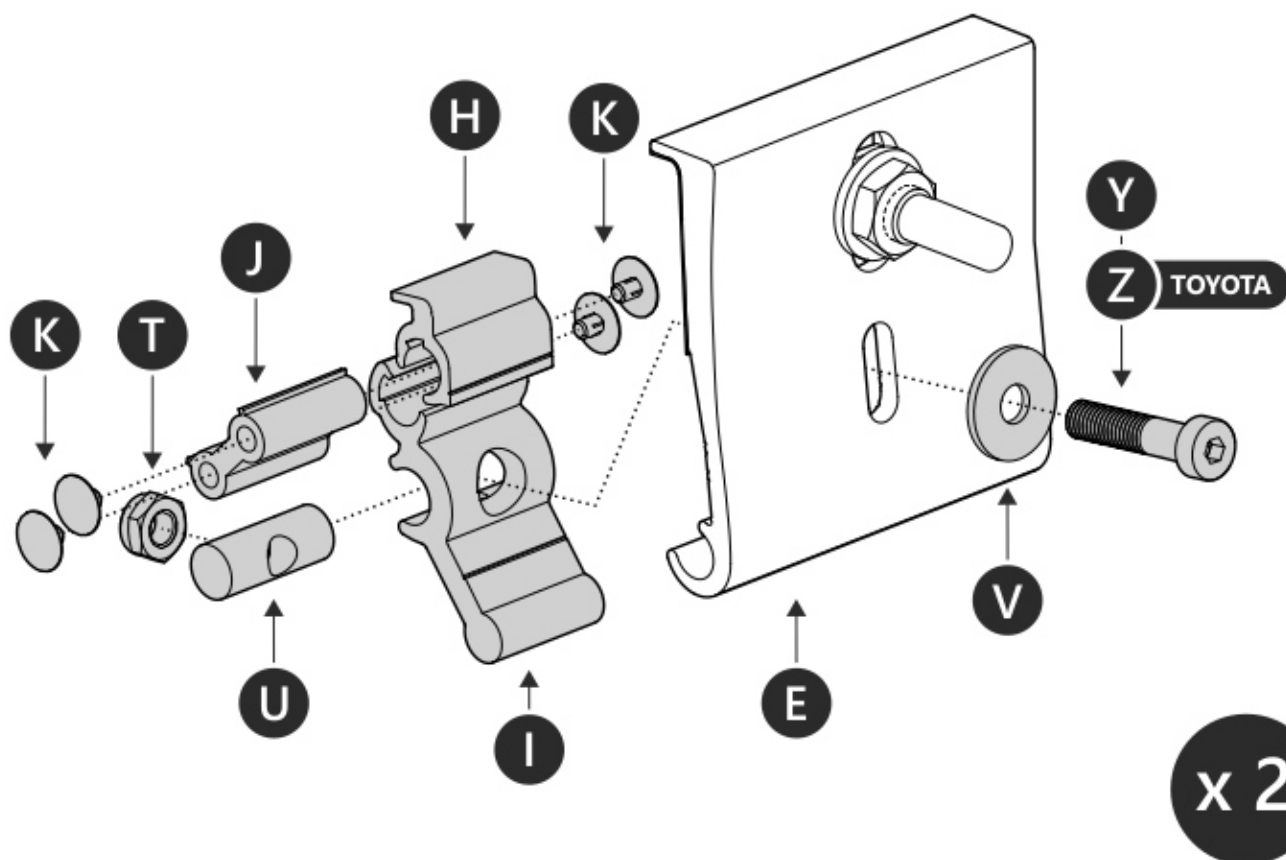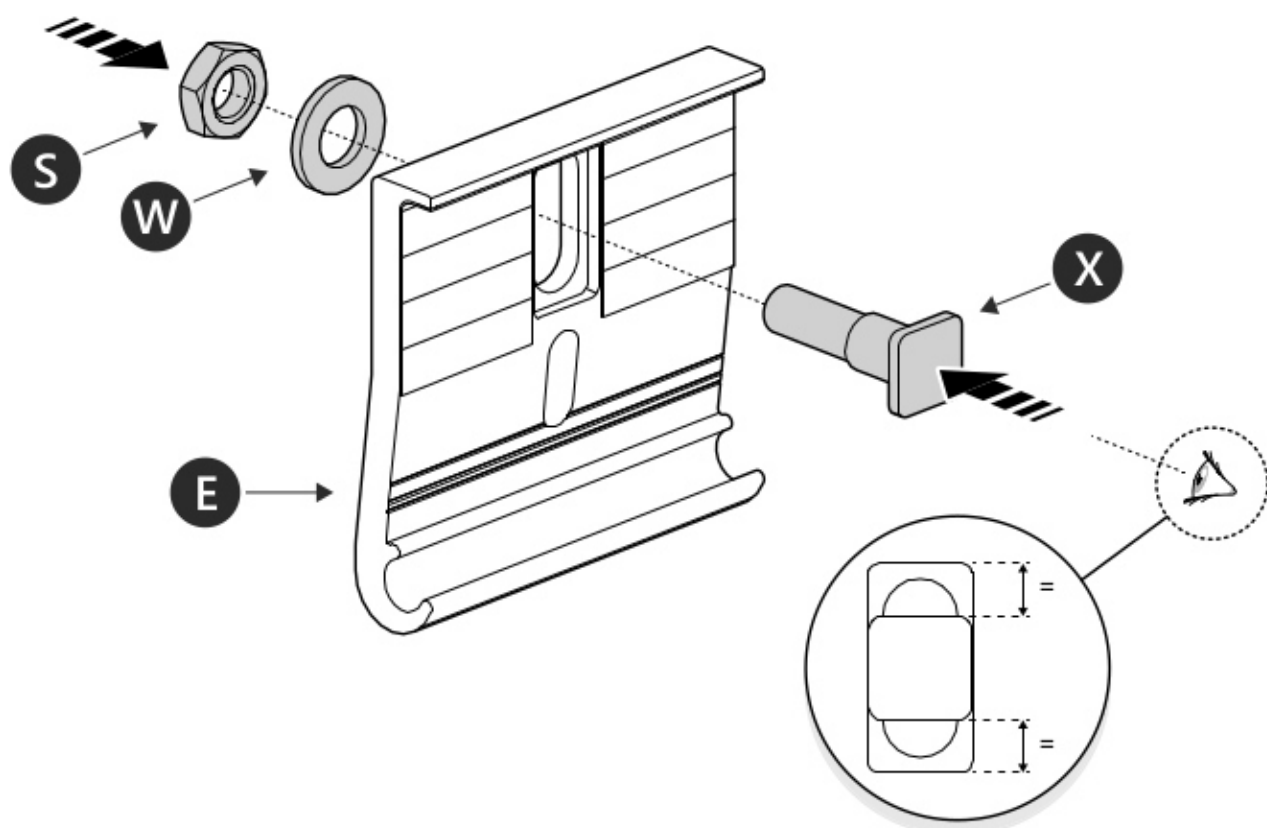


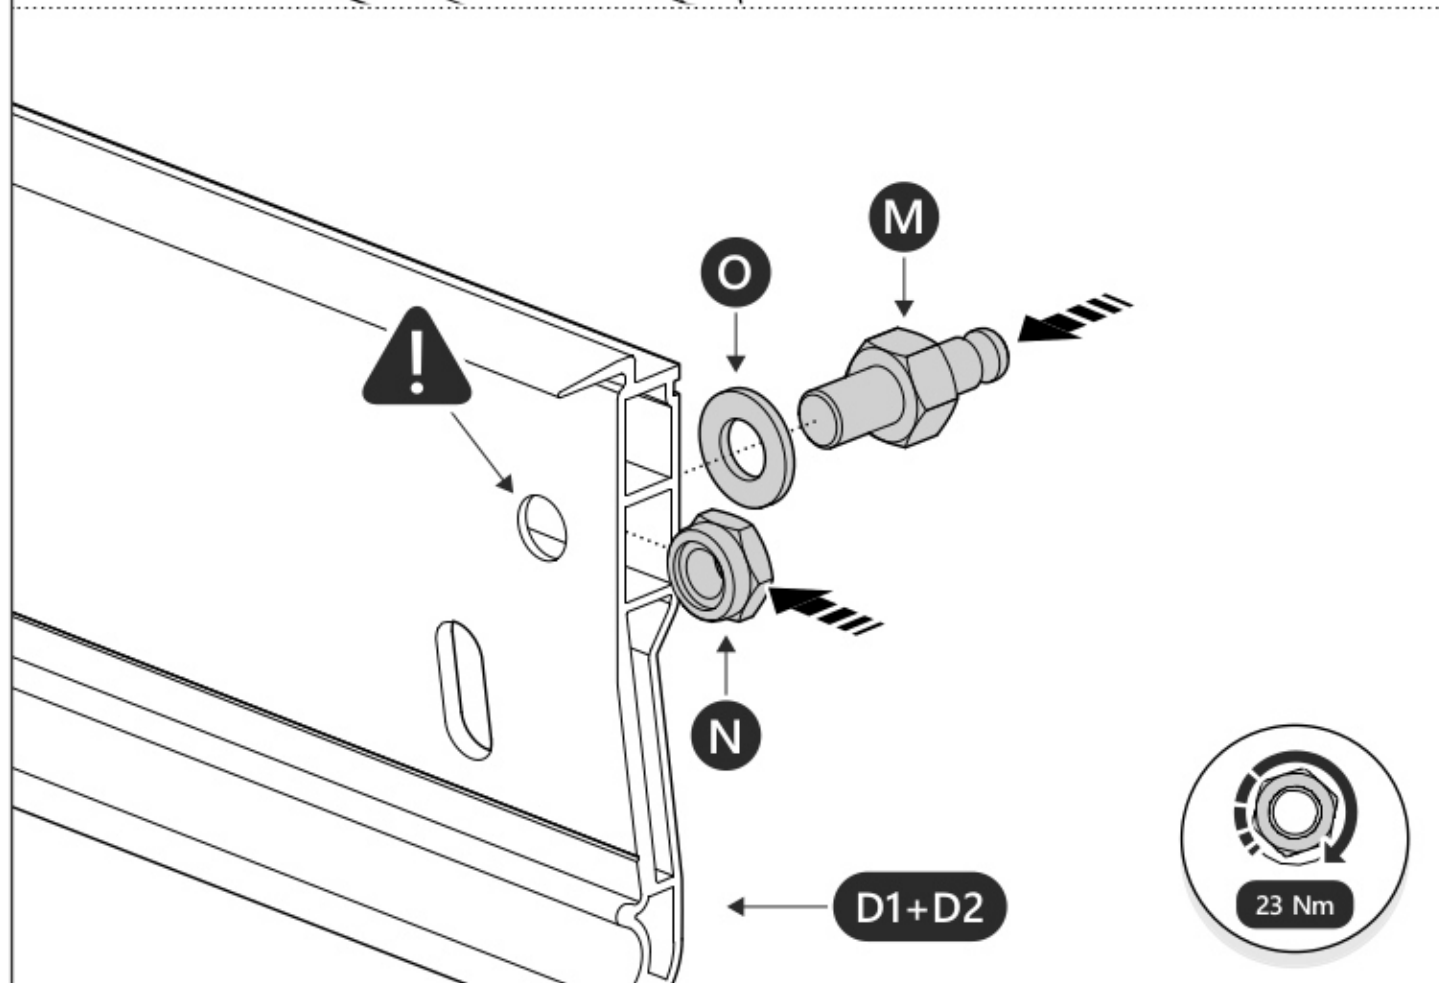
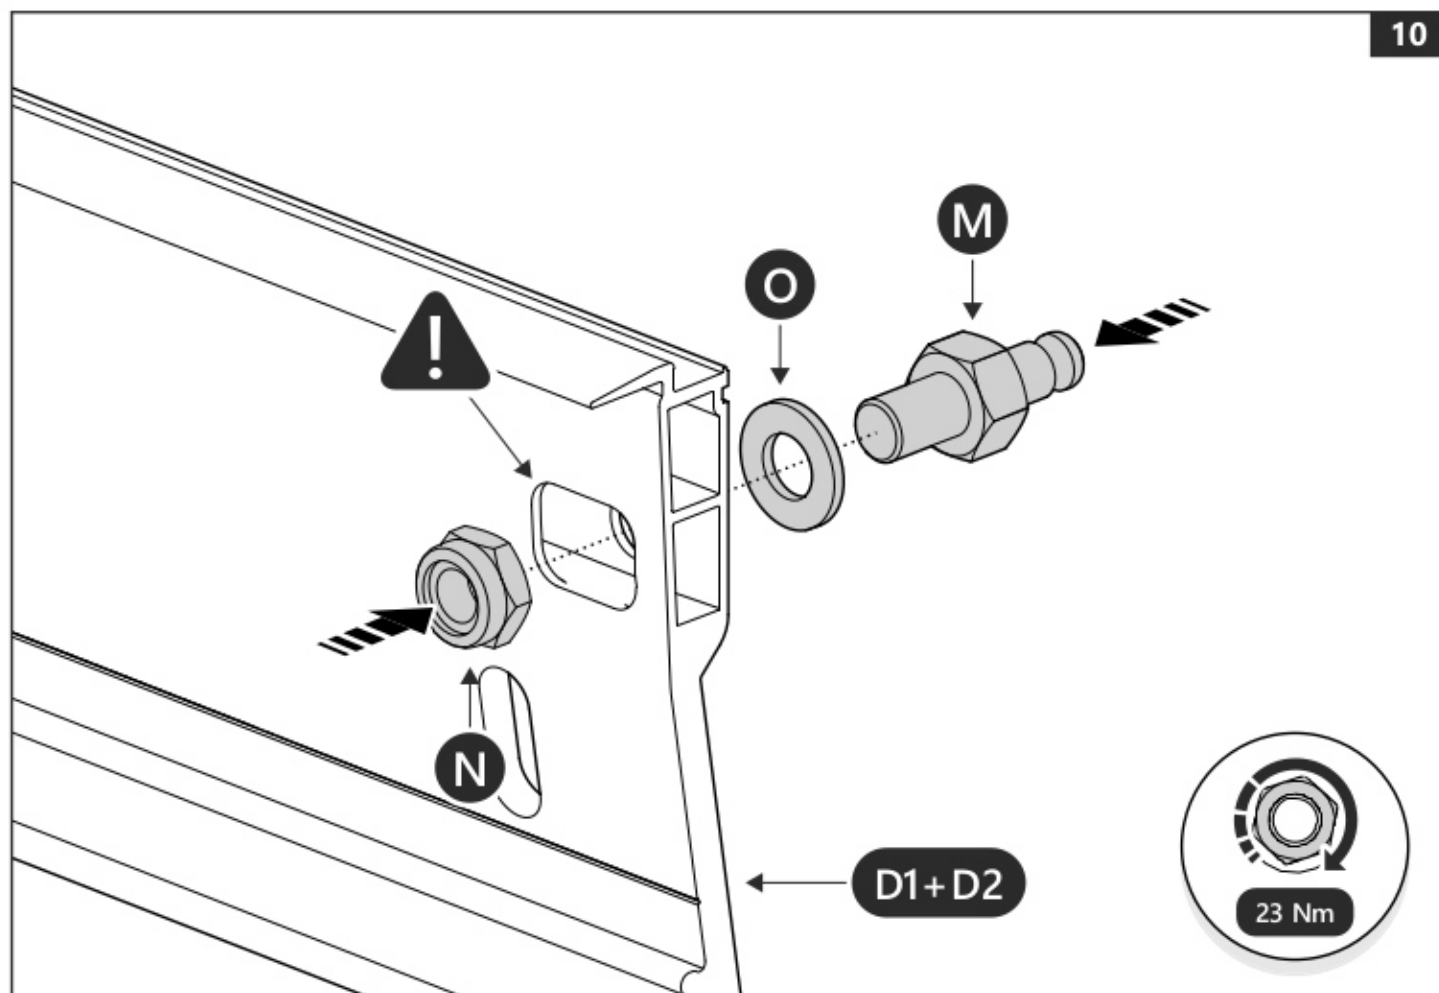


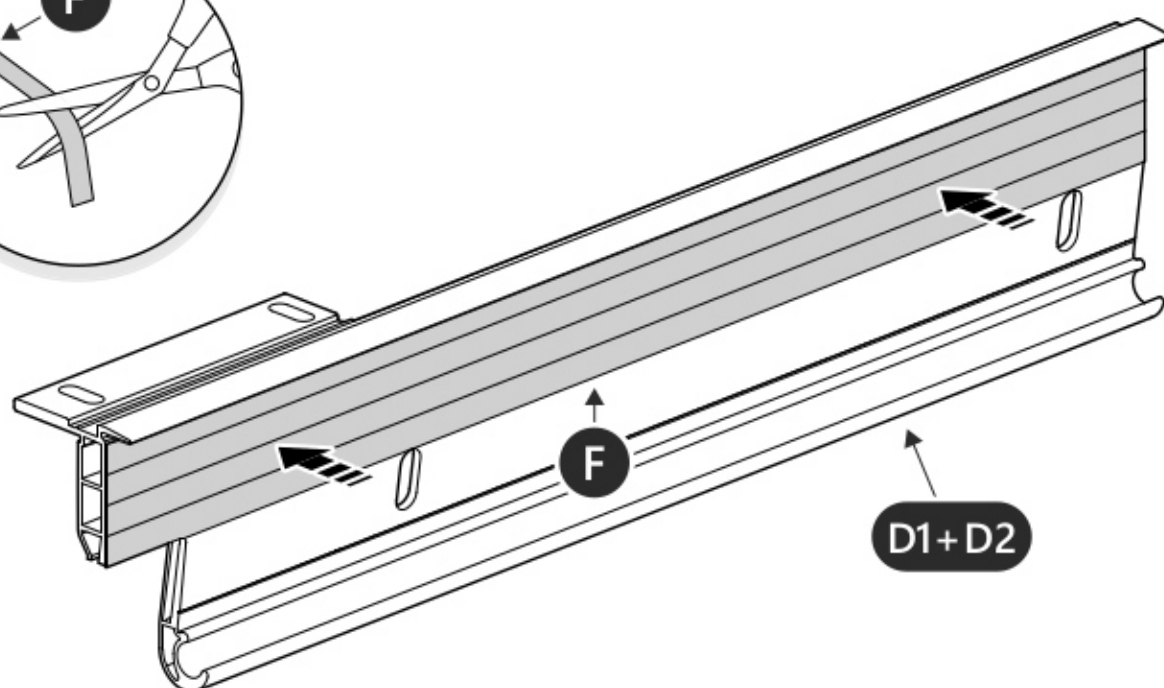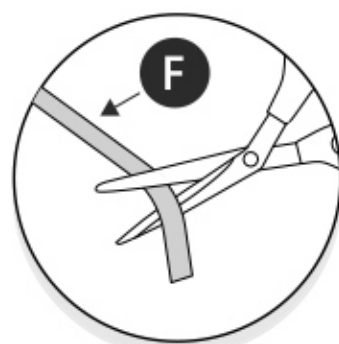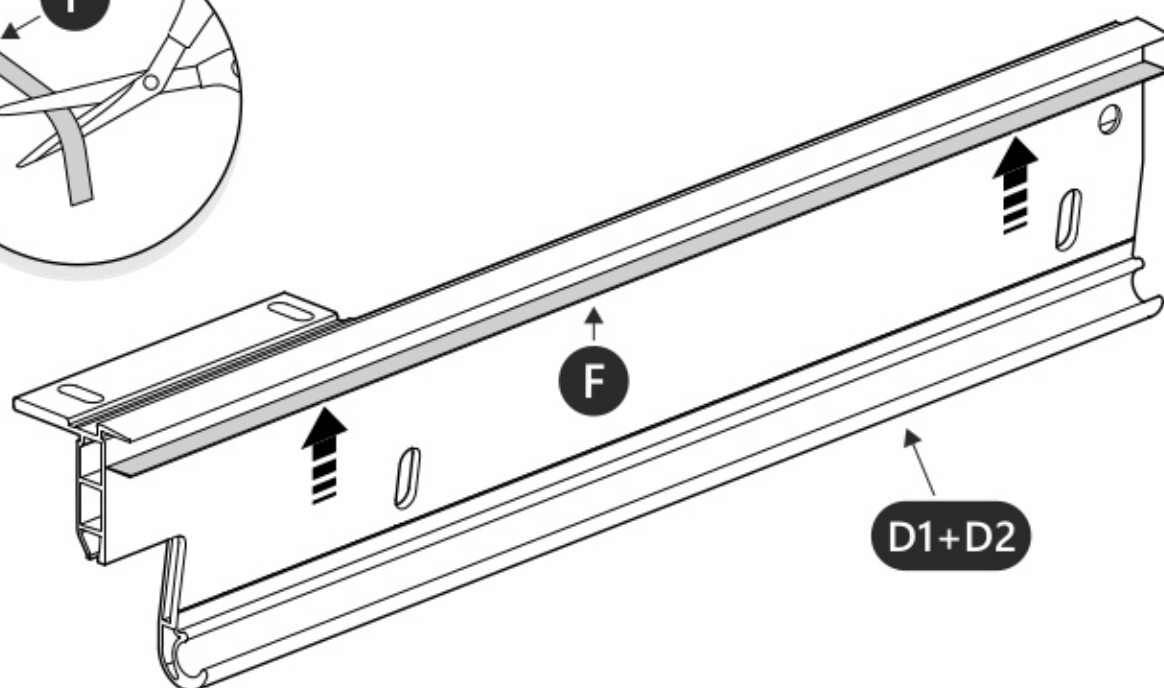
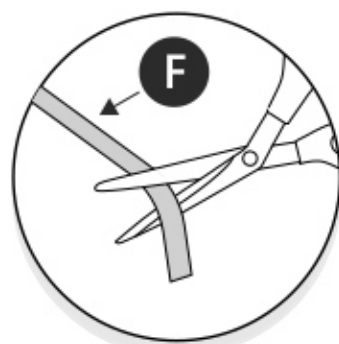



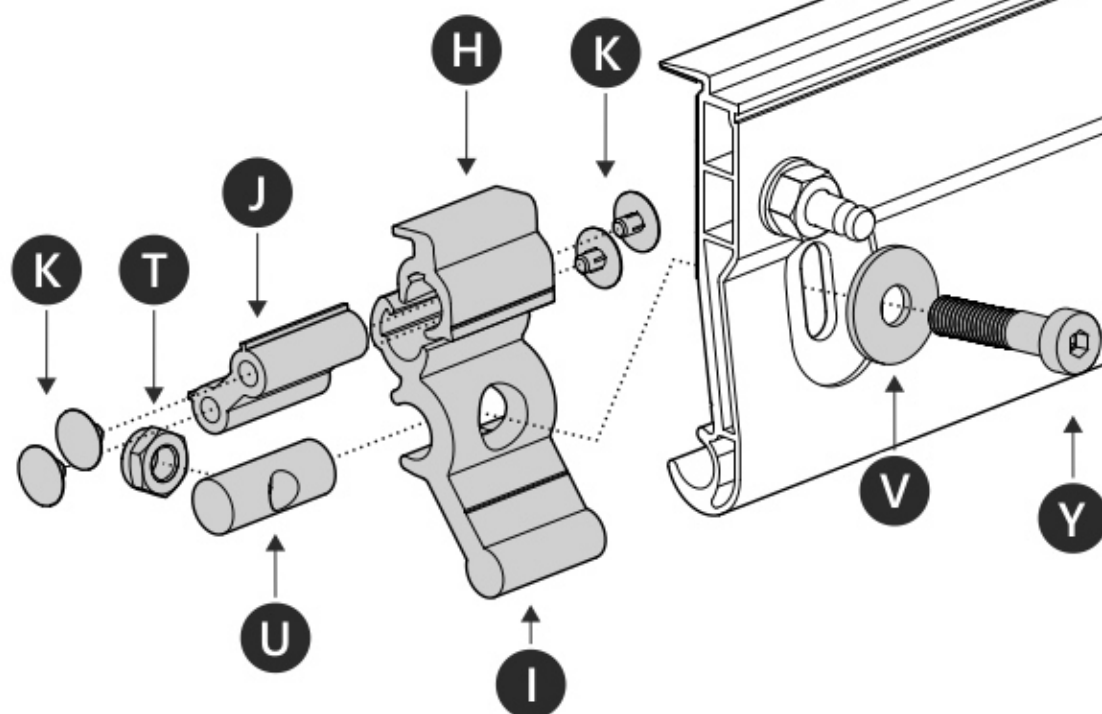




x 2


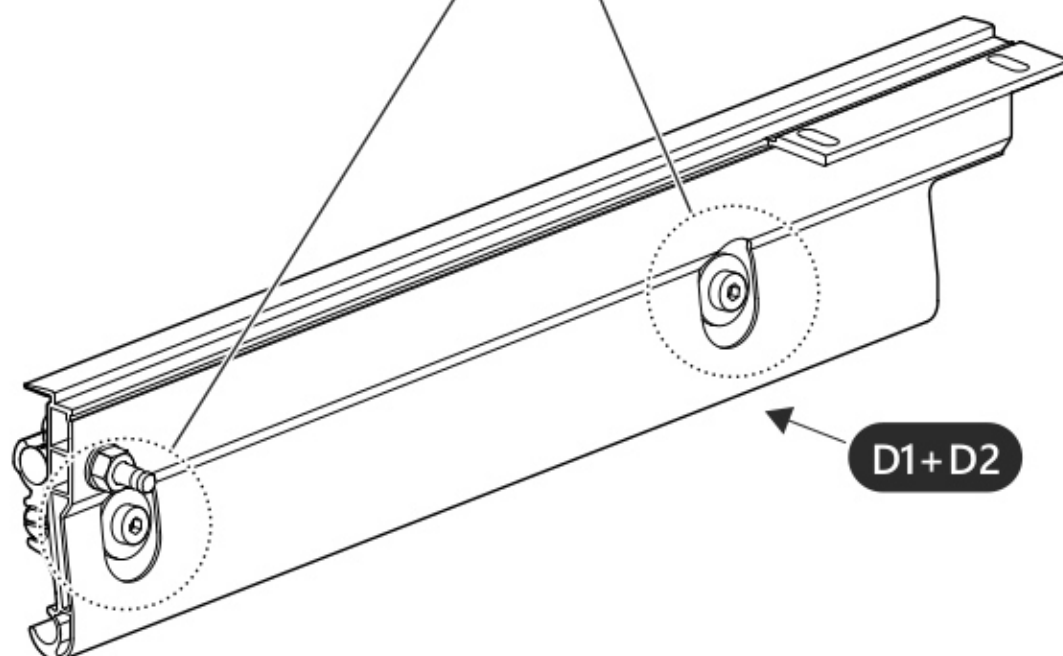


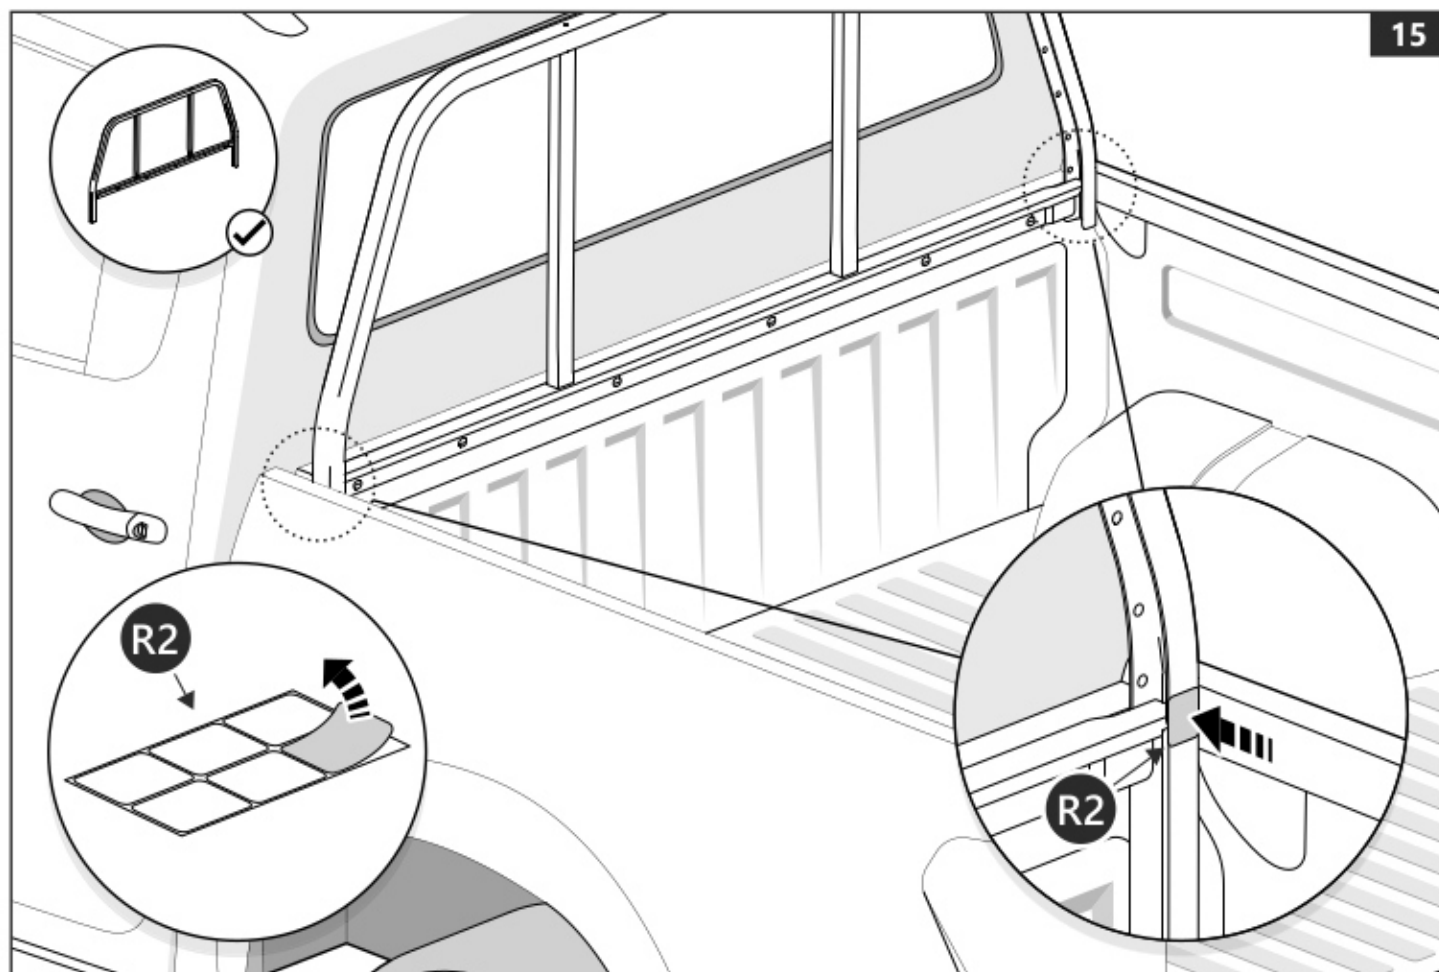
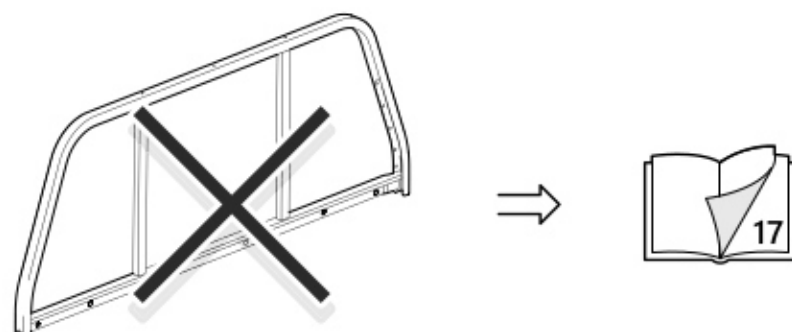


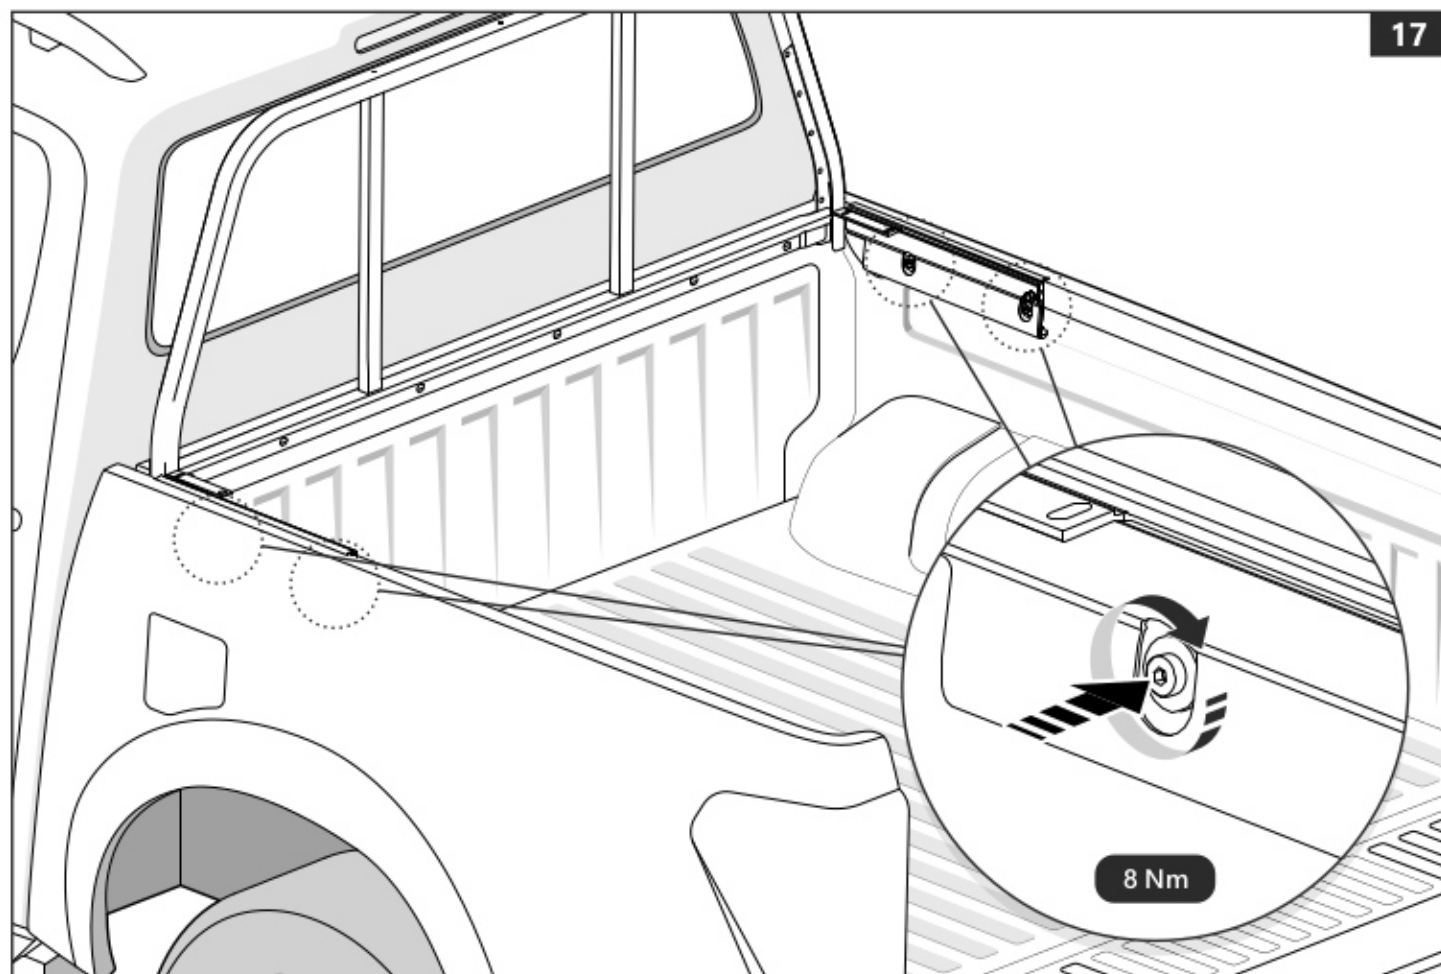
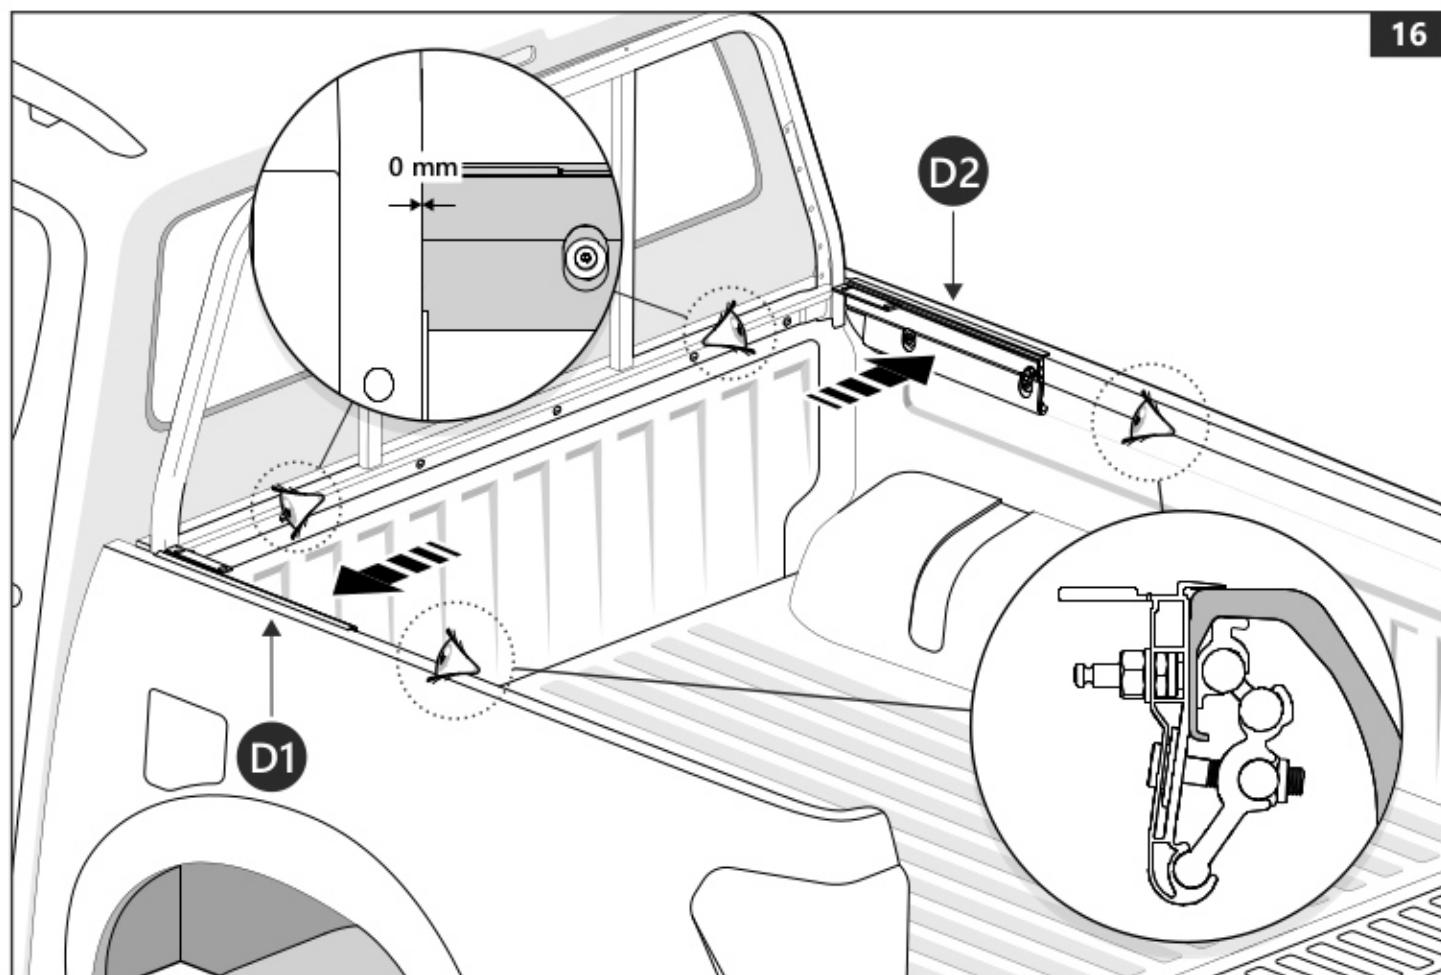


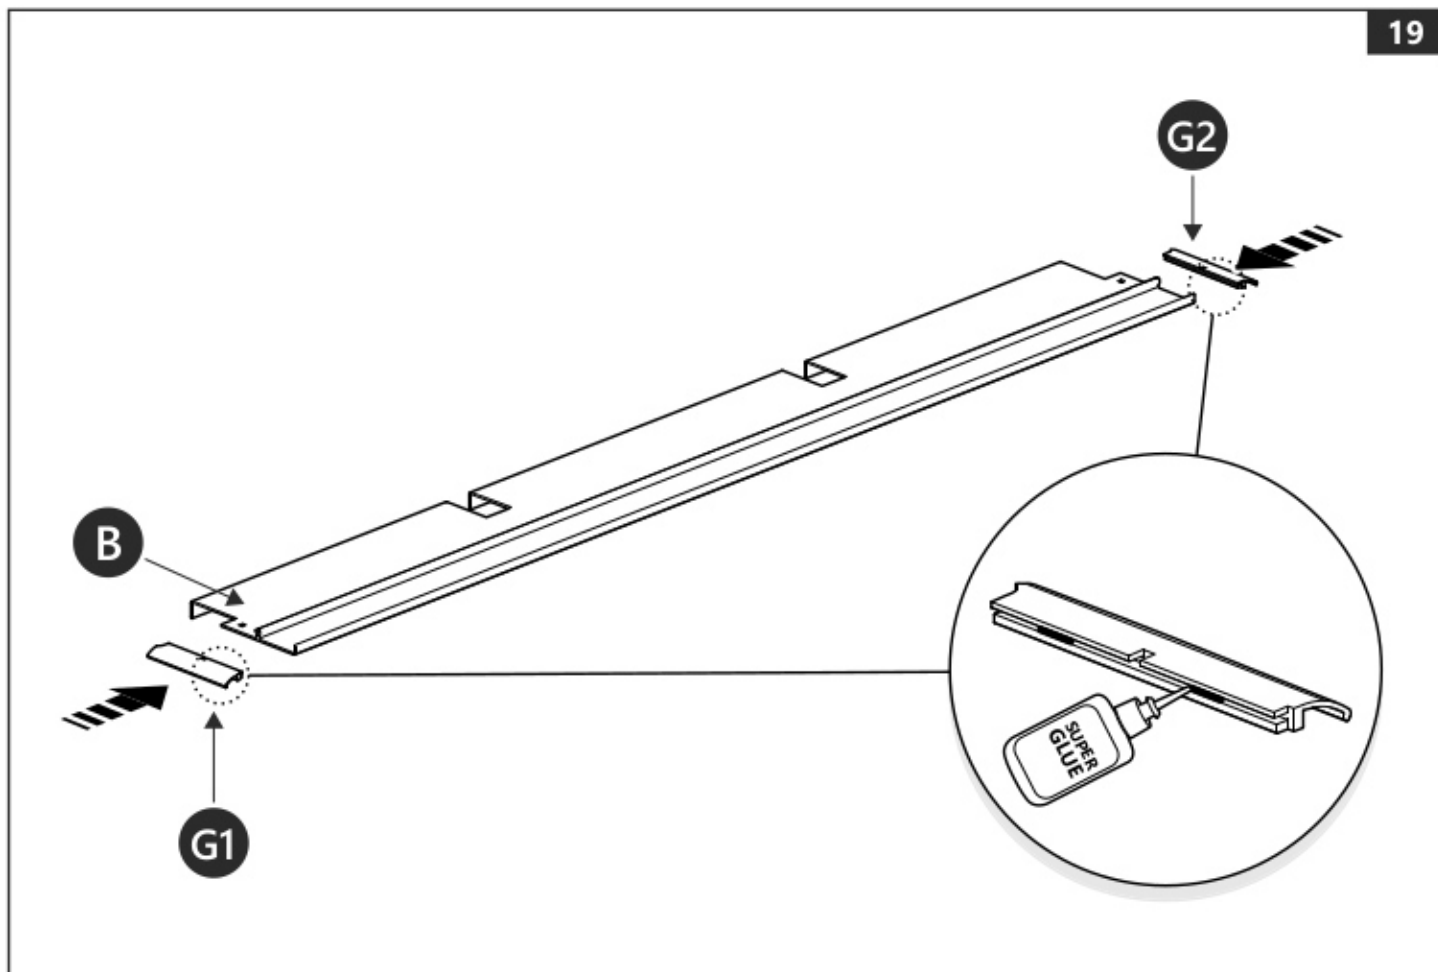
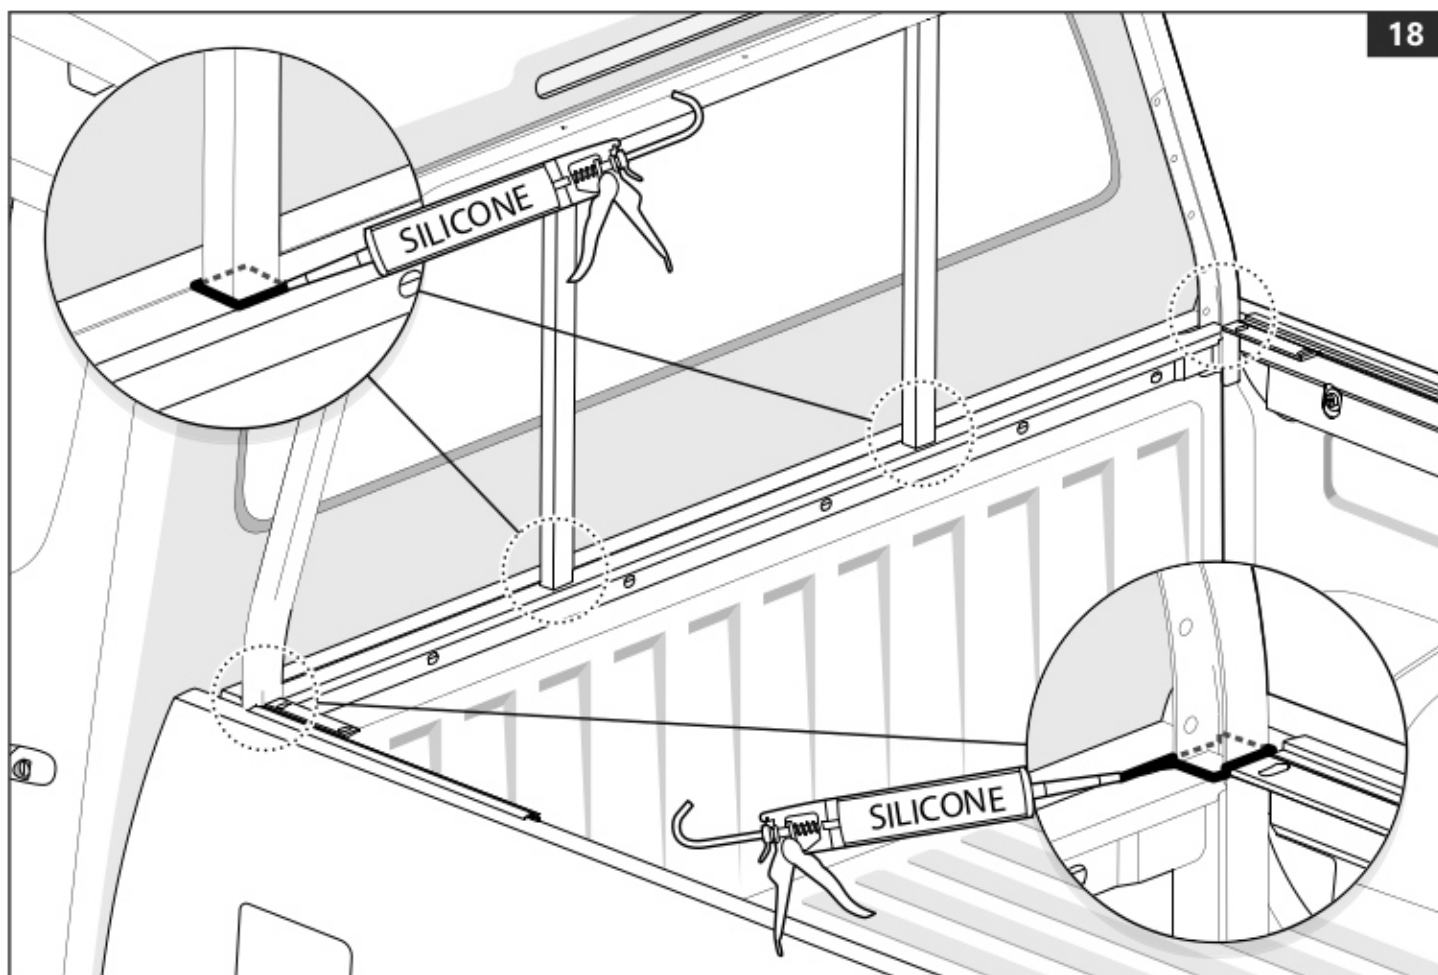


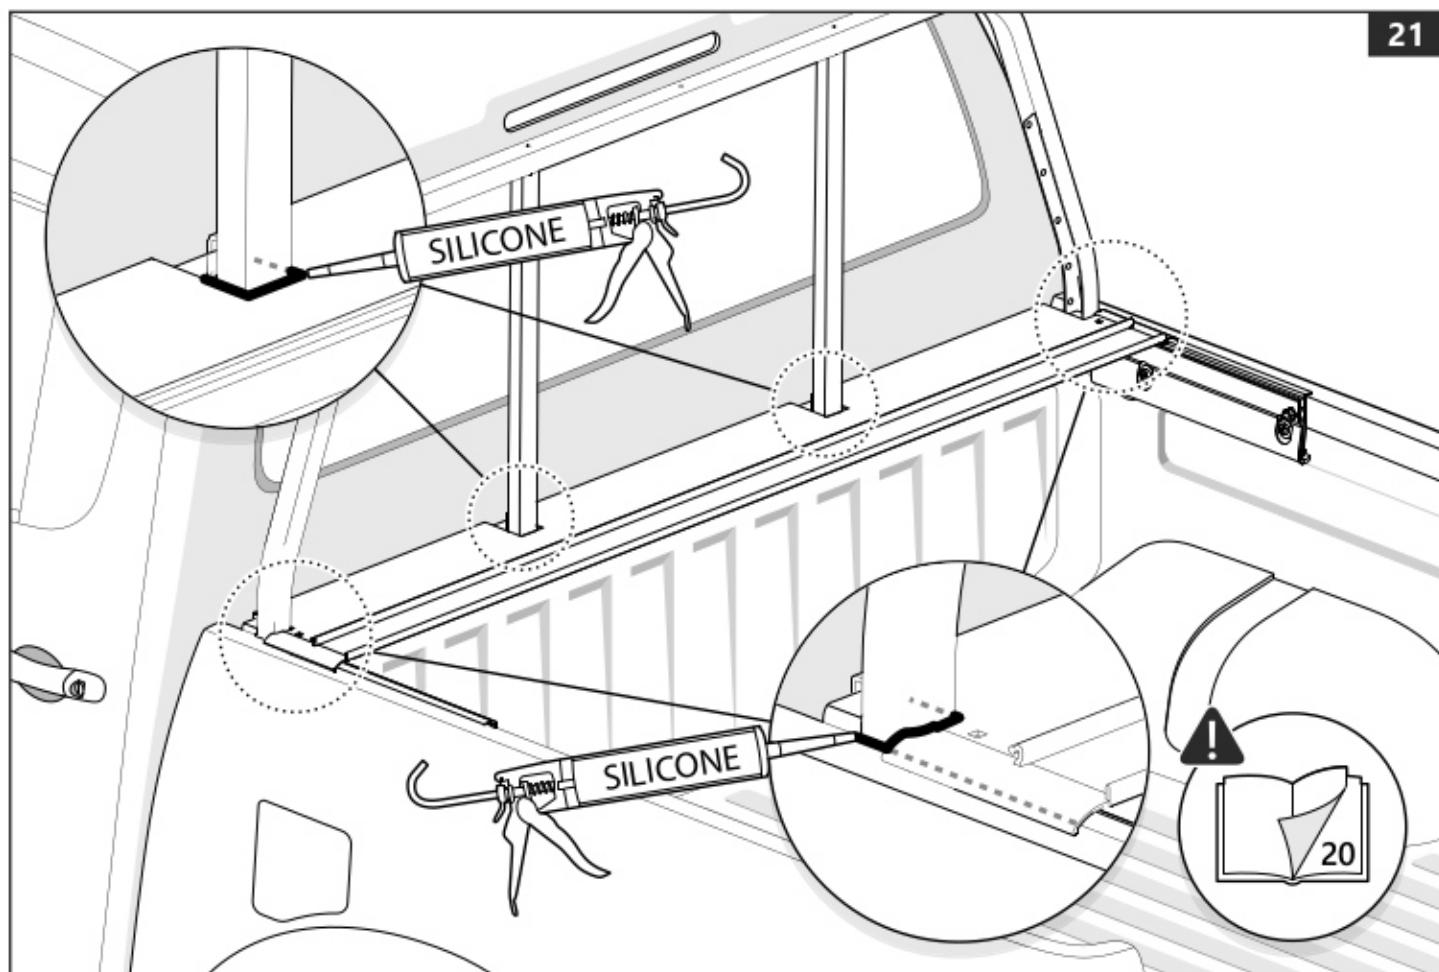
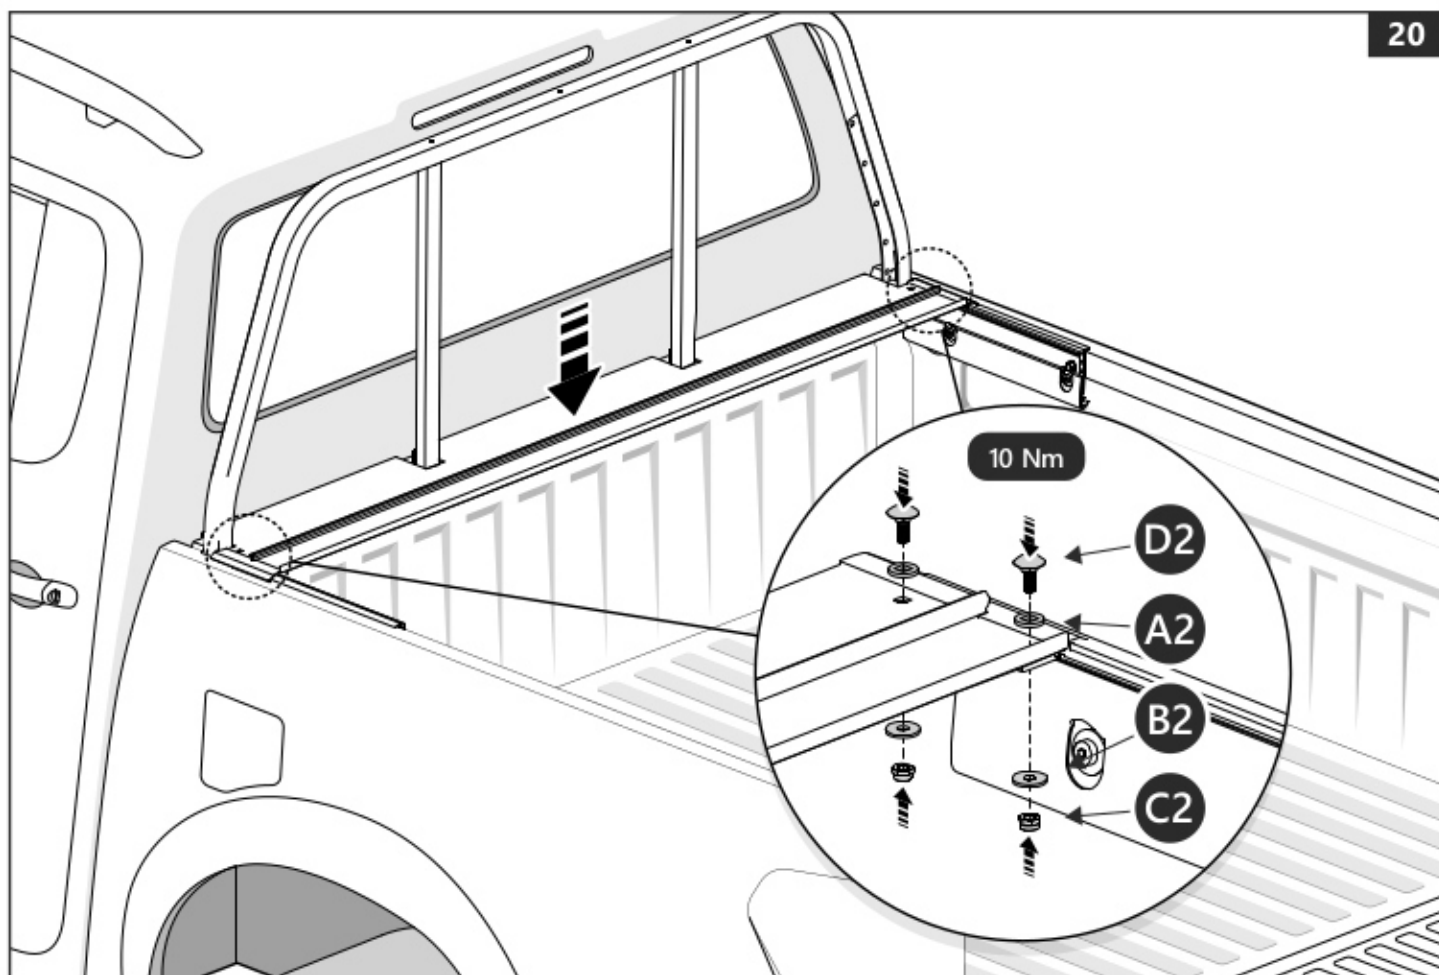


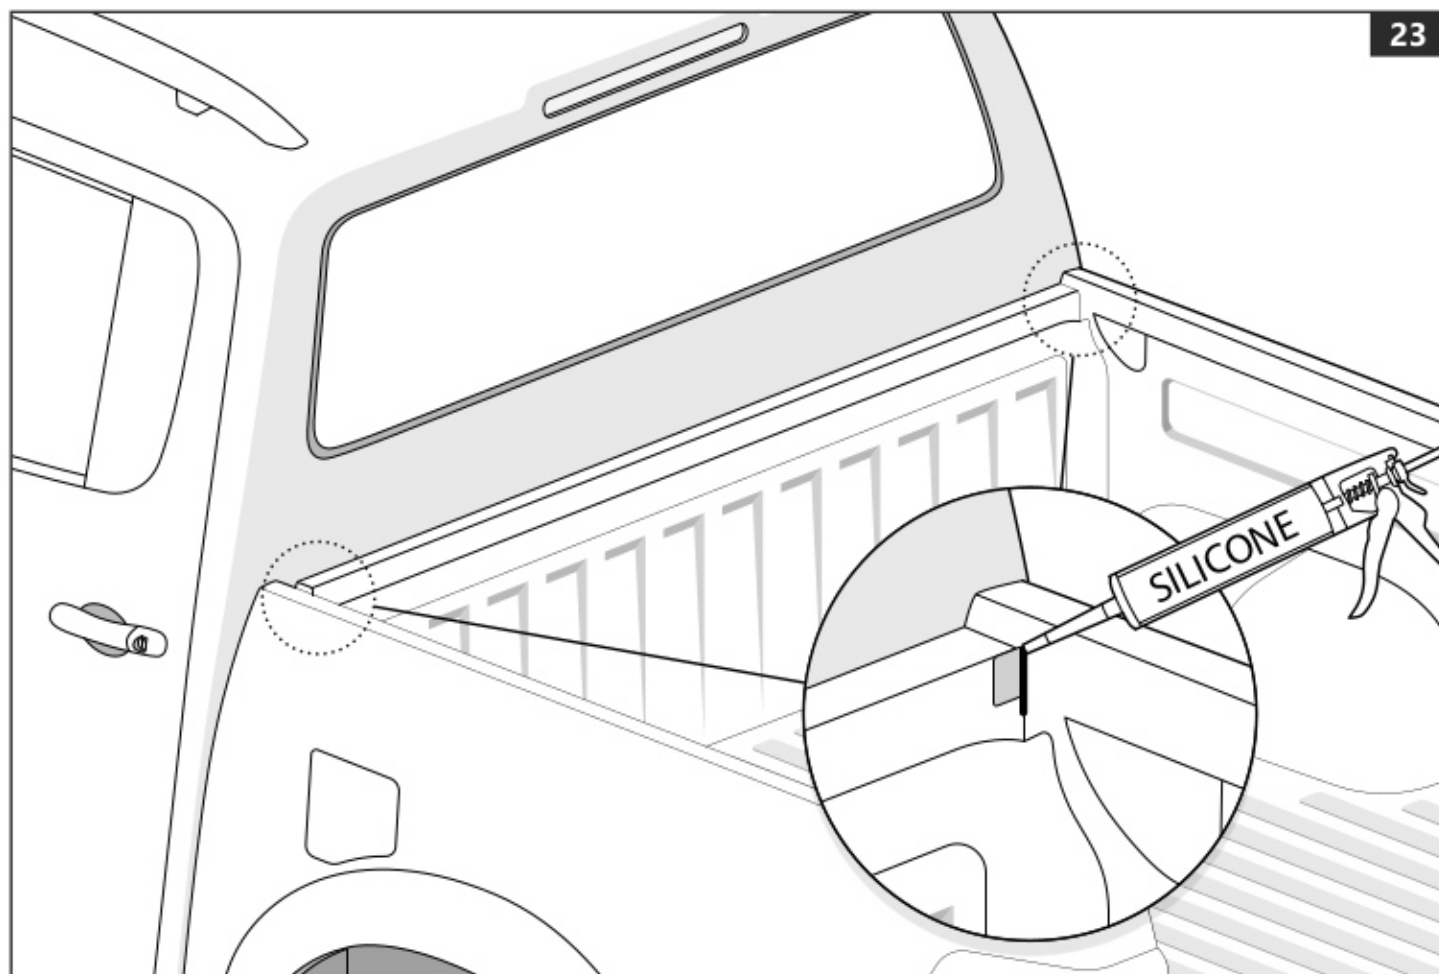
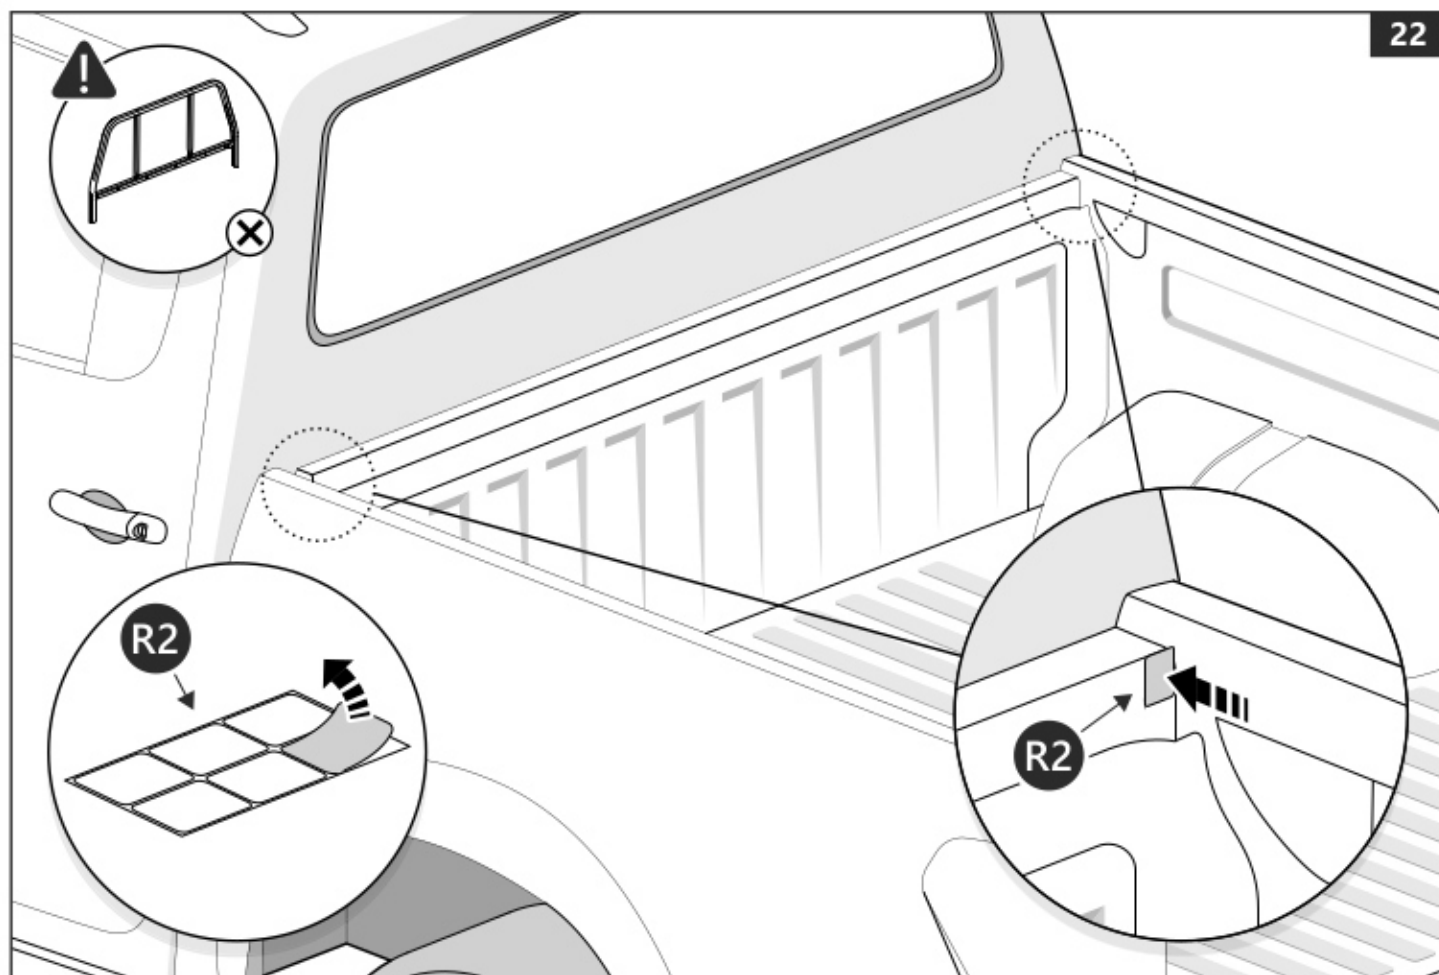


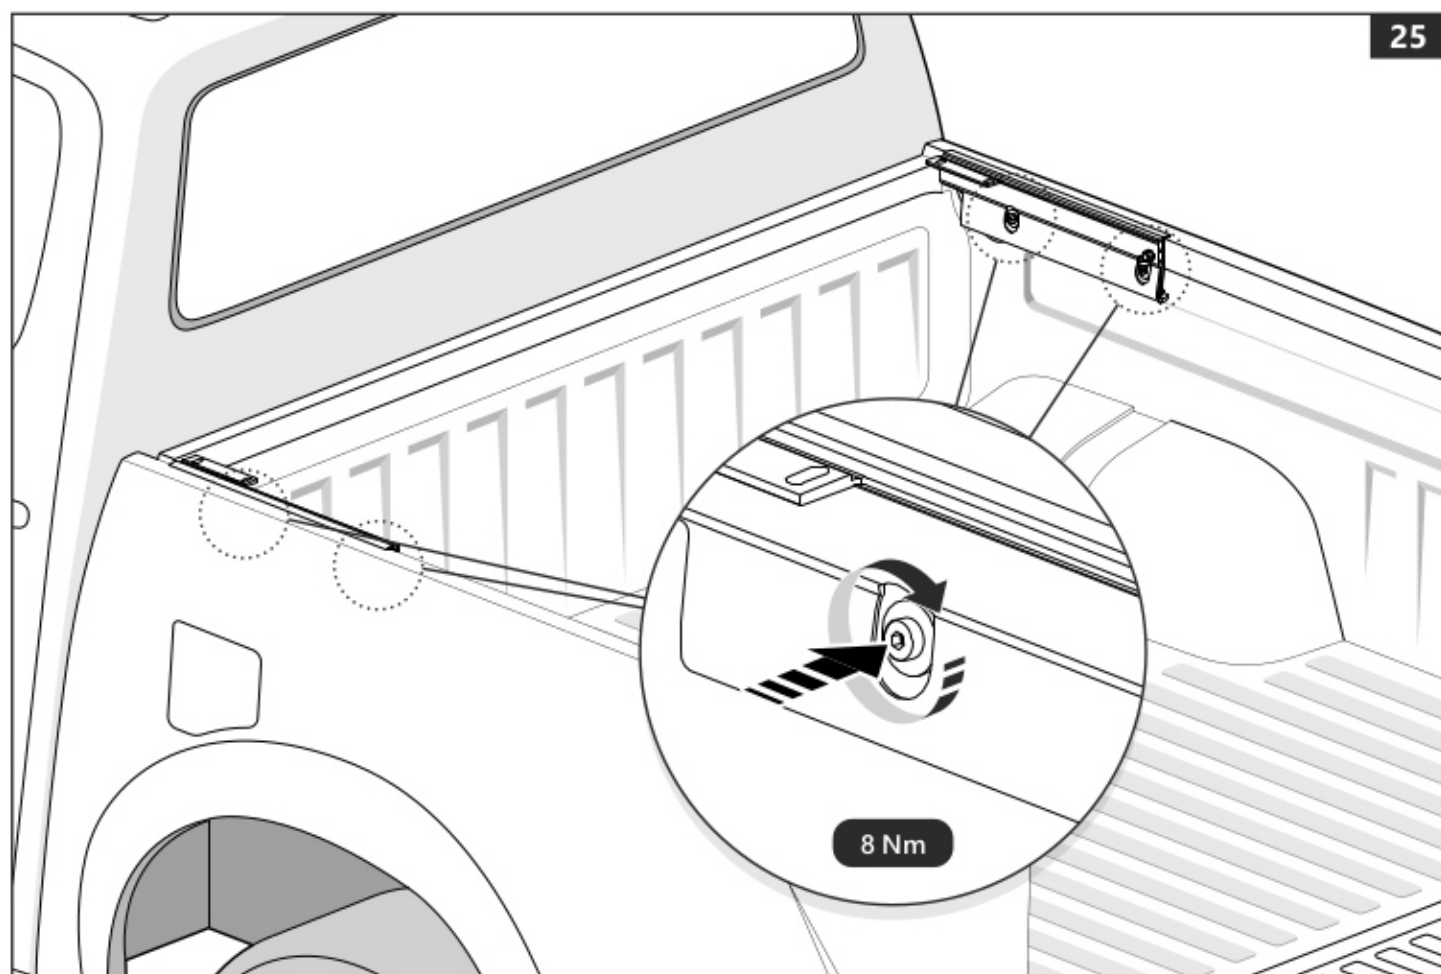
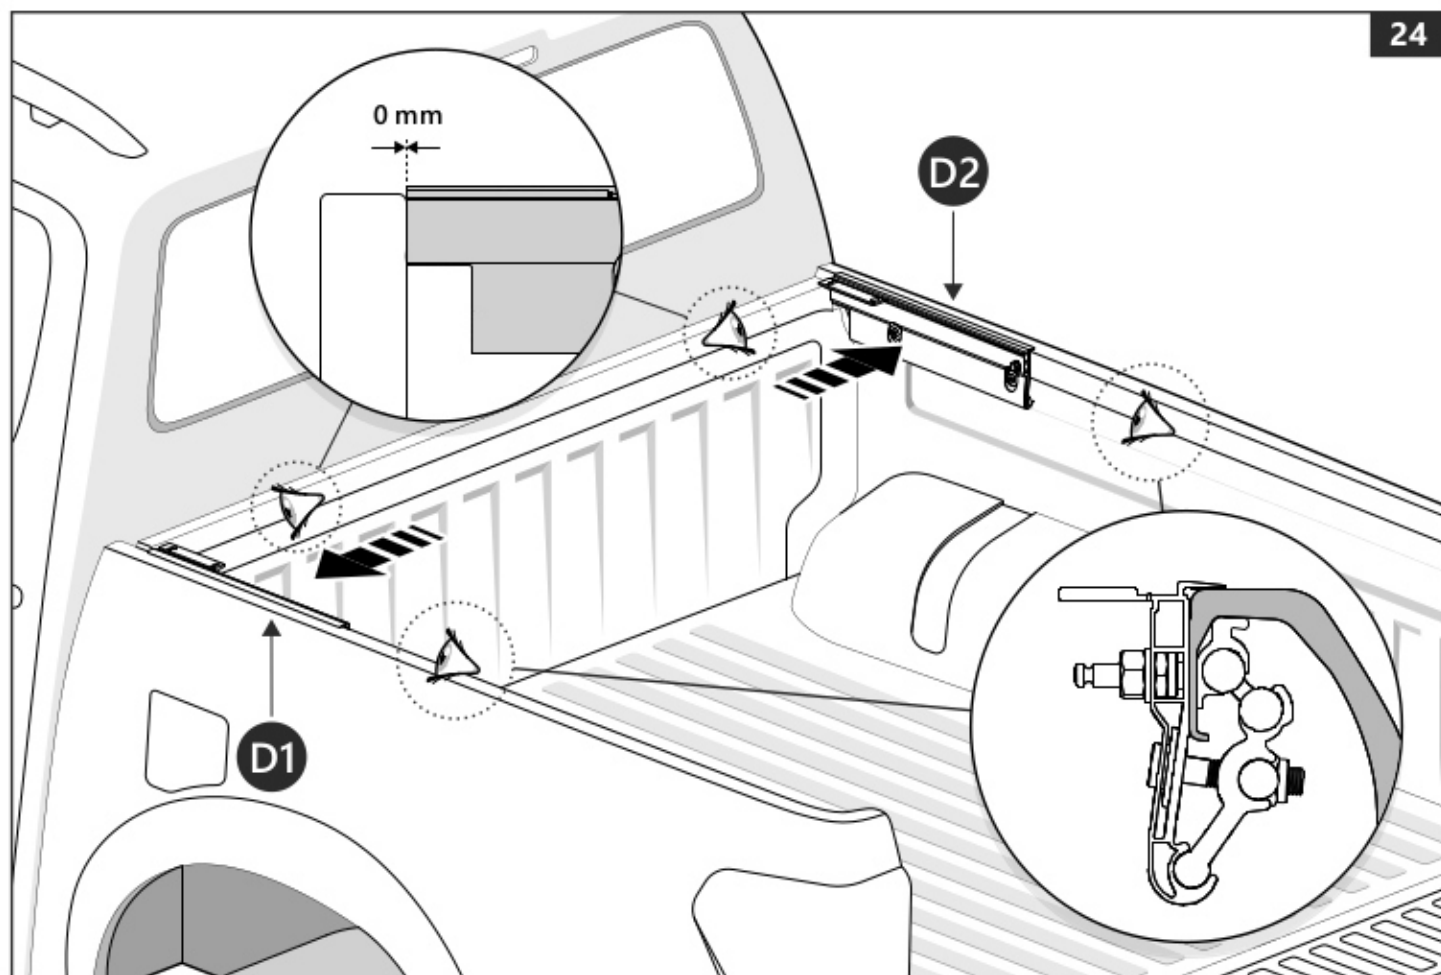


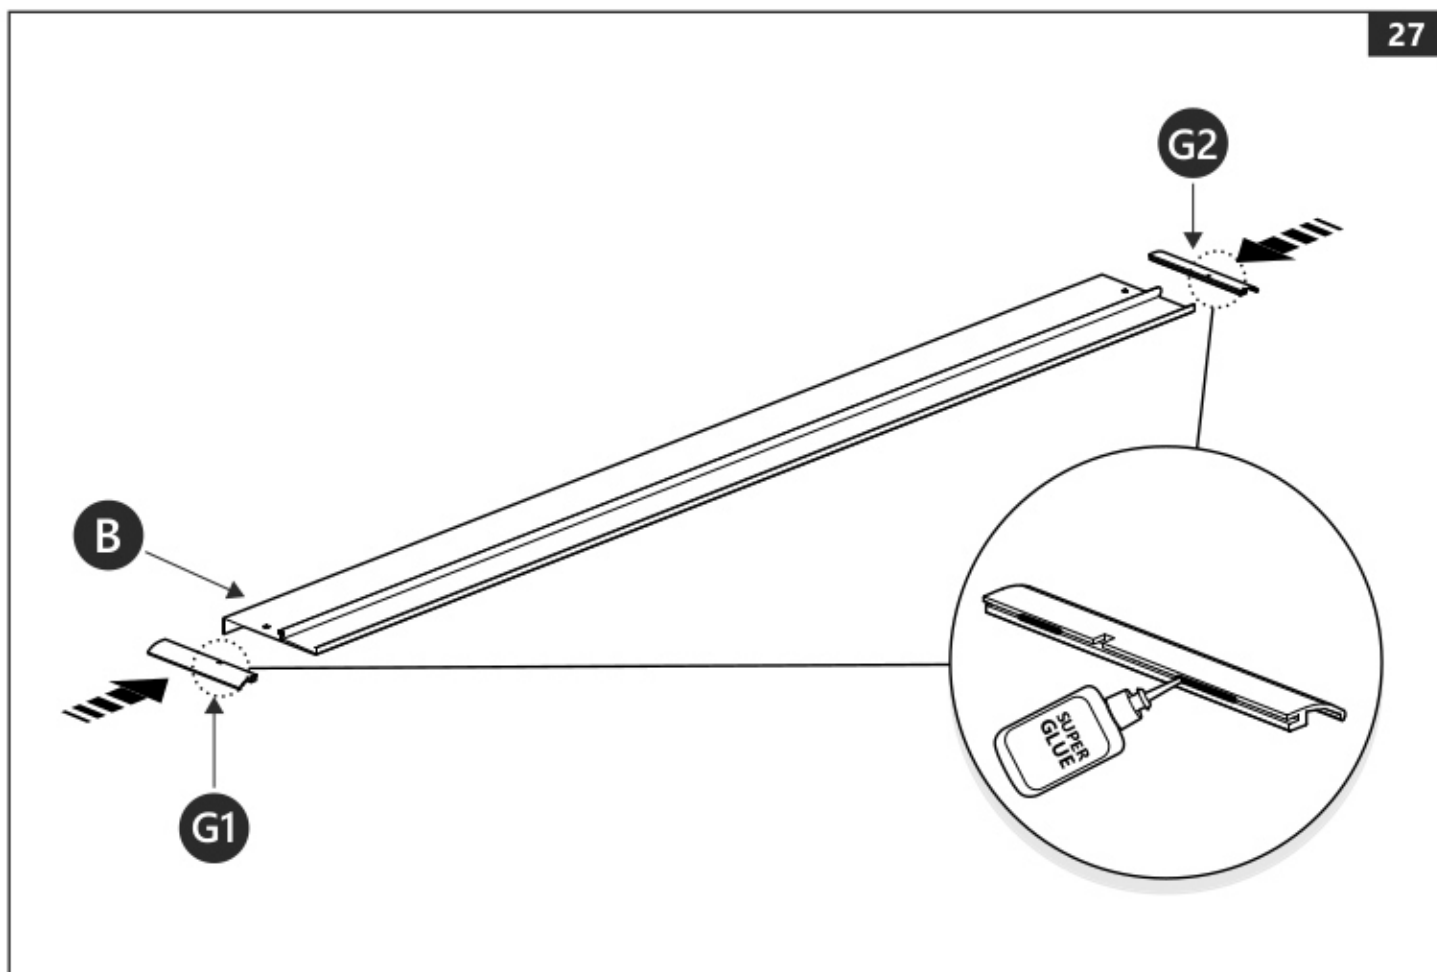
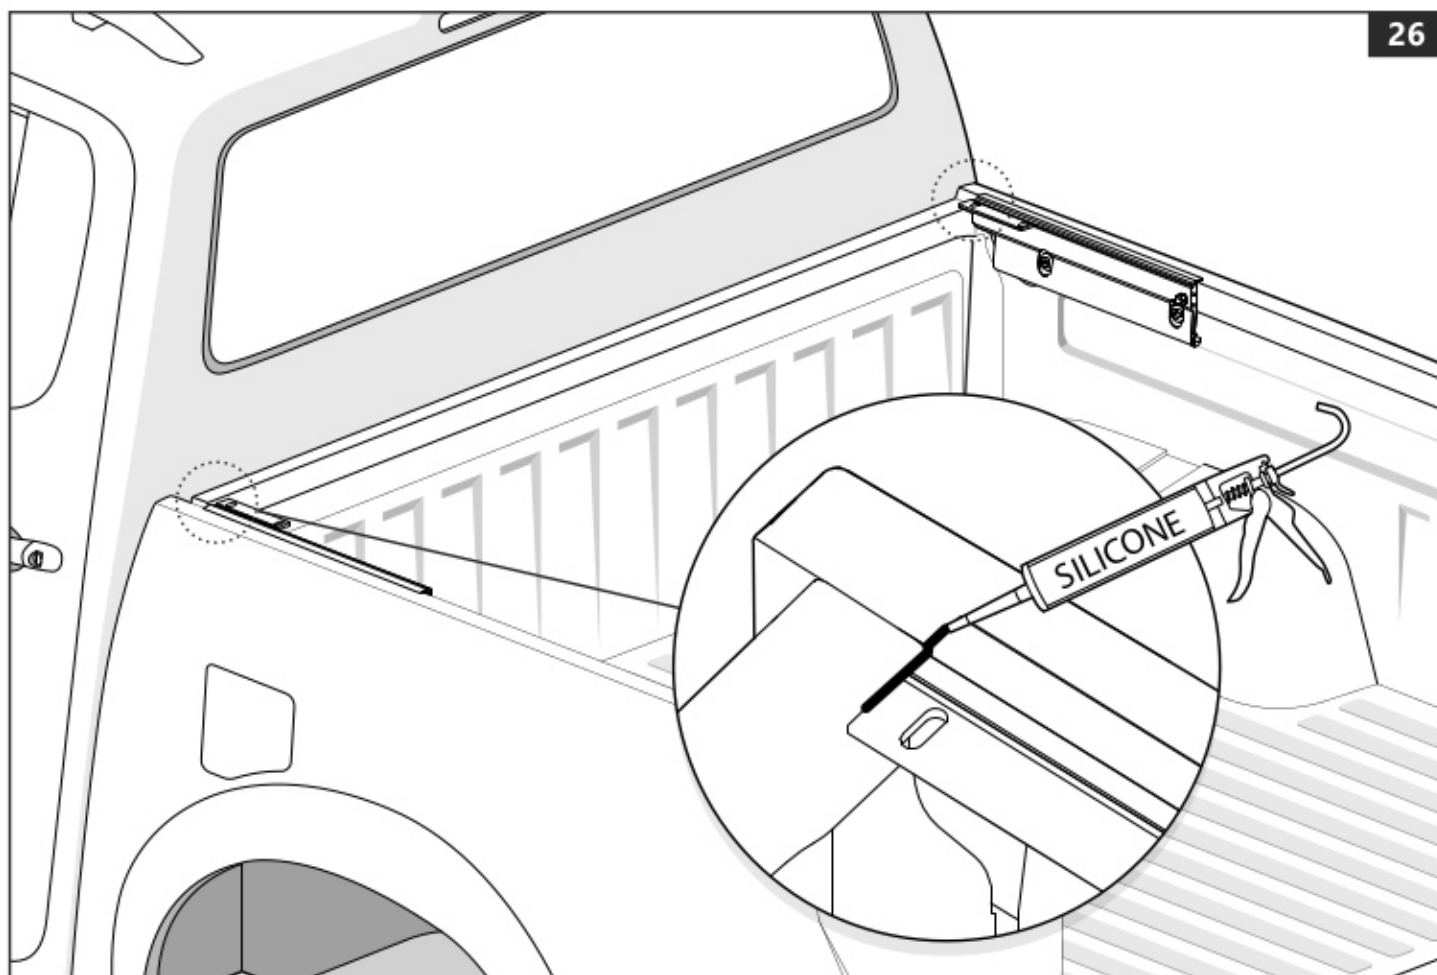


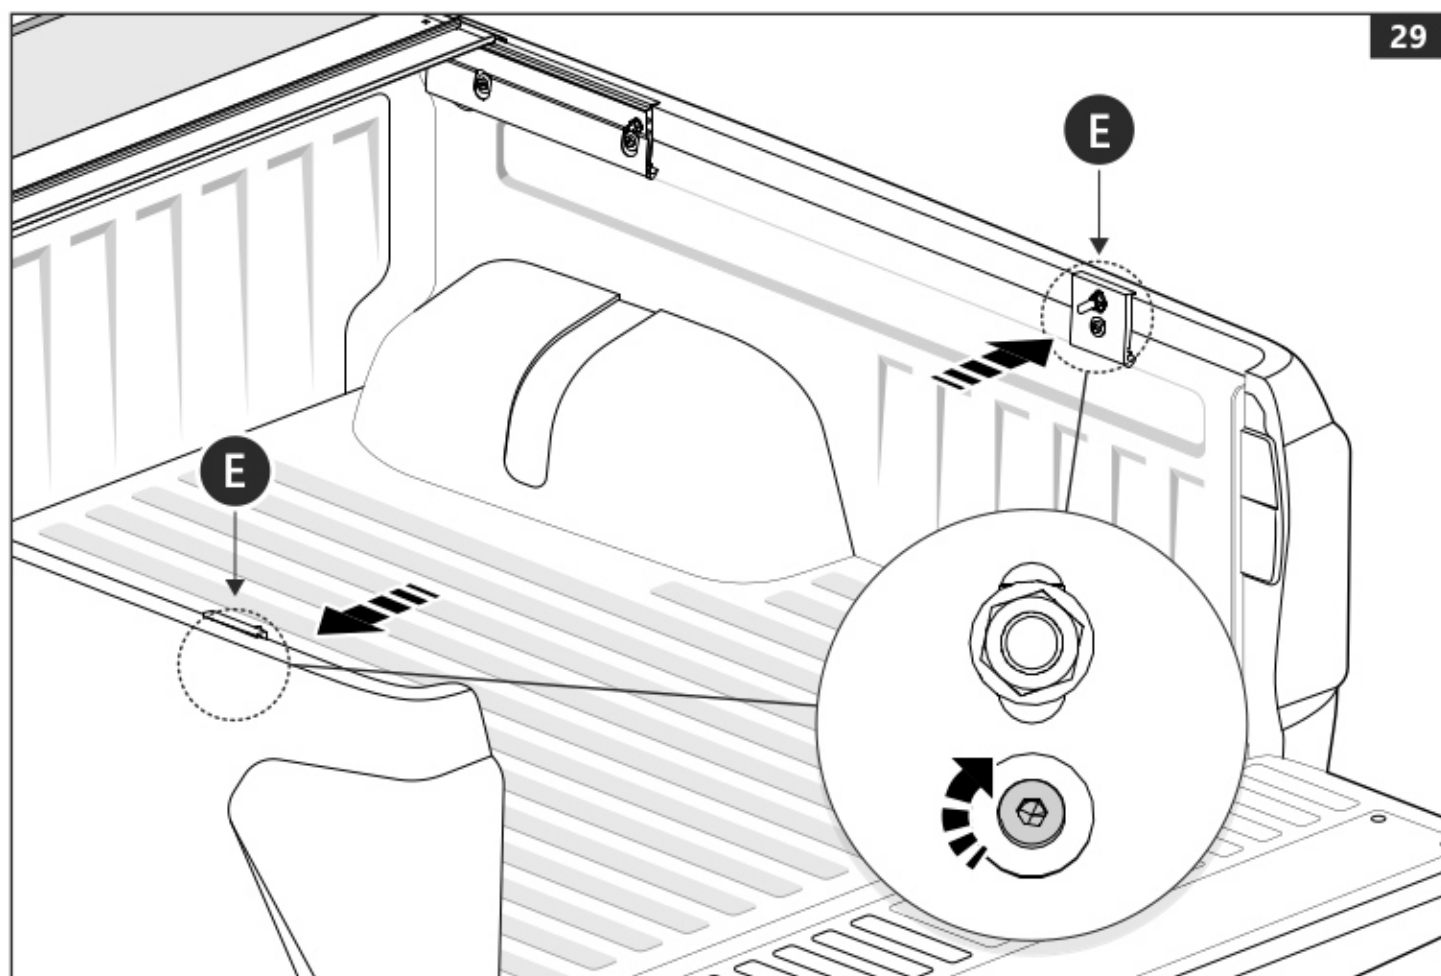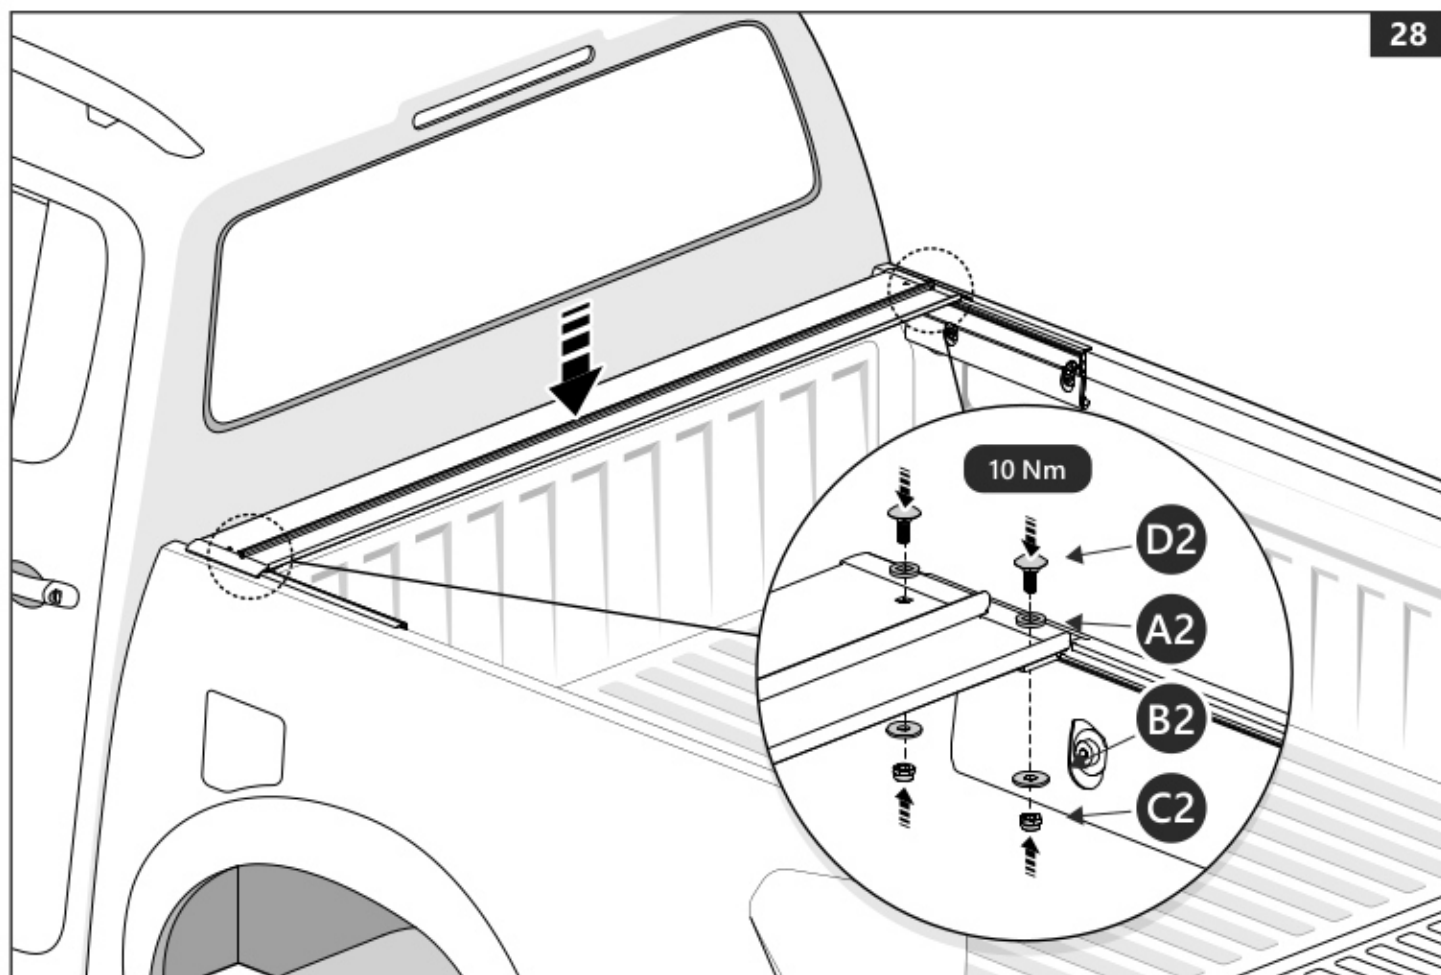

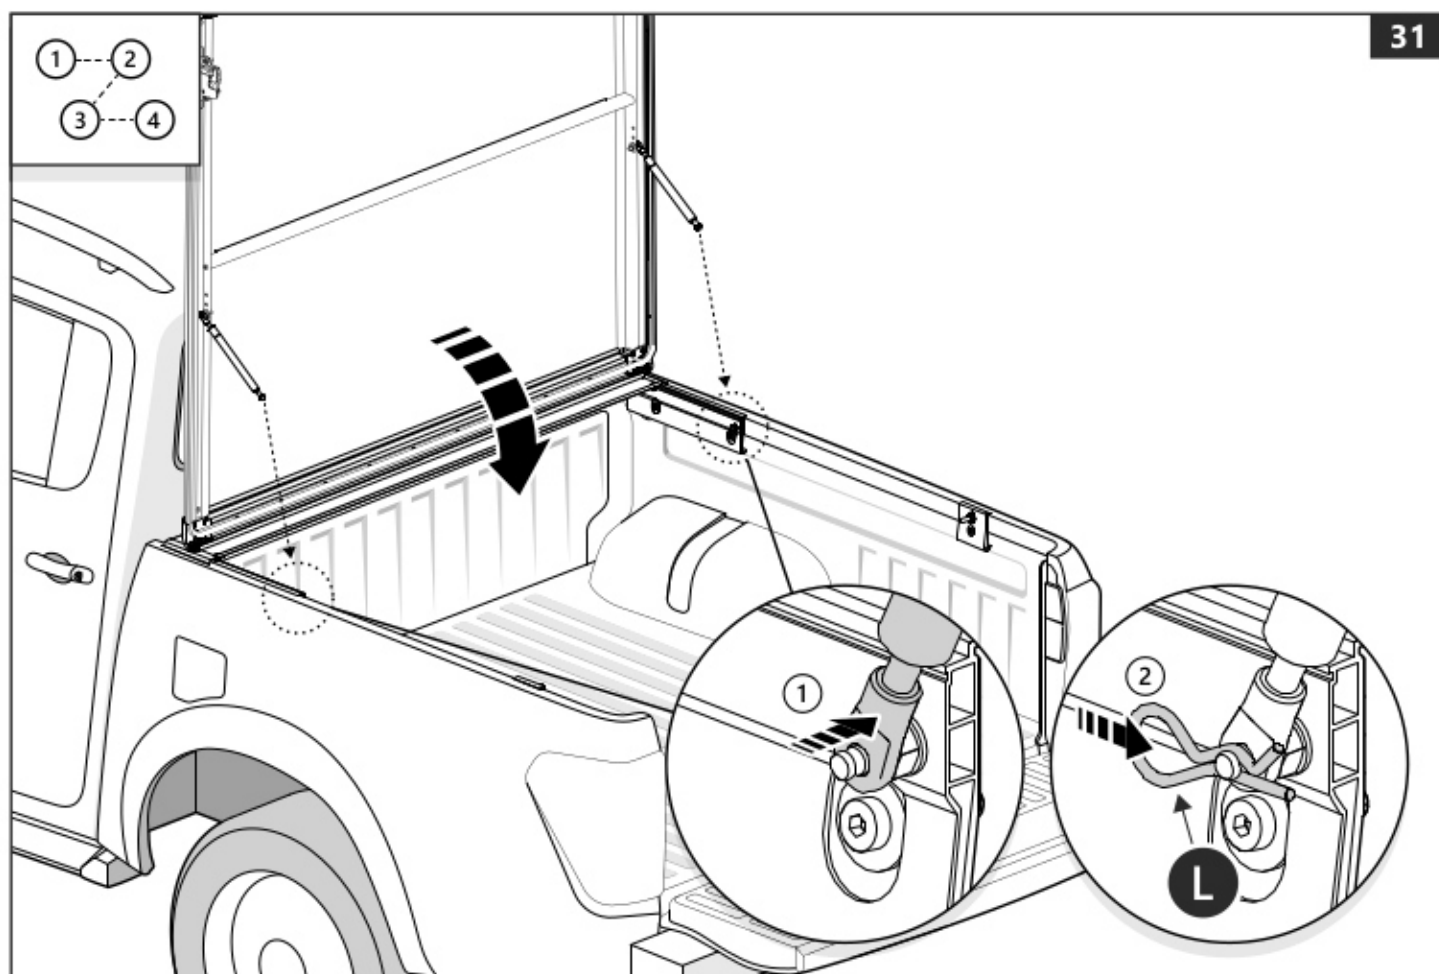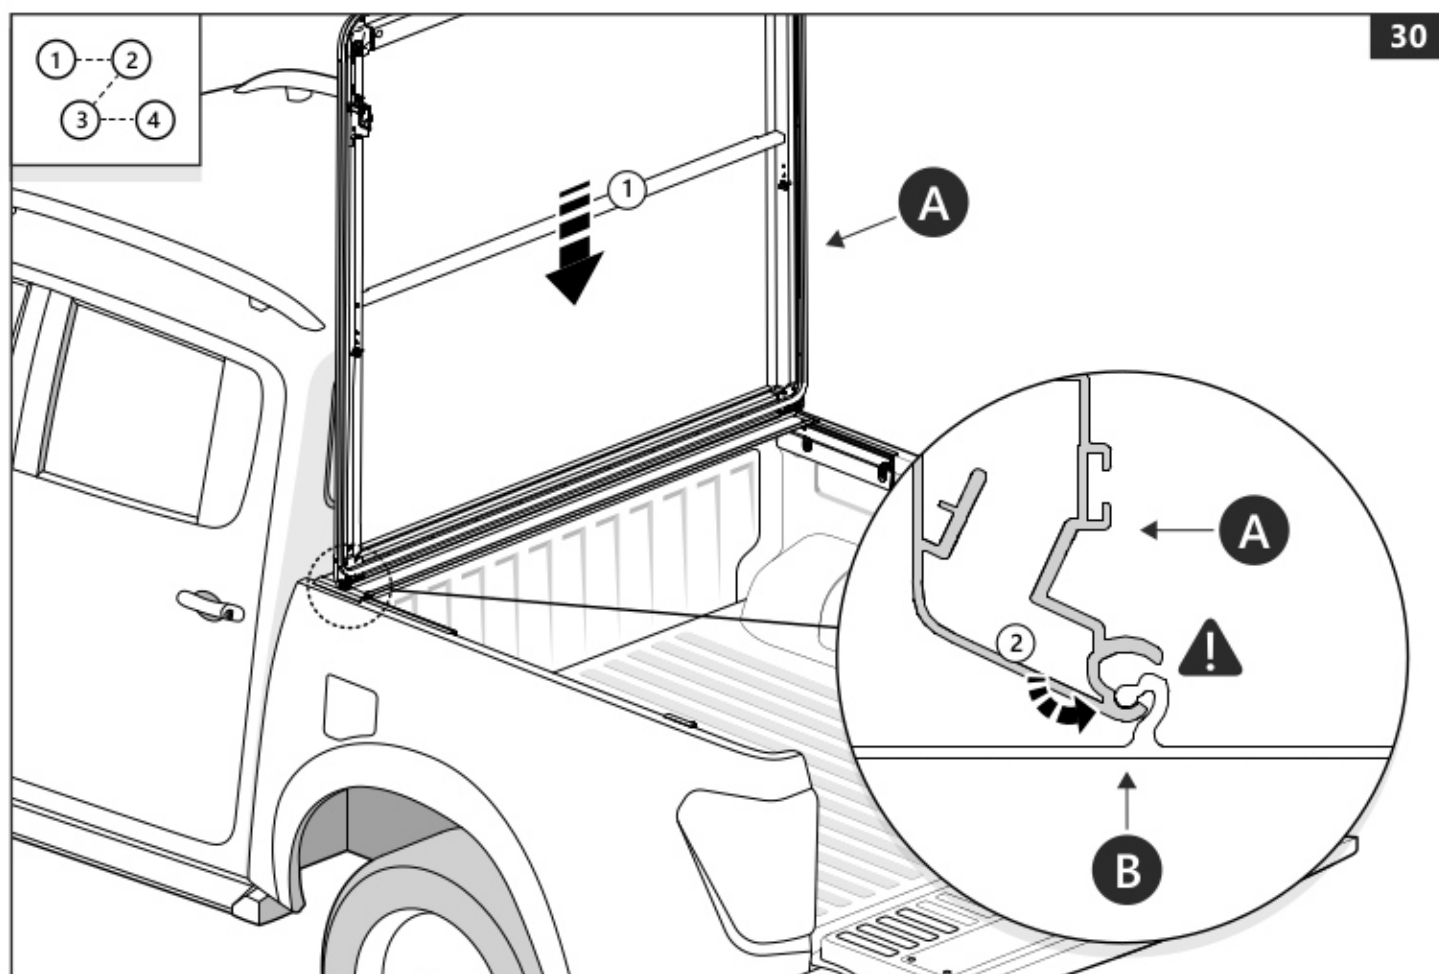

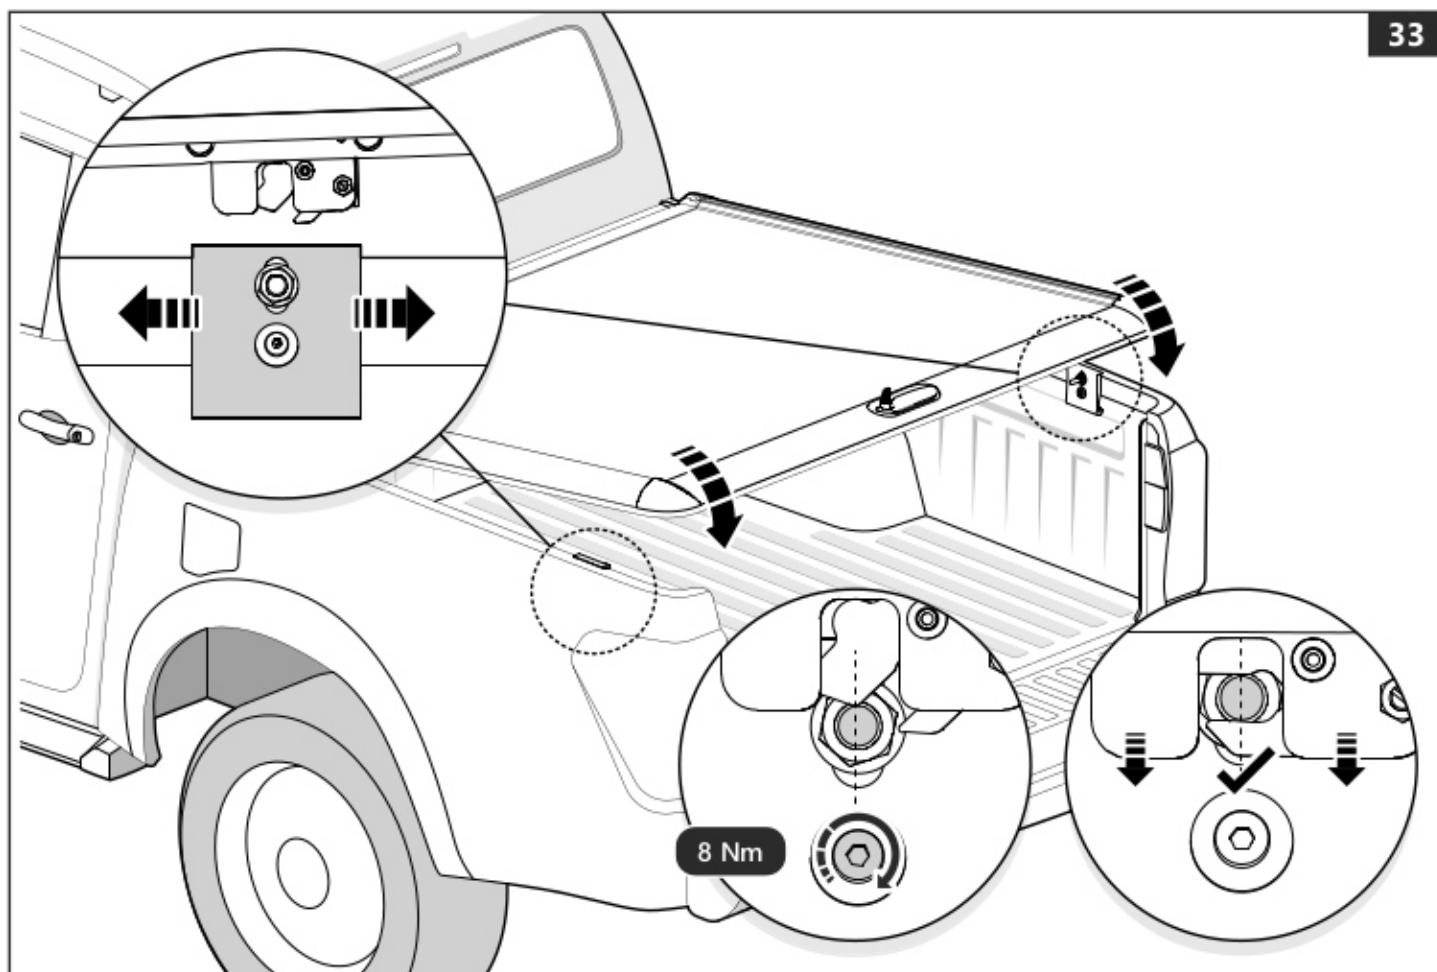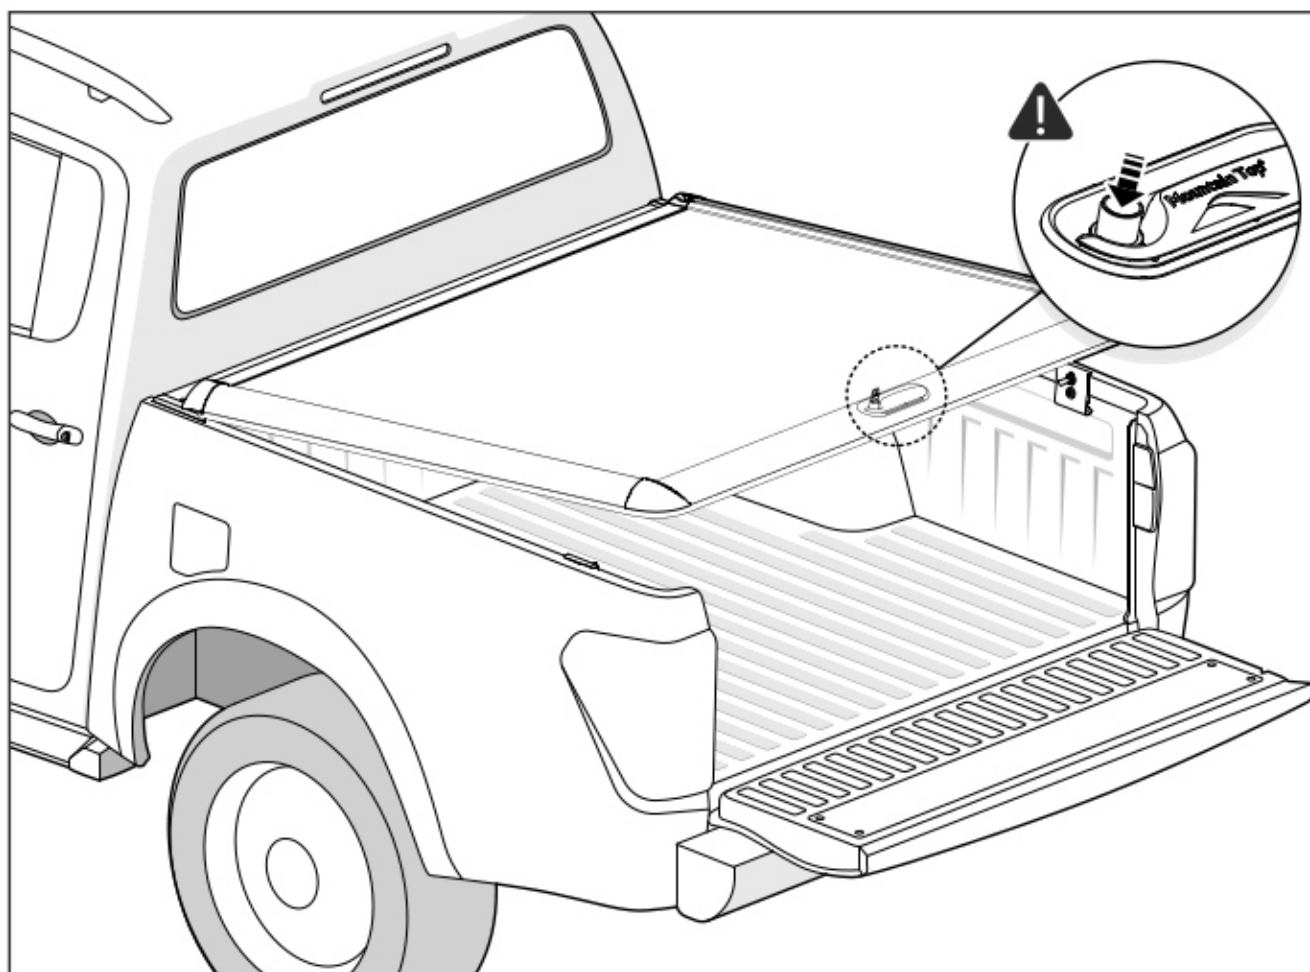

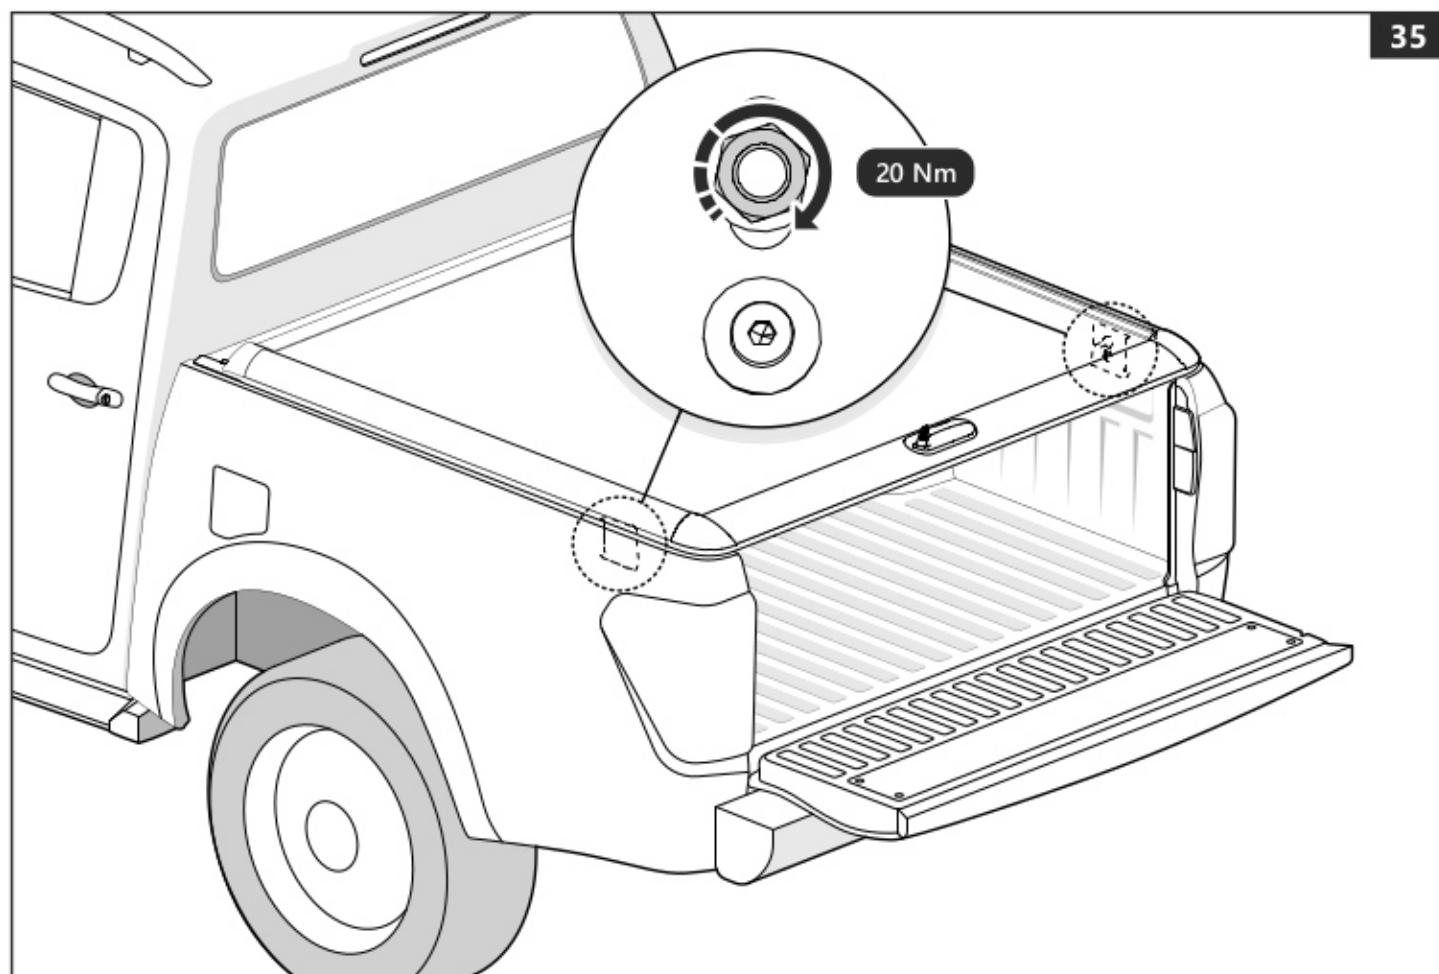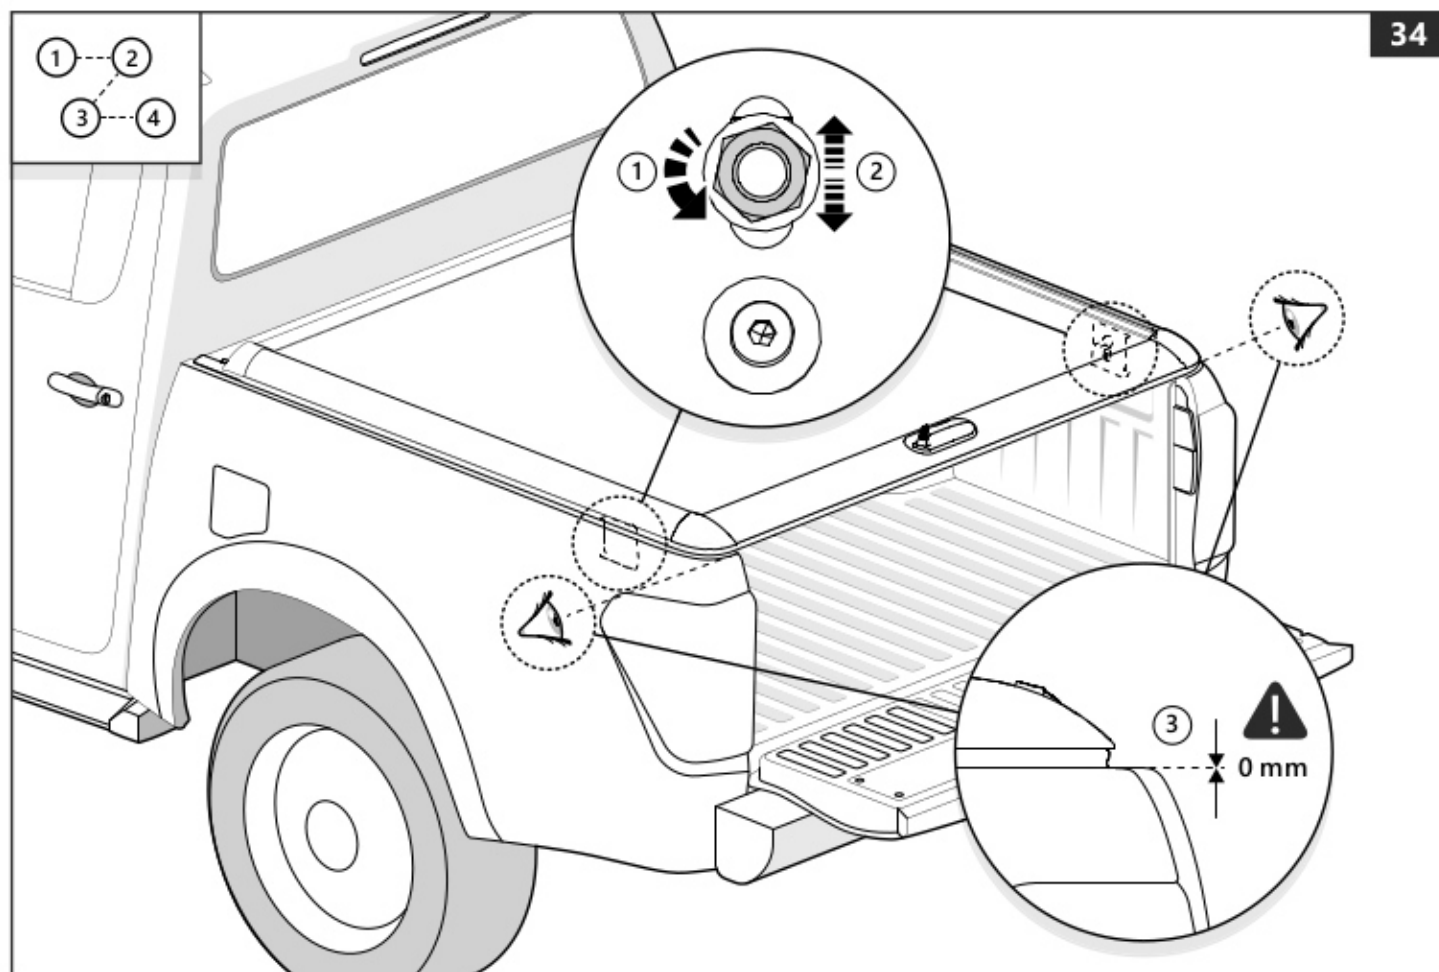

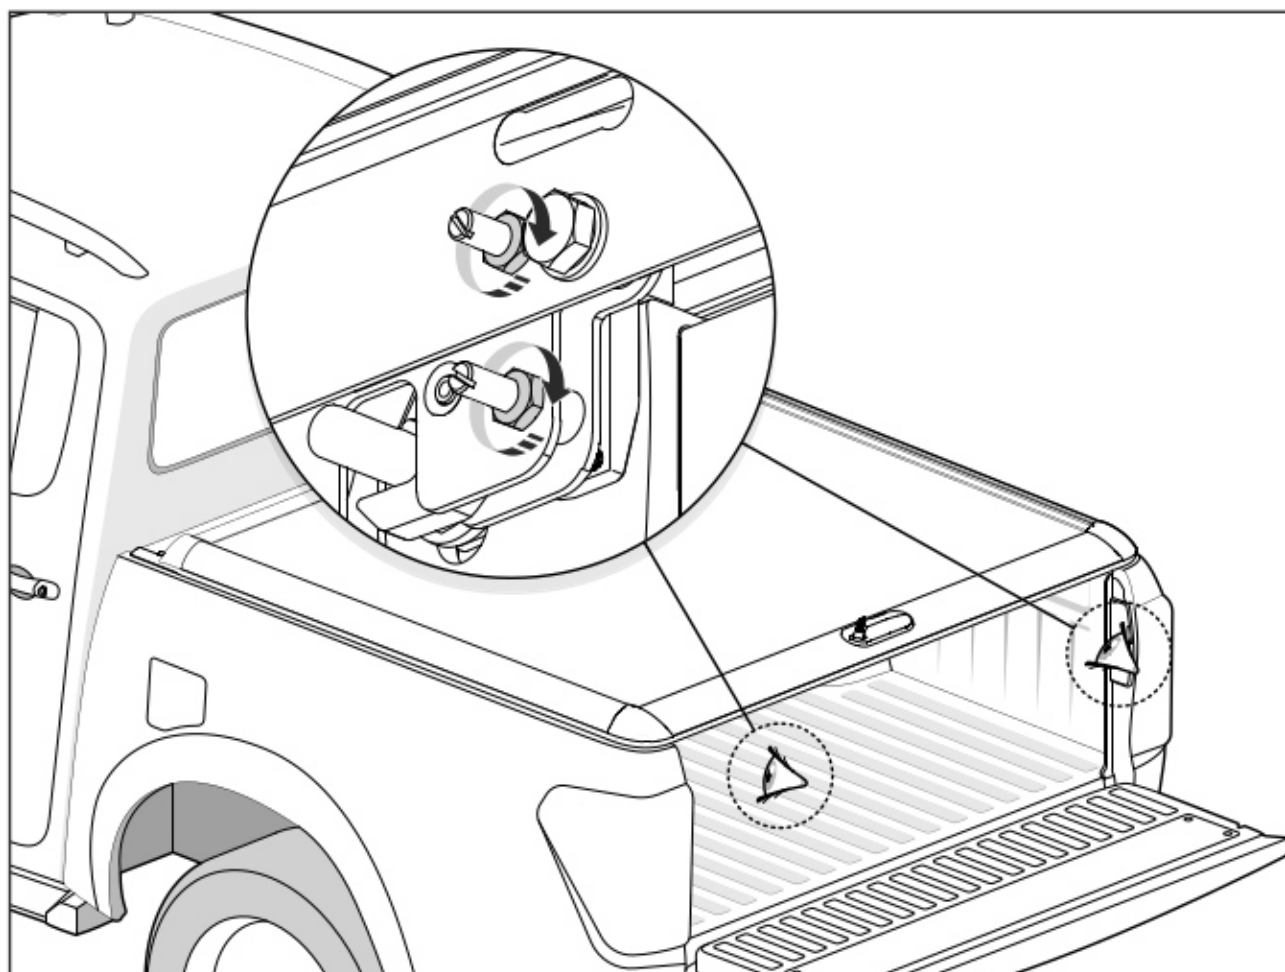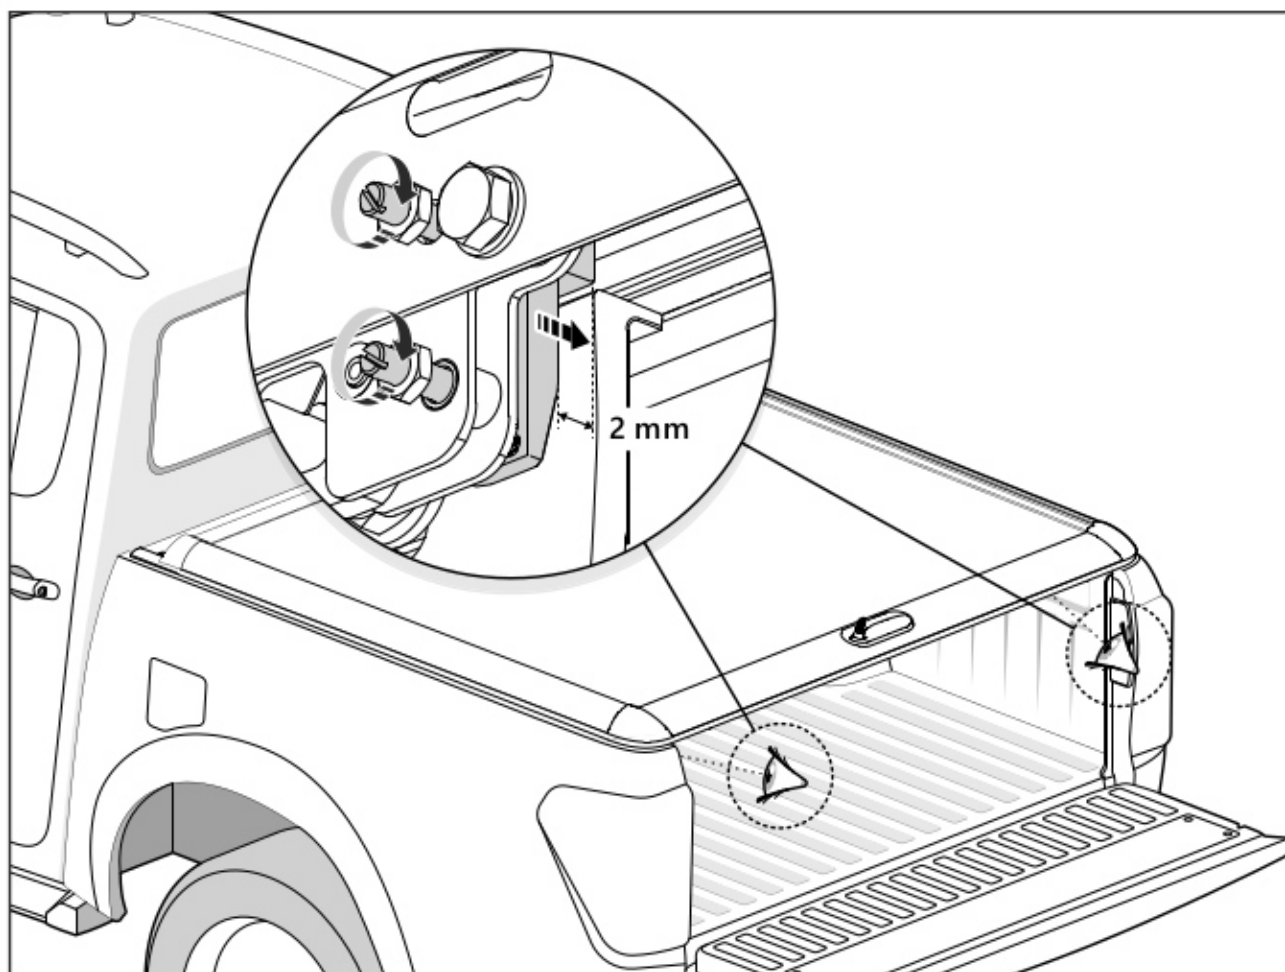



ULLSTEIN
CONCEPTS
GMBH

www.ullsteinconcepts.com



ULLSTEIN
CONCEPTS
GMBH

www.ullsteinconcepts.com



ULLSTEIN
CONCEPTS
GMBH

www.ullsteinconcepts.com



ULLSTEIN
CONCEPTS
GMBH

Ullstein Concepts GmbH

Bahnhofstraße 20
85416 Langenbach
Germany

0049 (0) 89 8099 02 880

0049 (0) 89 8099 02 881

e-mail: service@ullsteinconcepts.com



PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MT2 TO80/81/82	Toyota / 2006 - 2016	Double / Extra / Single	1 hour(s)	29 - 40 Kg
MT2 TO90/91/92	Toyota / 2015 →	Double / Extra / Single	1 hour(s)	29 - 40 Kg
MT2 IS90/91/92	Isuzu / 2006 - 2011	Double / Space / Single	1 hour(s)	29 - 40 Kg
MT2 FO90/91/92	Ford / 2011 →	Double / Super / Single	1 hour(s)	29 - 40 Kg
MT2 MI90/91/92	Mitsubishi / 2015 →	Double / Club / Single	1 hour(s)	29 - 40 Kg
MT2 MA90/91/92	Mazda / 2011 →	Double / Super / Single	1 hour(s)	29 - 40 Kg
MT2 NI90/91/92	Nissan / 2015 →	Double / King / Single	1 hour(s)	29 - 40 Kg
MT2 VW80/82	Volkswagen / 2010 →	Double / Single	1 hour(s)	29 - 40 Kg
MT2 FI90	Fiat / 2016 →	Double	1 hour(s)	29 - 40 Kg
MT2 RE 90	Mercedes / 2017+	Double	1 hour(s)	29 - 40 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare