





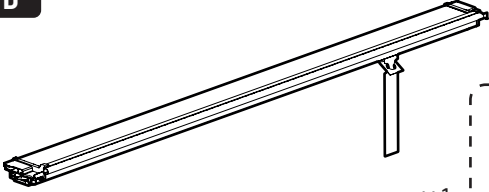

MOUNTAIN TOP[®] EVOe

Installation manual





DOWNLOAD PDF

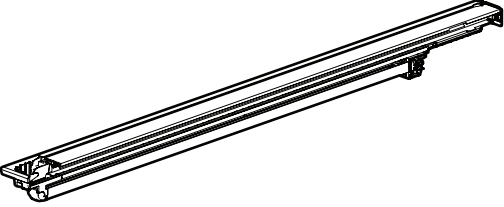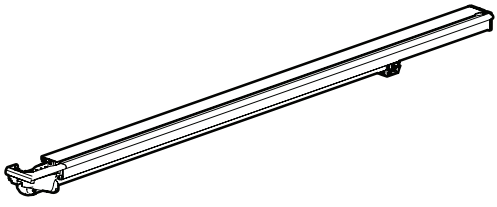
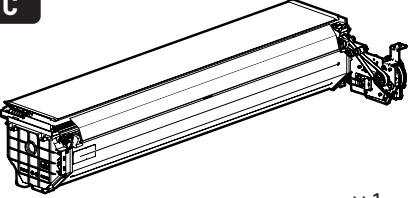










Parts





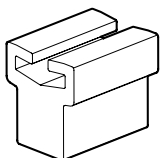
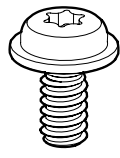
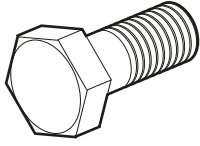
| | |
|--|---|
| <p>A</p>  <p>x1</p> | <p>B</p>  <p>x1</p> |
| <p>C</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p>X2</p>  <p>x2</p> </div> | <p>D</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p>Y2</p>  <p>x1</p> </div> |









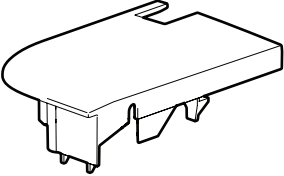
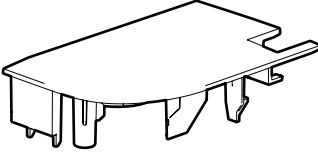
Kit


| | |
|--|--|
| <p>E</p>  <p>LEFT x1</p> | <p>F</p>  <p>RIGHT x1</p> |
|--|--|

Kit
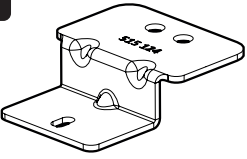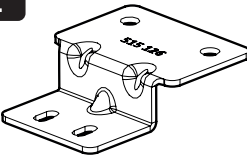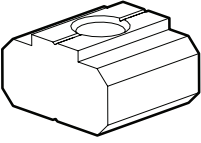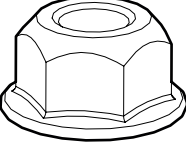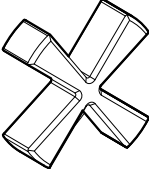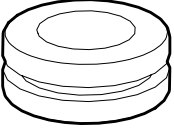
| | | | |
|---|---|--|---|
| <p>G</p>  <p>x1</p> | <p>H</p>  <p>x1</p> | <p>I</p>  <p>x1</p> | <p>J</p>  <p>x1</p> |
| <p>K</p>  <p>Rap Cab: x 0 Double Cab: x 2</p> | <p>L</p>  <p>Rap Cab: x 4 Double Cab: x 2</p> | <p>M</p>  <p>M8x30 x 18</p> | <p>N</p>  <p>Rap Cab: x 16 Double Cab: x 14</p> |
| <p>O</p>  <p>x6</p> | <p>P</p>  <p>x6</p> | <p>Q</p>  <p>x2</p> | <p>R</p>  <p>x1</p> |

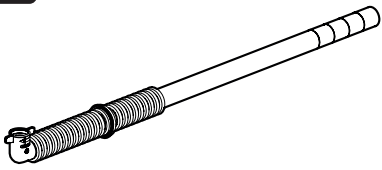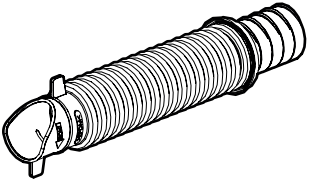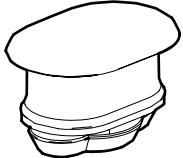
| Kit | | | |
|--|--|--|--|
| S  x2 | T  x2 | U  x2 | |
| V  M6x30 x2 | W  Rap Cab: x 7 Double Cab: x 5 | X  M6x16 Rap Cab: x 6 Double Cab: x 4 | Y  M6x14 x1 |
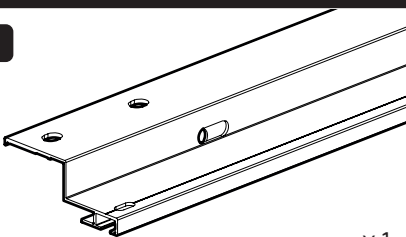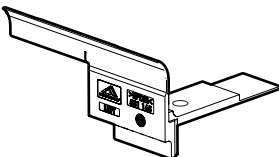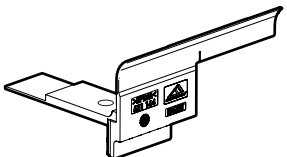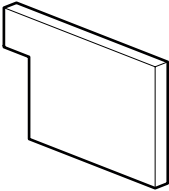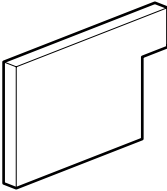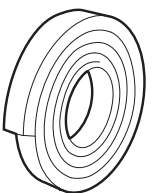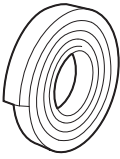
| Kit | | | |
|--|--|---|---|
| A2  x1 | B2  x1 | C2  x1 | |
| D2  x1 | E2  x1 | F2  x1 | |
| G2  x1 | H2  6x25mm x2 | I2  6x10mm x1 | J2  M5x14 x2 |
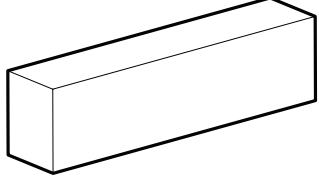
| Kit |
|---|
| K2  20x25x100mm x2 |


LED Kit

M2

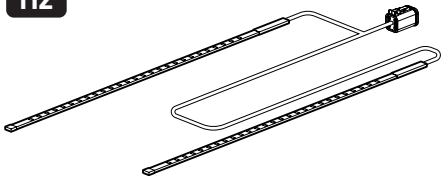


x1

N2

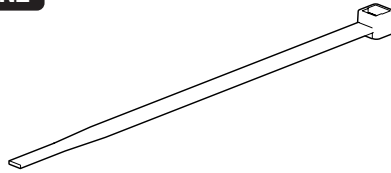

x6


O2

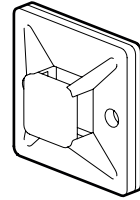

x6

Power supply kit

P2

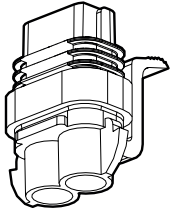


x1

Q2




x1

R2

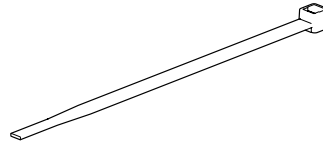

x16


S2



x1


Kit

T2

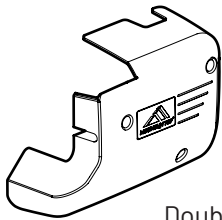

Double Cab: x1


U2



M5x10

Double Cab: x3

V2

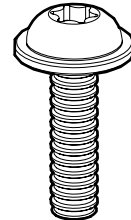


M6x20

x2

Kit


W2

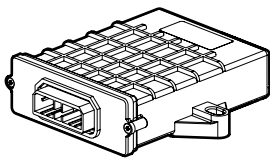

x1

Kit


Z2

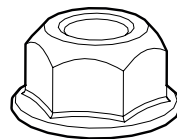

M6

x2


Z3

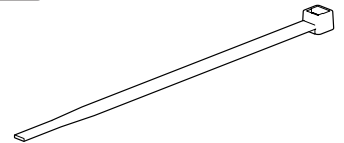

x10


Kit for Rap Cap

A3

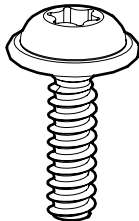


x2

B3

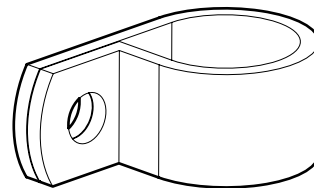


x2

Kit

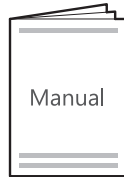

Manual


x1

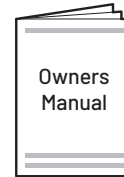

Owners
Manual


x1

Tools needed

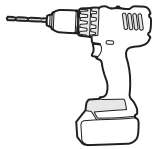

Ø3.5 + Ø10 MM



1 - 25 Nm

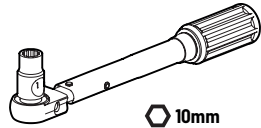






10mm
T20, T30, T40




Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

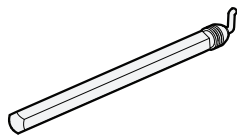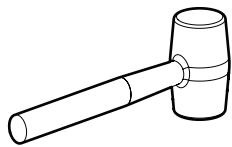



Silicone (RTV)

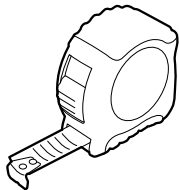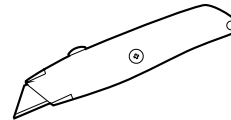

Applying rust protection

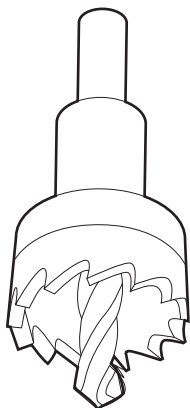

Ø18 / Ø30 / Ø40 mm

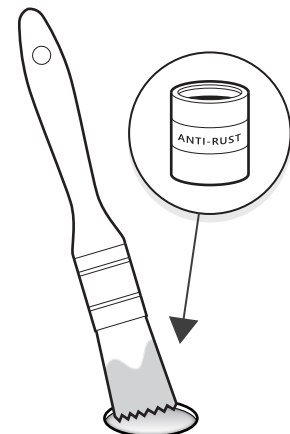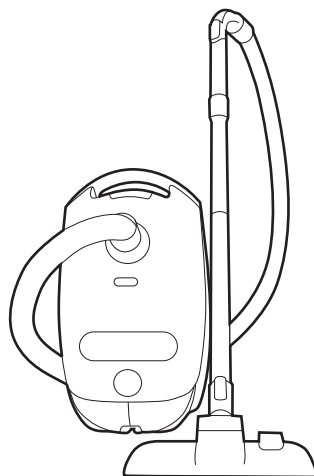




**If sheet metal is scratched during installation,
apply rust protection to damaged areas**




**Tie must not be attached to AC lines
(AC lines are the metal pipes in the engine bay)**






**Remove mass damper on tub
headboard prior to installing
Rollershutter (only applicable to
RAP CAB Variants)**

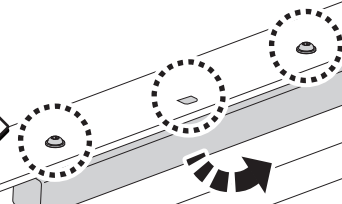

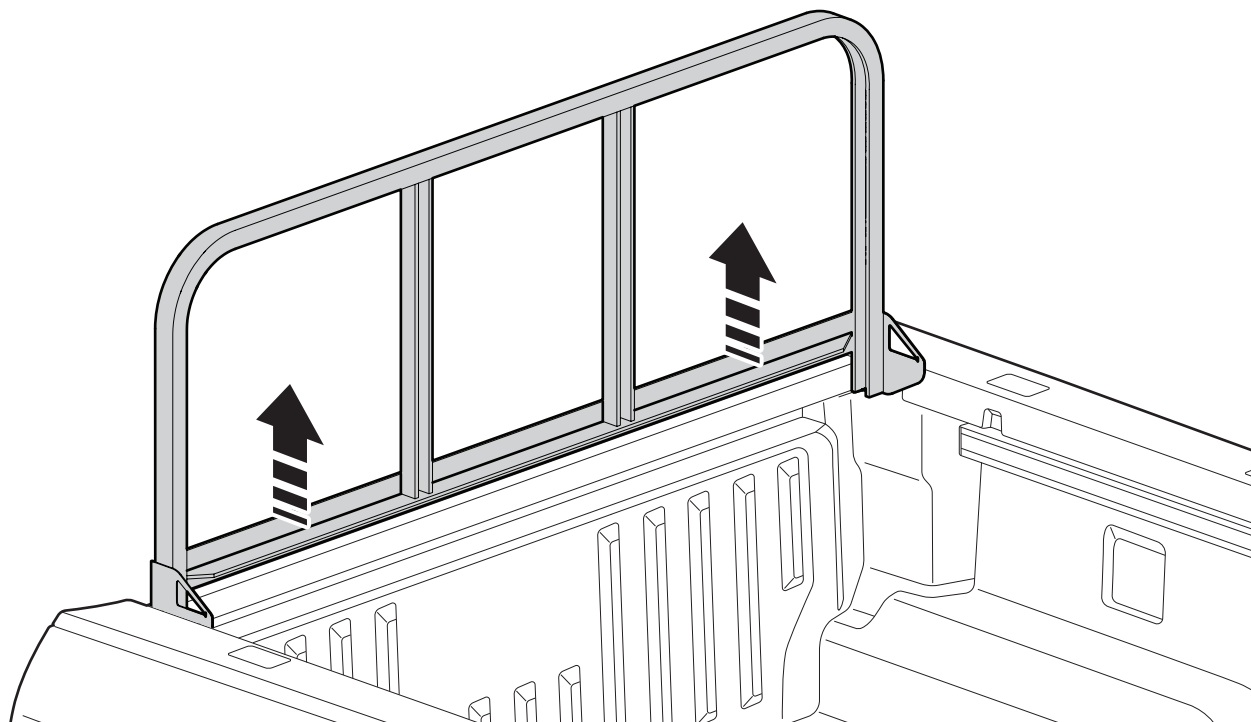


Rollershutter not compatible with load rest bar - part cannot be re-installed once Rollershutter have been installed (store parts)

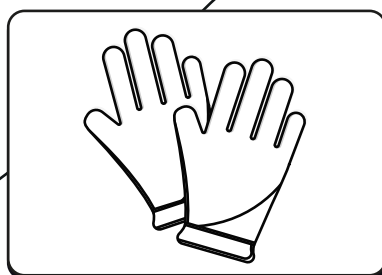


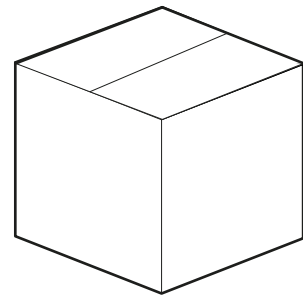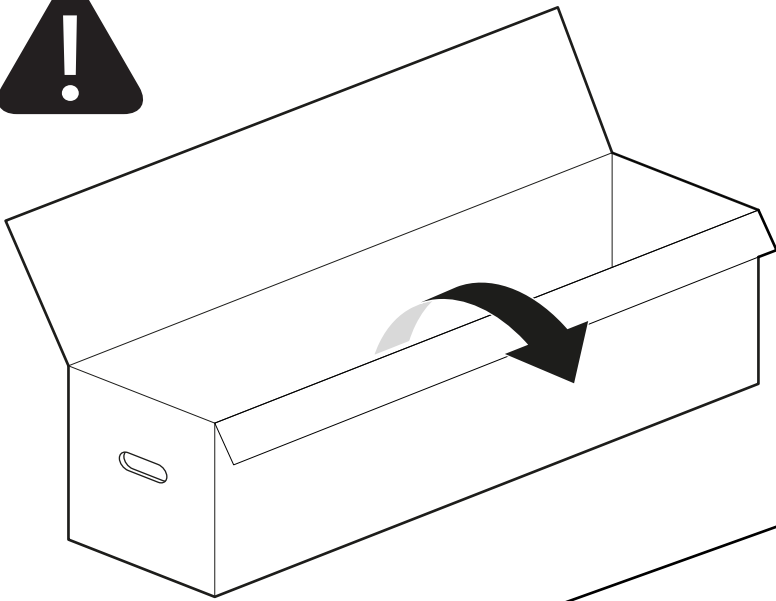


C

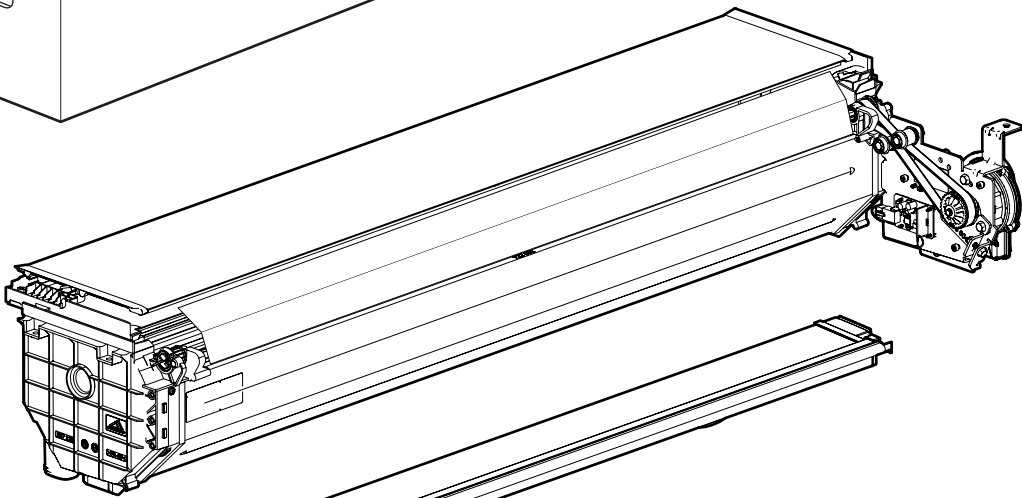


D

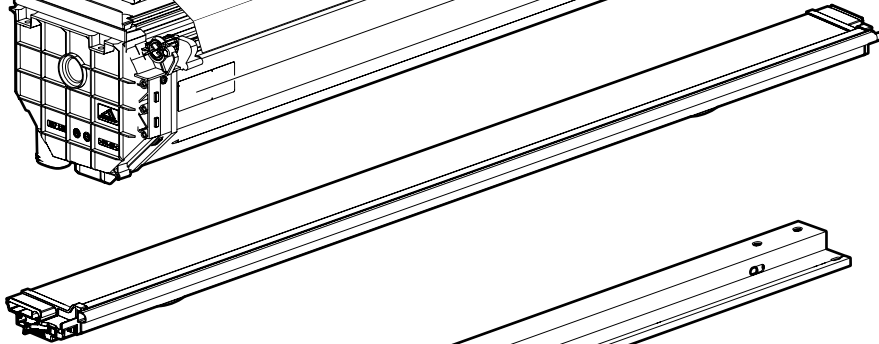


A2

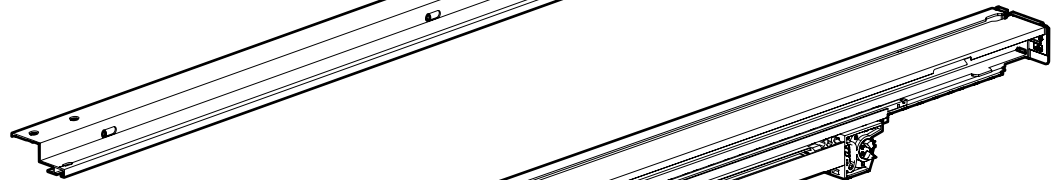

A

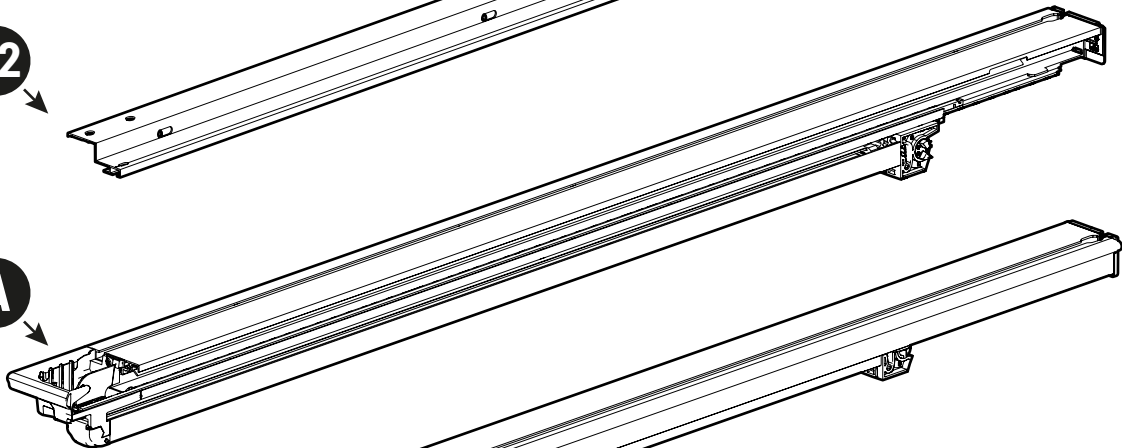


B

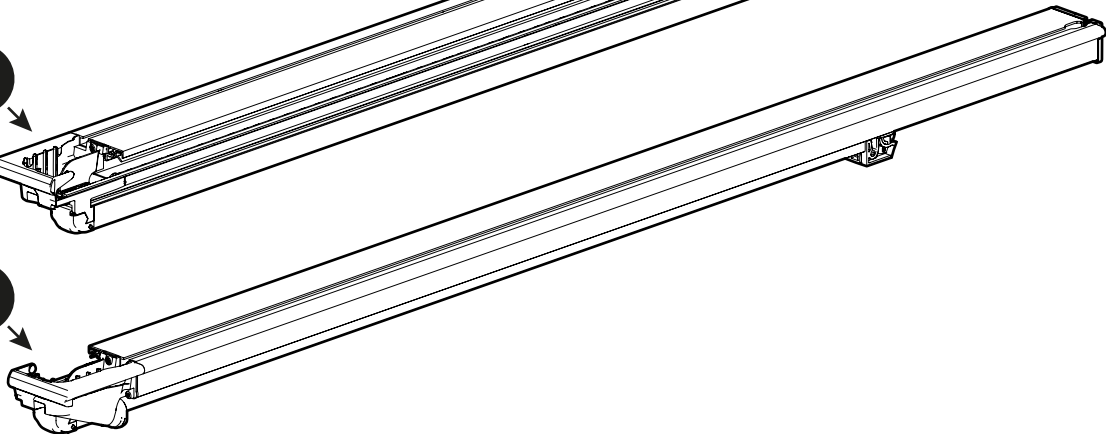


 Water & sponge




2

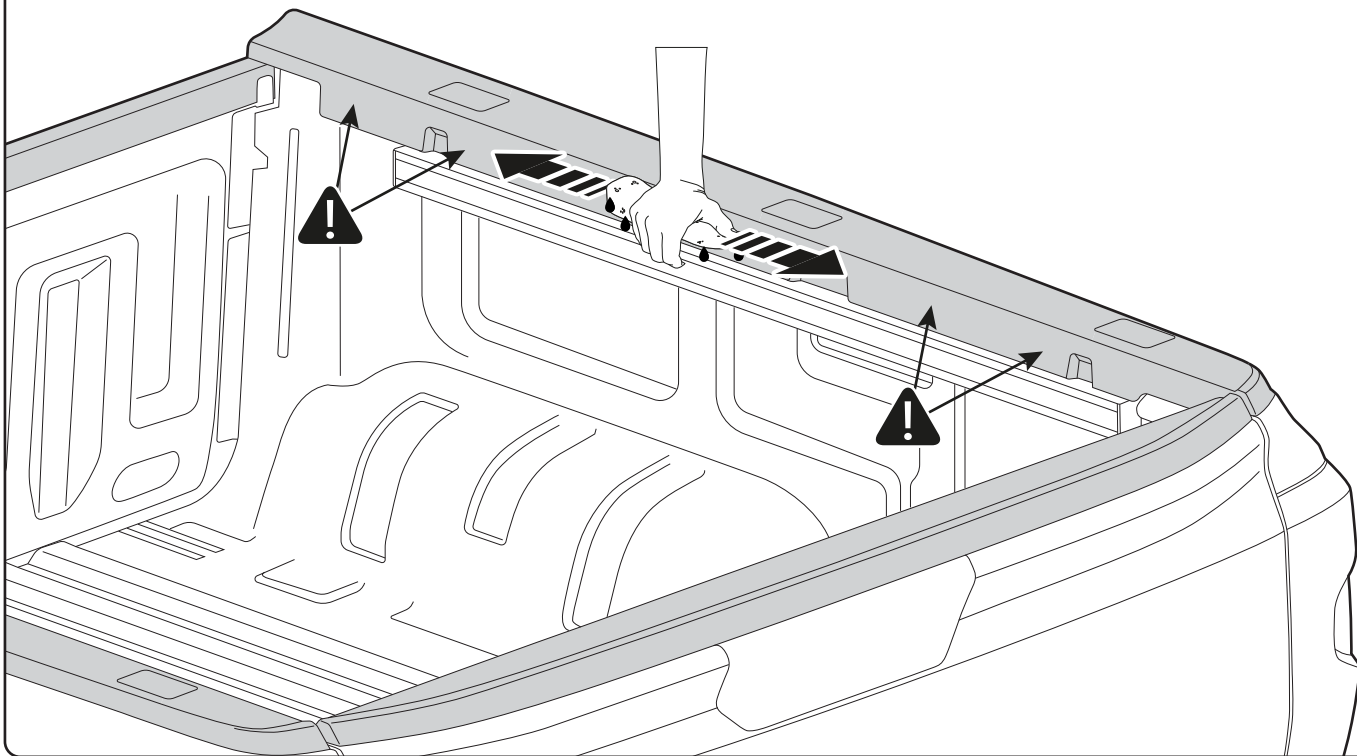


3

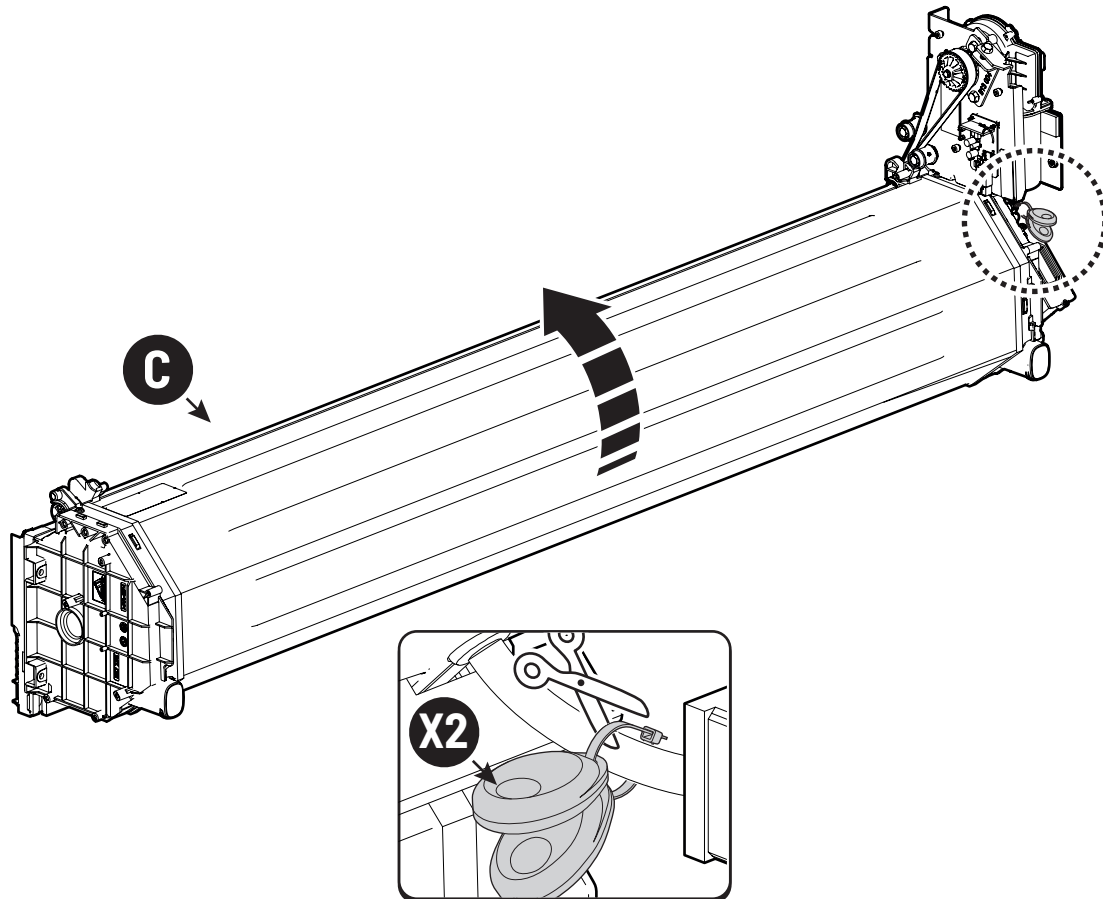

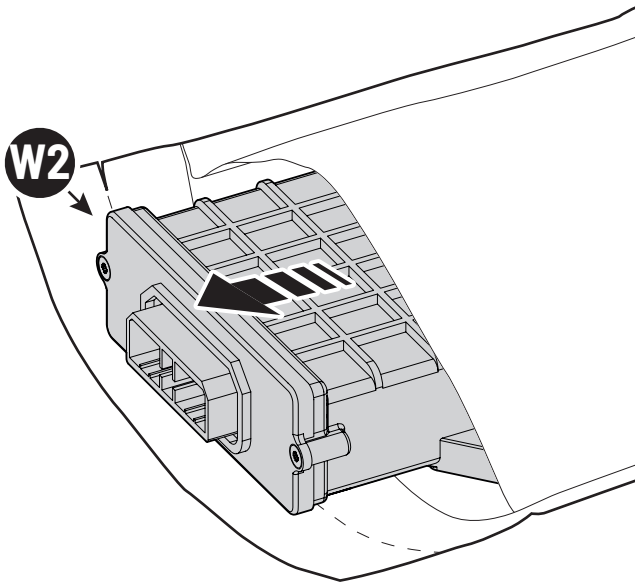


1



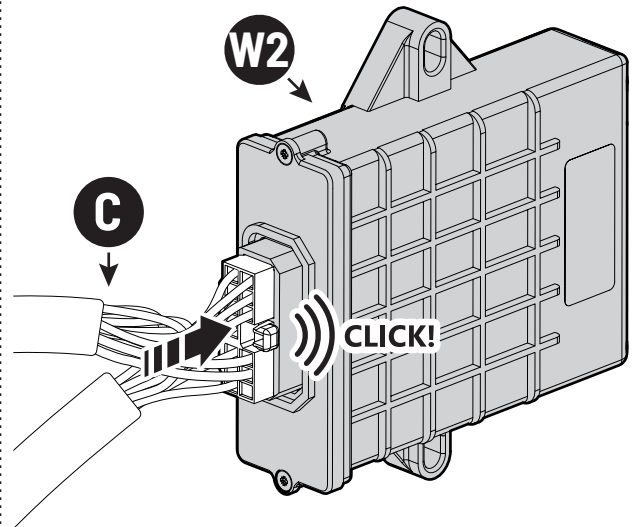




2

! ONLY FOR DOUBLE CAP


4mm **2,4Nm**

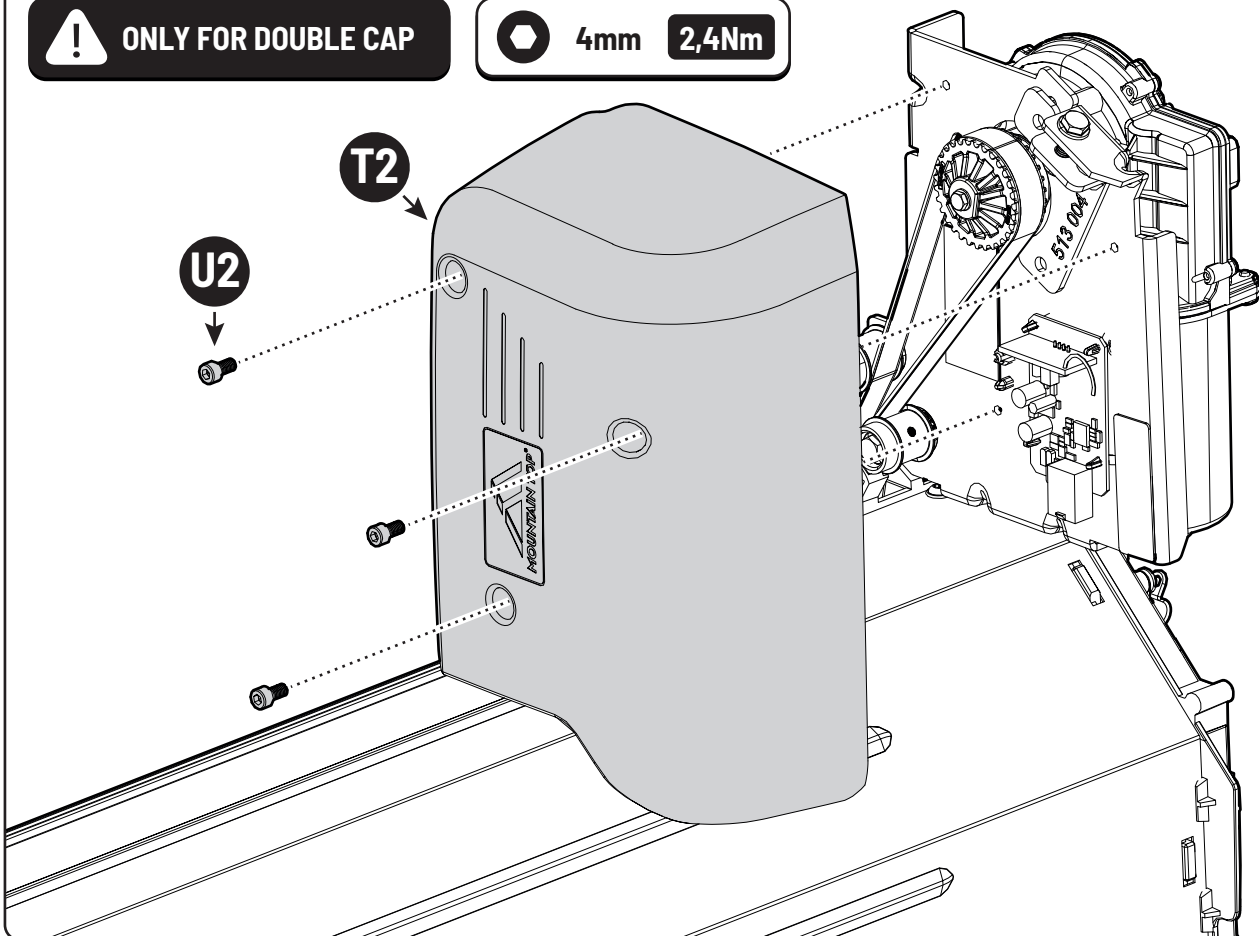

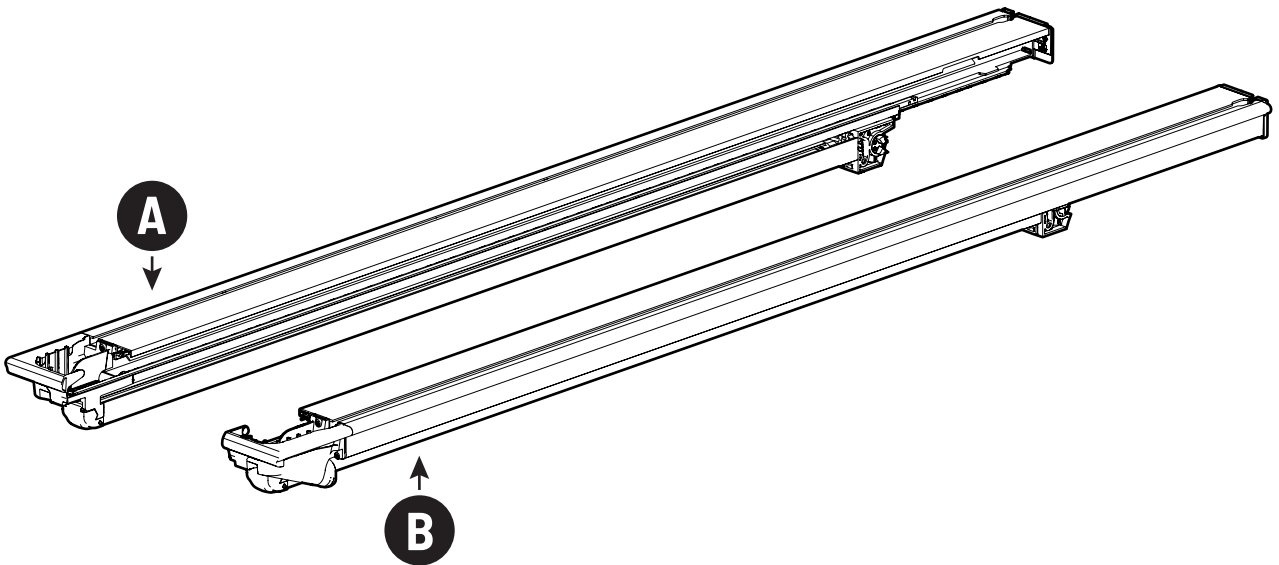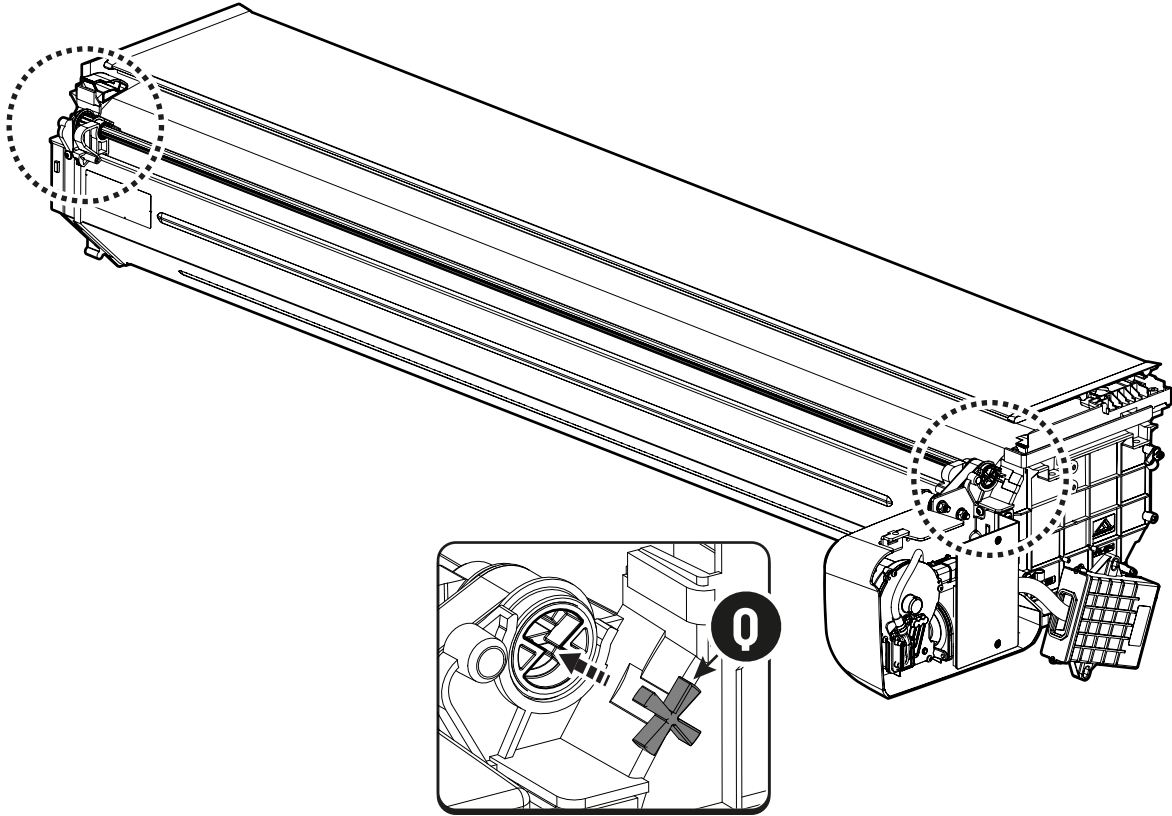


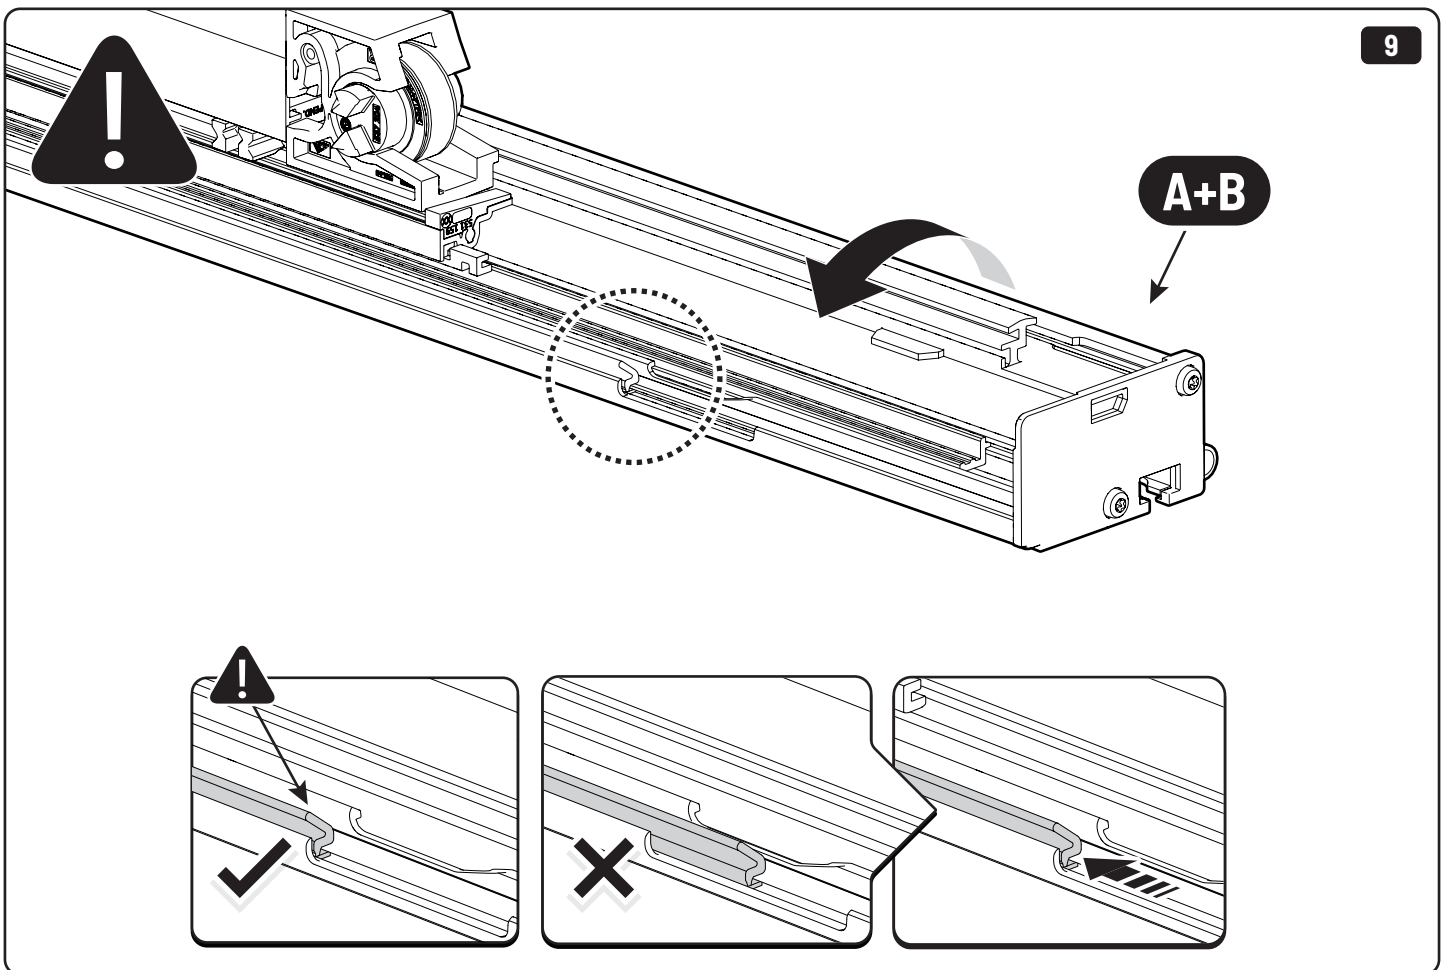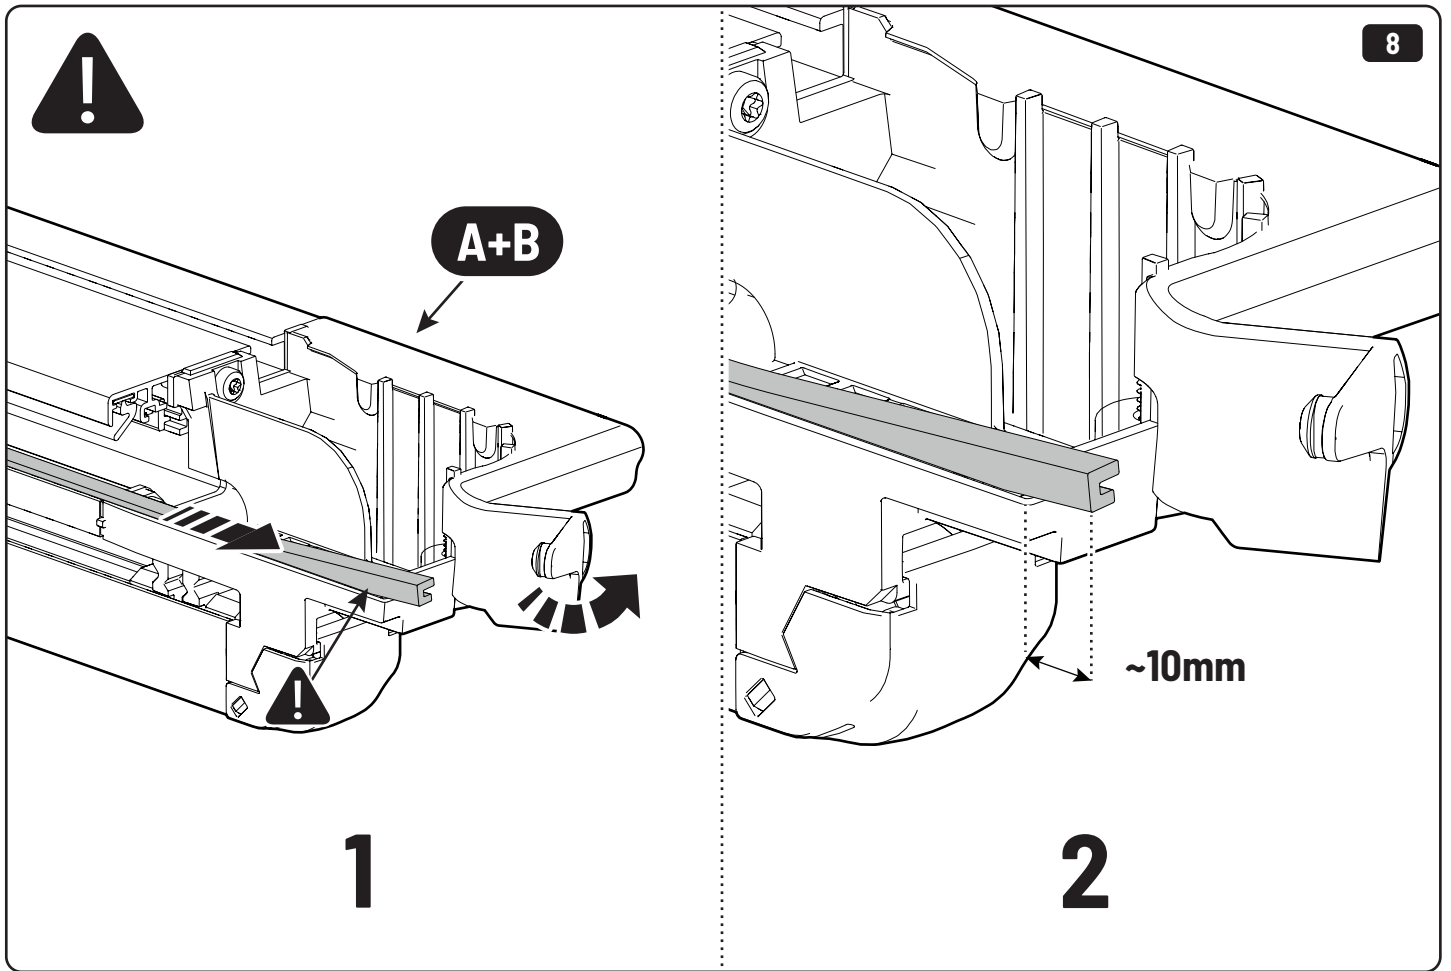



! ONLY FOR DOUBLE CAB



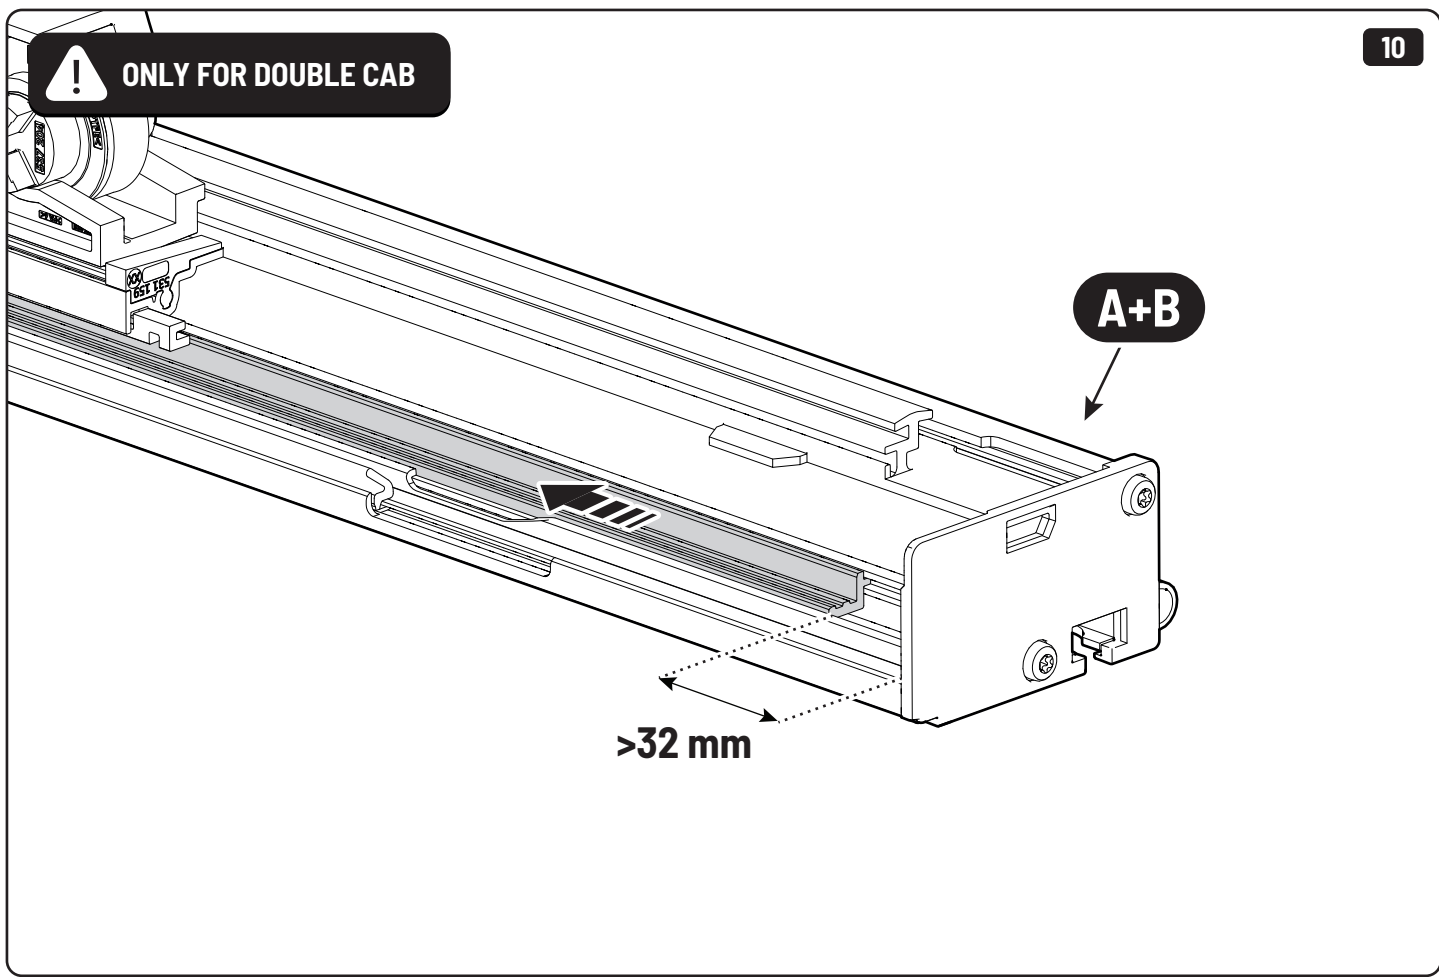




! ONLY FOR RAP CAB

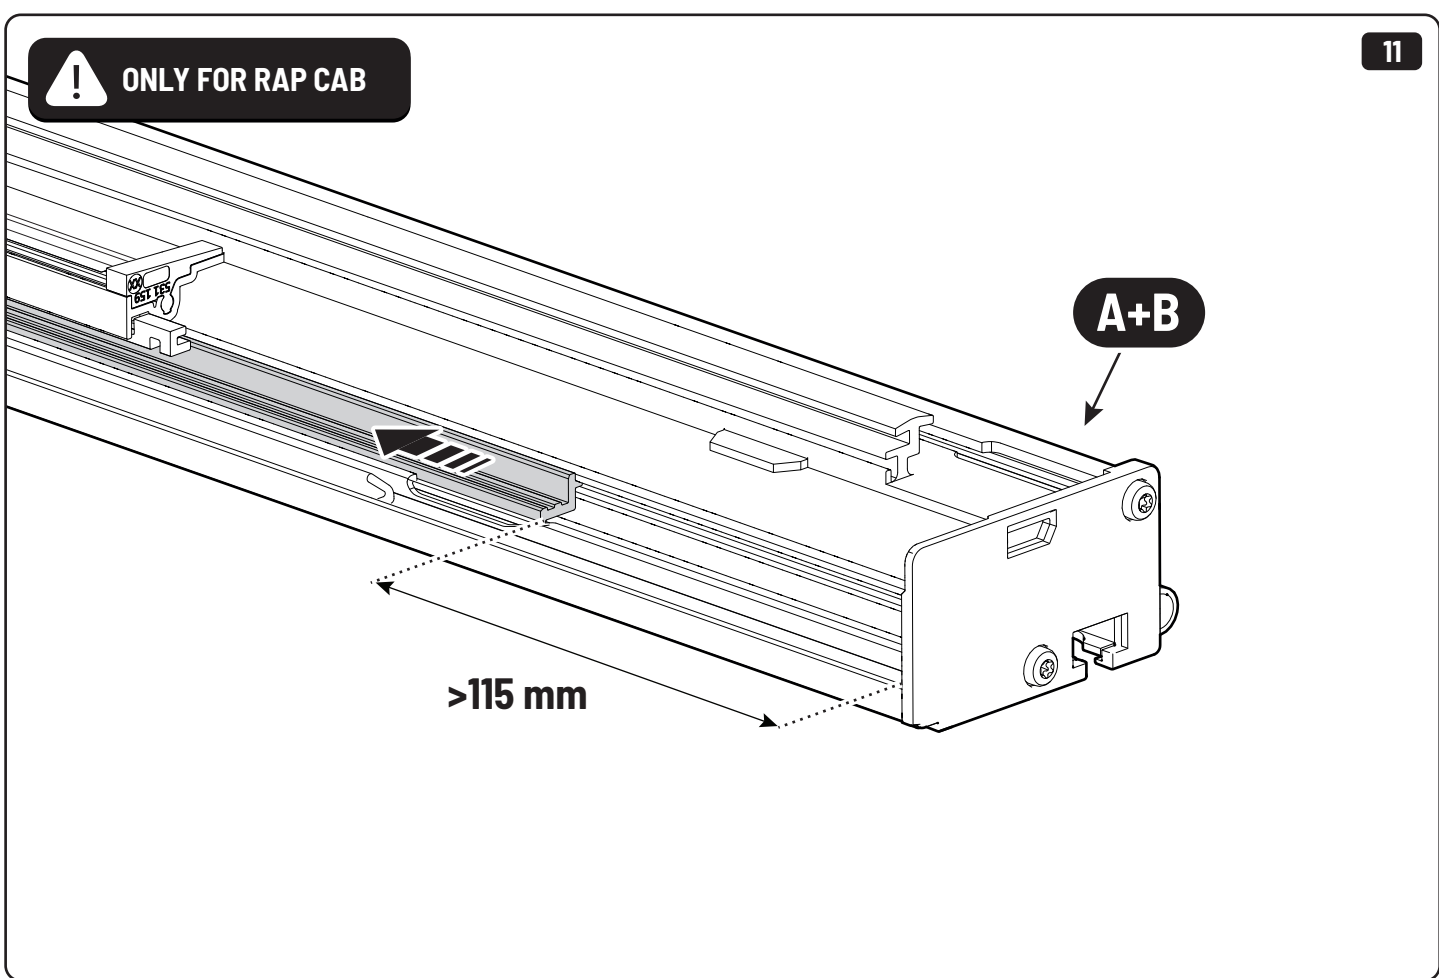

! Rap Cab: **W** x3

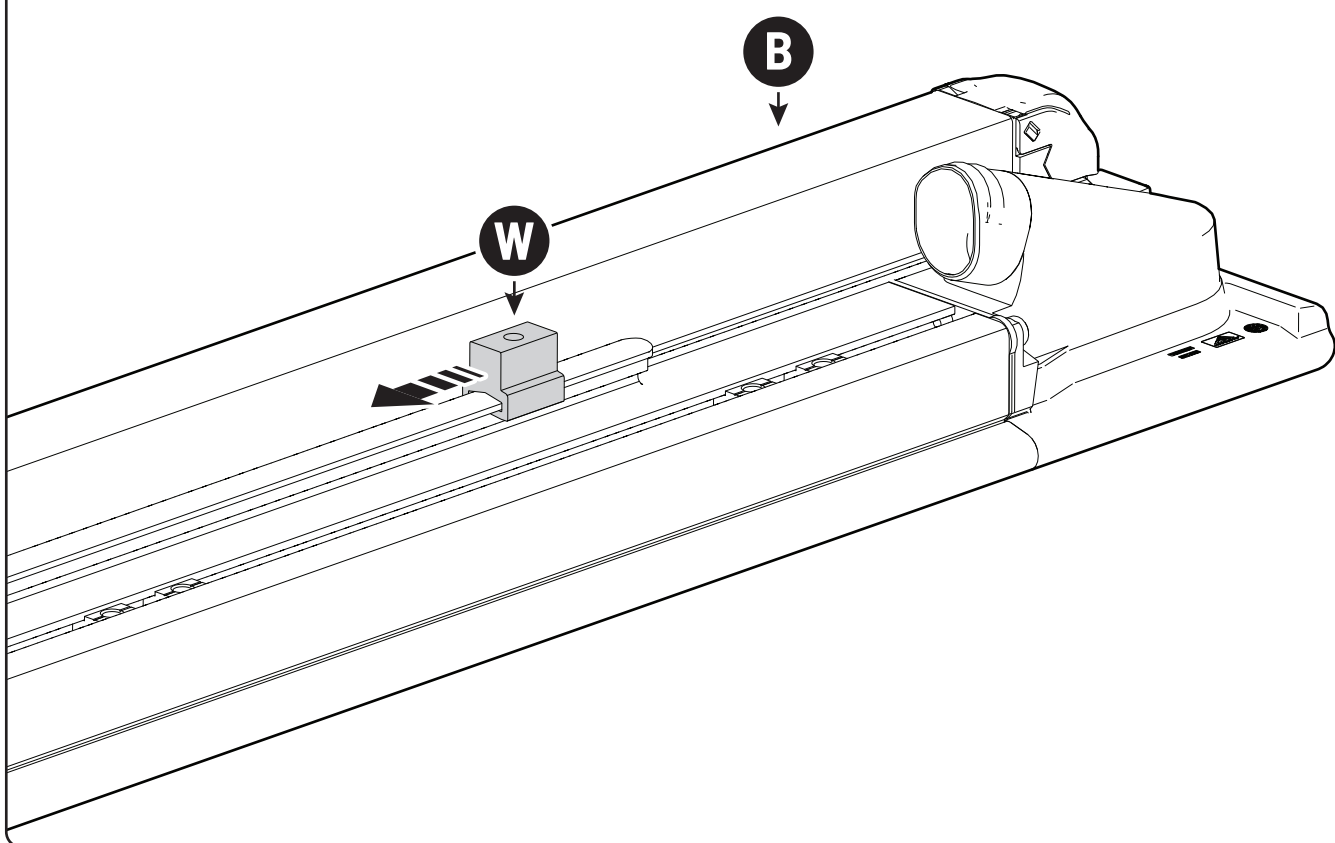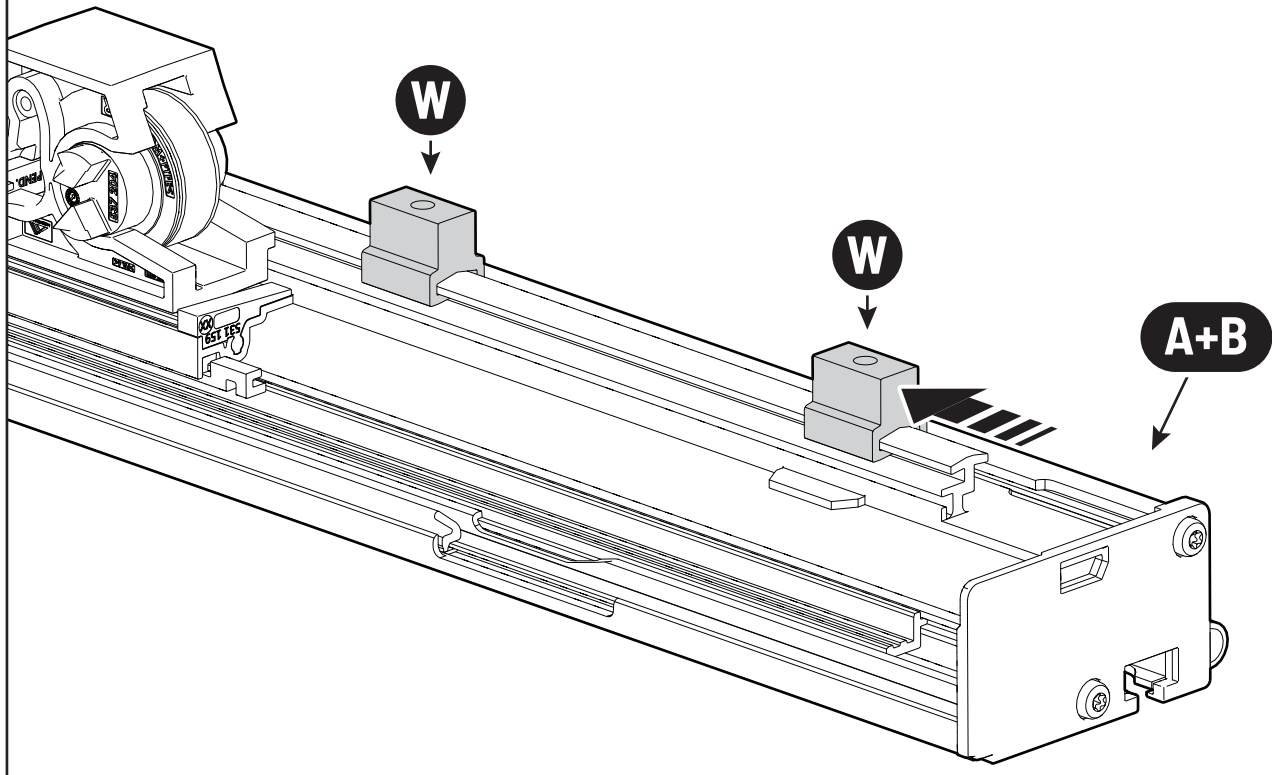


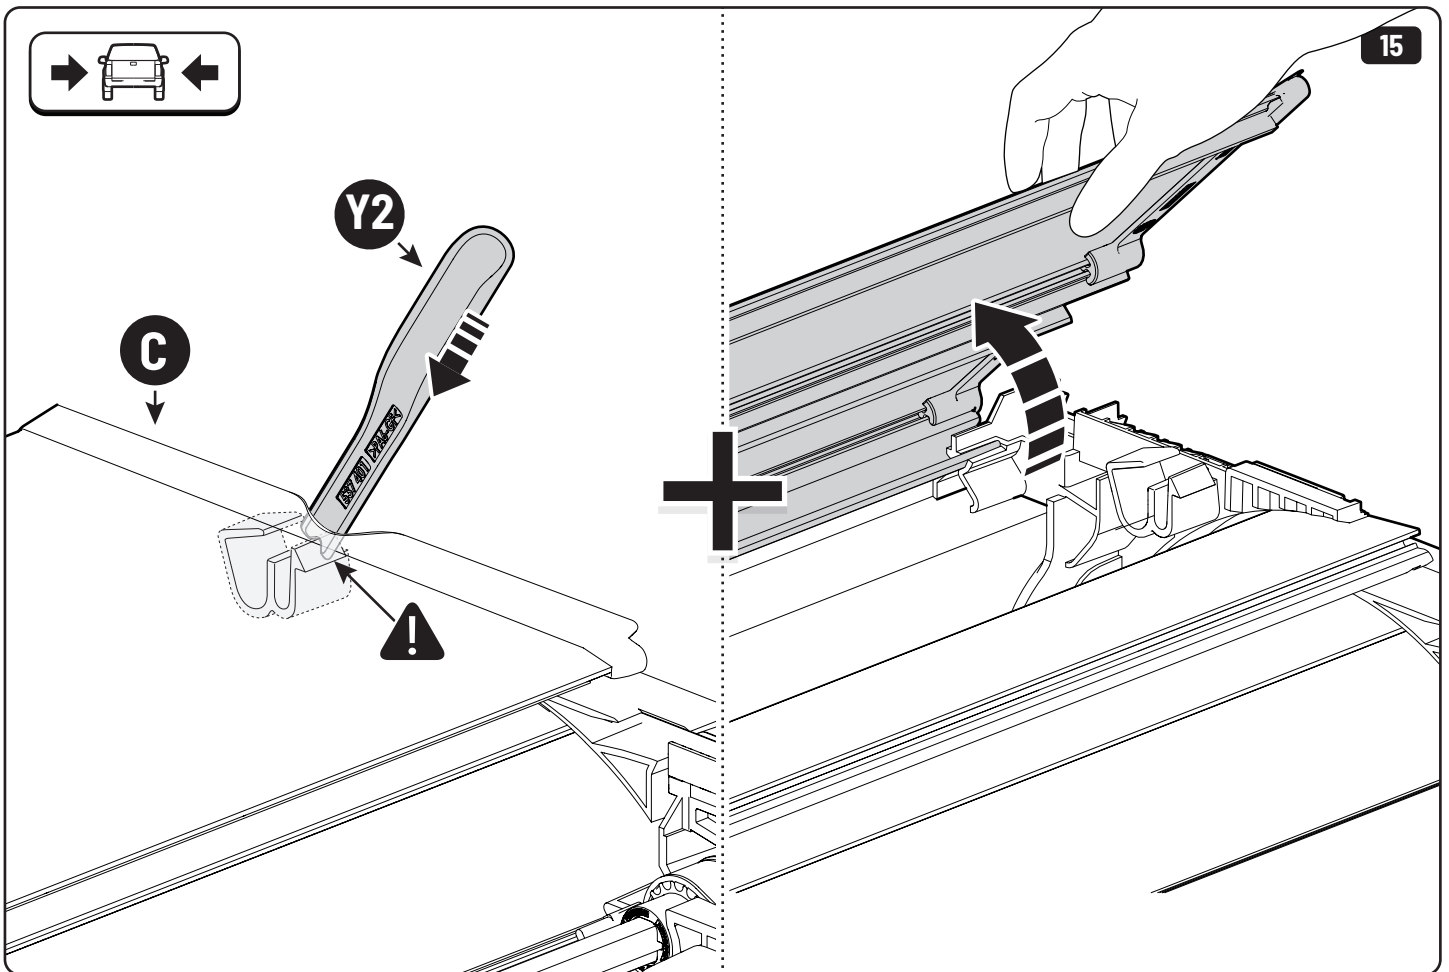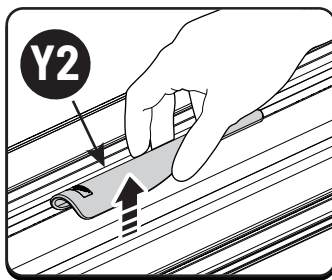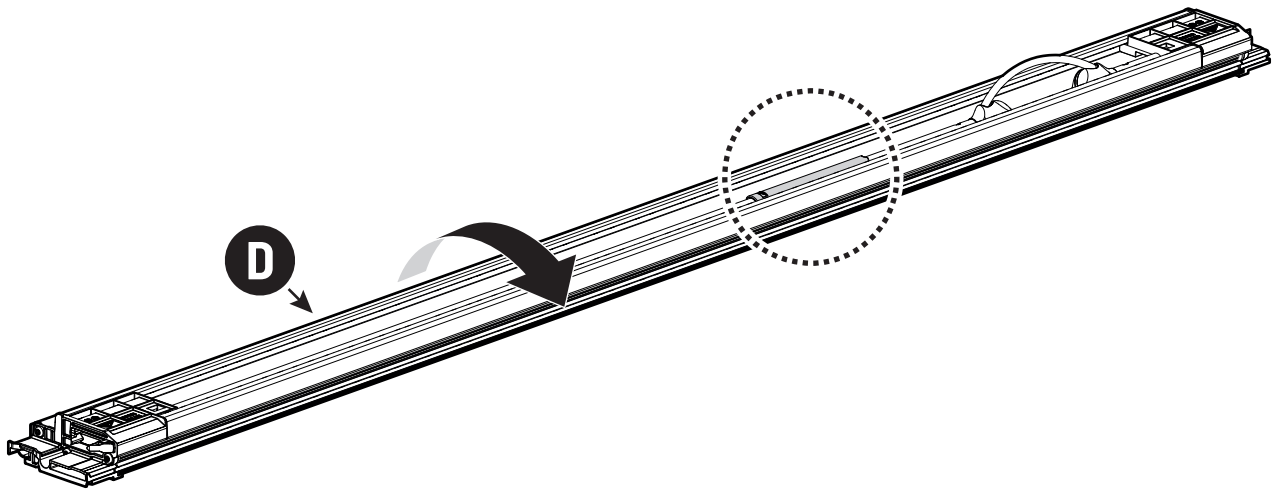

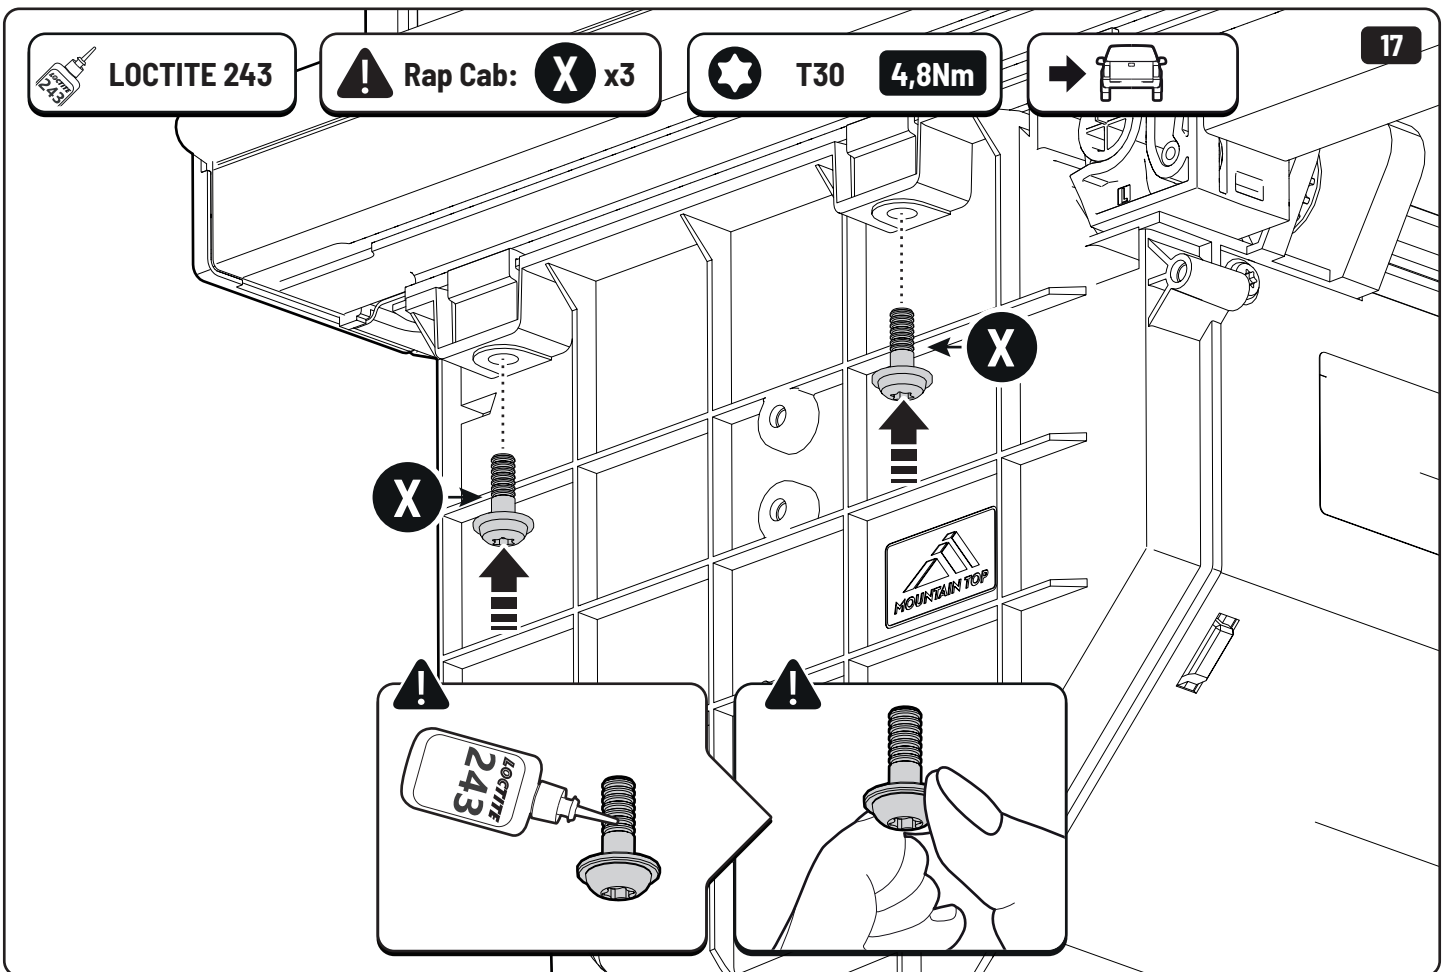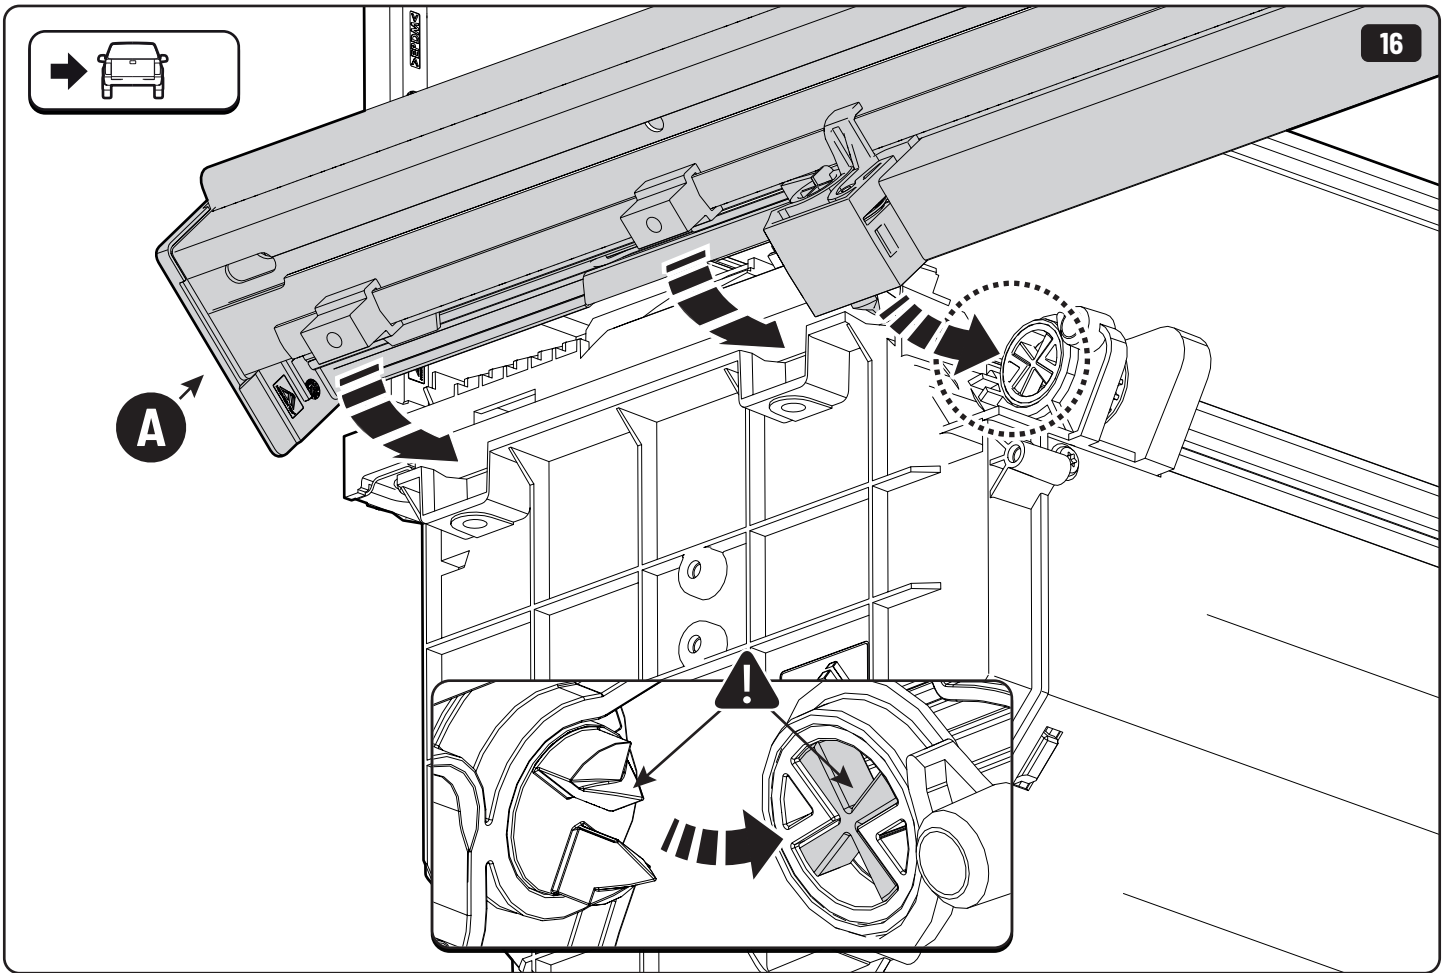








B
↓


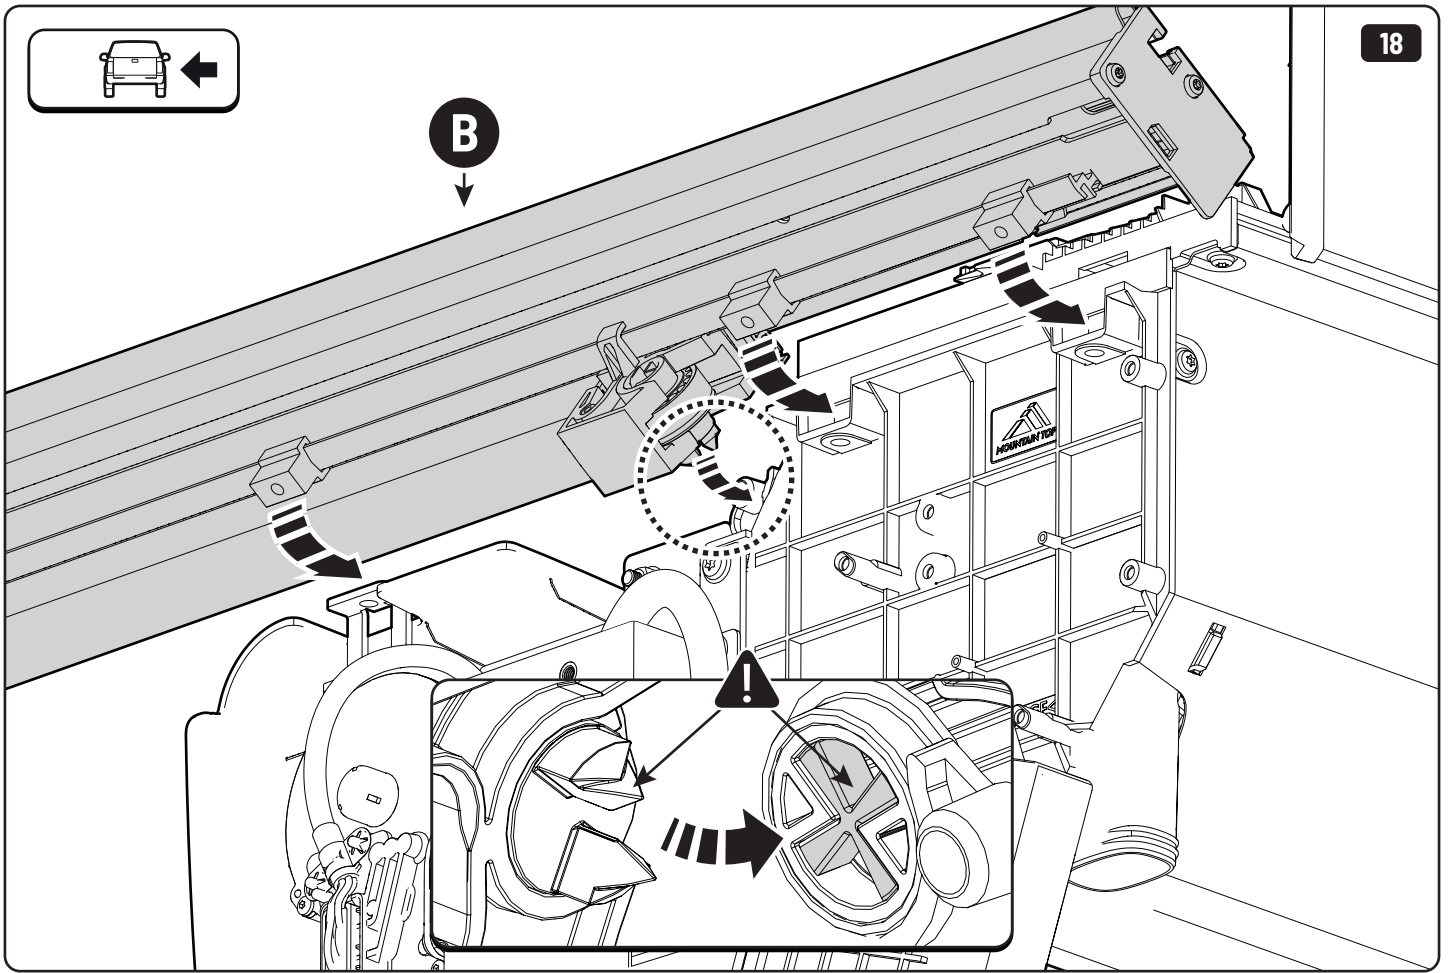


 **LOCTITE 243**

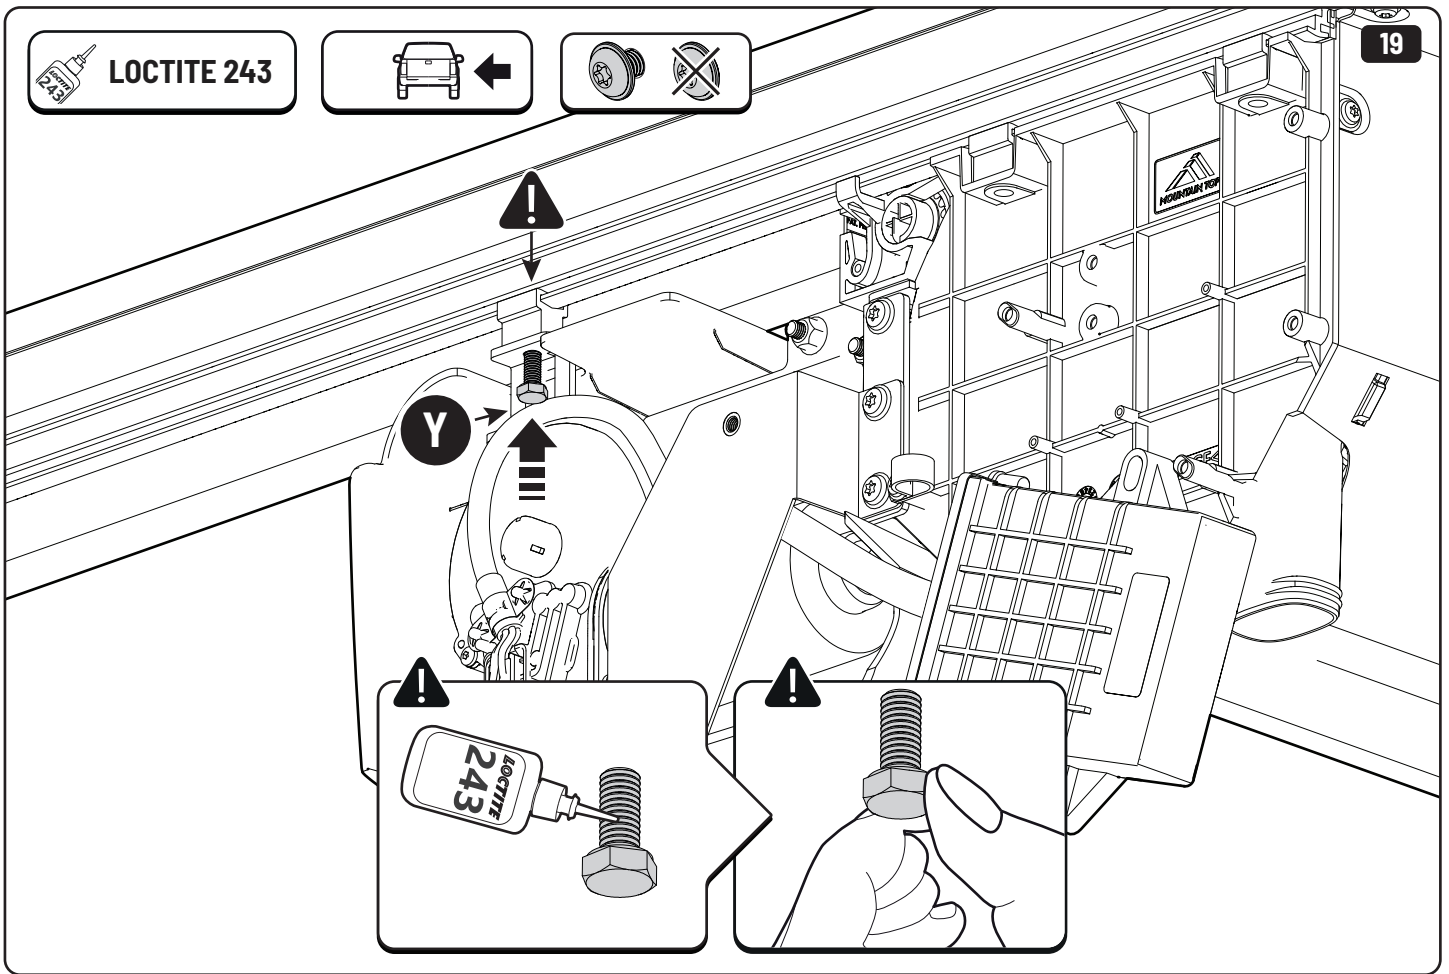

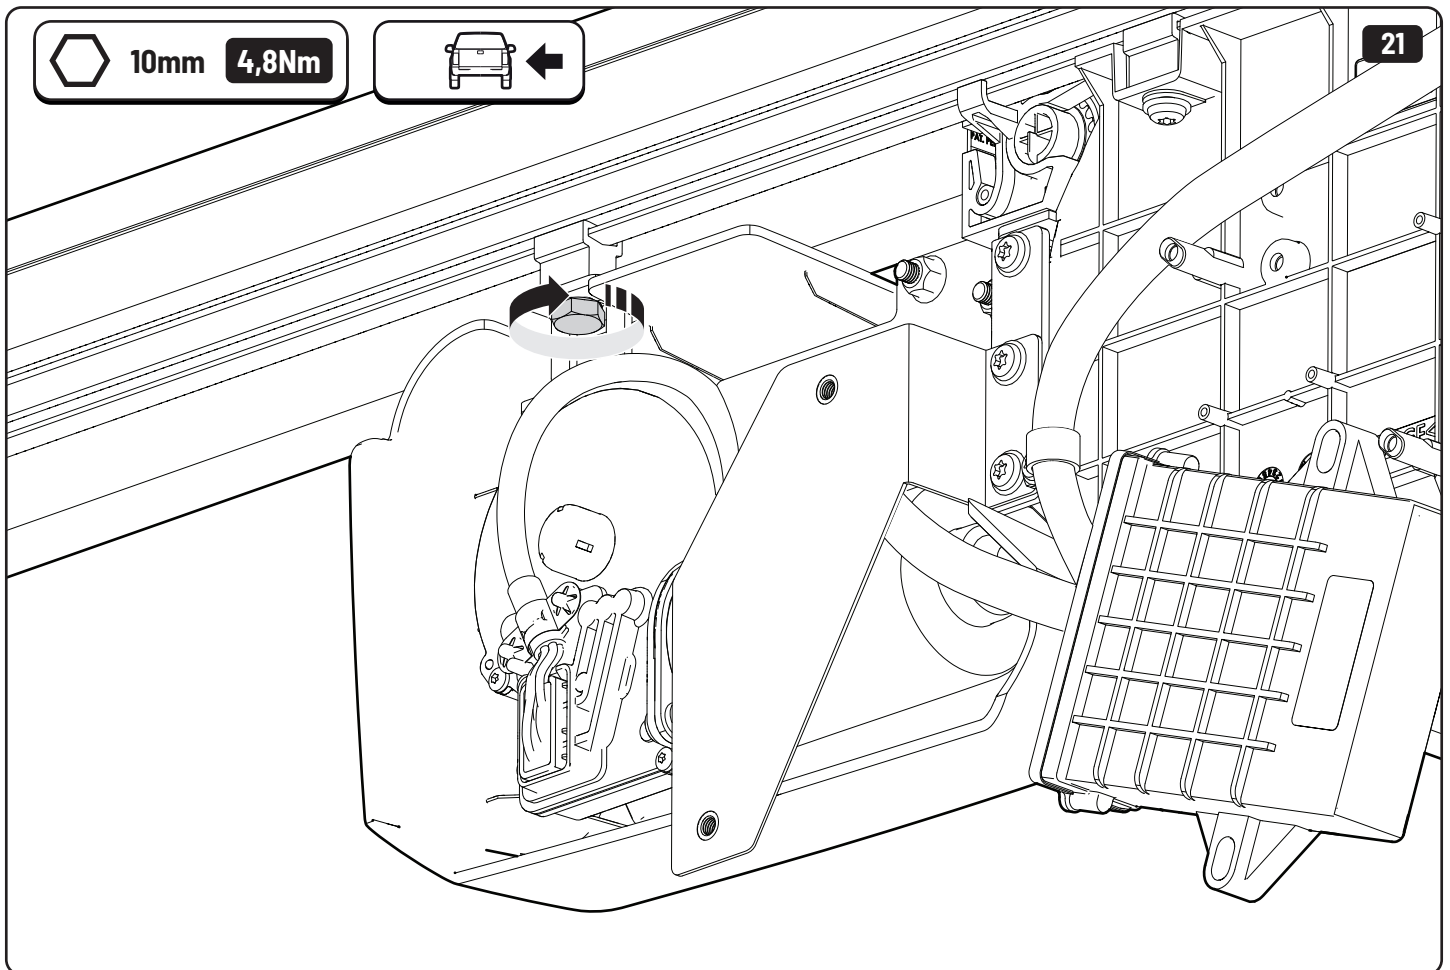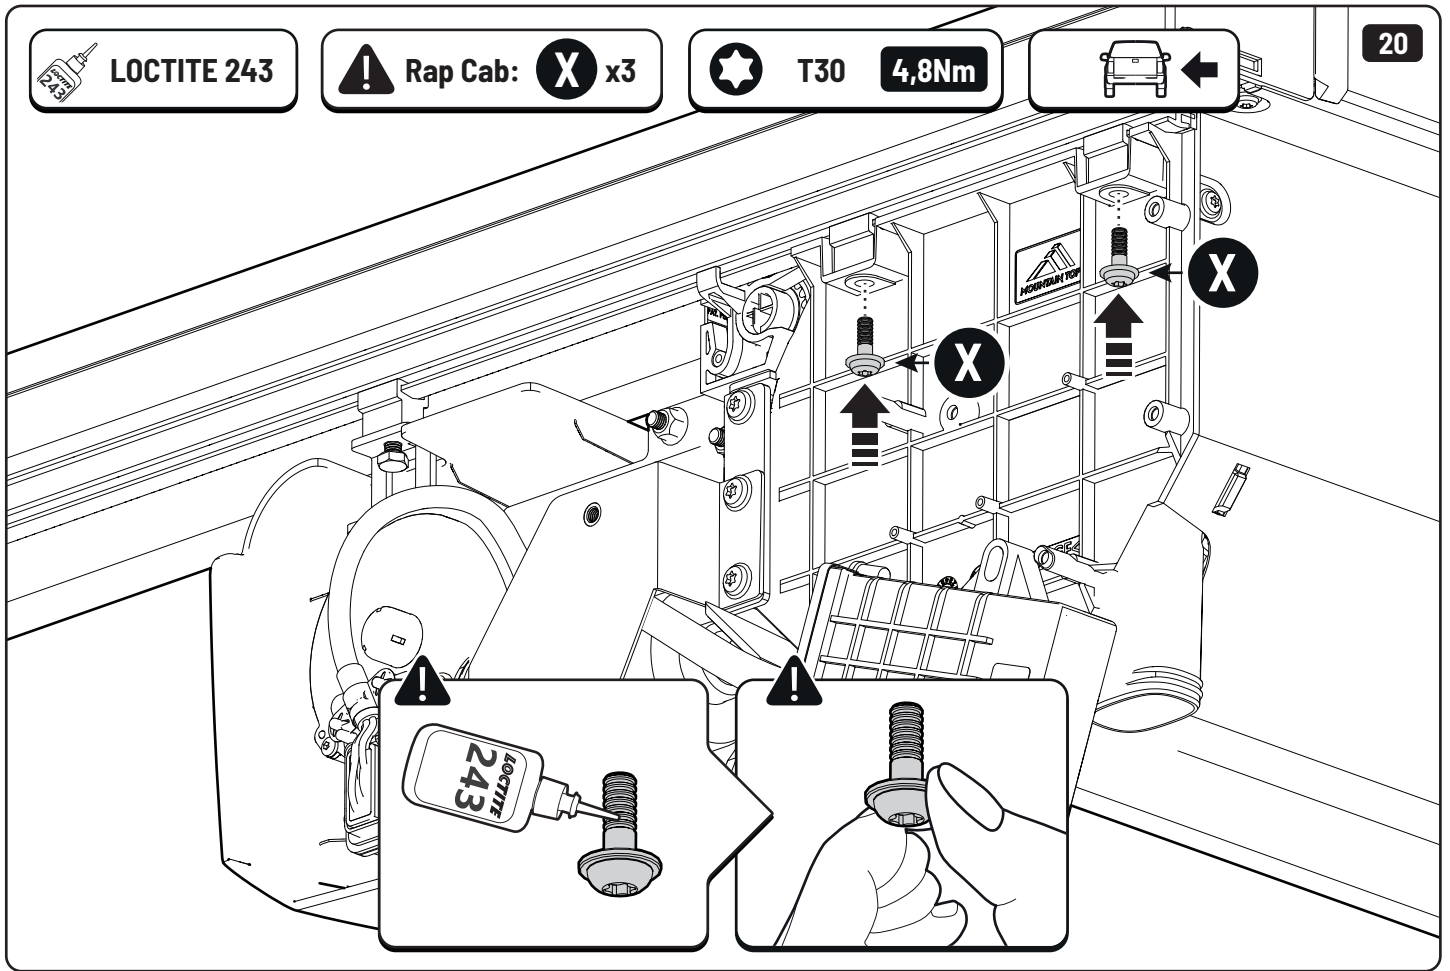


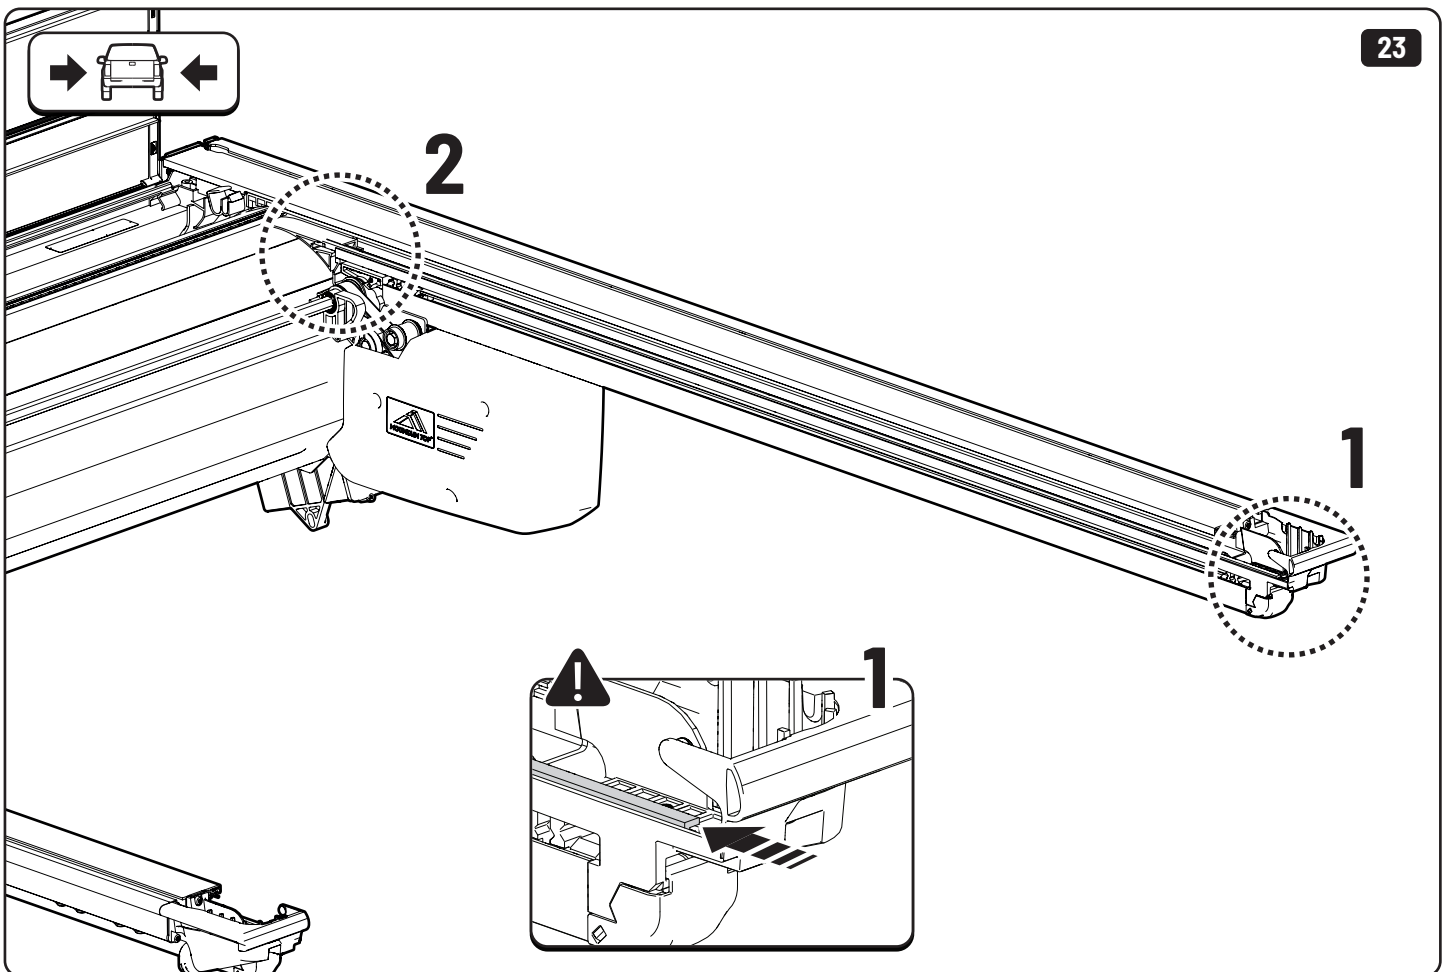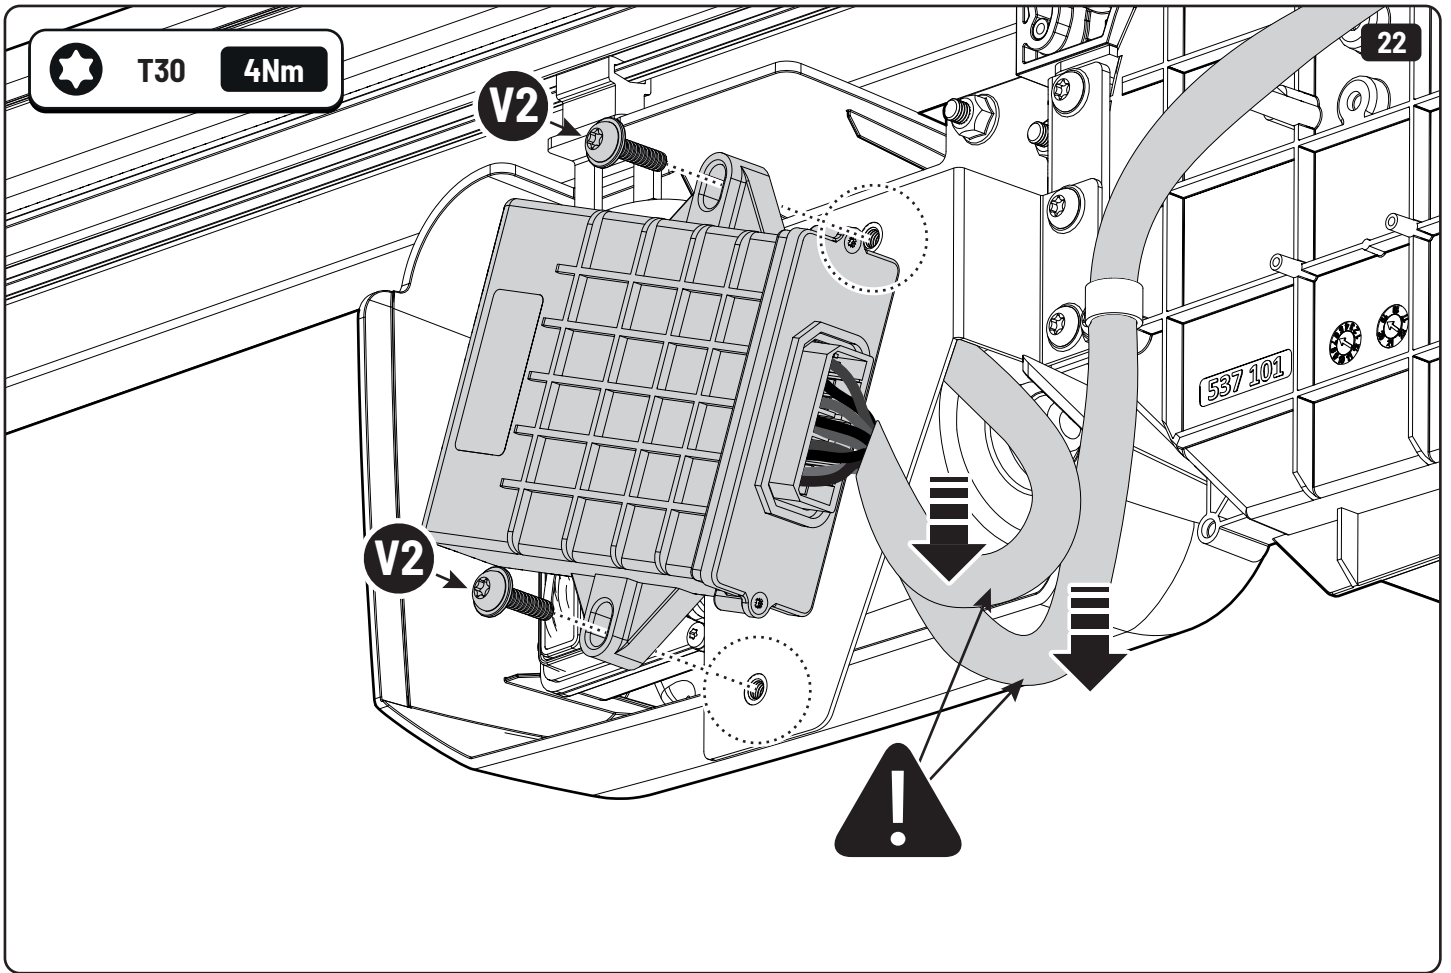

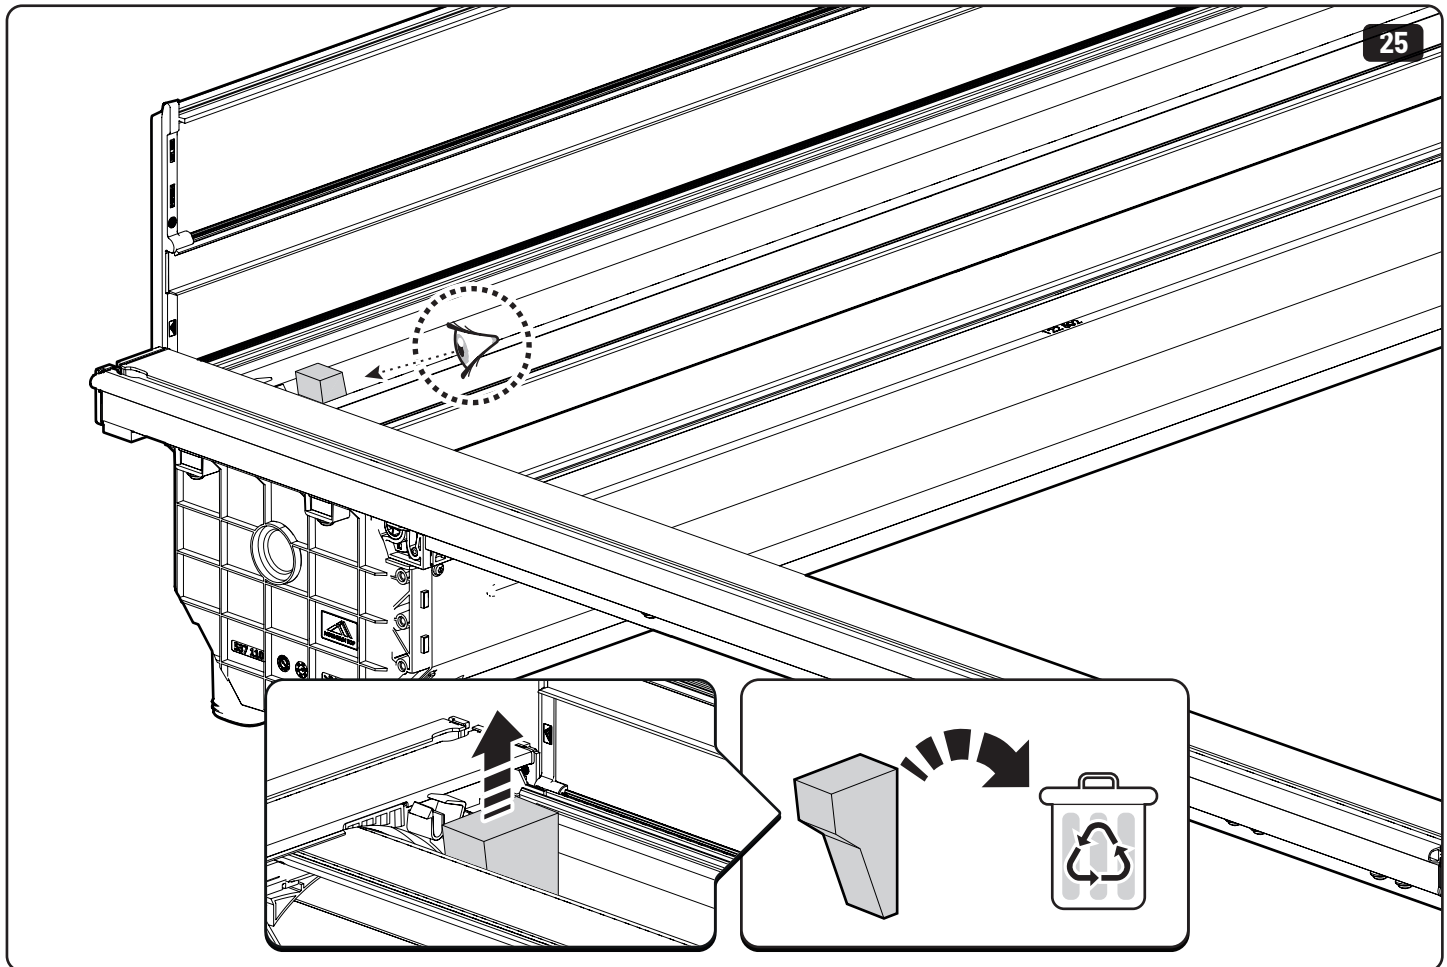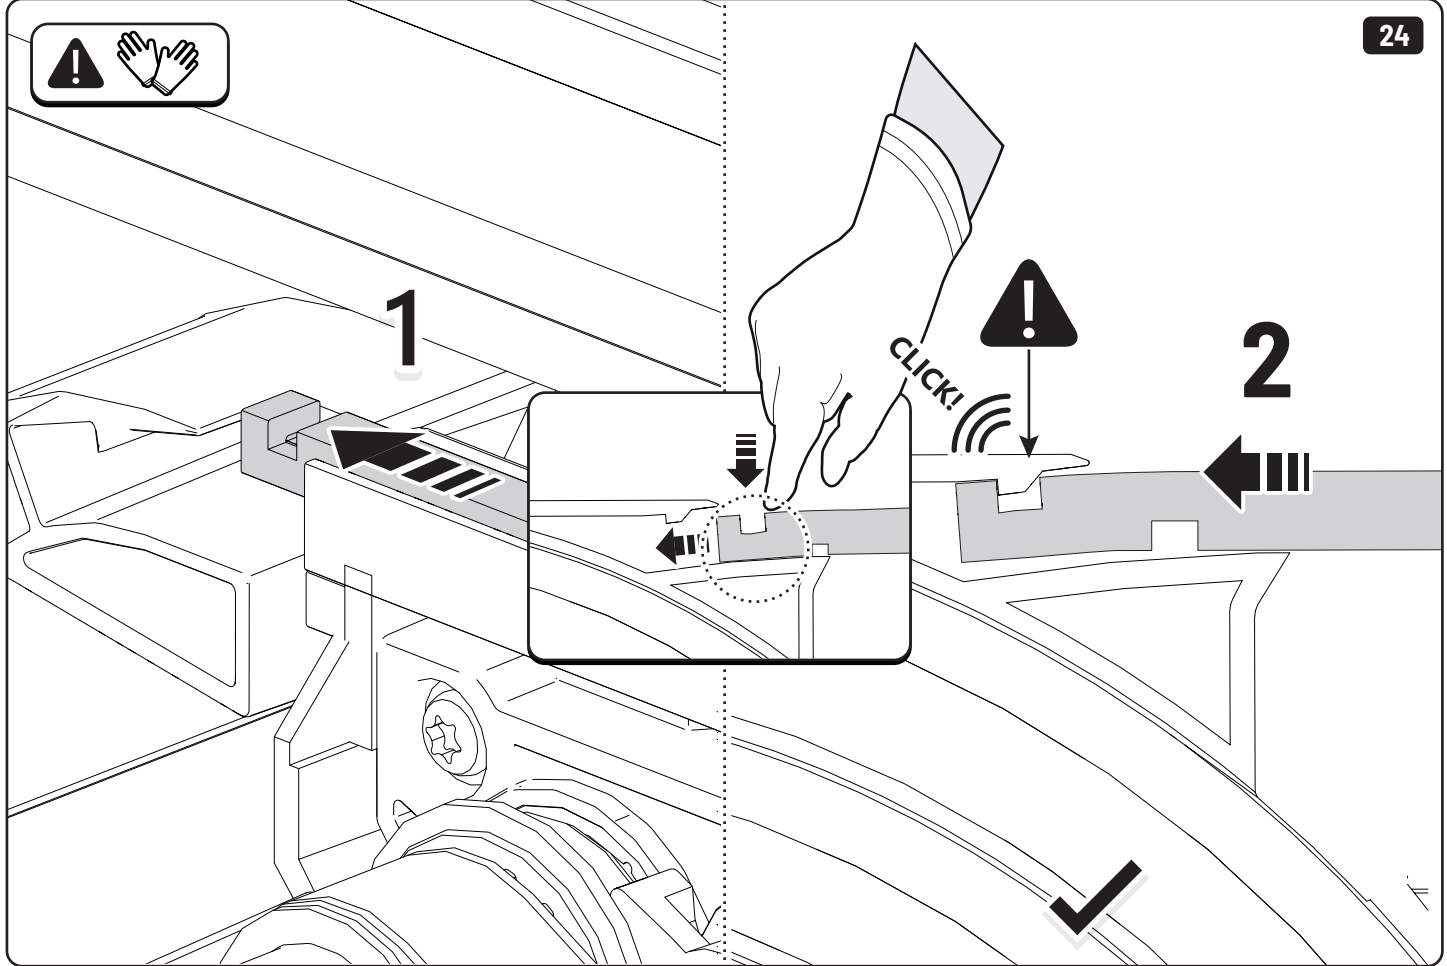




 **RAP CAB**



26



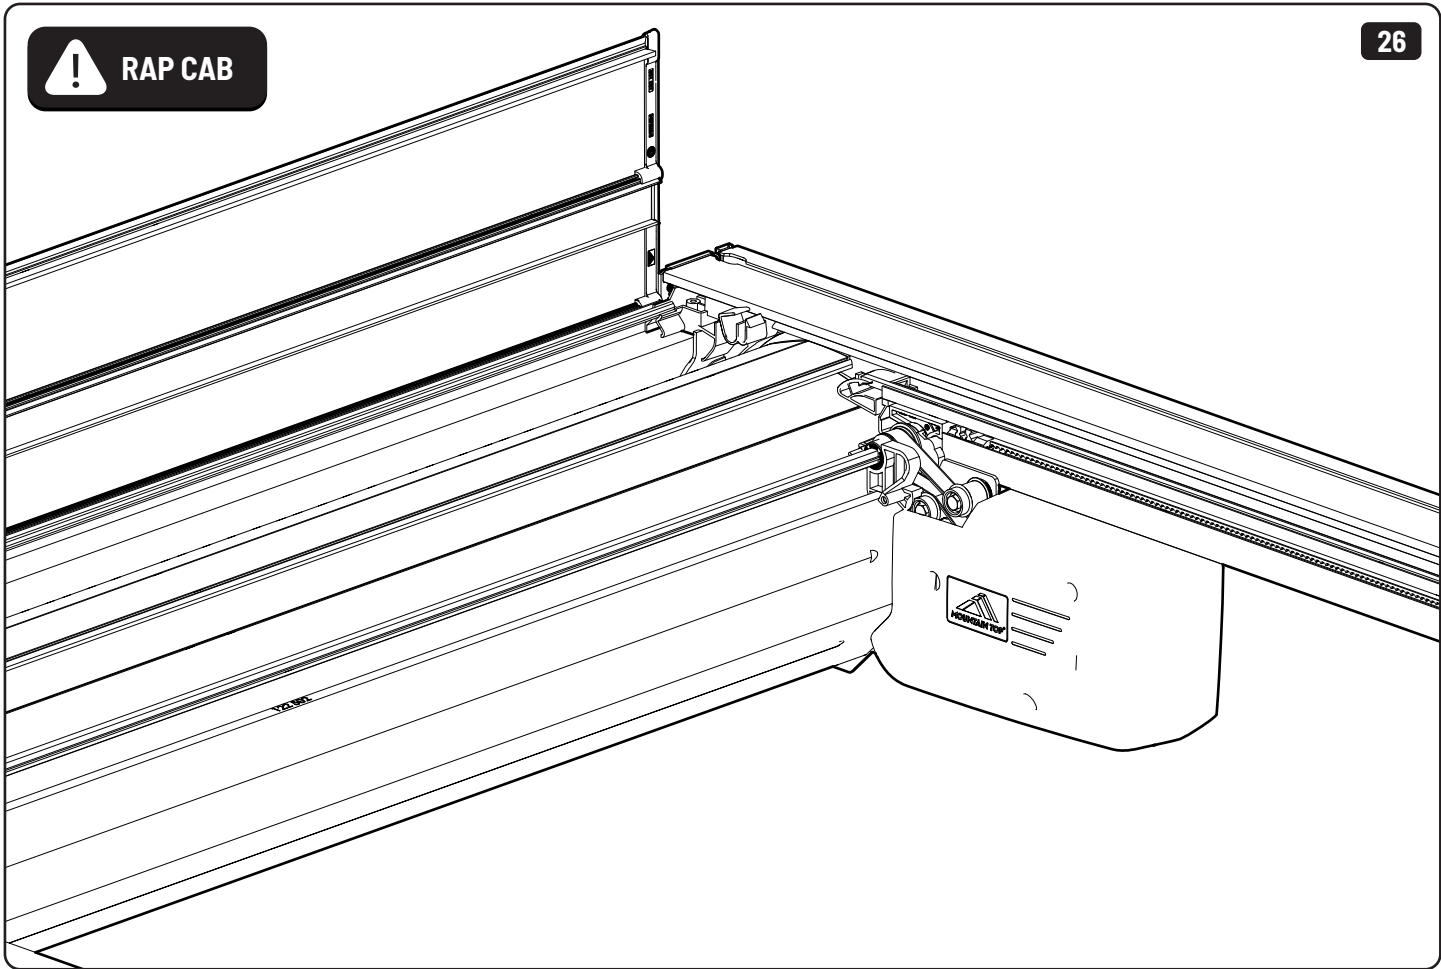


27

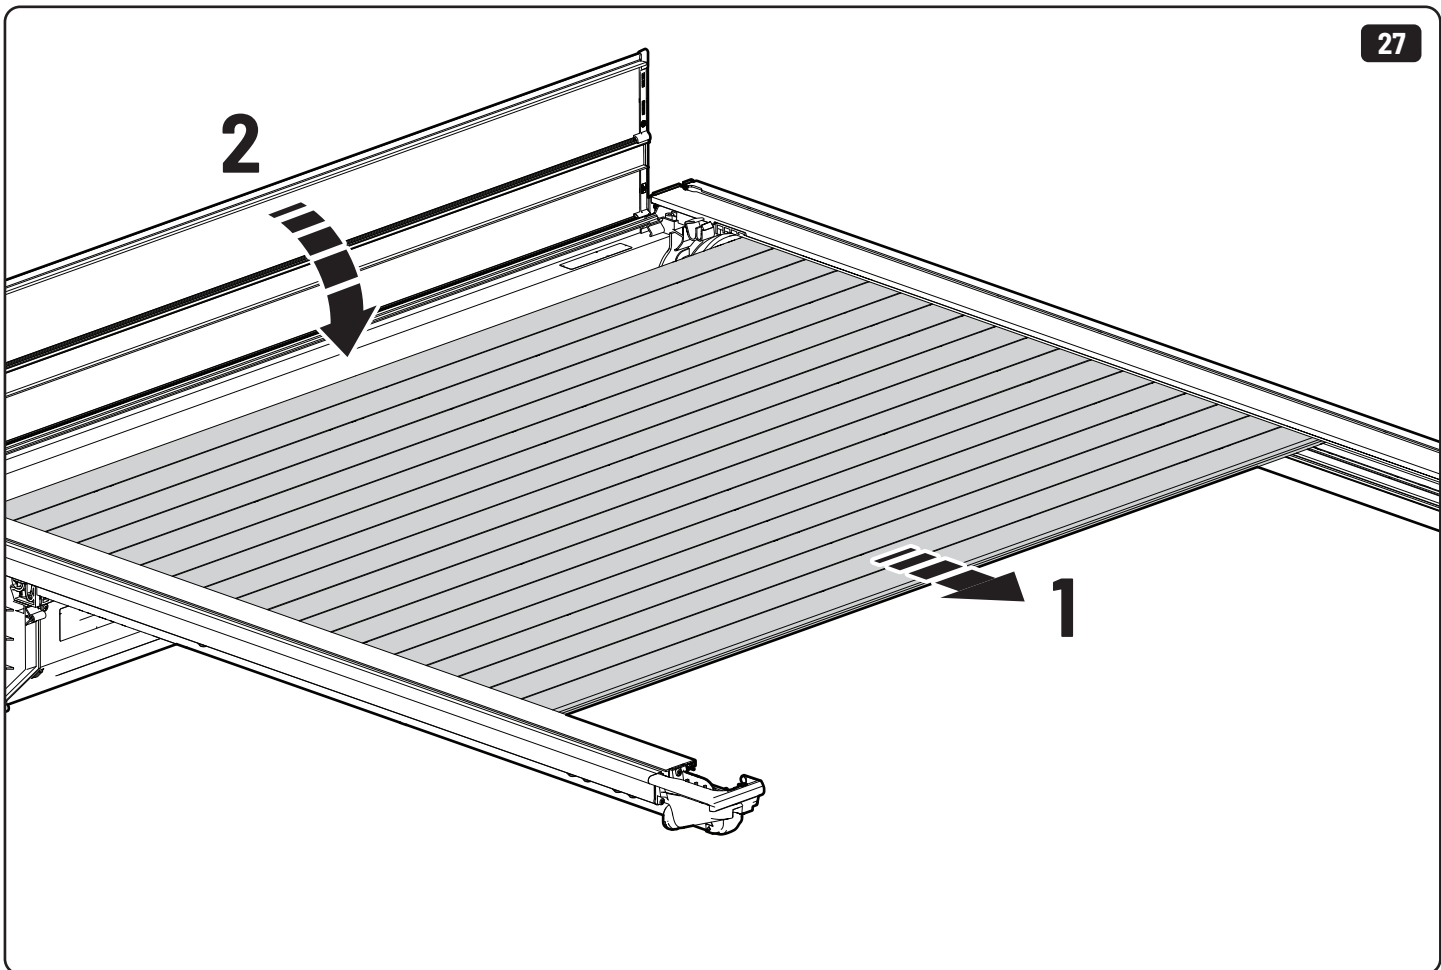


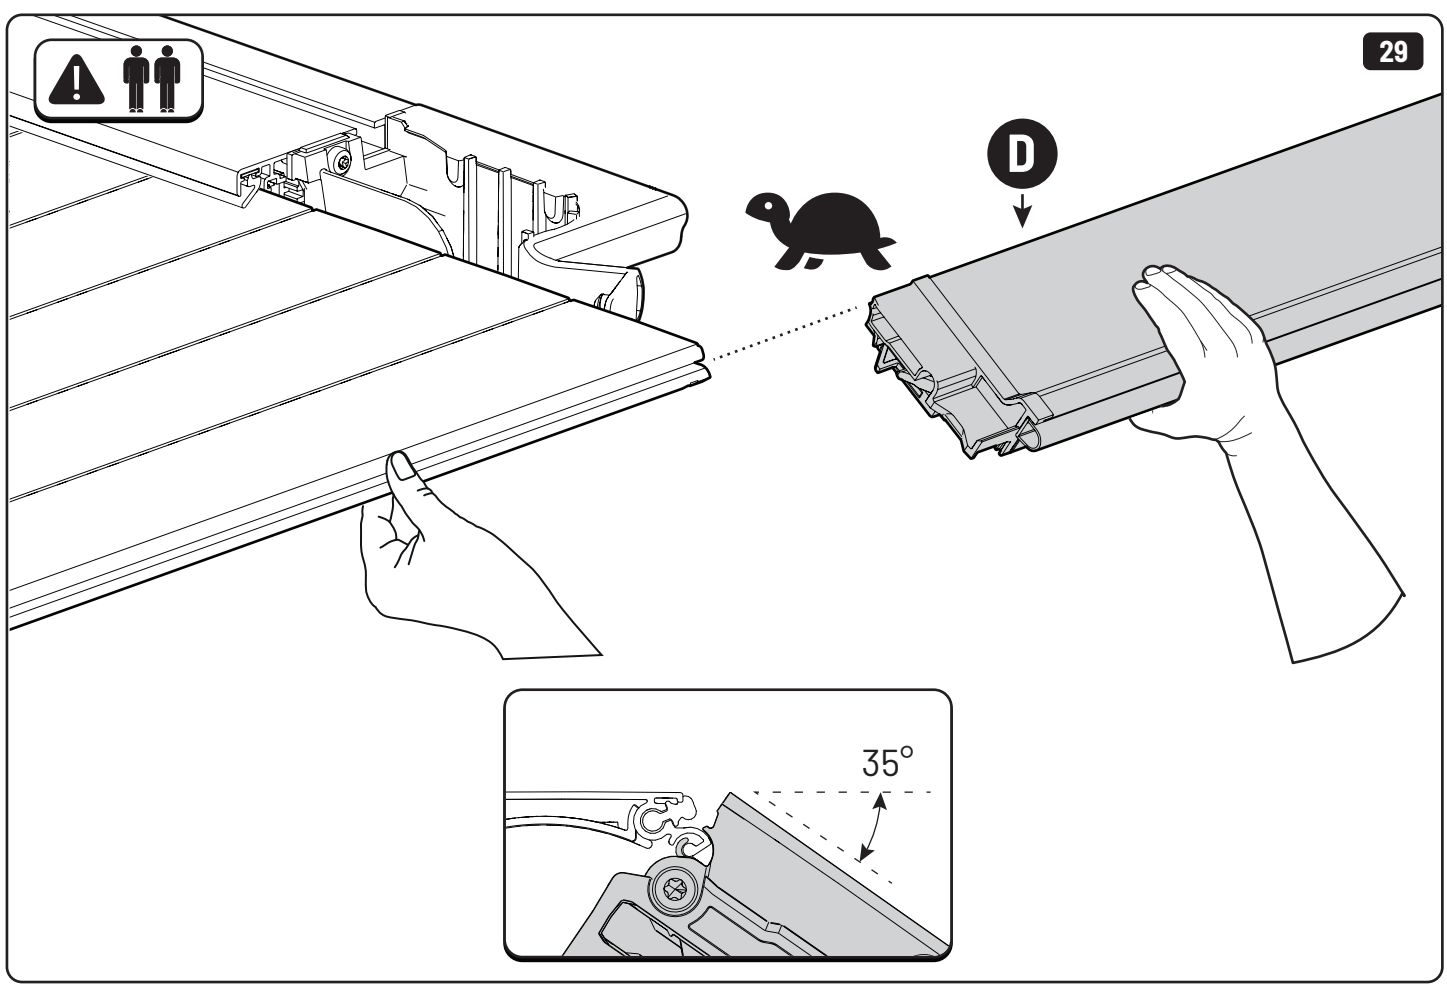
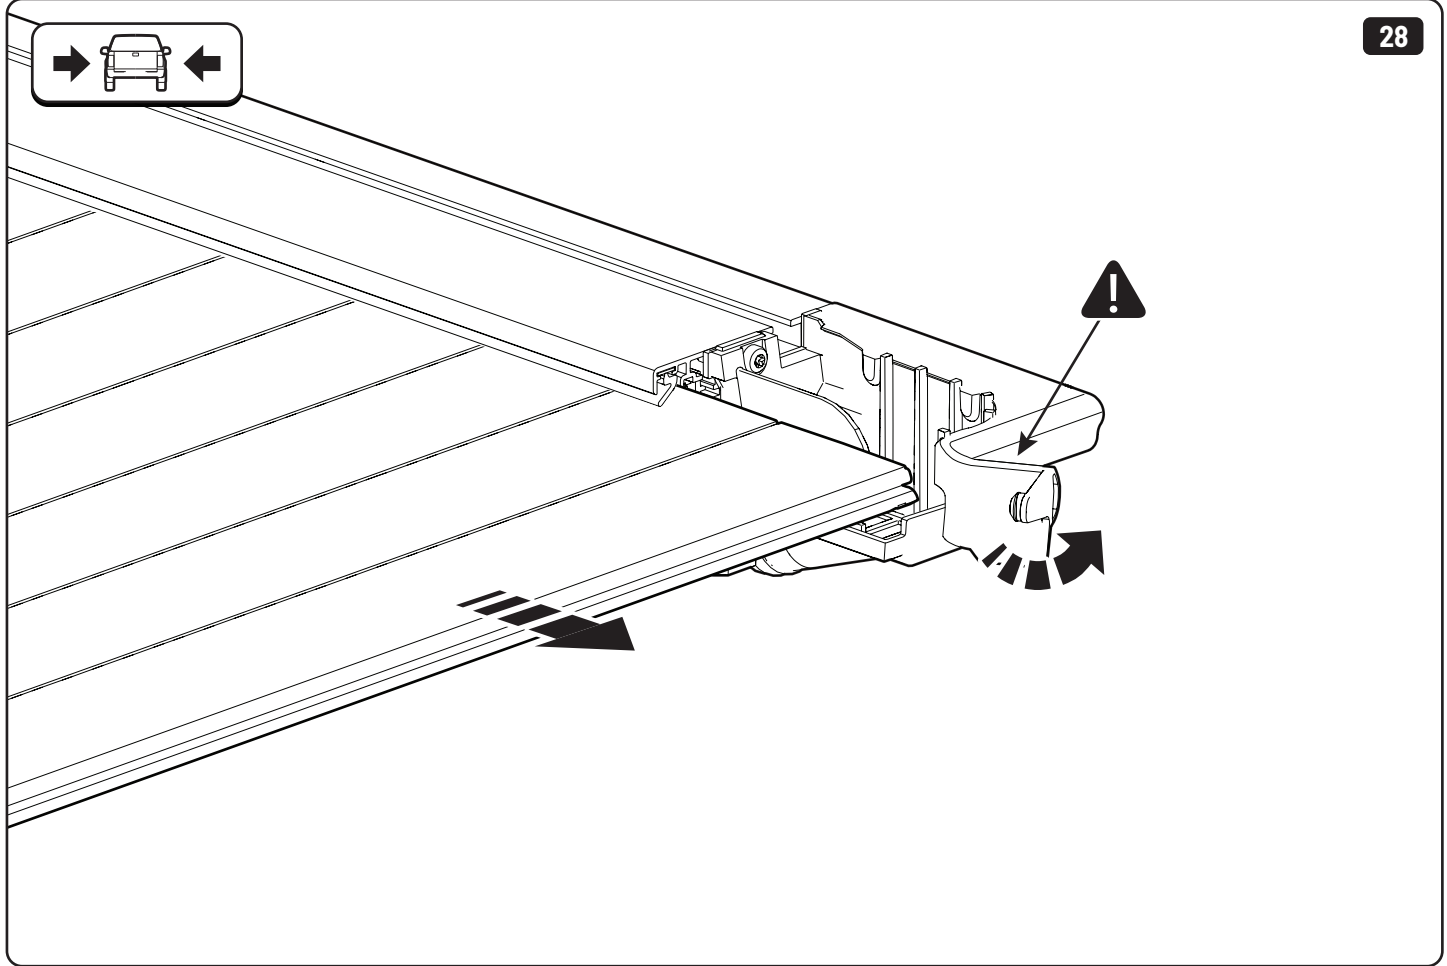


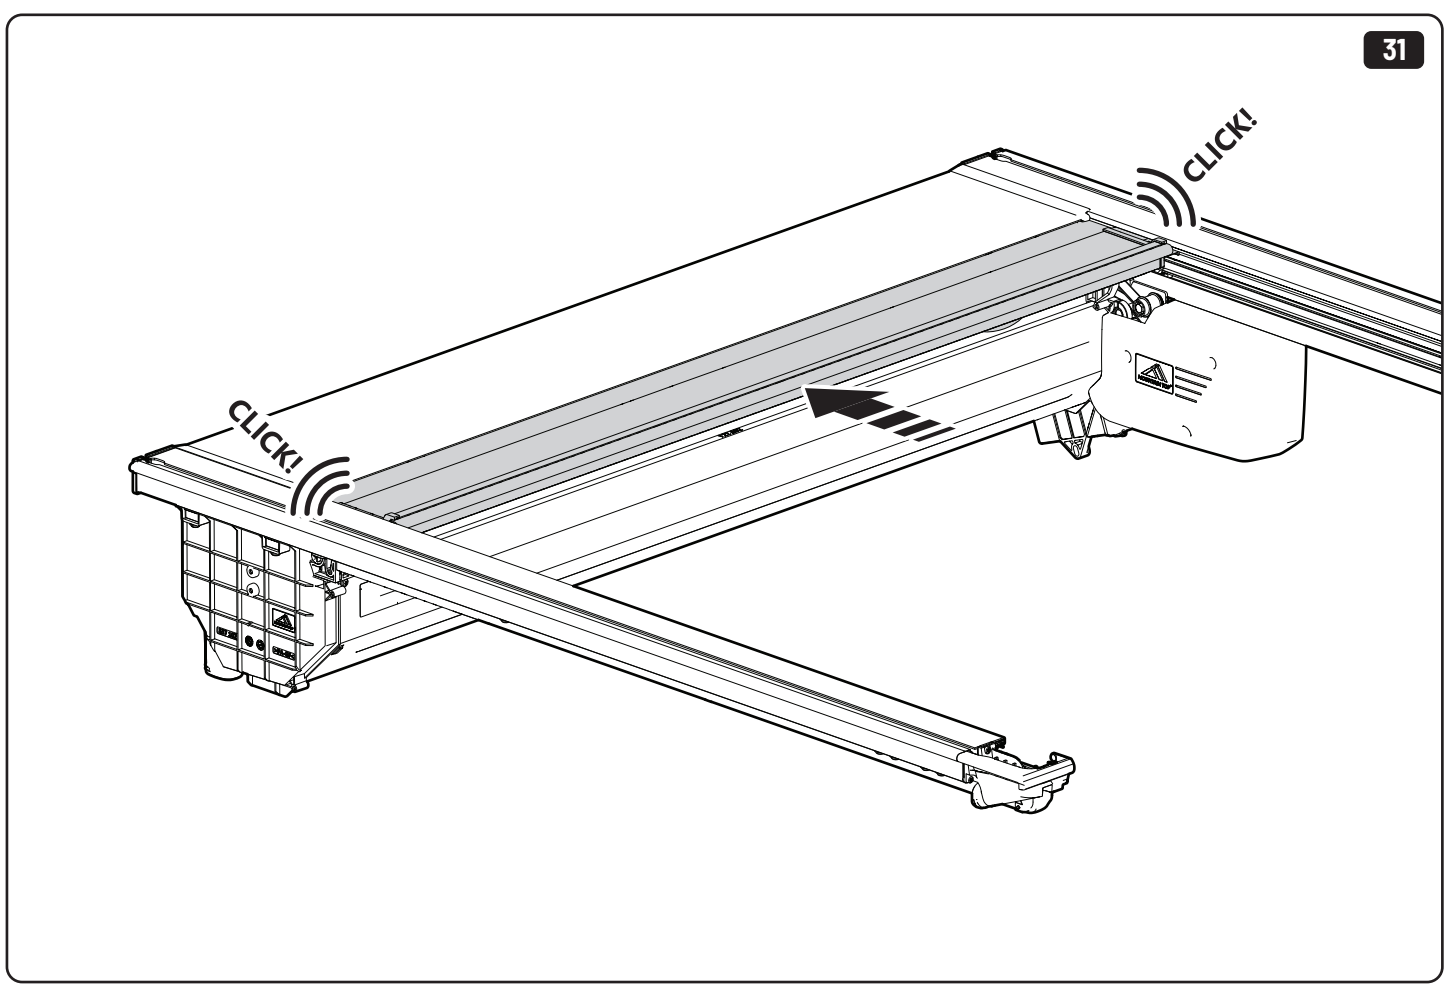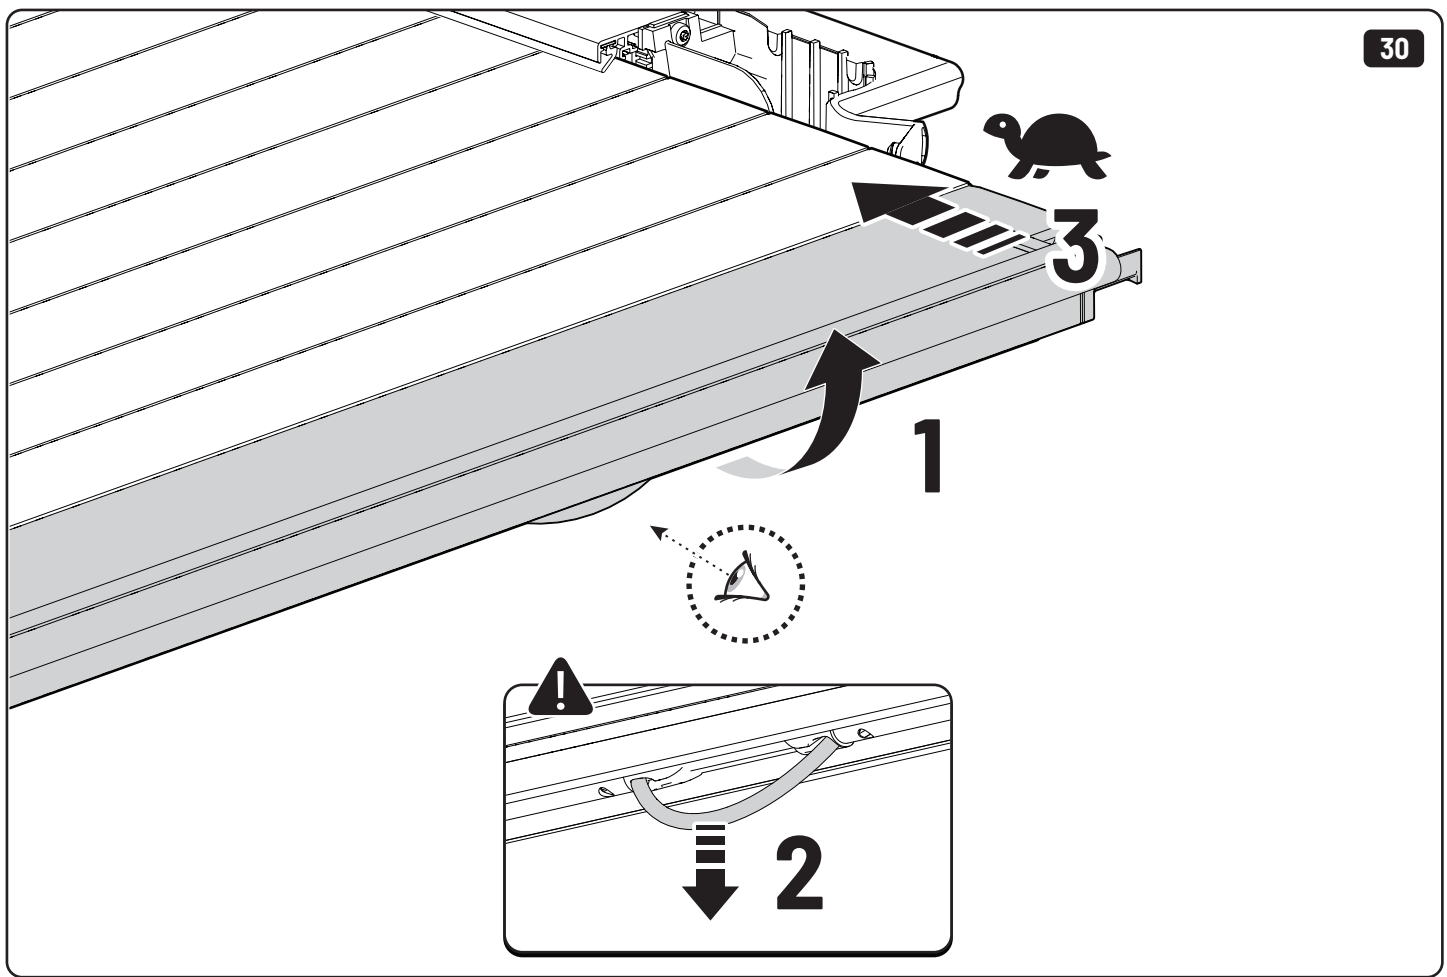

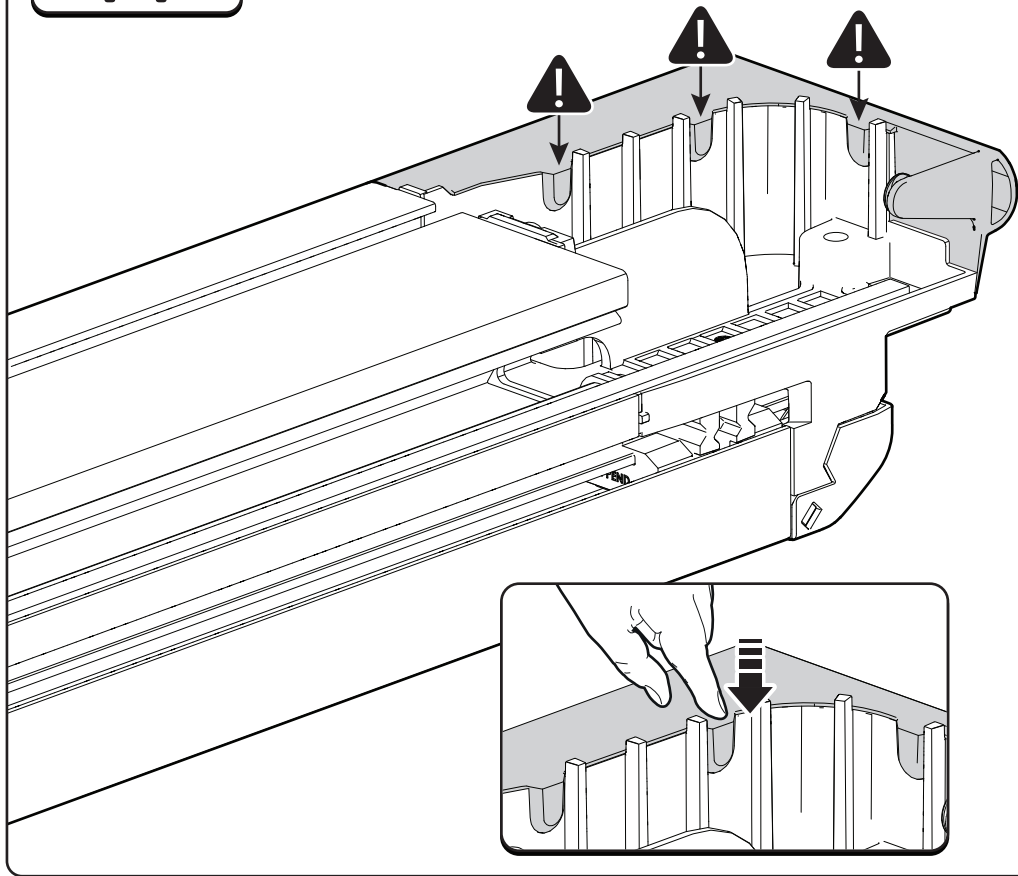


T20 2,4Nm



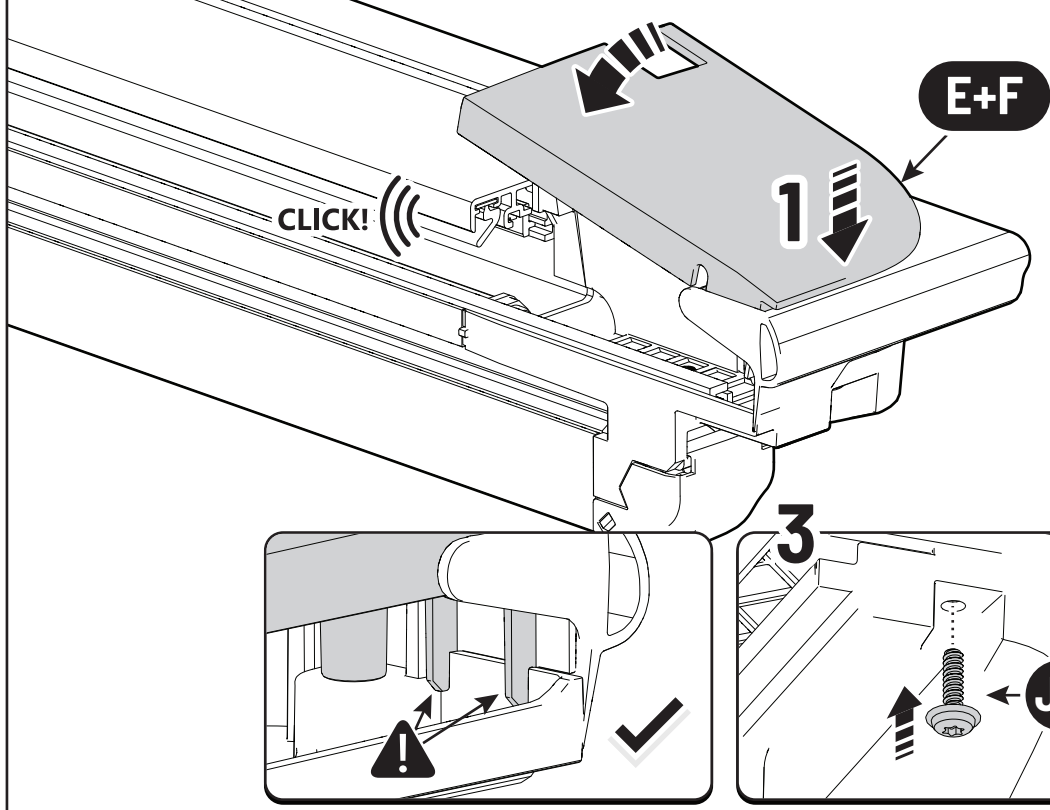


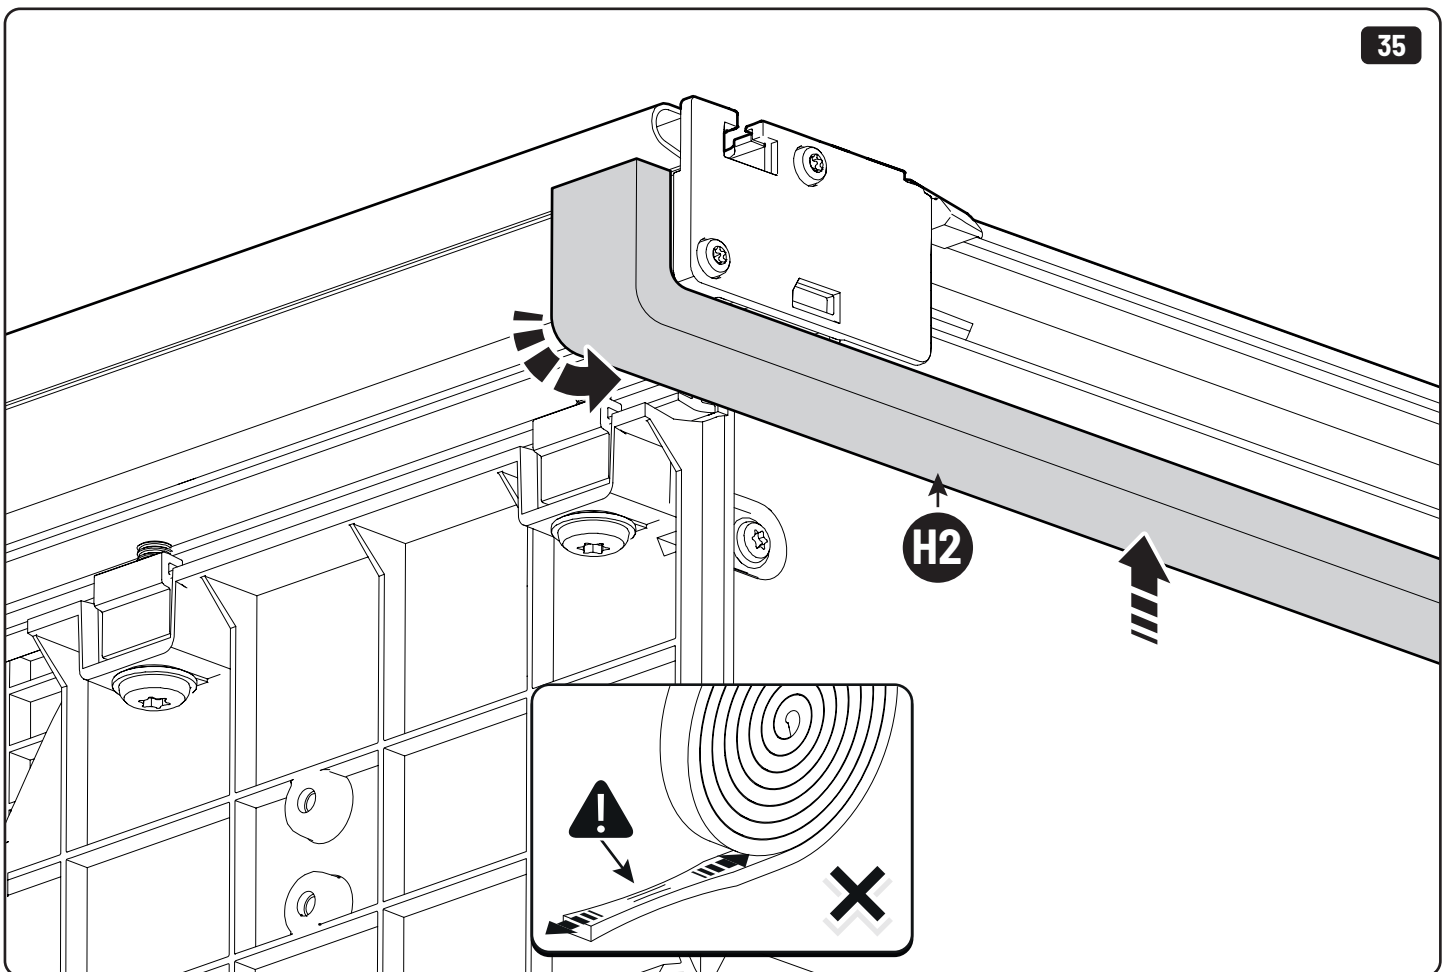
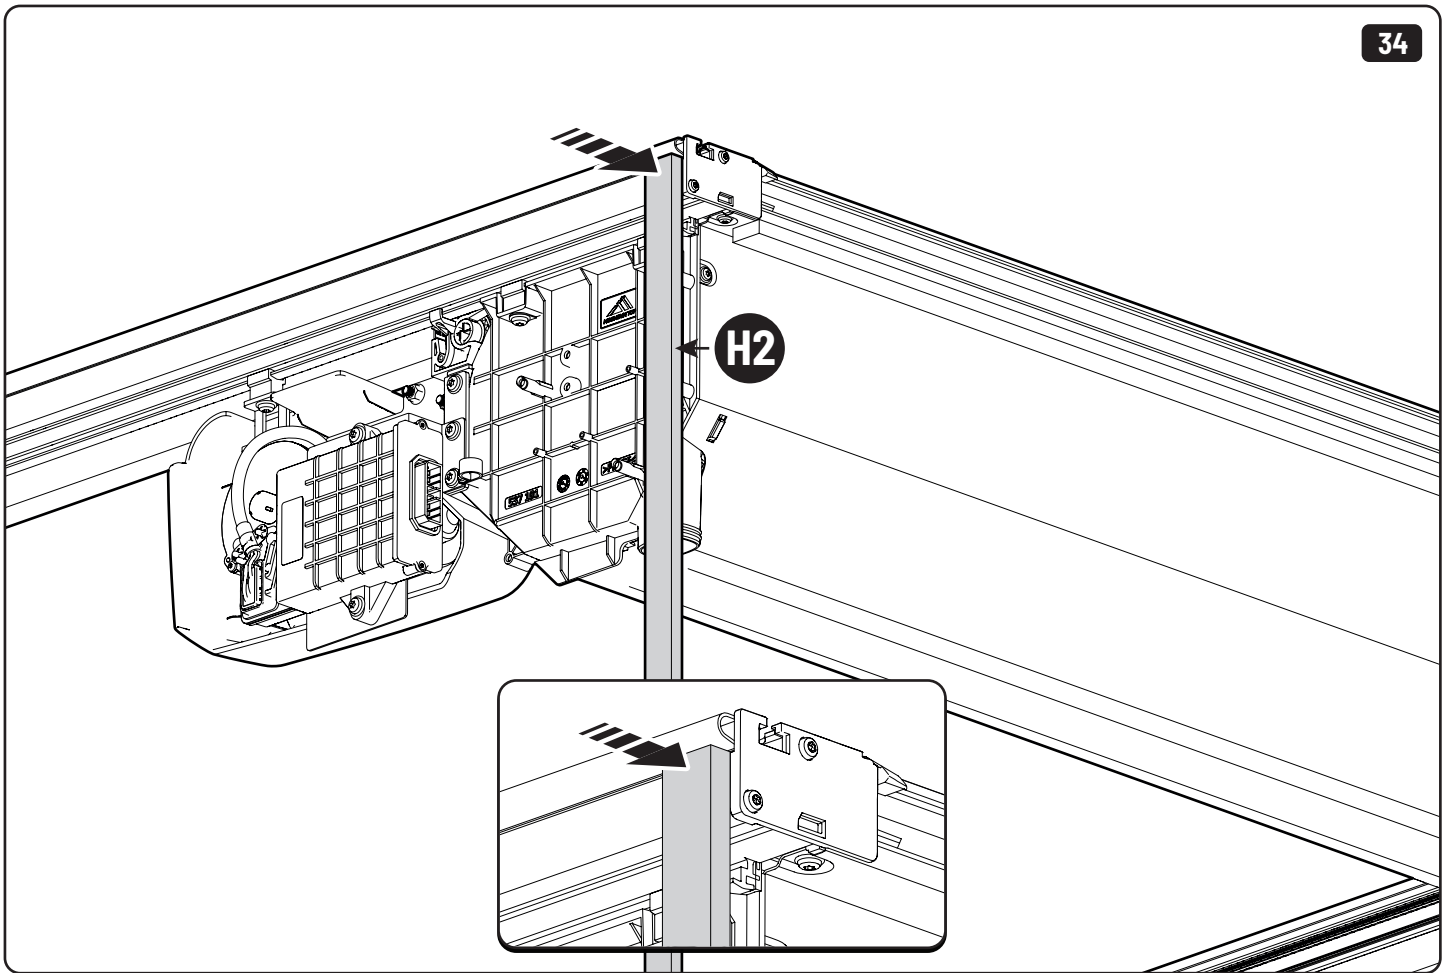





1


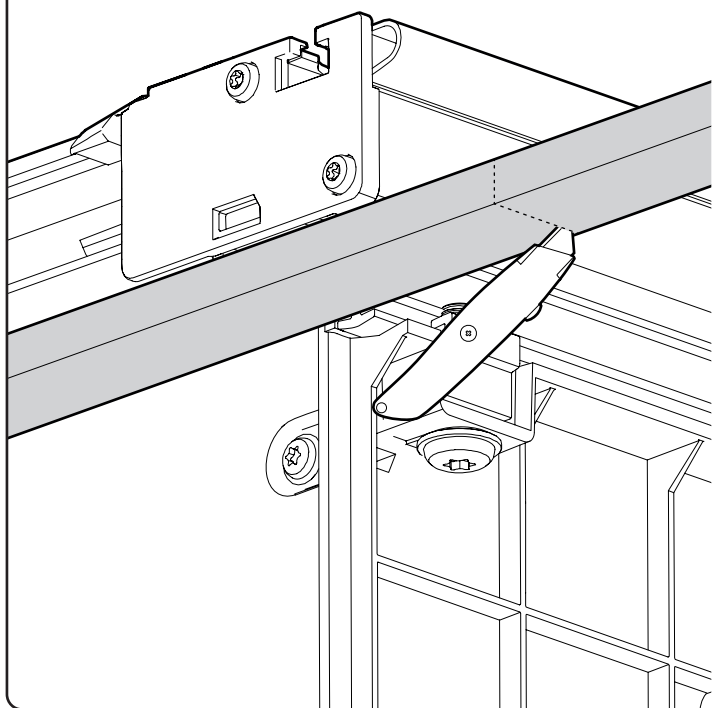




2

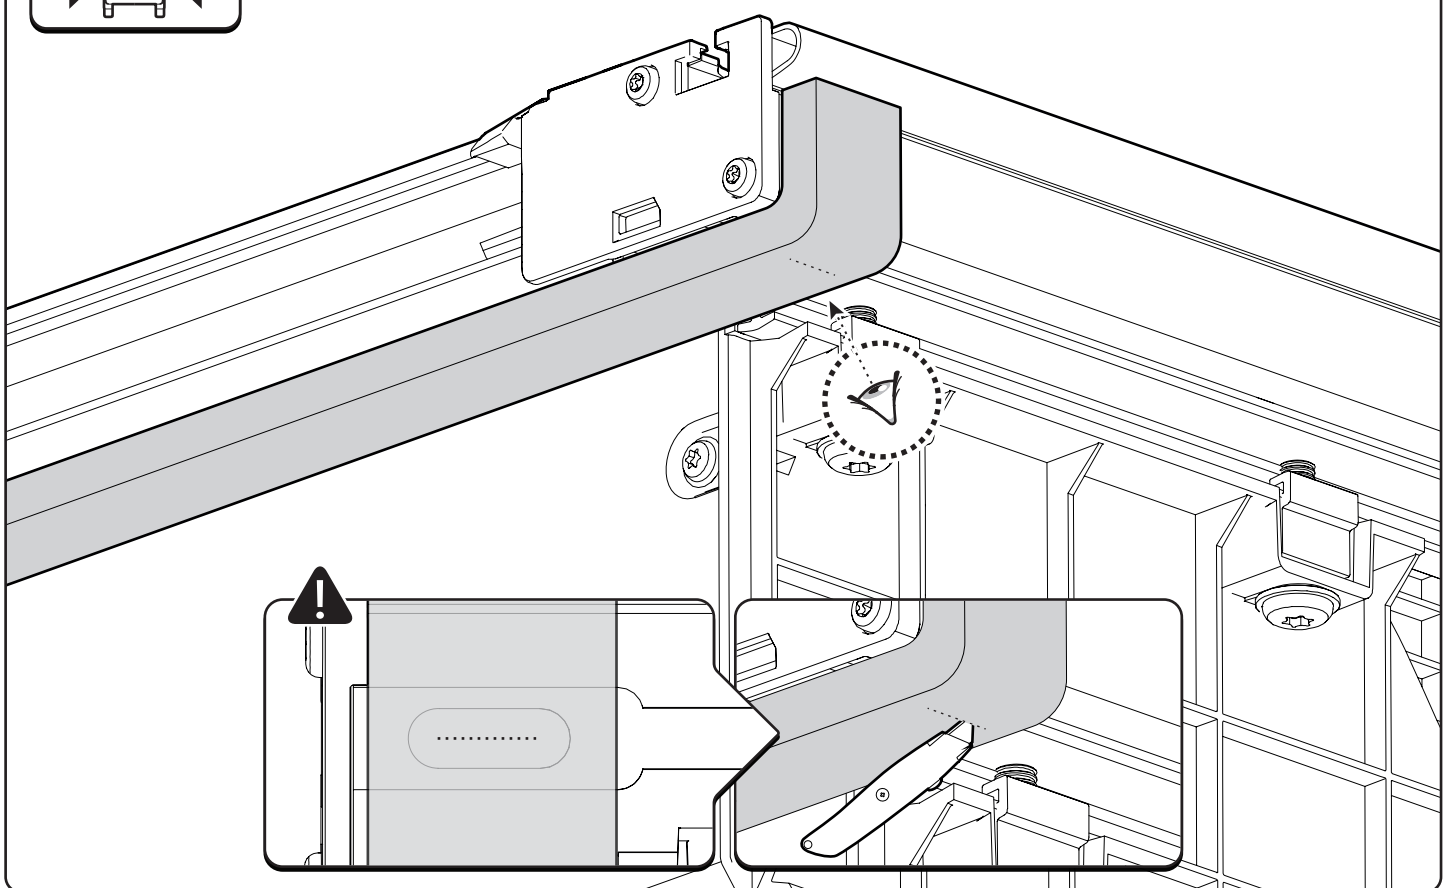
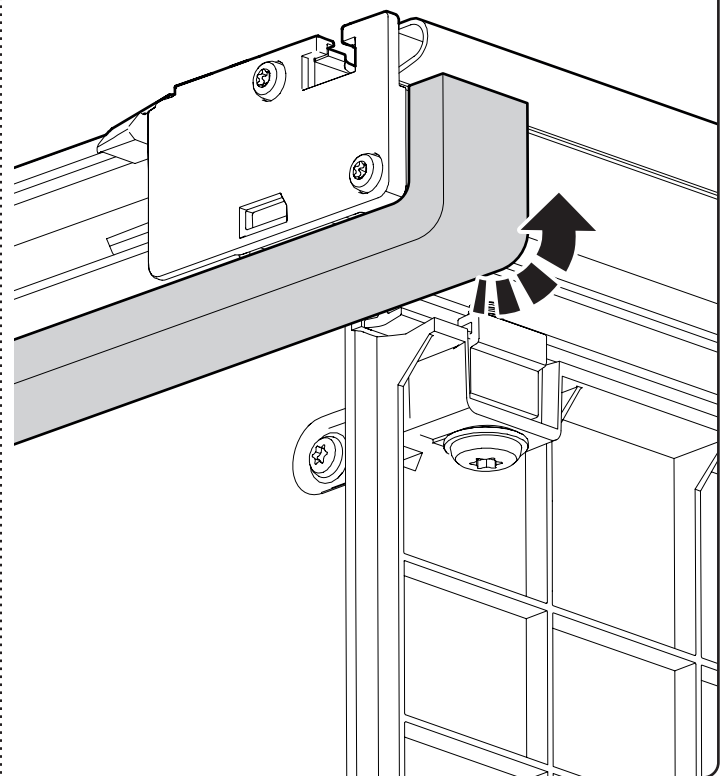


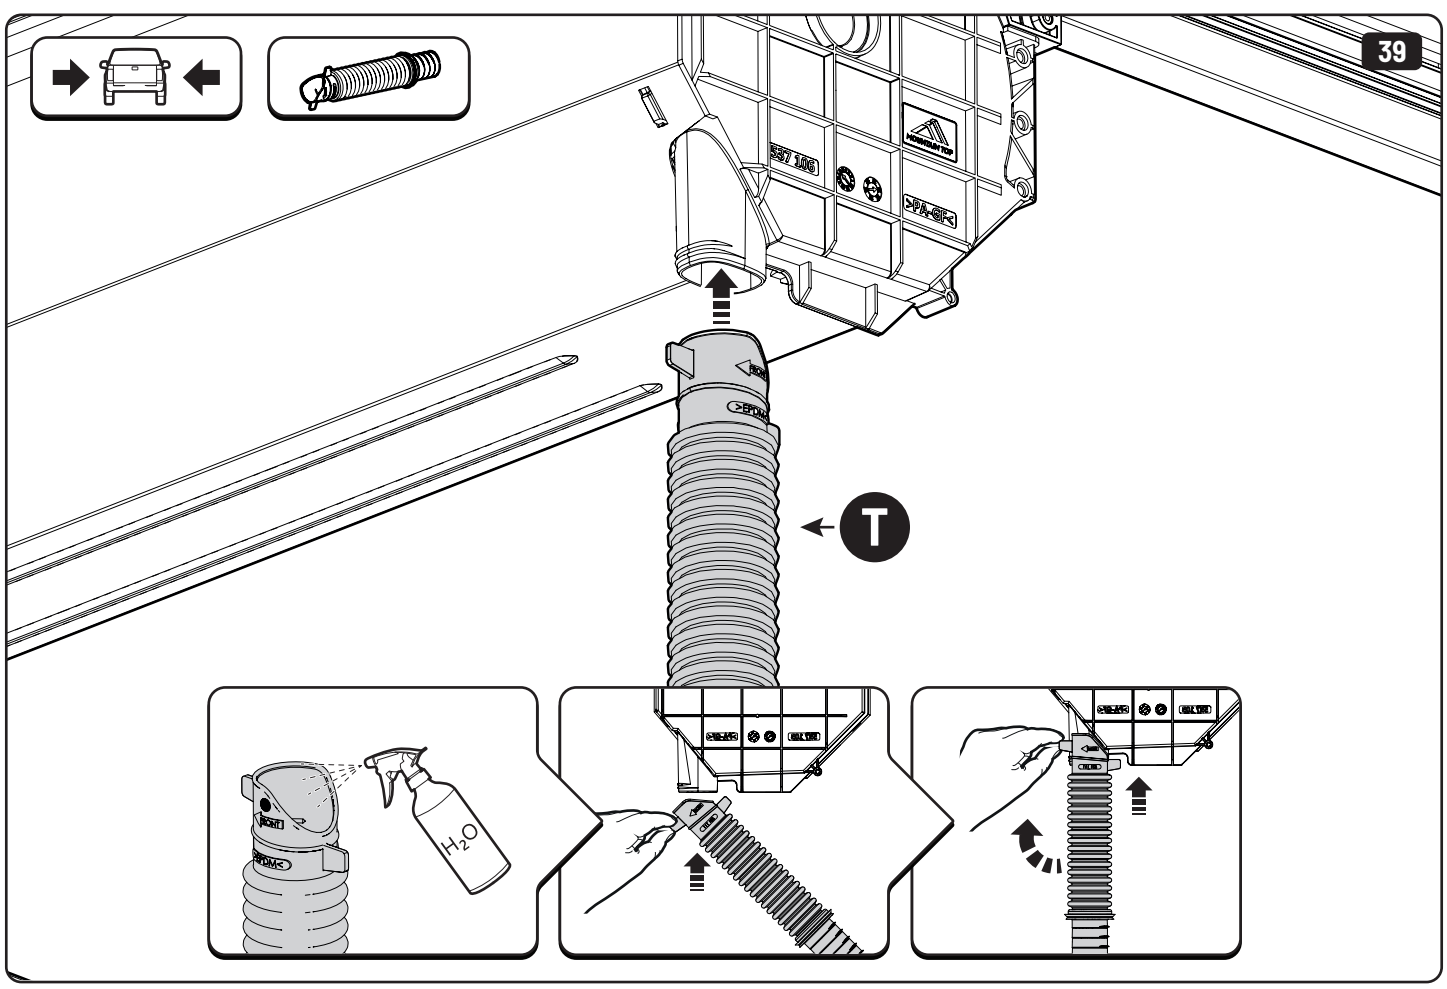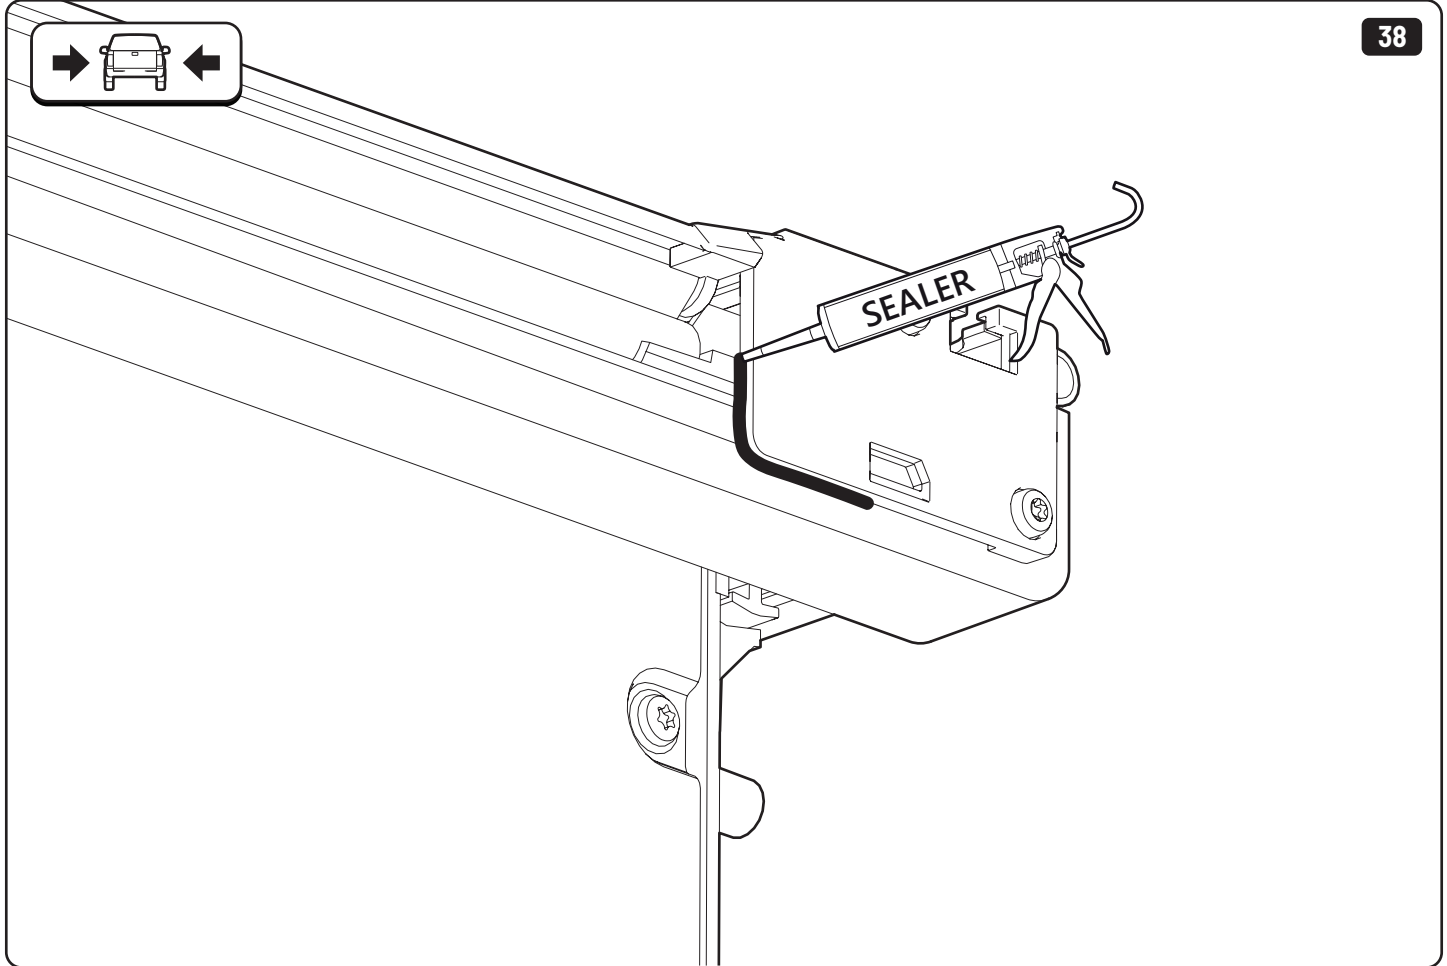


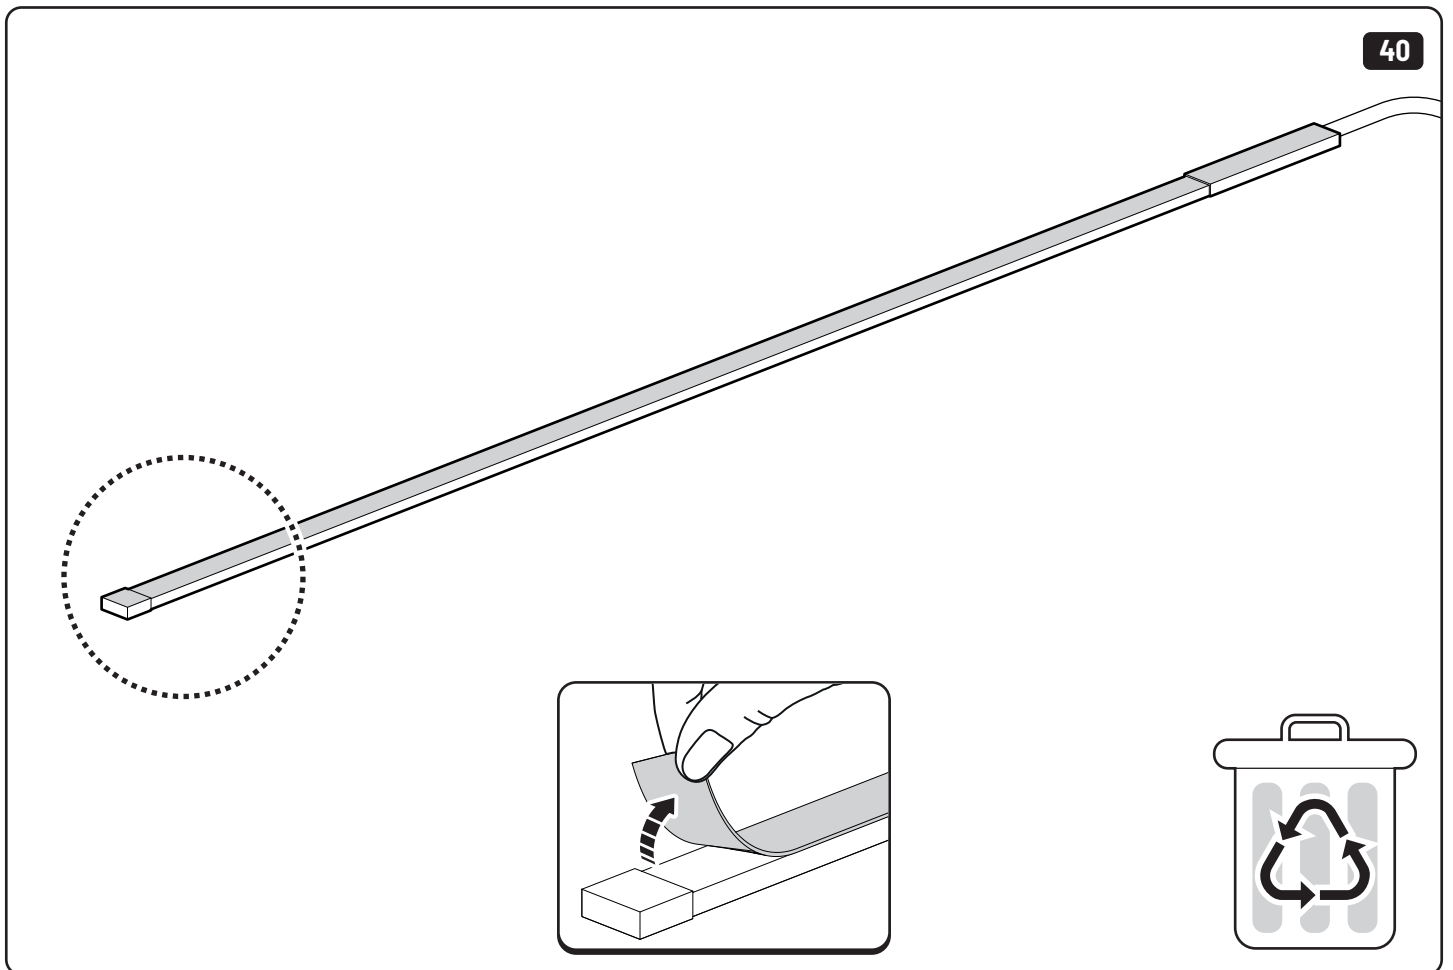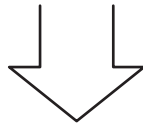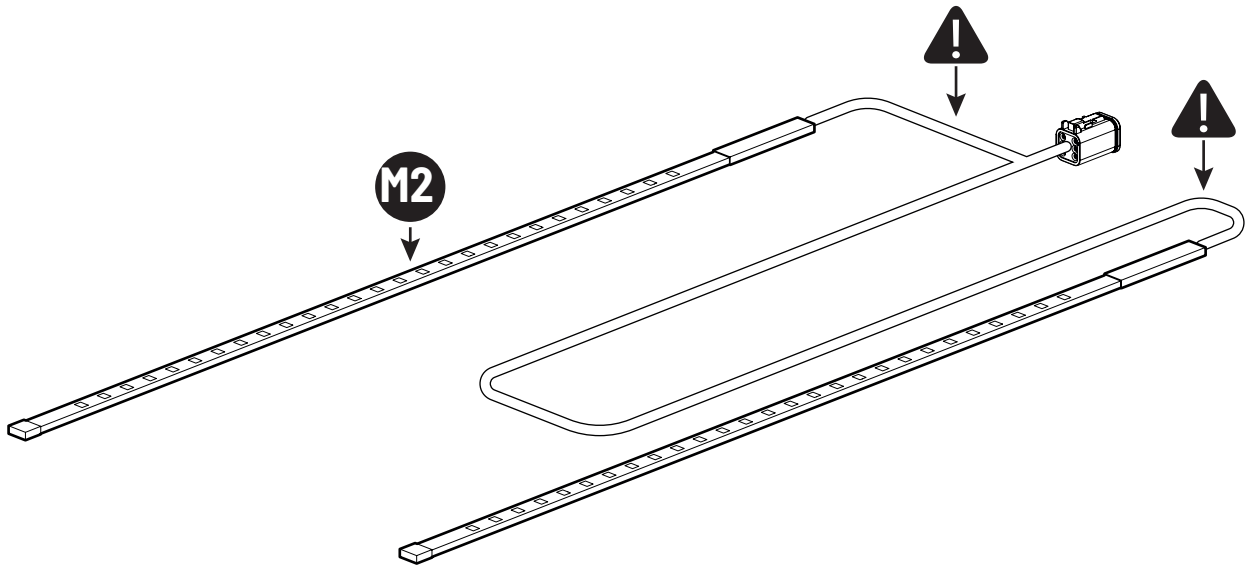

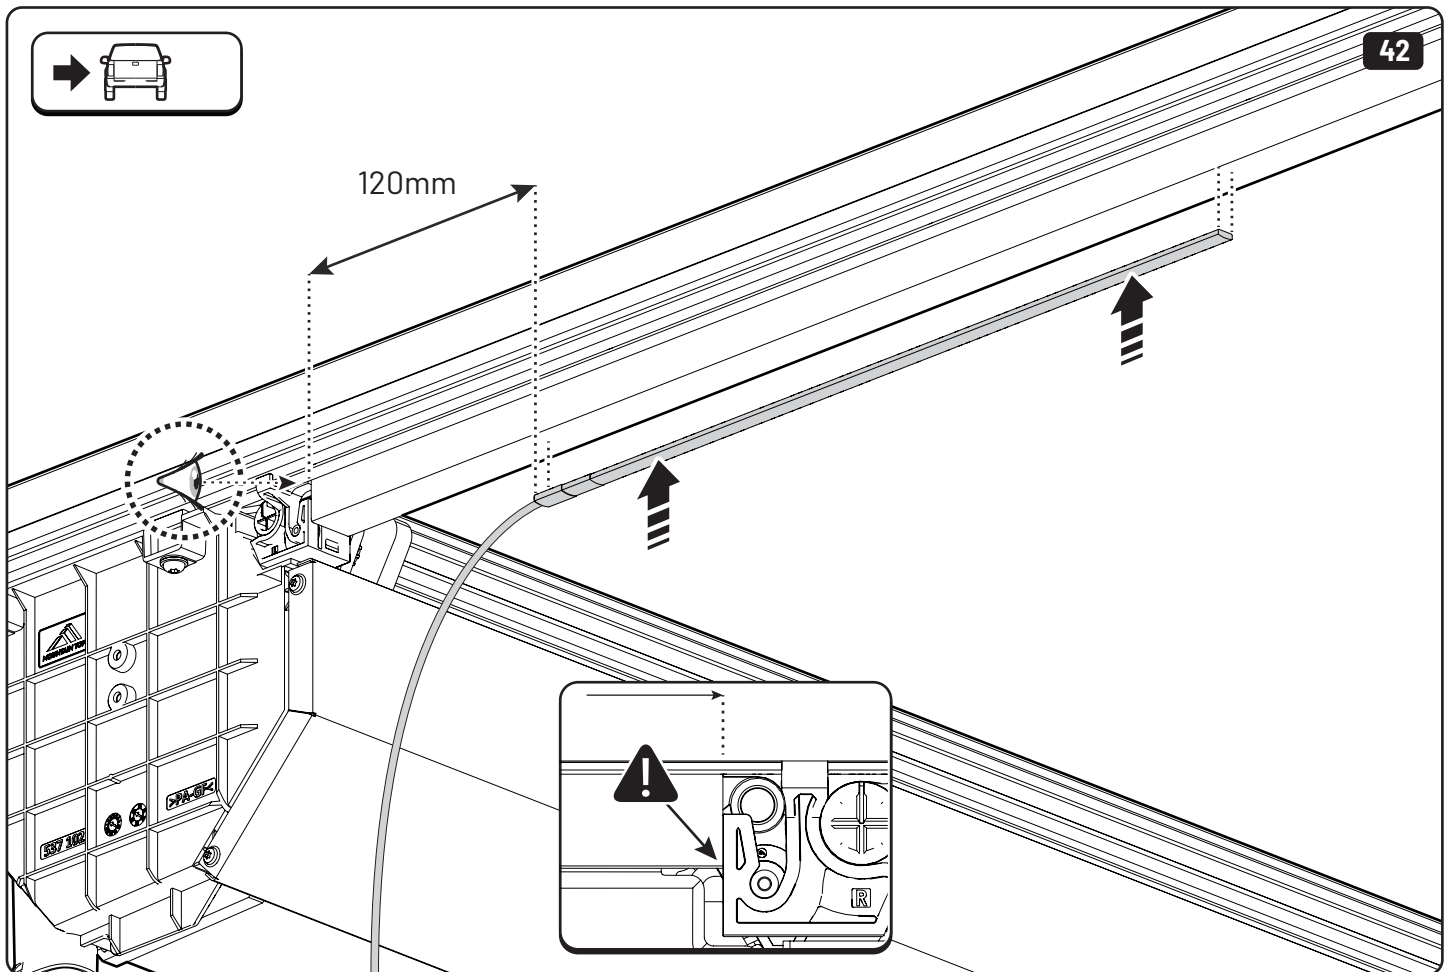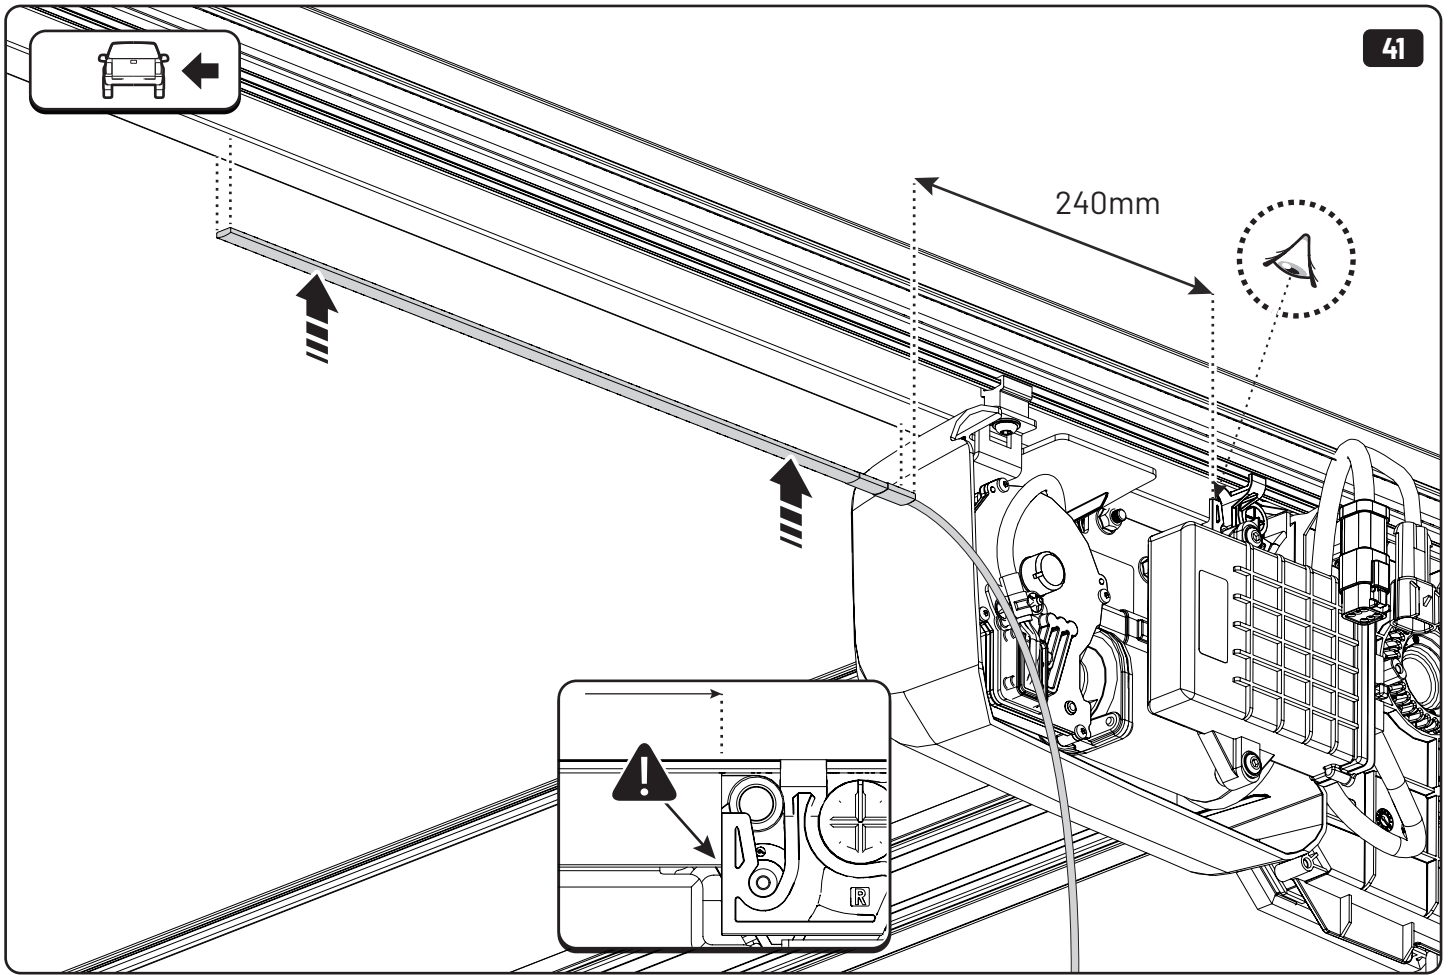

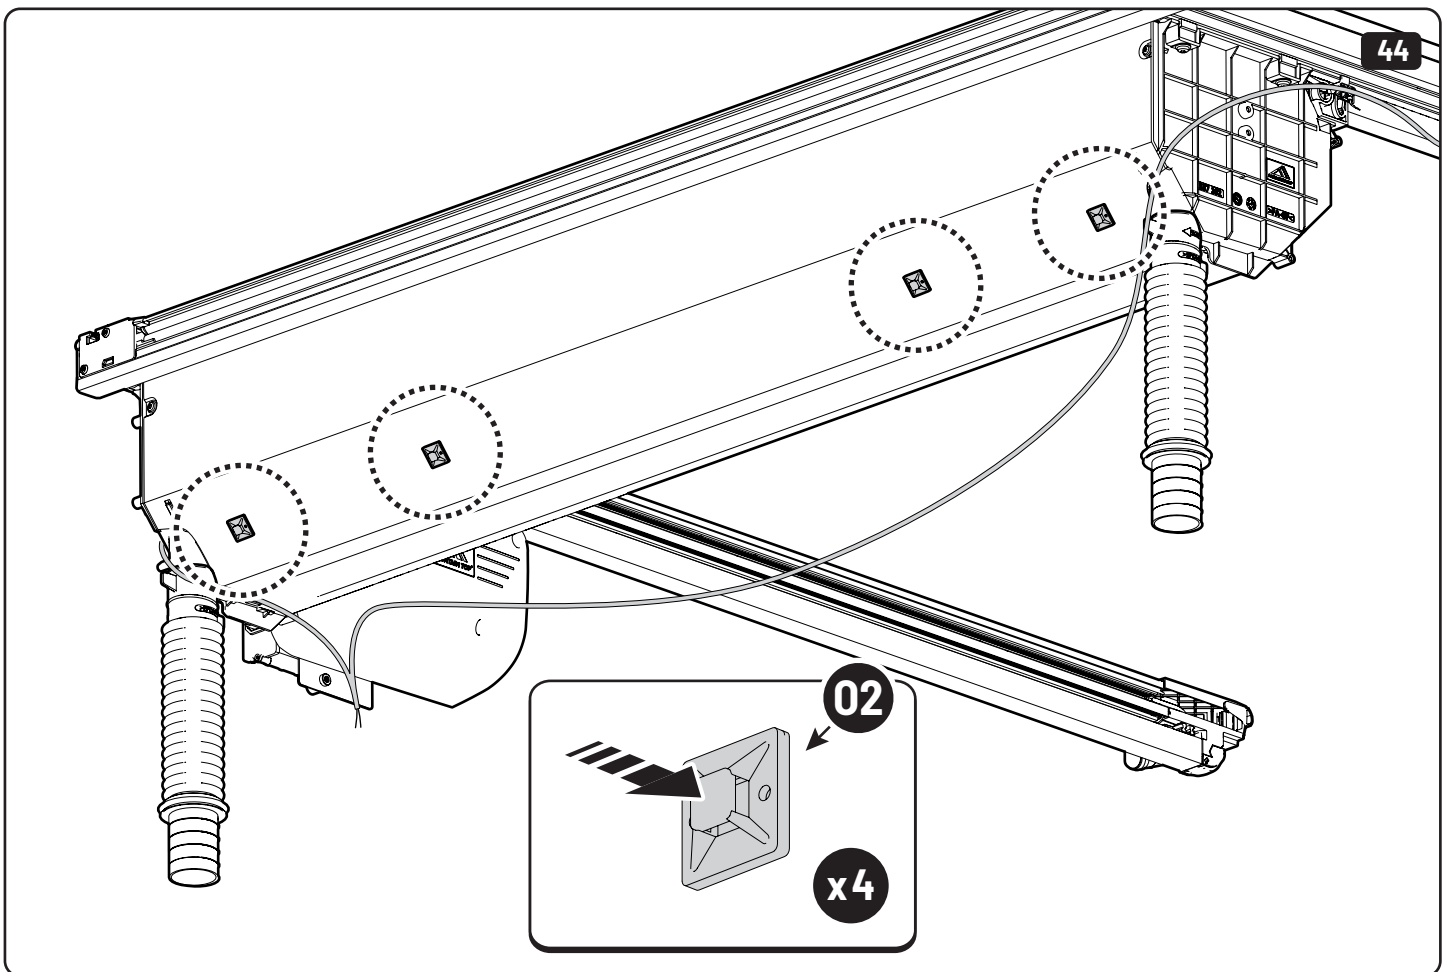
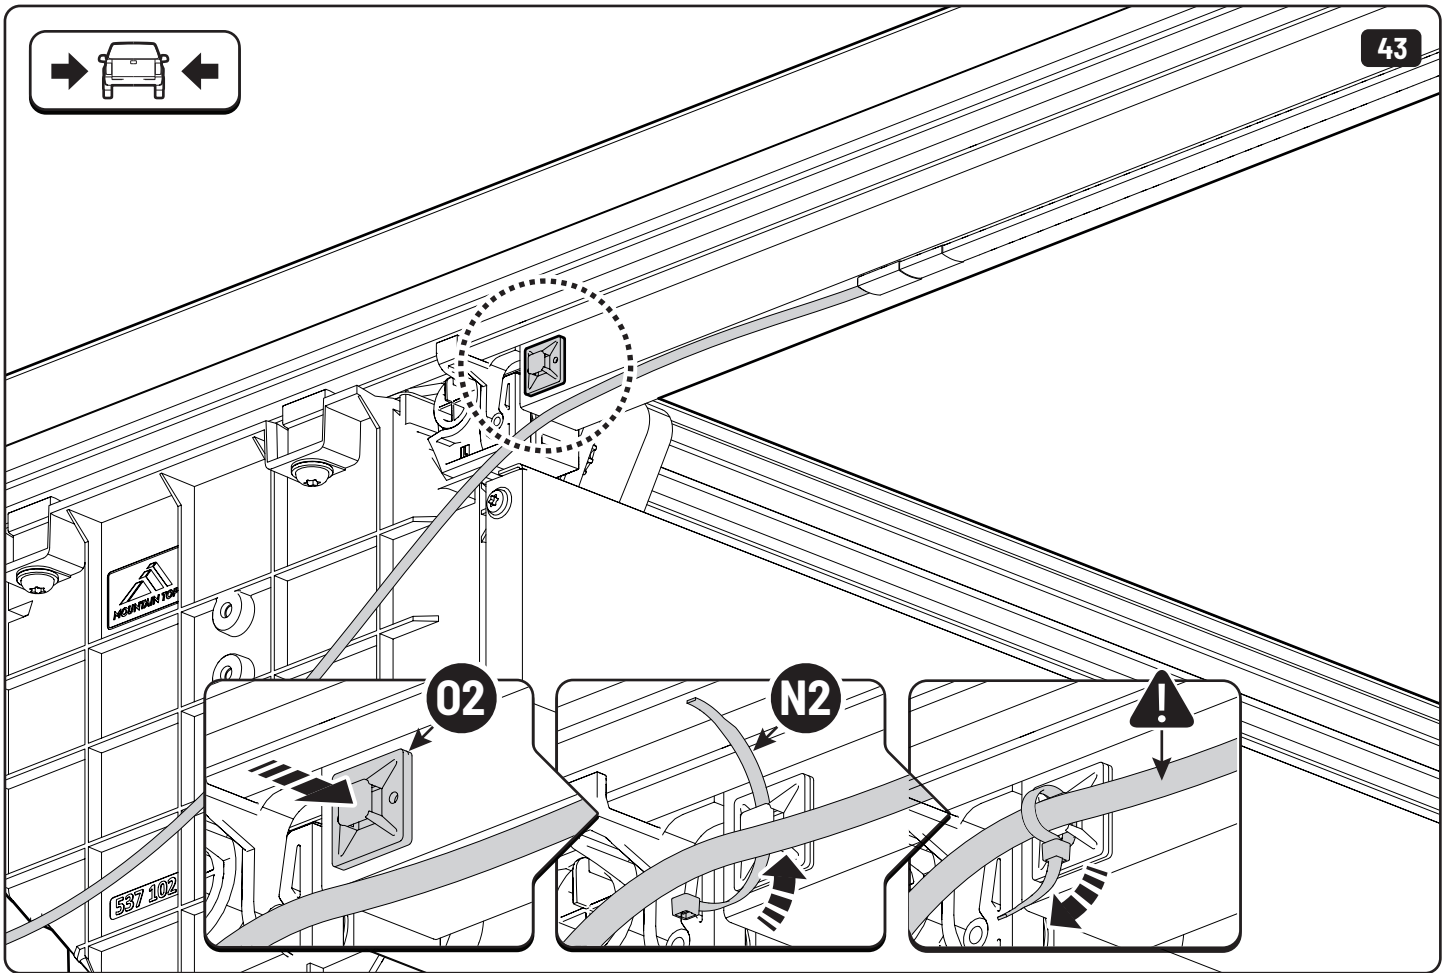


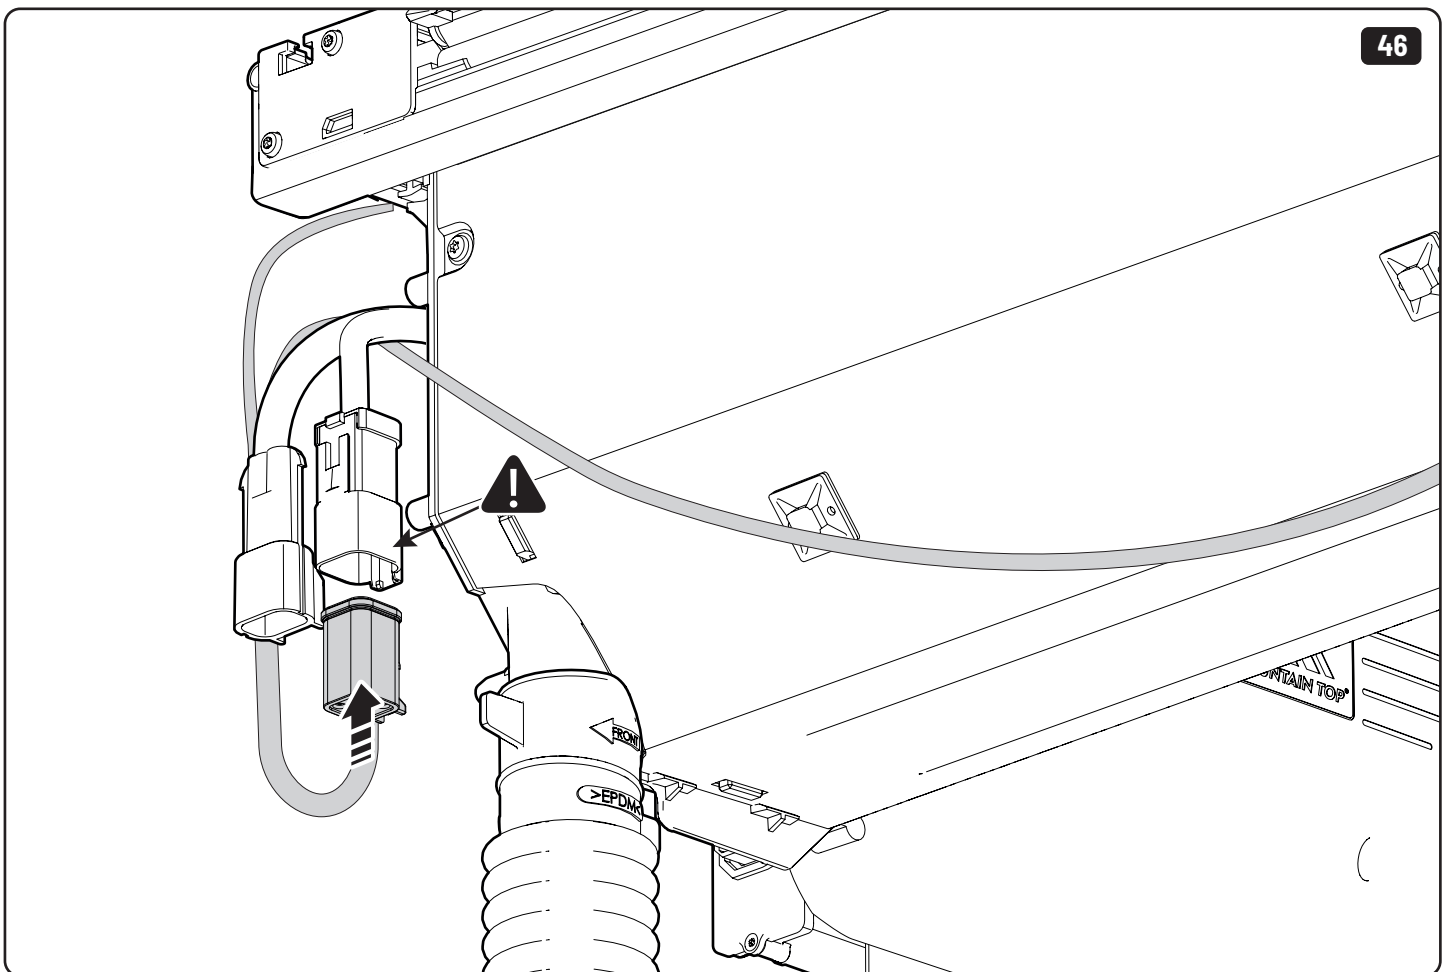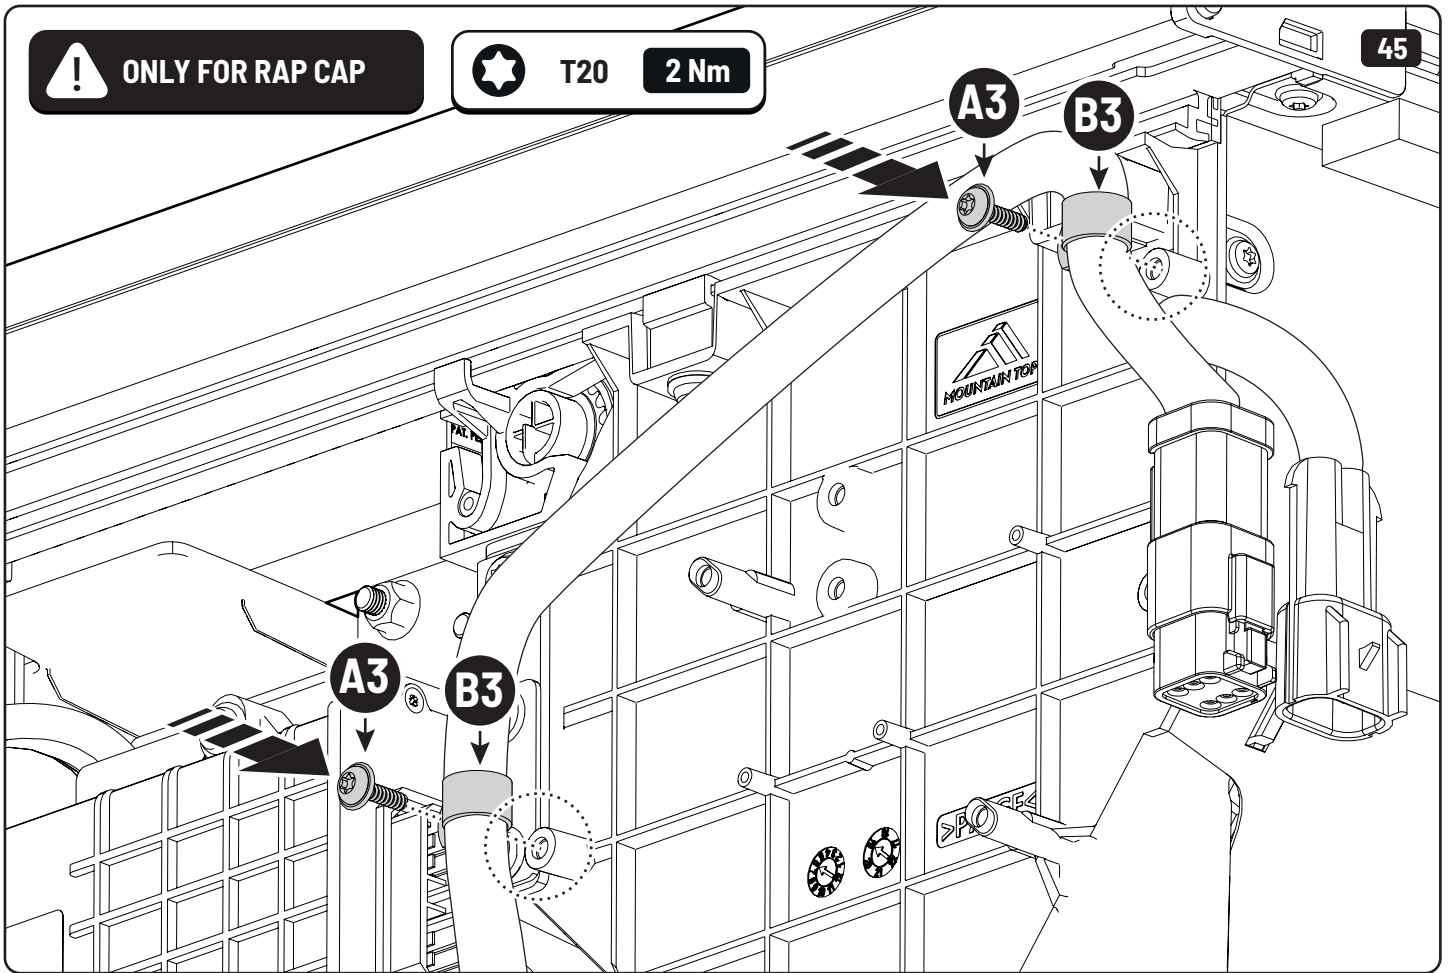


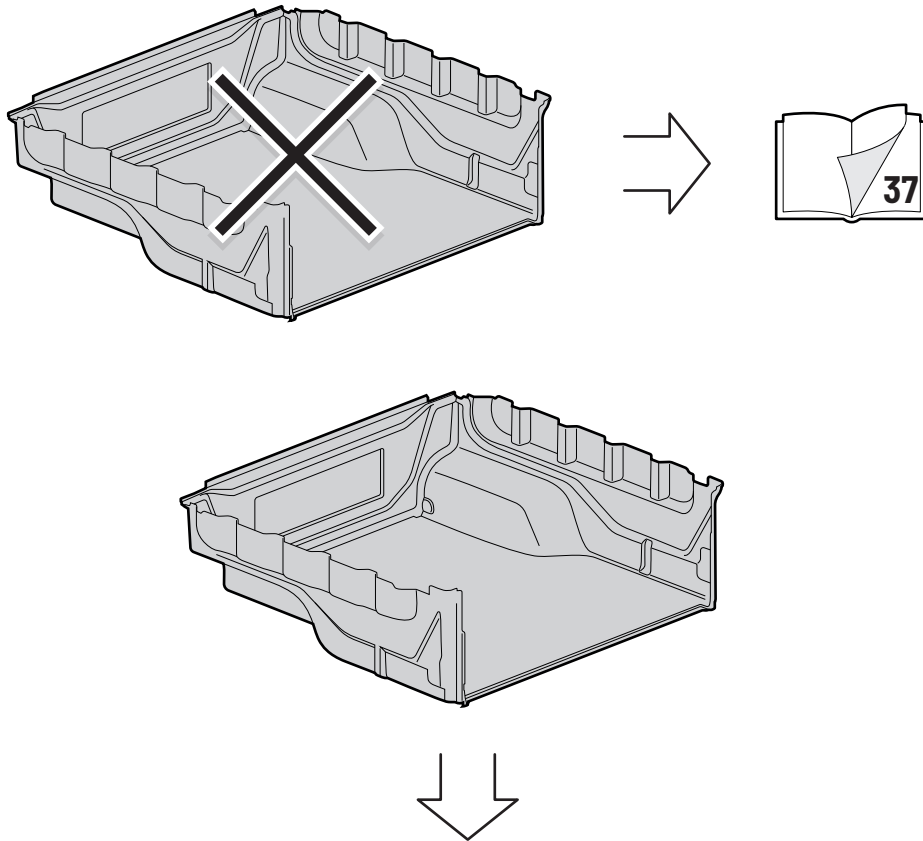


! ONLY WITH LINER

47

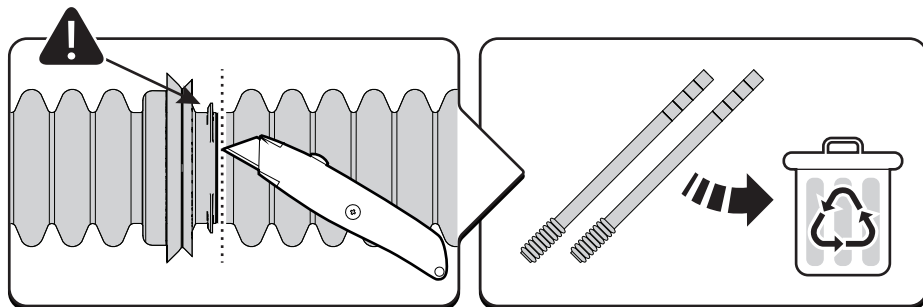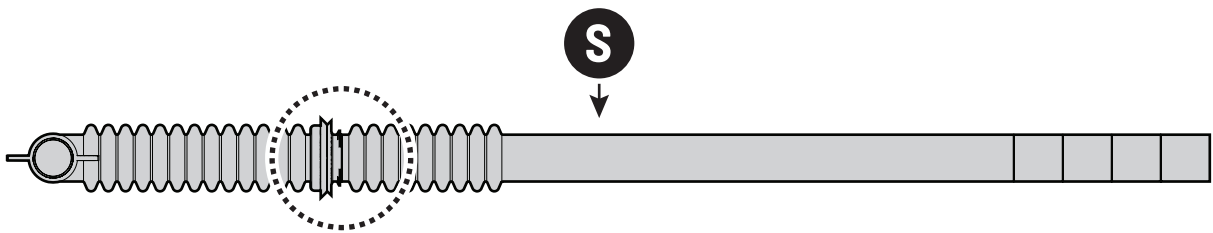


! ONLY WITH LINER

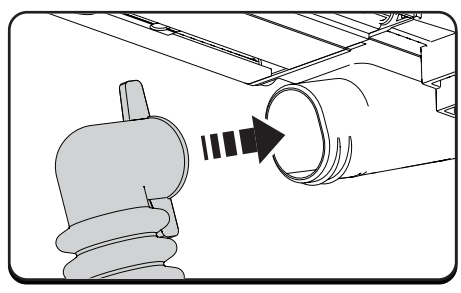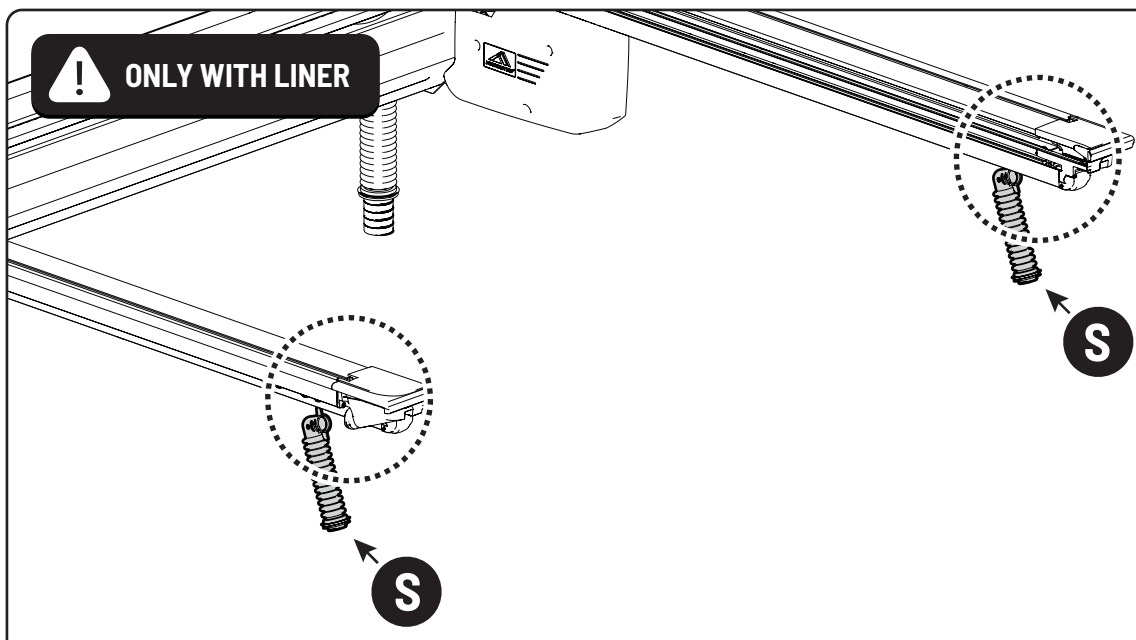

! ONLY WITH LINER

! EUROPEAN MODEL


X: 650 mm Y: 290 mm

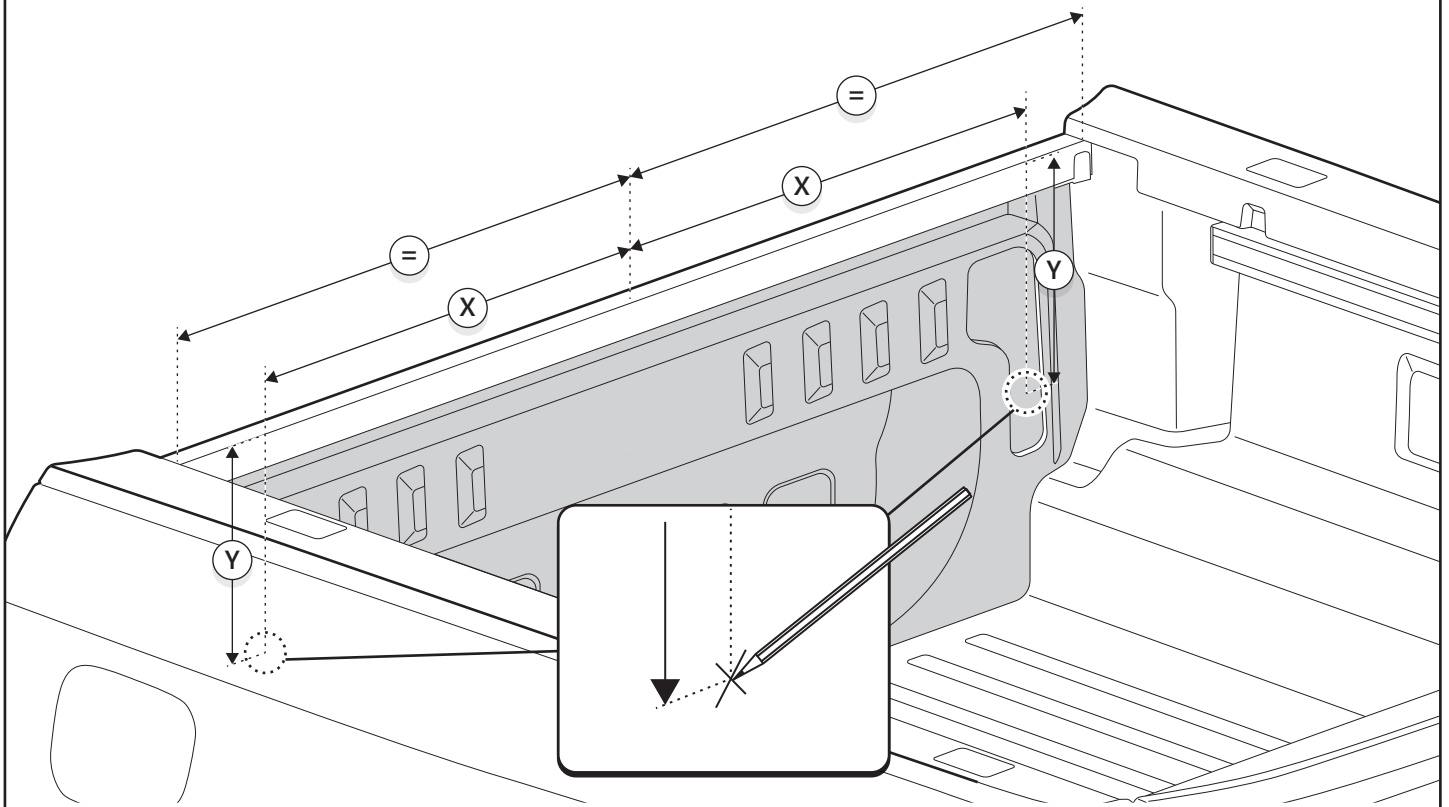

! ONLY WITH LINER

! OTHER MODELS





X: 560 mm Y: 330 mm

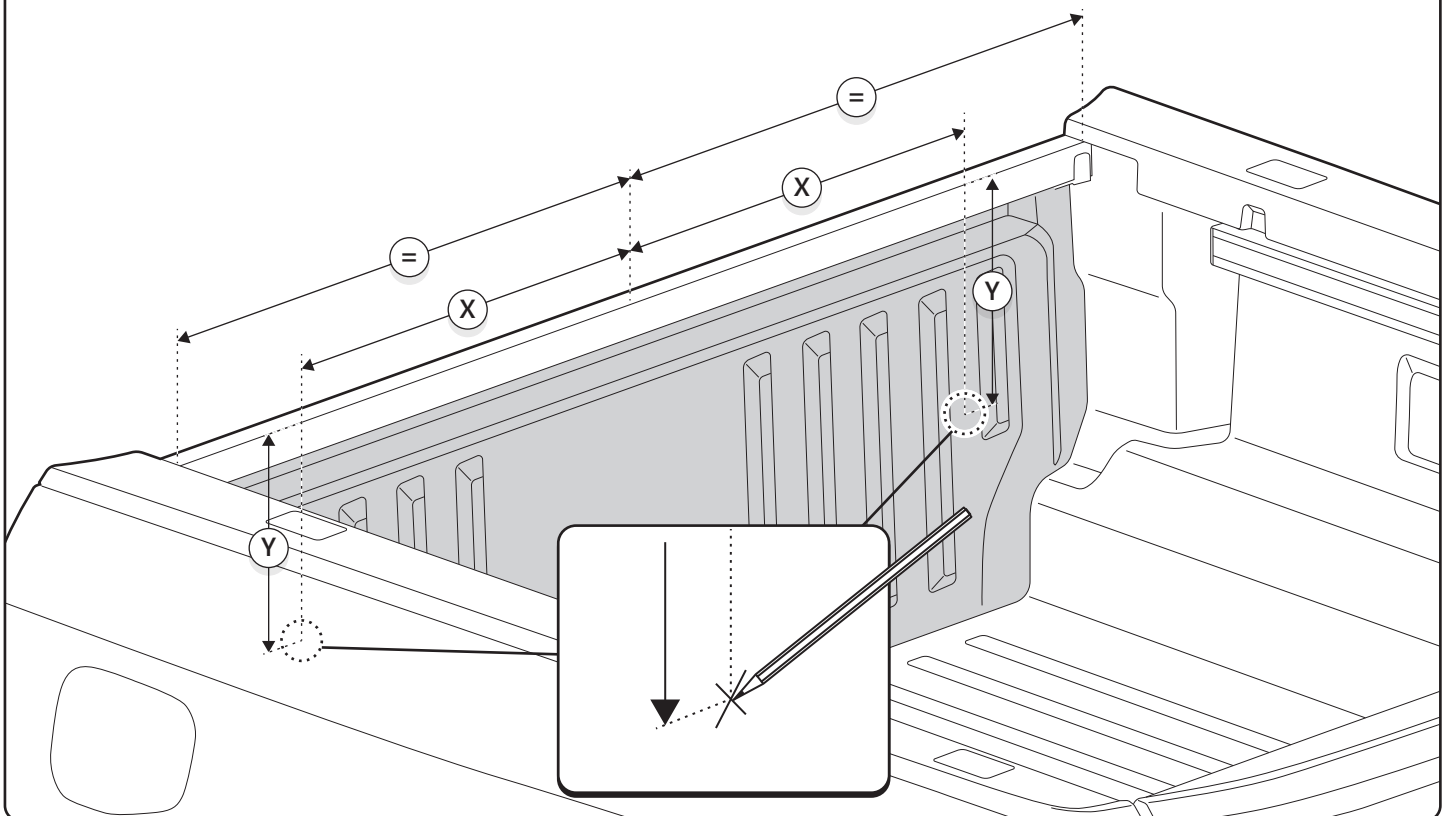



! ONLY WITH LINER

 Ø 3,5mm

 Ø40 mm

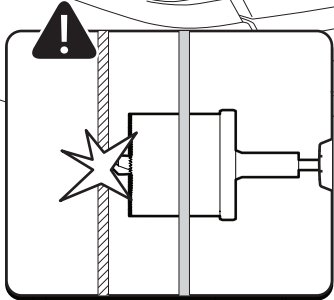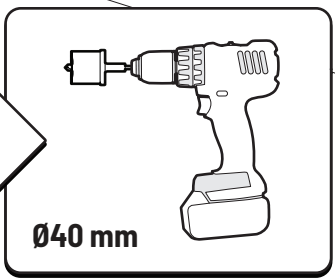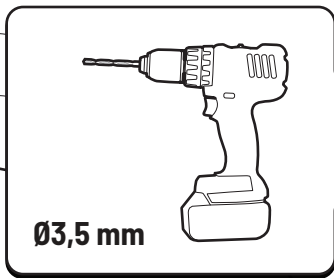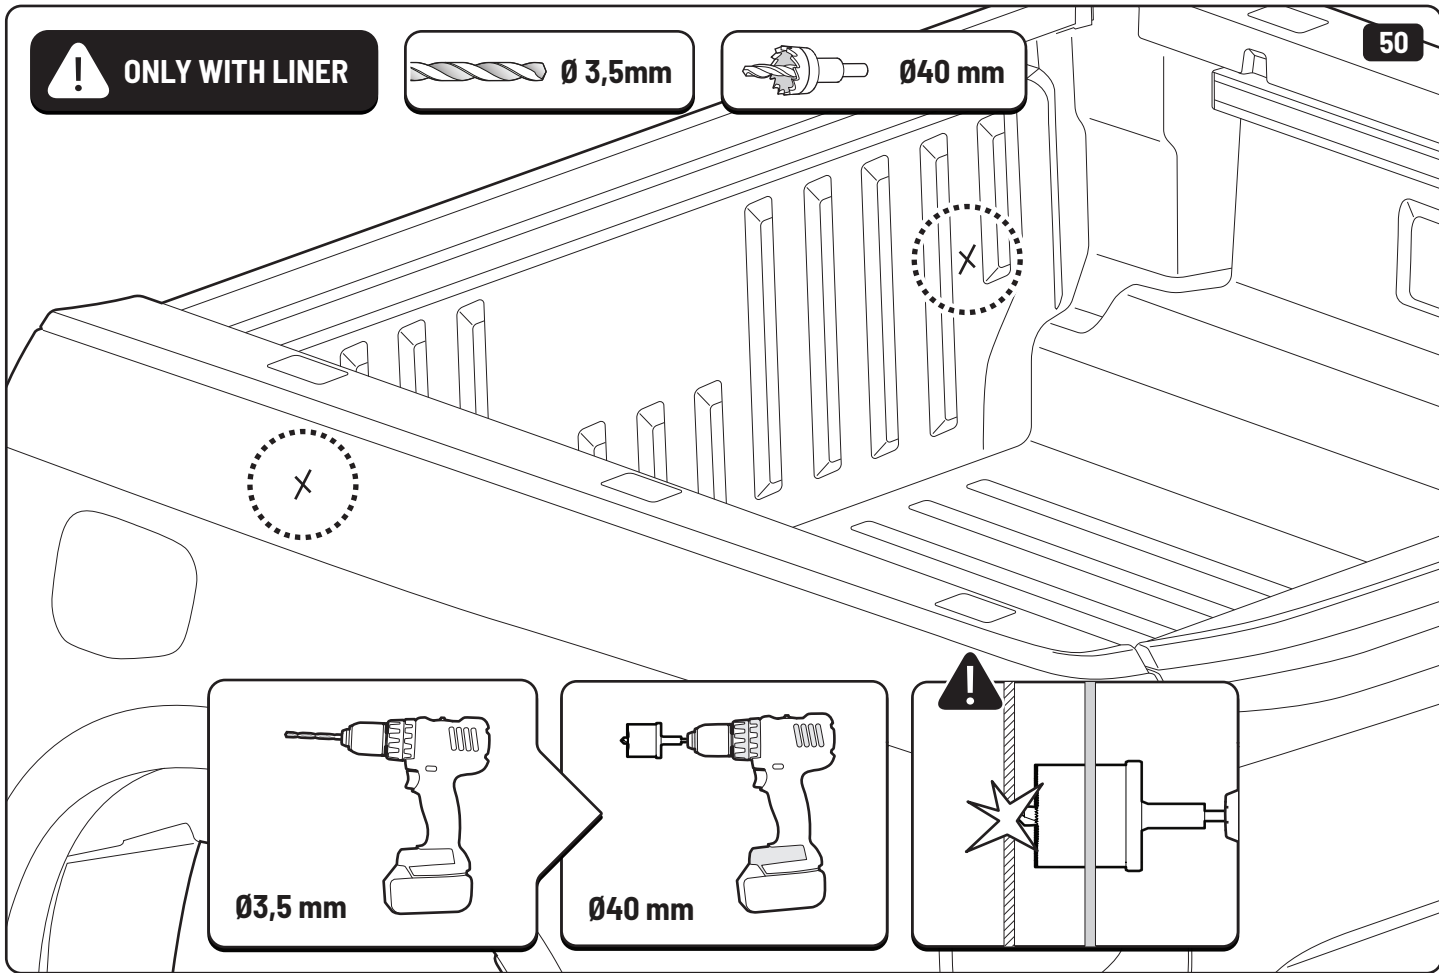





! ONLY WITH LINER

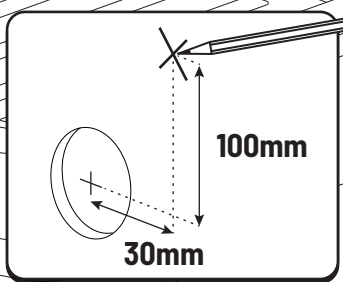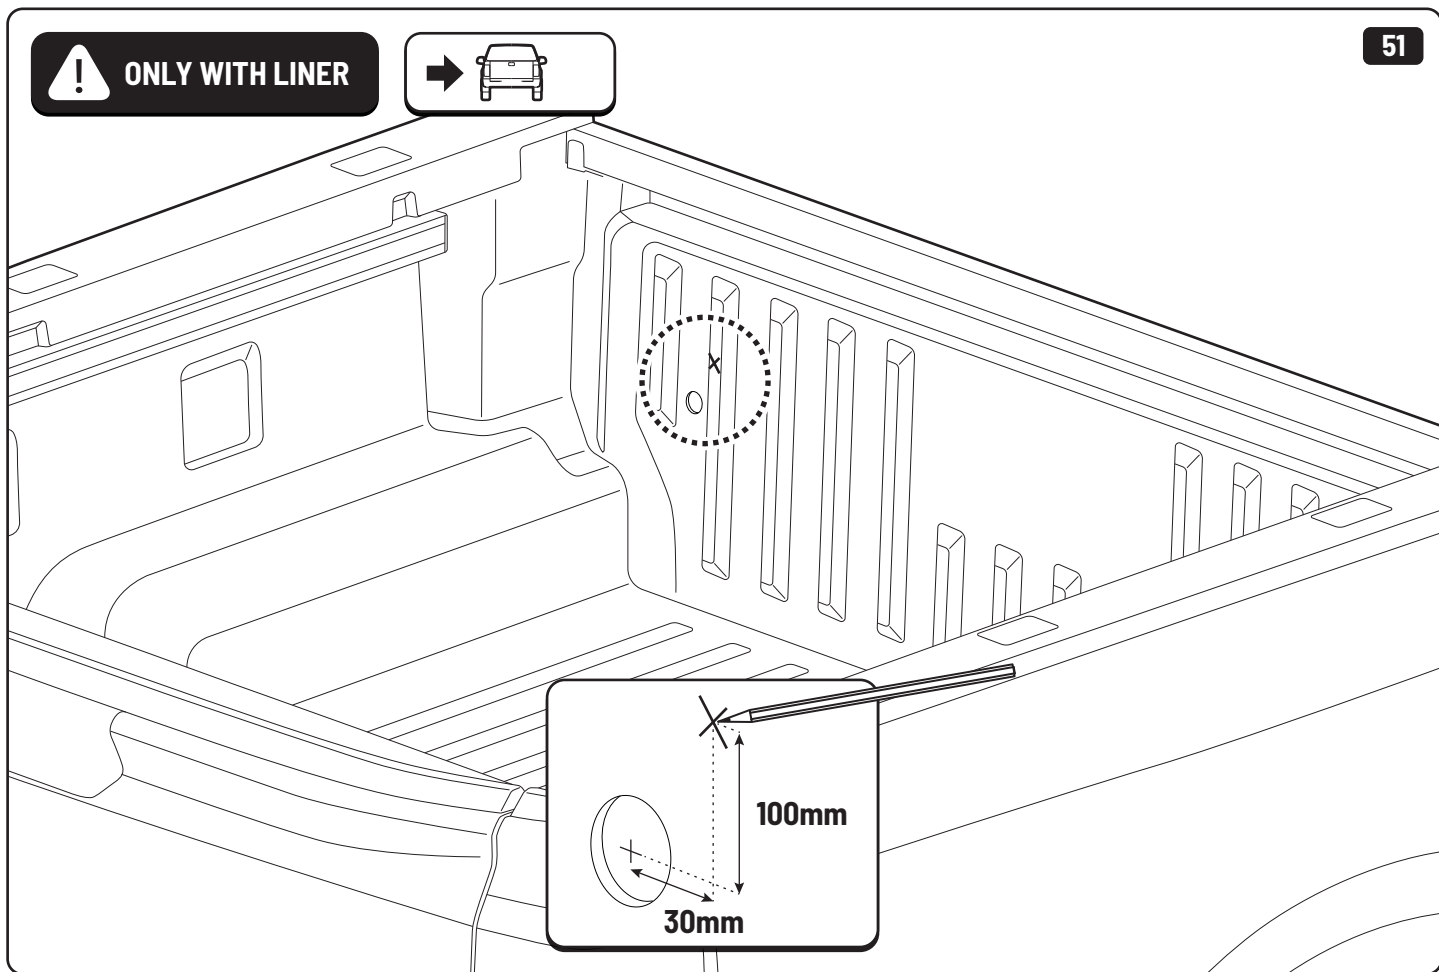

! ONLY WITH LINER





52

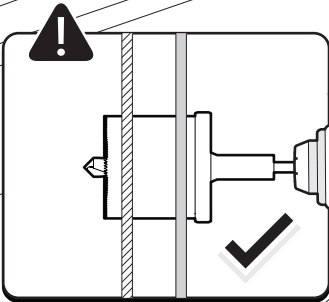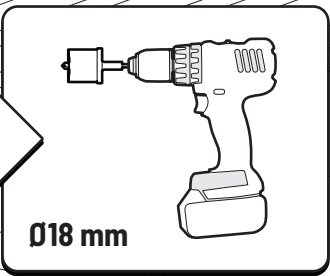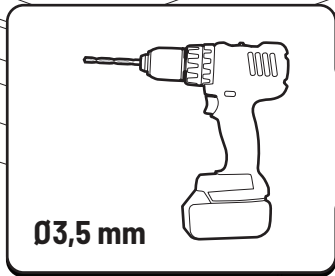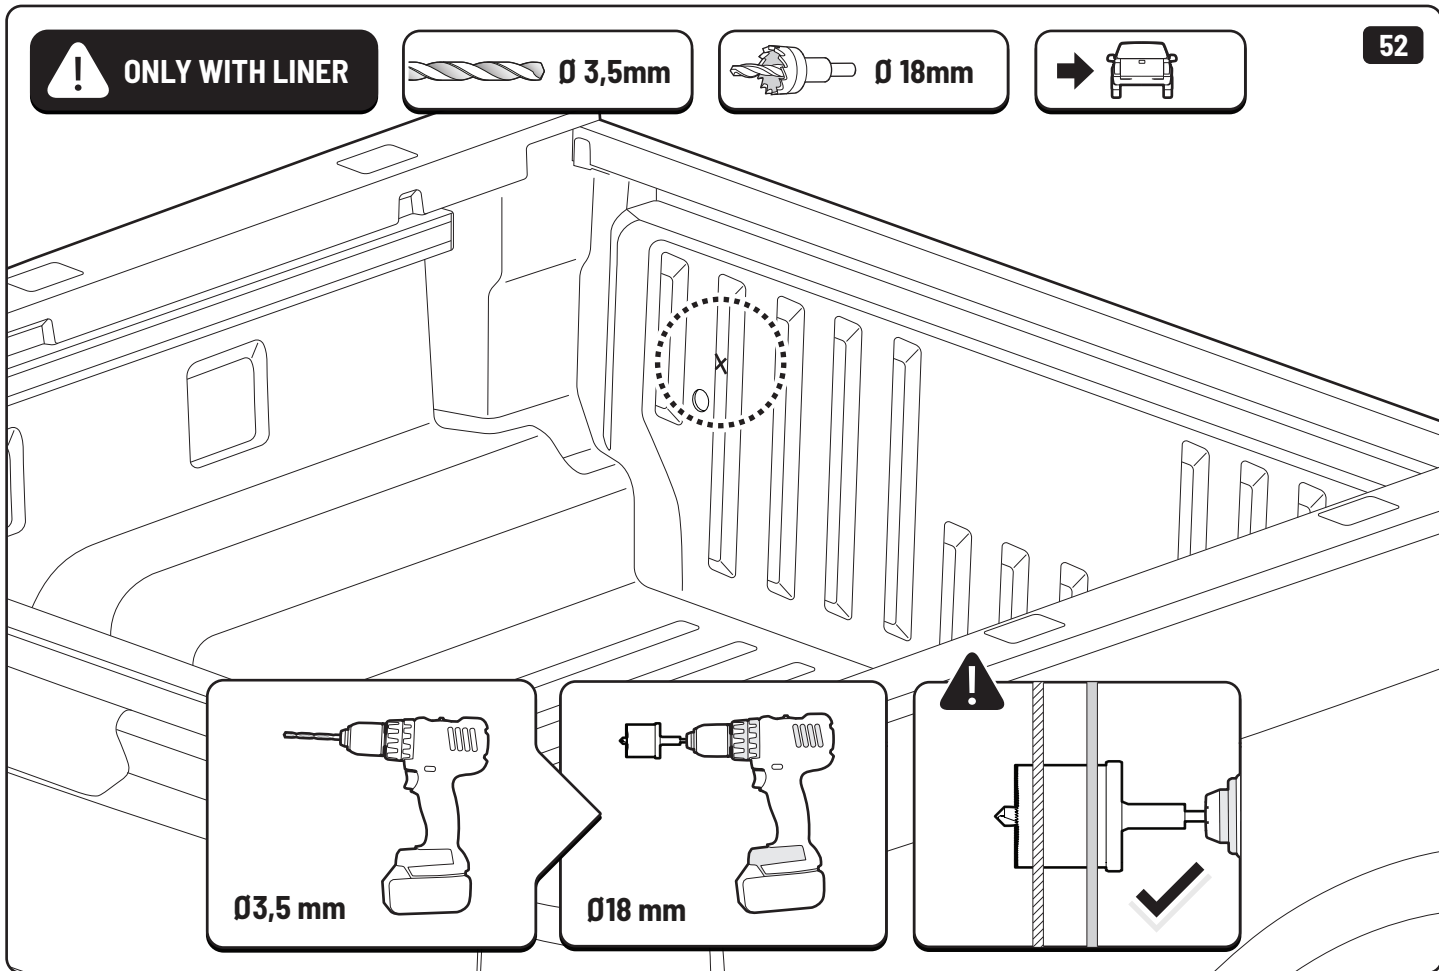

! ONLY WITH LINER




53

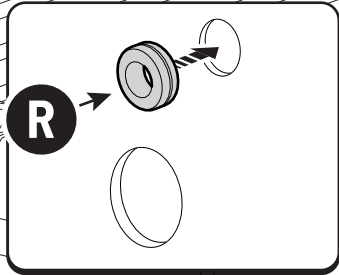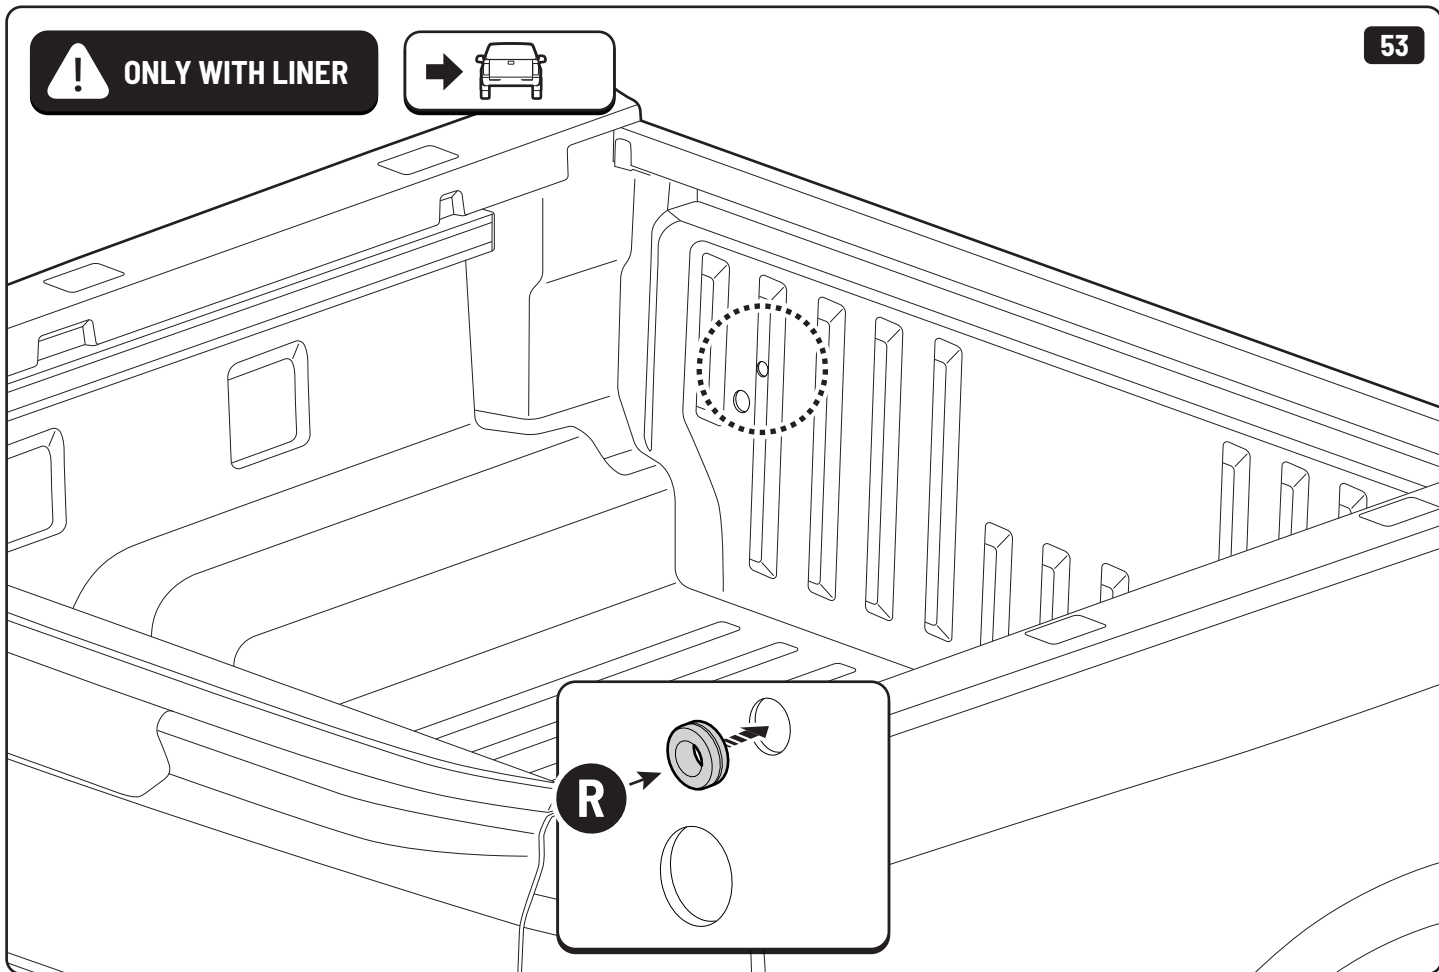

! ONLY WITH LINER



A: 30 mm B: 20 mm



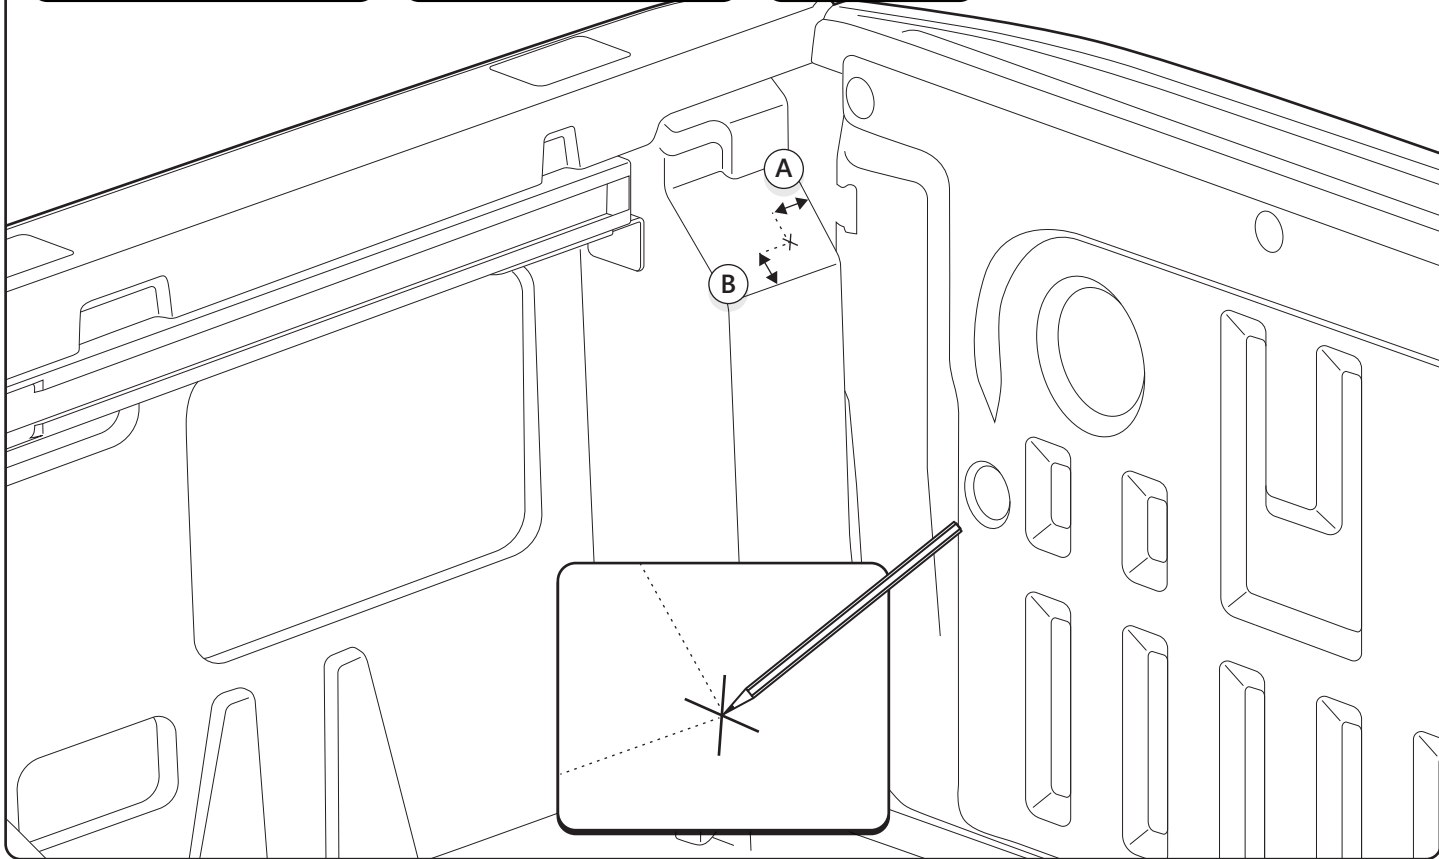


! ONLY WITH LINER

Ø 3,5mm

Ø30 mm

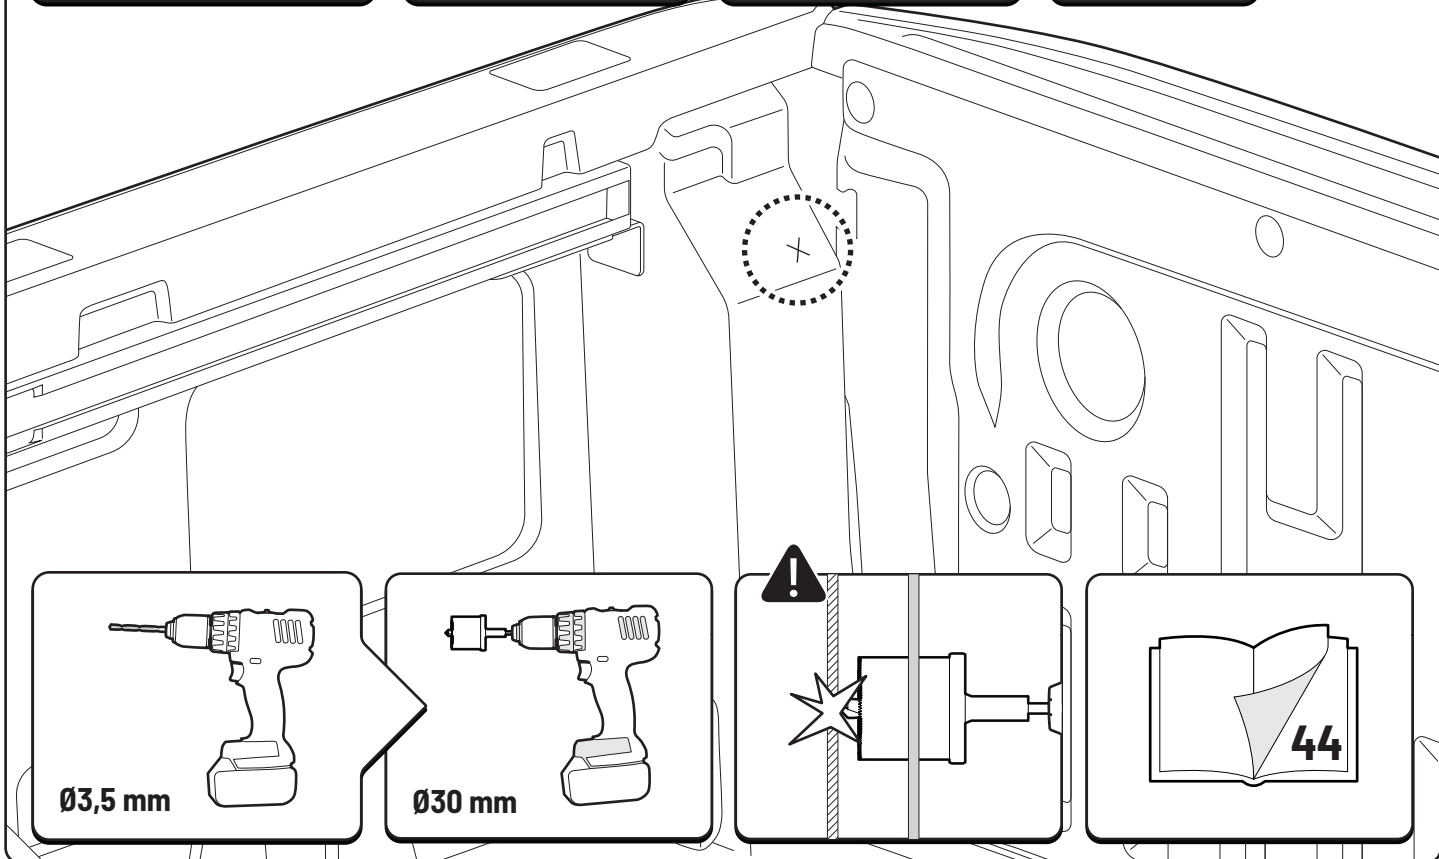


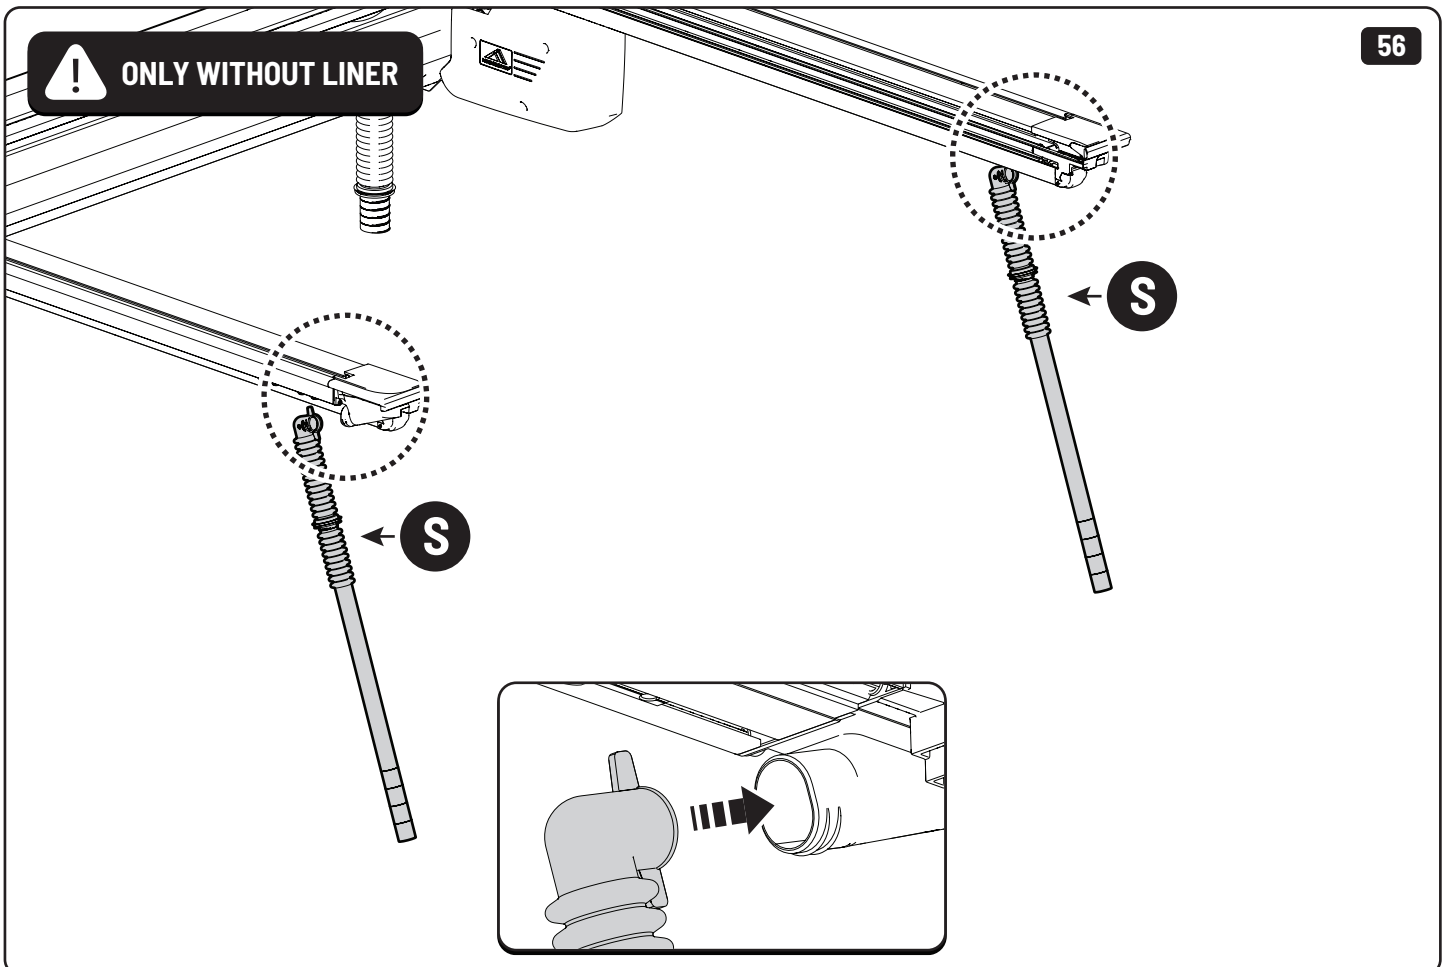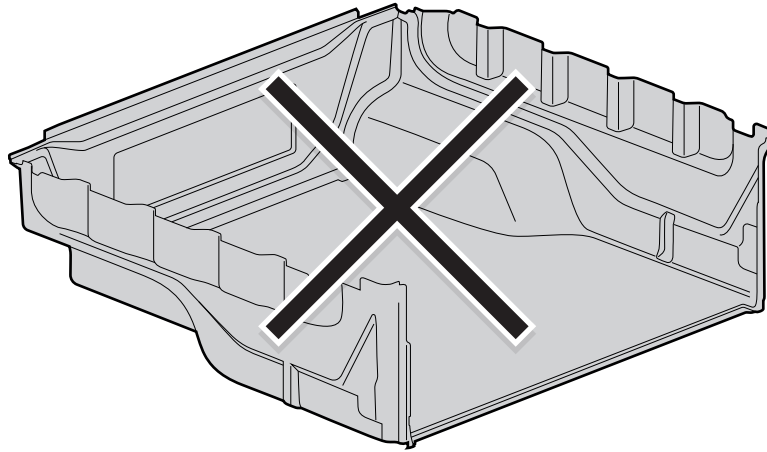

! ONLY WITHOUT LINER

! EUROPEAN MODEL


Double Cab: X = 650mm Y = 290 mm
Rap Cab: X = 650mm Y = 320 mm

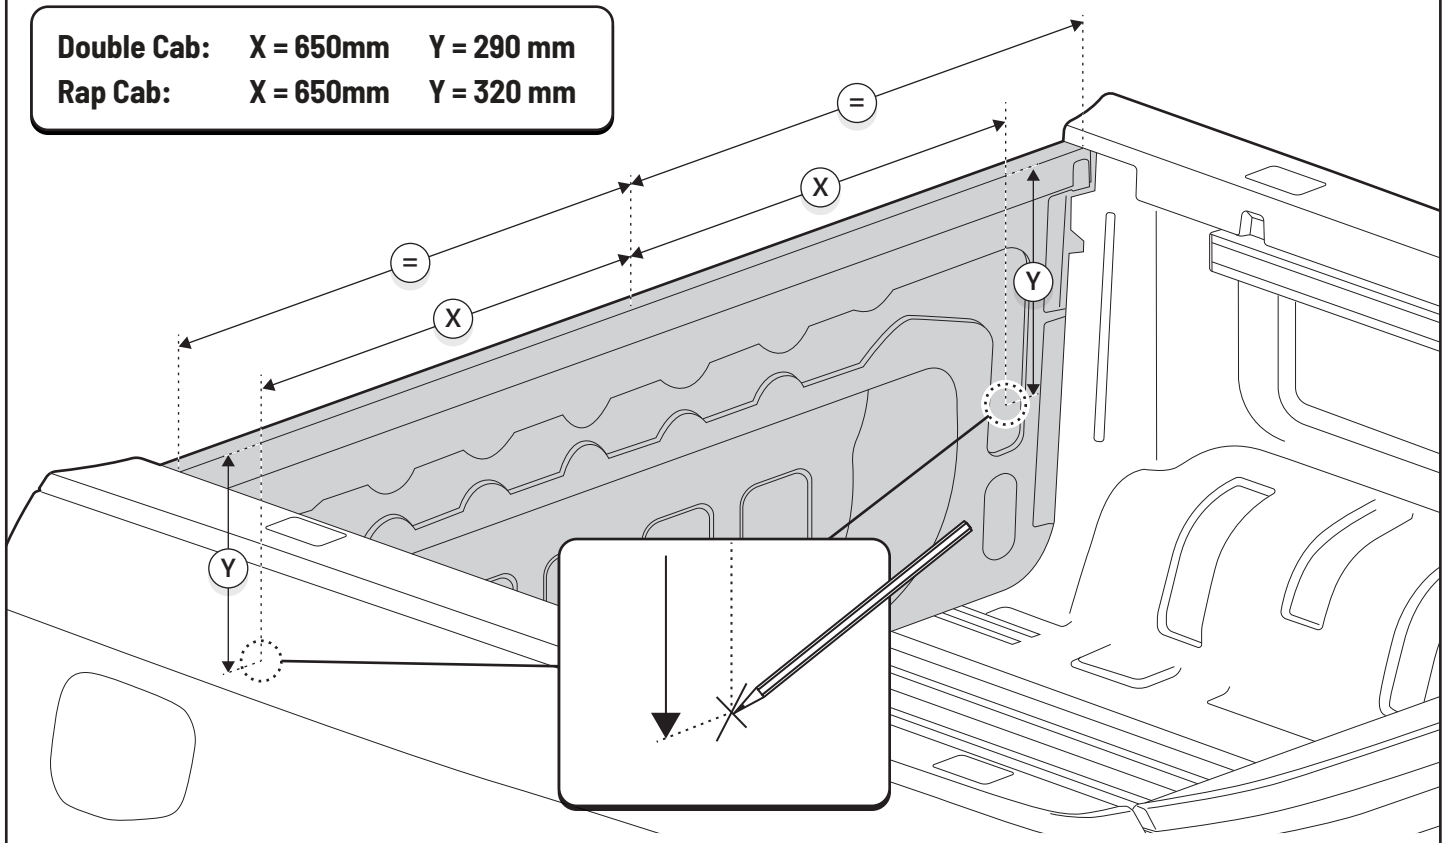

! ONLY WITHOUT LINER


! OTHER MODELS

Double Cab: X = 580 mm Y = 290 mm
Rap Cab: X = 580 mm Y = 320 mm

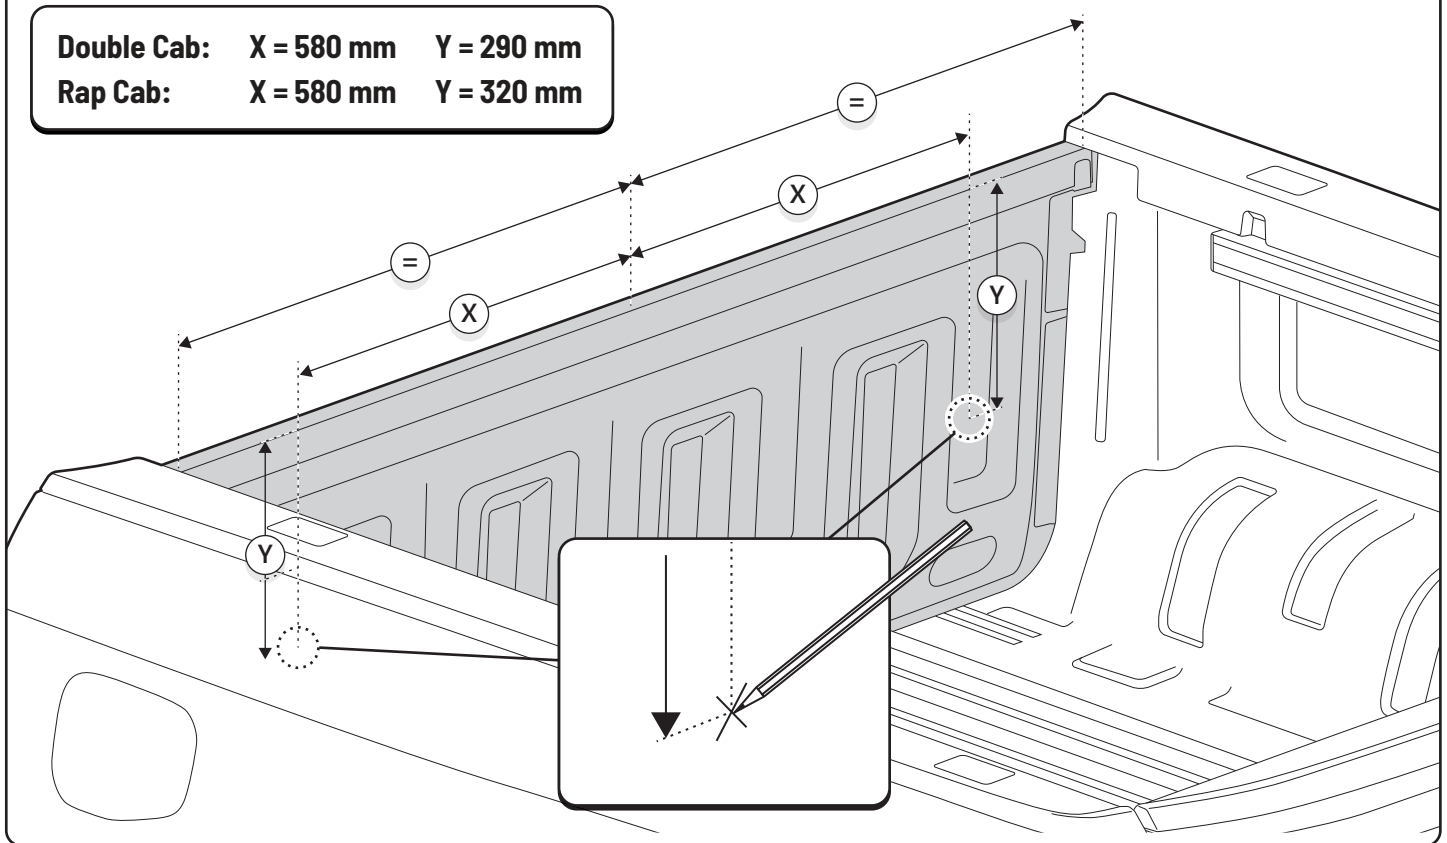


! ONLY WITHOUT LINER

 **Ø40 mm**

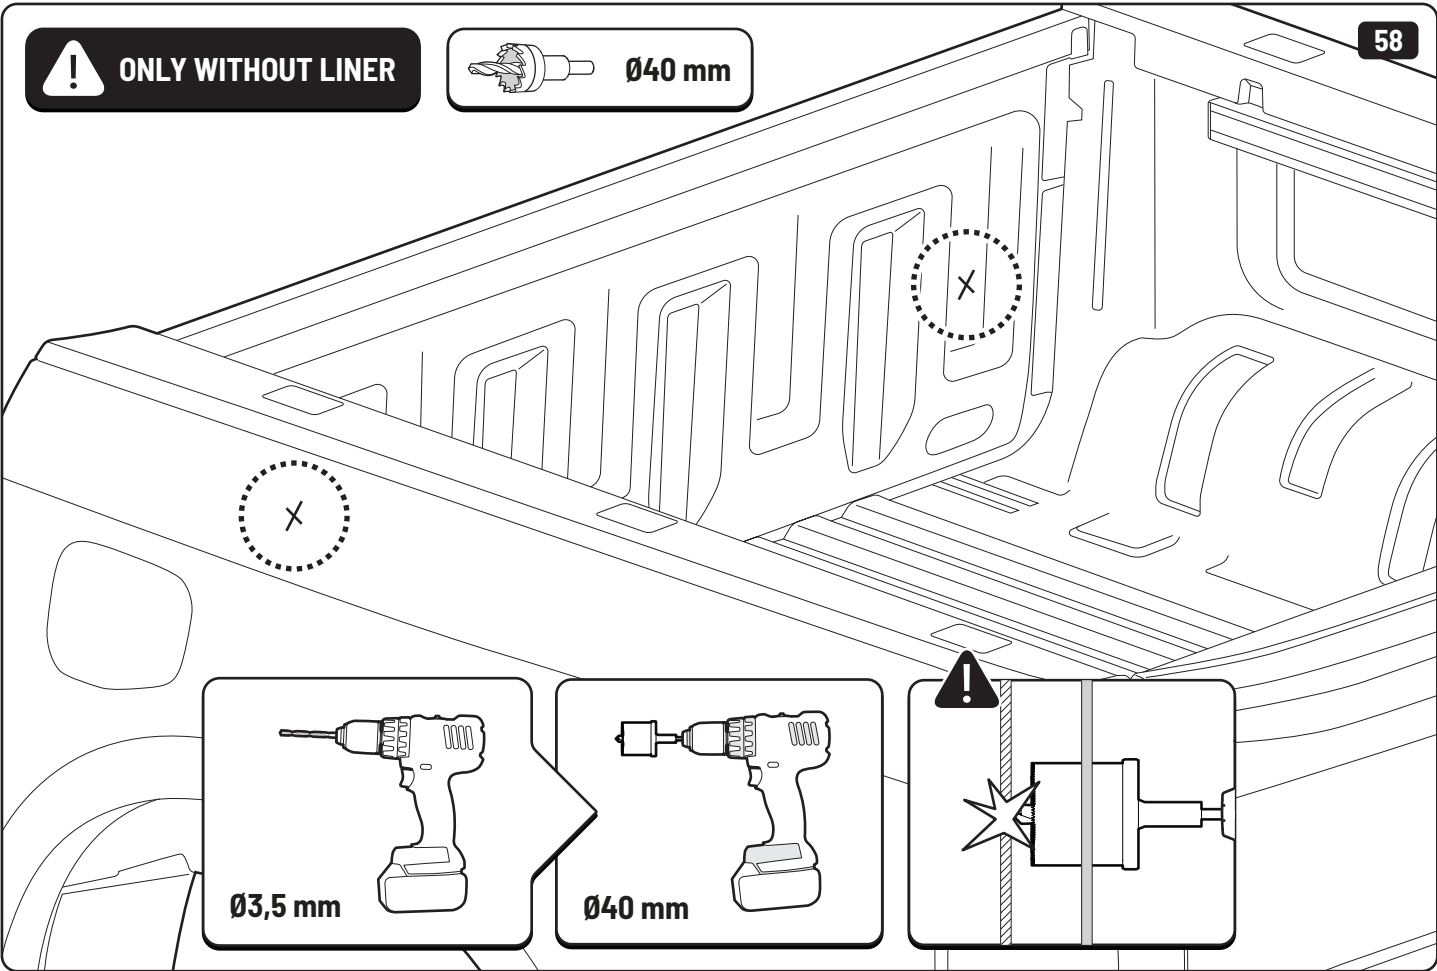


! ONLY WITHOUT LINER



! Rust Protection

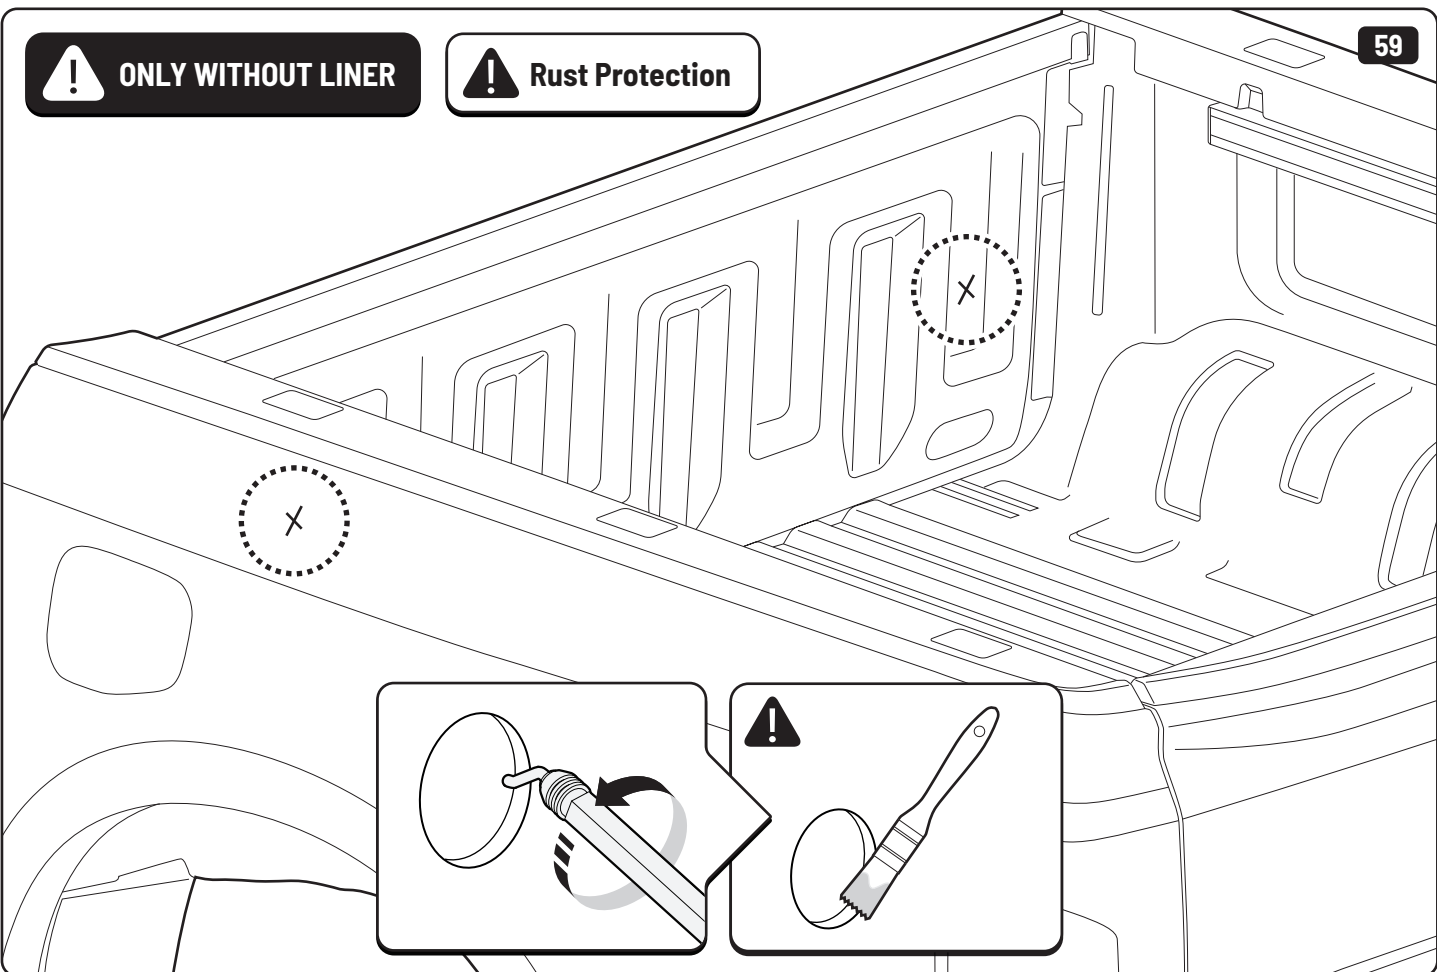

! ONLY WITHOUT LINER

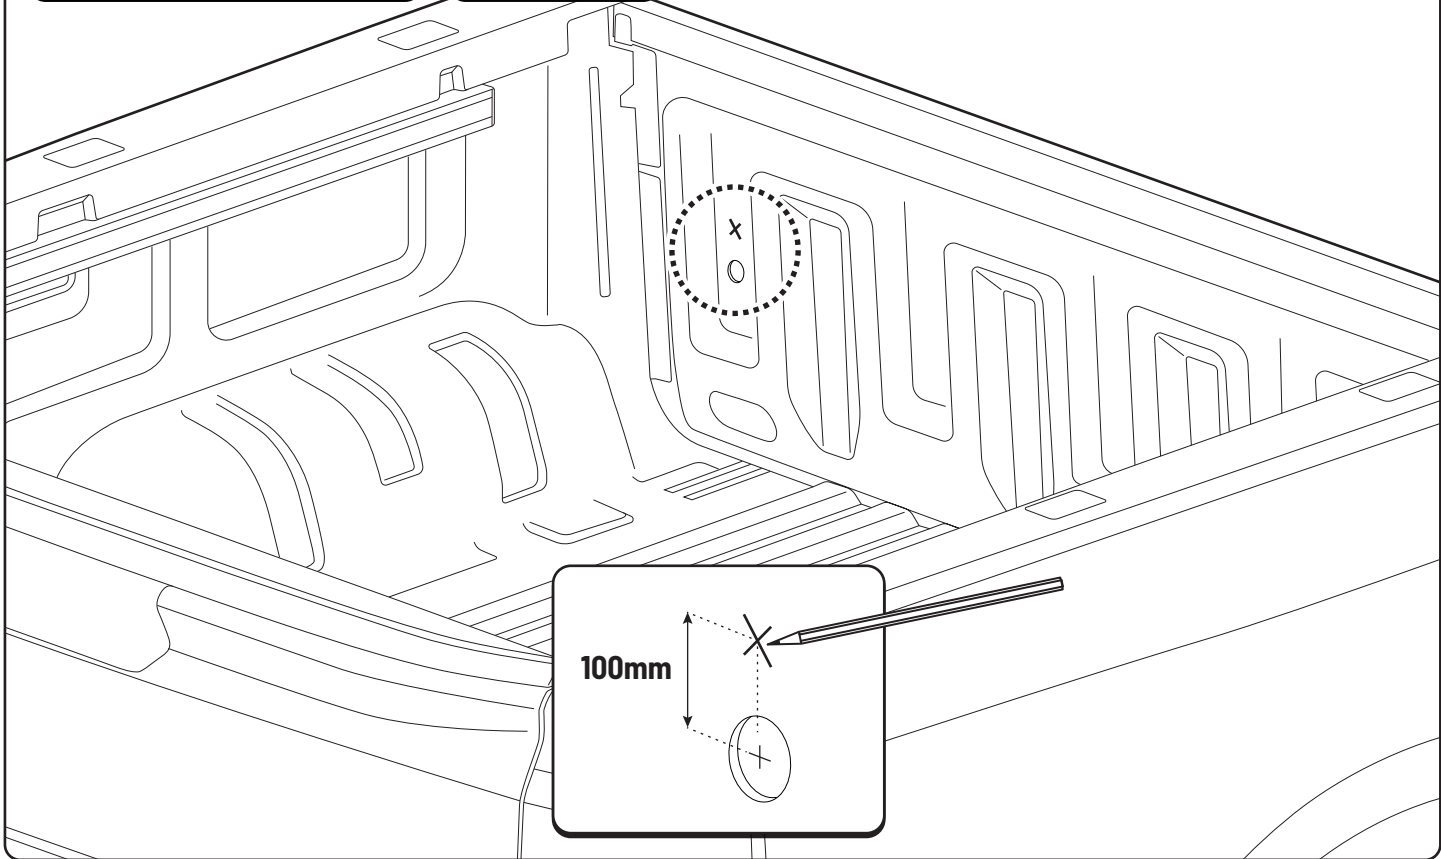


! ONLY WITHOUT LINER

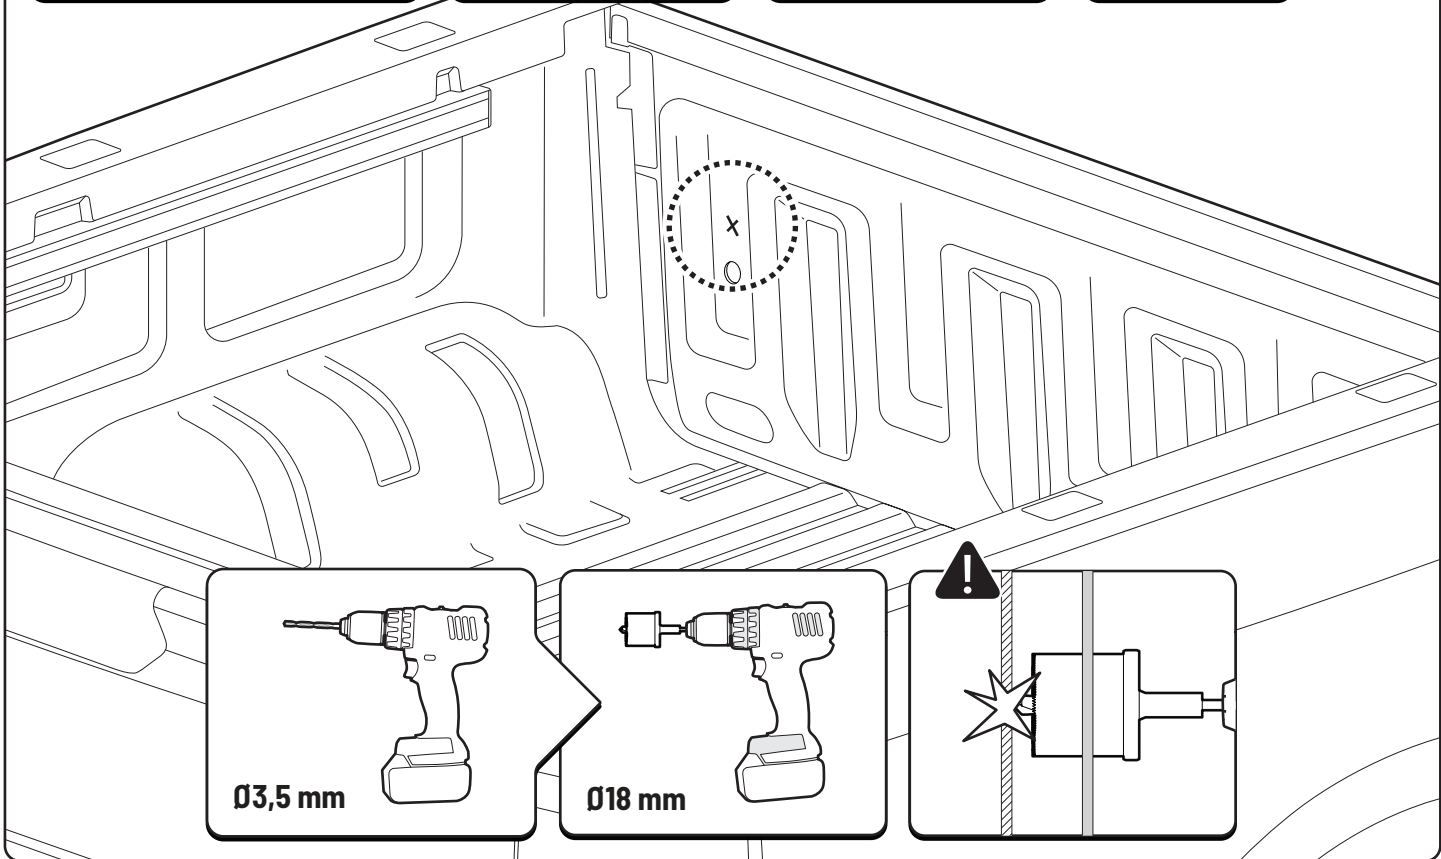

! ONLY WITHOUT LINER




! Rust Protection

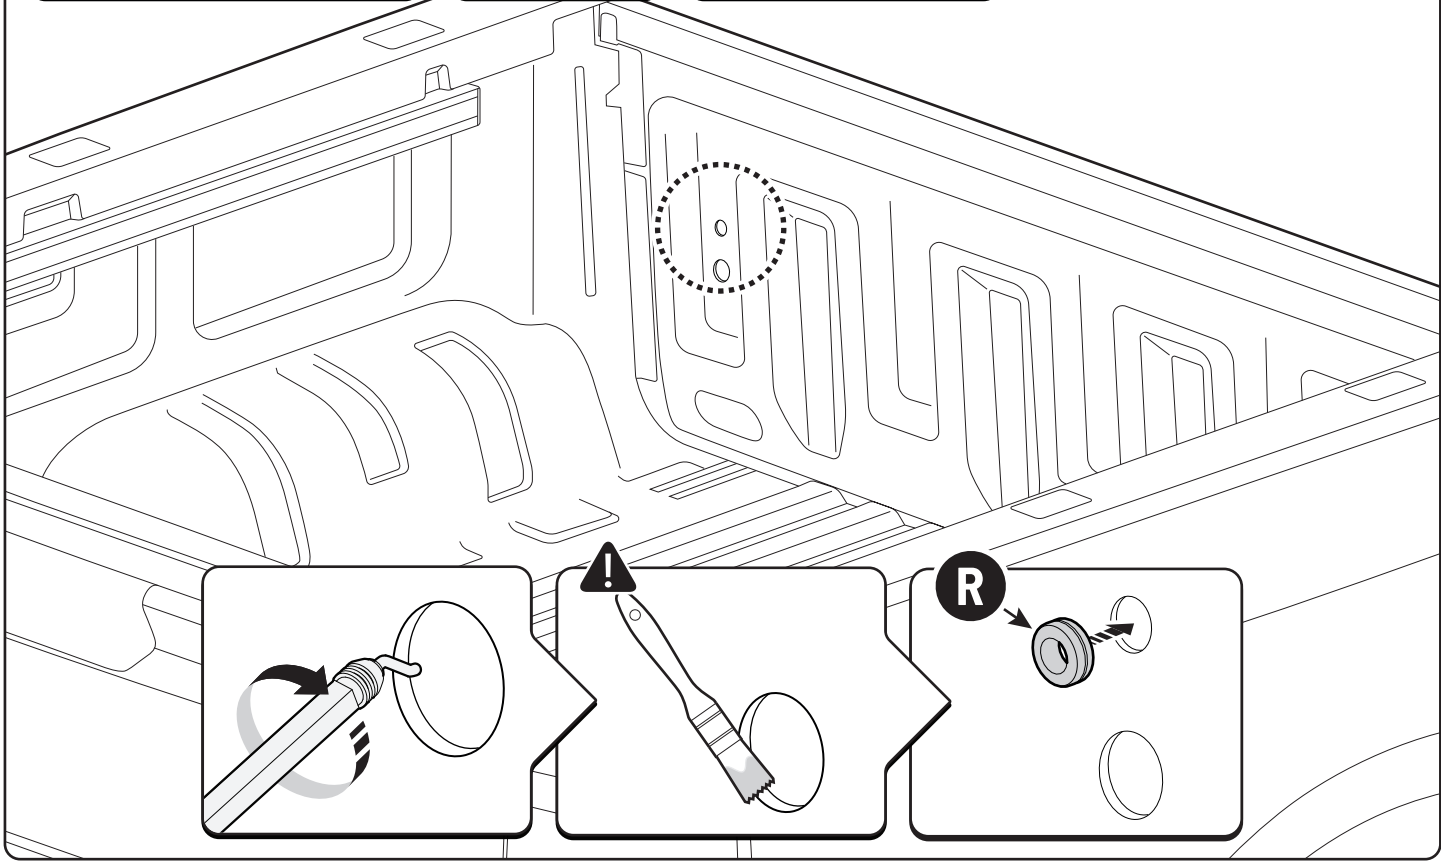

! ONLY WITHOUT LINER


A: 55 mm B: 380 mm

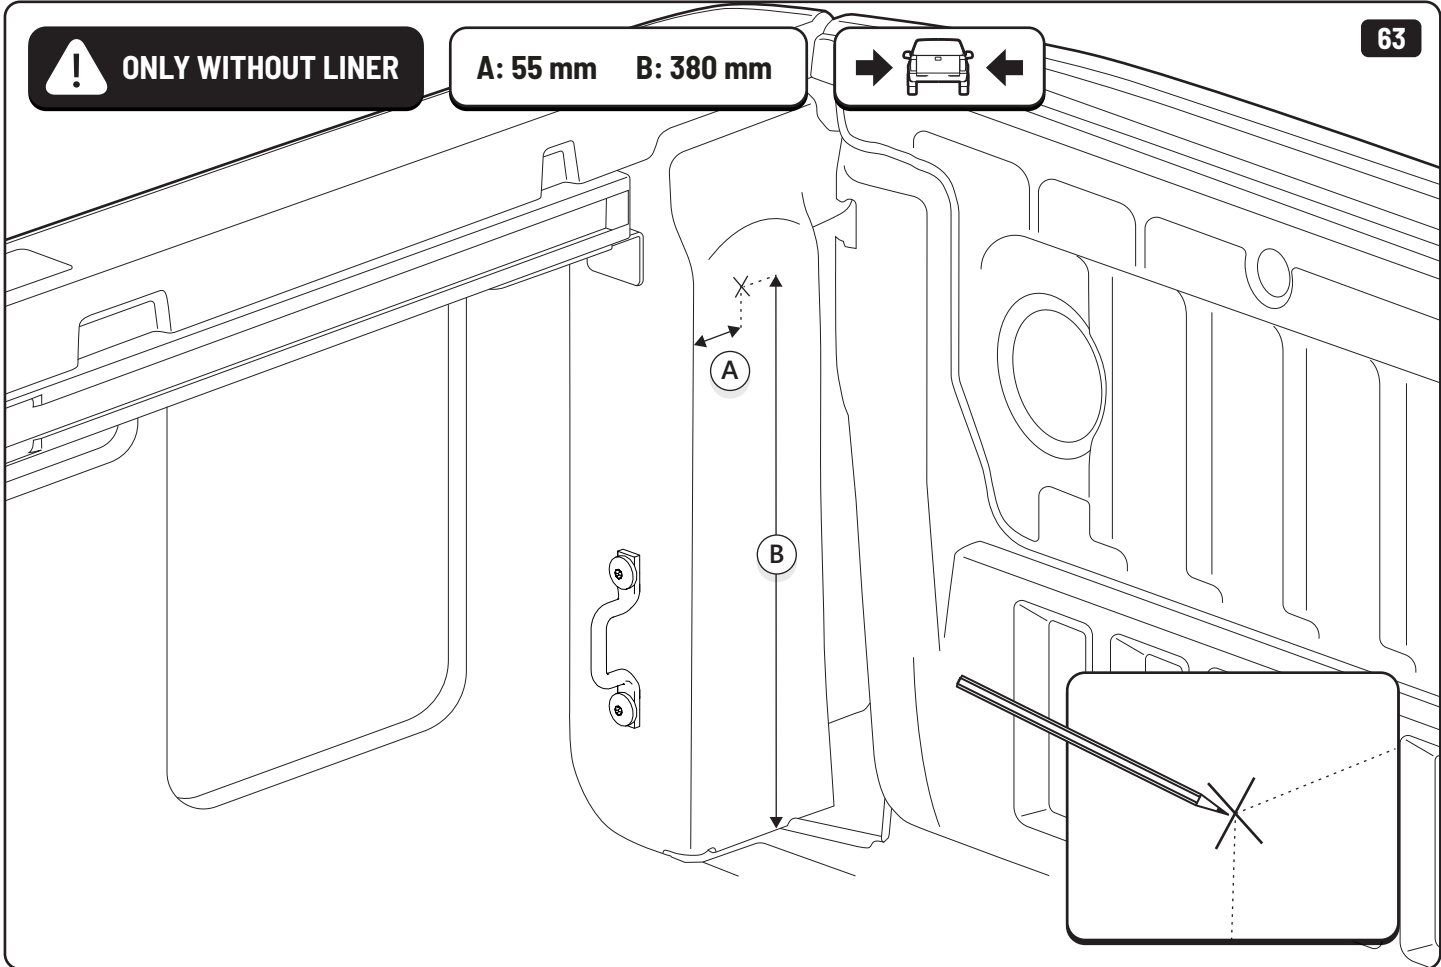








! ONLY WITHOUT LINER




 **Ø30 mm**


! Rust Protection

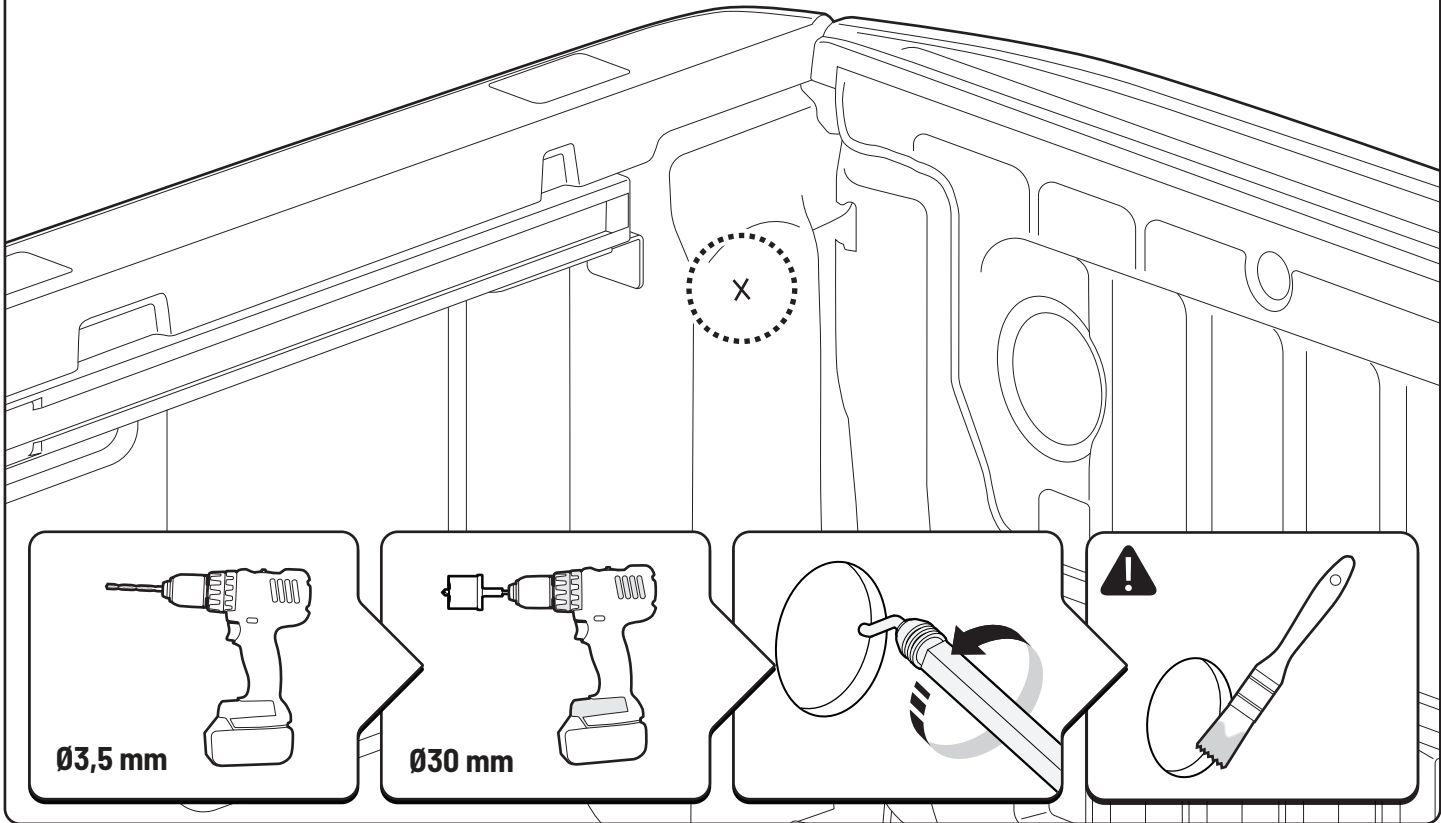


! ONLY TO BE INSTALLED BY AUTHORIZED PERSONNEL

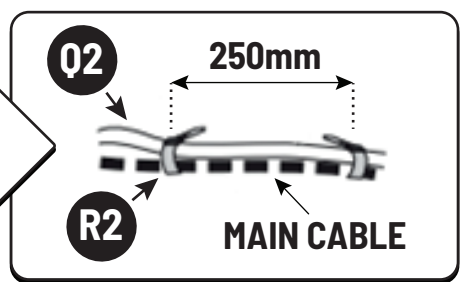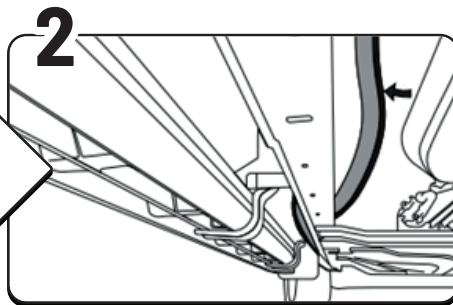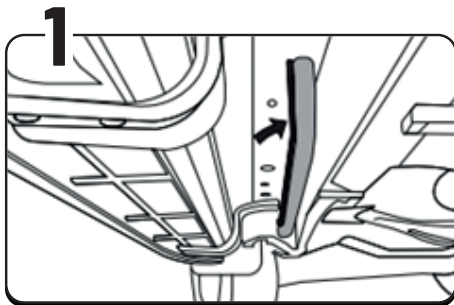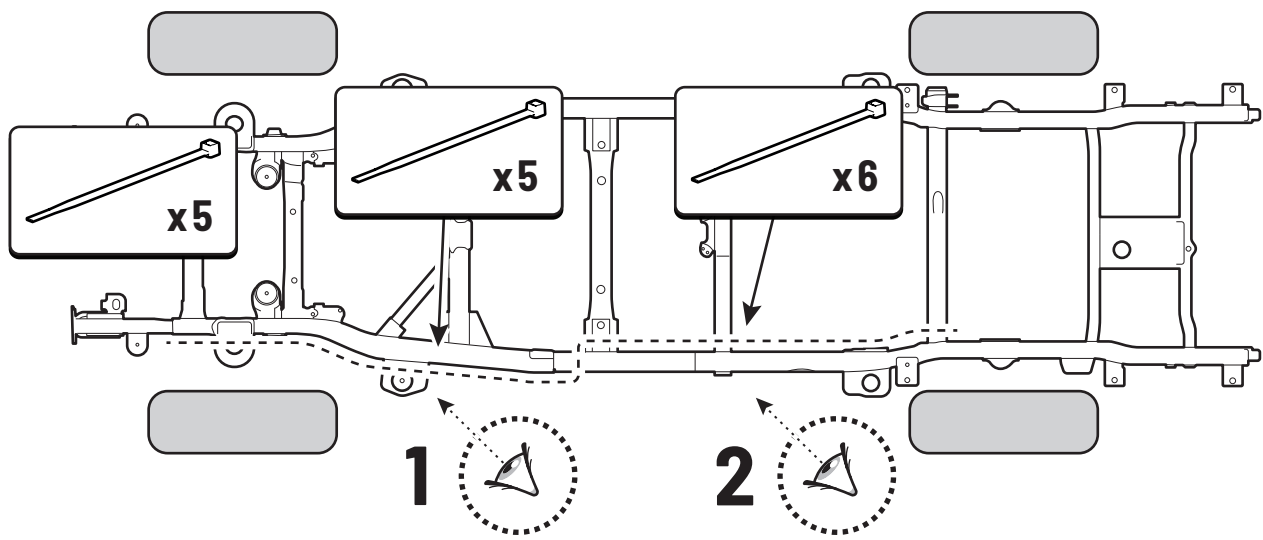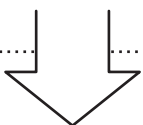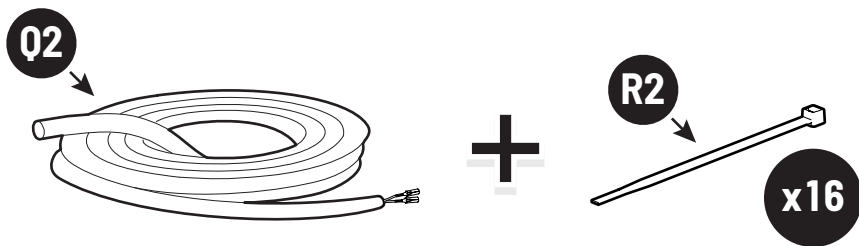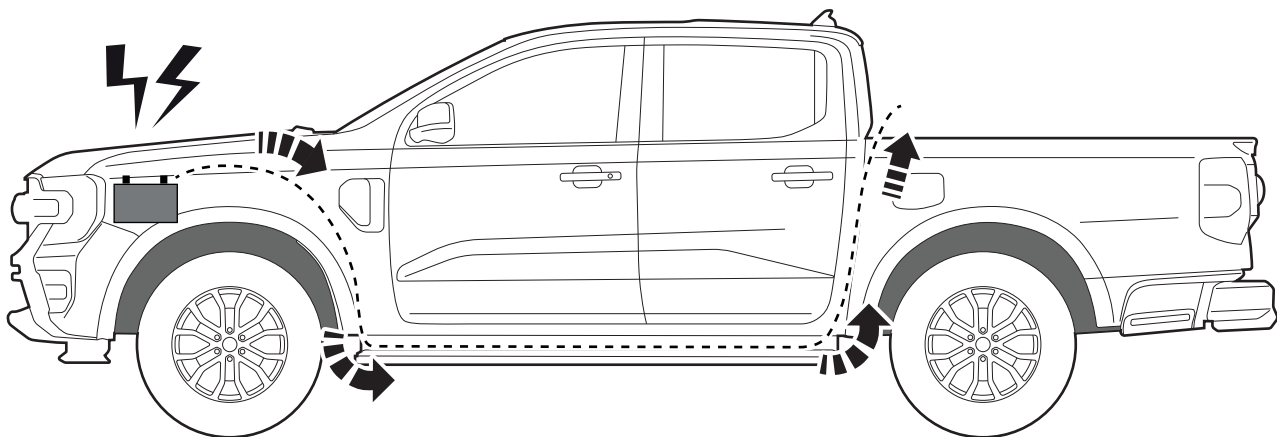

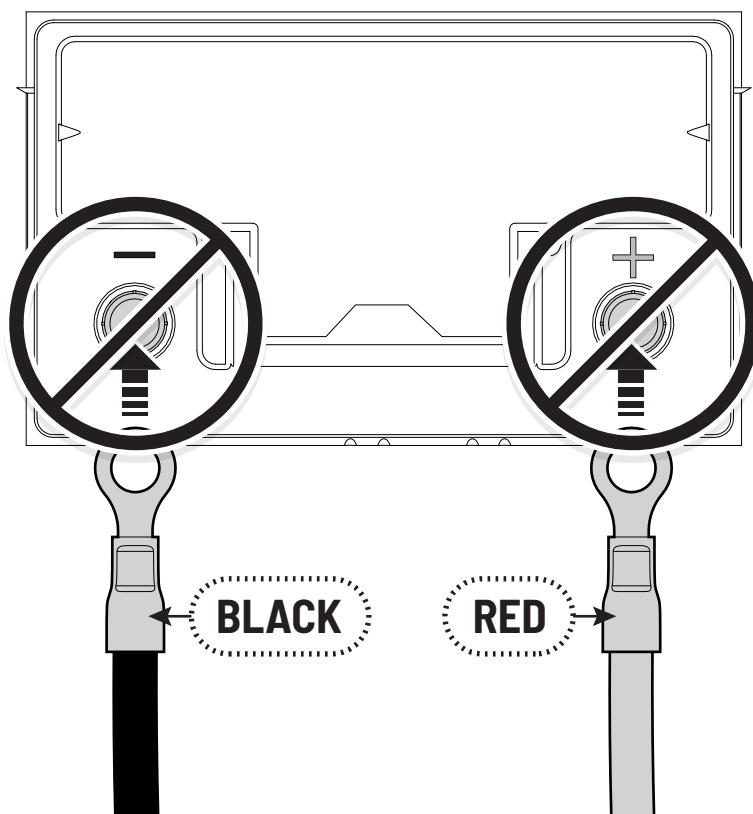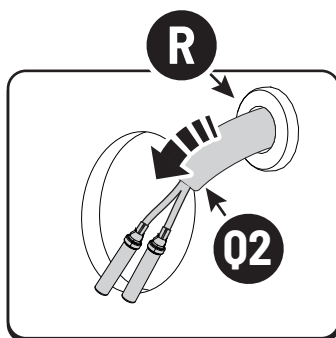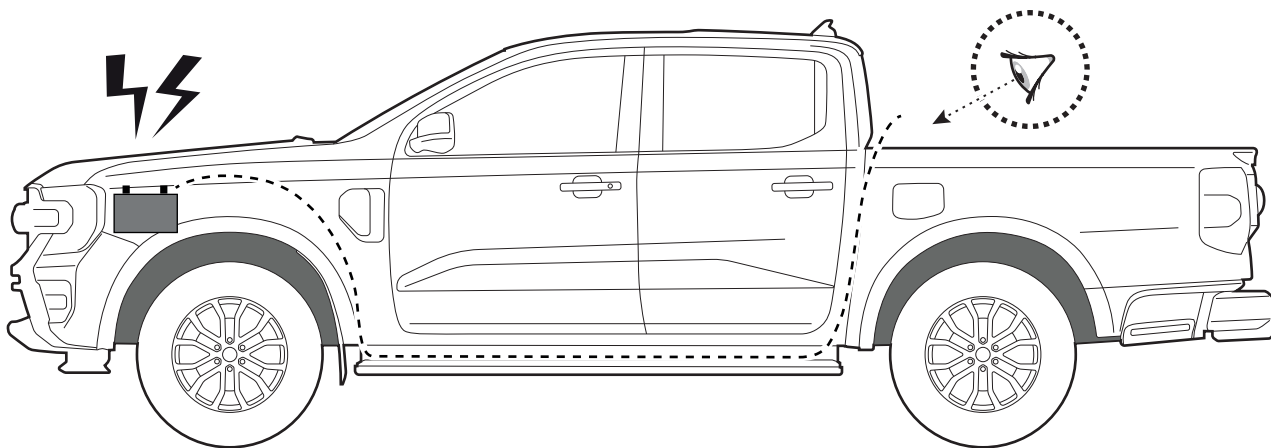


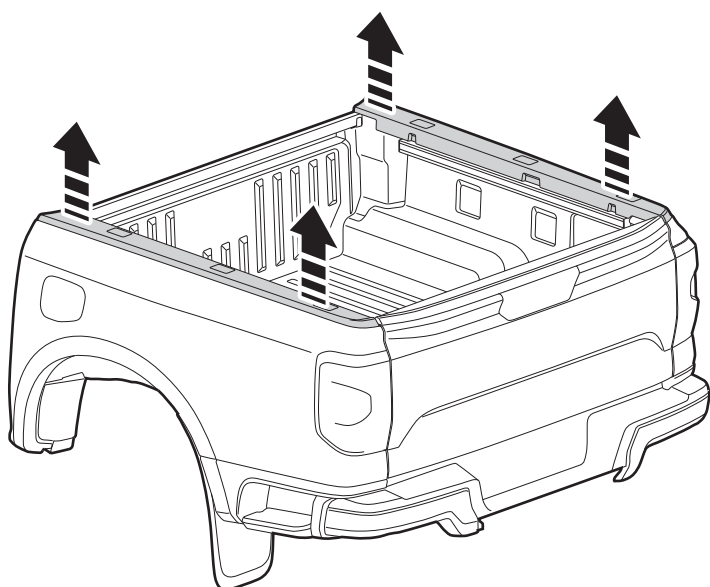

Ford XLT / Raptor

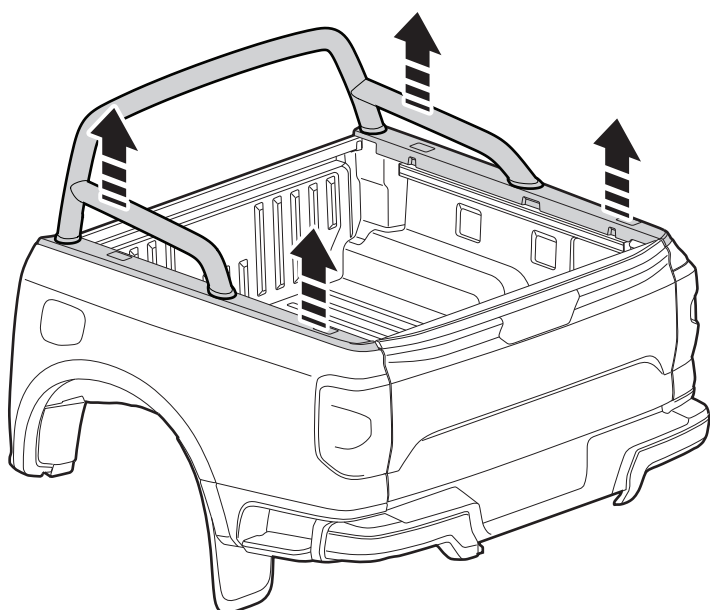


Ford XLT / Raptor

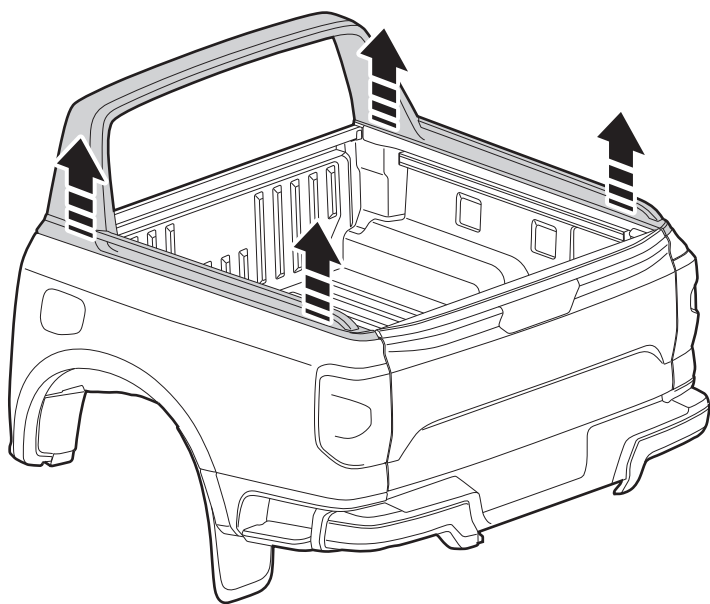


Ford Wildtrak

! ONLY FOR THREADED HOLES

LOCTITE 243


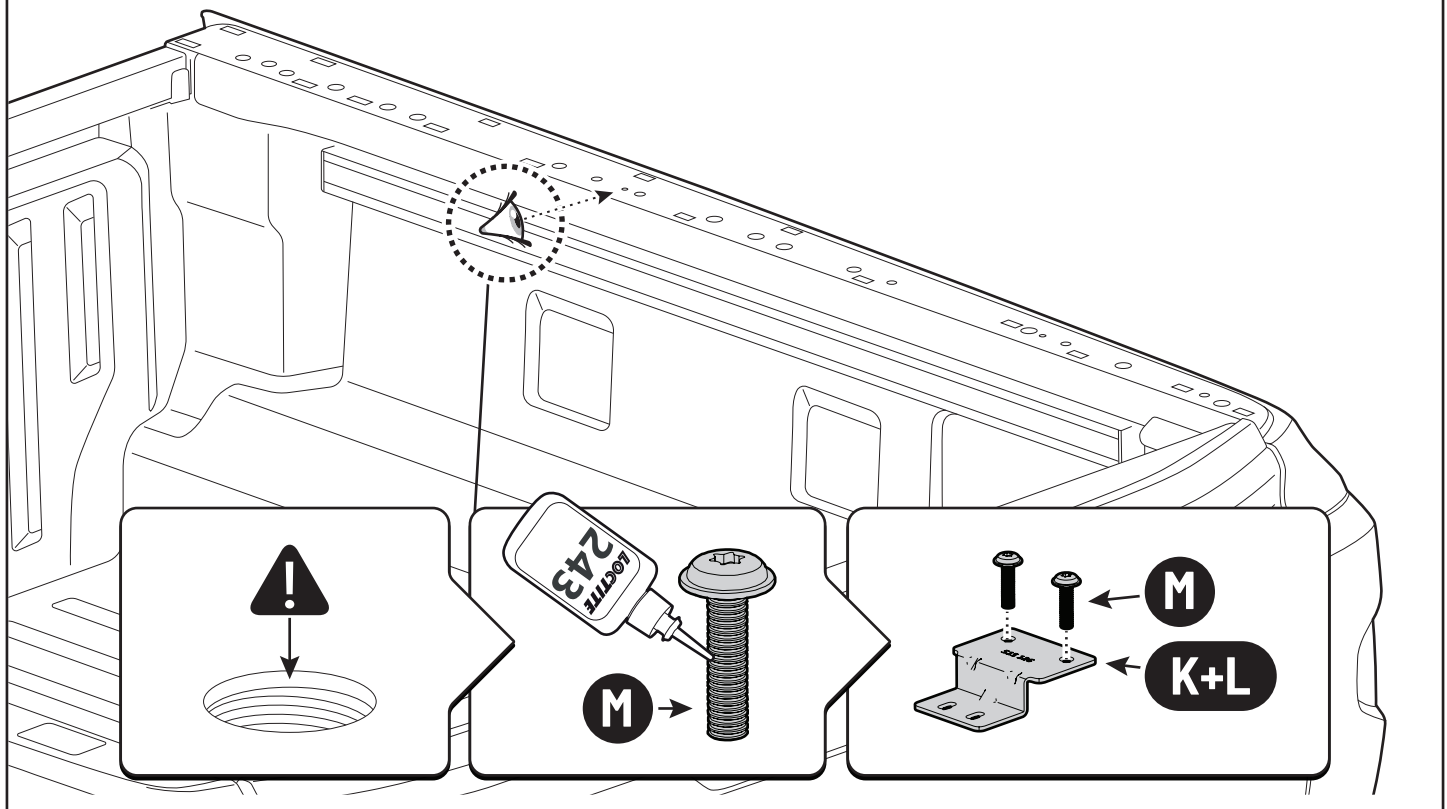


! ONLY FOR NON-THREADED HOLES

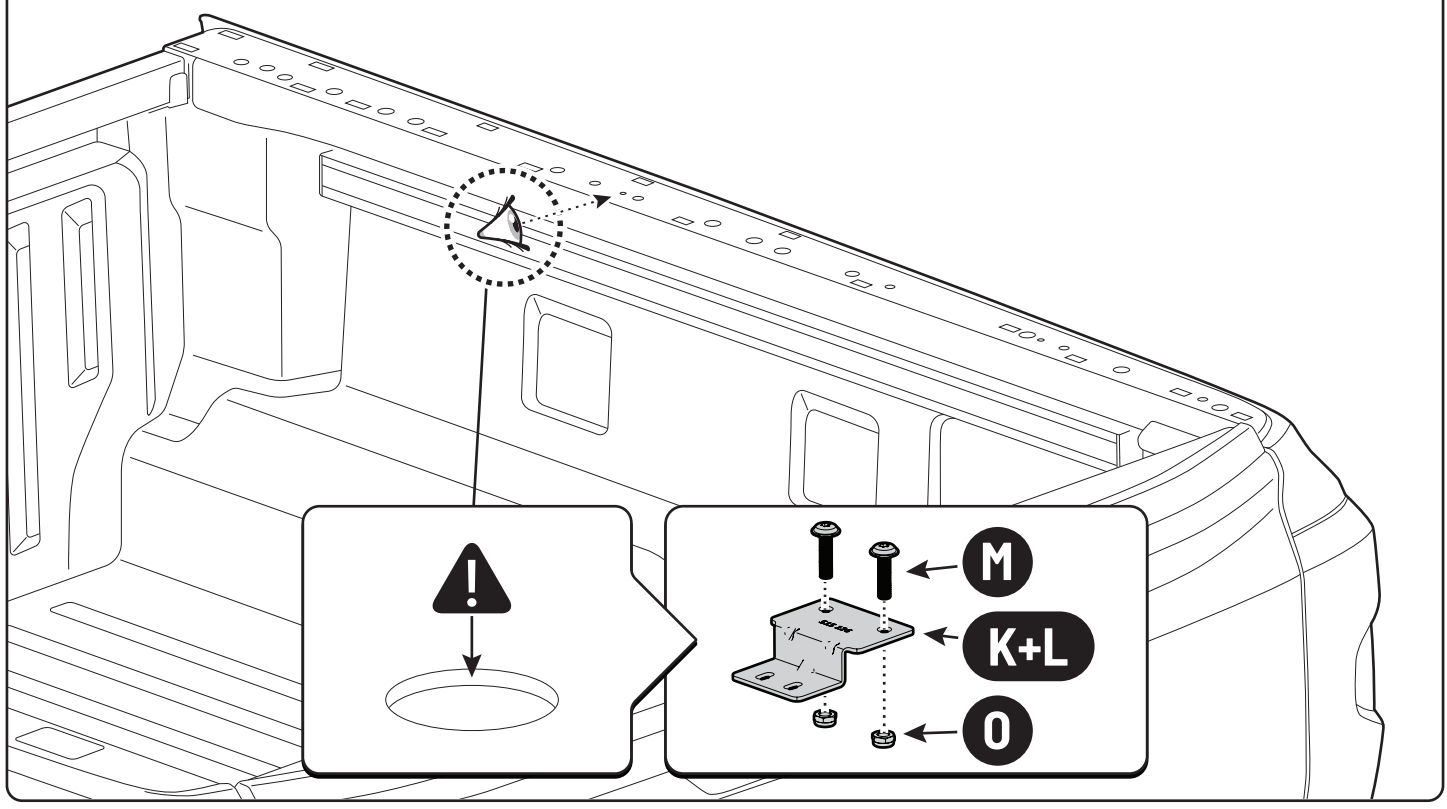



! FORD XLT / RAPTOR - DOUBLE CAB

T45 13 mm 25 Nm

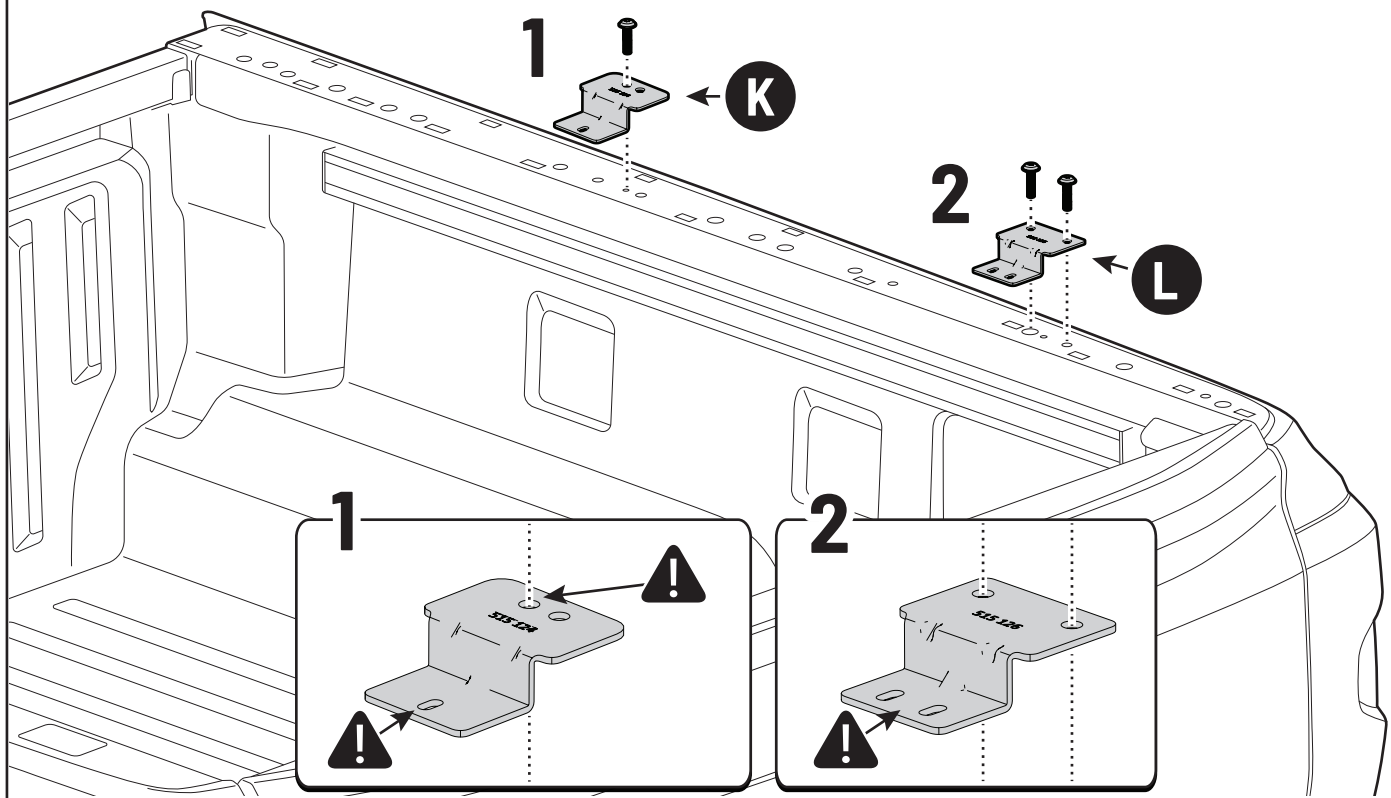



! FORD WILDTRAK - DOUBLE CAB

T45 13 mm 25 Nm

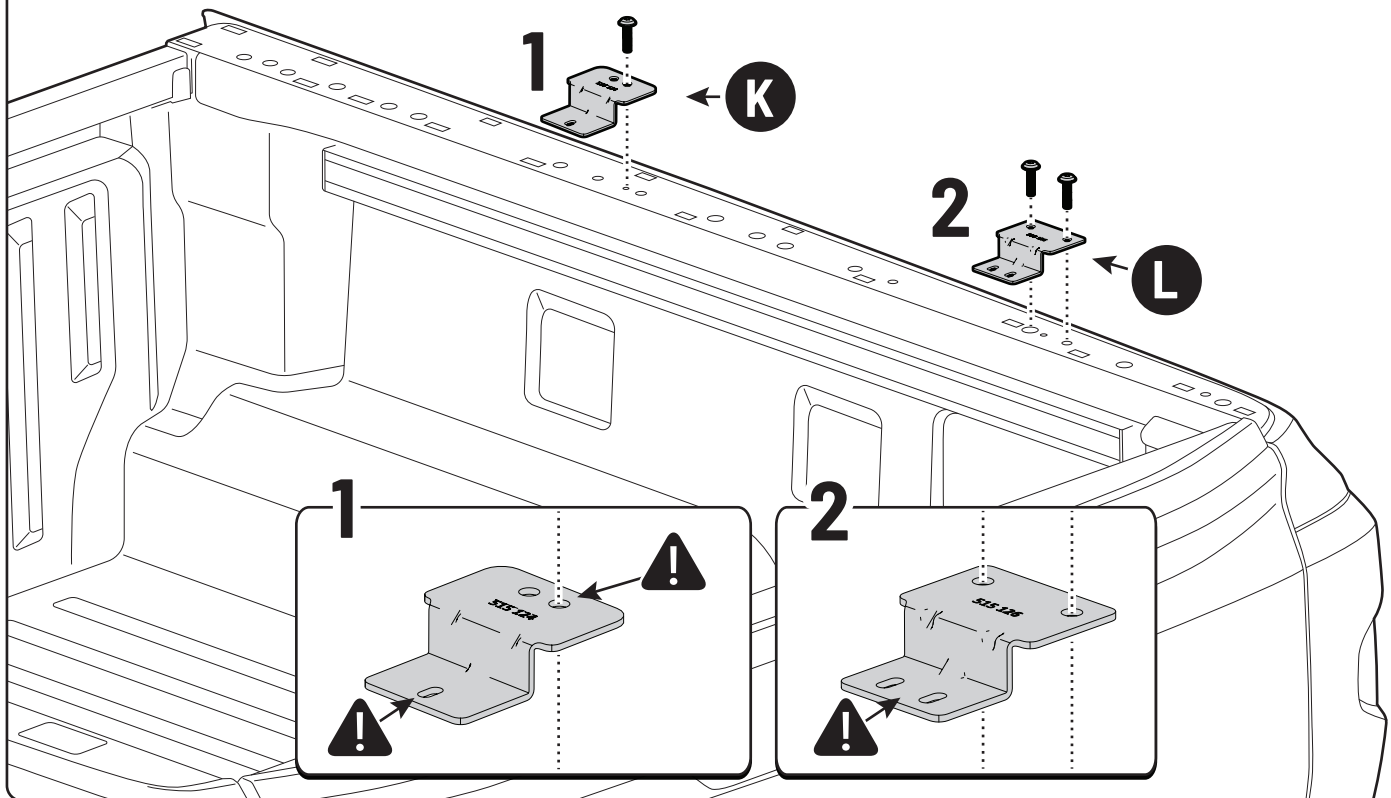



! WITH SPORTS BAR ACCESSORY - RAP CAB


T45 13 mm 25 Nm

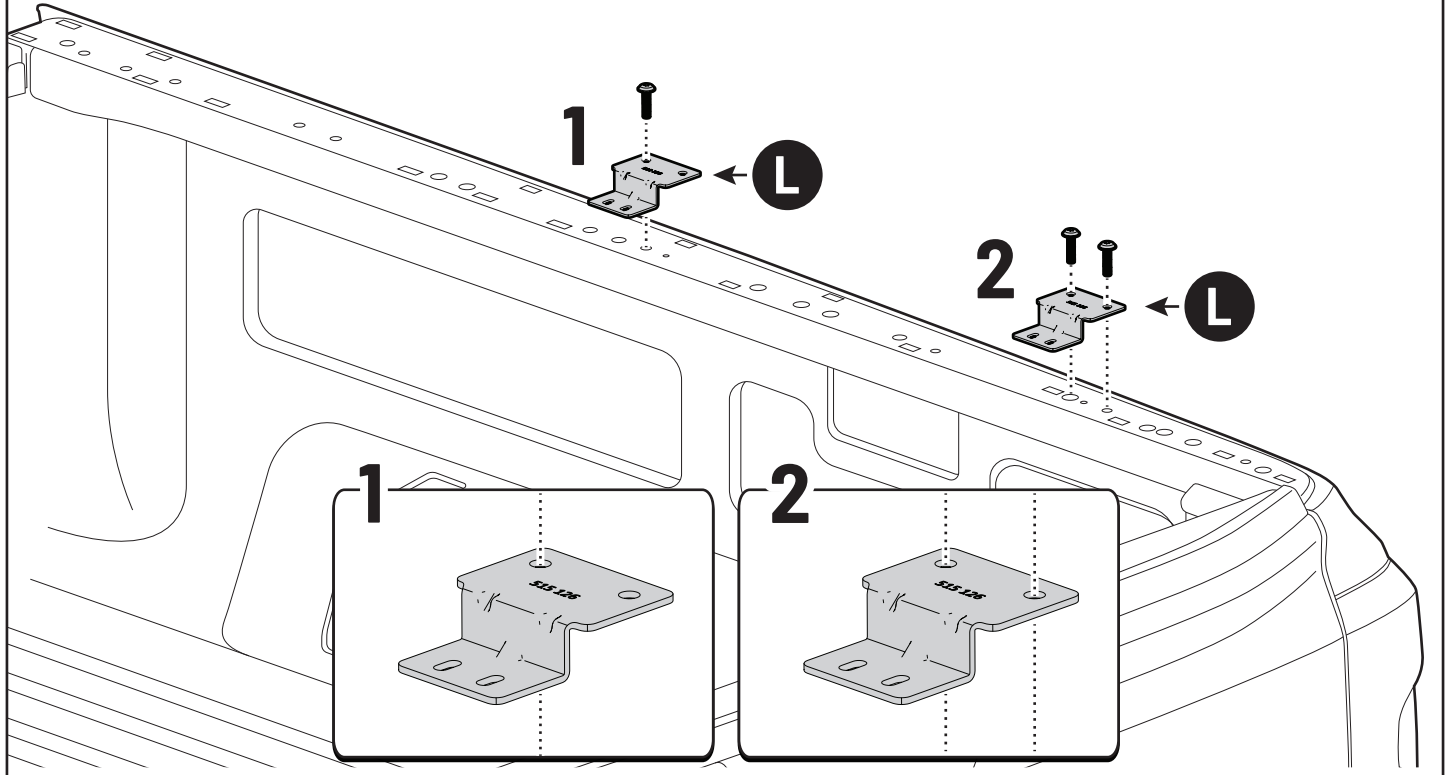


! WITHOUT SPORTS BAR ACCESSORY - RAP CAB

T45 13 mm 25 Nm

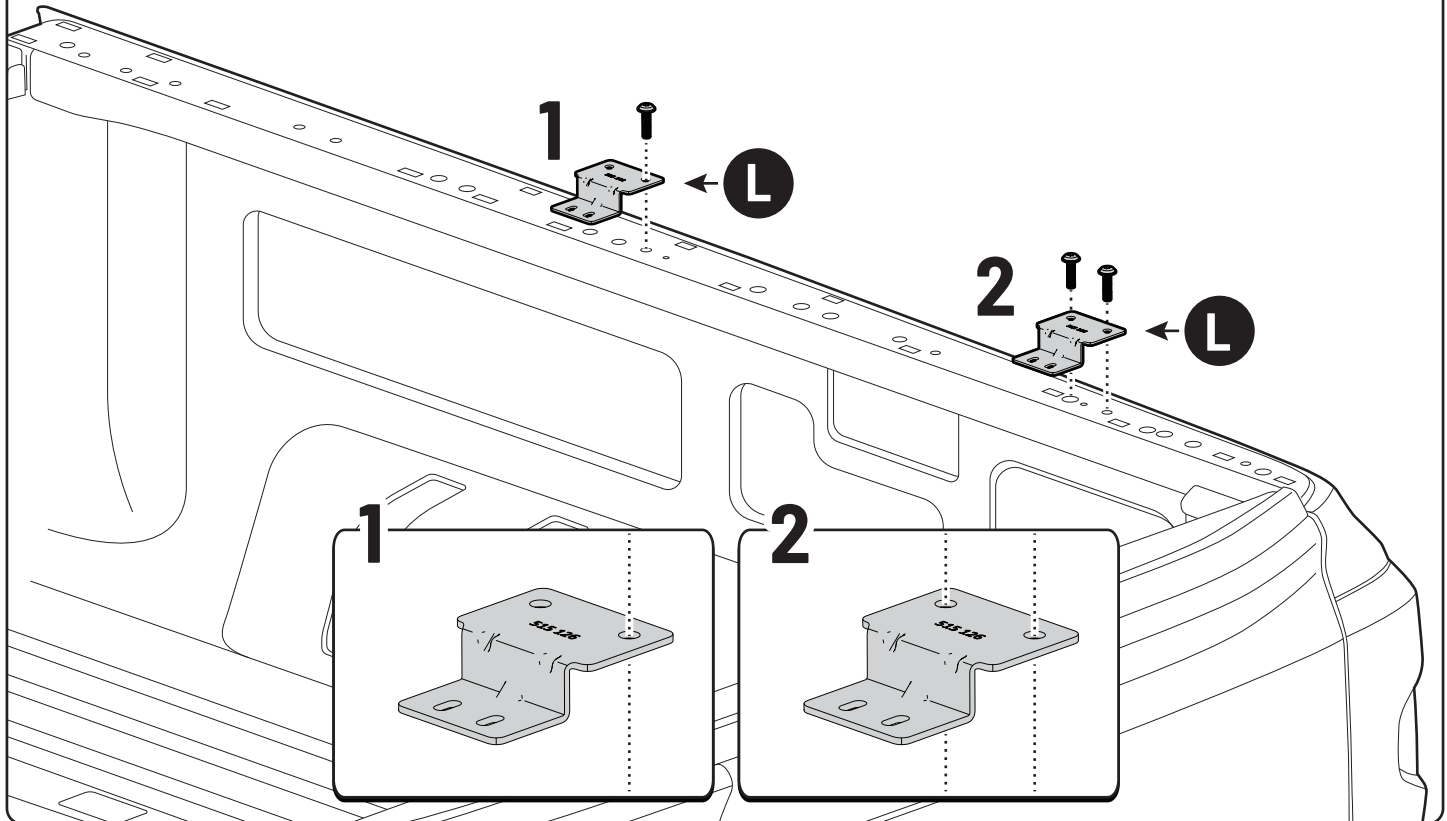





! ONLY FOR FORD RANGER XLT / RAPTOR

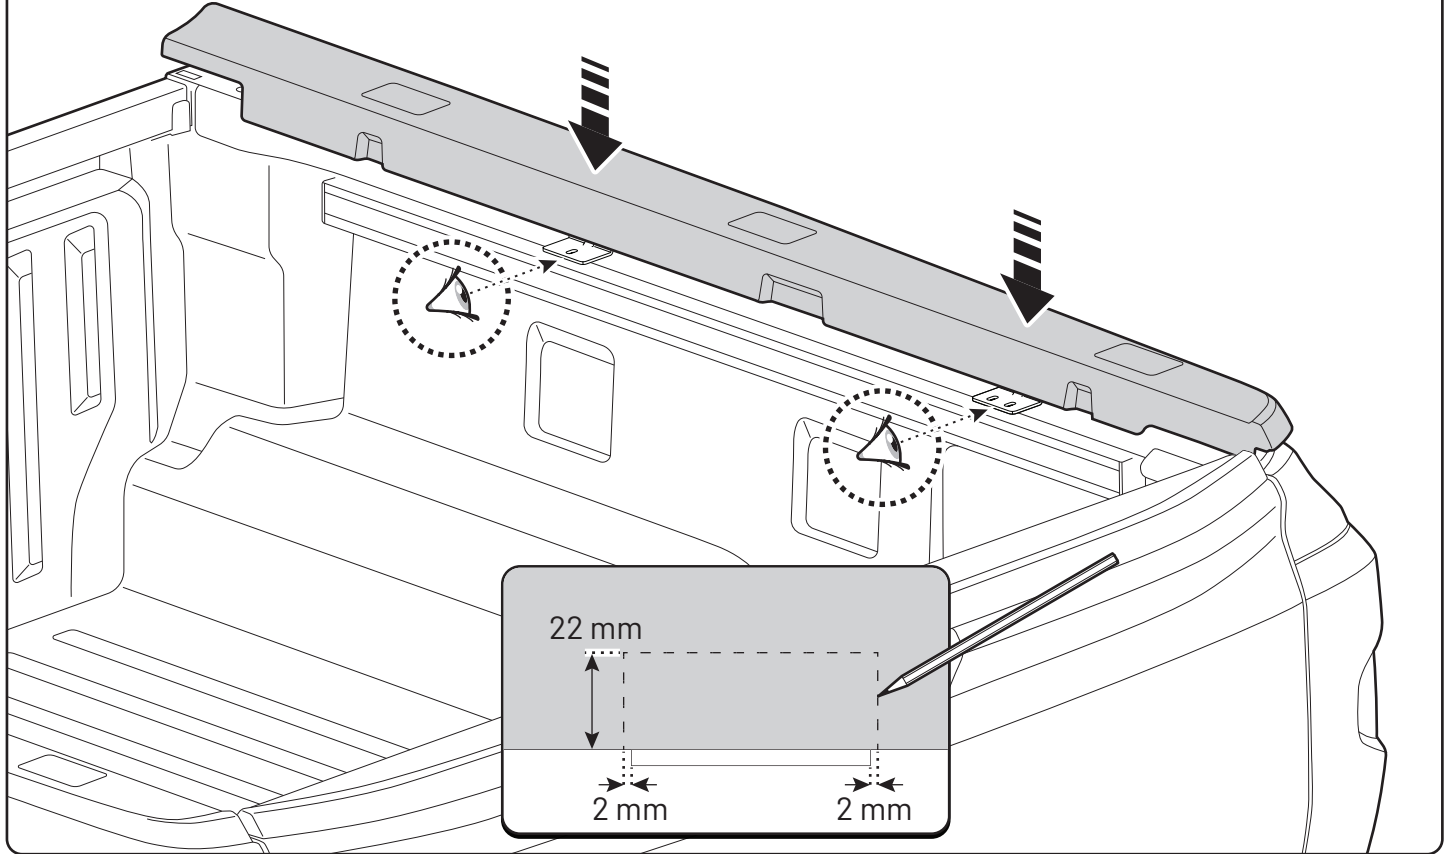


! ONLY FOR FORD RANGER XLT / RAPTOR










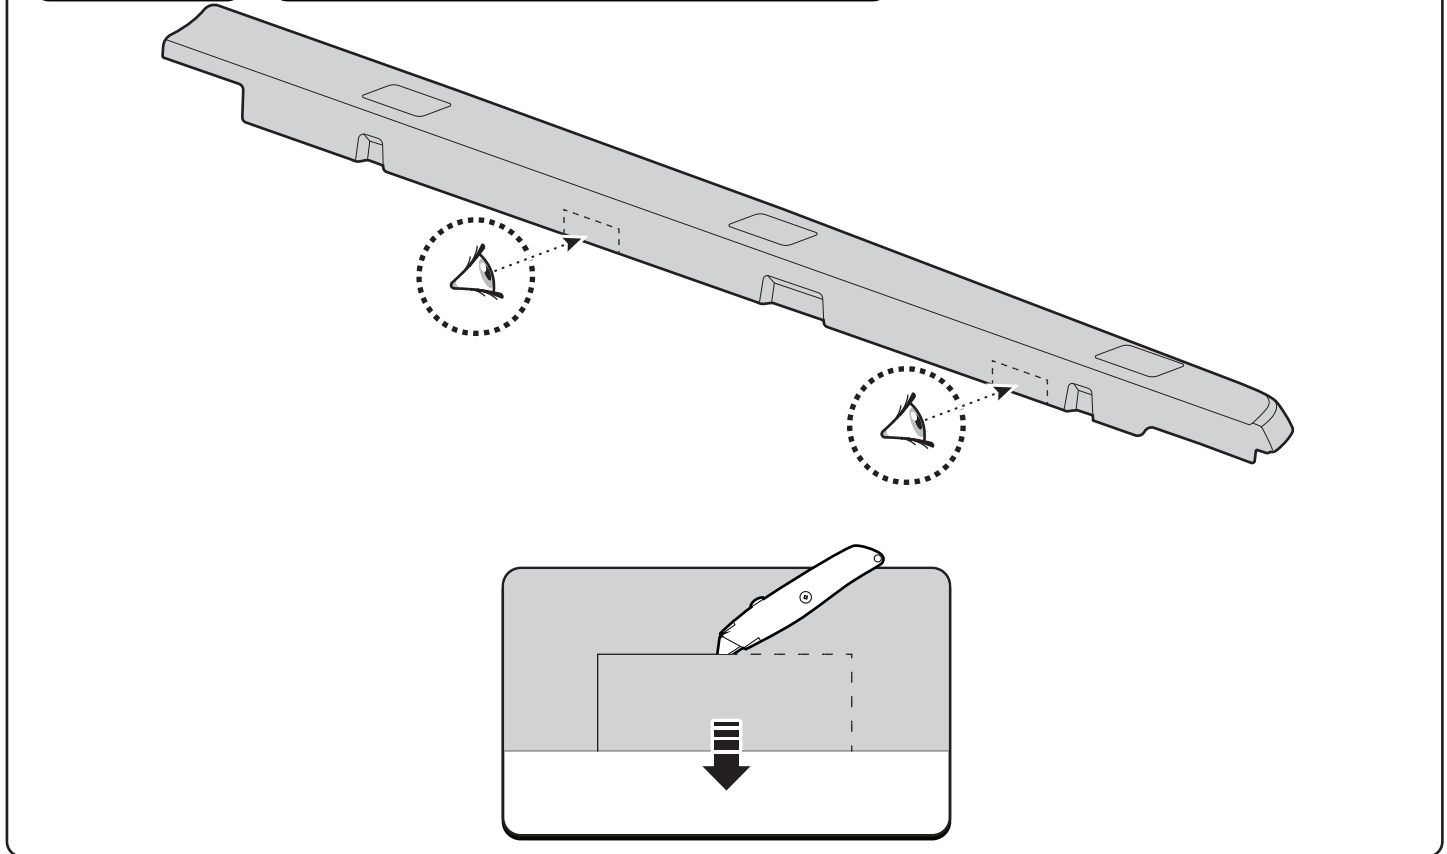



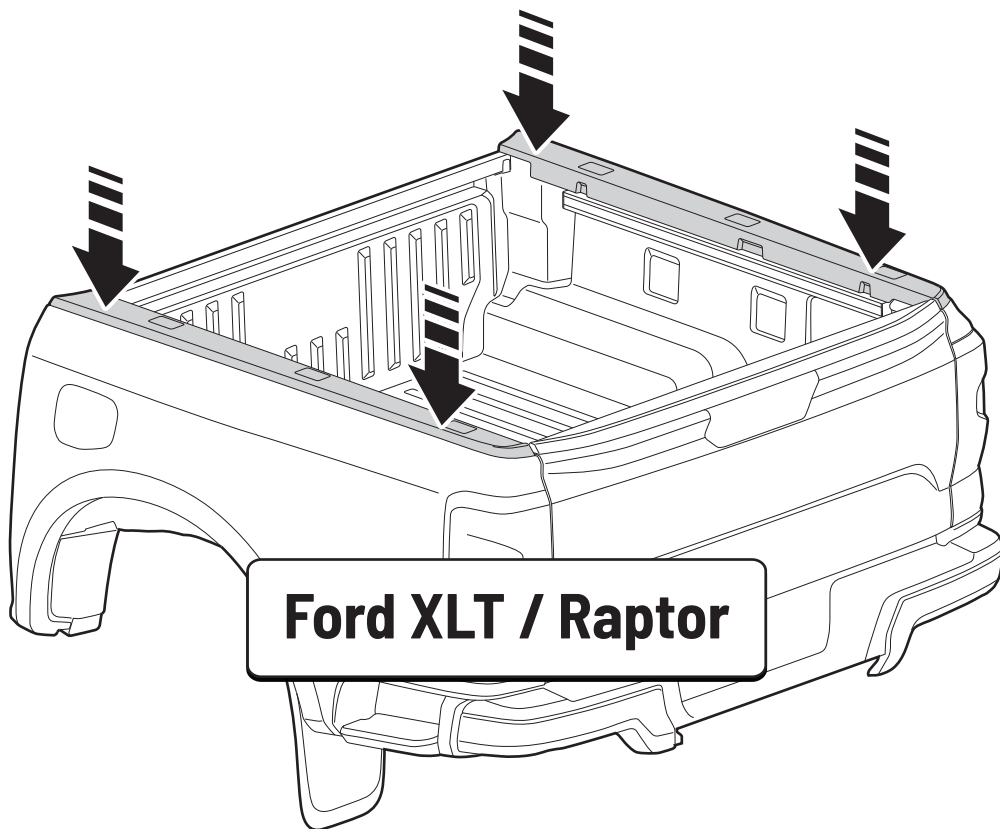


Ford XLT / Raptor


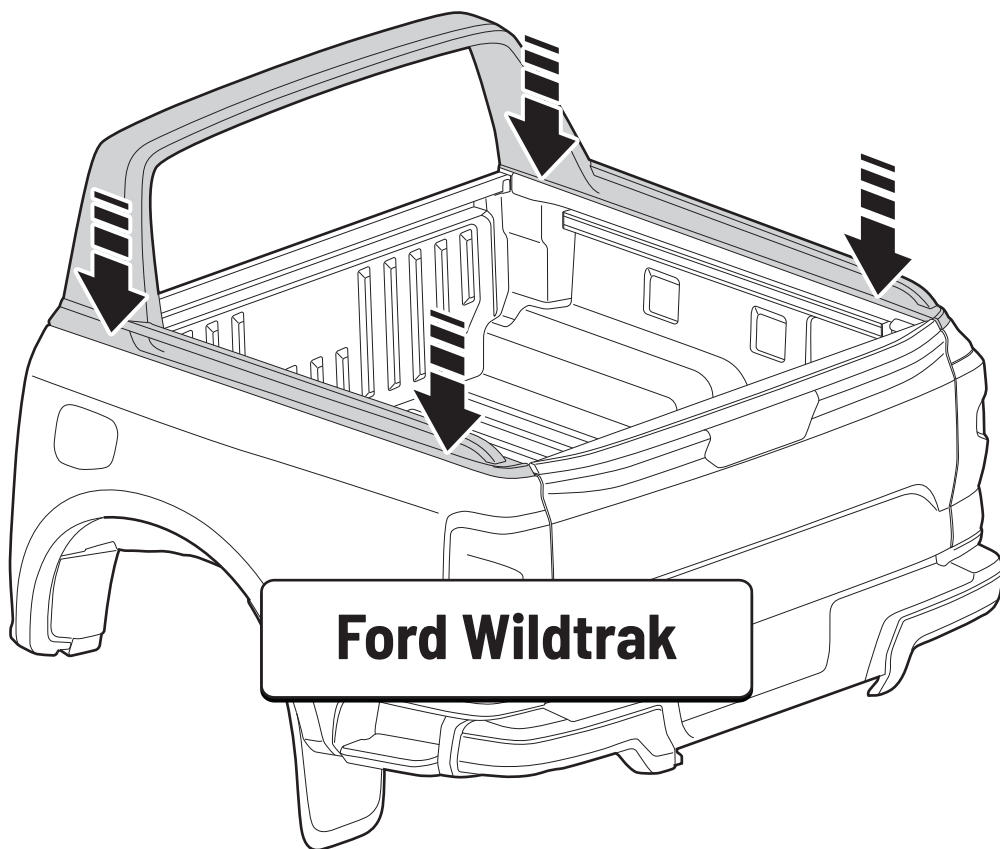


Ford Wildtrak

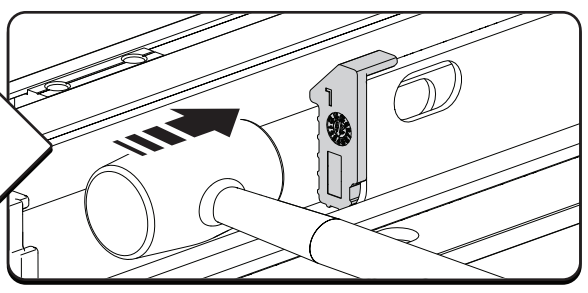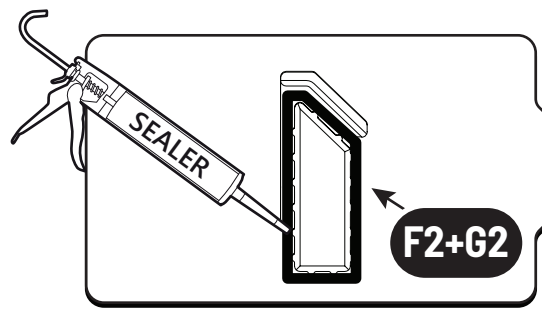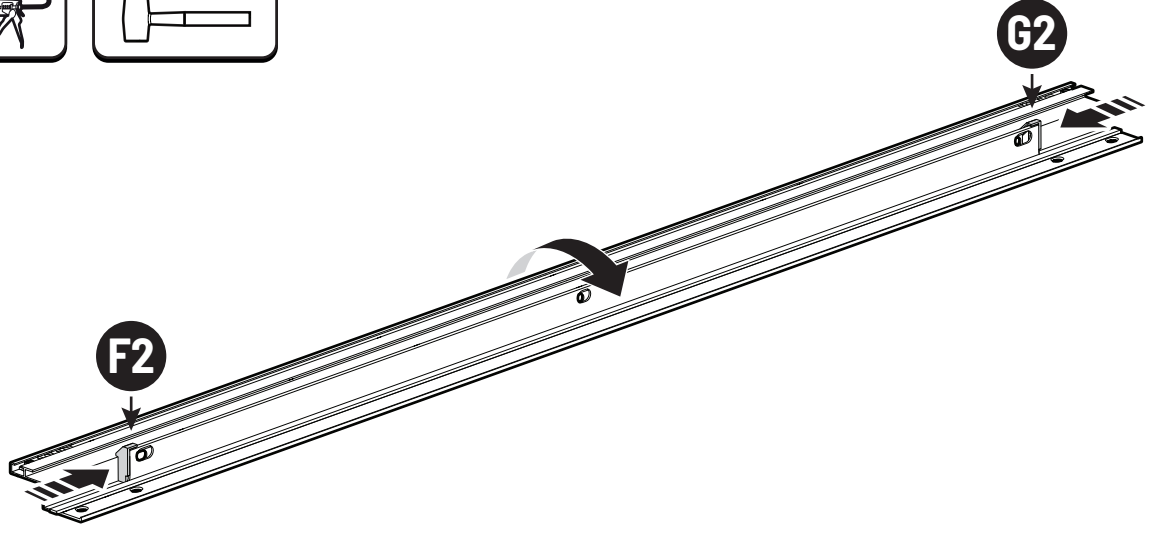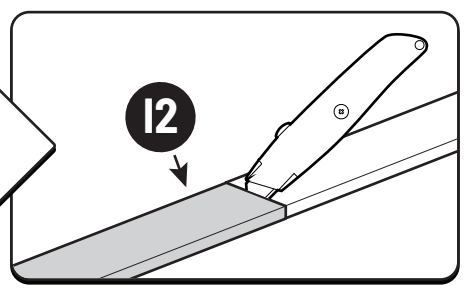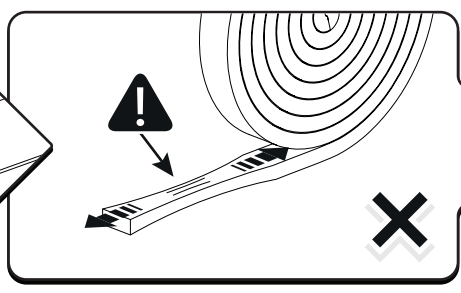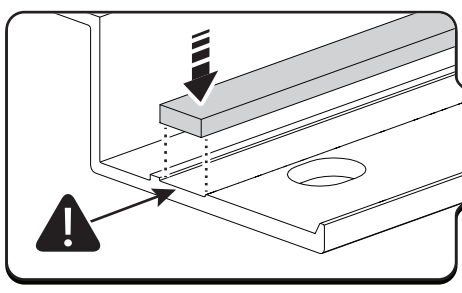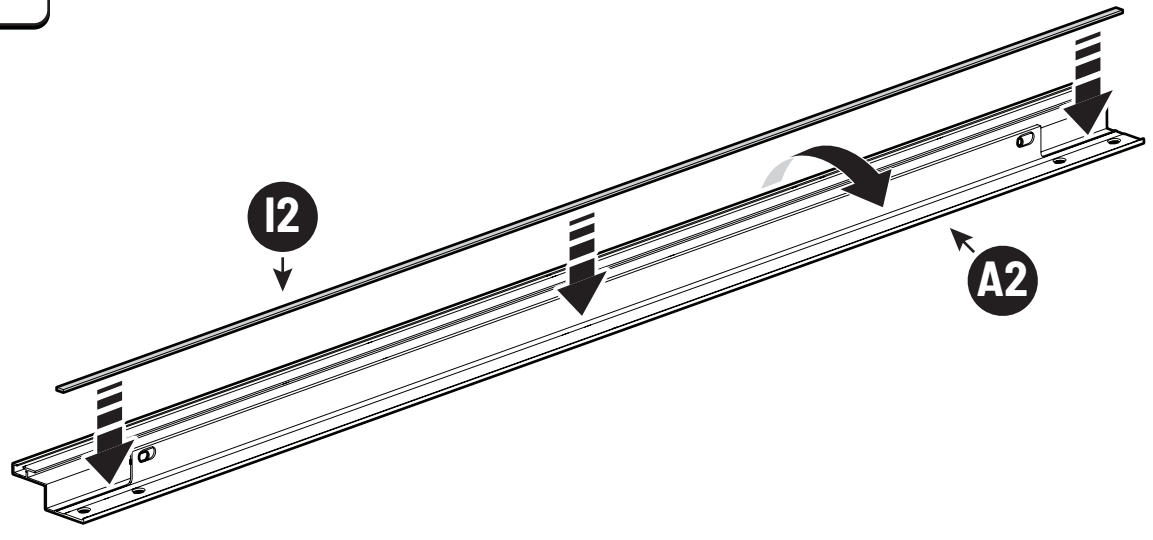

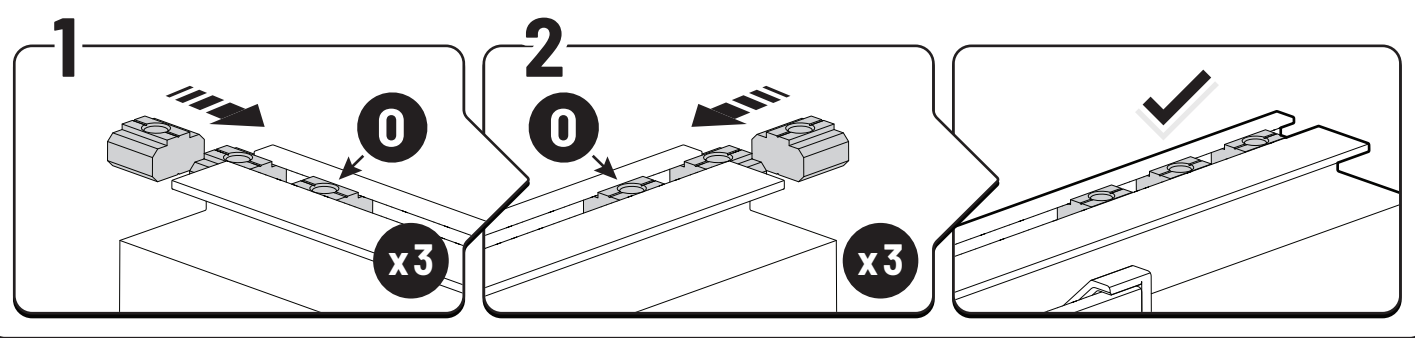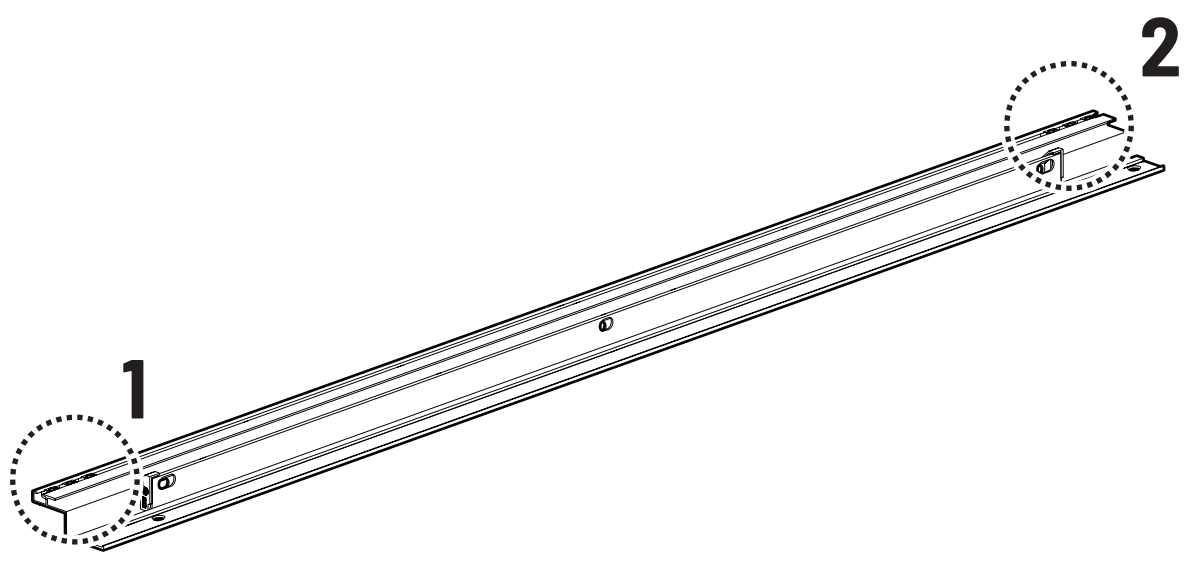



 **Super Glue (CA)**

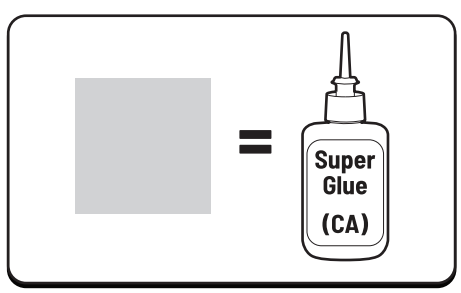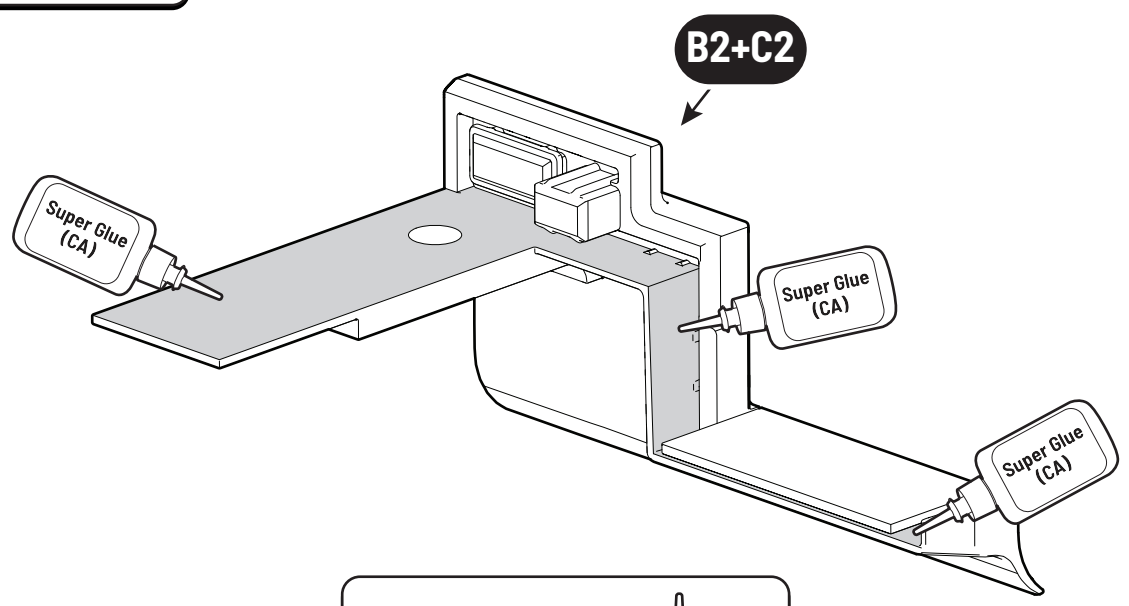















Super Glue (CA)






79

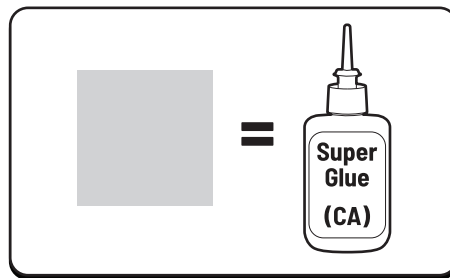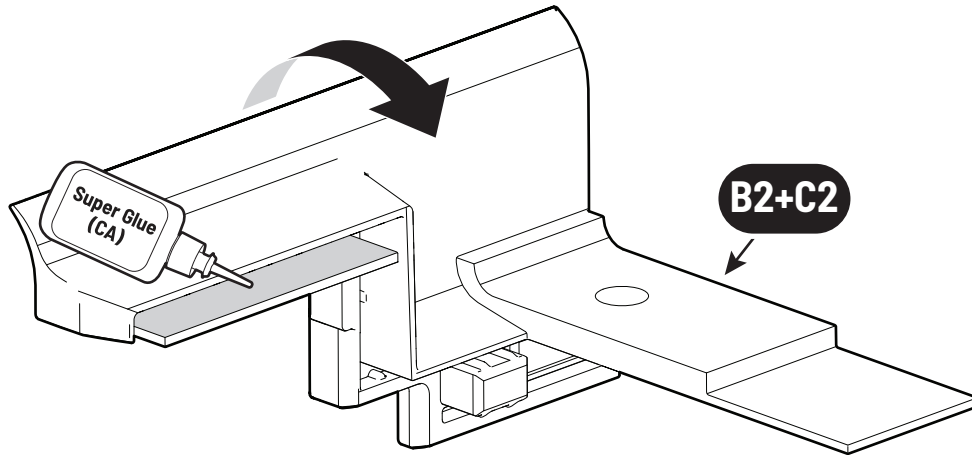



80

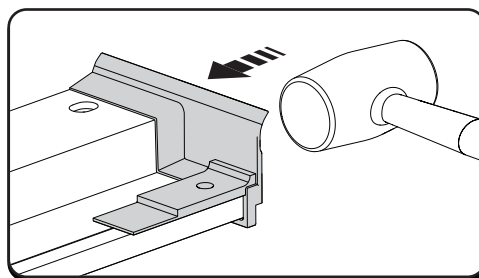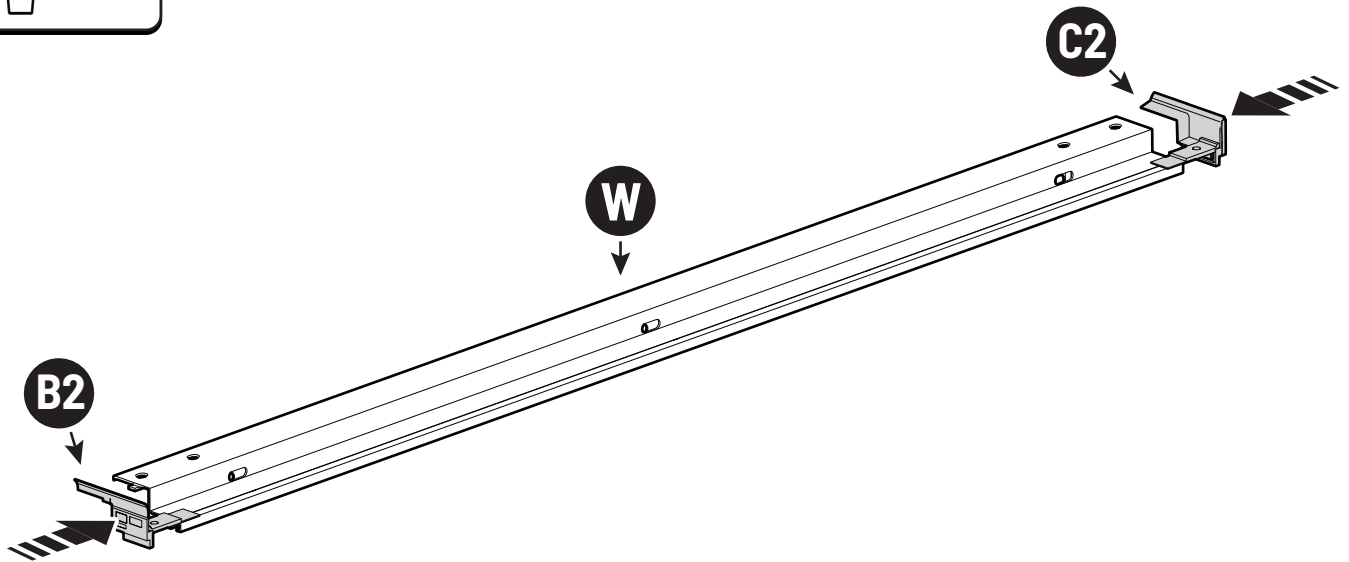


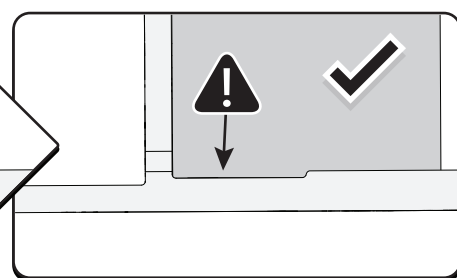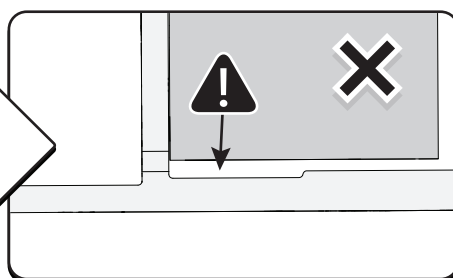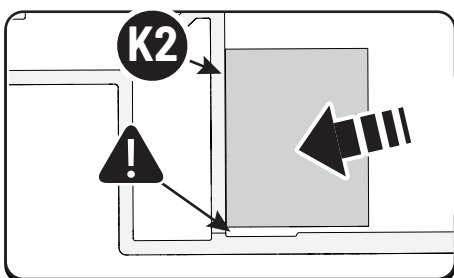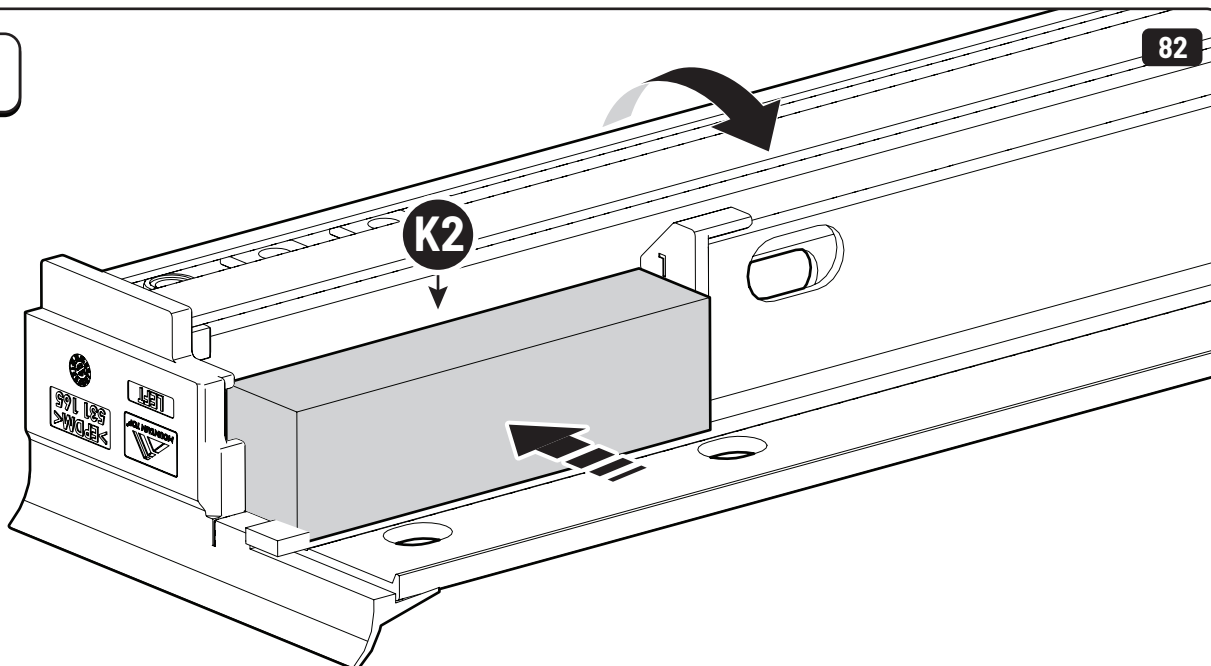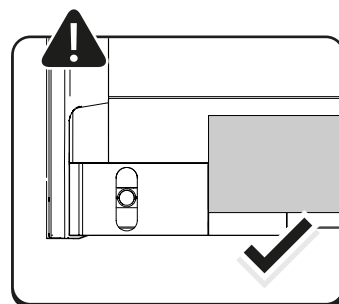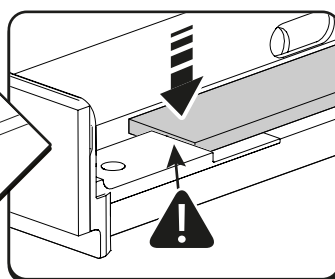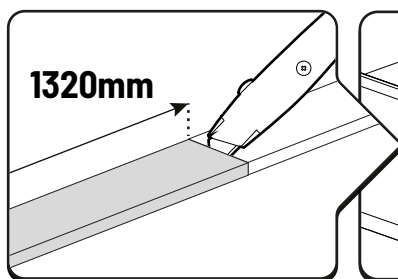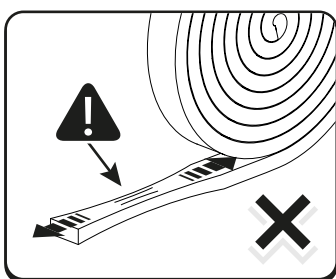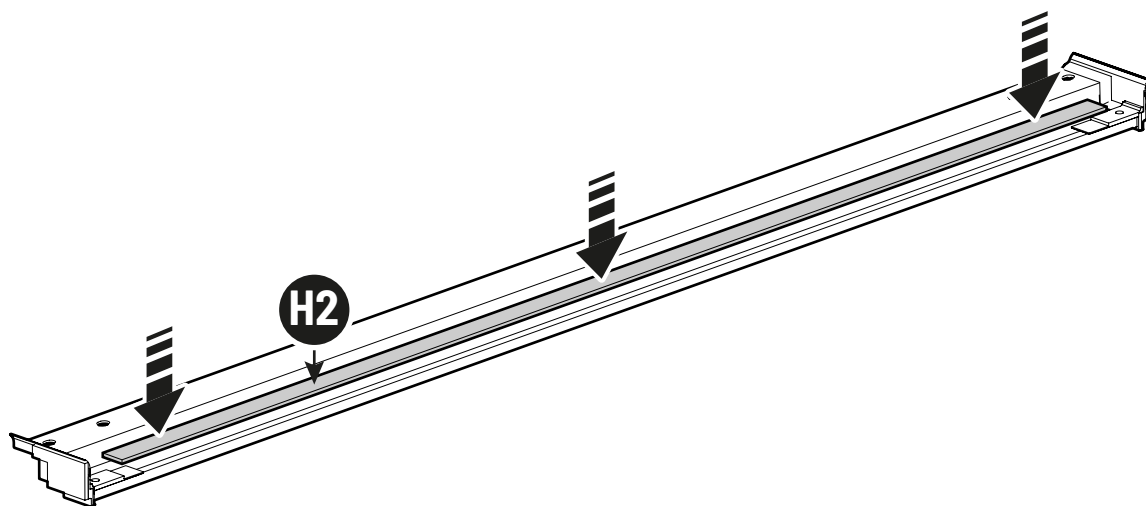

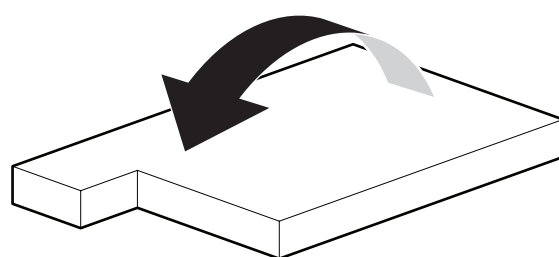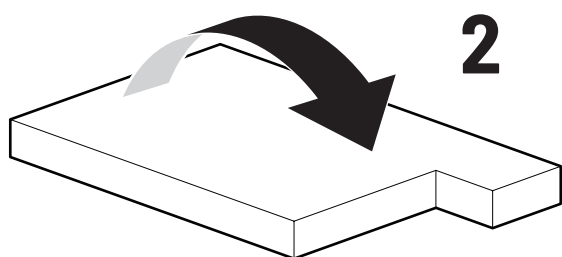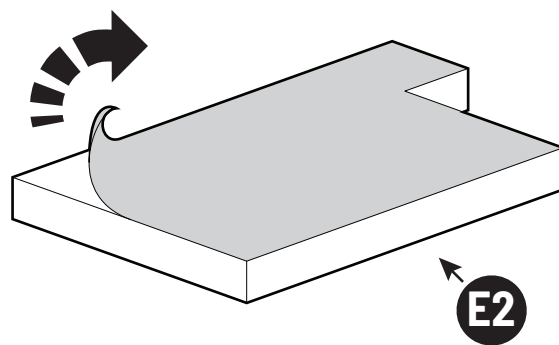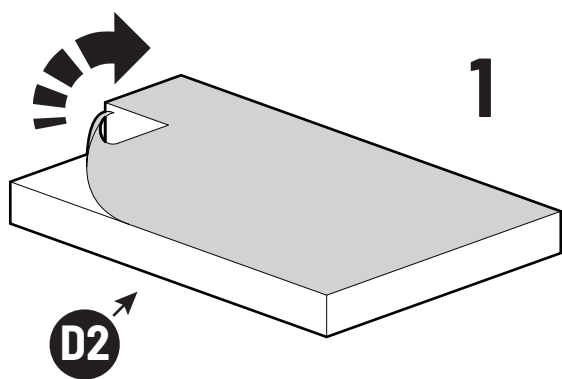


D2+E2

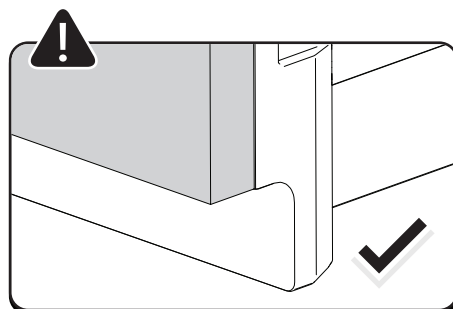
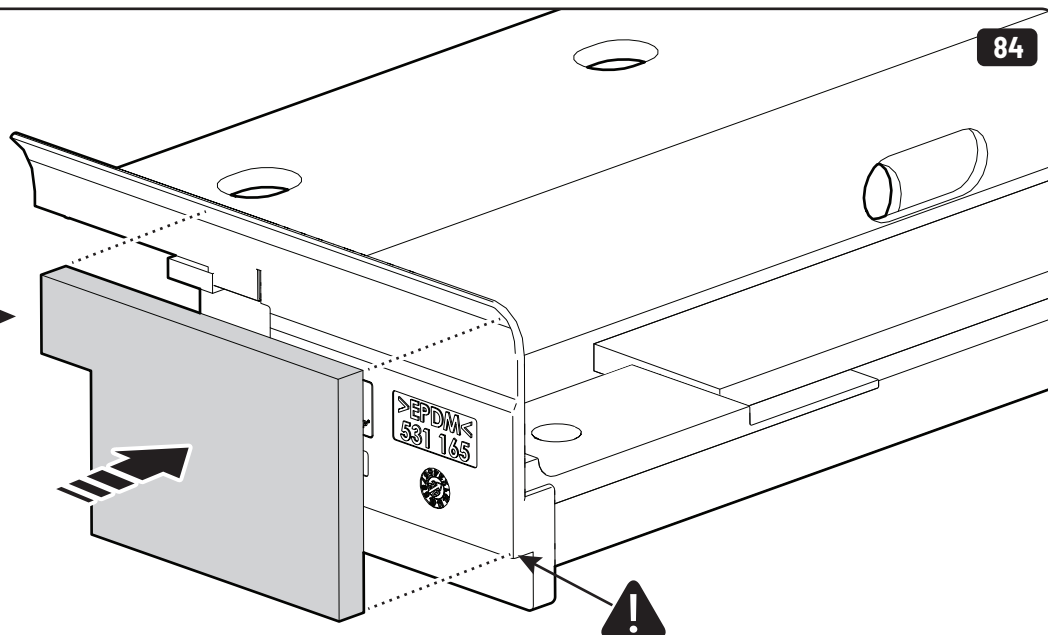


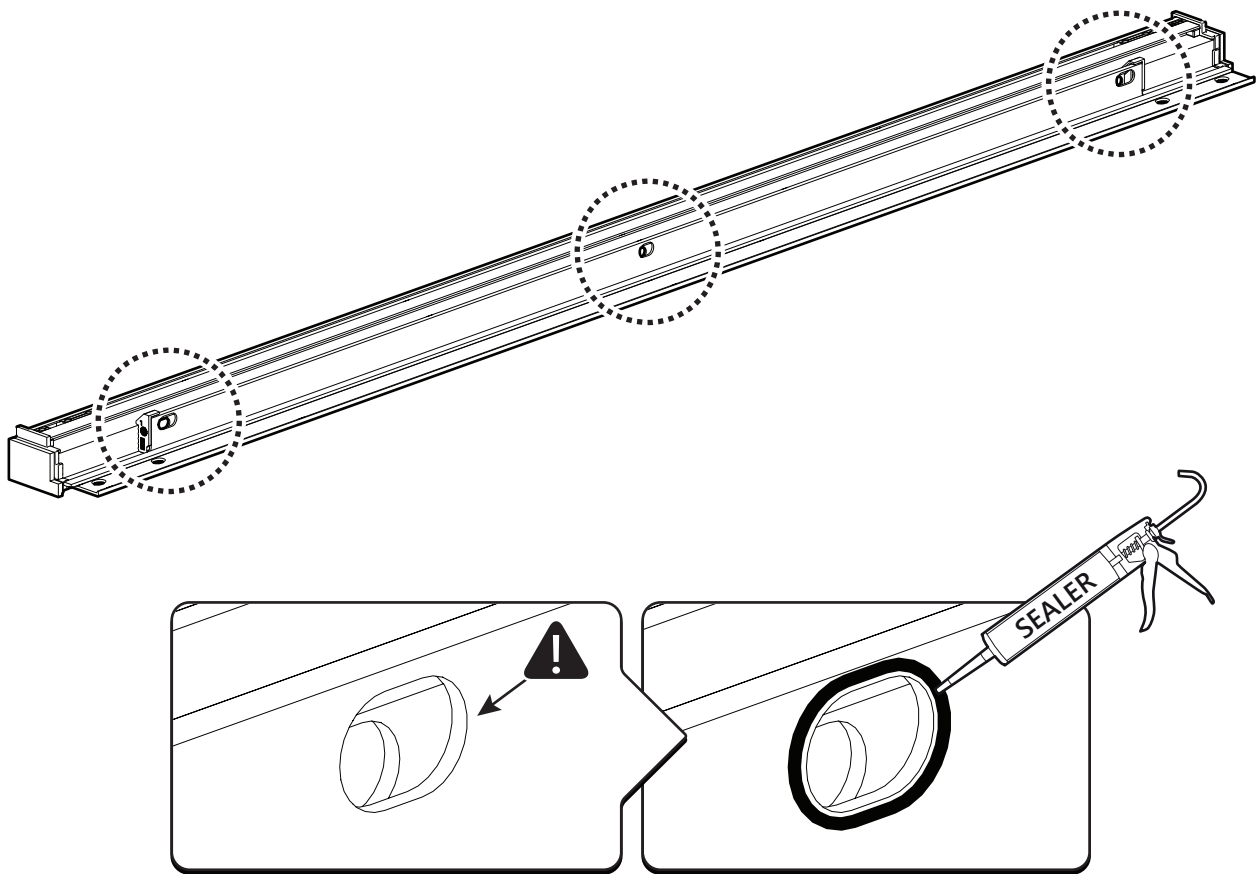


 **LOCTITE 243**



 **T45**




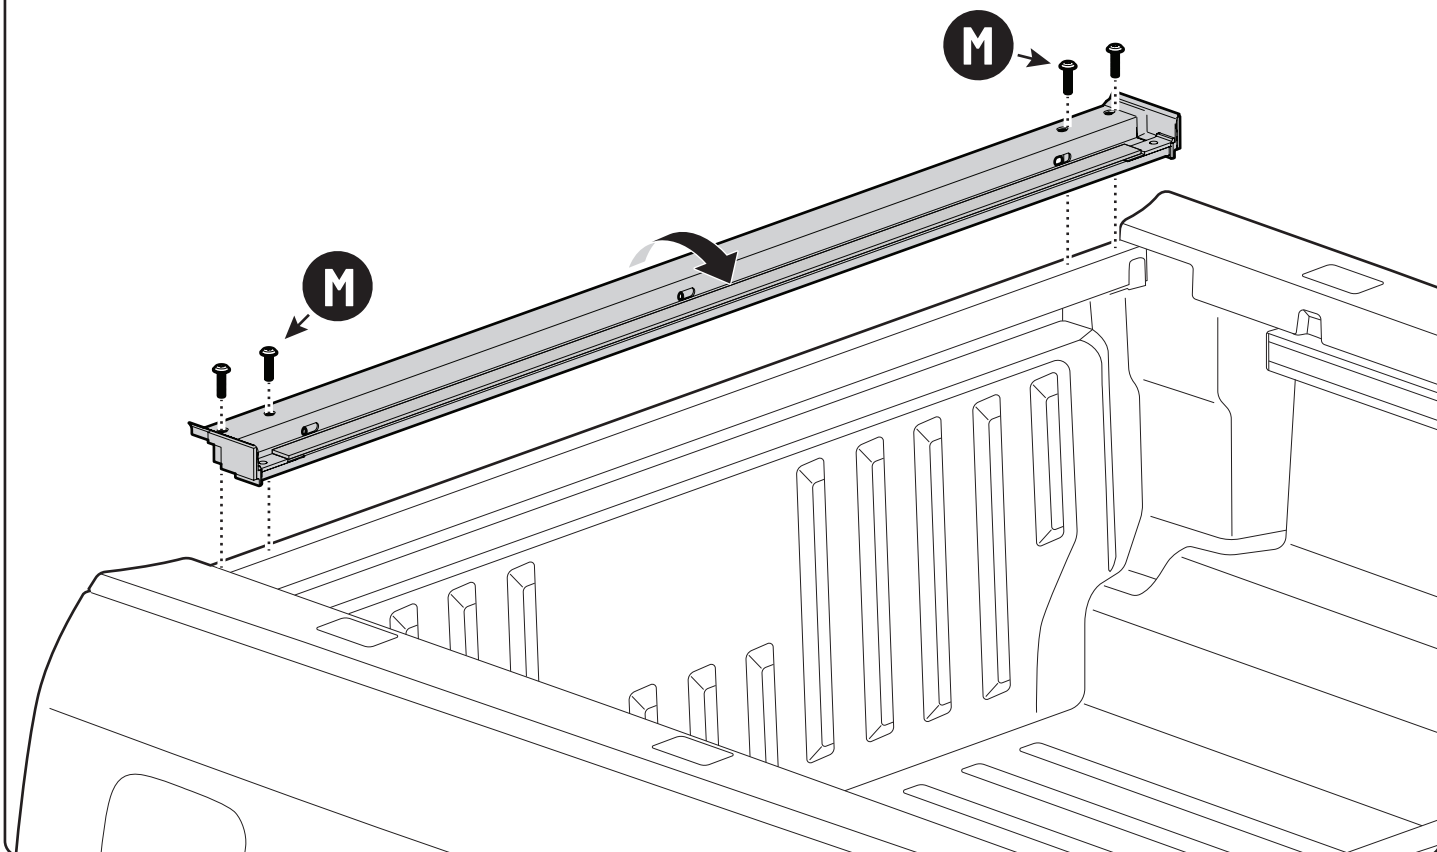



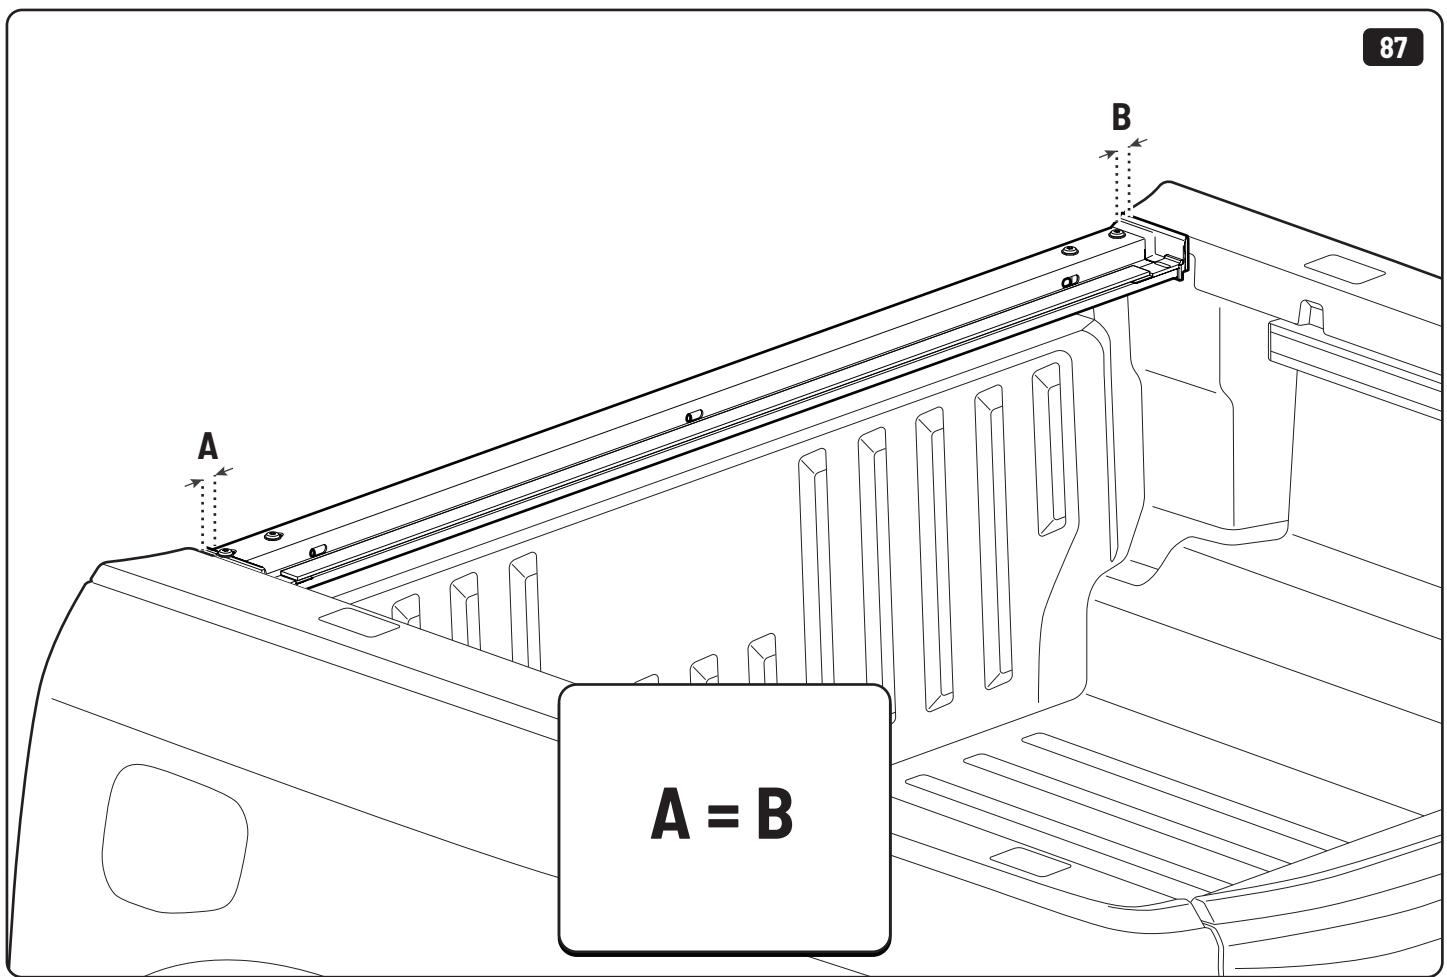








 **T45** **15 Nm**


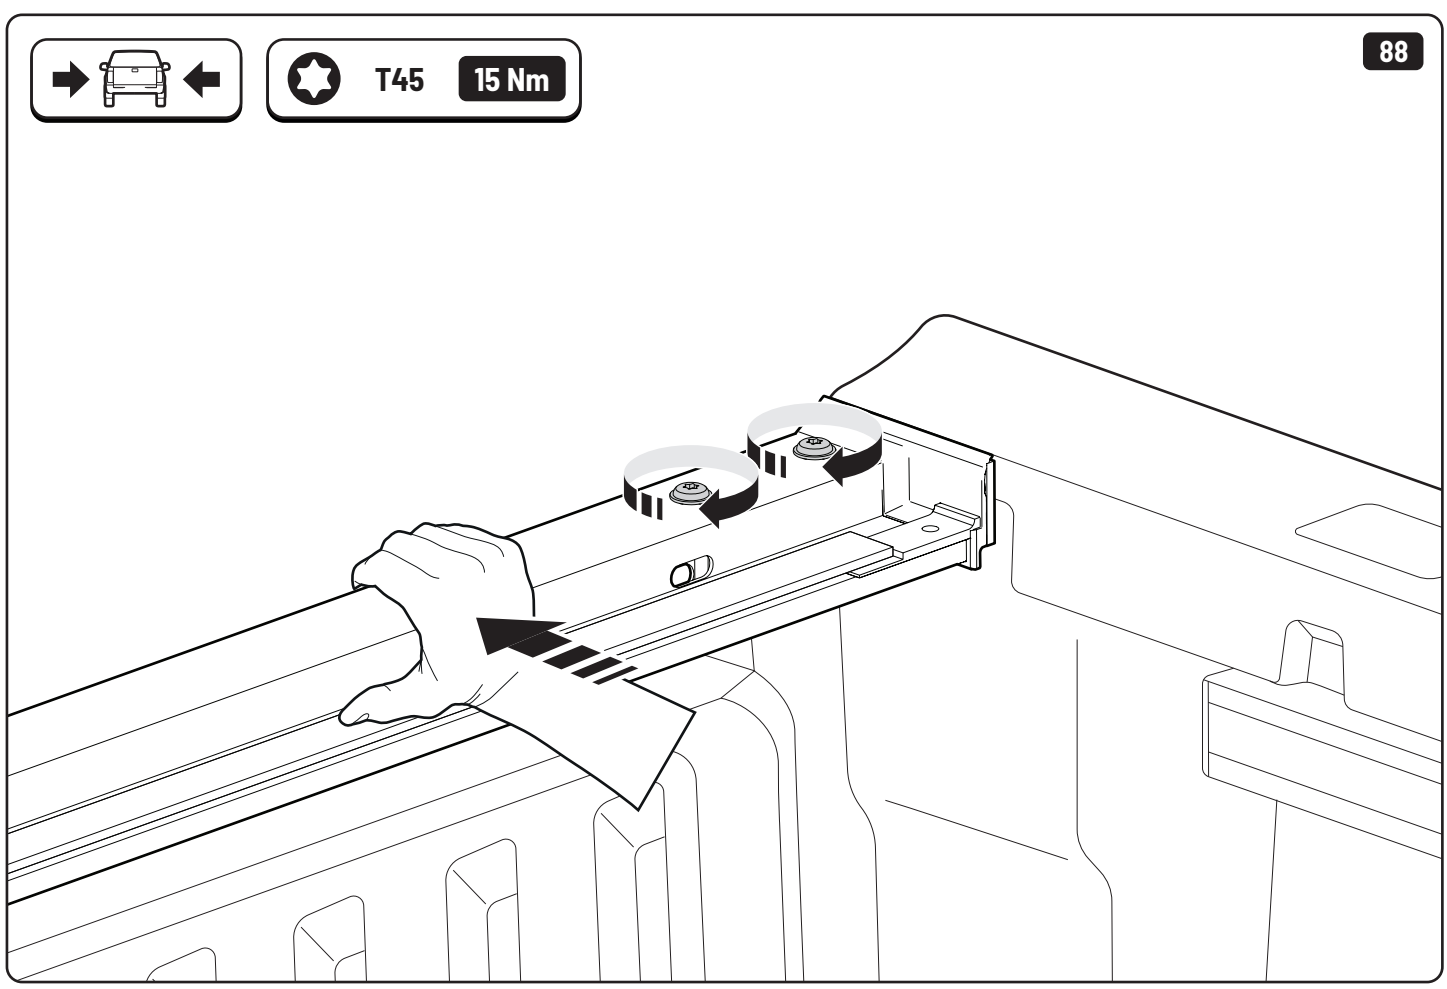


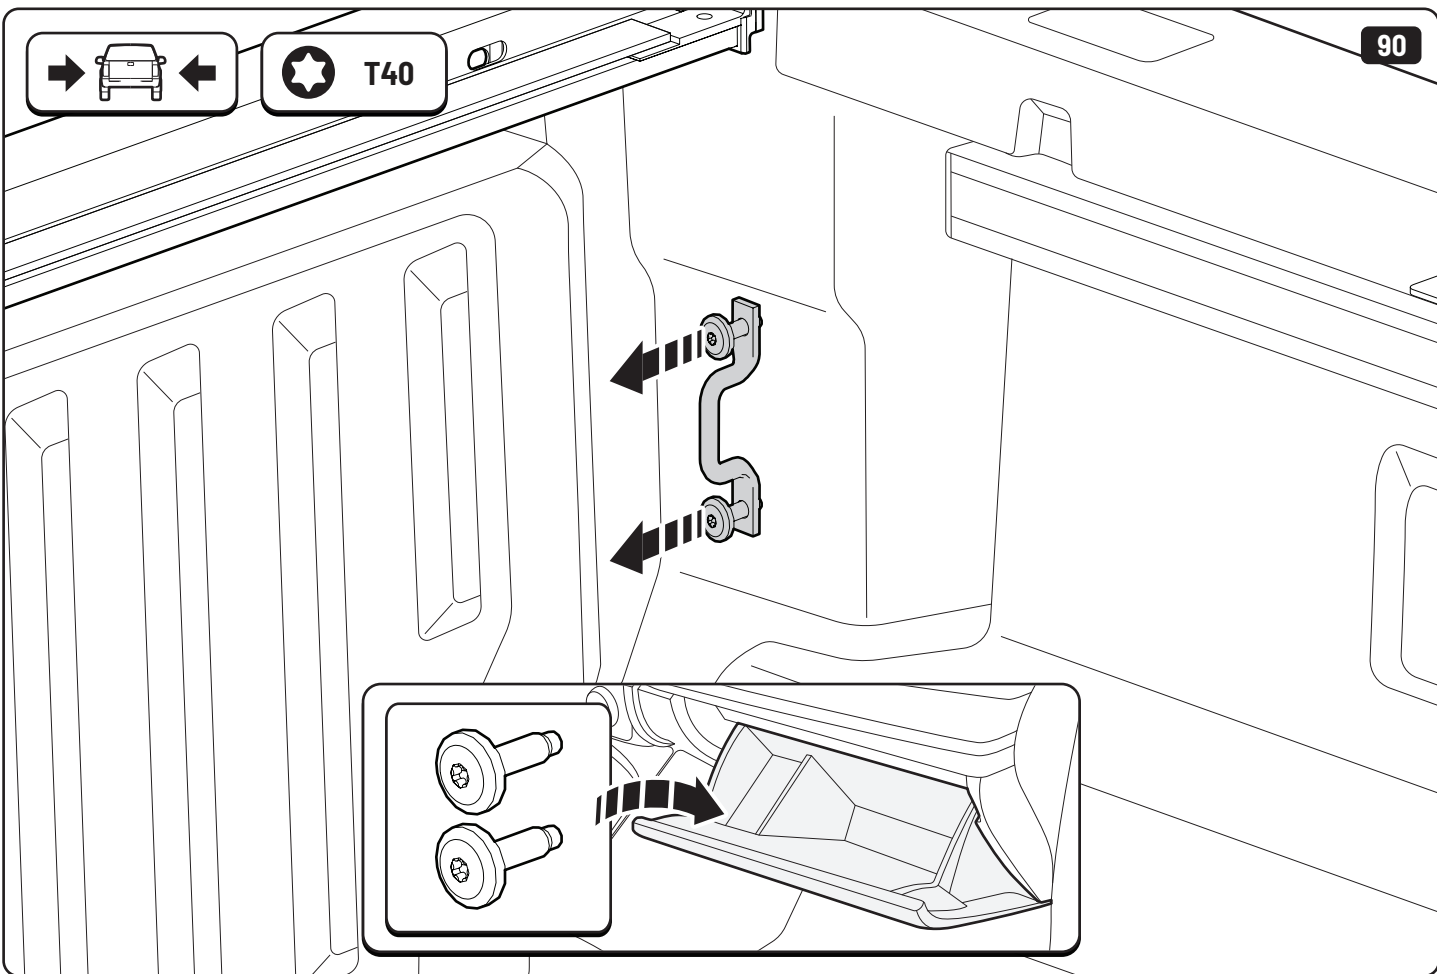
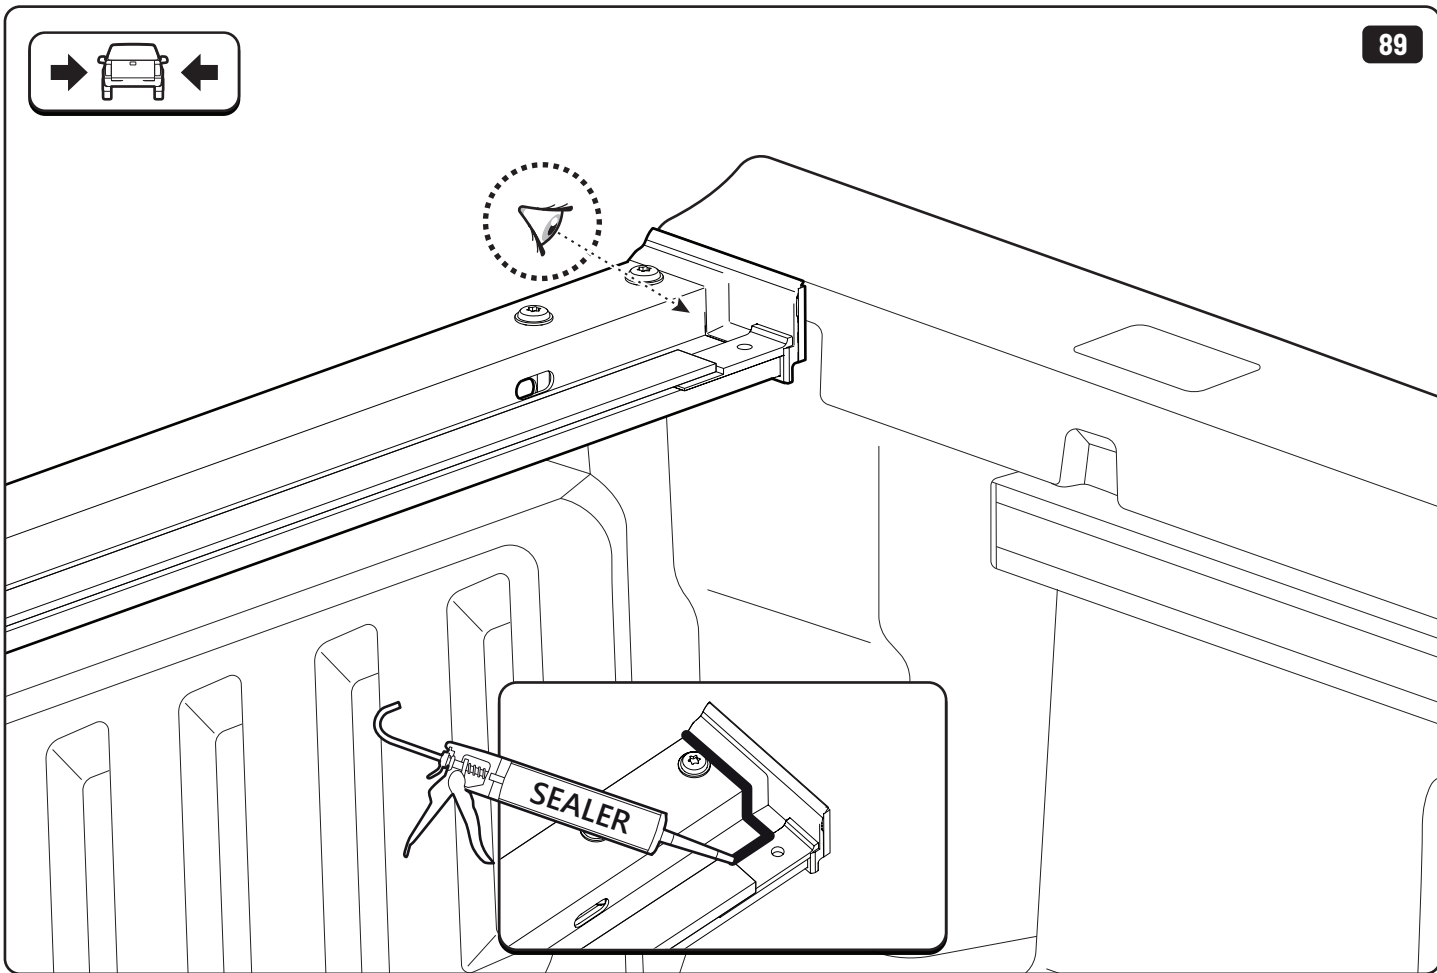


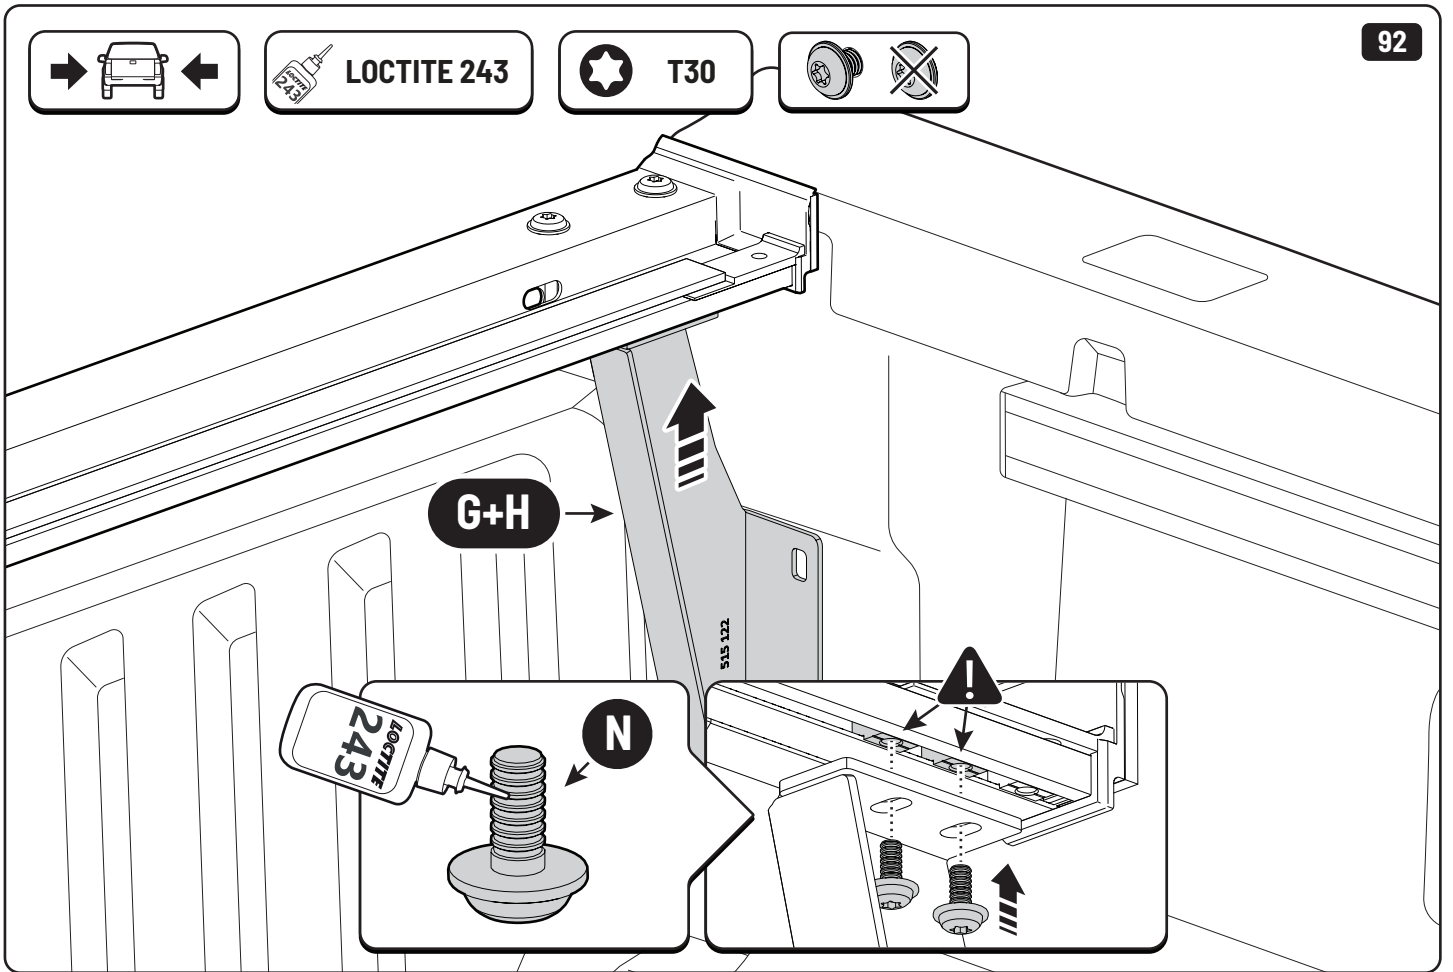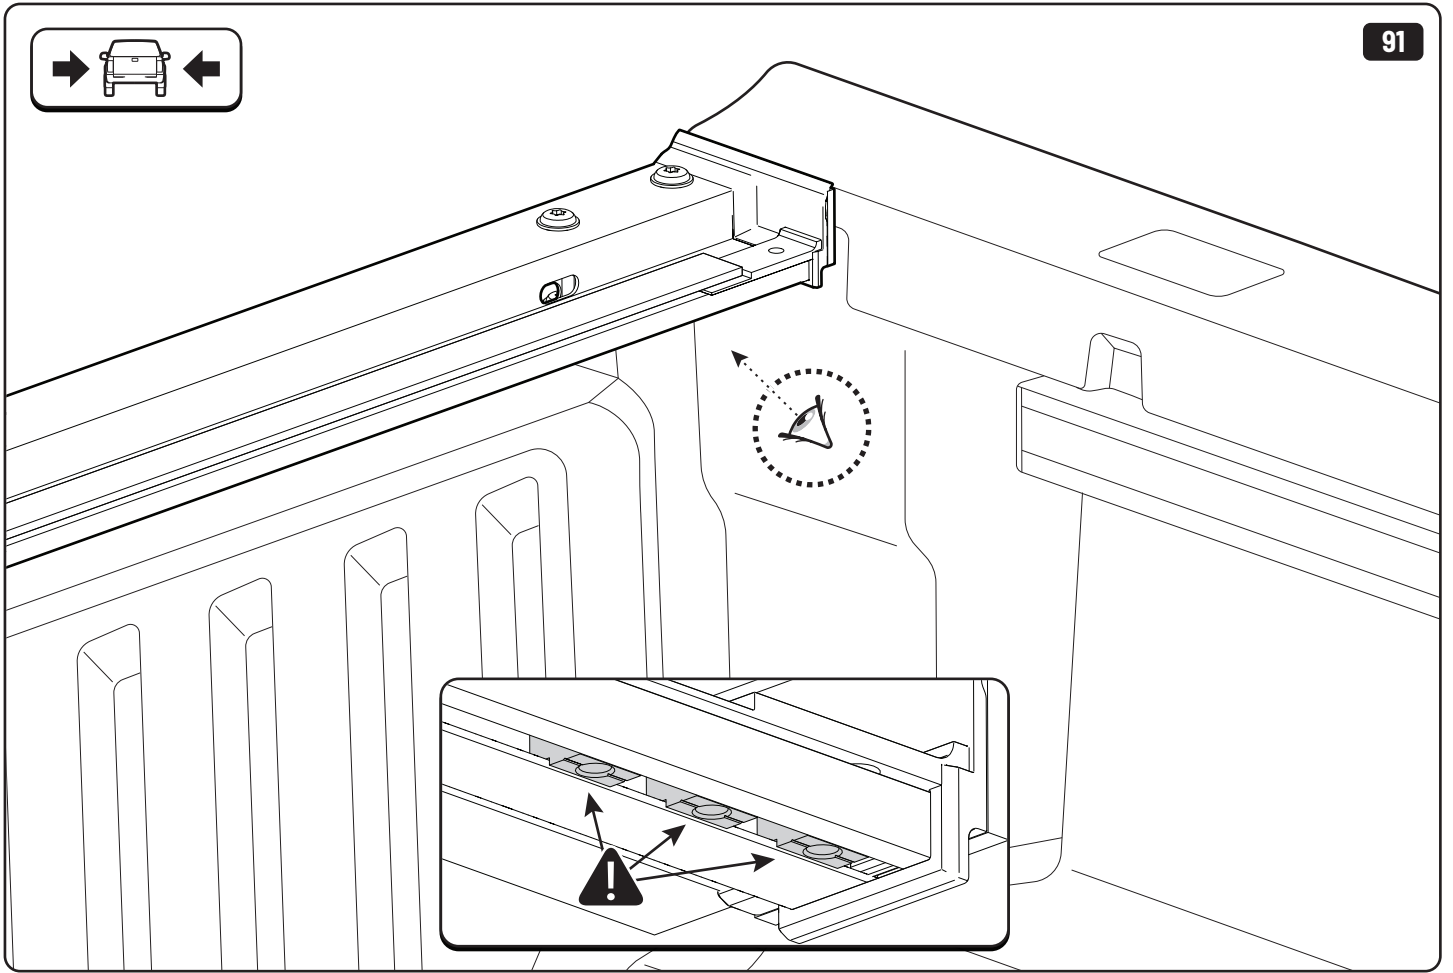



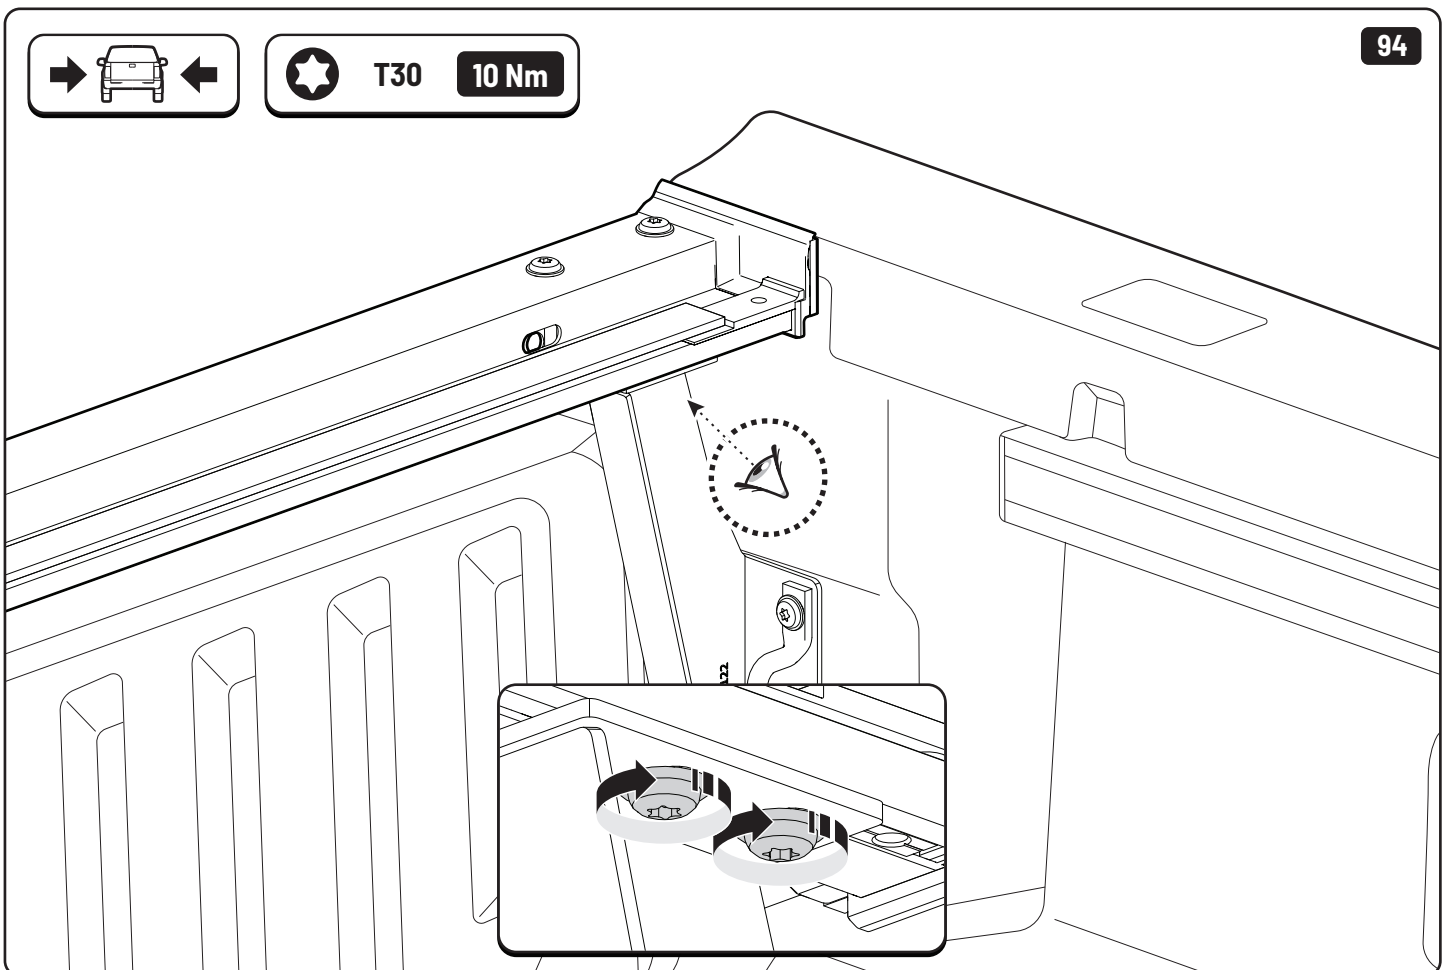
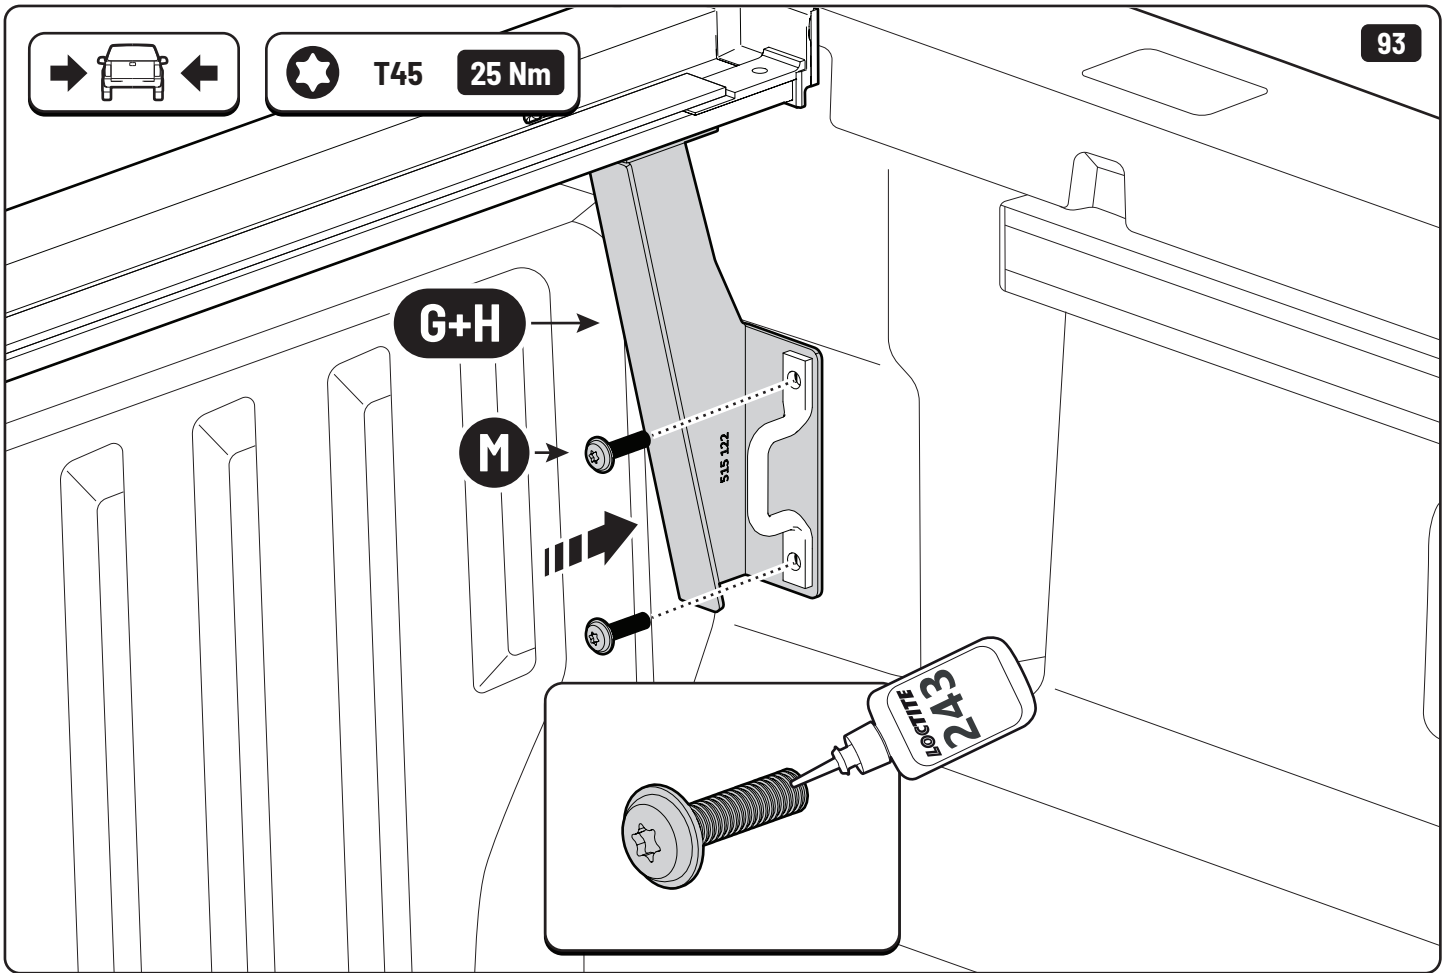


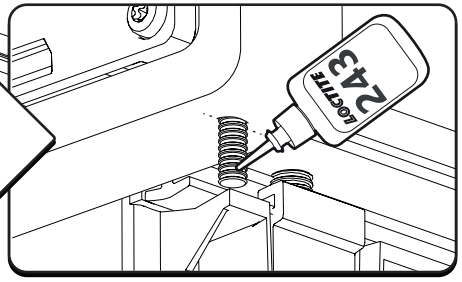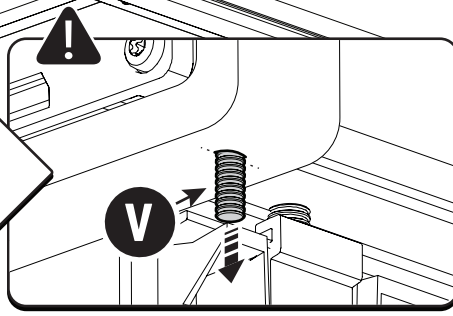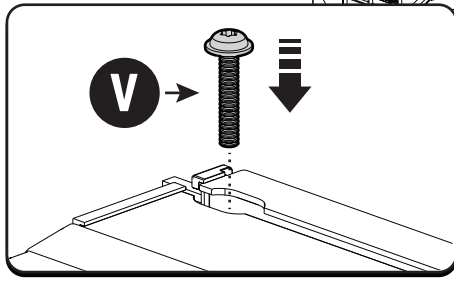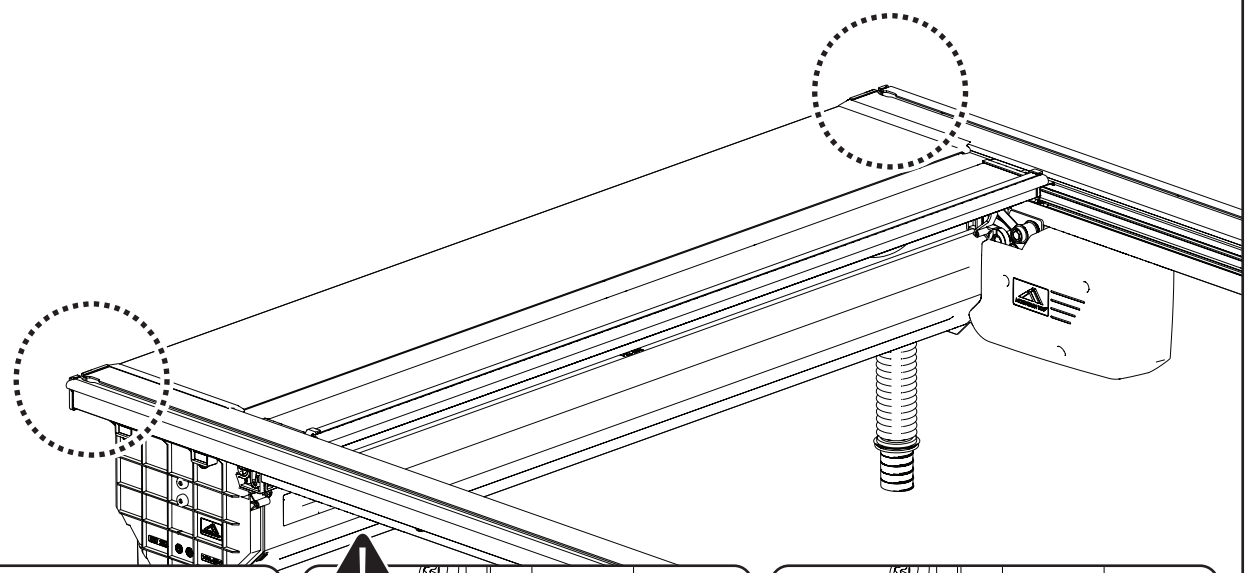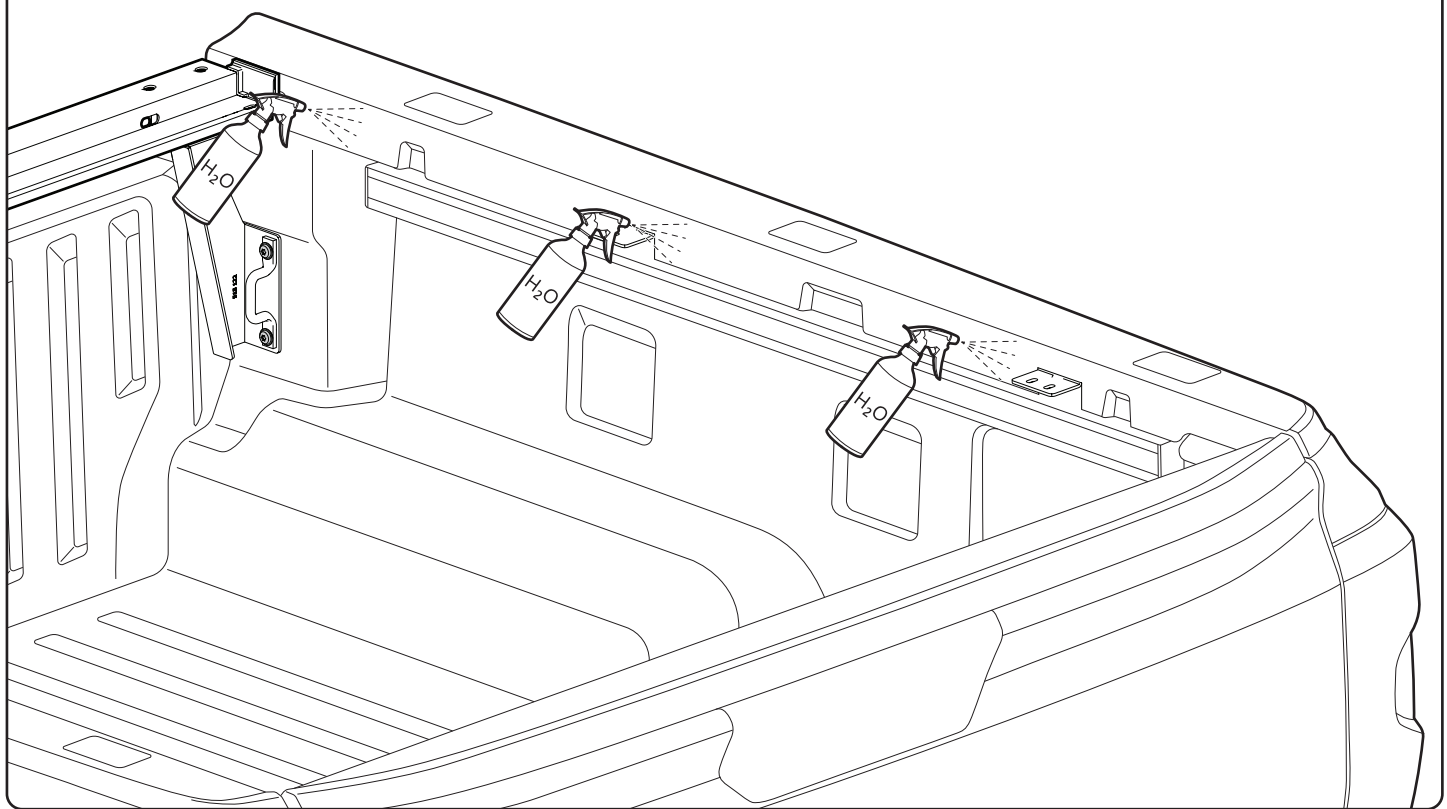

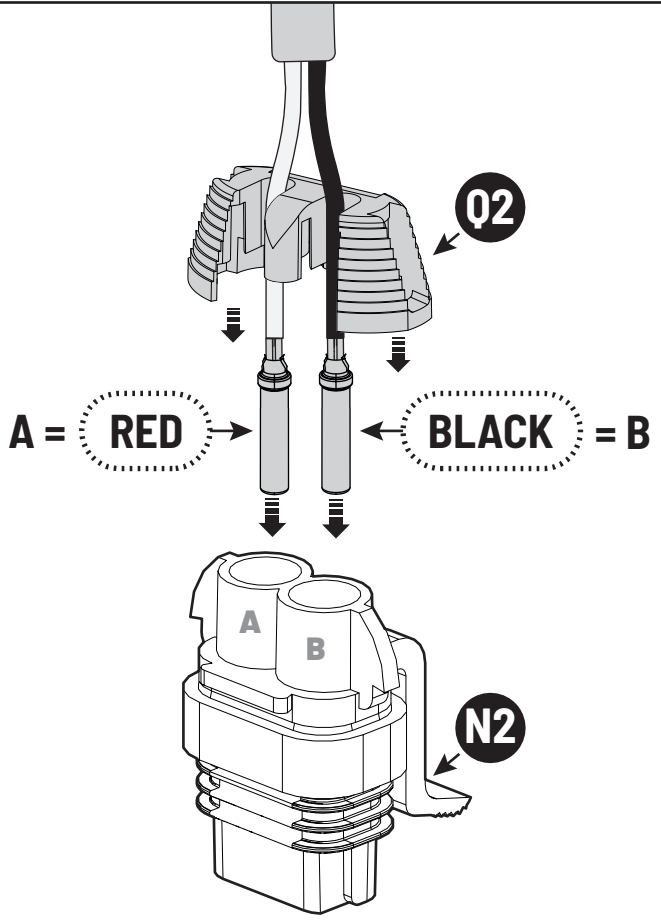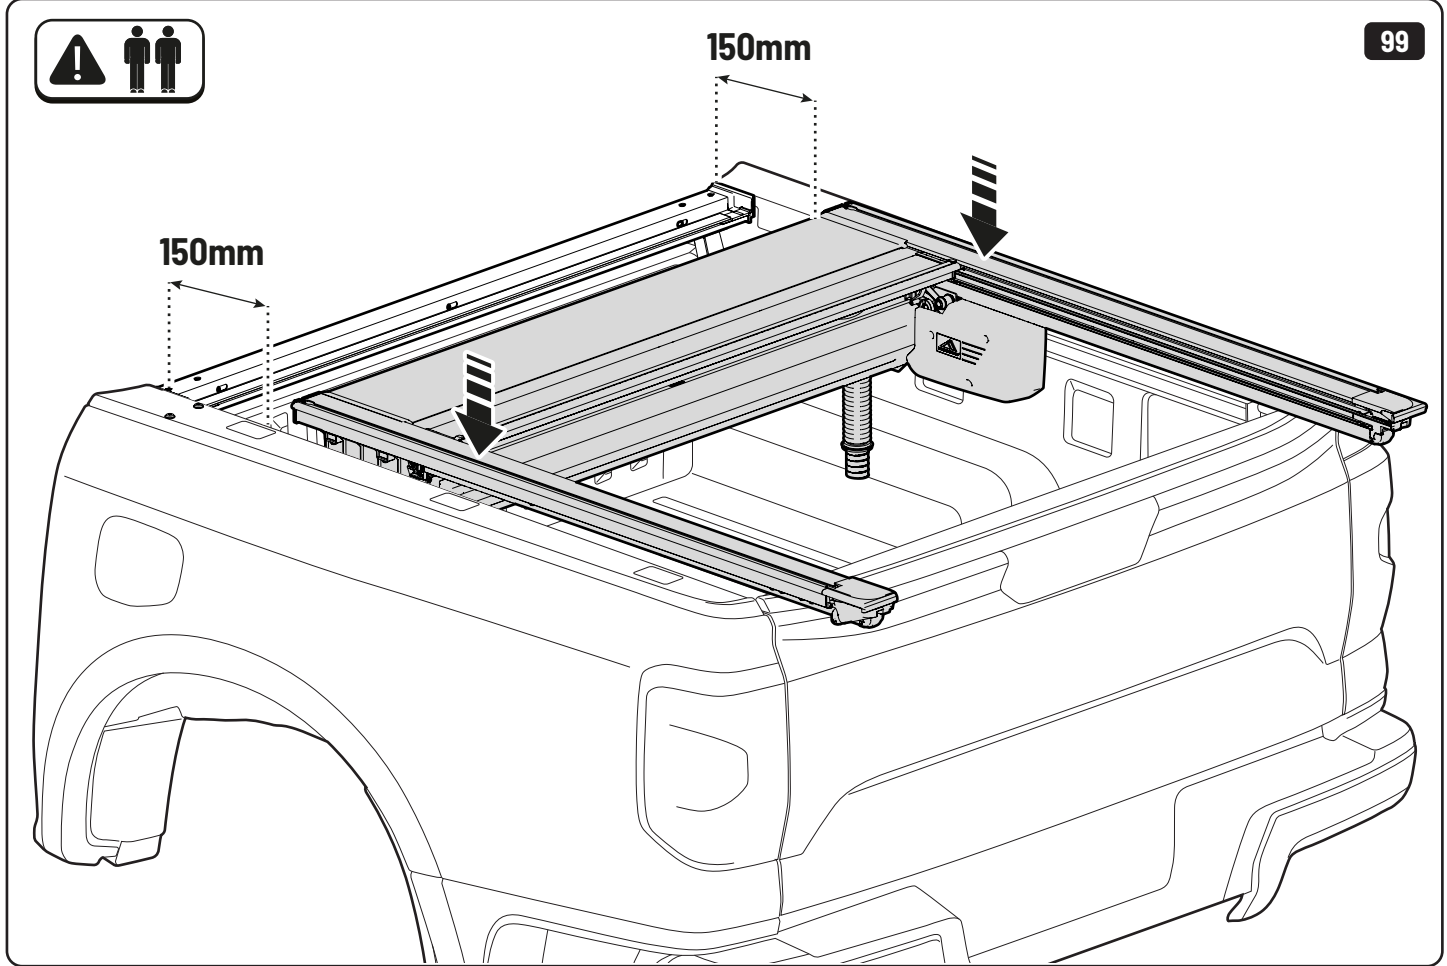

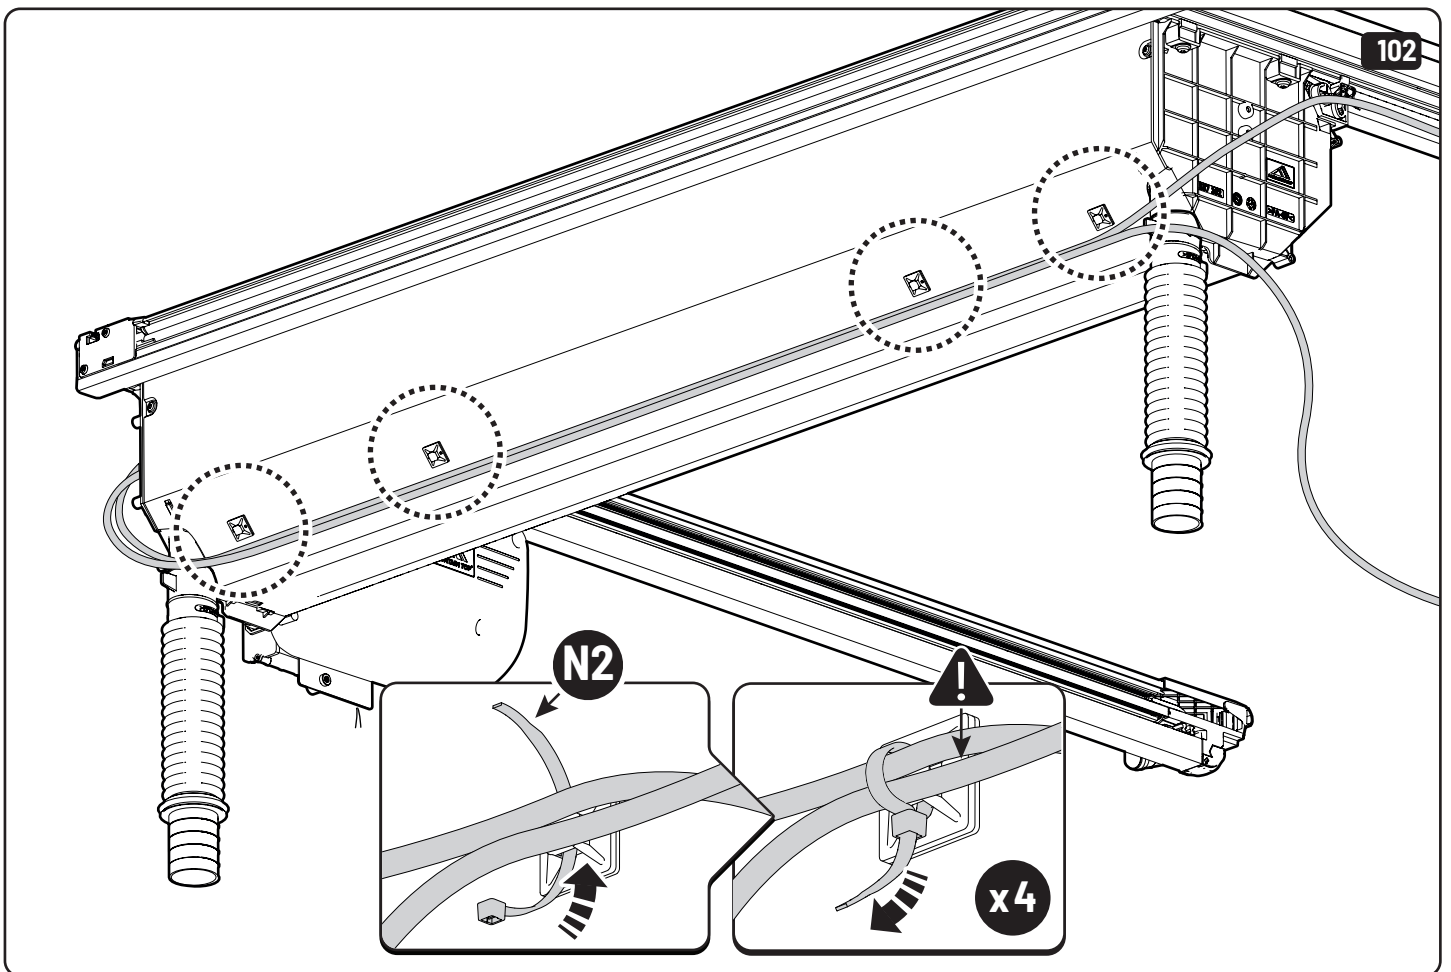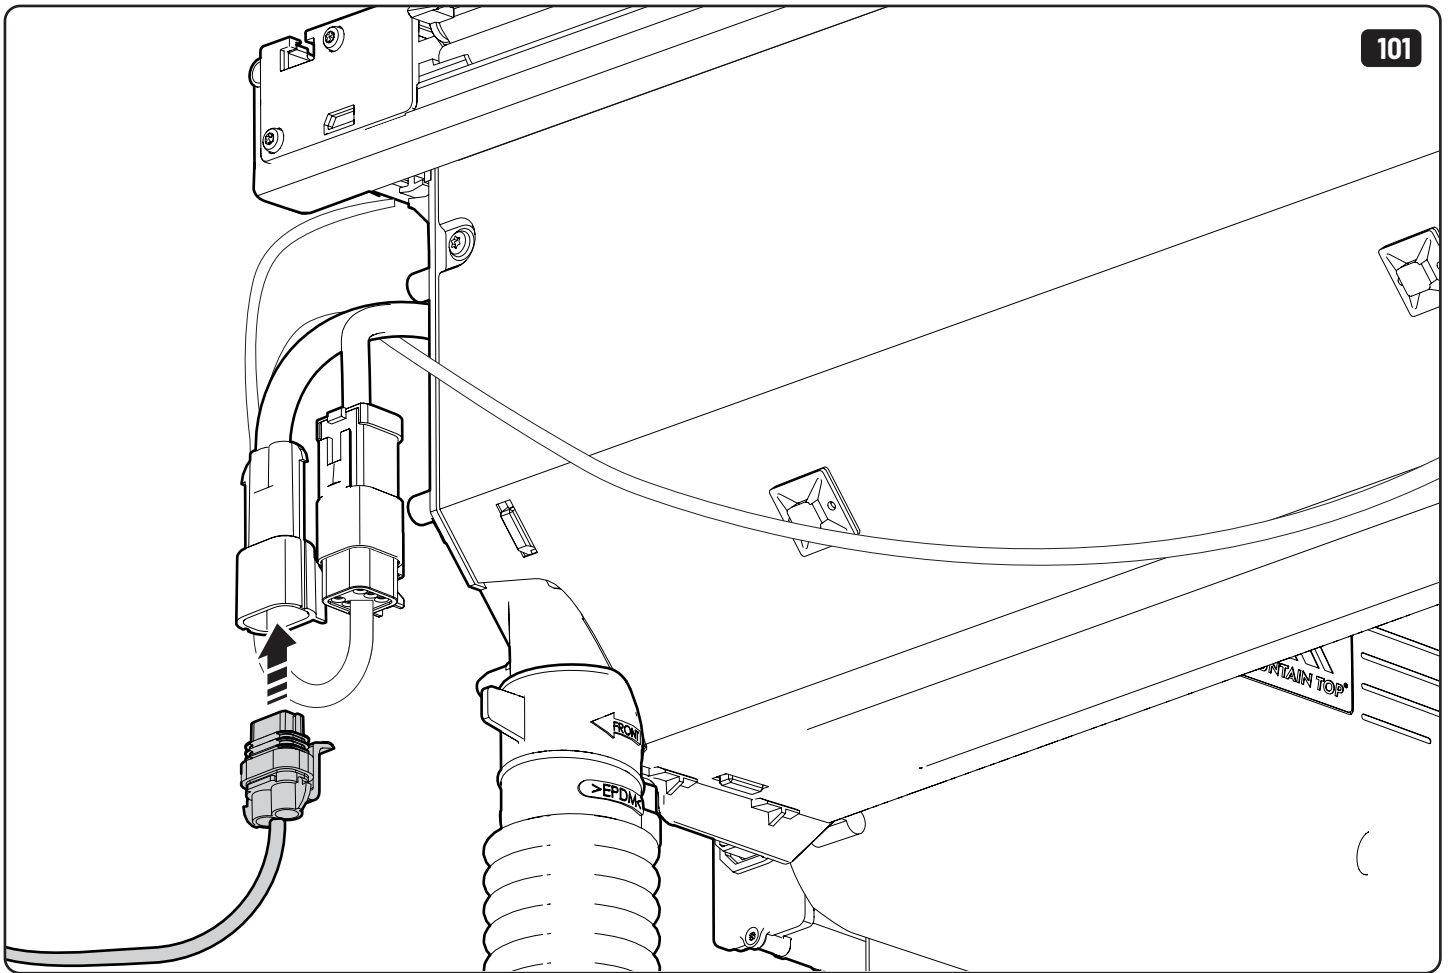

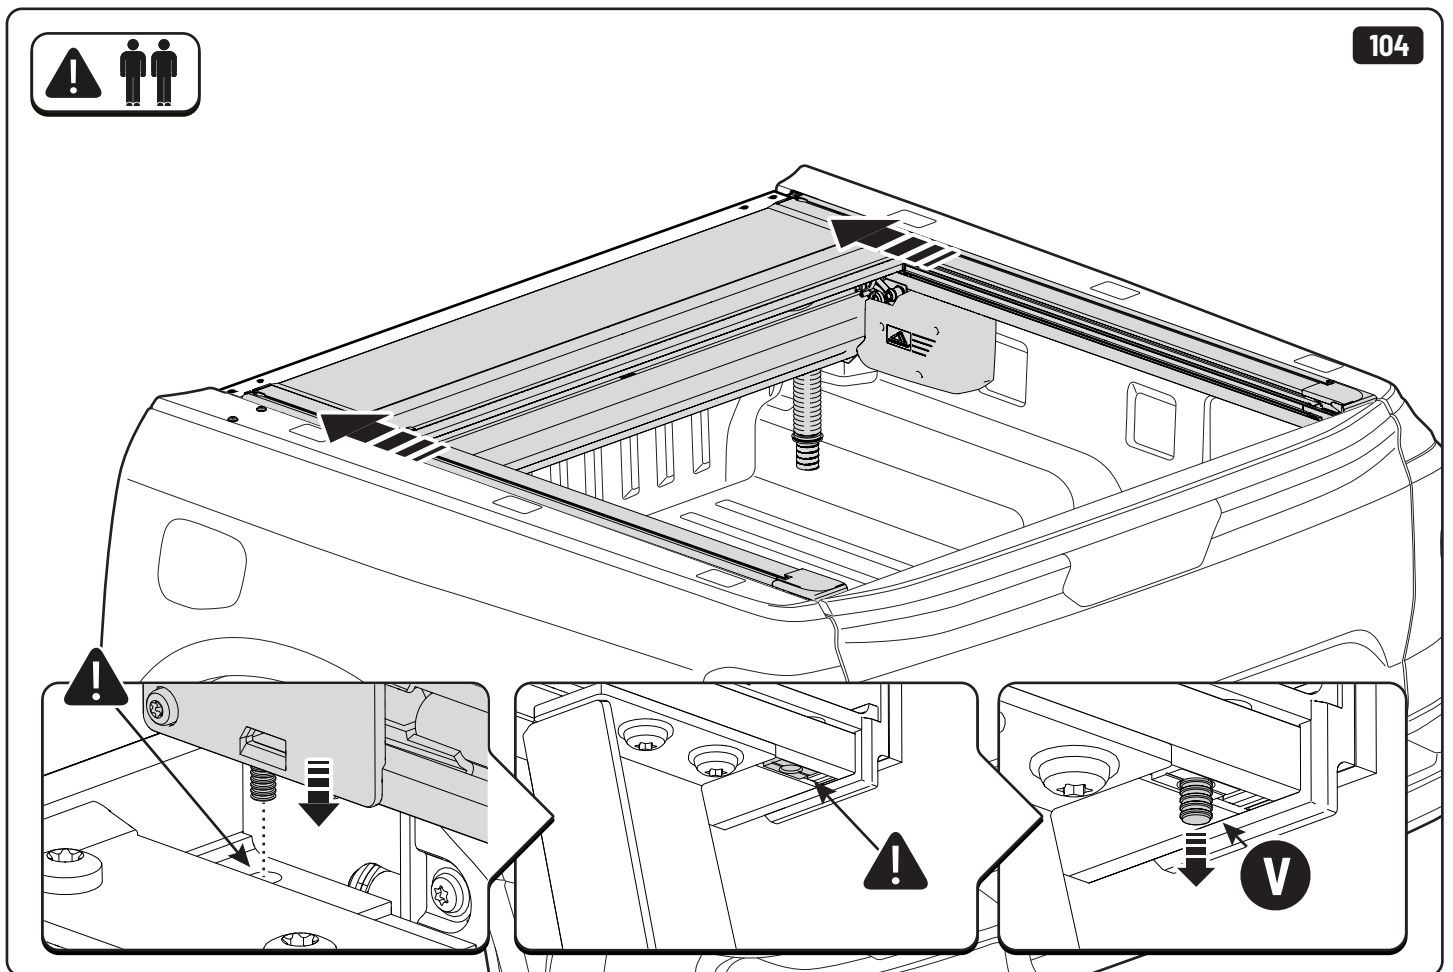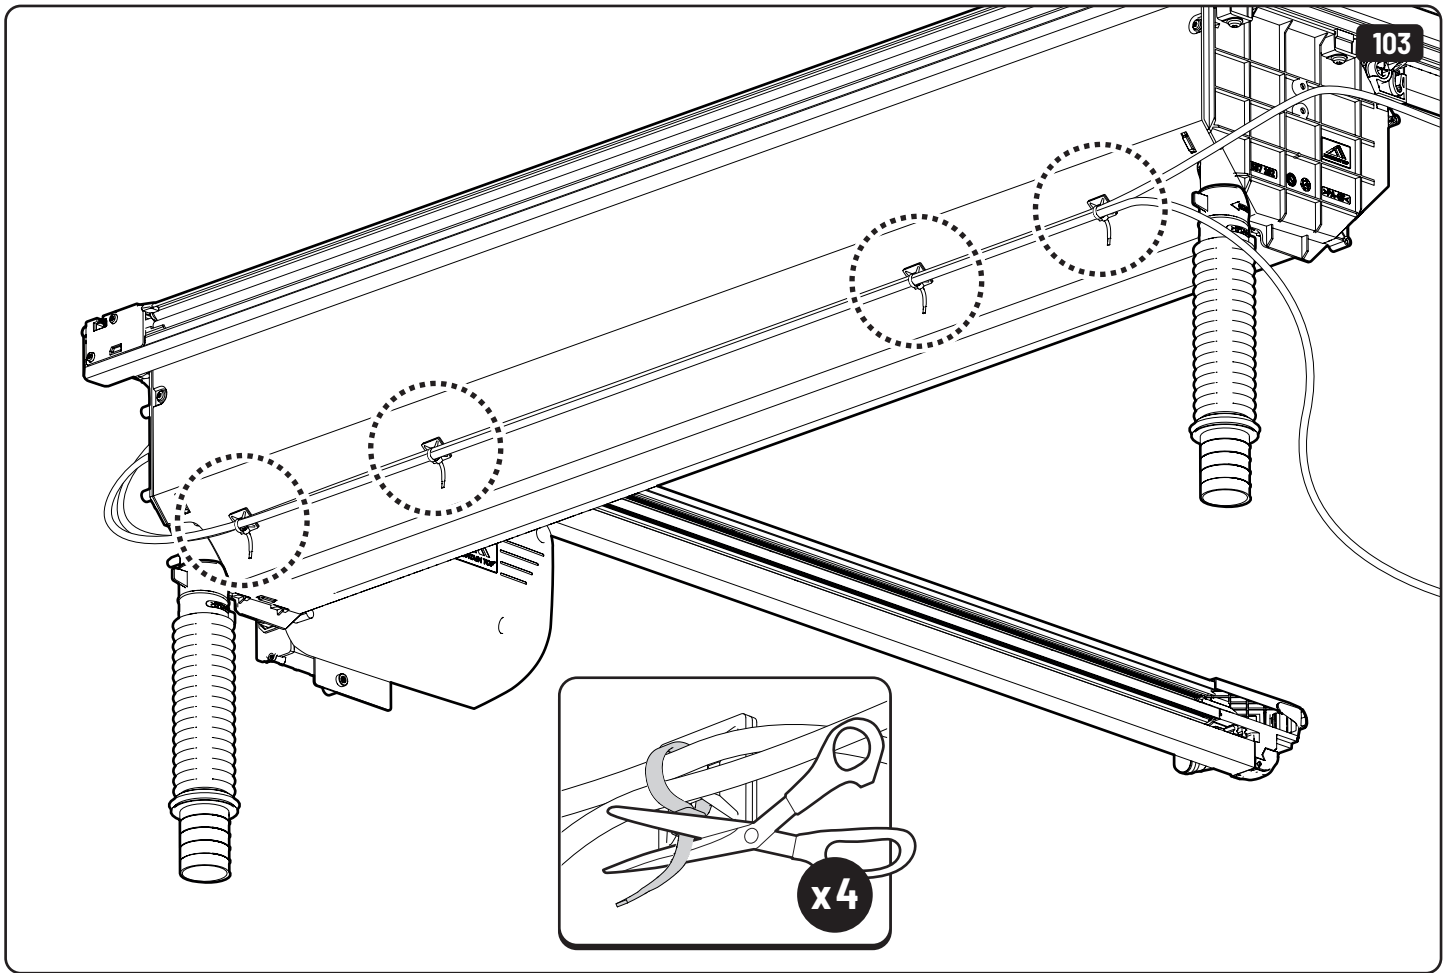

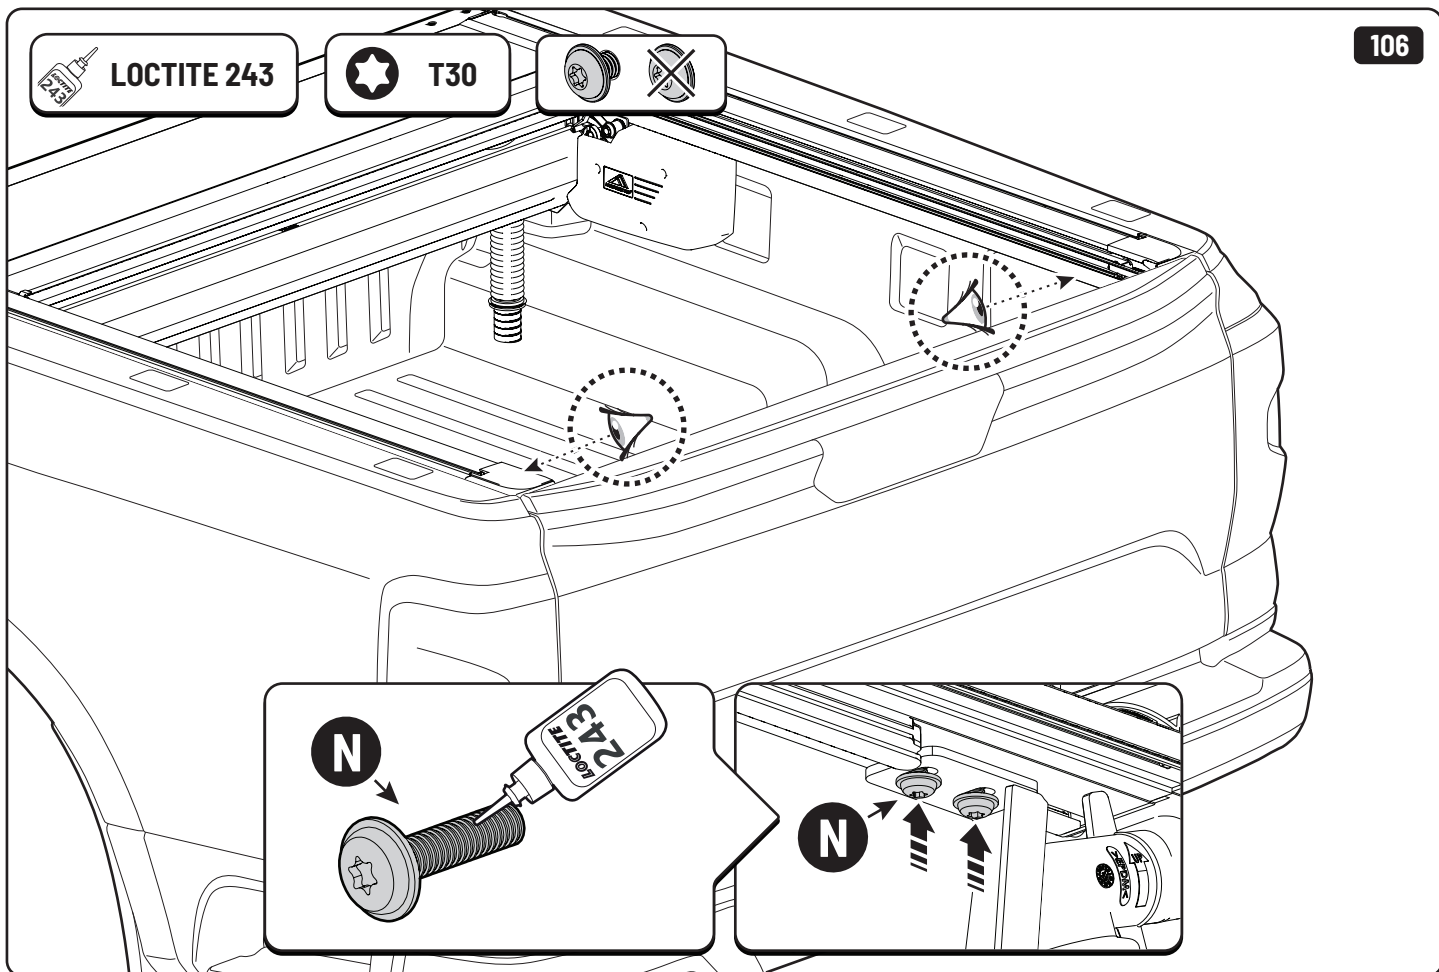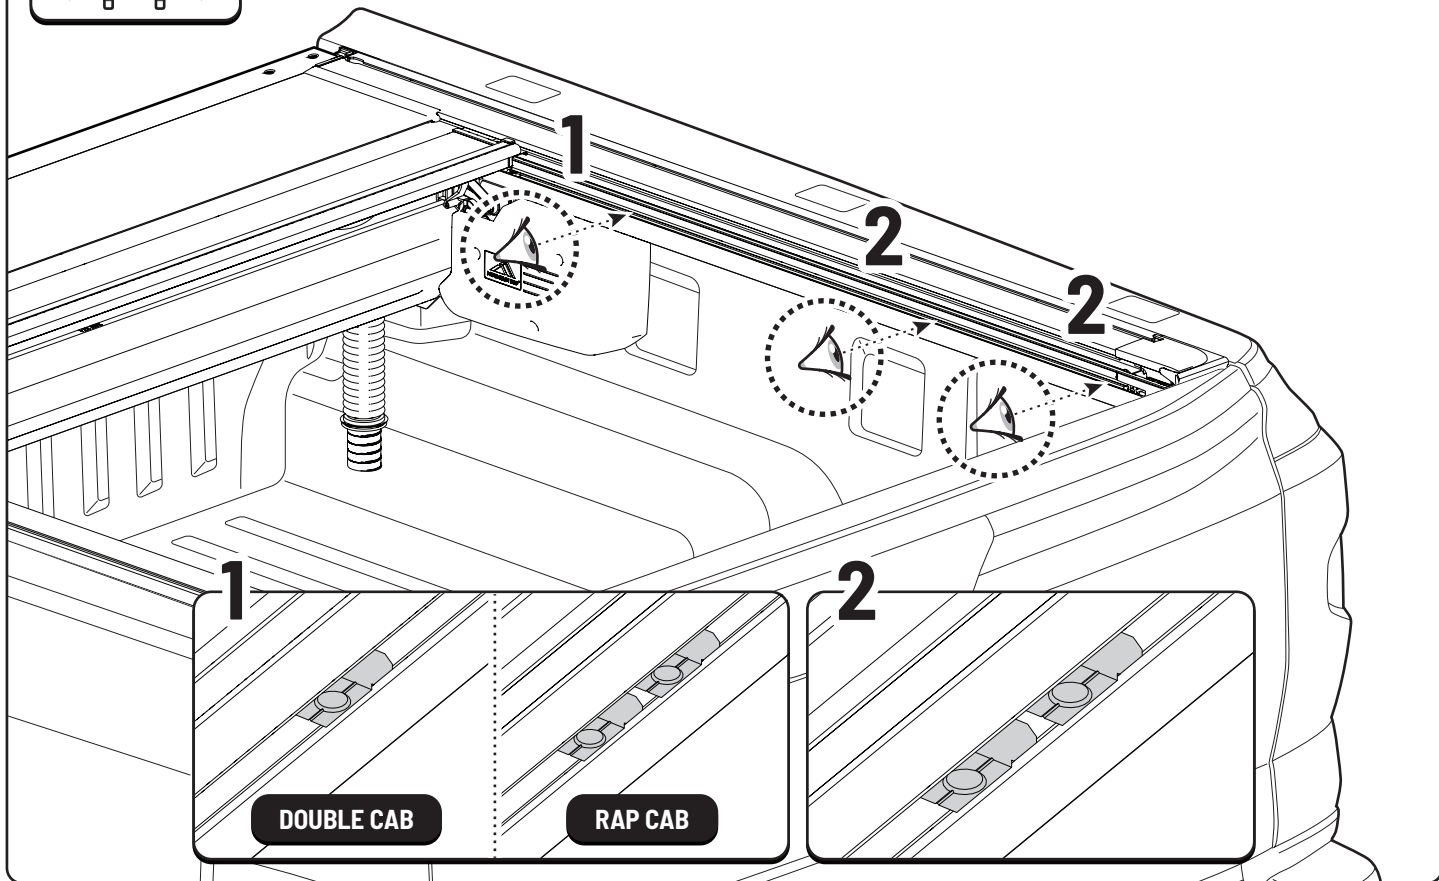


LOCTITE 243

T30




107

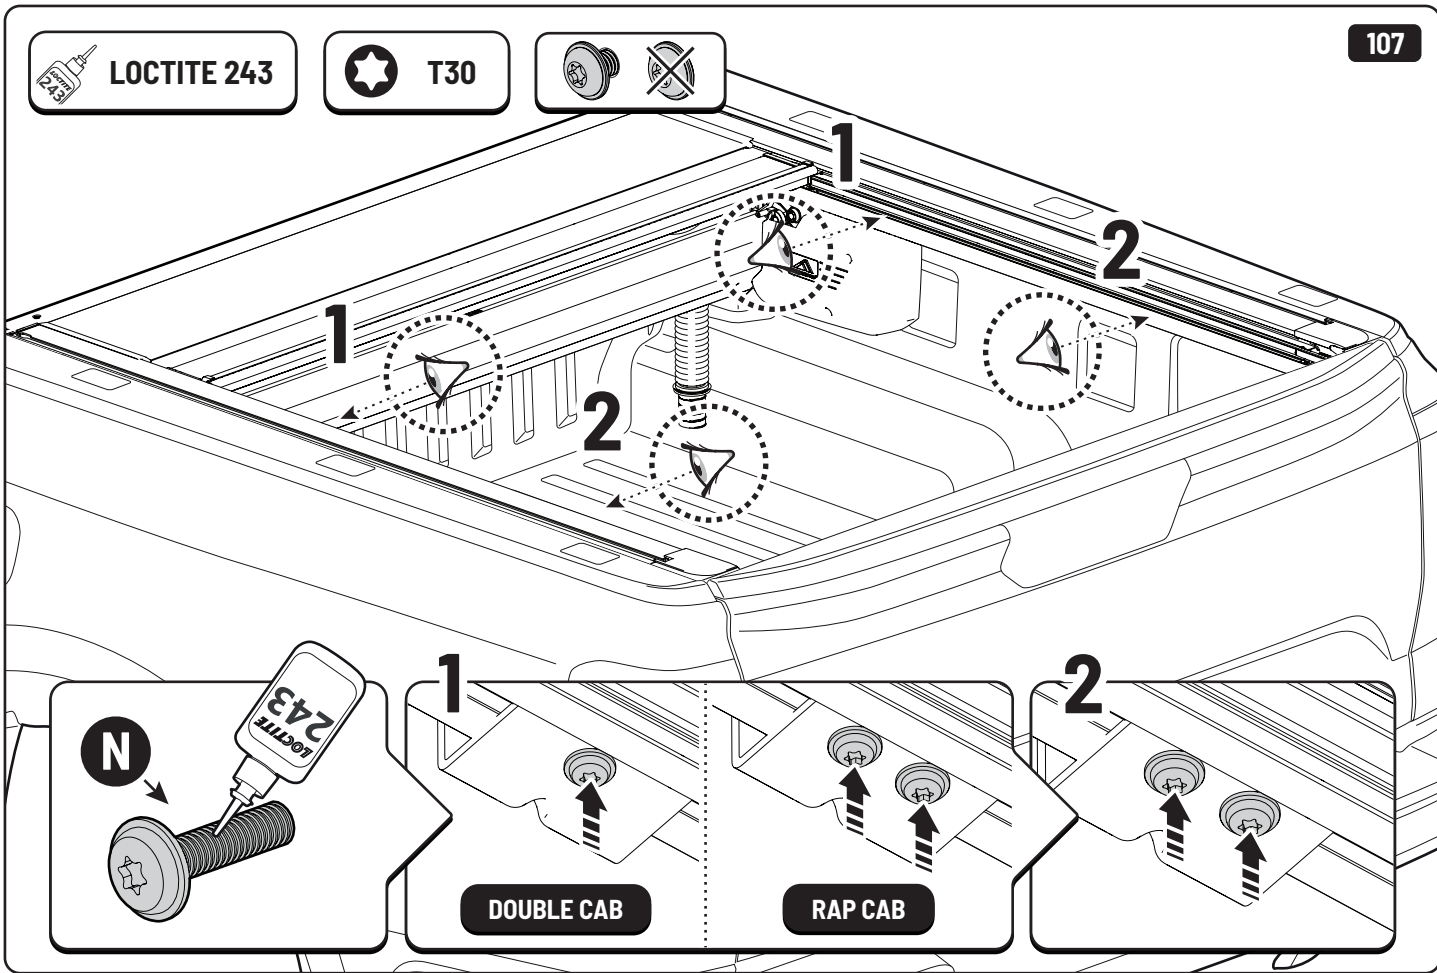

! ONLY FOR FORD RAPTOR / WILDTRAK





108

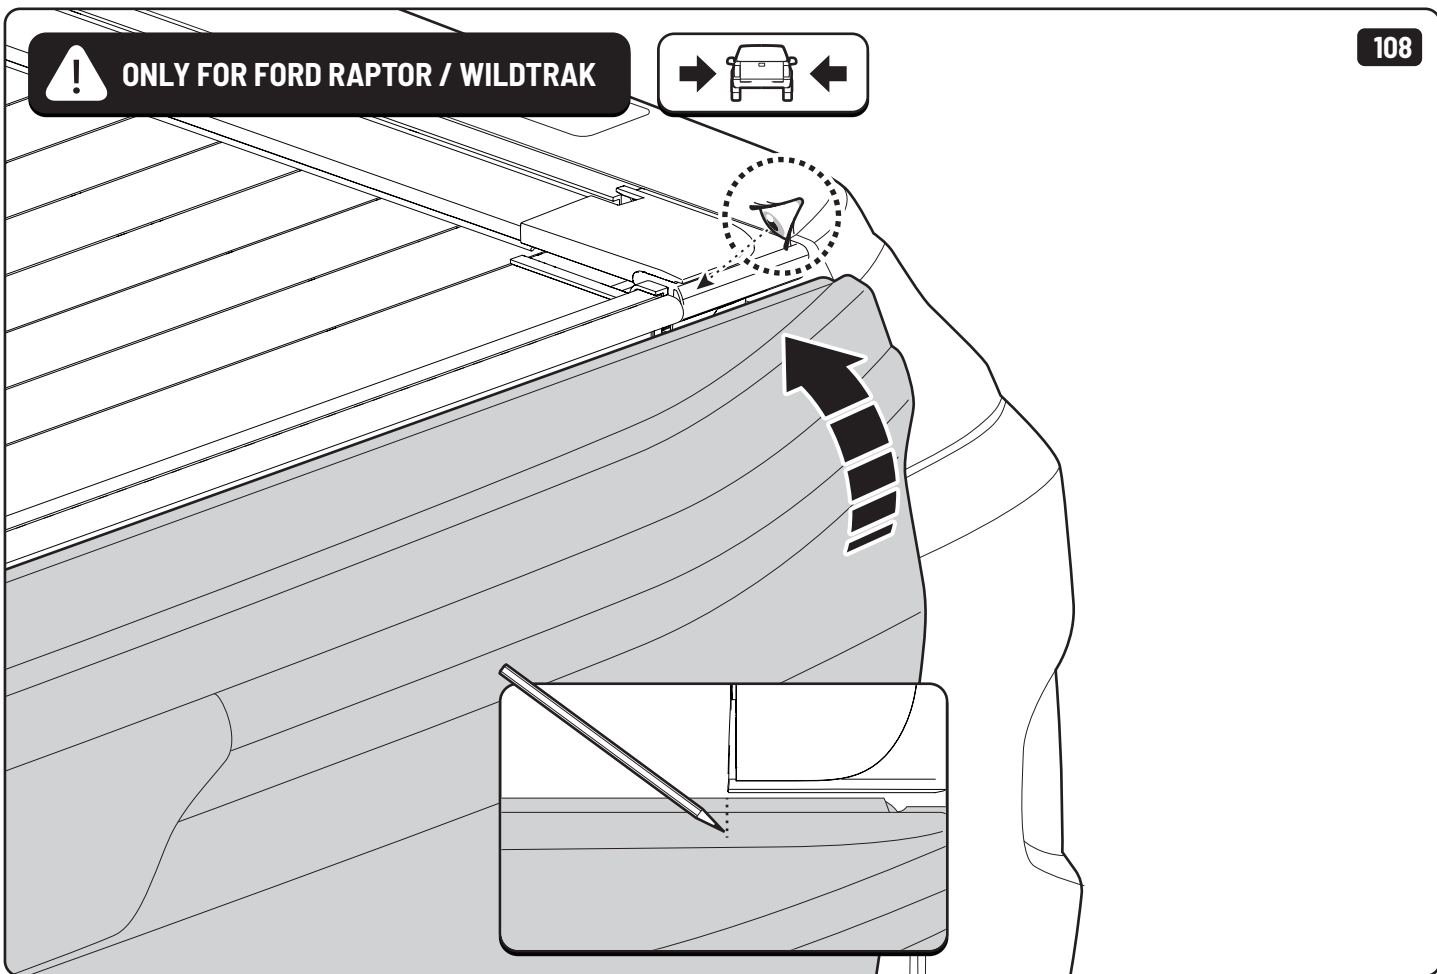


! ONLY FOR FORD RAPTOR / WILDTRAK




109

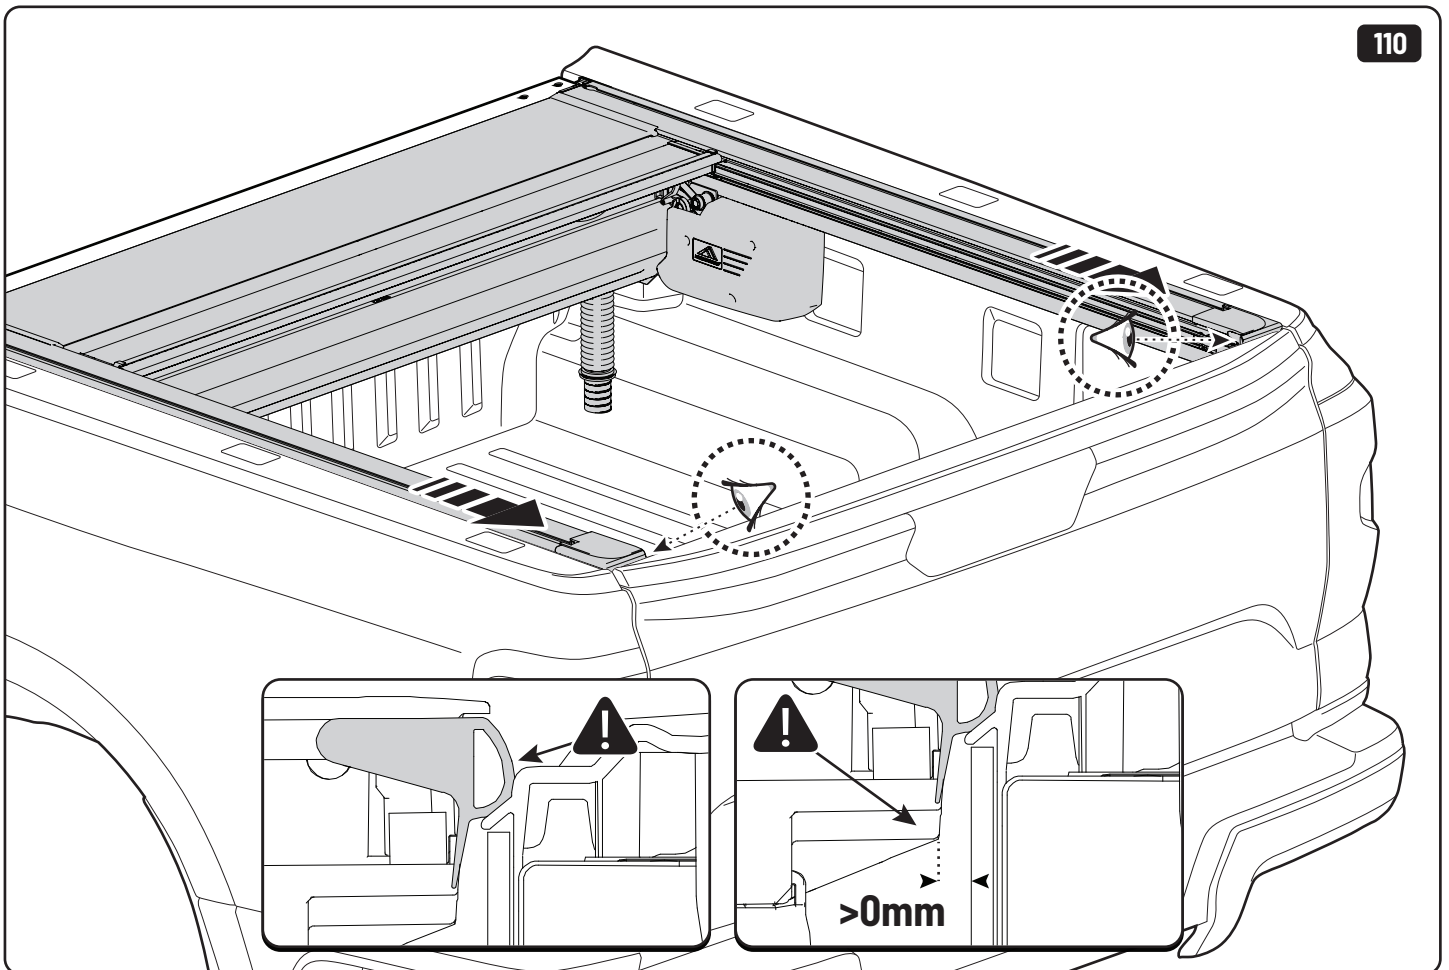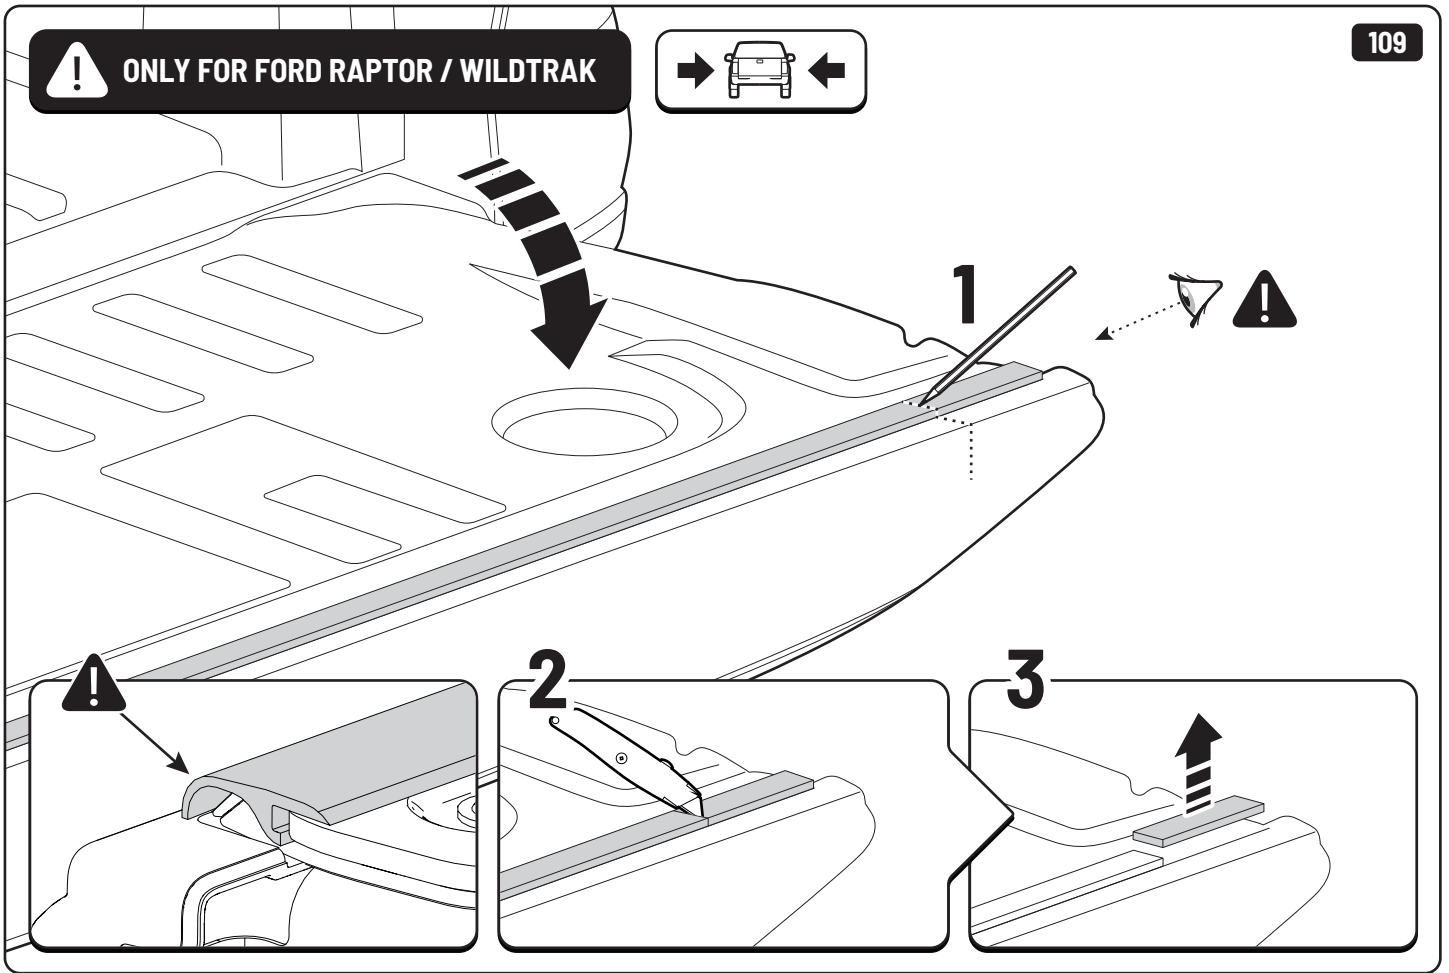


110

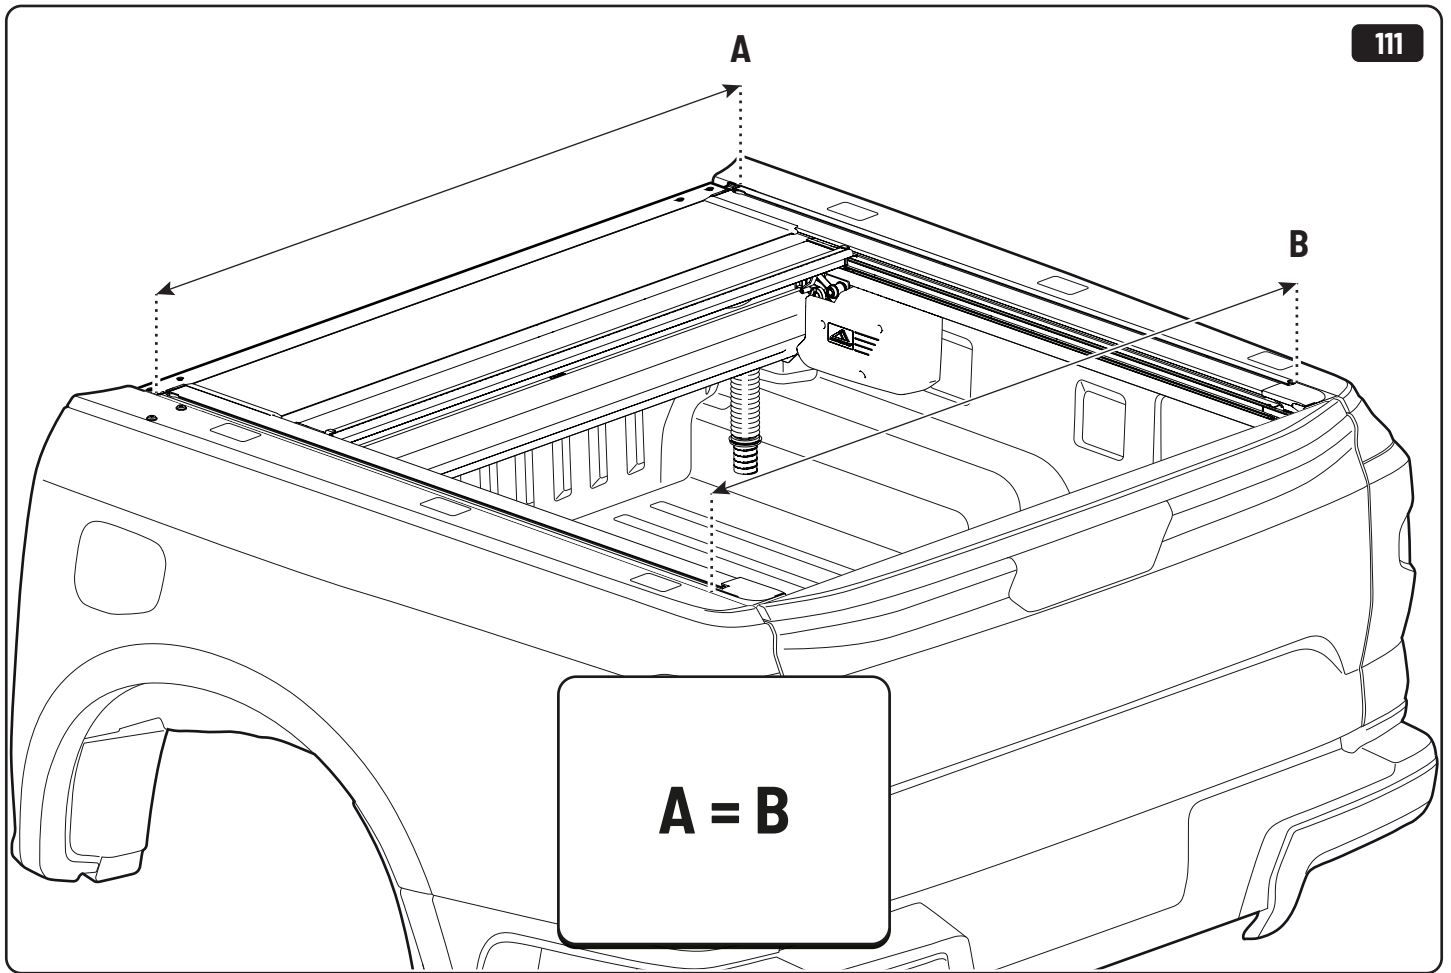


 T30 10 Nm

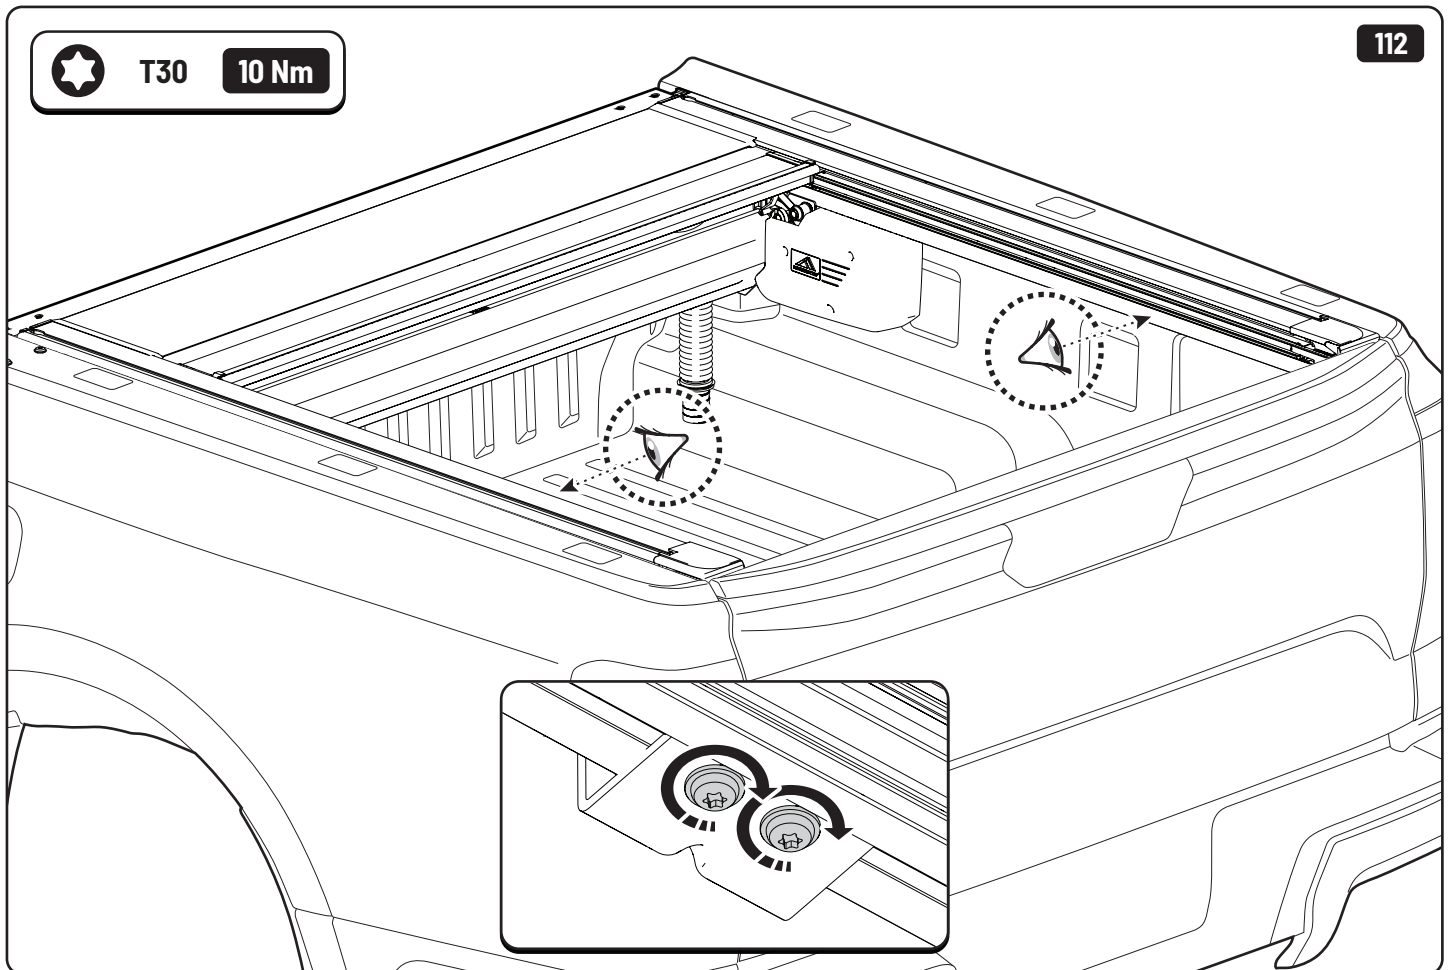

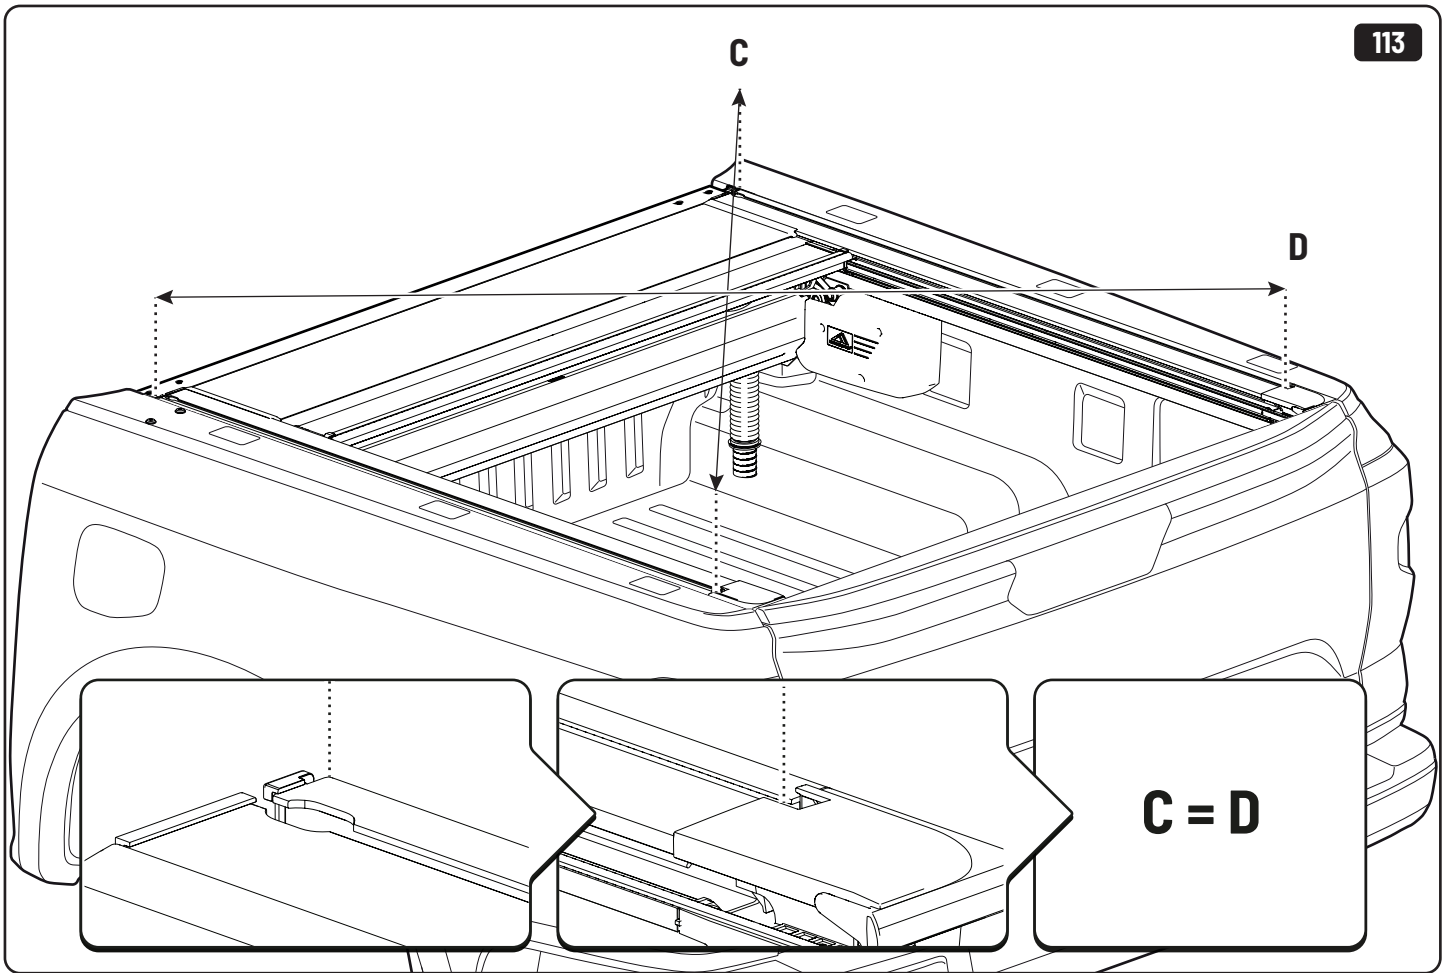


T30


4,8 Nm


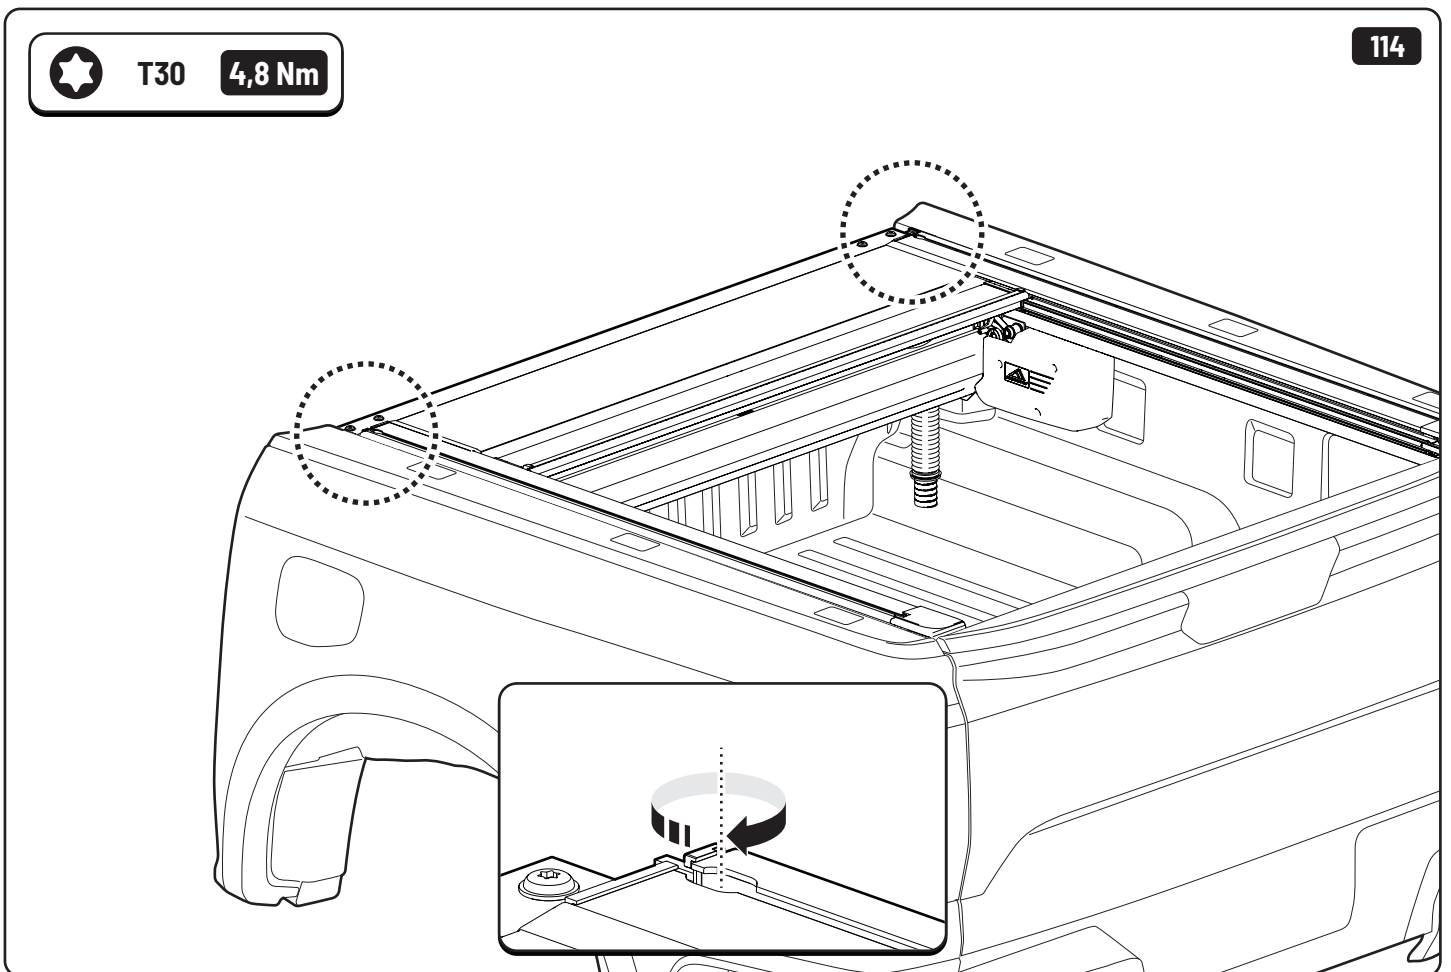




 T30 10 Nm




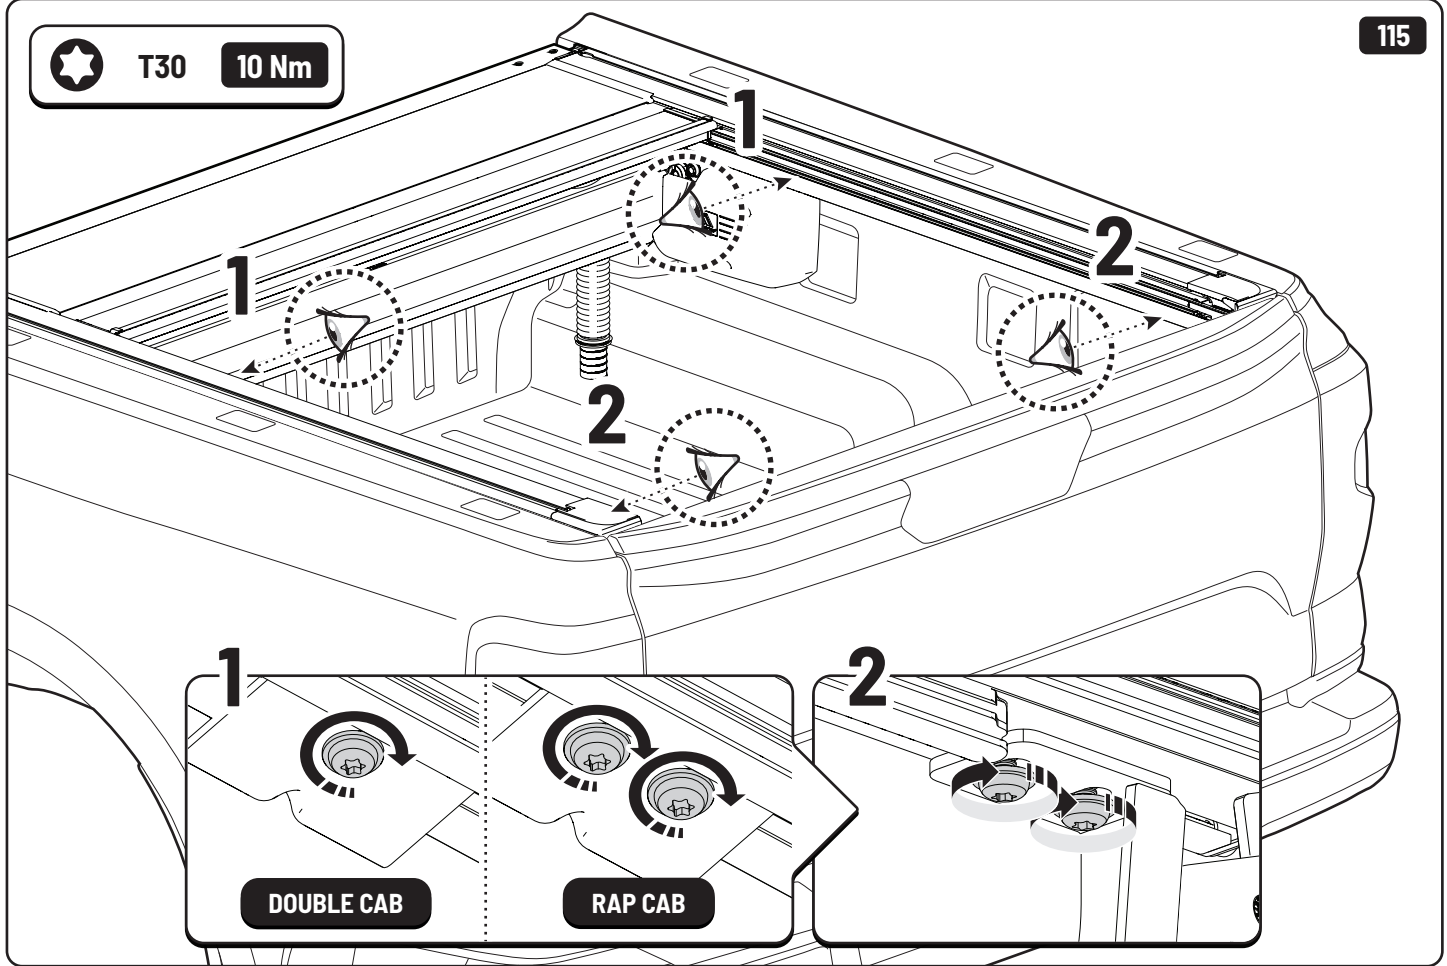


 T45 25 Nm

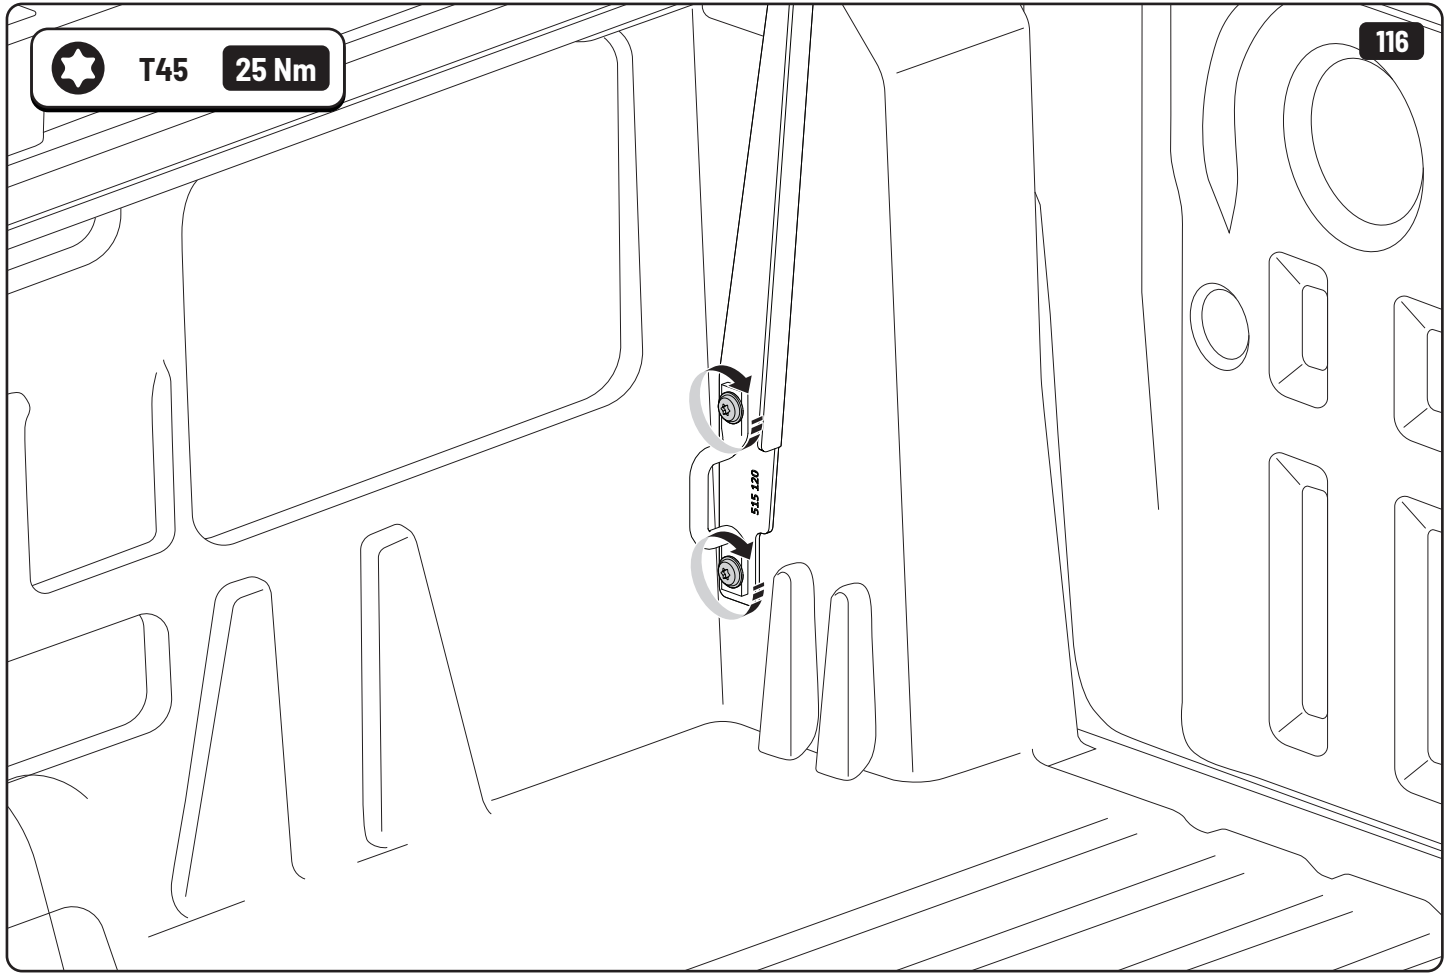

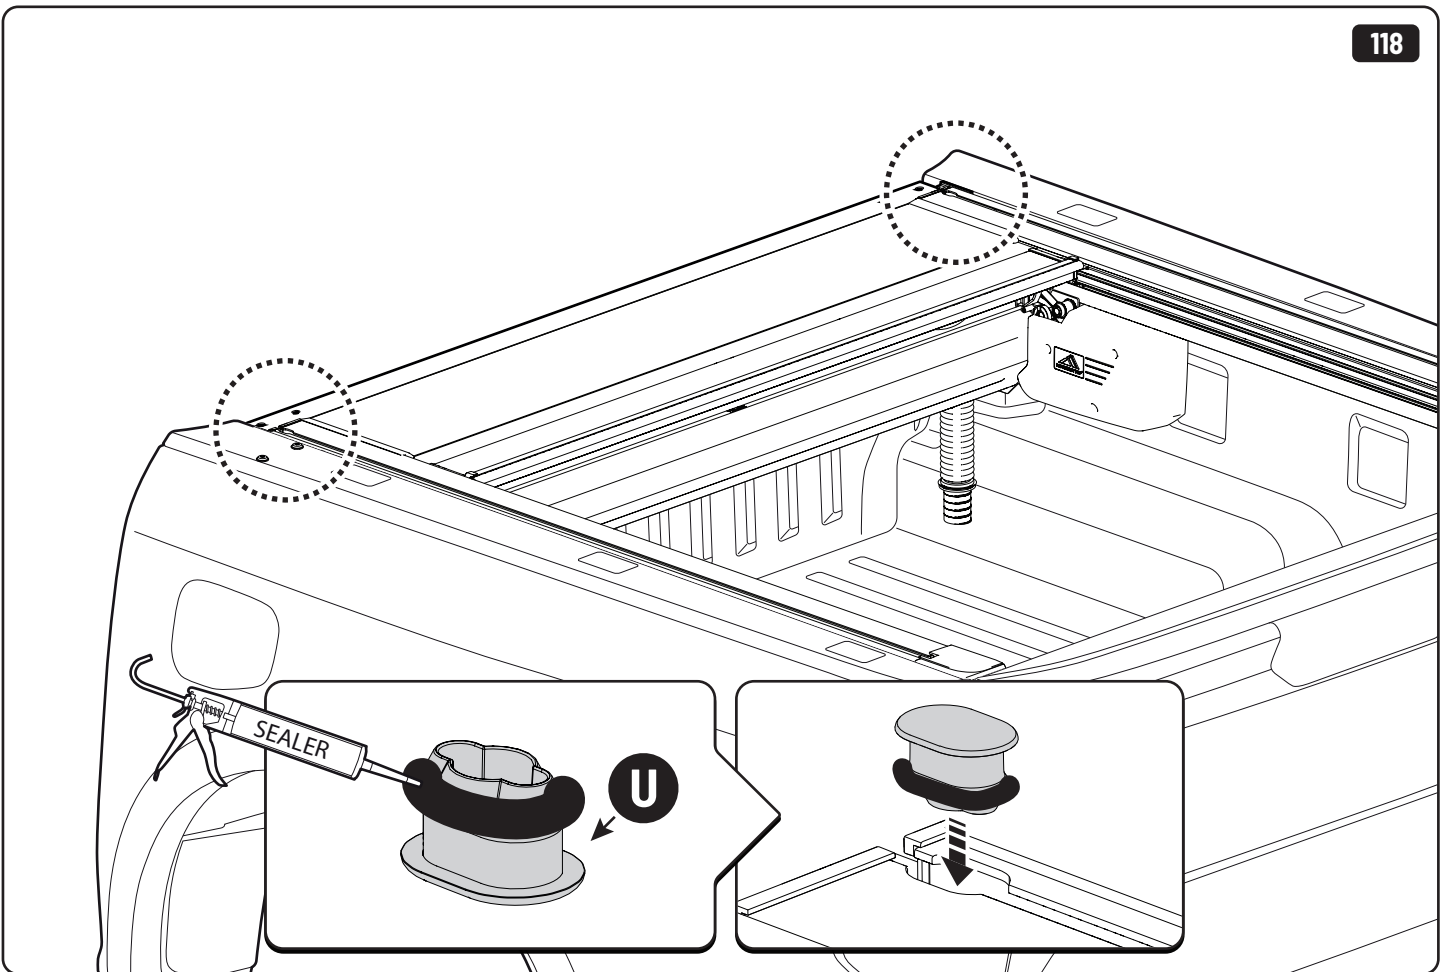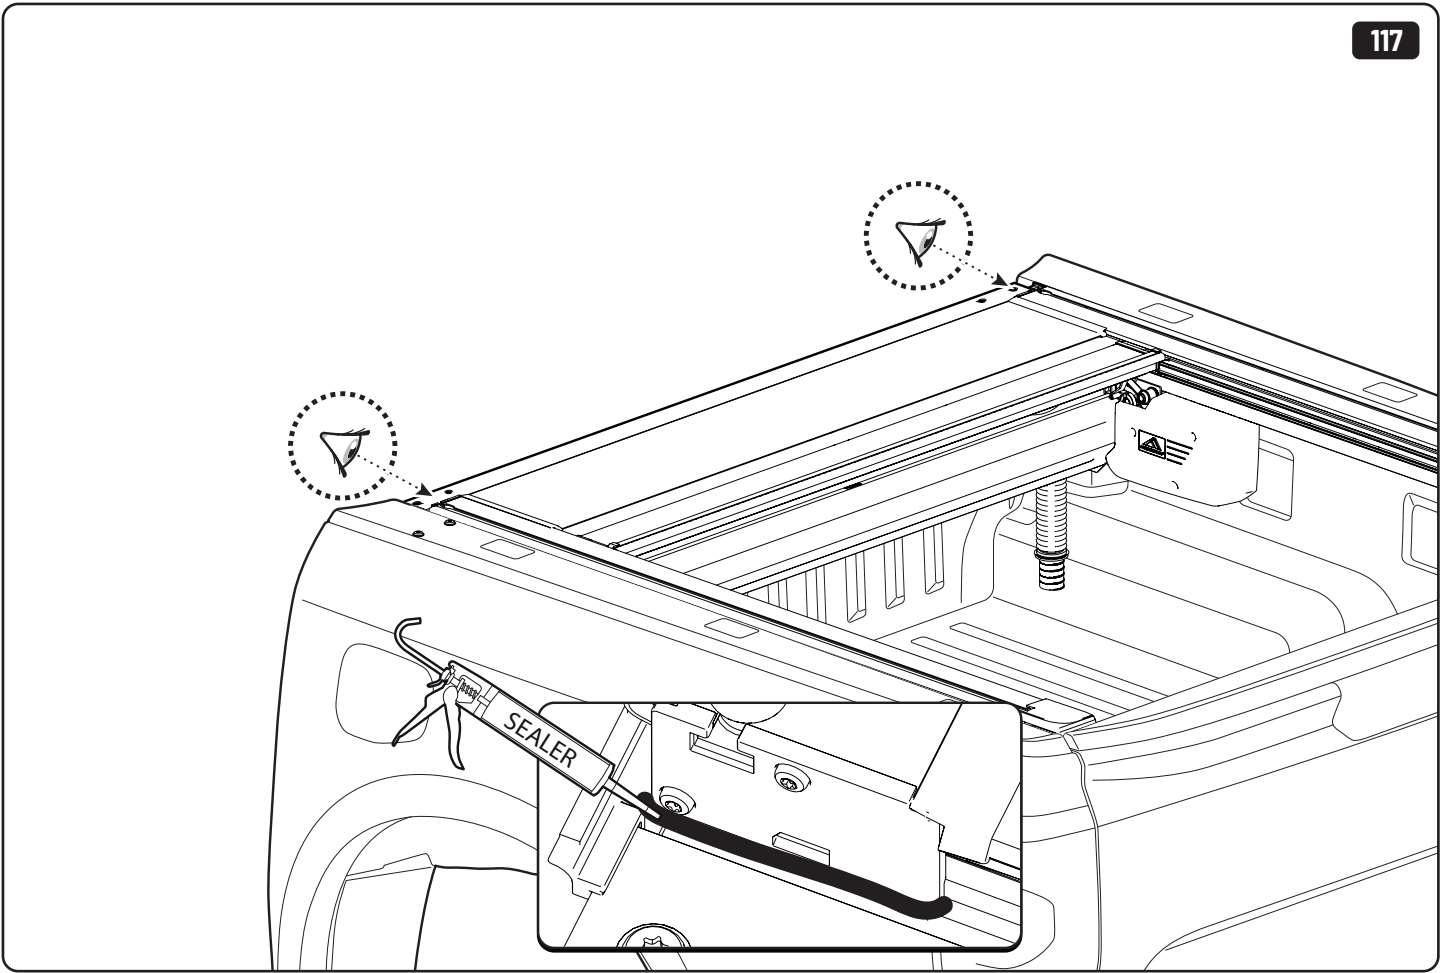


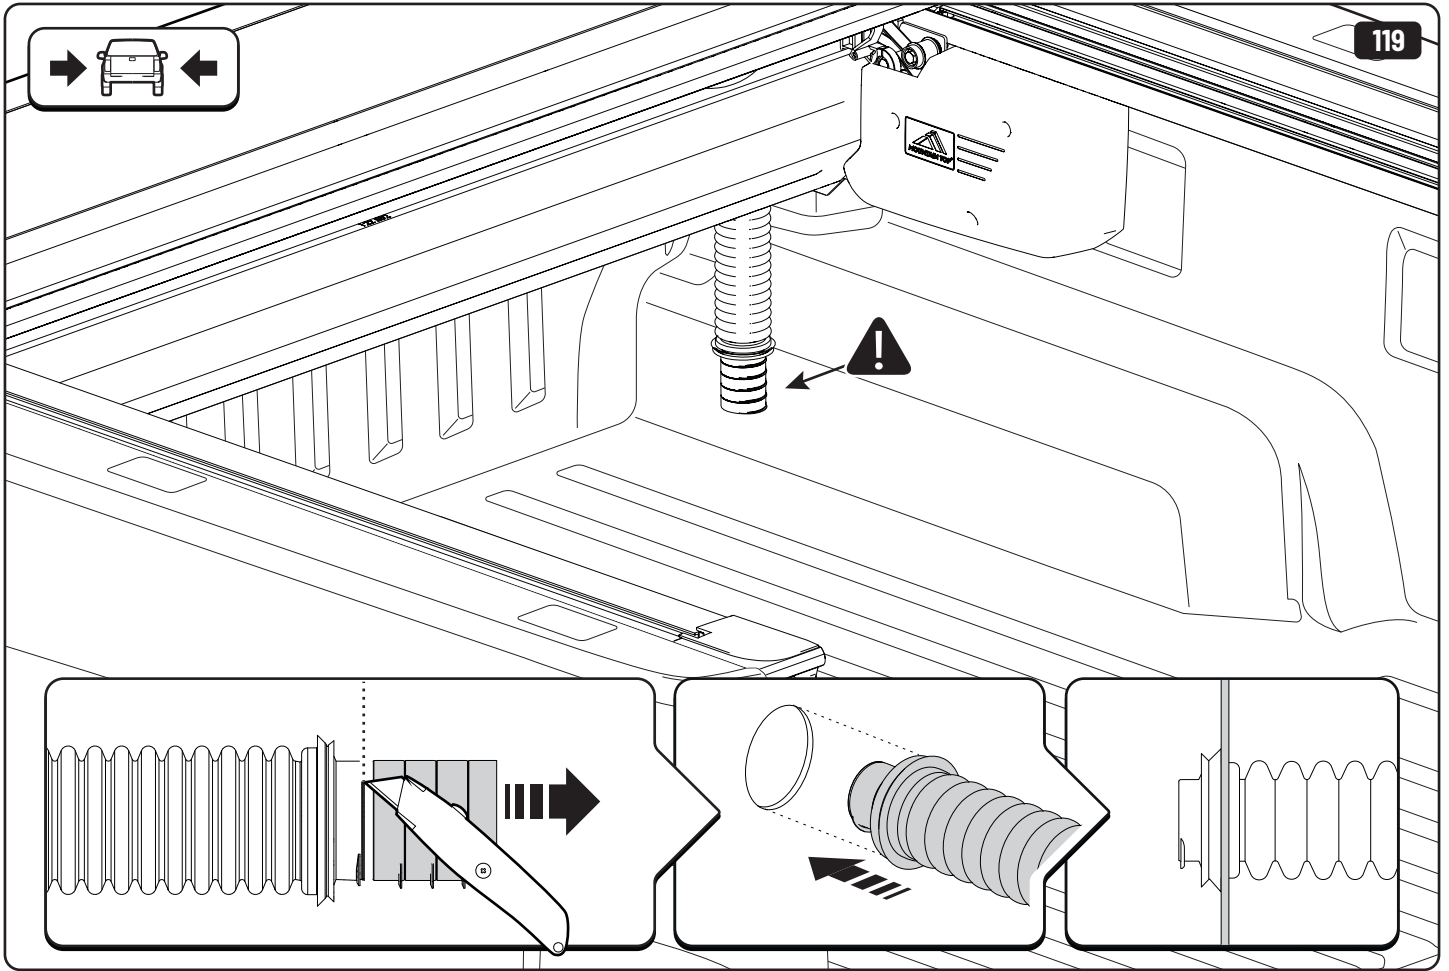

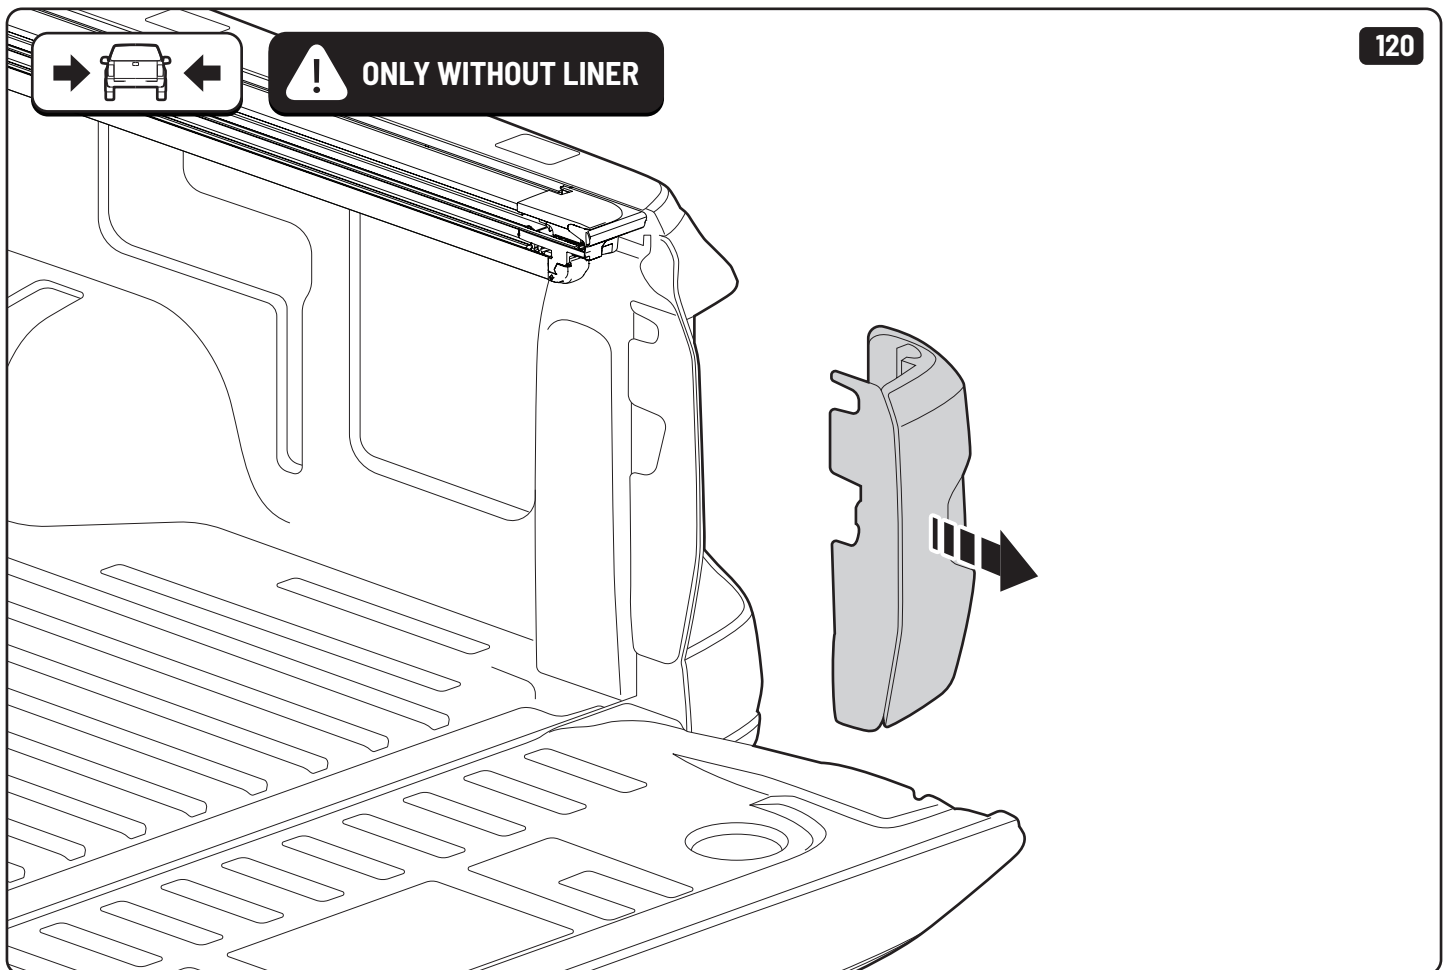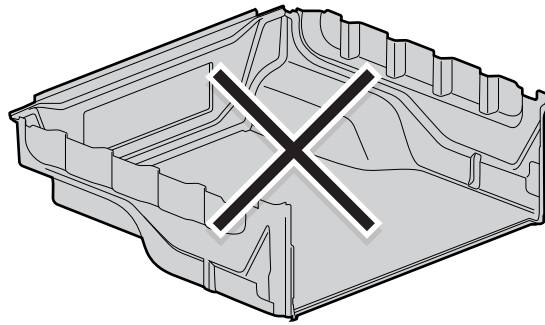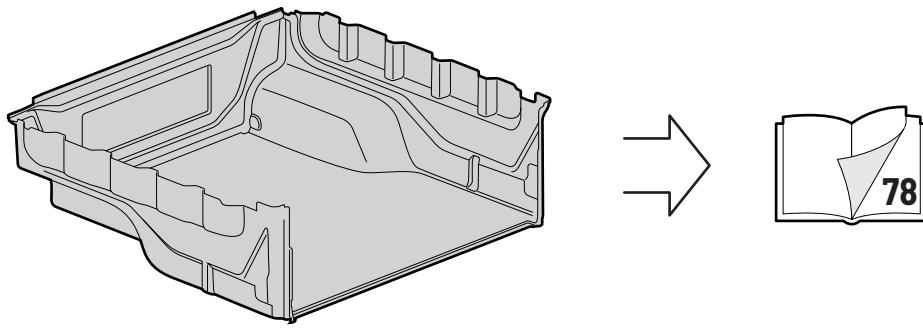




! ONLY WITHOUT LINER


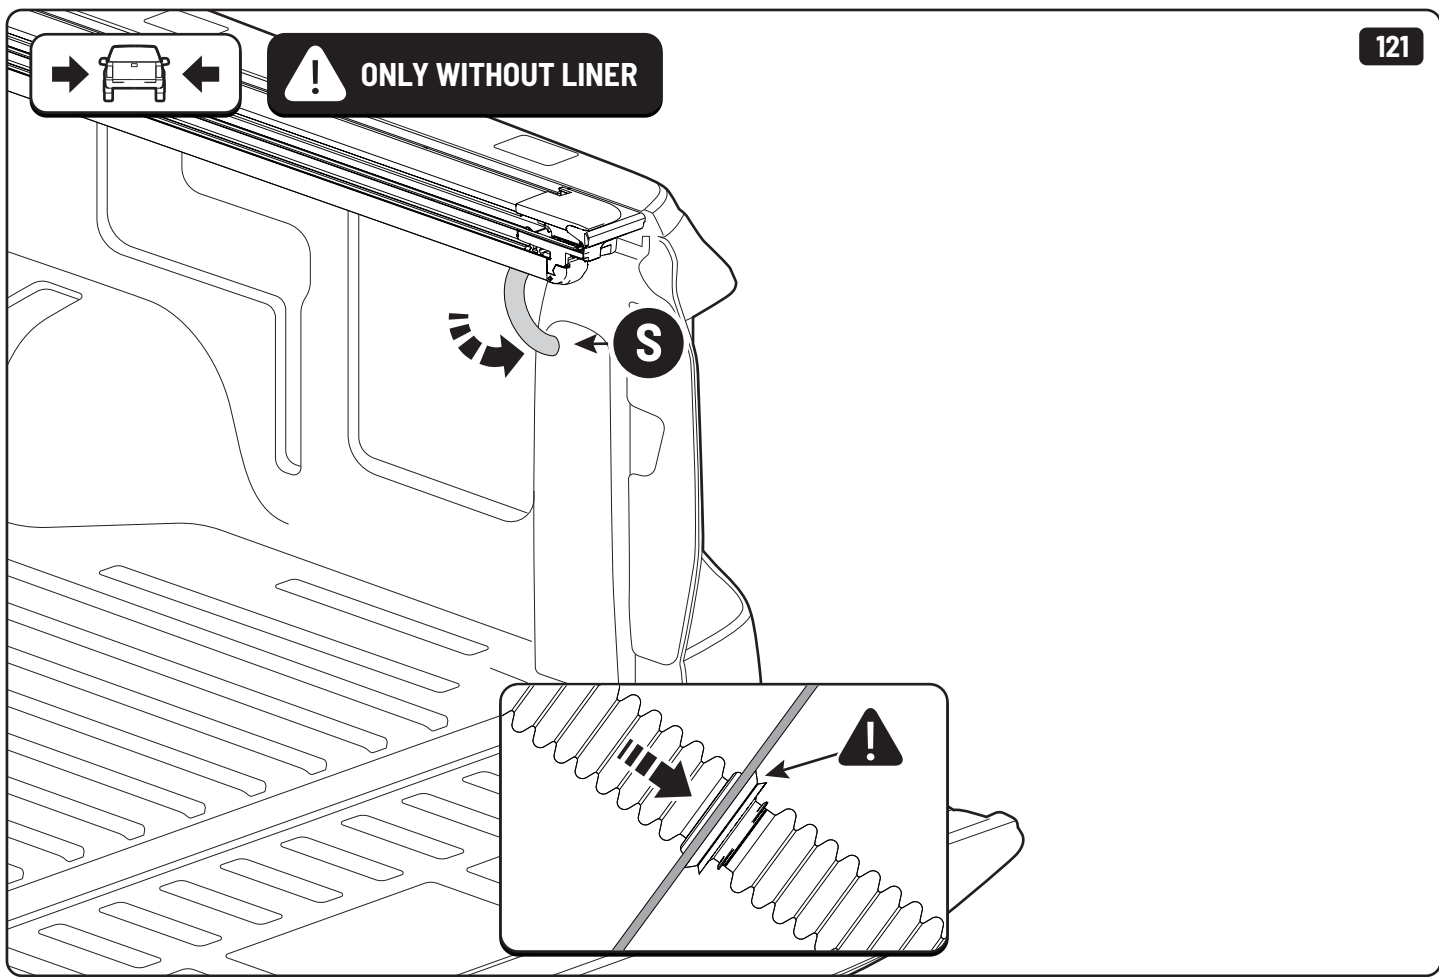





! ONLY WITHOUT LINER


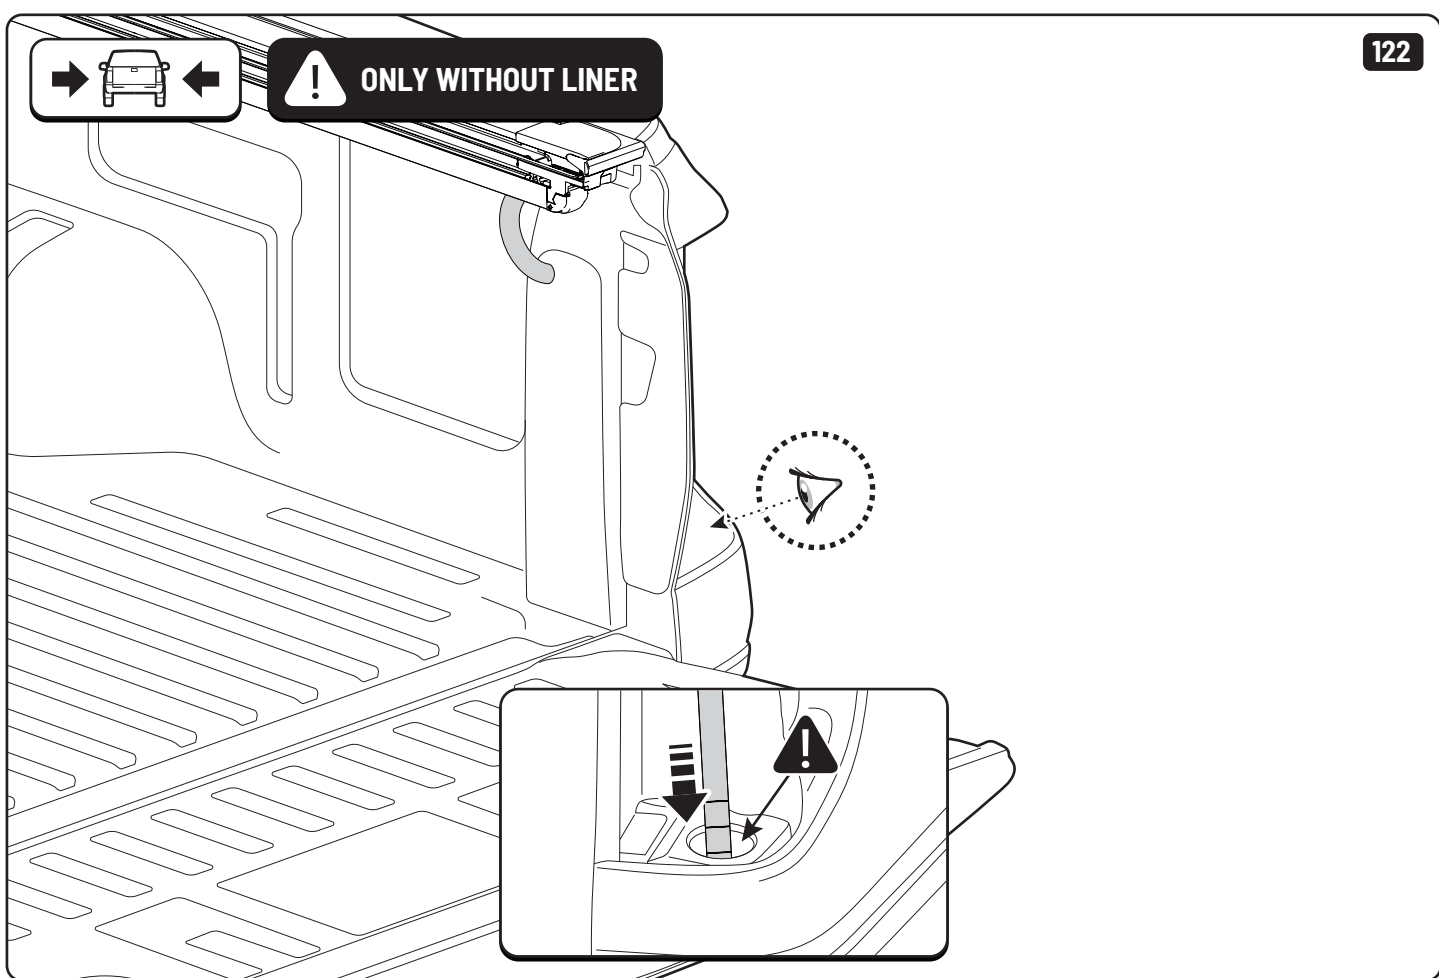




! ONLY WITHOUT LINER

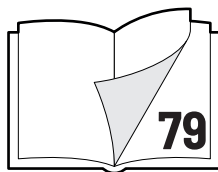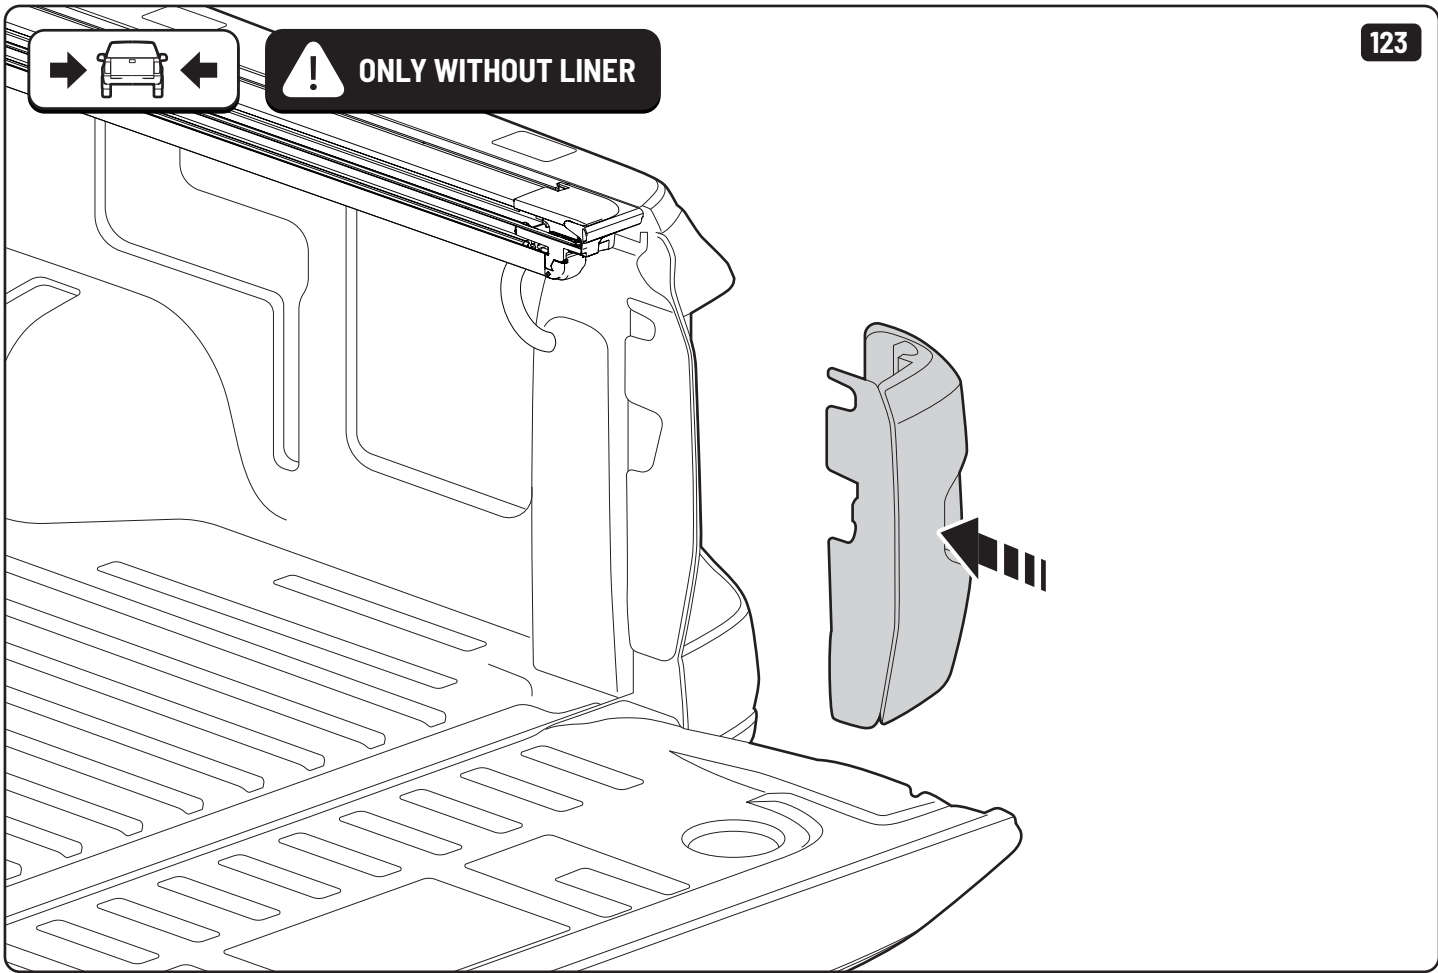


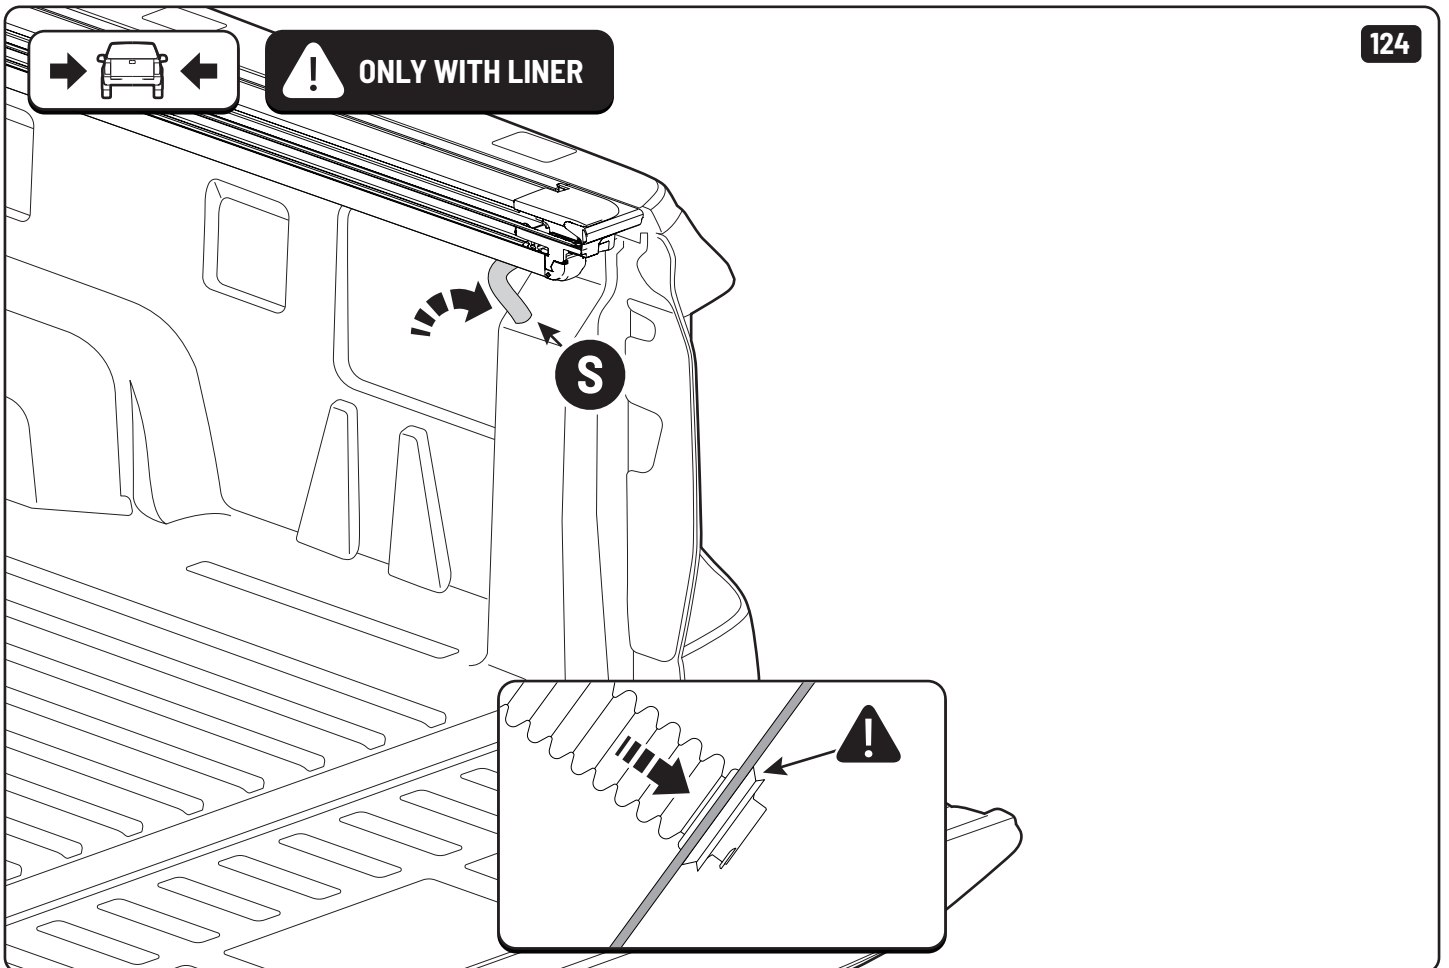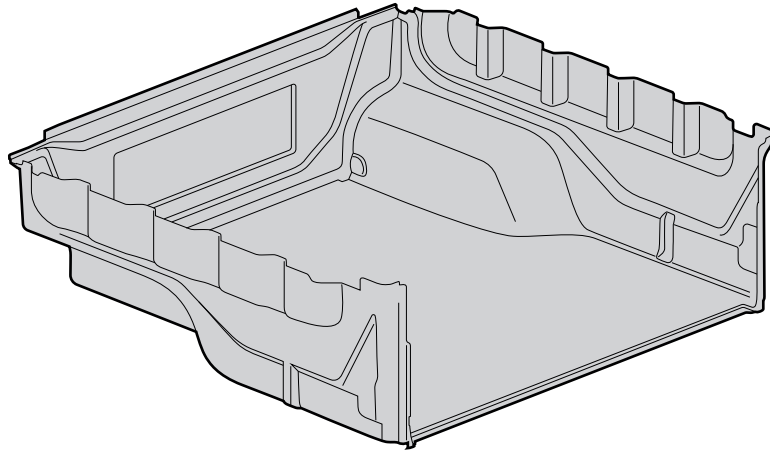

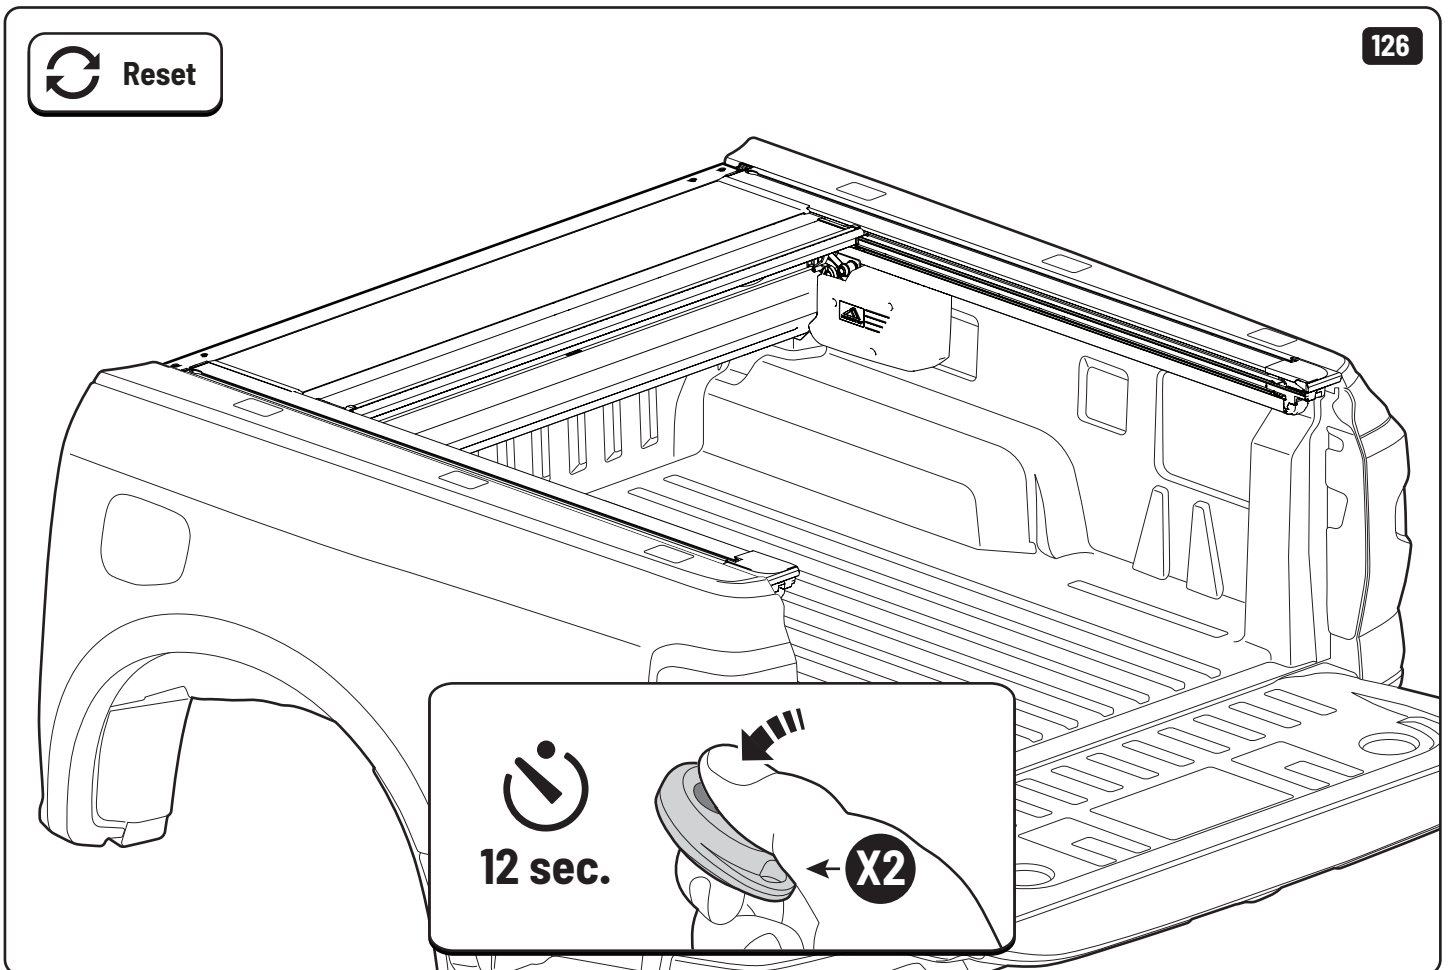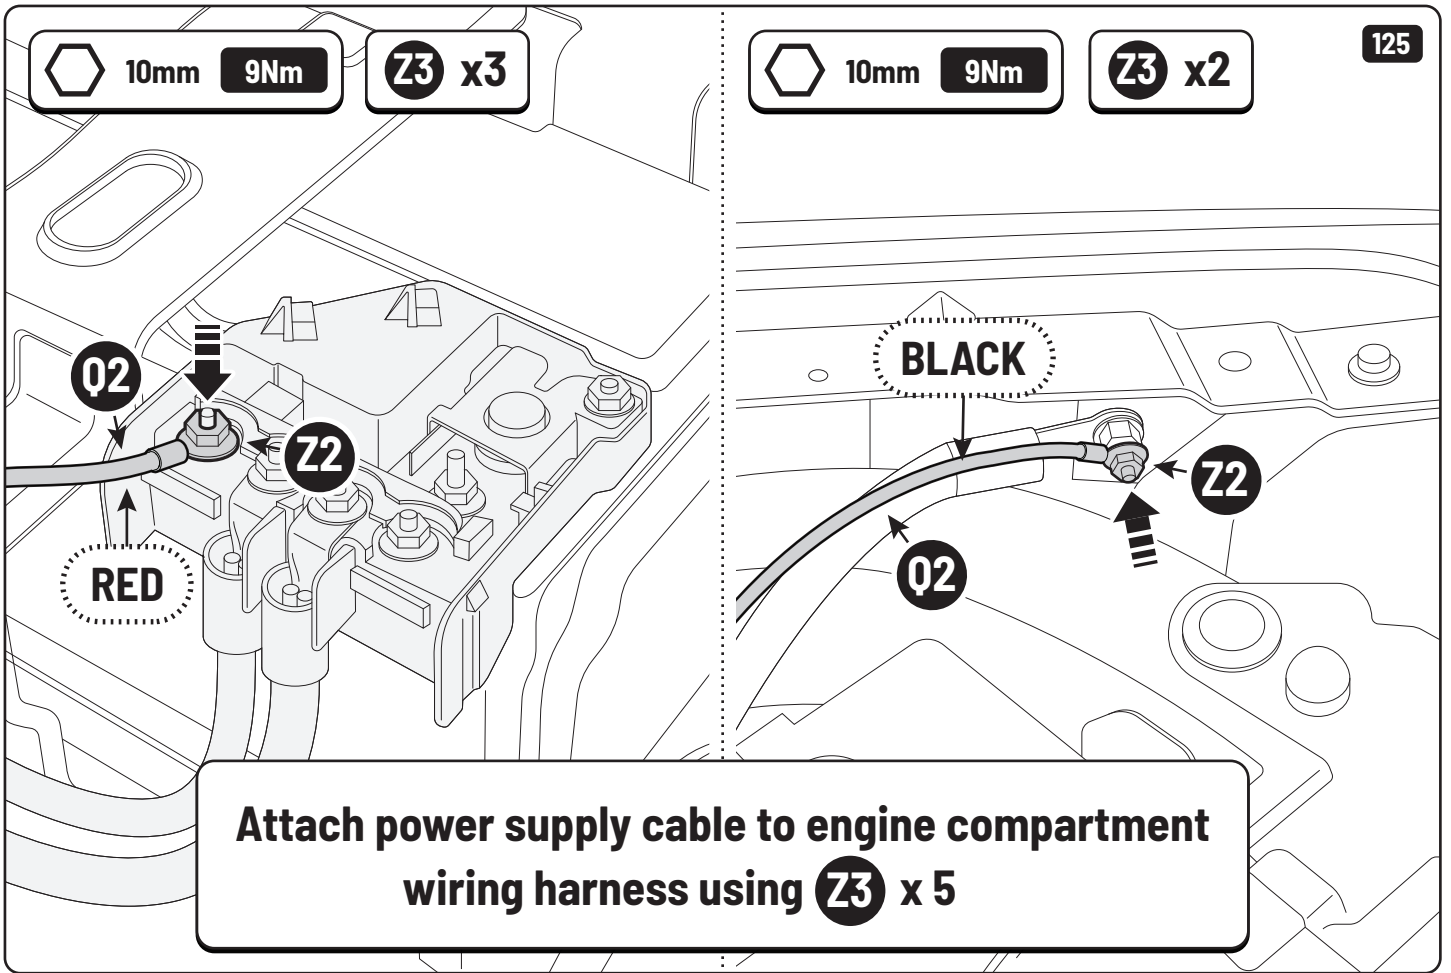



 Reset

127

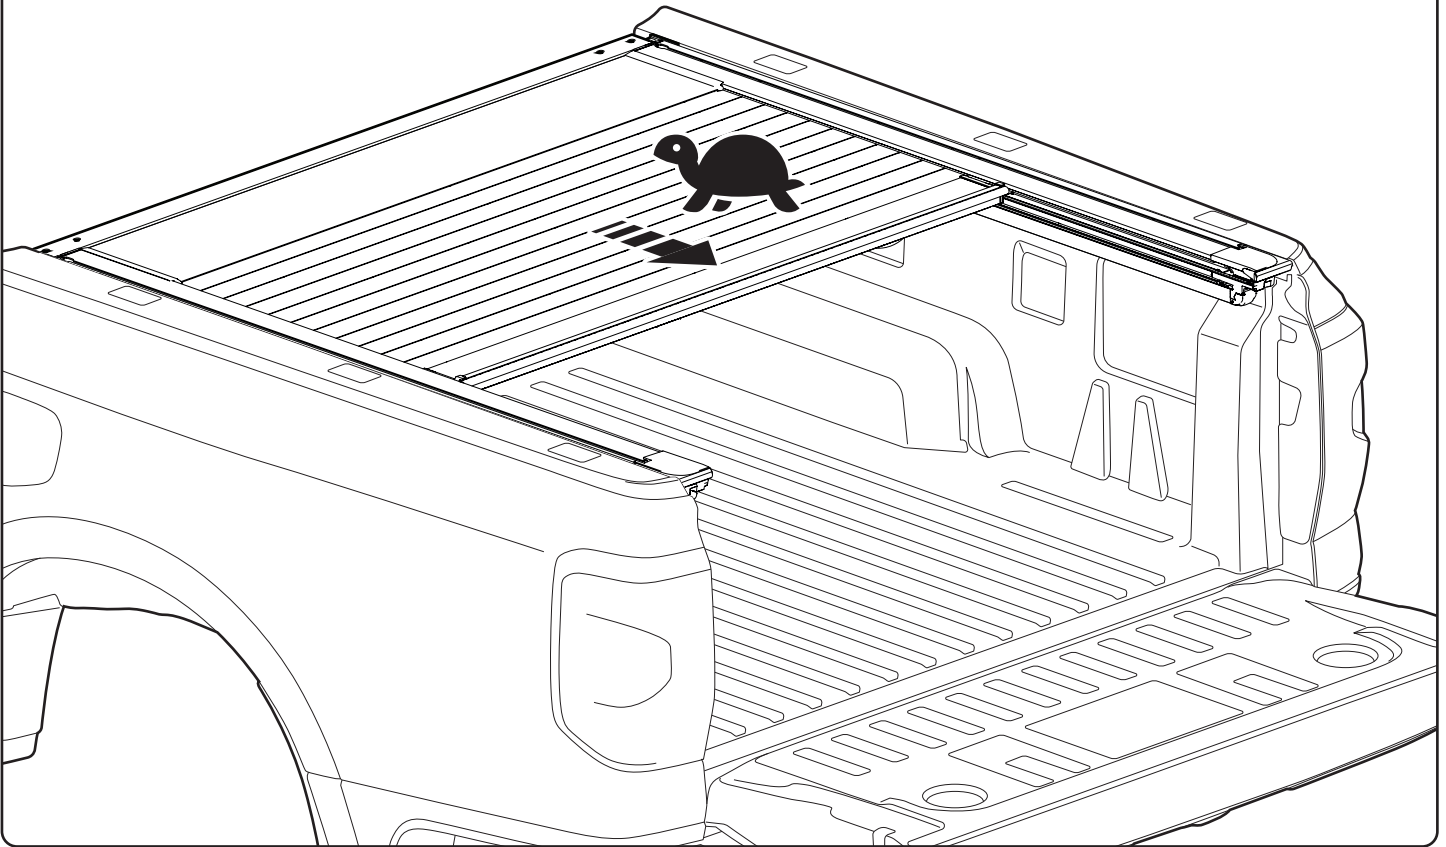

128

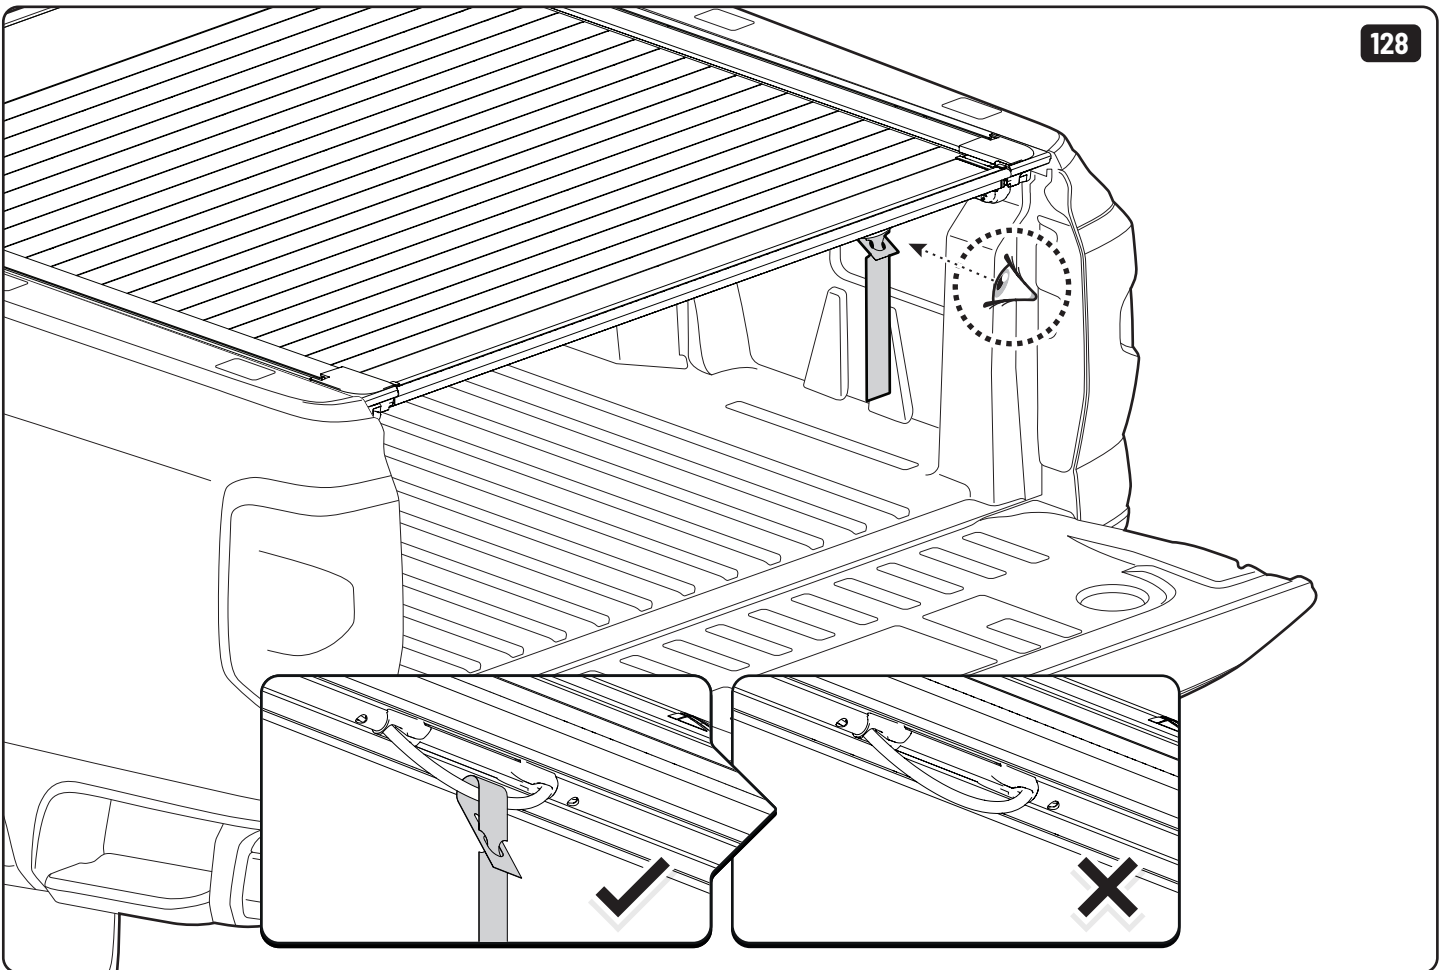

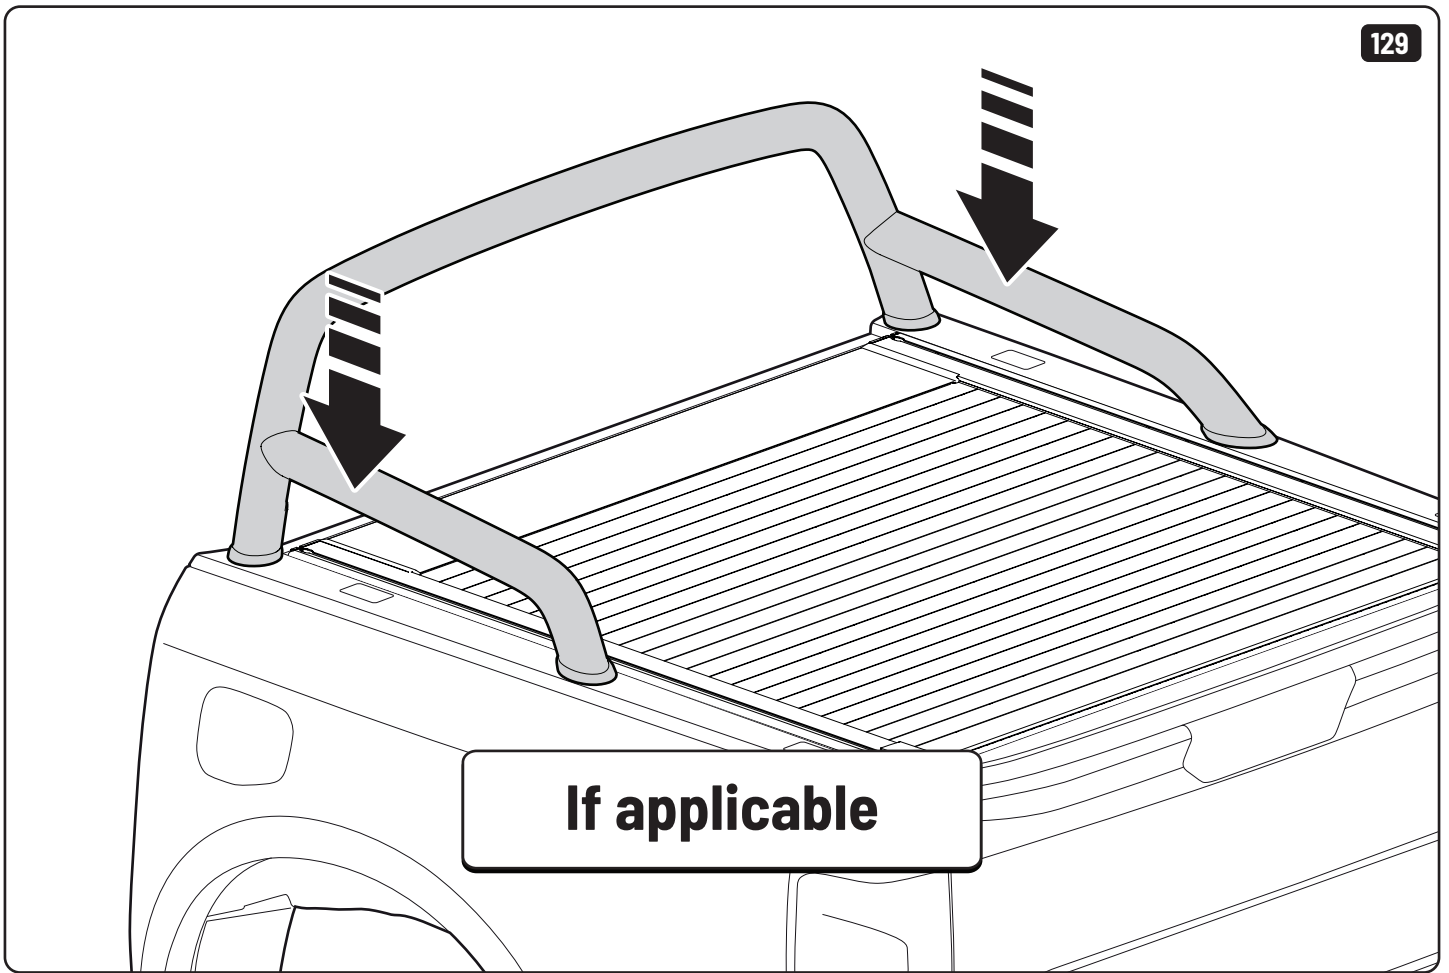

If applicable



| Steps | Page | Done by |
|-----------------------------------|---------------|---------|
| Mounting gliding rail in canister | 19-20 | |
| Holes for drain | 34-37 / 39-43 | |
| Width + Cross measurement | 70+71 | |
| Tightening bracket screws | 70-72 | |
| Mounting drain | 74+75-77 / 78 | |
| Calibrate EVOe | 79-80 | |



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

| Part number (s) | Model / Year | Cab type (s) | Installation time | Weight |
|-----------------|----------------------|--------------|-------------------|--------|
| EVOe FO10 HB02 | Ford Ranger/ 2022 -> | Double Cab | 2 hour (s) | 33 kg |
| EVOe FO11 HB02 | Ford Ranger/ 2022 -> | Rap Cab | 2 hour (s) | 40 kg |

| | | |
|-----------------------------------|------------------------------------|-------------------------------------|
| GB Installation manual | S Monteringsanvisning | D Einbauanleitung |
| SF Asennusohje | E Instrucciones de montaje | CZ Návod k instalaci |
| F Notice de montage | H Szerelési utasítás | I Istruzioni di montaggio |
| PL Instrukcja montażu | P Instruções de instalação | GR Οδηγίες Εγκατάστασης |
| NL Installatie-instructies | RUS Инструкция по установке | DK Monteringsvejledning |
| TR Montaj Talimatı | N Monteringsveiledning | RO Instructiuni de instalare |