

Renault Captur, Modell 2013

Flankenschutzrohr 42 mm gerade


Side protection bar 42 mm straight

Tube de protection latérale 42 mm droit



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

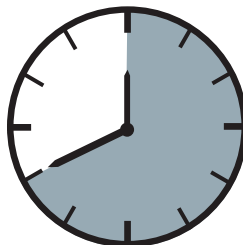



40 Minuten

Ullstein Concepts GmbH
Ferstlstr. 15c
85445 Oberding
Tel. 089/809902880
www.ullsteinconcepts.com


Revision 1: 21.08.2013







ULLSTEIN
CONCEPTS
GMBH

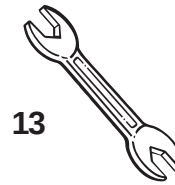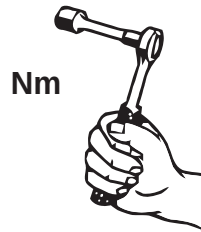

1	16S4051.1 / 16S5051.1	2x
		
2	16S5021	6x
		
3	1845056	6x
		

a		M8 x 20, DIN 933 A2	6x
b		M8, DIN 934 Zn	6x
c		Ø 8,4, DIN 9021 A2	6x
d		Ø 8,4, DIN 9021 Zn	6x
e		Ø 8, DIN 127 A2	6x
f		Ø 8, DIN 127 Zn	6x



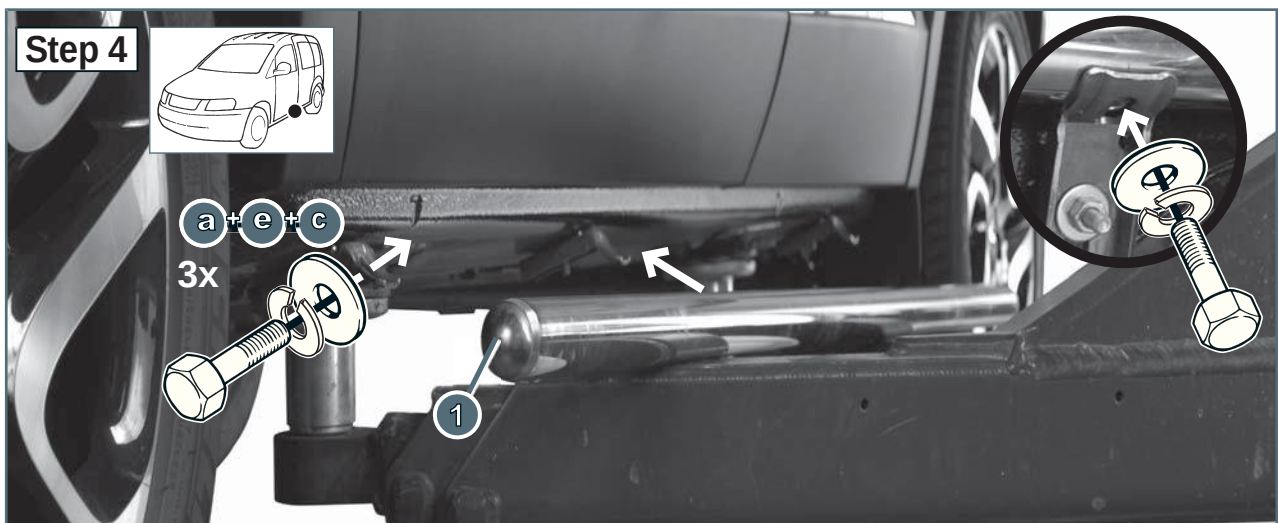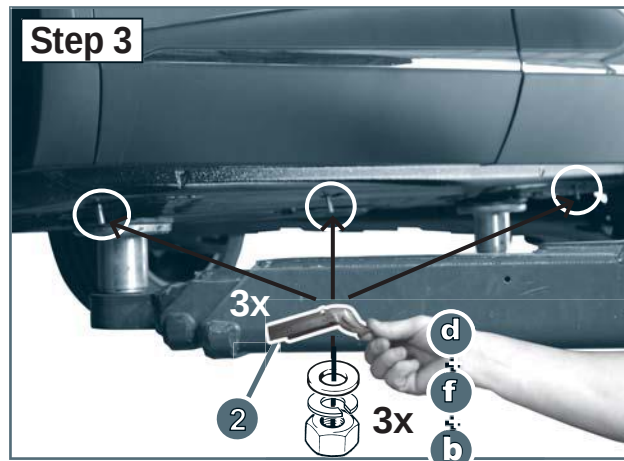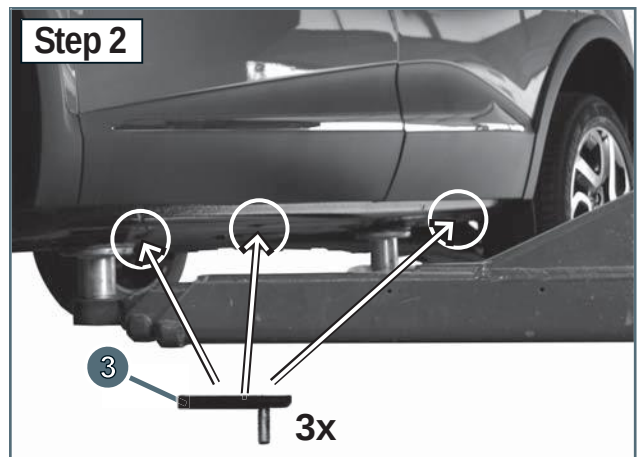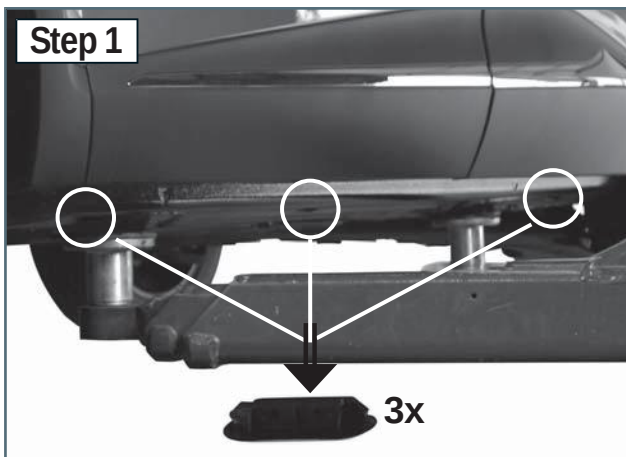

M8 : 25 Nm
M8 (A2) : 21,4 Nm



Revision 1: 21.08.2013



ULLSTEIN
CONCEPTS
GMBH