







FITTING INSTRUCTION

Mercedes X-Klasse / Mercedes X-Class

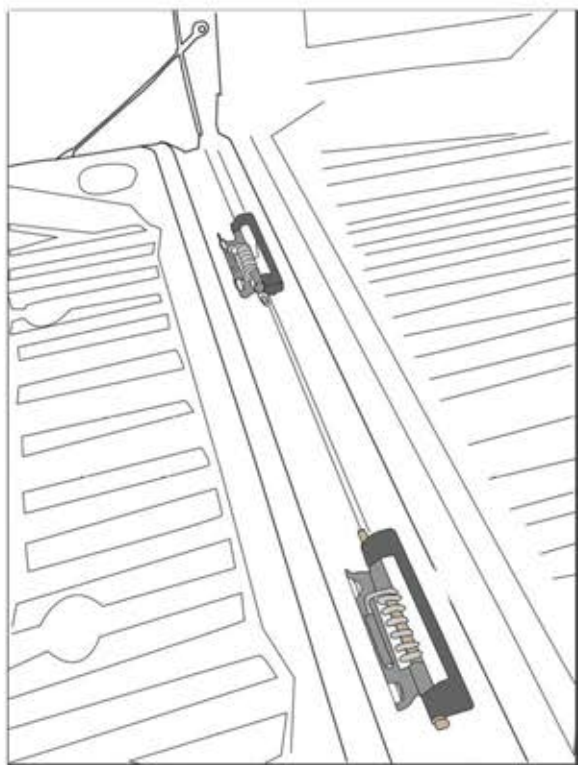

Patent Pending Worldwide

Part list

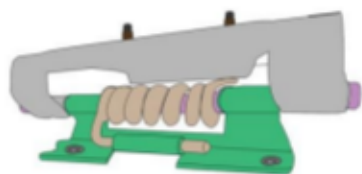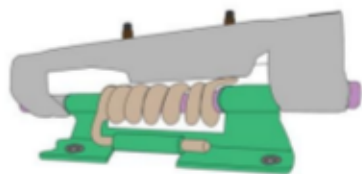

Tooling



No.13




No.12




No.12

Note :


Apply WD40 or grease to the moving parts regularly for good performance of the product.

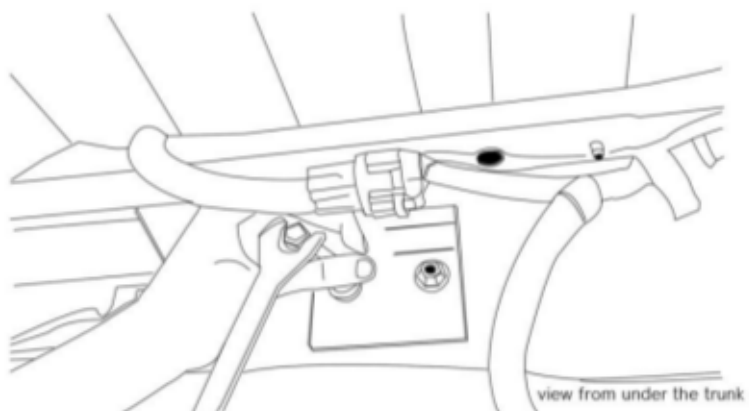


1. take out the original tailgate bracket from the trunk.

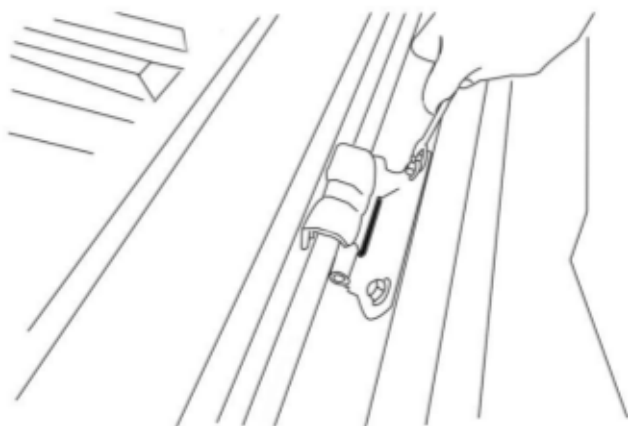


2. take off the original bracket from tailgate.

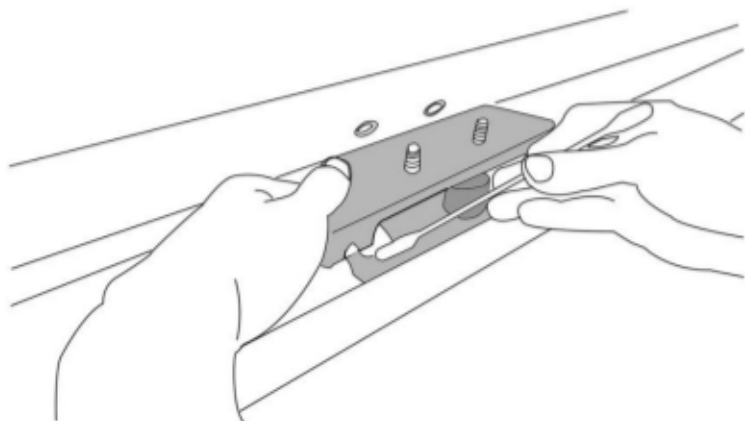


3.install tailgate lift set to replace the original bracket using original bolts

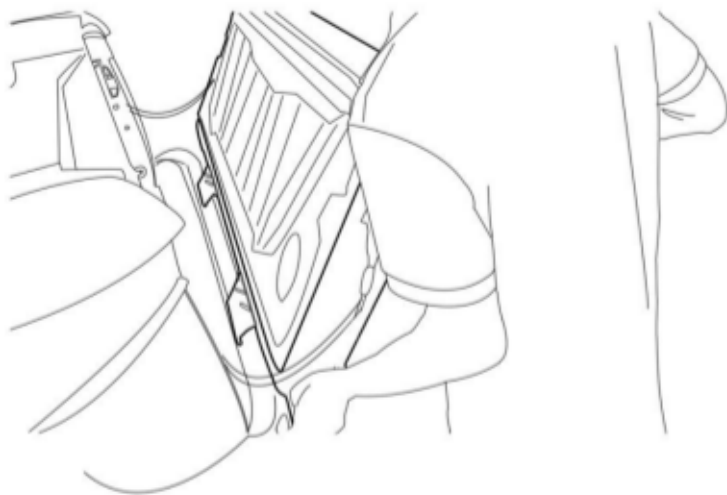

4.put tailgate back to the trunk in locking position (closed position)

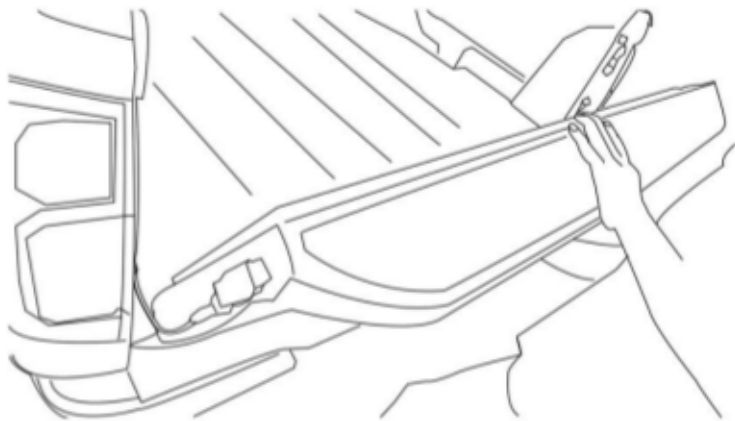


5.catch tailgate back to the trunk

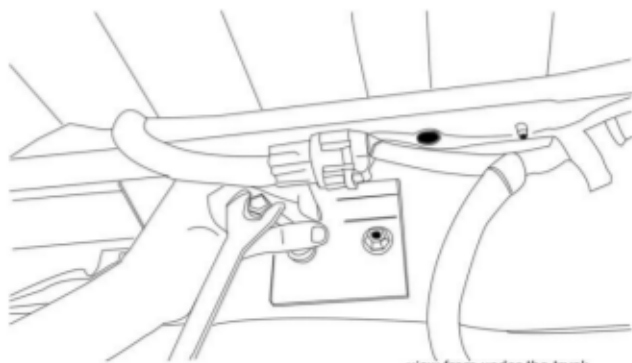


view from under the trunk


6.attached the bracket to the trunk using original bracket and nuts.

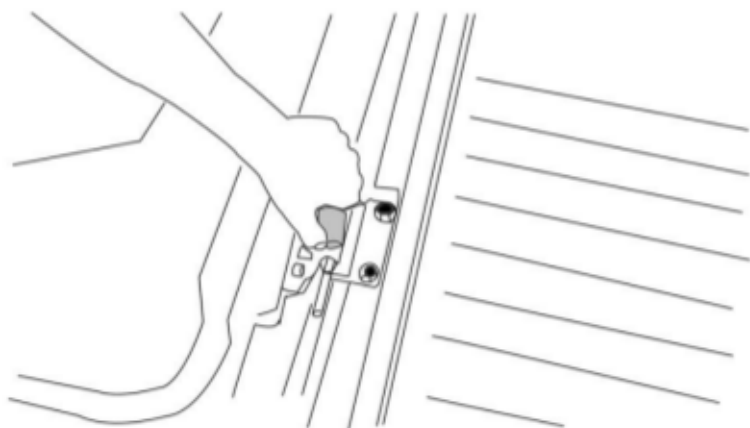


7.open the tailgate and take out the stopper rubber.

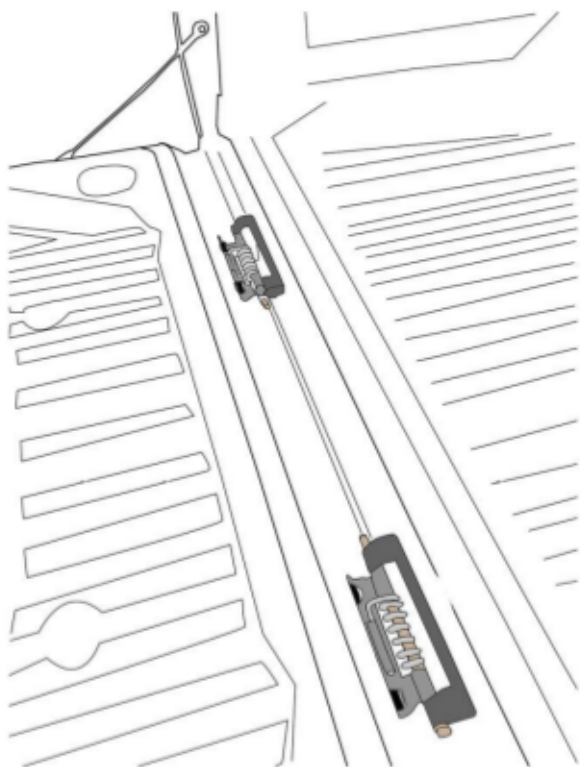


Attach Damper

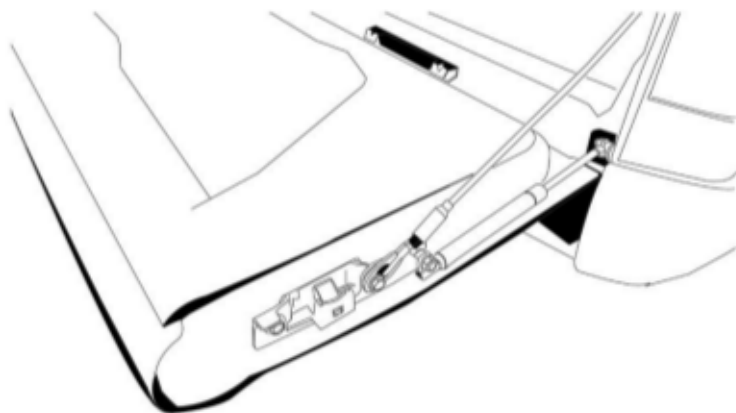


1. Attach rod end to the trunk

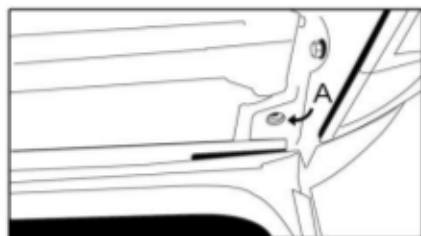


un-bolt bolt A

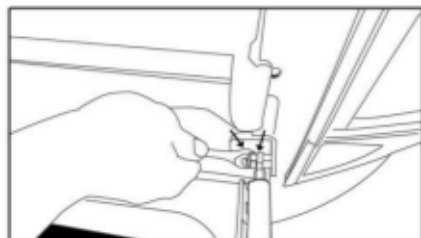


place rod end of damper
and tighten back bolt A

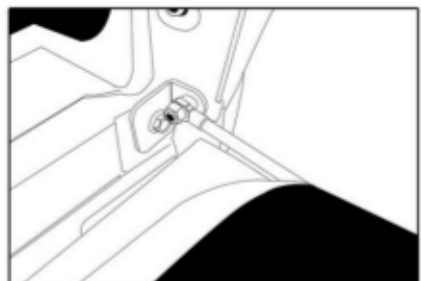


2. Attach barrel end to tailgate

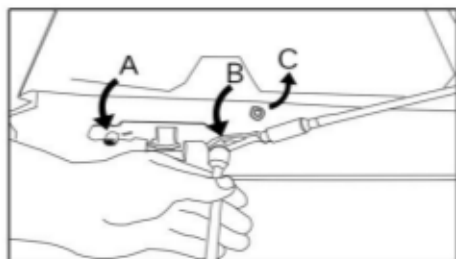


un-bolt bolt A and B
take out flat washer C

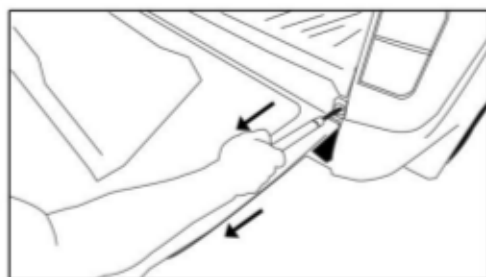


pull the damper

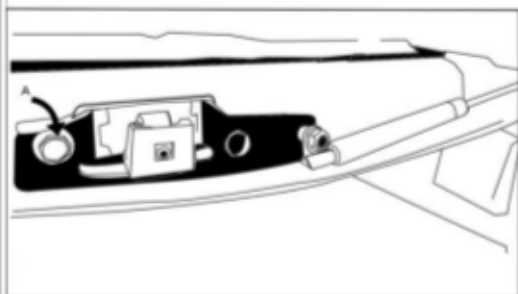

place the bracket of the damper
and tighten bolt A back

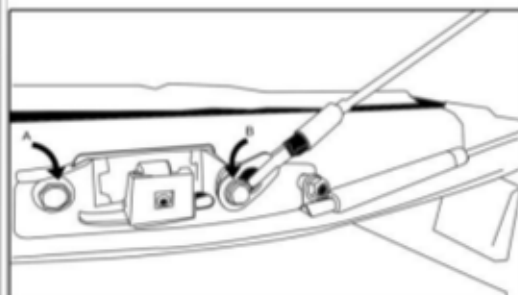


put sling back in place
and tighten bolt B

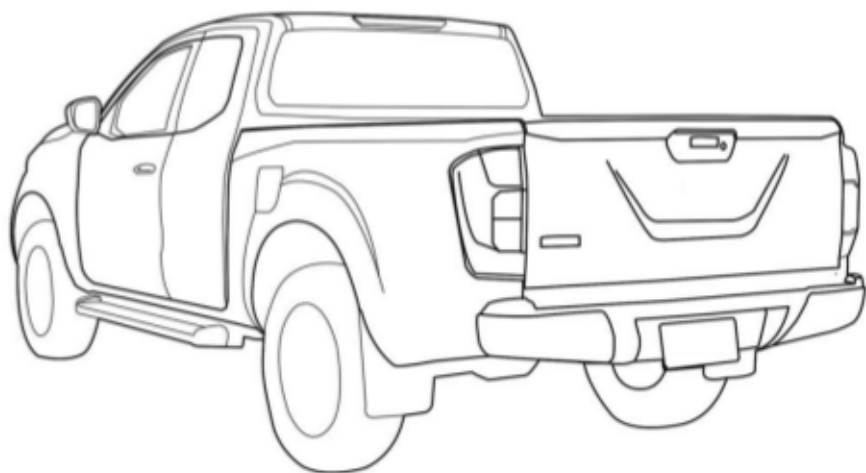

put back rear bumper

CAUTION

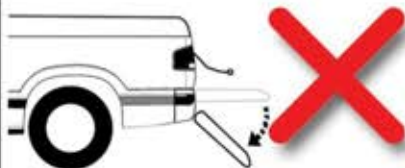

Do not take off
tailgate cable
and drop down
the tailgate

Patent Pending Worldwide