

206400115S

Suzuki Jimny; Md. 2018

EU-Front Protection Bar

EU-Frontschutzbügel

Protection avant, homologuée CEE




compatible with 15T5480



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

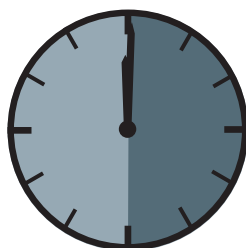

90 Minuten

article no.:

15T4905NP inox


15T4905NT inox + black brackets

15T4905NS inox black


Revision 3: 10.08.2022



**ULLSTEIN
CONCEPTS
GMBH**

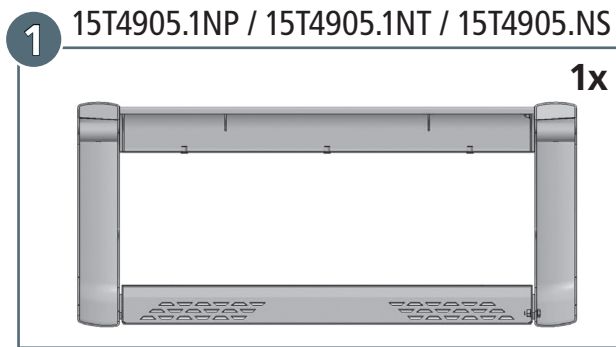

mounting kit: 15T9905N

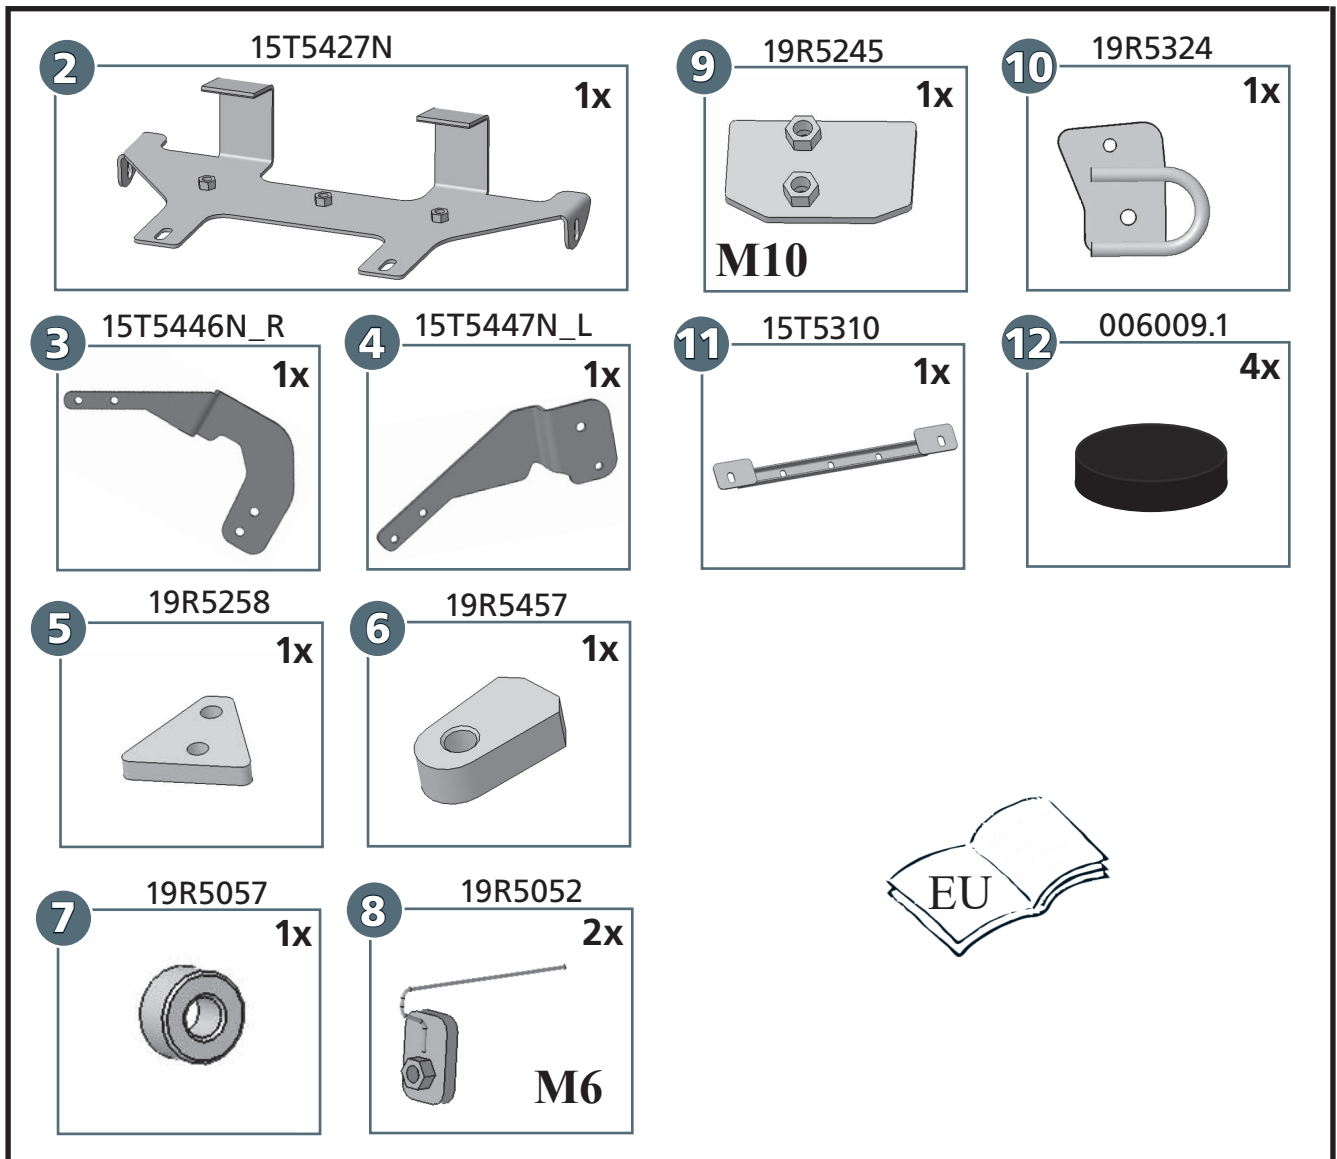

article no.:

15T4905NP inox

15T4905NT inox + black brackets

15T4905NS inox black


Revision 3: 10.08.2022








ULLSTEIN
CONCEPTS
GMBH

page/Seite 2

M6:
 10 Nm
M8 (A2):
 21,4 Nm
M8:
 25 Nm
M10:
 50 Nm

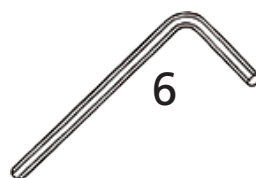

mounting kit: 15T9905

	M6x25; DIN 933 Zn	2x
	M10x50; DIN 933 Zn	2x
	M8x16; DIN 933 Zn	3x
	M10x40; DIN 933 Zn	2x
	M8x20; DIN 912 A2	2x
	Ø8,4; DIN 125 A2	4x
	Ø8,4; DIN 125 Zn	3x
	Ø10,5; DIN 125 Zn	2x
	Ø6,4; DIN 9021 Zn	2x
	Ø10,5; DIN 9021 Zn	4x
	M8; DIN 934 A2	2x
	M10; DIN 934 Zn	2x


article no.:

15T4905NP inox





15T4905NT inox + black brackets



15T4905NS inox black





Revision 3: 10.08.2022






ULLSTEIN
CONCEPTS
 GMBH

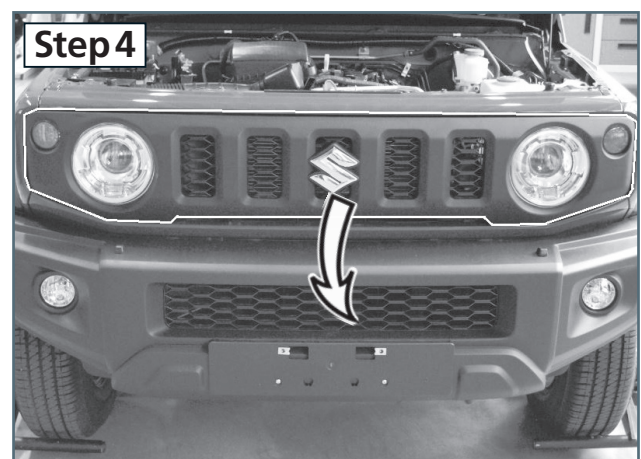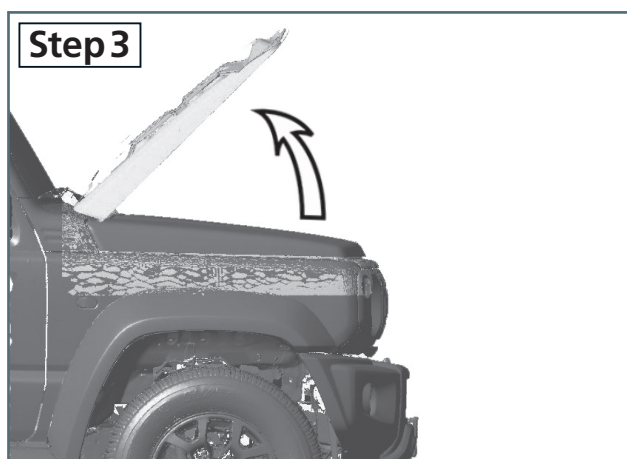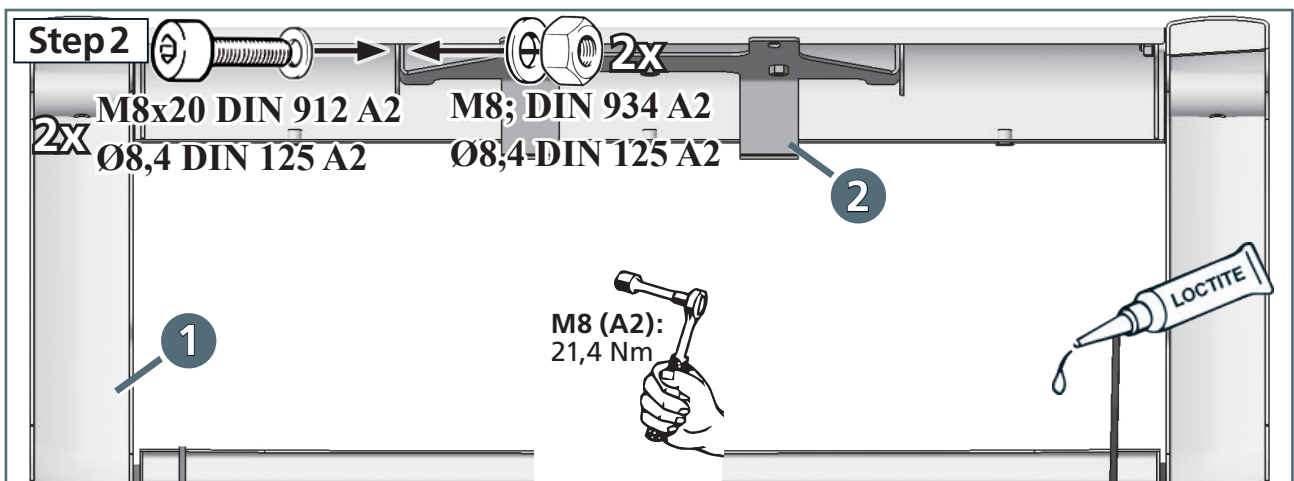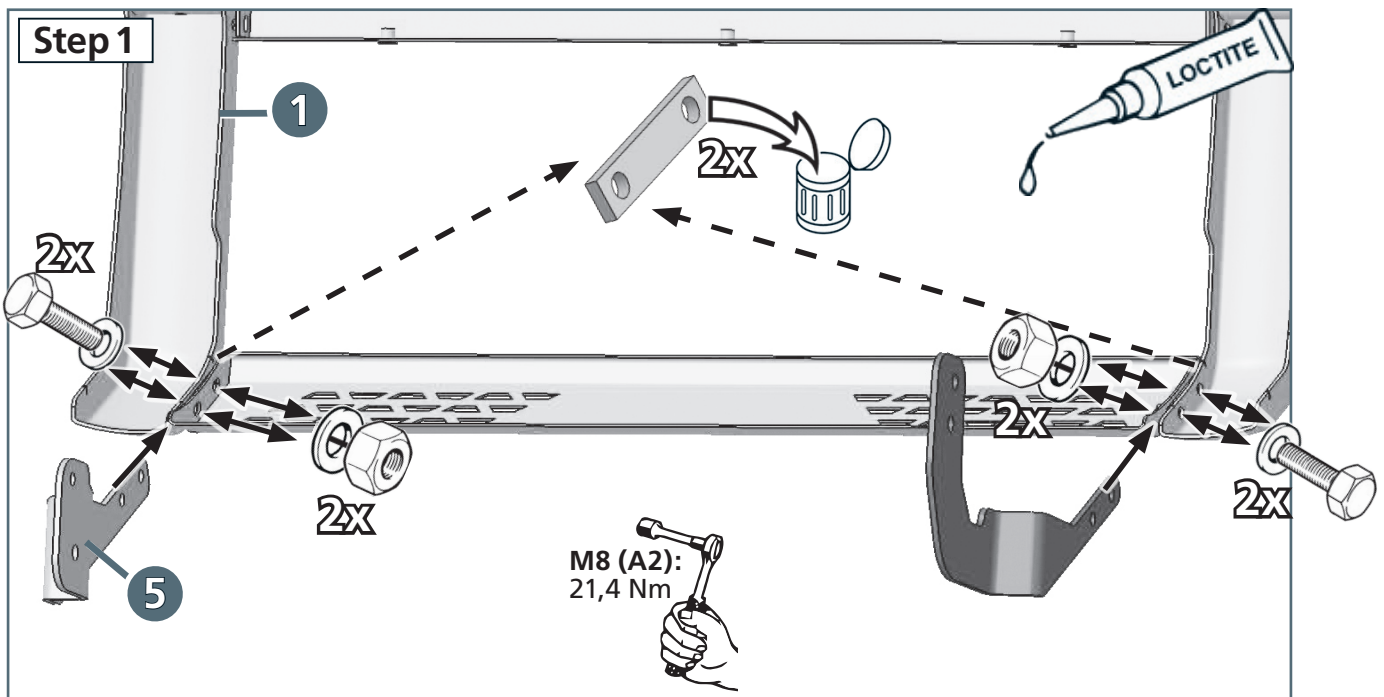

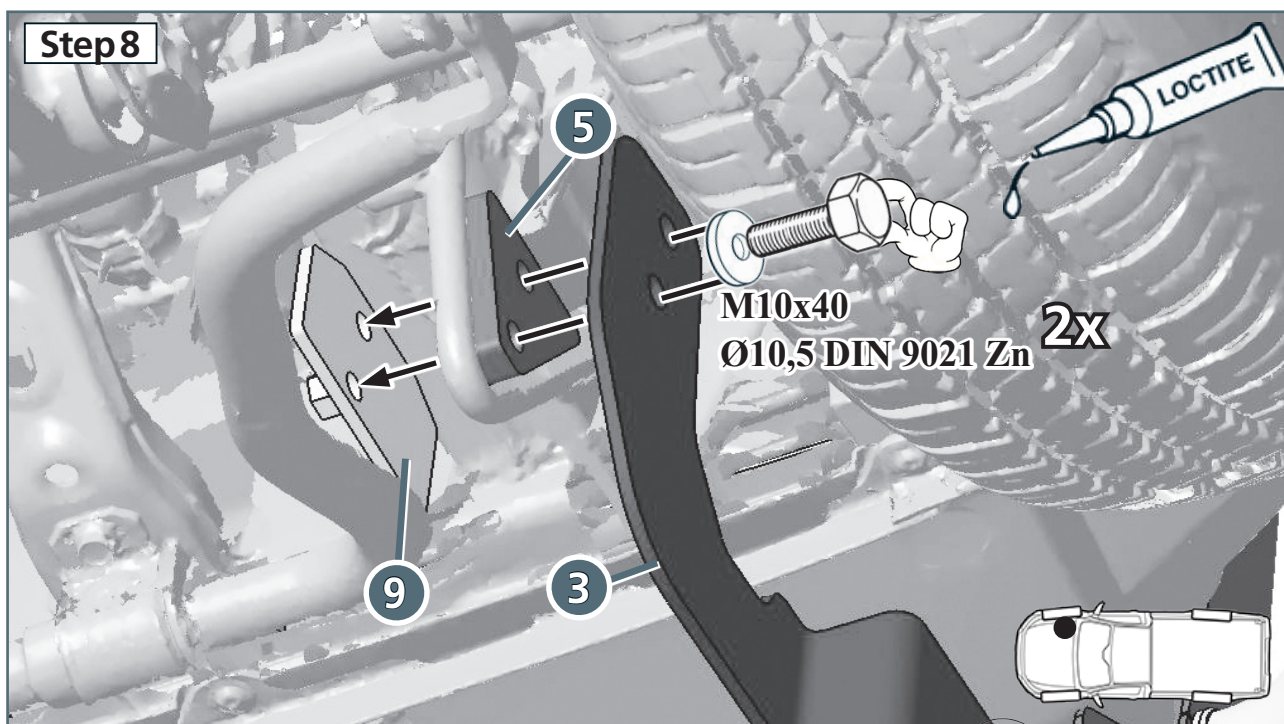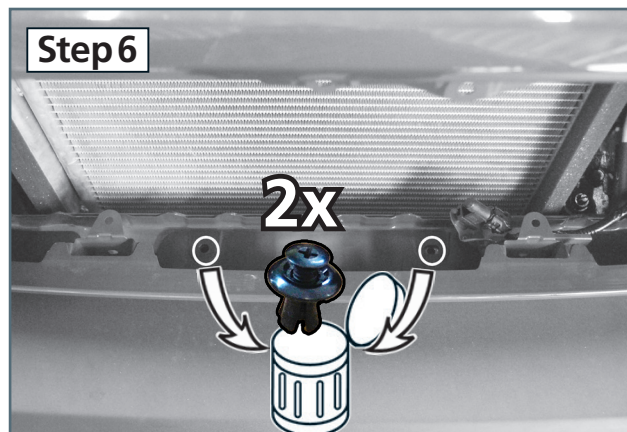

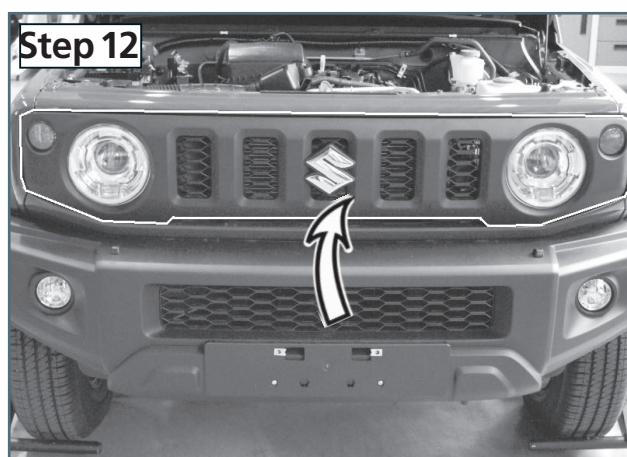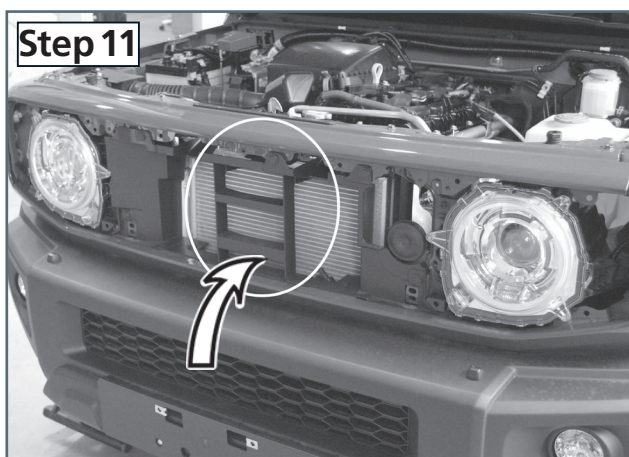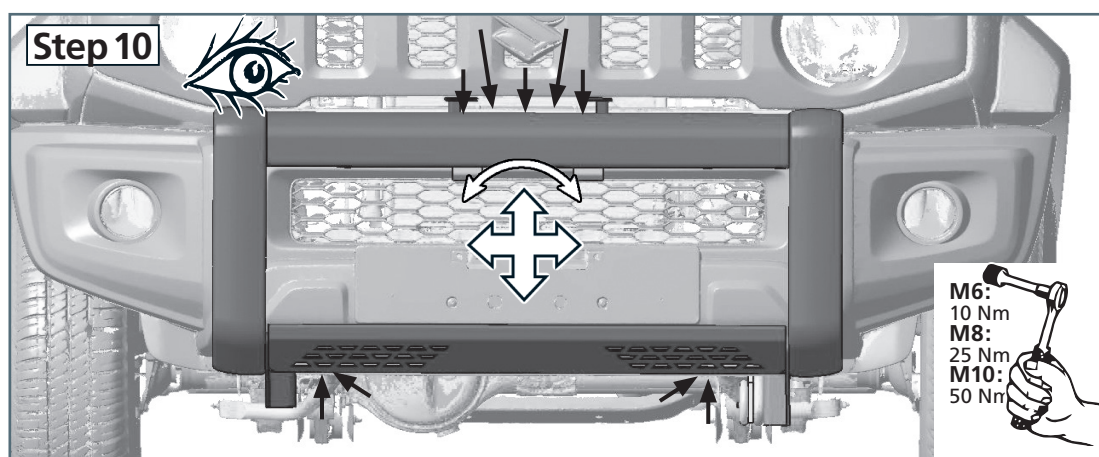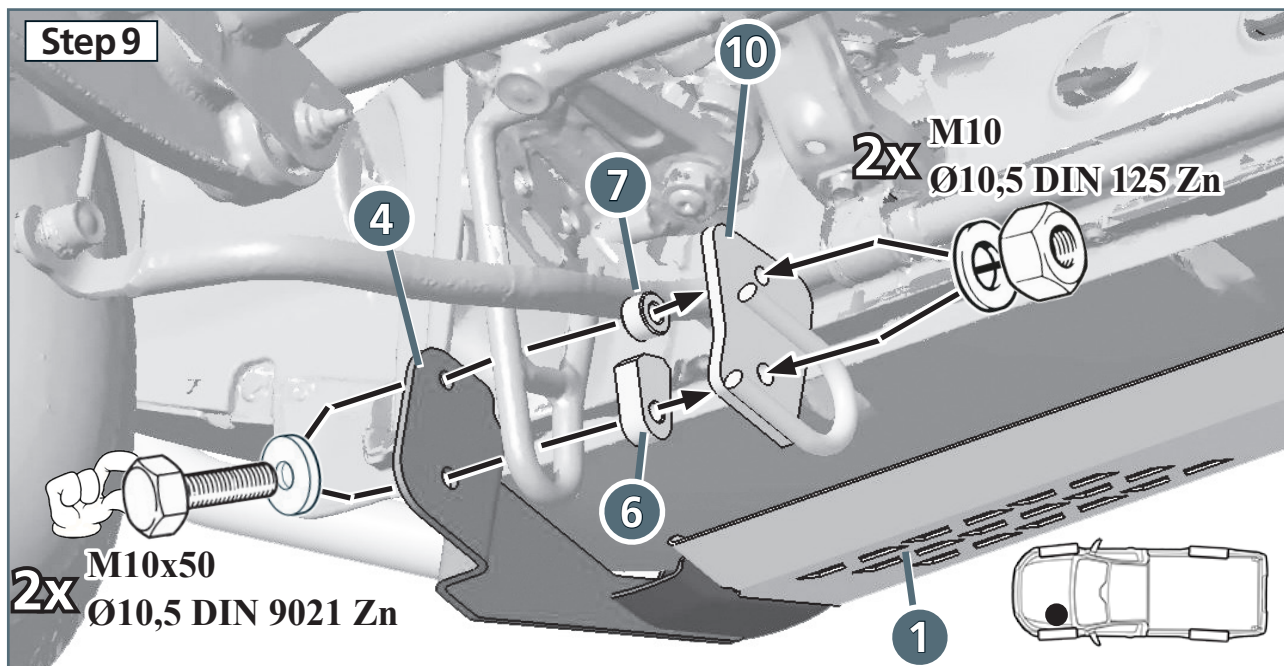

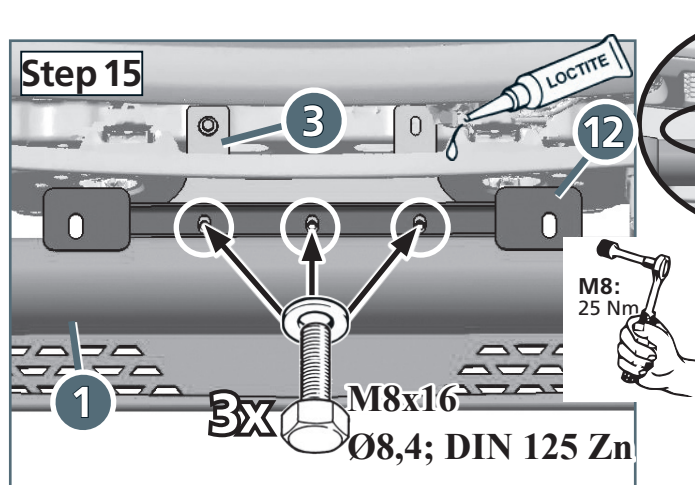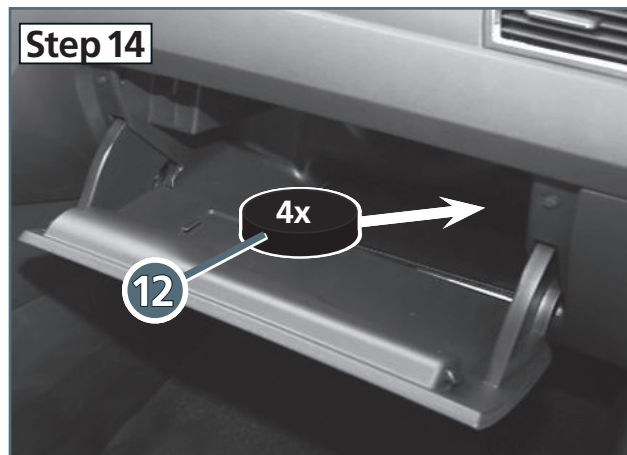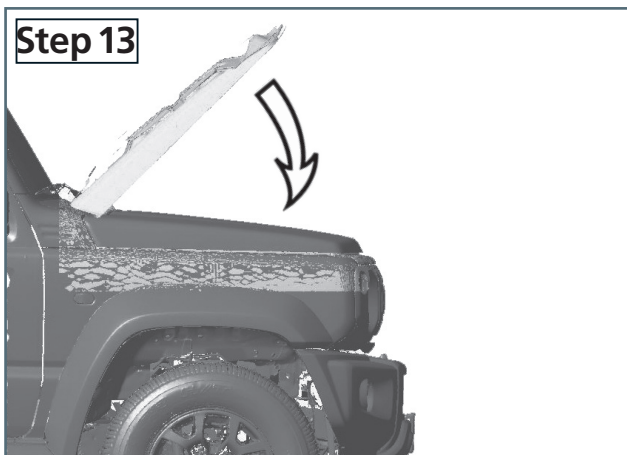

Only when installing additional
headlights (optional)
Nur bei Montage von
Zusatzscheinwerfern (optional)
Uniquement lors de l'installation
de phares supplémentaires (optionnel)

